 
 


Doro PhoneEasy® 740

English

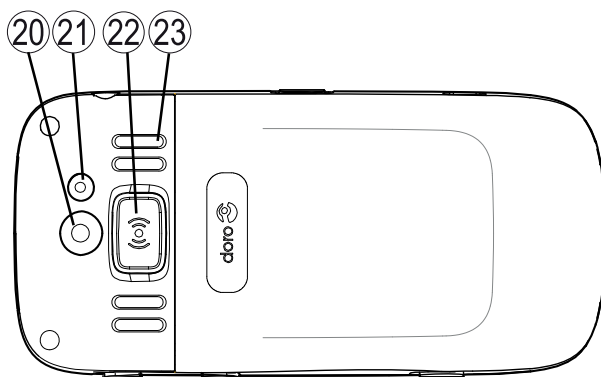 


doro 

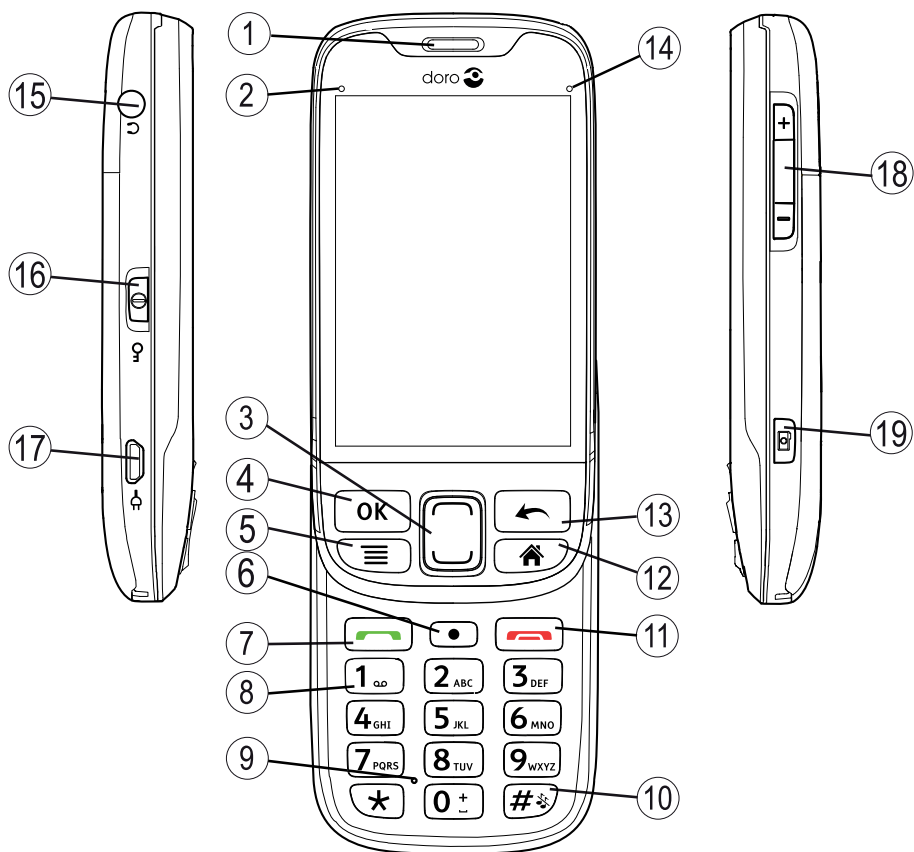

English

1. Earpiece
2. Green LED light = New message / Missed call
3. Up / Down key
4. OK key
5. Menu key
6. Function key
7. Call key
8. Voice mail
9. Microphone
10. Silent / Input method
11. End call key
12. Home key
13. Back key
14. Red LED light = Battery level low / charging
15. Headset socket
16. Key lock / Power key
17. Charging socket
18. Volume control
19. Camera shortcut key
20. Camera lens
21. Flash
22. Assistance button
23. Loudspeaker
24. Lanyard
25. Charging stand

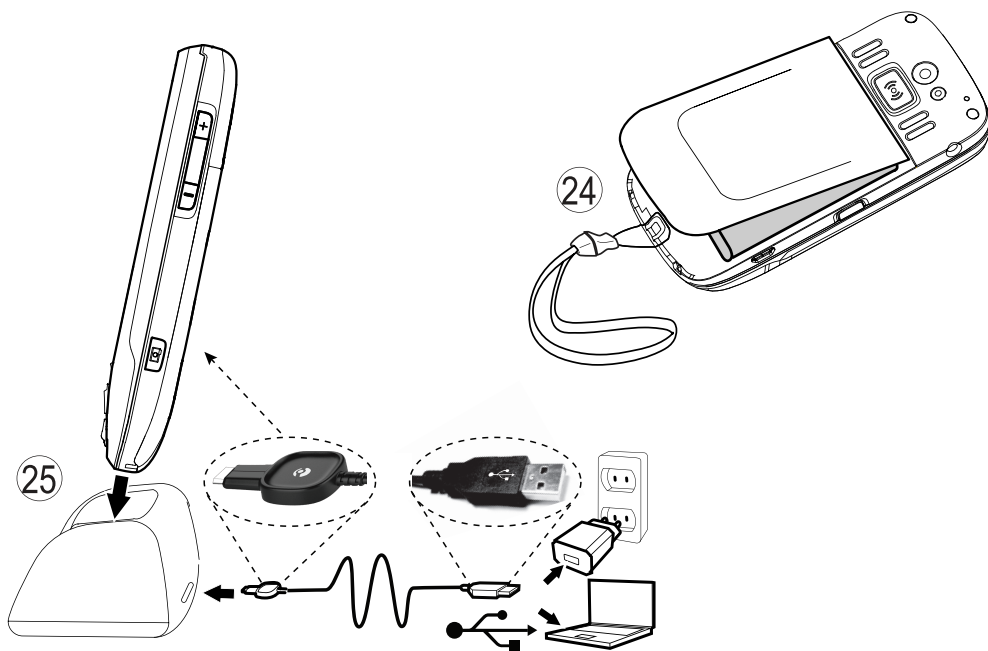

Contents

Getting started	1
Inserting SIM card, memory card, and battery	1
Charging	2
Turning the phone on and off	3
PIN and PUK codes	3
Startup guide	3
Assistive functions	5
Getting to know your phone	5
Navigation 	5
Entering text 	6
Doro Experience®	8
Basic phone settings 	8
Contacts.....	10
Safety instructions 	11
Assistance button	11
ICE (In Case of Emergency)	12
SOS calls	13
Doro Experience®	13
Create Doro Experience® account	14
Software update.....	14
Doro Selection	14
Doro Experience® Manager	15
Calling.....	15
Making a call.....	15
Making a call from contacts	16
Receiving a call	16
Volume control.....	16
Call options.....	16
Call log	17
Voice mail	18
Communication	18
Text messaging	18
Picture messaging.....	19
E-mail.....	19
Camera.....	20
Take pictures	20

Camera adjustments.....	20
Gallery	21
Connectivity	22
Connecting the phone to a computer	22
Wireless networks.....	22
Bluetooth	23
Network setup	23
Flight mode	24
World	24
Internet.....	24
Bookmarks	25
Additional functions.....	26
Magnifier.....	26
Calculator.....	26
Calendar	26
Alarm.....	27
Daily reminder	28
Web radio.....	28
Remote help	28
Troubleshooting	30
Safety instructions.....	31
Network services and costs	32
Operating environment	32
Medical units	32
Areas with explosion risk	33
Li-ion battery.....	33
Protect your hearing.....	33
Emergency calls.....	34
Vehicles	34
Care and maintenance	35
Warranty	35
Specifications	35
Copyright and other notices	36
Hearing aid	36
Specific Absorption Rate (SAR)	37
Declaration of Conformity	37

 
Getting started

IMPORTANT!

Turn off the phone and disconnect the charger before removing the battery cover.

Inserting SIM card, memory card, and battery

The SIM and memory card holder's are located inside the battery compartment.

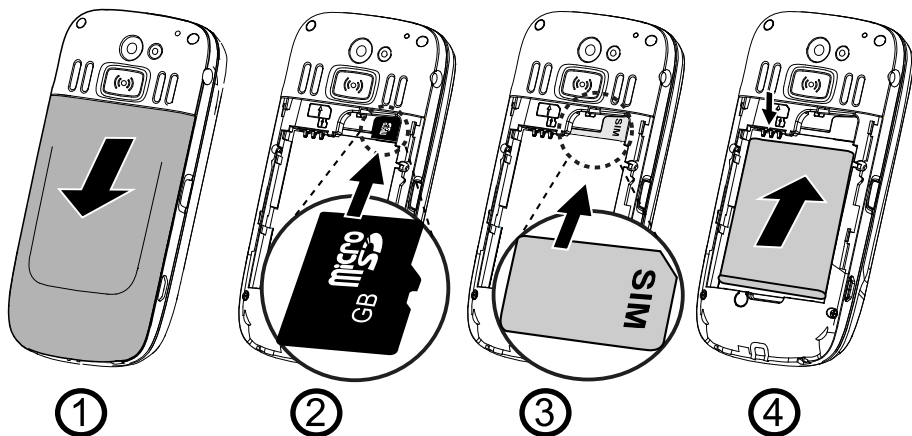

1. Remove the battery cover and the battery if it is already installed.
2. To insert a memory card gently slide it into the holder. Make sure that the memory card's contacts are facing inwards and that the cut off corner is pointing to the right. Take care not to scratch or bend the contacts on the memory card.
To remove the memory card: Find the small ridge on the end of the memory card. Put your fingernail into the ridge and gently pull the memory card out.
3. Insert the SIM card by gently sliding it into the SIM card holder. Make sure that the SIM card's contacts are facing inwards and that the cut off corner is pointing upwards, as shown above.
4. Insert the battery by sliding it into the battery compartment with the contacts facing upwards to the left. Replace the battery cover.

Tip:

Take care not to scratch or bend the contacts on the memory or SIM card when inserting them into the card holders.

IMPORTANT!

Use only compatible memory cards for use with this device. Compatible card type: **microSD, microSDHC**.

Incompatible cards may damage the card itself, the device and corrupt data stored on the card. Depending on the market some phones may have a pre-installed memory card.

Charging

**CAUTION**

Only use batteries, charger and accessories that have been approved for use with this particular model. Connecting other accessories may be dangerous and may invalidate the phones type approval and guarantee. Doro PhoneEasy® 740 supports the Universal Charging Solution (UCS) standard, so any adapter in the market that complies with the UCS standard can be used with this phone for charging. Doro takes no responsibility for compatibility with other UCS power adapters not provided by Doro.

Batteries degrade over time, which means that call and standby time normally decreases with regular use.

When the battery is running low,  is displayed and a warning signal is heard.

1. Connect the mains adapter to a wall socket and to the charging socket.
2. When the phone is fully charged,  is shown.
If the phone is turned off during charging, the charging indicator is still shown on the display.

Save energy

When you have fully charged the battery and disconnected the charger from the device, unplug the charger from the wall outlet.

Note!

To save power the display goes to sleep after a while. Press any key to illuminate the display.

Turning the phone on and off

Press and hold  located on the left side of the phone to turn it on/off. Select  ➔ **Yes** to confirm. Press  to cancel.

PIN and PUK codes

If the SIM card is protected with a PIN code (Personal Identification Number), **Enter PIN** is displayed when turning on the phone. Enter the PIN code and press **OK**. Delete with .

If the wrong PIN code is entered several times **Enter PUK** is displayed and you need to enter your PUK code (Personal Unblocking Key).

Remain: # shows the number of PIN attempts left.

See [PIN code, p.10](#) for information about changing the PIN code.

Startup guide

The first time you turn on your phone, the Startup guide is opened. Follow the instructions to start personalising your new Doro PhoneEasy® 740.

1. Select **Start** to start the guide.
2. Select language by using  or  then press **OK** to confirm, or tap the screen. The default language is determined by the SIM card. If needed, select **Next** to continue.
3. Read the General Information and select **Next** to continue.
4. Select Data traffic option for the mobile network:
 - To allow full data traffic on the mobile network, select **Mobile networks and Wi-Fi**.
 - To disable data traffic using the mobile network (3G), select **Wi-Fi only**.

If needed, select **Next** to continue.

5. Select **Yes** to set up Wi-Fi connection or **No** to continue.

Tip:

See [Wireless networks, p.22](#) to set up later on.

Select network from the list → enter password → **Save** → **Next**.

6. Select **Yes** to set up Doro Experience® account or **No** to continue.

Tip:

See [Create Doro Experience® account, p.14](#) to set up later on.

- Enter **User name** name (the name must contain at least 6 characters). This name will also be your Doro email.
- Enter **Password** (the password must contain at least 6 characters) → re-enter **Password**.
- Enter **E-mail address** (Alternative e-mail address if you loose your password).
To access @ using the hard keys press , or tap  using the virtual keyboard.
- Select **Sign up**.

7. Select **Yes** to set up time and date or **No** to continue.

Tip:

See [Time and date, p. 9](#) to set up later on.

Enter time HH:MM (24 hours) → **Next**.

Enter date → **Next**.

8. Select **Yes** to set up **Seeing** settings or **No** to continue.

Tip:

See [Text size !\[\]\(d3d0bc9cbc0b5499f7bfafd3278057f7_img.jpg\), p. 9](#) to set up later on.

Select text size → **Next**.

Select theme → **Next**.

9. Select **Yes** to set up **Hearing** settings or **No** to continue.

Select **Audio setup** and select **Next**.

Select **Ring tone** from the list to hear it. When chosen, mark the selected ring tone and select **Next**.

Select ringer **Volume** by using the up and down keys and select **Next**.

Select **Message tone** from the list to hear it. When chosen, mark the selected message tone and select **Next**.

10. Read information about **Safety** then select **Next**.

11. Select **Yes** to set up **Text input** settings or **No** to continue.

Select **Write speed** → **Next**.

Set **Predictive text** to be **On** or **Off** → **Next**.

12. The **Startup guide** is now complete. Select **OK** to start using the phone.

Tip:

You can also access the **Startup guide** from  **→ General**.
The **Startup guide** is also shown if changing the SIM card, after factory reset or after updating software.

Assistive functions

The following symbols indicate information in the manual about assistive functions for:

	Seeing		Handling
	Hearing		Safety

Getting to know your phone

Navigation

You can use both the touchscreen and the phone keys to navigate on your Doro PhoneEasy® 740.



CAUTION

Avoid scratching the touchscreen, do not tap it with anything sharp or allow the touchscreen to come into contact with water. Do not touch the screen if the glass is cracked or shattered.

Open item

Touchscreen	Tap item to open.
Phone keys	Select item by pressing  or  , then press OK to confirm.

Tick or untick options

Touchscreen	Tick relevant box or list option.
Phone keys	Select item by pressing  or  , then press OK to confirm selection.

Scroll

Touchscreen	Drag or flick your finger on screen in the direction you want to scroll.
Phone keys	Scroll to the item by pressing  or  .

Zoom

Touchscreen	Place two fingers on the screen and pinch them together to zoom out or spread them apart to zoom in. This function is not always applicable.
--------------------	---

Use the phone hard keys

OK	Confirm action.
	Access options/menu available on the current screen or application.
	Scroll up or down in menus.
	Return to the previous screen. Once you are back to the Home screen, you can't go back any further. When entering text press to delete the entered character.
	Return to the Home screen.

Entering text

You can enter text using the phone hard keys or the virtual keyboard.

Entering text

	Enter text using the phone's hard keys	Enter text using the virtual keyboard
Activate keyboard	Slide the phone open.	Slide the phone closed and tap the text field.
Select character	Press a numerical key repeatedly until the desired character is shown. Wait a few seconds before entering the next character.	Tap the desired character.

Special characters	Press * for a list of special characters. Select the desired character with ↶/↷ and press OK to enter it.	Tap ?123 for a list of special characters. Select the desired character or tap 1/2 to view additional characters. To return, tap Abc .
Move the cursor within text	Use the side keys +/- to move the cursor within the text.	Tap within the text to move the cursor.
Upper case, lower case and numerals	Press # to choose between upper case, lower case and numerals.	Tap ↑ in the lower left corner to select upper and lower case letters. Tap ?123 to enter numerals.
Change input language	Press and hold # , select language and press OK .	

Entering text with predictive text

In some languages you can use predictive text to suggest words.

Predictive text using the phone's hard keys	Predictive text using the virtual keyboard
To activate, press # until ABC or Abc is shown. Press each key once, even if the displayed character is not the one you want. The dictionary will suggest words based on the keys you have pressed. - To write the word “Doro”, press 3, 6, 7, 6. Complete the word before looking at the suggestions. - Use ↶/↷ to view the suggested words. Press OK to select. - Press 0 to continue with the next word.	To activate, tap Abc. Tap the keys and the dictionary will suggest words based on the keys you have tapped. - To write the word “Doro”, tap D, o, r, o. - Tap the suggested word from the list to select. Scroll down the list for additional words. Alternatively, tap → to continue with the next word.

Input mode

Input mode	Phone hard keys	Virtual keyboard
Sentence case with predictive text		 + 
UPPER CASE with predictive text		 + 
Sentence case	Abc	
UPPER CASE	ABC	
Numerals	123	

Doro Experience®

Create an Doro Experience® account to get the most out of your phone. Add applications and access the phone using any web browser. See [Doro Experience®, p.13](#) for more information and how to get started.

Basic phone settings

Modify your phone settings to make it more personal using the  **Settings** menu.

Note!

For information about PIN and PUK codes, please contact your service provider.

Tip:

*Basics phone settings can also be set in the **Startup guide**, see [Startup guide, p. 3](#) the first time you start the phone.*

Ring tone

1. Select  ➔ **Sound** ➔ **Tone setup** ➔ **Ring tone**.
2. Select a ring tone from the list to hear them.
3. When chosen mark the selected ring tone and press **OK**.

Note!

*If you use a hearing aid or have hearing difficulties when using the telephone in a noisy environment, you can customise the phones audio settings using the **Sound** menu.*

Time and date

1. Select  ➔ **General** ➔ **Time and date**.
2. Select **Set time** and enter time (hh:mm). Press **OK**.
3. Select **Set date** and enter date (dd/mm/yy). Press **OK**.

Tip:

You can also change the time and date format as well as activate auto time in the **Time and date** menu. Automatic update of date and time does not change the time you have set for the alarm clock or the calendar. They are in local time. Updating can cause some alarms you have set to expire.

Text size

You can change the font size for all content on the display.

1. Select  ➔ **Display** ➔ **Text size**.
2. Mark the preferred font size. If needed, press **OK**.

Tip:

Medium size is set by default.

Answer mode

You can set your phone to answer a call by sliding open the phone.

1. Select  ➔ **Calls** ➔ **Answer mode**.
2. Mark **Slide open**.

Weather

You can make the weather for a specific city appear at the top of the Home screen.

1. Select  ➔ **General** ➔ **Weather**.
2. Select **City** and enter city name. When finished, press **OK**.
3. If the city is found, select **OK** otherwise select **Cancel** and enter another city.
4. Select **Display** and mark the wanted display.

Key lock

You can set it to automatically activate the key lock when the phone is closed or to lock manually by pressing **1** on the left side of the

phone. The key lock will lock both the keys and touchscreen. Press  located on the left side of the phone to lock or unlock.

Tip:

To unlock the phone, slide the phone open.

1. Select  ➔ **Security** ➔ **Key lock**.
2. Select the preferred key lock option.

Silent

You can activate the silent mode to turn off the ring tone and other sounds, except for any reminders, alarm and calendar events you have set.

- Press and hold  located on the left side of the phone, then select  **Silent mode**. The current status is shown as  or  at the top of the screen.
- Press and hold  to activate or deactivate **Silent mode**.

Tip:

*Activate vibrate when in silent mode. Select  ➔ **Sound** ➔ **Alert type** and select an option.*

PIN code

1. Select  ➔ **Security** ➔ **Passwords** ➔ **PIN**.
2. Enter your old PIN code.
3. Enter your new PIN code. When finished, press **OK**.
4. Select **SIM lock** ➔ **On** ➔ enter PIN code and press **OK** to activate.

Function key

Use  to quickly access your most frequently used application.

1. Select  ➔ **General** ➔ **Function key**.
2. Select an application from the list and press **OK** to confirm your selection.

Contacts

Add new contact

1. Select  ➔  **Add**.

2. Enter **First name**, **Last name**, phone number(s) including area code, and **E-mail**. Delete with . See [Entering text](#) , p. 6 .
3. To add a picture, select  **Add picture** and then choose between:
 - **Gallery** to select an existing picture.
 - **Camera** to take a picture with the camera.
4. When chosen, select  **Save**.

Note!

For international calls, use + before the country code. Press and hold  until + is shown.

Tip:

*You can add a number from the **Call log**  to a new or existing contact. See [Save number from Call log](#), p.17.*

Transferring contacts

Contacts saved on your SIM card are automatically transferred into  **Contacts**. To import contacts from vCard, log in to Doro Experience® Manager and use the **Contacts** application.

Safety instructions

Assistance button

The **Assistance button** allows quick and easy access to pre-determined contacts when help is needed. Save up to 5 assistance contacts.

Activation

1. Select  ➔ **Assistance** ➔ **Activation** and then:
 - **On normal** to activate by holding the **Assistance** button for >3 seconds, or press twice within 1 second.
 - **On (3)** to active by pressing the **Assistance** button 3 times within 1 second.

Add assistance contacts

1. Select  ➔ **Assistance** ➔ **Numbers list** ➔ **Empty**.
2. Select a contact from the list or enter number manually.

3. Repeat until you have 5 contacts (maximum).

Edit text message to be sent when the Assistance button is pressed

1. Select  → **Assistance** → **SMS** → **Message**.
2. Enter the text and press **OK**.
3. Select **Activation** → **On**.

Signal type

Select one of the following signal types for notification of the assistance sequence and press **OK**:

High	Loud signals (default).
Low	One low signal.
Silent	No sound indication, like a normal call.

Make an assistance call

1. Press and hold the **Assistance button** on the back of the phone for 3 seconds, or press it twice within 1 second.
2. The phone sends a text message to all the phone numbers in the numbers list. The phone then dials the first number in the list. If the call is not answered within 25 seconds, the next number is dialled. Dialling is repeated 3 times or until the call is answered, or until  is pressed.



CAUTION

When an assistance call is activated the phone is pre-set to handsfree/speakerphone mode. Do not hold the device near your ear when the handsfree mode is in use because the volume may be extremely loud.

ICE (In Case of Emergency)

In the event of a trauma, it is critical to have this information as early as possible to increase the chances of survival. Add ICE contact to improve your own safety. First responders can access additional information such as medication and next of kin from the victims phone in case of an emergency. All fields are optional, but the more information provided the better.

1. Select  → .
2. Select **Edit** and enter your medical information, see the below table. Delete with .
3. When finished, select  **Save**.

Name	Your own name.
Birth	Your date of birth.
Height	Your height.
Weight	Your weight.
Language	Your language.
Insurance	Your insurance provider and policy number.
Contact 1 Contact 2 Doctor	Select a saved contact from Contacts , or add a new number in the Mobile text field. If possible, add your relationship to your ICE contacts in Contacts, such as "ICE Wife Mary Smith". Press  to return.
Condition	Any medical conditions/medical devices (e.g. diabetic, pacemaker).
Allergies	Any known allergies (e.g. penicillin, bee stings).
Blood type	Your blood type.
Vaccination	Any relevant vaccinations.
Medication	Any medication that you are treated with.
Other info	Other information (e.g. organ donor, living will, consent to treat).

SOS calls

As long as the phone is switched on, it is always possible to place an SOS call by entering the main local emergency number for your present location followed by .

Some networks accept calls to emergency numbers without a valid SIM card. Contact your service provider for more information.

Doro Experience®

To get the most of your phone, create a Doro Experience® account. Personalise your phone easily with applications and games from **Doro Selection**. You can use the Doro Experience® account to remotely access the phone from any web browser anywhere in the world.

Note!

You need to have Internet access to use most of the features in Doro Experience®. Contact your service provider if you need detailed information about your subscription plan and data traffic costs.

Create Doro Experience® account

1. Select  ➔ **Doro Experience®** ➔ **Create account**.
2. Enter a log in name you would like to use in the **User name** field. The user name will also be your Doro e-mail.
3. Select the **Password** field and enter a password.
4. Select the **Confirm** field and re-enter the password.
5. Select the **E-mail address** text field and enter an alternative e-mail address where you can be contacted in case of forgetting the Doro Experience® account password.
6. When finished, select  **Sign up**.
Your log in and password are saved and no additional log in is needed on your device.

Tip:

If you do not already have an e-mail address, enter someones that you trust and notify that person.

Software update

If you have created an Doro Experience® account, you will be notified when new software is available. Updating the software will not affect your phone settings or saved files.

1. When **Update** appears, select **OK**.
2. To run the update, select **OK** ➔ **Install**.
3. It may take a few minutes for the update. When finished, the phone returns to the Home screen. You can now use the phone as before.

Doro Selection

Personalise your phone with applications specially selected for you. Select the application to download and install it to your phone. The application is saved and located under its respective category.

Select  and one of the following options:



Shows all available applications.



Shows all featured applications.



Shows the latest available applications.



Shows all Internet related applications.



Shows all entertaining applications.



Shows organising and personal applications.



Shows all phone specific applications.



Shows all applications installed on your phone.
To uninstall an application, select the application →
Uninstall. Select **Yes** to confirm.

Tip:

You can also log in to Doro Experience® Manager to add or edit applications, using any web browser.

Download application

1. In **Selection** category, select application.
2. Select **Install**.

Doro Experience® Manager

Use Doro Experience® Manager to install and manage applications on a Doro PhoneEasy® device using any web browser anywhere in the world. Add, share, or access photos, web radio, bookmarks and more. On your web browser, go to www.doroexperience.com and log in using your Doro PhoneEasy® account.

Note!

You can only create a new Doro Experience® account on your Doro PhoneEasy® device. For more information about Doro Experience® Manager go to www.doroexperience.com.

Calling

Making a call

1. From the Home screen, slide the phone open.
2. Enter the phone number including the area code.

3. Press  to dial.
4. Press  to end or cancel the call.

Tip:

For international calls, use the international prefix **+** before the country code. Press and hold  until **+** is shown.

To improve sound quality, slide the phone open during calls.

Making a call from contacts

1. Select .
2. Select contact from the list.
3. Select the number  .

Receiving a call

1. Press  or touch and hold **Answer**.
Press  or touch and hold **Reject** to reject the call directly.
2. Press  to end the call or tap **End call**.

Tip:

You can set your phone to answer an incoming call by opening the slide, see [Answer mode, p. 9](#).

Volume control

Use the **+** or **-** side keys to adjust the sound volume during a call. Volume level is indicated on the display.

Call options

Mute

1. During a call, press  and select .
2. To disable mute, select  **Speaker: Off**.

Loudspeaker

1. During a call, press  and select .
2. Speak clearly into the microphone at a maximum distance of 1 m. Use **+** or **-** to adjust the loudspeaker volume.
3. To disable loudspeaker, select  **OFF**.

Headset

When a headset is connected, the internal microphone in the phone is automatically disconnected. You can use the answer key on the headset cable (if it has one) to answer and end calls.



CAUTION

Using a headset at high volume may damage your hearing. Adjust the volume level carefully when using a headset.

Call log

Use the **Call log** to view your calling history. Select  and one of the following options:



All calls

Shows all outgoing and received calls.



Missed

Shows all missed calls.



Outgoing

Shows all outgoing calls.



Incoming

Shows all received calls.

You can select to remove a specific call or all calls history.

1. In the chosen call history, press  and select an option.
2. Select **Yes** to confirm.

Save number from Call log

Save number from the **Call log** to new or existing contact.

1. Select   choose call history option.
2. Select the number and then:
 -  **Save as contact** to add as a new contact. Select type of number, enter name and additional information in the text fields.
 -  **Add to contact** to add to an existing contact. Select a contact and type of number.
3. When finished, select  **Save**.

Voice mail

If your subscription includes an answering service, callers can leave a voice mail message when you cannot answer a call. Voice mail is a network service and you may need to subscribe to it first. For more information and for the voice mail number, contact your service provider.

1. Select  → **Calls** → **Voice mail** → **Add**.
2. Enter input number.
3. When finished, select  **Save**.
4. If wanted, select:
 - **Call** to call your voice mail.
 - **Edit** to edit the given information. When finished, select .
 - **Delete** to delete the voice mail. Select **Confirm** to confirm.

Tip:

From the Home screen, press and hold **1** to call your voice mail.

Communication

In order to send and receive texts and picture messages, specific settings are needed which are provided by your service provider.

Text messaging

Text messaging requires a message centre number, this is normally automatically set on your phone. The number can be obtained from the network operator.

Message centre number

1. Select  → **Connectivity** → **Messages** → **SMS** → **Service center**.
2. Add/edit the message service phone number.
3. When finished, press **OK**.

Create text message

1. Select  →  **Write message**.
2. Enter your message, see [Entering text](#) , p. 6 , then select  **Send**.

3. Select a contact from the list or enter a number manually.
4. To add more recipients, select  **Add** and repeat step 3.
5. When finished, select  **Send**.

Picture messaging

Picture messaging requires an MMS profile and that both you and the recipient have subscriptions that supports picture messaging. The MMS profile is often pre—installed, if not contact your service provider for information.

MMS Profile

1. Select  → **Connectivity** → **Messages** → **MMS** → **MMS profile**.
2. To add new MMS profile, press  and select  **Add**.
3. Enter required information. When finished, press **OK**.

Note!

If you choose to add multiple recipients, you are charged for each recipient (maximum 10).

Create picture message

1. Select  →  **Write message**.
2. Enter your message, see [Entering text](#) , p. 6 .
3. Press  →  **Attach** and select picture.
4. Select  **Send** → a contact from the list or enter a number manually.
5. To add more recipients, select  **Add** and repeat step 4.
6. When finished, select  **Send**.

E-mail

Set up your Doro Experience® account and get your own Doro e-mail account. The account is automatically set and synchronised with your phone. See [Create Doro Experience® account](#), p.14.

Note!

You need to create a Doro Experience account and log in to it from your phone before you can send or receive e-mails.

Create e-mail message

1. Select  →  **Write e-mail**.
2. Enter subject and your message, see [Entering text](#) , [p. 6](#).
3. If wanted, add picture as attachment. Press  and select  **Attach** and select picture.
4. Select  **Send** → a contact from the list or enter an e-mail address manually.
5. To add more recipients, select  **Add** and repeat step 4.
6. When finished, select  **Send**.

Camera

Use the camera to take photos.

Take pictures

1. Press and hold  (on the side of the phone) to activate the camera.
2. Press  OR **OK** to take photo. The picture is automatically saved.
3. To delete the picture, select **Delete**.
4. To share the picture, select **Share** and then:
 -  **Messaging**. See [Picture messaging, p.19](#).
 -  **Bluetooth**. See [Bluetooth, p.23](#).
 -  **E-mail**. See [E-mail, p.19](#).
5. To take a new picture, press  to return to camera mode.

Tip:

Wipe the lens clean with a dry cloth.

Camera adjustments

- Use / to zoom in and out.
- Use the side buttons **+** or **–** to adjust EV/Light sensitivity.

Note!

Zooming in may reduce image quality.

Flash mode

Change flash settings for your pictures.

In Camera mode, press  and select  **Flash mode**. Then select:

Auto Used automatically if needed.

Off Always off.

On Always on.

Pictures

You can access your pictures in Camera mode, press  and select

 **Gallery**. To return to Camera mode press .

Settings

In Camera mode, press  and select  **Settings**. Then select one of the following:

Picture size Choose picture size from 1MP to 5MP. The higher the size, the better quality the picture.

Shutter sound Set shutter sound to off, low or high.

Gallery

View your saved images.

1. Select    **Gallery**.
2. To view an image, select it. Use the  or  keys to scroll or scroll the screen using the touchscreen.
3. Press  and select an option:

 Share	Share the photo as Messaging or E-mail . See Picture messaging, p.19 or E-mail, p.19 for more information.
 Set as	Use the picture as contact picture. Select Contacts  contact from the list  Yes .

 Delete	Delete the selected picture. Select Yes to confirm.
 View mode	Change image view. Select Single to view the picture one by one or Gallery to view thumbnails.

Connectivity

Connecting the phone to a computer

Connect the phone to a computer and start transferring pictures, music and other file types. All you have to do is connect a USB cable between the phone and computer. From your computer's file explorer, you can drag and drop content between your phone and the computer.

Note!

You might not be able to transfer some copyright-protected material.

Drag and drop content between phone and a computer

1. Connect your phone to a computer using a USB cable.
2. Select **Turn on USB storage**.
3. Wait until the phone/memory card appears as external disks in the file explorer.
4. Drag and drop selected files between the phone and the computer.
5. Select **Turn off USB storage** when finished and remove the USB cable.

Note!

When the phone/memory card is mounted to the computer, the phone cannot access the memory card. Some functionality and applications in the phone, such as the camera, may not be accessible. You can transfer files by using a USB cable on most devices and operating systems supporting a USB Mass Storage interface.

Wireless networks

Connect to wireless networks when available to reduce data costs.

1. Select  ➔ **Connectivity** ➔ **Wi-Fi**.

2. Tick the **Turn on** box. Available networks are displayed in a list. The networks can be open or secured (marked with padlock).
3. Select a network to connect to. If secured, enter the password. When finished, select  **Save**. For more information, contact the relevant network administrator.
4. Connection status is shown above the list. Example: **Connected to: my network**.

Note!

Your phone remembers Wi-Fi networks you connect to. If Wi-Fi is turned on, the phone automatically connects to the network next time you are within reach.

Tip:

Some open networks require you to log in to a web page before gaining access to the network.

Bluetooth

You can connect wirelessly to other Bluetooth® compatible devices such as headsets or other phones.

1. Select  ➔ **Connectivity** ➔ **Bluetooth**.
2. Tick the **Turn on** box. Then select:

Search device	Search for available devices. 1. Select a device from the list to connect. 2. When connecting to another Bluetooth device you need a shared password. Enter the password and press OK .
My devices	Lists saved devices and enables you to add new devices. Select device from the list and press  .
Visibility	Make your phone visible or invisible to other devices.
Device name	Enter the name your phone should appear with for other Bluetooth devices and select Save .

Network setup

Your phone automatically selects your (service providers) home network if within range. If not within range, you can use another network, provided your network operator has an agreement that allows

you to do so. This is called roaming. Contact your service provider for more information.

Note!

Roaming can incur additional costs. Contact your service provider for more information.

1. Select  ➔ **Connectivity** ➔ **Network setup**.
2. Select one of the following options:

Select network	View a list of available network operators (displayed after a short delay). • Select desired service provider to connect to.
Service selection	Select type of network service: • Automatic — Your phone automatically switches between GSM and 3G for best service. • GSM — GSM service only. • 3G — 3G service only.
Network information	View your current network settings.

Flight mode

1. Press and hold ⓘ.
2. Select  **Flight mode**. When on,  is shown in the top left corner of the screen.

Tip:

Activate Flight mode when in areas with no network coverage to save battery. The phone repeatedly scans for available networks and this consumes power.

World

Internet

Use the web browser to access the Internet.

1. Select  ➔ .
2. Select the Internet address text field, located at the top of the display, and enter web address or search term. Then press **OK**.

Navigate the web browser

In the web browser, press  and select:

 Add bookmark	Add current web page as bookmark. 1. Edit title if preferred. 2. When finished, select  Save . 3. Select Yes to confirm.
 Bookmarks	View all saved bookmarks.
 Reload page	Reload the current web page.
 History	View your browser history. Select an item to directly go to the web page. If wanted, press  and select Delete all to clear history. Select Yes to confirm.
 Start page	Change start page. • Enter the web address in the text field. • Tick the Use current box to set the current page as the Start page. • Select Use bookmark  select chosen website from your saved bookmarks. When finished, select  Save .

Bookmarks

Quickly access your favourite web pages using bookmarks. Use Doro Experience® Manager to manage bookmarks on your phone.

Access saved bookmarks

1. Select   .
2. Select desired bookmark to access the corresponding web page.

Additional functions

Magnifier

Use the magnifier to magnify text or other things you have trouble reading or seeing.

1. Select  → .
2. Use the display as a magnifier.
3. Select  **Freeze image** to temporarily freeze the view in the display. To un-freeze select  **Release**.
4. To exit the magnifier press .

Calculator

Use the calculator to perform basic mathematical calculations.

1. Select  → .
2. Enter the first number.
3. Select an operation (+, -, x, ÷).
4. Enter the next number.
5. Repeat steps 2–4 as necessary.
Select = to calculate the result.

Calendar

Navigate the calendar using / or select the date directly.

1. Select  →  **Calendar**.
2. Press  and select:

 Add event	Add event. 1. Enter title for the event. 2. Enter start date (dd/mm/yyyy). 3. Enter start time (hh:mm). 4. Enter end date (dd/mm/yyyy). 5. Enter end time (hh:mm). 6. Select Reminder to set time for reminder, then select . 7. When finished, select  Save. Added events are marked with red dot in the calendar overview.
---	--

	At the set date/time, an alert tone is played and the event description is shown on the display. Select Dismiss to turn off the alarm or Snooze to repeat the alarm after 9 minutes. Note! <i>The calendar reminders only work when the phone is switched on.</i>
 View mode	You can select to view the events for a specific day. 1. Mark the date in the calendar overview. 2. Press  and select View mode. 3. To return to calendar overview press .
 Go to date	Enter the date you wish to view and select Go to date .
 Delete all	Delete all events in the calendar. Select Yes to confirm.

Edit

Select an event and press  for the following options:

Edit	Edit the selected task.
Delete	Delete the selected task.

Alarm

1. Select  →  **Alarm** →  **Edit**.
2. Tick the **Alarm on** box to turn it on.
3. Enter the alarm time (**hh:mm**).
4. Select occurrence:
 - For a single occurrence, select **Single**.
 - For a repeated alarm, select **Repeated** and tick the required days. When complete, select  **Save**.
5. When finished, select  **Save**.

Note!

The alarm will not work when the phone is switched off. To save battery and prevent incoming calls or messages, you can turn **Flight mode** on to keep the alarm function, see [Flight mode, p.24](#).

Only one time can be set. Use [Daily reminder, p.28](#) to add further reminders.

Daily reminder

Use reminders to get daily reminders of occurring events.

1. Select  →  →  **Add**.
 2. Enter subject and time (**hh:mm**). See Entering text  for text input.
 3. When finished, select  **Save**.
- Edit or delete a reminder.

1. Select the reminder:
 - To edit, select the text fields and edit the required information.
 - To delete, select the reminder, press  and select  **Delete** → **Yes**.

Note!

The reminder will not work when the phone is switched off.

Web radio

Listen to your favourite web radio. Use Doro Experience® Manager to transfer web radio casts to your phone.

Listen to web radio

1. Select  → .
2. Select desired cast to listen to.

Remote help

If you are having any problems or questions about your phone, use the **Remote help** function to get direct help.

Note!

The Remote help function requires data connection, make sure to be connected to Wi-Fi connection or allow Data traffic.

1. Call the nearest Doro support centre. It is recommended to use another phone, if using the Doro PhoneEasy® 740 connect a headset.
2. When asked to, select  ➔ **General** ➔ **Remote help**.
3. Tick the box if you agree with the user agreements, then select **Request Remote Control**.
4. When requested add activation code, then select **OK** to confirm.
5. If you agree with user agreements, select **Yes**. The Remote help function is started and the phone returns to the Home screen and **Supporting..** is visible in the lower right corner.
6. Remote help is ended by Doro Support, to confirm select **End**.

Tip:

*You can add **Owner number** in your phone and then state your phone number to Doro support to avoid entering the activation code. Select  ➔ **General** ➔ **Owner number** ➔ enter your phone number and press **OK** to confirm.*

Troubleshooting

Phone cannot be switched on

Battery charge low	Connect the power adapter and charge the battery for 5 hours. Full battery capacity is reached after the battery has been charged 3–4 times.
Battery incorrectly installed	Check the installation of the battery.

Failure to charge the battery

Battery or charger damaged	Check the battery and charger.
Battery should only be charged in temperatures between 0 °C and 40 °C	Improve the charging environment.
Charger incorrectly connected to phone or power socket	Check the charger connections.

Standby time decreases

Battery charge capacity too low	Install a new battery.
Too far from base station, phone is constantly searching for signal	Searching the network consumes battery power. Find a place with a stronger signal, or temporarily turn off the phone.

Failure to place or receive calls

Call barring activated	Deactivate call barring. If this does not solve the problem, contact your service provider.
-------------------------------	---

PIN code not accepted

Wrong PIN code entered too many times	Enter the PUK code to change the PIN code, or contact your service provider.
--	--

SIM card error

SIM card damaged	Check the condition of the SIM card. If it is damaged, contact your service provider.
SIM card incorrectly installed	Check the installation of the SIM card. Remove the card and reinstall it.
SIM card dirty or damp	Wipe the contact surfaces of the SIM card with a clean cloth.

Failure to connect to network

SIM card invalid	Contact your service provider.
No coverage of GSM service	Contact your service provider.

Weak signal

Too far from base station	Try again from another location.
Network congestion	Try calling at a later time.

Echo or noise

Regional problem from bad network relay	Hang up and redial. This may switch to another network relay.
--	---

Failure to add a contact

Phonebook memory full	Delete contacts to free up memory.
------------------------------	------------------------------------

Failure to set a function

Function not supported or subscribed from network	Contact your service provider.
--	--------------------------------

Safety instructions**CAUTION**

The unit and the accessories can contain small parts. Keep all of the equipment out of the reach of small children.
The mains adapter is the disconnect device between the product and mains power. The mains socket outlet must be close to the equipment and easily accessible.

Network services and costs

Your device is approved for use on the WCDMA 900/2100 MHz, GSM 850/900/1800/1900 MHz networks. To use the device, you need a subscription with a service provider.

Using network services may result in traffic costs. Some product features require support from the network, and you may need to subscribe to them.

Operating environment

Follow the rules and laws that apply wherever you are, and always turn off the unit whenever its use is prohibited or can cause interference or hazards. Only use the unit in its normal user position.

This unit complies with guidelines for radiation when it is used either in a normal position against your ear, or when it is at least 1.5 cm from your body. If the unit is carried close to your body in a case, belt holder or other holder, these holders should not contain any metal, and the product should be placed at the distance from your body specified above. Make sure that the distance instructions above are followed until the transfer is complete.

Parts of the unit are magnetic. The unit can attract metal objects. Do not keep credit cards or other magnetic media near the unit. There is a risk that information stored on them can be erased.

Medical units

The use of equipment that transmits radio signals, for example, mobile phones, can interfere with insufficiently protected medical equipment. Consult a doctor or the manufacturer of the equipment to determine if it has adequate protection against external radio signals, or if you have any questions. If notices have been put up at health care facilities instructing you to turn off the unit while you are there, you should comply. Hospitals and other health care facilities sometimes use equipment that can be sensitive to external radio signals.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of 15 cm be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. Persons with pacemakers:

- Should always keep the phone more than 15 cm from their pacemaker when the phone is turned on.
- Should not carry the phone in a breast pocket.
- Should use the ear opposite the pacemaker to minimize the potential for interference.

If you have any reason to suspect that interference is taking place, turn the phone off immediately.

Areas with explosion risk

Always turn off the unit when you are in an area where there is a risk of explosion. Follow all signs and instructions. There is a risk of explosion in places that include areas where you are normally requested to turn off your car engine. In these areas, sparks can cause explosion or fire which can lead to personal injury or even death.

Turn off the unit at filling stations, and any other place that has fuel pumps and auto repair facilities.

Follow the restrictions that apply to the use of radio equipment near places where fuel is stored and sold, chemical factories and places where blasting is in progress.

Areas with risk for explosion are often – but not always – clearly marked. This also applies to below decks on ships; the transport or storage of chemicals; vehicles that use liquid fuel (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust or metal powder.

Li-ion battery

This product contains a Li-ion battery. There is a risk of fire and burns if the battery pack is handled improperly.



WARNING

Danger of explosion if battery is incorrectly replaced. To reduce risk of fire or burns, do not disassemble, crush, puncture, short external contacts, expose to temperature above 60° C (140° F), or dispose of in fire or water. Recycle or dispose of used batteries according to the local regulations or reference guide supplied with your product.

Protect your hearing

This device has been tested to comply with the Sound Pressure Level requirement laid down in the applicable EN 50332-1 and/or EN 50332-2 standards.

**WARNING**

Excessive exposure to loud sounds can cause hearing damage. Exposure to loud sounds while driving may distract your attention and cause an accident. Listen to a headset at a moderate level, and do not hold the device near your ear when the loudspeaker is in use.

Note!

For France, mobile headphones or earphones for this device have been tested to comply with the Sound Pressure requirement laid down in the applicable NF EN 50332-1:2000 and/or NF EN 50332-2:2003 standards as required by French Article L. 5232-1.

A pleine puissance, l'écoute prolongée du baladeur peut endommager l'oreille de l'utilisateur.

Emergency calls

IMPORTANT!

Mobile phones use radio signals, the mobile phone network, the terrestrial network and user-programmed functions. This means that connection cannot be guaranteed in all circumstances. Therefore, never rely only on a mobile phone for very important calls such as medical emergencies.

Vehicles

Radio signals can affect electronic systems in motor vehicles (for example, electronic fuel injection, ABS brakes, automatic cruise control, air bag systems) that have been incorrectly installed or are inadequately protected. Contact the manufacturer or its representative for more information about your vehicle or any additional equipment.

Do not keep or transport flammable liquids, gases or explosives together with the unit or its accessories. For vehicles equipped with air bags: Remember that air bags fill with air with considerable force.

Do not place objects, including fixed or portable radio equipment in the area above the airbag or the area where it might expand. Serious injuries may be caused if the mobile phone equipment is incorrectly installed and the airbag fills with air.

It is prohibited to use the unit in flight. Turn off the unit before you board a plane. Using wireless telecom units inside a plane can pose risks to air safety and interfere with telecommunications. It may also be illegal.

Care and maintenance

Your unit is a technically advanced product and should be treated with the greatest care. Negligence may void the warranty.

- Protect the unit from moisture. Rain/snowfall, moisture and all types of liquid can contain substances that corrode the electronic circuits. If the unit gets wet, you should remove the battery and allow the unit to dry completely before you replace it.
- Do not use or keep the unit in dusty, dirty environments. The unit's moving parts and electronic components can be damaged.
- Do not keep the unit in warm places. High temperatures can reduce the lifespan for electronic equipment, damage batteries and distort or melt certain plastics.
- Do not keep the unit in cold places. When the unit warms up to normal temperature, condensation can form on the inside which can damage the electronic circuits.
- Do not try to open the unit in any other way than that which is indicated here.
- Do not drop the unit. Do not knock or shake it either. If it is treated roughly the circuits and precision mechanics can be broken.
- Do not use strong chemicals to clean the unit.

The advice applies to the unit, battery, mains adapter and other accessories. If the phone is not working as it should, please contact the place of purchase for service. Don't forget the receipt or a copy of the invoice.

Warranty

This product is guaranteed for a period of 12 months from the date of purchase. In the unlikely event of a fault occurring during this period, please contact the place of purchase. Proof of purchase is required for any service or support needed during the guarantee period.

This guarantee will not apply to a fault caused by an accident or a similar incident or damage, liquid ingress, negligence, abnormal usage, non-maintenance or any other circumstances on the user's part. Furthermore, this guarantee will not apply to any fault caused by a thunderstorm or any other voltage fluctuations. As a matter of precaution, we recommend disconnecting the charger during a thunderstorm.

Batteries are consumables and are not included in any guarantee.

This guarantee does not apply if batteries other than DORO original batteries are used.

Specifications

Network: WCDMA 900/2100 MHz, GSM 850/900/1800/1900 MHz
Dimensions: 116 mm x 56 mm x 18 mm

Weight:	149 g (including battery)
Battery:	3.7 V / 1450 mAh Li-ion battery

Copyright and other notices

Copyright © 2012 Doro AB. All rights reserved.

Bluetooth® is a registered trademark of Bluetooth SIG, inc.

vCard is a trademark of the Internet Mail Consortium.

Wi-Fi is a trademark or a registered trademark of the Wi-Fi Alliance.

microSD is a trademark of SD Card Association.

Java, J2ME and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries.

Google, Google Maps™, Gmail, Google Calendar, Google Checkout, Google Talk, YouTube, the YouTube logo, Picasa and Android are trademarks or registered trademarks of Google, Inc.

This product is licensed under the MPEG-4 visual and AVC patent portfolio licenses for the personal and noncommercial use of a consumer for (i) encoding video in compliance with the MPEG-4 visual standard ("MPEG-4 video") or the AVC standard ("AVC video") and/or (ii) decoding MPEG- 4 or AVC video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed by MPEG LA to provide MPEG-4 and/or AVC video. No license is granted or shall be implied for any other use. Additional information including that relating to promotional, internal and commercial uses and licensing may be obtained from MPEG LA, L.L.C. See <http://www.mpegla.com>. MPEG Layer-3 audio decoding technology licensed from Fraunhofer IIS and Thomson.

Other product and company names mentioned herein may be the trademarks of their respective owners.

Any rights not expressly granted herein are reserved. All other trademarks are property of their respective owners.

Content copyright

The unauthorised copying of copyrighted materials is contrary to the provisions of the Copyright Laws of the United States and other countries. This device is intended solely for copying non-copyrighted materials, materials in which you own the copyright, or materials which you are authorised or legally permitted to copy. If you are uncertain about your right to copy any material, please contact your legal advisor.

Hearing aid

This device should work with most hearing aid equipment in the market. However, full compatibility with all equipment can not be promised.

Specific Absorption Rate (SAR)

This device meets applicable international safety requirements for exposure to radio waves. Doro PhoneEasy® 740 measures 0.475 W/kg measured over 10 g tissue.

The maximum limit according to WHO is 2.0 W/kg measured over 10 g tissue.

Declaration of Conformity

Doro hereby declares that Doro PhoneEasy® 740 conforms to the essential requirements and other relevant regulations contained in the Directives 1999/5/EC (R&TTE) and 2002/95/EC (RoHS). A copy of the Declaration of Conformity is available at www.doro.com/dofc

PhoneEasy 740 (1011)

English

Version 1.0

© 2012 Doro AB. All rights reserved.

www.doro.com

CE 0700

REV 6089 — STR 20121005