



 
EXOPC

Introducing the EXOPC User Interface




EXODesktop

You may fill each page with as many as 77 circular Icons.

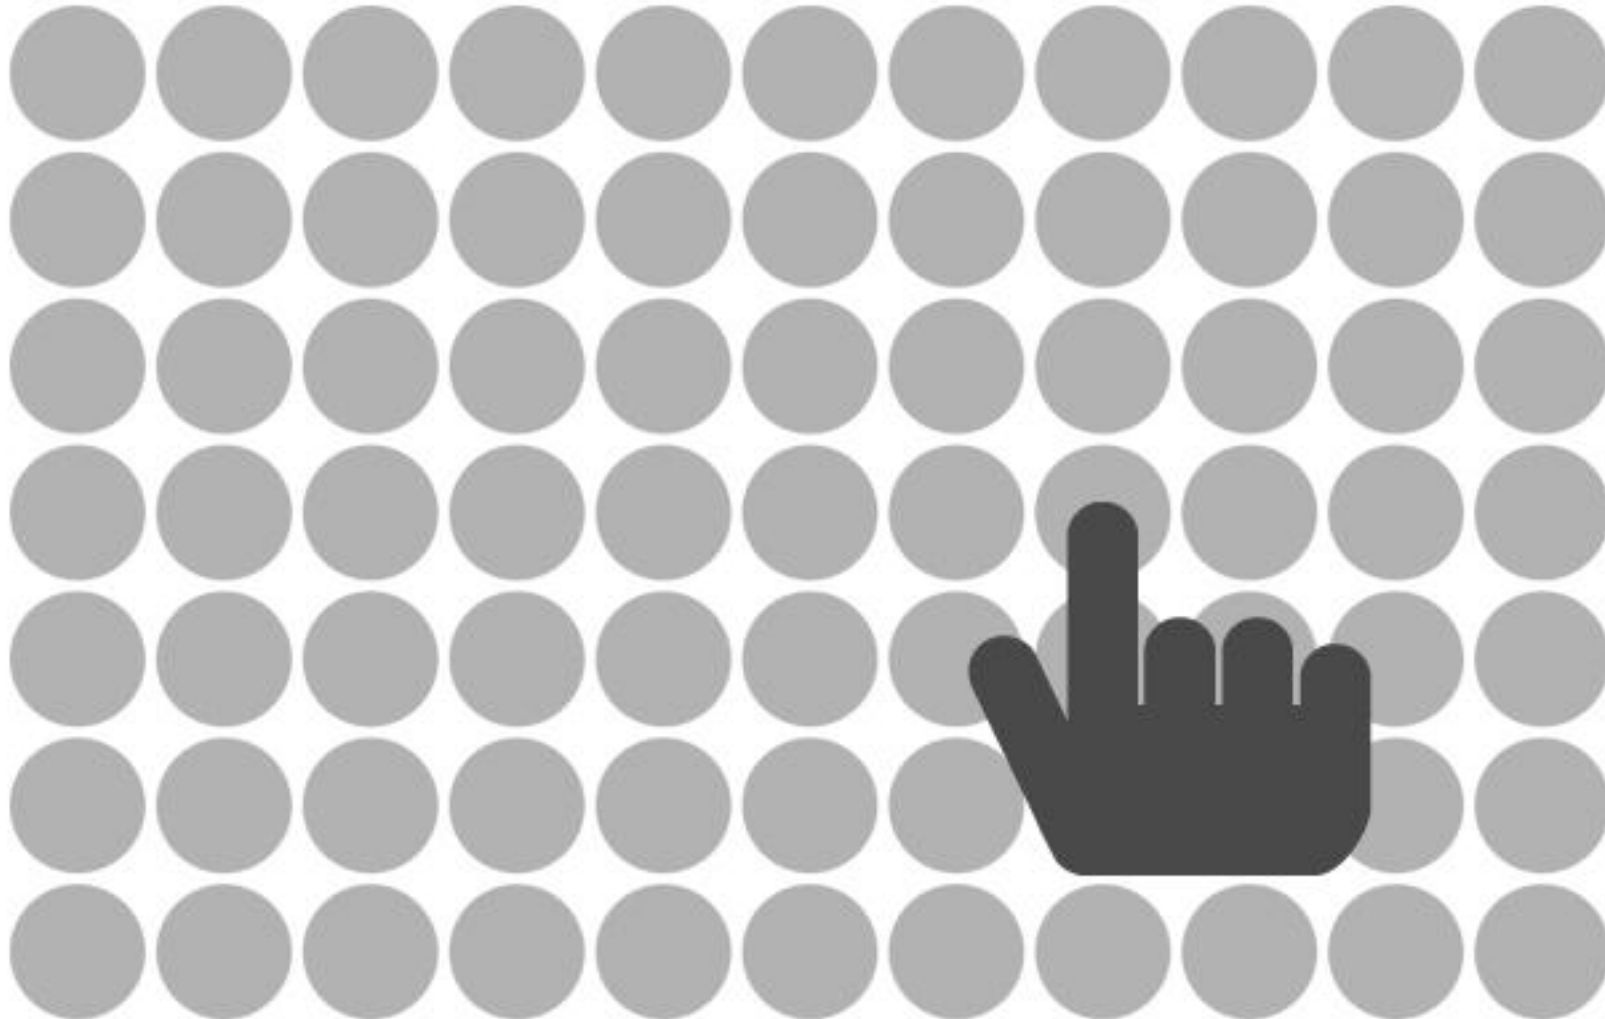


Icons introduction

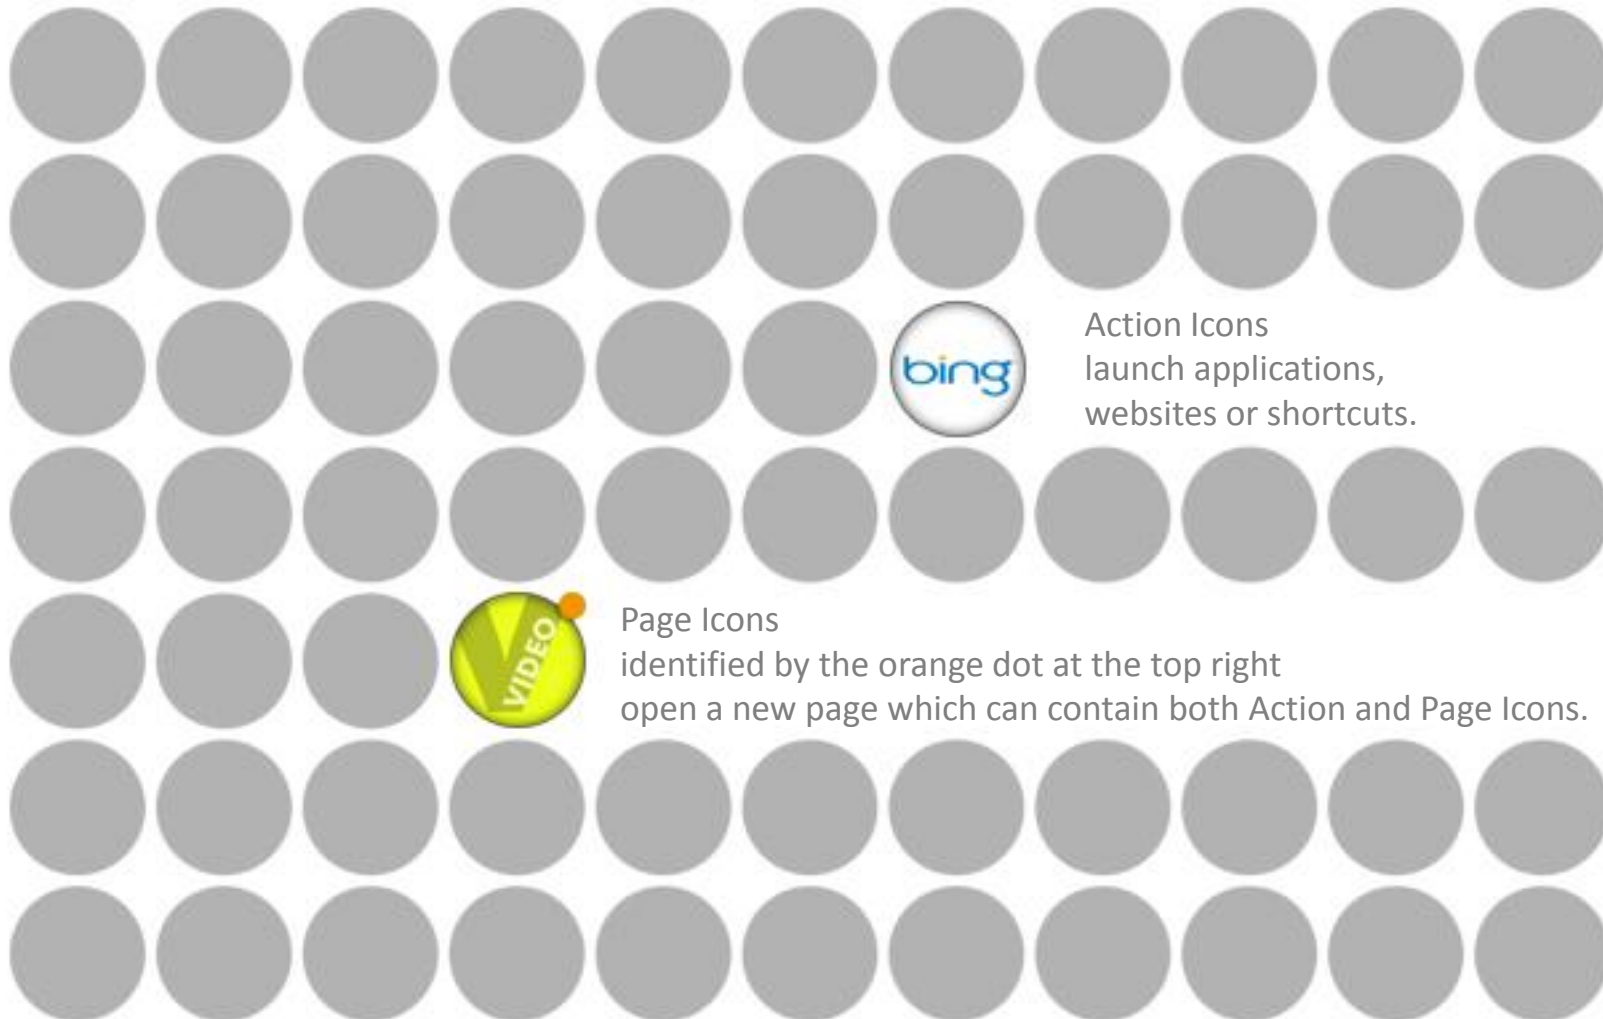


Icons placement

Touch and drag an Icon to the location of your choice.

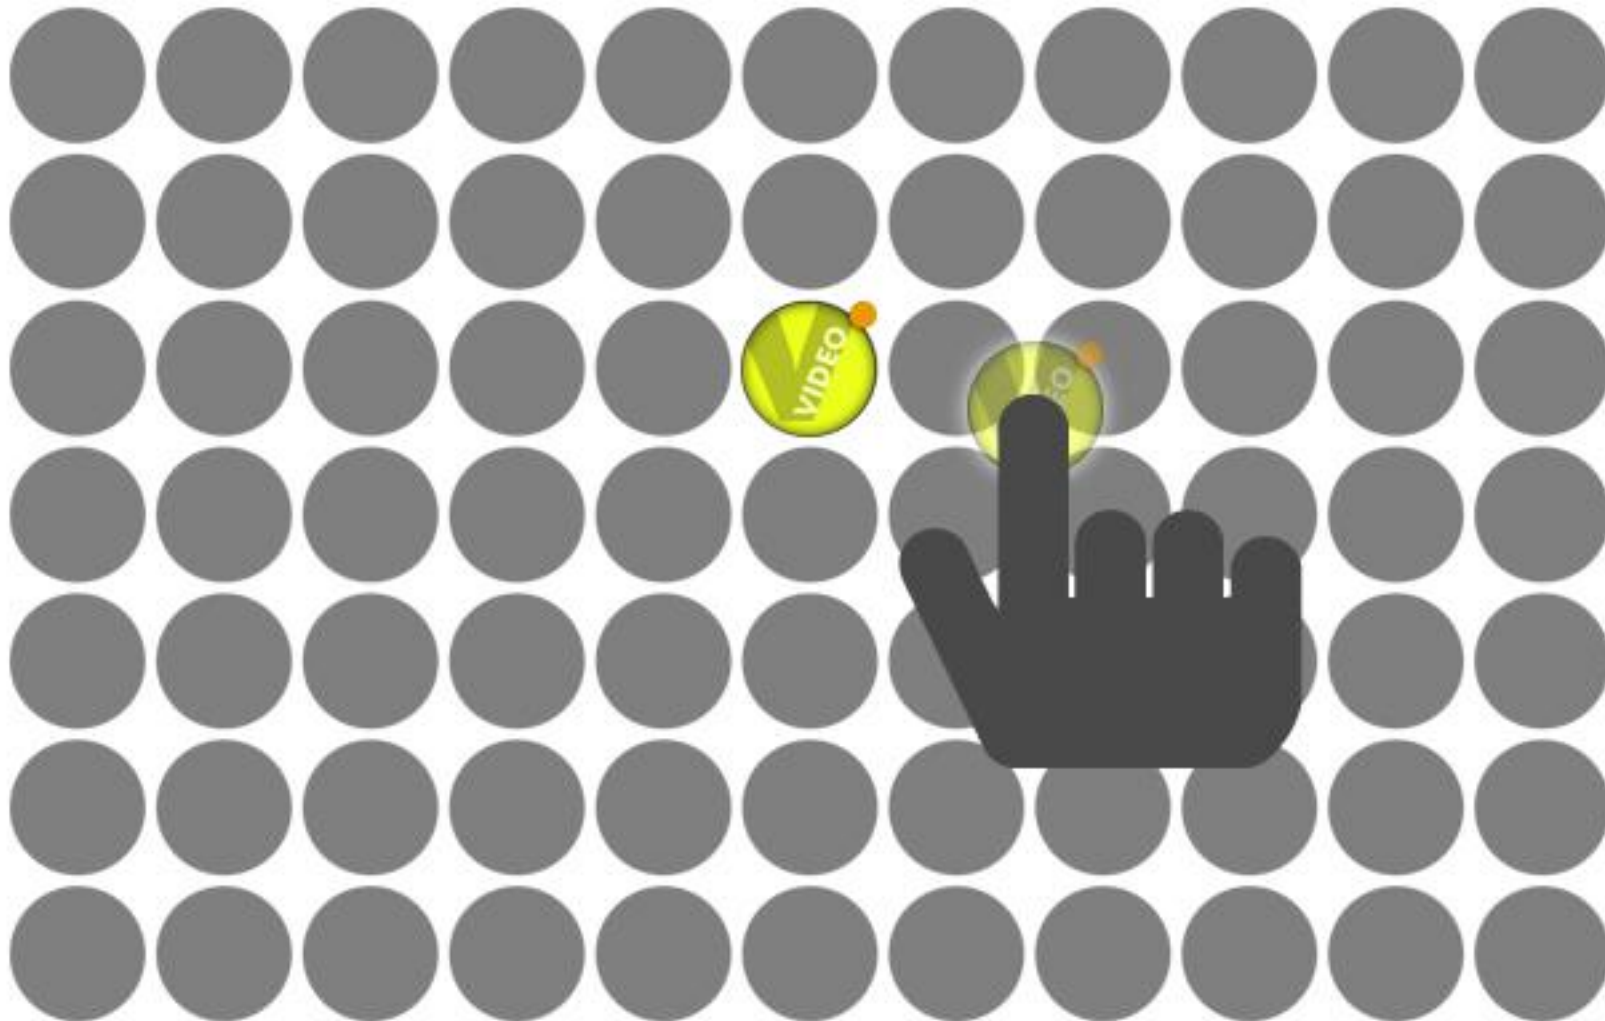


Icons moving an Action Icon to another Page

1. Select an Action Icon and drag it over the the desired Page Icon.
2. The Icon will be instantly absorbed and placed into an available position on the destination Page.

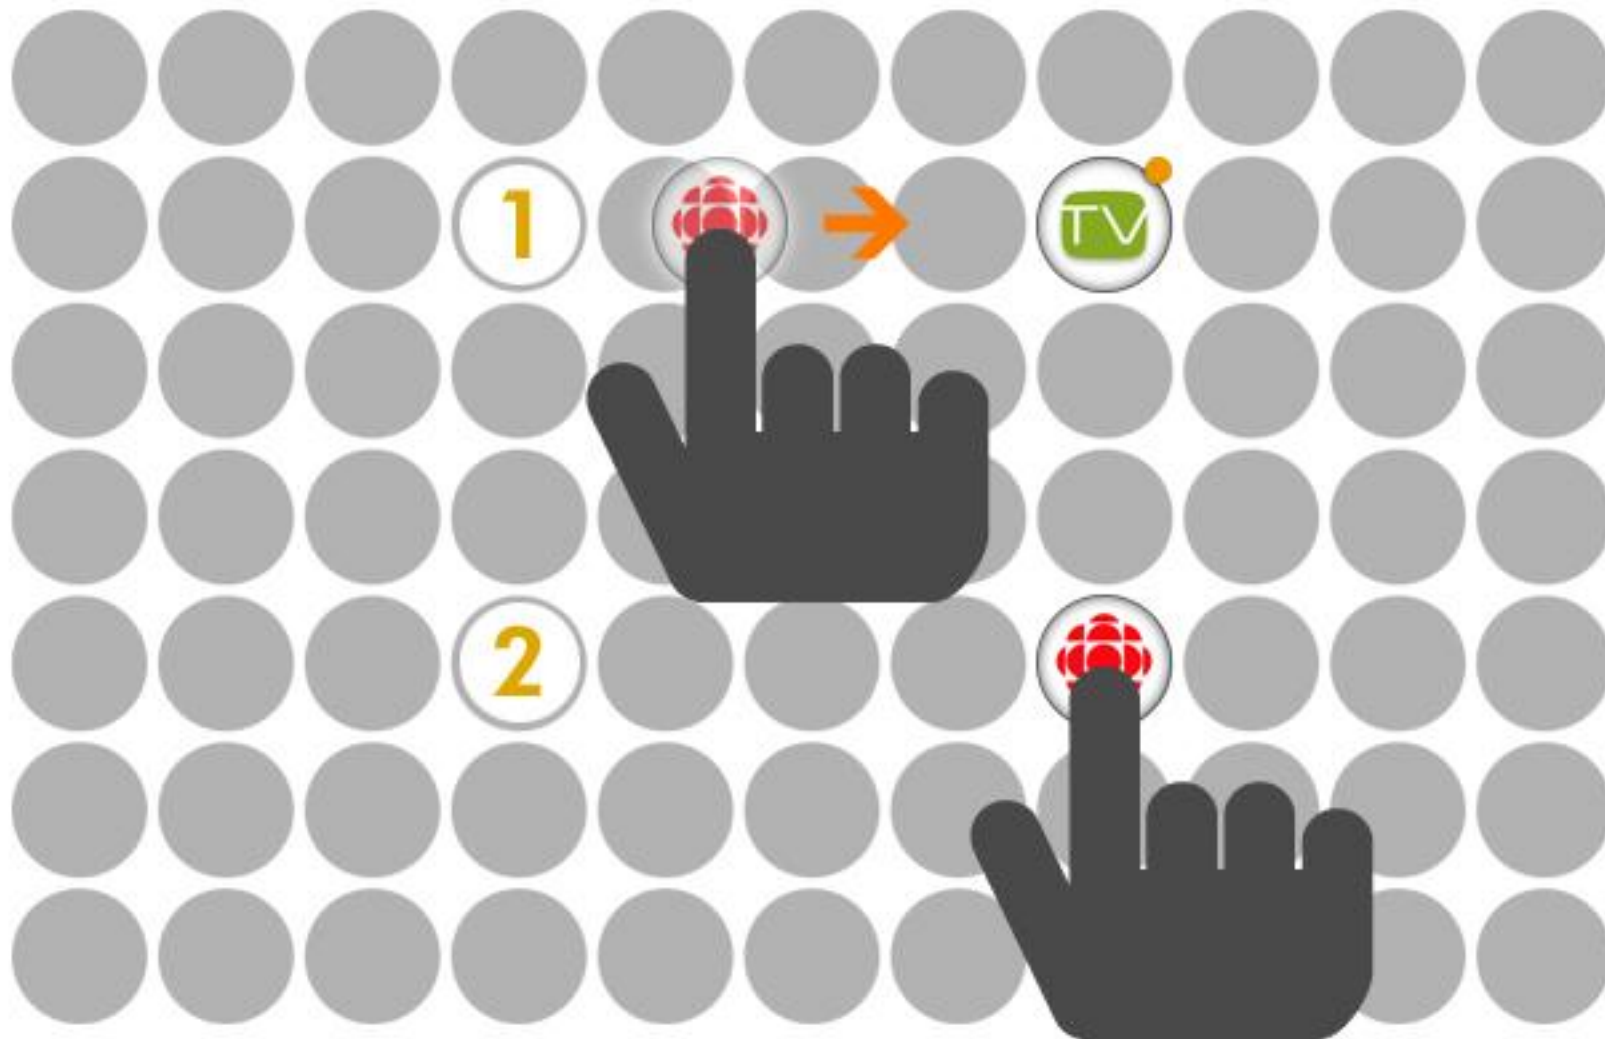

Icons removing an application from a Page

When you select an Action Icon, the Recycle Area appears in the Left Control Zone.
To remove an Action Icon from the page, simply drag and drop its Icon into the Recycle Area.

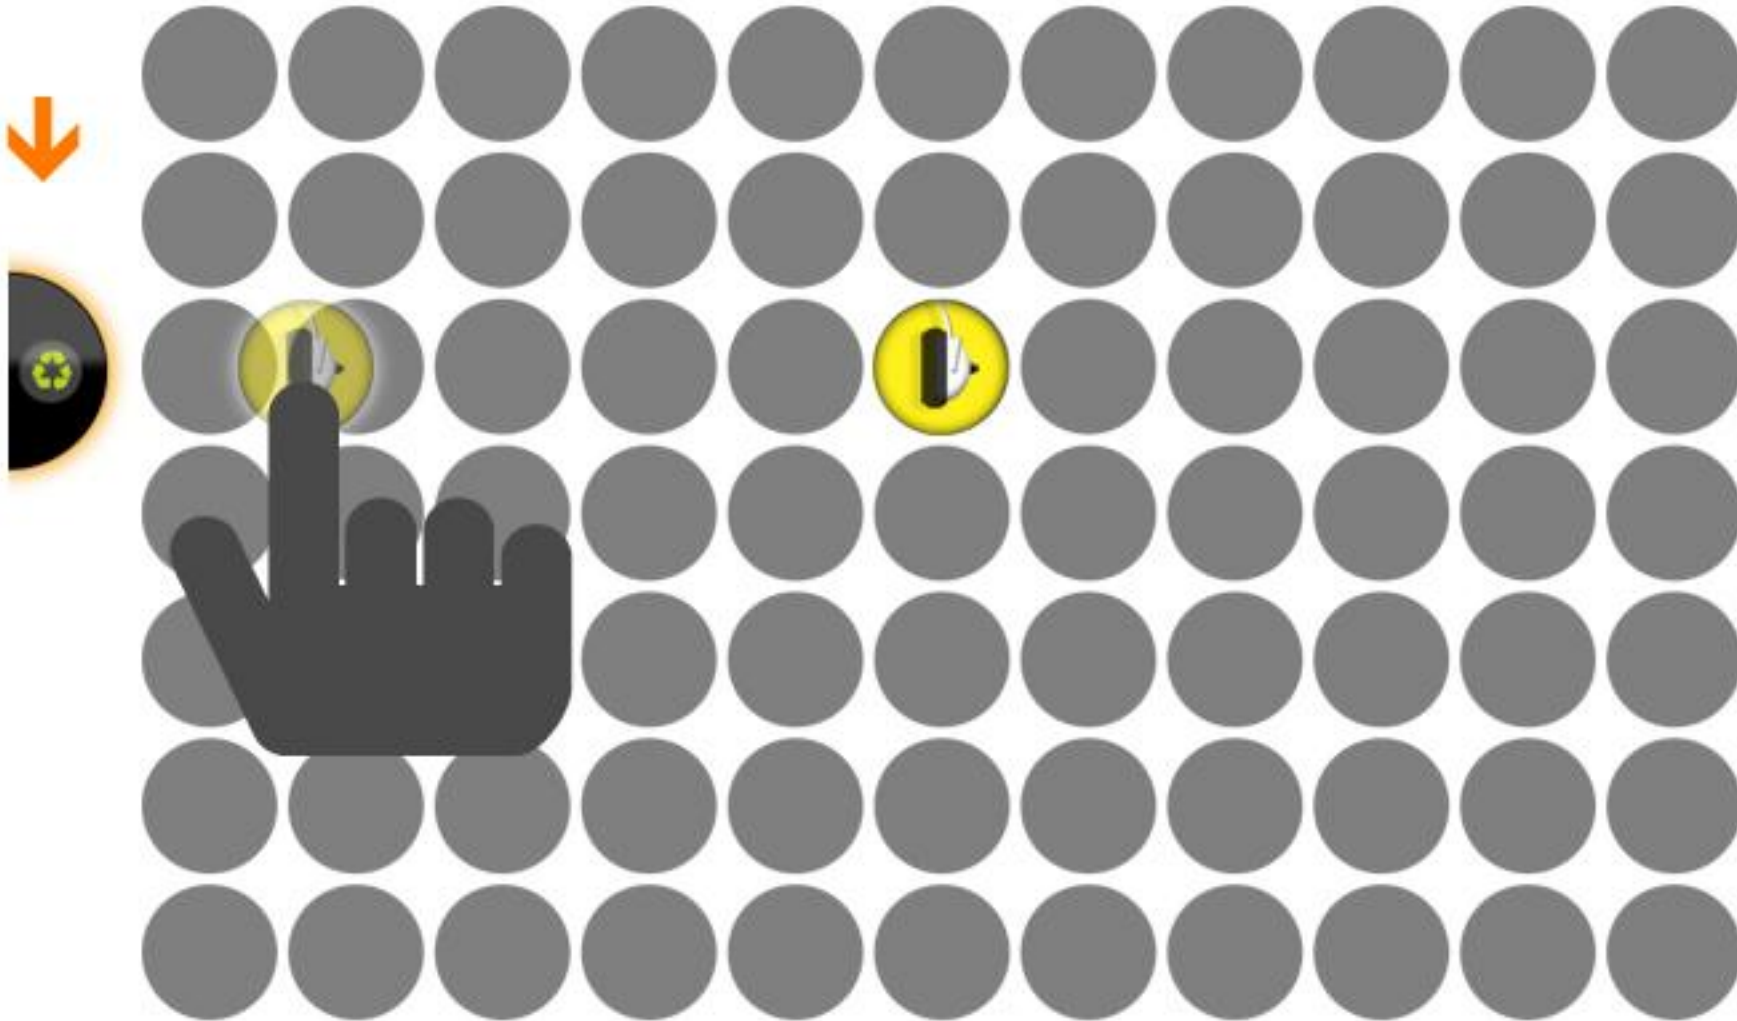

Control Zones

Two vertical Control Zones.
Left: Function Buttons
Right: Home + Application Switcher



Control Zones - Left



Application Library + EXO-Store

Clock

Battery Indicator

Volume

Keyboard
launches the EXO-Keyboard

Power
exits the UI to the Windows 7 desktop

Windows
minimizes the UI to the Windows 7 desktop

Control Zones - Right



Home

When the UI is visible, this button returns you to the home page.

When an application is visible, the Home button will minimize it.

Icons of running applications.

Touching an icon will switch its application to the foreground.

Control Zones – Right
closing an application



Wallpaper

Choose from the EXOPC wallpaper gallery or create your own!






Windows 7



This button, located in the Left Control Zone, minimizes the UI to the Windows 7 desktop. All Windows 7 functions are available.

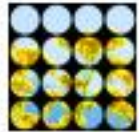

This program icon, located on the Windows 7 taskbar, opens the EXOPC User Interface.



EXOPC welcomes you to our world of touch computing.

Visit us on the web: www.exopc.com

Join our community: www.exopc.com/forum



EXOPC

