



Clear and Simple Quick Start Guide

HTC Desire® 520



 
Getting to know your HTC Desire® 520



Phone setup


Insert the SIM card

1. Hold your phone with the bottom edge facing up and the back facing you.
2. With your free hand, press your thumb on the back cover and then use a finger to take off the back cover from the small gap at the bottom of the phone.
3. Take out the battery.
4. Pull out the SIM card tray and then with the SIM card's gold contacts facing up and its cut-off corner facing out, put the card into the tray.
5. Position the tray at the edge of the slot at an angle. Then, carefully slide the tray into the slot.
6. Insert your microSD™ card (optional) into the storage card slot with its gold contacts facing down and push it all the way in.
7. Re-insert the battery.
8. Align the back cover onto the top part of the phone and then press the cover to lock it into place.
9. Charge your phone.

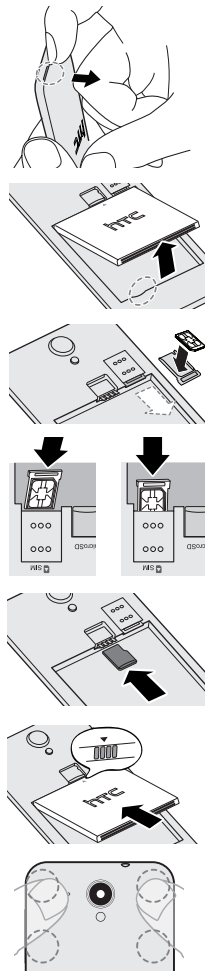

Navigating your phone

 
- Use your fingertip to lightly touch the screen.
- Use quick flicks of your finger on the touchscreen to swipe up, down, left, and right.
- To view recent apps, tap the **Recent** key.
- To return to the previous screen, tap the **Back** key.
- Press the **Home** key at any time to return to the main home screen.
- Press the **Home** key and then drag it to the Google button to launch Google Now.
- Tap **App tray** to access applications.

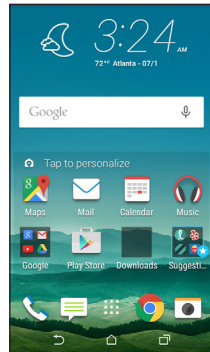

Notifications panel

The Notifications panel provides quick access to alerts including new messages, emails and software updates.

 - Touch the Notifications bar and drag your finger down to see the Notifications panel.
- Swipe right to clear individual notifications or tap **Clear** to clear all.

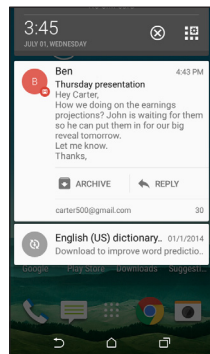


Personalize

Customize home screens


1. From the home screen, press and hold a blank area to access customization options.
2. Choose what you want to customize, such as your home screen wallpaper, theme, and widgets.

 Apply detailed personalization to your phone by using **Themes** in the **App tray**.

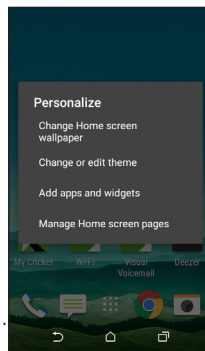

Organize home screens

 
- To move a widget, shortcut, or folder, tap and hold it and then drag it to a new location.
- To delete, tap and hold and then drag an item to **Remove** at the top of the screen.
- To create a folder, tap and hold an icon and drag it on top of another icon.
- To rename a folder, tap it, tap the folder name, and tap the **Folder** name field to bring up the keyboard.

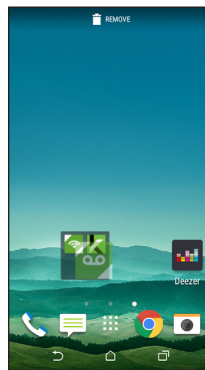

Calls and voicemail


Make a call

 1. From the home screen, tap **Phone**.
2. Select an option to make a call:
 - **Phone:** Manually enter a telephone number.
 - **Call History:** Swipe right to return or retry a call.
 - **Favorites:** Swipe left to call favorite contacts.
 - **People:** Call people in your address book.
 - **Groups:** View people organized by category.

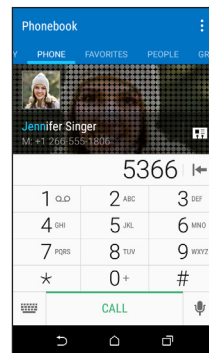

Check voicemail

 1. From the home screen, tap **Phone**.
2. Press and hold the number **1** key on the keypad.
3. Or tap **Visual Voicemail** from the home screen to see who has left you a voicemail.

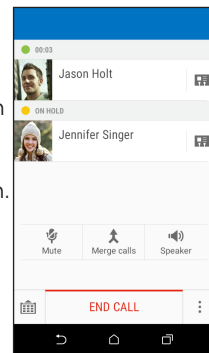

Use call waiting

 
Answer a call when you are on an existing call.

1. While on a call, you'll hear a tone if another call comes in.
2. Tap **Answer** to accept the second call and put the first call on hold.
3. To switch between the calls, tap a call on the screen.

Text and picture messaging


Send a text message

1. From the home screen, tap **Messages**.
2. Tap **+**.
3. Enter a contact name or mobile number in the **To** field or tap to choose from your contacts.
4. Tap the **Add text** field and enter your text.
5. Tap **Send**.

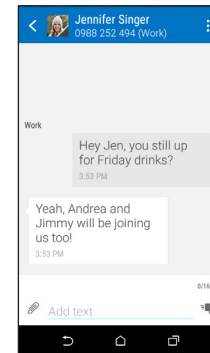

Send a picture message

 1. Follow steps 1 - 4 above.
2. Tap **Attach**, and then choose an attachment type.
3. Select or browse for the item to attach.
4. Tap **Send**.

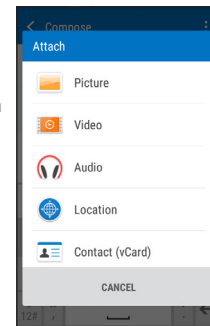

Please don't text and drive.

More information

On the Web

Detailed support information, including device specifications and the full user manual, is available at: www.cricketwireless.com/support/devices.

On the phone

- Check out the **Help** app for self-help in troubleshooting basic problems.
- Call Customer Care at **1-855-246-2461** or dial **611** from your phone.

Accessories

Cricket offers a full line of accessories. For more information go to www.cricketwireless.com/shop/accessories or visit your local Cricket store.



HTC Clear Shield cases

© 2015 HTC Corporation. All rights reserved. HTC, the HTC logo, HTC Desire, HTC BlinkFeed, HTC Sense, and HTC Dot View are trademarks of HTC Corporation.

© 2015 Cricket Wireless LLC. All rights reserved. Cricket and the Cricket logo are trademarks under license to Cricket Wireless LLC. Other marks are the property of their respective owners.

 
Printed in Taiwan

P/N: XXXXXL000-00

Email

Email setup


1. From the home screen, tap **App tray** > **Mail**.
2. Select an email provider.
3. Enter the email address and password, and then tap **Next**.
4. Follow the onscreen instructions, and then tap **Finish setup**.

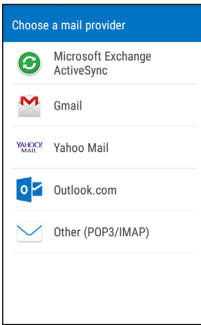

Your email will begin to synchronize with your phone.

Send an email

 1. From the home screen, tap **App tray** > **Mail**.
2. Switch to the email account that you want to use.
3. Tap **+**.
4. In the **To** field, type email addresses or tap to choose from your contacts.
5. Enter the subject and your message.
6. To add an attachment, tap **ⓧ**.
7. Tap **✉** to send or to send it later, tap **⌚** > **Save**.

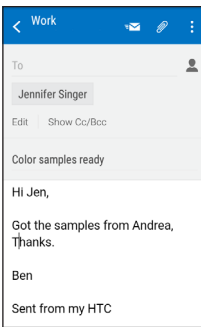

Note: To set up your corporate email, contact your IT administrator.

Cricket services

These services make using Cricket even better and easier!



My Cricket: Access billing, make a quick payment, view usage and access support from the palm of your hand.



Cricket Wi-Fi: Automatically connect to free and open Wi-Fi hotspots, helping you to maximize data usage and enhance coverage.



Cricket Visual Voicemail: Quickly view, access and play back your voicemail messages. Easily save important numbers to your Favorites list and respond to messages by calling back or texting.

 


Deezer: Listen on-the-go with ad-free streaming music, download your favorites to your phone and get customized playlists based on your preferences.

Apps on Google Play

Access Google Play™

1. From the home screen, tap **Play Store**.
2. Enter your existing Google Account or create one following the steps on the screen.

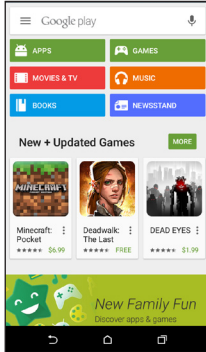

Navigate Google Play

From Play Store, you will have multiple ways to search for apps, games, and more.

1. Tap a category to browse popular apps, games, movies, and music organized by popularity or category.
2. Tap the **Google play** text field to search the Play Store for a specific game or app.
3. To install, tap the app and follow instructions.

Once installed, you will see a notification in the Notifications panel. Open the app from this notification or by locating the app in the **App tray**.

Note: A Google Wallet™ payment method is required to purchase apps.

Camera and video

Take a picture

1. From the home screen, tap **Camera**.
2. Tap to take a picture.



View pictures

 
1. From the home screen, tap **App tray** > **Gallery**.
2. Swipe right to open the slideout menu and select how you want to view your pictures.
3. Tap a thumbnail to view it in full screen.

Take a video

1. From the home screen, tap **Camera**.
2. Tap to start recording.
3. Tap to end recording.

Send a picture*

1. From the home screen, tap **App tray** > **Gallery**.
2. Swipe right to open the slideout menu and select how you want to view your pictures.
3. Tap a picture.
4. Tap to share via Bluetooth®, send by email, send as a message, or upload to a social network.

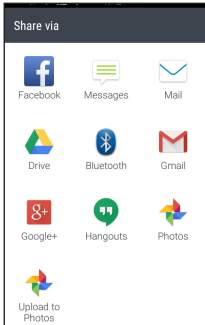


* Data charges may apply.

BlinkFeed and Sense Home

Add feed sources in HTC BlinkFeed®

Easily access content from popular websites and your social networks.

 
1. From the home screen, swipe right to access HTC BlinkFeed.
2. On HTC BlinkFeed, swipe right to open the slideout menu.
3. Tap > **Add content**.
4. Tap a category to see available content.
5. Select the feeds you want to add to HTC BlinkFeed.
6. Tap the **Back** key to return to HTC BlinkFeed.

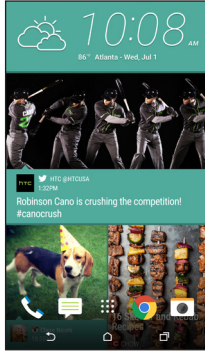

HTC Sense® Home

Get timely and smart updates on your phone. The HTC Sense Home widget automatically adapts to where you are, and automatically shows apps that you often use at home, work, or outdoors.

 Over time, the phone learns which apps you use often based on where you are and fills the widget with those apps automatically.

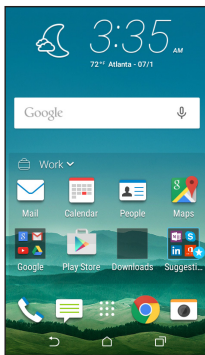


Note: Location settings must be turned on.

Zoe

A Zoe™ is a clip of photos and videos that Gallery has automatically put together, with added background music and special effects.

View a Zoe in Gallery

 1. From the home screen, tap **App tray** > **Gallery**.
2. Tap **≡**, and then choose how you want to view your photos and videos. When in **Timeline** view, you need to go to the **Events** or **Year** tab.
3. Tap a tile to open a group of photos and videos. You'll then see a preview of the Zoe play automatically.

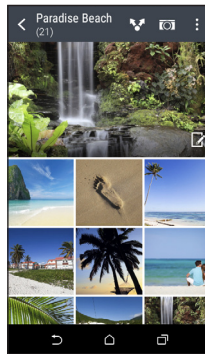

Edit a Zoe

1. While viewing a collection of photos and/or videos, tap at bottom right corner of the Zoe.
2. Tap **Clips** to select the photos or videos to include in the Zoe. Swipe an item right or left to remove it.
3. Tap **Theme** to choose video filters to apply to the Zoe.
4. Tap **Music** to select music for your Zoe.
5. Tap **Done**.

