


# Your HTC Desire 700 dual sim


## Inserting your micro UIM, micro SIM and micro SD cards

### IMPORTANT: USE STANDARD MICRO UIM AND MICRO SIM CARDS ONLY.


Inserting a smaller size card (such as a nano SIM with an adapter or a modified SIM) may damage the card slot or cause the card to not fit properly.

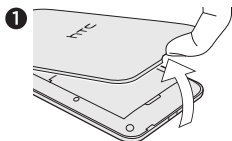


1. Open the back cover from the small opening at the bottom.

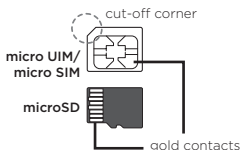

2. Insert a CDMA micro UIM or 3G/GSM micro SIM into slot 1. Insert the card with its gold contacts facing down and cut-off corner facing in.

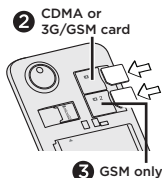


 3. You can only use a GSM micro SIM in the SIM 2 slot.



4. Insert a microSD card all the way into the storage card slot with its gold contacts facing down.

5

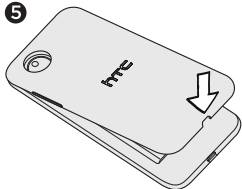

5. To replace the back cover, align the top part first. Then press the sides and the bottom of the back cover to lock the cover into place.

## Want some guidance on using your phone?

Check out our friendly walkthroughs in the **Tips & Help** app on your phone. Or go to [www.htc.com/support/](http://www.htc.com/support/) to find tutorials, the user guide, FAQs, latest news, and more.

© 2013 2013 HTC Corporation. All rights reserved.

HTC, the HTC logo, and HTC Desire are trademarks of HTC Corporation. All other company, product and service names mentioned herein are trademarks, registered trademarks or service marks of their respective owners.



htc.com

91H0xxxx-xxM Rev.A