

Welcome to HUAWEI

HUAWEI U8185-1
User Guide

Contents

1 Read Before Proceeding	1
1.1 Safety Precautions.....	1
1.2 Personal Information and Data Security	2
1.3 Legal Notice.....	3
2 Getting Started.....	6
2.1 Key Functions at Your Fingertips.....	6
2.2 Important Information About the Battery	6
2.3 Power Saving Tips	7
2.4 Power On or Off Your Mobile Phone	7
2.5 Using the Touchscreen.....	9
2.6 Locking and Unlocking the Screen	9
2.7 Home Screen.....	10
2.8 Application Screen.....	14
2.9 Using a microSD Card	15
3 Calling.....	16
3.1 Making a Call	16
3.2 Answering or Rejecting a Call	17
3.3 Other Operations During a Call	18
3.4 Using the Call log.....	19
3.5 Using Airplane Mode	19
4 Contacts.....	20
4.1 Opening the Contacts Application	20
4.2 Importing Contacts from a SIM Card	20
4.3 Adding a Contact	20
4.4 Adding a Contact to Your Favorites.....	21
4.5 Searching for a Contact	21
4.6 Editing a Contact	21
4.7 Communicating with Your Contacts.....	21

4.8 Deleting a Contact	22
4.9 Backing Up and Synchronizing Contacts.....	22
4.10 Streams	23
4.11 Managing Groups	24
4.12 Joining and Separating Contacts.....	25
4.13 Sending Contacts	26
5 Using the Onscreen Keyboard.....	26
5.1 Displaying the Keyboard	26
5.2 Customizing Keyboard Settings.....	28
6 Messaging	28
6.1 SMS and MMS.....	28
6.2 Email.....	30
7 Getting Connected.....	33
7.1 Mobile Networks	33
7.2 Wi-Fi	33
7.3 Sharing Your Phone's Data Connection	34
7.4 Browser.....	35
7.5 Bluetooth.....	37
8 Entertainment	39
8.1 Taking Photos and Recording Videos	39
8.2 Using the Gallery	41
8.3 Enjoying Music.....	42
8.4 Listening to the FM Radio.....	44
9 Google Services	44
9.1 Creating a Google Account.....	45
9.2 Gmail	45
9.3 Talk.....	47
9.4 Maps	48
9.5 YouTube	49

9.6 Market.....	50
10 Synchronizing Information	51
10.1 Managing Your Accounts.....	51
10.2 Customizing Your Account Synchronization.....	53
11 Using Other Applications	54
11.1 ApplInstaller	54
11.2 Calendar	54
11.3 File Manager.....	56
11.4 Clock.....	58
11.5 Calculator.....	59
11.6 Notepad	59
11.7 Weather Clock	60
12 Managing Your Mobile Phone	61
12.1 Setting the Date and Time	61
12.2 Setting the Display	62
12.3 Setting Ringers	62
12.4 Setting Phone Services	63
12.5 Configuring Text-to-Speech.....	63
12.6 Protecting Your Mobile Phone	64
12.7 Managing Applications.....	65
12.8 Resetting Your Mobile Phone	67
13 FAQs.....	67

1 Read Before Proceeding

1.1 Safety Precautions

Please read the safety precautions carefully to ensure the correct use of your mobile phone.



Do not crash, throw, or puncture your mobile phone. Avoid the falling, squeezing, and bending of your mobile phone.



Do not use your mobile phone in a moist environment, such as the bathroom. Prevent your mobile phone from being soaked or washed in liquid.



Do not switch on your mobile phone when it is prohibited to use phones or when the phone may cause interference or danger.



Do not use your mobile phone while driving.



Follow any rules or regulations in hospitals and health care facilities. Switch off your mobile phone near medical apparatus.



Switch off your mobile phone in aircraft. The phone may cause interference to control equipment of the aircraft.



Switch off your mobile phone near high-precision electronic devices. The phone may affect the performance of these devices.



Do not attempt to disassemble your mobile phone or its accessories. Only qualified personnel are allowed to service or repair the phone.



Do not place your mobile phone or its accessories in containers with a strong electromagnetic field.



Do not place magnetic storage media near your mobile phone. Radiation from the phone may erase the information stored on them.



Do not put your mobile phone in a high-temperature place or use it in a place with flammable gas such as a gas station.



Keep your mobile phone and its accessories away from children. Do not allow children to use your mobile phone without guidance.



Use only approved batteries and chargers to avoid the risk of explosions.



Observe any laws or regulations on the use of wireless devices. Respect others' privacy and legal rights when using your wireless device.



Strictly follow the relevant instructions of this manual while using the USB cable. Otherwise your mobile phone or PC may be damaged.

1.2 Personal Information and Data Security

The use of some functions or third-party applications on your device could result in your personal information and data being lost or becoming accessible to others. Several measures are recommended to help you protect personal and confidential information.

- Place your device in a safe area to prevent it from unauthorized use.
- Set your device screen to lock and create a password or unlock pattern to open it.

- Periodically back up personal information kept on your SIM/UIM card, memory card, or stored in your device memory. If you change to a different device, be sure to move or delete any personal information on your old device.
- If you are worried about viruses when you receive messages or emails from a stranger, you can delete them without opening them.
- If you use your device to browse the Internet, avoid websites that might pose a security risk to avoid theft of your personal information.
- If you use services such as Wi-Fi tether or Bluetooth, set passwords for these services to prevent unauthorized access. When these services are not in use, turn them off.
- Install or upgrade device security software and regularly scan for viruses.
- Be sure to obtain third-party applications from a legitimate source. Downloaded third-party applications should be scanned for viruses.
- Install security software or patches released by Huawei or third-party application providers.
- Some applications require and transmit location information. As a result, a third-party may be able to share your location information.
- Your device may provide detection and diagnostic information to third-party application providers. Third party vendors use this information to improve their products and services.
- If you have concerns about the security of your personal information and data, please contact mobile@huawei.com.

1.3 Legal Notice

Copyright © Huawei Technologies Co., Ltd. 2012. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

The product described in this manual may include copyrighted software of Huawei Technologies Co., Ltd. and possible licensors. Customers shall not in any manner reproduce, distribute, modify, decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the said software, unless such restrictions are prohibited by applicable laws or such actions are approved by respective copyright holders.

Trademarks and Permissions



 , and **HUAWEI** are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Android is a trademark of Google Inc.

Other trademarks, product, service and company names mentioned are the property of their respective owners.

Notice

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of local network, and therefore may not be activated or may be limited by local network operators or network service providers. Thus the descriptions herein may not match exactly the product or its accessories you purchase.

Huawei Technologies Co., Ltd. reserves the right to change or modify any information or specifications contained in this manual without prior notice and without any liability.

Third-Party Software Statement

Huawei Technologies Co., Ltd. does not own the intellectual property of the third-party software and applications that are delivered with this product. Therefore, Huawei Technologies Co., Ltd. will not provide any warranty of any kind for these third-party software and applications. Neither will Huawei Technologies Co., Ltd. provide support to customers who use these third-party software and applications, nor be responsible or liable for the functions of these third-party software and applications.

Third-party software and applications services may be interrupted or terminated at any time. Huawei Technologies Co., Ltd. does not guarantee that any content or service would be maintained for any period during its availability. Third-party service providers provide content and services through network or transmission tools outside of the control of Huawei Technologies Co., Ltd. To the greatest extent permitted by applicable law, it is explicitly stated that Huawei Technologies Co., Ltd. shall not compensate or be liable for services provided by third-party service providers, or the interruption or termination of third-party contents or services.

Huawei Technologies Co., Ltd. shall not be responsible for the legality, quality, or any other aspects of any software installed on this product, or for any uploaded or downloaded third-party works, such as texts, images, videos, or software. Customers shall bear the risk for any and all effects, including incompatibility between the software and this product, which result from installing software or uploading or downloading the third-party works.

This product uses the open-source Android™ platform. Huawei Technologies Co., Ltd. has made necessary changes to the platform. Therefore, this product may not support all the functions that are supported by the standard Android platform or may be incompatible with third-party software. Huawei Technologies Co., Ltd. shall not be liable for any of such situation.

DISCLAIMER OF WARRANTIES

THE CONTENTS OF THIS MANUAL ARE PROVIDED “AS IS”. EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

LIMITATIONS OF LIABILITY

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL HUAWEI TECHNOLOGIES CO., LTD. BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

THE MAXIMUM LIABILITY (THIS LIMITATION SHALL NOT APPLY TO LIABILITY FOR PERSONAL INJURY TO THE EXTENT APPLICABLE LAW PROHIBITS SUCH A LIMITATION) OF HUAWEI TECHNOLOGIES CO., LTD. ARISING FROM THE USE OF THE PRODUCT DESCRIBED IN THIS DOCUMENT SHALL BE LIMITED TO THE AMOUNT PAID BY CUSTOMERS FOR THE PURCHASE OF THIS PRODUCT.

Import and Export Regulations

Customers shall comply with all applicable export or import laws and regulations and be responsible to obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.

2 Getting Started

- ❗ All the pictures in this guide are for your reference only. Your phone's actual display features may be different to those described here, depending on its software version.

2.1 Key Functions at Your Fingertips

-
- Press and hold to power on your mobile phone.



- Press and hold to open the **Phone options** menu.
- Press to lock the screen when your mobile phone is active.

-
- Touch to return to the previous screen or exit the application you are running.



- Touch to hide the keyboard.



- Touch to open the menu on an active screen.



- Touch to return to the Home screen.
 - Touch and hold to show the most recently used applications.
-

2.2 Important Information About the Battery

- If the battery has not been used for a long time, you may not be able to power on your mobile phone immediately after you begin charging the battery. Allow the battery to charge for a few minutes with the phone powered off before attempting to power the phone on.
- As it ages, the battery's performance will degrade, in particular it will not hold charge as it did when it was new. When the battery life becomes noticeably shorter than usual after being charged properly, replace the battery with a new one of the same type.

- Using data services increases the power consumption of the phone and will therefore reduce the length of time that the phone can be used between battery charges.
- The time required to fully charge the battery depends on the ambient temperature and the age of the battery.
- When the battery power is low, the phone will alert you and display a message. When the battery power is almost exhausted, your phone will power off automatically.

2.3 Power Saving Tips

The longevity of battery power depends on the network to which you connect, and how you use your mobile phone.

Try the following to conserve battery power:

- When you do not need 3G services, set your phone to connect to a 2G network.
- When your mobile phone is not in use, turn off the screen backlight.
- Reduce the time it takes for your screen backlight to turn off when your phone is idle.
- Lower the screen brightness.
- Turn off Bluetooth when you are not using it. Only make your phone visible to other Bluetooth devices when you need to establish a Bluetooth connection.
- Turn off Wi-Fi when you are not using it.
- Turn off your phone's GPS receiver when you are not using it.
- Lower the volume.
- Close power-draining programs, when you do not need them.
- Turn off the data service.

2.4 Power On or Off Your Mobile Phone

2.4.1 Powering On Your Mobile Phone

Press and hold . The first time you power on your phone, you will be asked to sign in to your account and set up your mobile phone.

- ❗ If personal identification number (PIN) protection is enabled on your mobile phone, you must enter your PIN before using the mobile phone.
- ❗ If you can not sign in or create a Google account during the setup, please complete other parts of the setup first, and try again with any Google service preloaded on your phone.

2.4.2 Setting Up Your Mobile Phone

The first time you power on your mobile phone, the phone displays a setup wizard to help you set up the phone.

The setup wizard helps you:

- Create or sign in to your account
- Make some initial decisions about how you want to use your mobile phone

2.4.3 Powering Off Your Mobile Phone

1. Press and hold  to open the **Phone options** menu.
2. Touch **Power off**.

- ❗ If **Fast boot** is enabled, the phone will enter the deep sleep mode. If **Fast boot** is disabled, touch **OK** to shut down the phone.

2.4.4 Turning On Fast Boot

1. Touch  > **Settings** > **Applications**.
2. Select the **Fast boot** check box.

- ❗ Do not turn on **Fast boot** while on an airplane.

2.4.5 Restarting Your Mobile Phone

1. Press and hold  to open the **Phone options** menu.
2. Touch **Restart**.
3. Touch **OK**.

2.5 Using the Touchscreen

2.5.1 Touchscreen Actions

- **Touch:** Tap the screen with your finger to select an item, confirm a selection, or start an application.
- **Touch and hold:** Touch an item with your finger and do not release it until the mobile phone responds. For example, to open the options menu for the active screen, touch and hold the screen until the menu appears.
- **Flick:** Move your finger either vertically or horizontally across the screen.
- **Drag:** Touch and hold the desired item with your finger. To move an item, drag the item to any part of the screen. You can drag an icon to move or delete it.

2.5.2 Rotating Your Mobile Phone Screen

The orientation of most screens will change to landscape or portrait view when you rotate your phone sideways.

-  On the Home screen, touch  > **Settings > Display > Auto-rotate screen** to disable this function.

 
2.6 Locking and Unlocking the Screen

2.6.1 Locking the Screen

- When your phone is on, press  to lock the screen. When the screen is locked, you can still receive messages and calls.
- If your phone is idle for a while, the screen will lock automatically.


2.6.2 Unlocking the Screen

1. Press  or  to wake up the screen.
2. Drag the lock icon from left to right to unlock the screen.

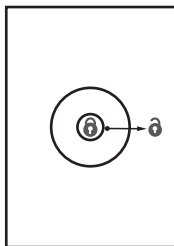

- ❗ If you have set up a screen unlock pattern, you will be prompted to draw the pattern on the screen to unlock it.

 2.7 Home Screen

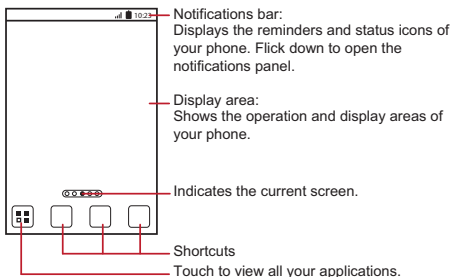

- 👉 Touch and hold a shortcut until the mobile phone vibrates, you can then drag it to your desired location or move it to the trash. You can also drag an icon from another area of the screen to the shortcut position.

2.7.1 Notification and Status Icons

	Signal strength		No signal
	Connected to GPRS mobile network		GPRS in use
	Connected to EDGE mobile network		EDGE in use
	Connected to 3G mobile network		3G in use
	Roaming		Airplane mode
	Bluetooth on		Receiving location data from GPS
	Speakerphone on		Alarm enabled
	Vibration mode		Ringer silenced
	Call muted		Charging battery
	Battery full		Battery extremely low
	Call in progress		Missed call
	Call in progress with a Bluetooth headset used		New mail from Gmail
	New text or multimedia message		Problem with text or multimedia message delivery

	New chat message		New email
	New voicemail		Connected to a PC
	Open Wi-Fi network available		Upcoming event
	Uploading		Downloading
	Phone storage space is getting low		Sign-in or synchronization problem
	Preparing the microSD card		More undisplayed notifications
	Synchronizing data		Synchronization failed
	Portable Wi-Fi hotspot on		USB tethering on
	Connected to a VPN		Disconnected from a VPN
	Power saving mode on		

2.7.2 Notification Panel

Your mobile phone will notify you when you receive a new message or there is an upcoming event. The notification panel also informs you of alarms and settings. Open the notification panel to see your network operator or to view a message, reminder, or event notification.

Opening the Notification Panel

1. When a new notification icon appears on the notification bar, place your finger on the notification bar and flick down to open the notification panel.

 You can also open the notification panel from the Home screen: Touch  >

Notifications to open the panel.

 
2. On the panel, you can:

- Touch a notification to open the related application.
- Touch **Clear** to clear all notifications.


Closing the Notification Panel

Touch and hold the bottom of the panel. Then flick up to close it.

2.7.3 Viewing Other Parts of the Home Screen

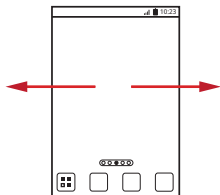

 Flick your finger left or right across the Home screen.

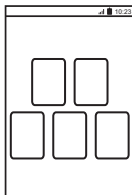

Touch  to view thumbnails of the Home screen and its extensions. Touch a thumbnail to open the screen.

2.7.4 Customizing the Home Screen

Adding a New Home Screen Item

1. Touch and hold a blank area on the Home screen until the **Add to home screen** menu is displayed.



You can also touch  > **Add** on the Home screen to display the **Add to home screen** menu.

2. Select an item to add it to the Home screen.

Moving a Home Screen Item

1. Touch and hold an item on the Home screen until the item expands in size and the mobile phone vibrates.
2. Without lifting your finger, drag the item to the desired position on the screen, and then release it.

Removing a Home Screen Item

1. Touch and hold an item on the Home screen until the item expands and the mobile phone vibrates.
2. Without lifting your finger, drag the item to the trash can. When the item and the trash can turn red, the item is ready to be removed.
3. Release the item to remove it from the Home screen.

2.7.5 Service Shortcuts

1. Open the notification bar.
2. Touch  at the top of the screen to switch data services on or off.

 You can also touch  ,  ,  or  turn the corresponding services on or off.

2.7.6 Changing the Wallpaper

1. On the Home screen, touch  > **Wallpaper**.
2. Touch the following menu items to select a picture and set it as the wallpaper:
 - **Gallery**
 - **Wallpapers**

2.8 Application Screen

The Application screen holds icons for all of the applications on your phone. You can touch  on the Home screen to open the application screen.

2.8.1 Moving Icons on the Application Screen

1. On the application screen, touch  .

2. Touch and hold the icon you want to move on the application screen.
3. Without lifting your finger, drag the icon to the desired location, and then release it.

 To move more icons, repeat steps 2 and 3.

4. Touch  or  to save.

2.9 Using a microSD Card

2.9.1 Using the microSD Card as a USB Mass Storage

To transfer all your favorite music and pictures from your PC to your mobile phone's microSD card, set the microSD card as a USB mass storage.

1. Connect your mobile phone to your PC with the USB cable provided. Your PC will detect the microSD card as a removable storage device.
2. Open the notification bar, and then touch **USB connected**.
3. Touch **Turn on USB storage** in the dialog box that opens to confirm that you want to transfer files.

You can now transfer files from your PC to your mobile phone's microSD card.

 When your mobile phone is connected to your PC via USB mass storage, a removable storage device named Mobile Partner will be displayed on your PC. You can find online help link, mobile phone driver files in it.

 When your microSD card acts as a USB mass storage, your mobile phone will not use this memory space. Ensure that you follow the correct procedures to disconnect the USB mass storage device (your mobile phone) from the PC when you have finished transferring files.

2.9.2 Removing the microSD Card

1. On the Home screen, touch  > **Settings**.
2. Scroll down the screen, and then touch **Storage > Unmount SD card**.
3. Carefully remove the microSD card.

3 Calling

To make a phone call, you can dial a number using the keypad or touch a number saved in your contact list, on a webpage, or in other places. When you are in a call, you can answer other incoming calls or redirect them to your voicemail. You can also set up conference calls with several participants.

3.1 Making a Call

To make a call, you can use the **Dialer** application, or select a number from **Contacts** or **Call log**.

When you are in a call, you can touch  to use other functions. To return to the call screen, flick the notification bar down and touch **Current call**.

- ❗ Be careful not to block the microphone at the bottom of your phone if you want your voice heard by the other parties in a call.

3.1.1 Making a Call with the Dialer Application

1. On the Home screen, touch  > **Dialer** to display the dialer.

If you are already working with **Contacts** or **Call log**, touch the **Dialer** tab.

2. Touch the appropriate number keys to enter the phone number.

-  Your mobile phone supports the SmartDial function, that is, when you touch numbers on the dialer, the phone automatically searches among your contacts and lists the matching results ordered according to the accuracy of the match. If no contacts match the information entered, the phone will not display any result.

3. Touch  to initiate the call.

During a call, touch **Add call** to enter other numbers on the dialpad.

3.1.2 Making a Call from Contacts

1. On the Home screen, touch  > **Contacts** to display the contact list.

If you are already working with **Dialer** or **Call log**, touch the **Contacts** tab.

2. In the list, touch the contact you want to call.
3. Touch  to dial the phone number.

3.1.3 Making a Call from Call log

1. On the Home screen, touch  > **Call log** to display the call log.

If you are already working with **Contacts** or **Dialer**, touch the **Call log** tab.

2. Touch  to the right of the log entry to dial.

 
 If you touch and hold a log entry, the options menu will open.

3.2 Answering or Rejecting a Call

3.2.1 Answering an Incoming Call

When you receive a phone call, the incoming call screen opens. If you have previously saved the caller's number in **Contacts**, the caller's name and number are displayed. If the caller's number is not saved in **Contacts**, the caller's number is displayed.

Drag  to the right to answer the call.

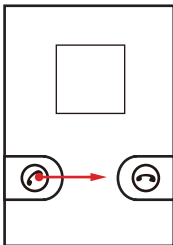


3.2.2 Ending a Call

During a call, touch **End** to hang up.

3.2.3 Rejecting an Incoming Call

 Drag  to the left to reject the call.

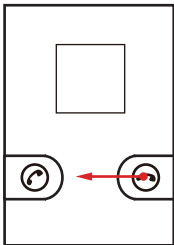

3.3 Other Operations During a Call

3.3.1 Making a Conference Call

If you receive a new call while you are already in a call, you can add the second call to the call you are in. This feature is known as conference calling. You can also set up a conference call with multiple callers.

 Contact your network operator to ask if conference calls are supported and, if yes, how many parties can participate.

1. To initiate a conference call, dial the number of the first participant. After you have connected to the first participant, keep the connection open, touch **Add call**.
2. Enter the phone number of the next person you want to invite for the conversation and touch , or select someone from your **Call log** or **Contacts**. The first participant is automatically placed on hold while you do this.
3. Once you have connected to the second person, touch **Merge calls** to begin the conference call.
4. To end the conference call and disconnect from everyone, touch **End**.

3.3.2 Switching Between Calls

If you receive a new call while you are already in a call, you can switch between the two calls.

1. While you are in the first call and the second call comes in, answer the incoming call, and then touch **Swap calls**.
2. The current call is placed on hold and you are connected to the first call.

3.4 Using the Call log

The **Call log** contains a list of calls that you have dialed, received, and missed. You can use the call log to find a recently called number quickly or add a number from the call log to your contact list.

3.4.1 Adding an Entry to Contacts

1. If you are already working with **Dialer** or **Contacts**, touch the **Call log** tab.
2. Touch and hold the entry you want to add to your **Contacts**.
3. Touch **Add to contacts** in the options menu.
4. Touch **Create contact** or scroll through the contact list and touch an existing contact name.

3.5 Using Airplane Mode

Some locations may require you to turn off your phone's wireless connections. Rather than powering off your phone, you can place it in **Airplane mode**.

1. Press and hold .
2. Touch **Airplane mode** in the options menu.

4 Contacts

The **Contacts** application enables you to save and manage information such as phone numbers and addresses of your contacts. After you save contact information on your mobile phone, you have easy access to the people with whom you want to communicate.

4.1 Opening the Contacts Application

If you have not yet added any contacts to your mobile phone, **Contacts** displays a message with hints on how to start adding contacts information. On the Home screen, touch **Contacts** to open the **Contacts** application.

All of your contacts are displayed alphabetically in a list that you can scroll through.

4.2 Importing Contacts from a SIM Card

1. In the contact list, touch  > **Manage contacts**.
2. Touch **Copy from SIM card**.
3. Wait for the SIM card contents to be loaded. Select the contacts you want to import or touch **Select All** to select all contacts.
4. Touch **Copy**.
5. If you have more than one account on your phone, touch the account into which you want to import the contacts.

4.3 Adding a Contact

1. In the contact list, touch  > **Create contact**.
2. If you have more than one account with contacts, touch the account to which you want to add the contact.
3. Enter the contact's name, and then add detailed information such as phone number and address.
4. When you are finished, touch **Save** to save the contact information.

4.4 Adding a Contact to Your Favorites

- Touch and hold the contact you want to add to **Favorites**. Then touch **Add to Favorites**.
- Touch a contact, and then touch the star to the right of the contact's name. The star turns gold.

4.5 Searching for a Contact

1. In the contact list, touch  > **Search**.
 2. Enter the name of the contact you wish to search for. As you type, contacts with matching names appear below the search box.
-  On the contact list screen, you can touch a letter on the right to display contacts starting with the touched letter.

4.6 Editing a Contact

You can make changes to the information you have stored for a contact at any time.

1. In the contacts list, touch and hold the contact whose details you want to edit, and then touch **Edit contact** in the options menu.
2. Touch the category of contact information you wish to change: name, phone number, email address, or any other information you recorded earlier.
3. Make the desired changes to the contact information, and then touch **Save**. To cancel all of your changes, touch **Cancel**.

4.7 Communicating with Your Contacts

From the **Contacts** or **Favorites** tab, you can quickly call or send a text (SMS) or multimedia (MMS) message to a contact's default phone number. You can also open details to view a list of all the ways you can communicate with that contact. This section describes how to communicate with a contact when you view your contacts list.

4.7.1 Using Quick Contact for Android

1. Touch the contact's picture or picture frame (if you have not assigned a picture to the contact) to open Quick Contact for Android.
 2. Touch the icon for the way you want to communicate with the contact.
- ❗ The icons available depend on the information you have entered for the contact, the applications installed on your phone, and the accounts you have.

4.7.2 Communicating with a Contact

1. In the contacts list, touch the contact that you want to communicate with.
2. On the contact's details screen, touch the icon to the right of the number to call or send messages.

4.8 Deleting a Contact

1. In the contacts list, touch and hold the contact that you want to delete, and then touch **Delete contact** in the options menu.
2. Touch **OK** to confirm that you want to delete the contact.

4.9 Backing Up and Synchronizing Contacts

You can back up contacts from your phone to a microSD card, or synchronize phone contacts with a server using your Google account.

4.9.1 Using a microSD Card to Back Up Contacts

Backing Up Contacts

1. In the contact list, touch  > **Manage contacts**.
2. Touch **Backup to SD card** in the displayed menu.
3. Touch **OK** to export your phone contact's information to the installed microSD card. You can copy the .vcf files backed up on the microSD card to your computer. The files are stored in the microSD card's **Contact** folder.

Restoring Contacts

1. In the contact list, touch  > **Manage contacts**.
2. Touch **Restore from SD card** in the displayed menu.

If there is more than one .vcf files saved on the microSD card, you can choose to restore one, multiple, or all the of them.

4.9.2 Using a Google Account to Synchronize Contacts

You can synchronize contacts using your Google account. For details, see Changing an Account's Synchronization Settings.

4.10 Streams

Streams is a client that integrates social networking service (SNS) functions, such as Facebook and Twitter. Using Streams, your SNS accounts can be closely linked with Contacts.

To access the Streams screen, touch  > **Streams**. You can also touch **Contacts**, and then flick left to switch to the Streams screen.

4.10.1 Logging in to an Account

1. The first time you access Streams, touch **Login to Social Network**.
2. Select the type of account that you want to log in to. Then follow the on-screen setup instructions to complete login.

You can log in to different types of accounts at the same time. To add an account of another type, touch  > **Accounts** > **Add account**.

4.10.2 Importing Friends

After login, the phone asks you whether to import all friends. If you choose to import friends, Streams will import the SNS accounts of all your friends to your phone. If not, you can import your friends' accounts in Settings later.

After friends are imported, the group of imported accounts is automatically added to the groups of **Contacts**.

4.10.3 Preference Settings

You can configure account settings, such as refresh mode, refresh frequency, and notifications.

1. On the Streams screen, touch  > **Accounts**. Then touch the account to be configured.
2. On the account screen, touch **Social Preference Settings** to configure the settings.

4.10.4 Adding the Streams Widget to the Home Screen

Touch and hold the blank area of the Home screen. In the displayed menu, touch **Add widget** > **Streams** to add Streams to the Home screen.

Using the widget, you can quickly access Streams, or directly browse the latest events and update the status of your friends on the Home screen.

4.11 Managing Groups

4.11.1 Creating a Group

1. On the Home screen, touch  > **Contacts**. Then flick the tab bar to the left and touch **Groups**.
2. In the groups list, touch , and then touch **Create group**.
3. Enter the name and picture you want to assign to the group, and then set a ringtone for it.
4. Touch  > **Add Members** to add members to the group.
5. Select the contacts to be added to the group, and then touch **OK**.
6. When you are finished, touch **Save** to save the group information.

 You can only add contacts saved in the phone memory to a group.

4.11.2 Editing a Group

You can always make changes to the information you have saved for a group.

1. In the groups list, touch and hold the group whose details you want to edit, and then touch **Edit group** in the options menu.

2. Make the desired changes to the group information, and then touch **Save**. To cancel all changes you made to the group information, touch **Cancel**.

4.11.3 Adding a Contact to Your Groups

To add a contact to your groups, you can do any of the following:

- Touch and hold the contact you want to add to **Groups**. Then touch **Add to groups**.
- When editing a group, touch , and then touch **Add Members** to select the contacts you want to add to group.

4.12 Joining and Separating Contacts

You may have duplicate contacts if you import contacts by:

- Adding an account, such as a Gmail account.
- Using the social networking services such as Facebook or Twitter. (If your phone has the Streams function, you can use it to access Facebook or Twitter.)
- Using other methods, such as exchanging emails.

To avoid duplication, join two or more contacts together to form a single contact.

- ❗ Availability of Facebook or Twitter may vary depending on your country or carrier. Please use them according to local laws and regulations.

4.12.1 Joining Contacts

1. On the Home screen, touch  > **Contacts**.
2. Touch a duplicated contact.
3. Touch **Joined Contacts**, and then touch **Add contact**.
4. Select the contact to be joined to combine two duplicate contacts.

Two contacts will be joined together and displayed as one contact. Touch the contact to view the joined information. You can see that the contact is joined together by two contacts. You can also combine more than two contacts.

4.12.2 Separating Contacts

If contact information from different sources was joined together in error, you can separate the contacts.

1. On the Home screen, touch  > **Contacts**.

2. Touch the joint contact to be separated.

3. Touch the option for separating a contact.

4. Select the contact to be separated from the joint contact.

The joint contact is then separated into two contacts displayed separately in **Contacts**.

4.13 Sending Contacts

You can send contacts as a .vcf file via Bluetooth or Email.

1. In the contacts list, touch  .

2. Select contacts that you want to send.

3. Touch **Send**.

4. Select the way you prefer to send the contacts you have selected, for example Bluetooth or Email.

 You can send one contact by another way. Touch and hold a contact, touch **Send contact**, and then select the way you prefer to send.

5 Using the Onscreen Keyboard

5.1 Displaying the Keyboard

To enter text, use the onscreen keyboard. Some applications open the keyboard automatically. In others, touch a text field to open the keyboard.

Touch  to hide the keyboard.

 Touch and hold a text field to open the **Edit text** menu.

 
5.1.1 Choosing an Input Method

1. Touch and hold a text field until the **Edit text** menu is displayed.

2. Touch **Select input method**.

3. Select the input method.

5.1.2 Using the TouchPal keyboard

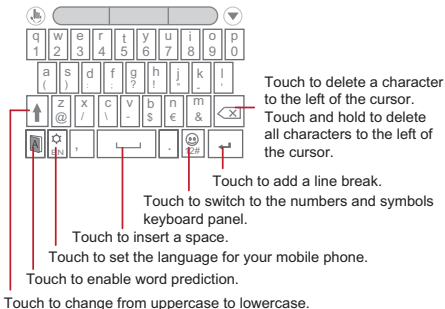

5.1.3 Switching the Keyboard Layout

You can switch the keyboard layout only when **TouchPal** is selected.

There are three keyboard layouts for you to choose: **Full QWERTY**, **12-Key PhonePad** and **CooTek T+**.

To switch the keyboard layout, touch and hold one side of the keyboard panel, and then flick the panel to the edge of the screen.



! When you switch the keyboard layout, you need to touch and hold anywhere on the panel and then flick the panel to the edge of the screen.

5.1.4 Using the Landscape Keyboard

If you find the keyboard inconvenient or difficult to use, turn your mobile phone sideways. The screen will display the keyboard in landscape orientation, providing you with a wider keyboard layout.

5.2 Customizing Keyboard Settings

1. On the Home screen, touch  > **Settings** > **Language & keyboard**.
2. In **Keyboard settings**, select an input method to customize the keyboard settings.

6 Messaging

The **Messaging** application allows you to exchange text messages (SMS) and multimedia messages (MMS) with anyone using an SMS-or-MMS-capable phone. With the **Email** application you can read and send emails.

6.1 SMS and MMS

6.1.1 Opening Messaging

Touch  > **Messaging**.

6.1.2 Creating and Sending a Text Message

1. Touch  > **Messaging** > **New message**.
2. Enter a phone number or a contact's name in the **To** field, or touch  to select a contact from **Contacts** or **Groups**.

As you enter the phone number or the contact's name, the phone displays possible matches from your contacts. Select a contact from the list of possible matches or continue entering.

After you select a contact or finish entering a number, add a comma and you can enter another recipient. You can also touch a previously entered contact again to edit or delete it.

3. Touch the composition text box to start entering your message.

4. When you are ready to send the message, touch  .

Sent and received messages will be displayed in a message thread, grouping together the messages in a conversation.

6.1.3 Creating and Sending a Multimedia Message

You can use multimedia messages to make everyday communications very special. You can record a message and send it as an audio file, sing 'Happy Birthday' and send it to friend, or send a slideshow of photographs of a special event. The possibilities are endless.

1. Touch  > **Messaging** > **New message**.
2. Enter a phone number in the **To** field, or touch  to select a contact from **Contacts** or **Groups**.
3. Touch the composition text box to start entering your message.
4. Touch  to display the options panel.
 - Touch **Add subject** to add the message subject. Your mobile phone is now in multimedia message mode.
 - Touch **Add** to add a picture, music, or video file.
5. When the message is ready to be sent, touch  .

 You can select a media file (music, video or picture) and send it as an attachment in a multimedia message. In **File Manager**, touch and hold a media file, and then touch **Share** > **Messaging**.

Adding a Slideshow

If you want to attach more than one file to your message, use the **Slideshow** option.

1. On the message editing screen, touch  to display the options panel.
2. Touch **Add** > **Slide show**, and then select a slide to start editing it.
3. Touch  and then touch **Add slide** to add more slides.
4. Touch **Done** to finish composing your message and return to the multimedia message screen.
5. To alter your multimedia message, touch the slideshow on the multimedia message screen. When the message is ready to be sent, touch **Send**.

6.1.4 Opening and Viewing a Multimedia Message

1. In the message list, touch the message thread you wish to view.
2. Touch the multimedia message to view the message.

6.1.5 Replying to a Message

1. In the message list, touch a text or multimedia message thread to open it.
2. Touch the text box to compose your message. Once finished, touch ► .

 You can also do the following to reply to a message: Touch  > **Multiselect**, select one or more message threads, and touch **Reply**.

6.1.6 Copying a Text Message to Notepad or Calendar

1. In the message list, touch a text message thread to open it.
2. Touch and hold one of the messages, and then touch **Copy message to**.
3. Touch **Notepad** or **Calendar** to save it as a note or an event.

For information about how to use **Notepad** or **Calendar**, see the relevant sections of this guide.

6.1.7 Customizing Message Settings

In the message list, touch  , and then touch **Settings** to customize the message settings.

6.2 Email

Your mobile phone also puts email at your fingertips. With your phone's **Email** application, you can use your email account with Yahoo!, AOL, or other popular email services on your phone.

6.2.1 Adding an Email Account

When using the **Email** application for the first time, you must configure an email account. The Email setup wizard helps you to configure your account. A number of popular email systems are supported. You can work with the same email service that you use on your PC or you can select another email service.

1. On the Home screen, touch  > **Email**.
2. In the email system list, select a system, or select **Others**.
3. To customize your email settings, follow the onscreen instructions, and then touch **Next**.
4. Enter the account name and the name you want other people to see when they receive an email from you.
5. Touch **Done**.

Adding Other Email Accounts

1. After creating your initial email account, touch  on the **Inbox** screen, and then touch **More > Accounts** to access the accounts screen.
 2. Touch  on the accounts screen, and then touch **Add account** to create another email account.
-  When adding an additional email account, you have the option to use the new account to send all outgoing messages.

6.2.2 Viewing an Email Message

1. On the accounts screen, touch the email account you want to use.
2. Access a folder, and then touch the message that you want to view.

6.2.3 Saving an Email Attachment

1. On the accounts screen, touch the email account you want to use.
2. Touch the email message you want to view.
3. Touch **Save** next to the attachment in the email.
4. Select a path for saving the attachment and touch **Save**.

6.2.4 Creating and Sending an Email Message

1. On the accounts screen, touch the email account you want to use.
2. On the **Inbox** screen, touch , and then touch **Compose** in the options panel.
3. In the **To** field, enter the recipients' name or email address.

4. Enter the subject of your message and compose the message.

To send an attachment with the message, touch  , and then touch **Add attachment**.

5. When you are finished, touch **Send**.

If you are not ready to send the message, touch **Save as draft** or touch  to save the message as a draft.

6.2.5 Replying to an Email Message

1. On the accounts screen, touch the email account you want to use.
2. Touch the email message to which you want to reply.
3. Touch **Reply** or **Reply all** to reply to the email message.

6.2.6 Deleting an Email Account

1. On the accounts screen, touch and hold the email account you want to delete.
2. Touch **Remove account**.
3. Touch **OK**.

6.2.7 Changing Email Account Settings

You can change a number of account settings, including how often you check for emails, how you are notified of a new mail, and details about the servers the account uses to send and receive mails.

 Your account's incoming and outgoing settings depend on the kind of email service you are using. You can enter the necessary details manually, although you may need to contact your email service provider to obtain the correct information.

1. Touch  > **Email**.
2. On the accounts screen, touch and hold the email account you want to change.
3. Touch **Account settings**.
4. Change **General settings**, **Notification settings**, or **Server settings**.

7 Getting Connected

7.1 Mobile Networks

Your mobile phone will be automatically configured to use your network operator's 2G/3G service (if available) when you turn on the phone for the first time. Note that the SIM/UIM card must be inserted (some CDMA mobile phones have an integrated UIM card and do not need a separate UIM card)

7.1.1 Checking the Network Connection

1. Touch  > **Settings**.
2. Touch **Wireless & networks** > **Mobile networks** > **Network Settings**.
3. Touch **Network operators** or **Access Point Names** to check the network connection.

❗ Your mobile phone will automatically read the access point settings from the SIM/UIM card (if any). For this reason, do not change the access point parameters; otherwise, you might not be able to access network resources.

7.1.2 Turning on the Data Service

1. Touch  > **Settings**.
2. Touch **Wireless & networks** > **Mobile networks**.
3. Select the **Data enabled** check box to turn on the data connection.

7.2 Wi-Fi

Wi-Fi gives you wireless access to broadband Internet. To use Wi-Fi on your mobile phone, you must have an access to wireless access points (hotspots). Obstacles that block the Wi-Fi signal will reduce its strength.

7.2.1 Turning On Wi-Fi

1. Touch  > **Settings**.
2. Touch **Wireless & networks**, and then select the **Wi-Fi** check box to turn on Wi-Fi.

7.2.2 Connecting to a Wireless Network

1. After turning on Wi-Fi, touch  > **Settings**.
2. Touch **Wireless & networks** > **Wi-Fi settings**. You will see a list of detected Wi-Fi networks in the **Wi-Fi networks** section.
3. Touch a Wi-Fi network to connect to it.
 - If you select an open network, you will be automatically connected to the network.
 - If you select a network that is secured with Wired Equivalent Privacy (WEP) and connect to it for the first time, enter the password as prompted, and then touch **Connect**. If you connect to a secured wireless network that you have already used, you will not be prompted to enter the password again unless you have reset your mobile phone to its default settings.

 On the **Wi-Fi settings** screen, touch **Add Wi-Fi network** to add a new Wi-Fi network.

7.3 Sharing Your Phone's Data Connection

You can share your mobile phone's data connection with a single computer via a USB cable: USB tethering. You can share your mobile phone's data connection with a number of devices at the same time, by turning your phone into a portable Wi-Fi hotspot.

7.3.1 Installing the USB tethering Driver

If your computer is running Windows 7 or a recent distribution of some flavors of Linux (such as Ubuntu), you typically do not need to prepare your computer for tethering. But if you are running an earlier version of Windows or another operating system, you may need to prepare your computer to establish a network connection via USB. Install the **USB tethering** driver in the following steps:

1. Connect a USB cable to a computer. The computer will automatically recognize the phone.
2. Choose **Start** > **My Computer**, and then double-click **Mobile Partner**.

3. Open the **drivers** folder and then open the **usbnet_driver_win2k_xp** folder.
Double-click the link **DownloadActiveSync.url**.
4. Download and install **ActiveSync 4.5** or a later version.
5. After the installation, you are able to use USB tethering.

7.3.2 Sharing Your Phone's Data Connection via USB

To use USB tethering in different operating systems, you may need to prepare your computer to establish a network connection via USB.

❗ You cannot share your mobile phone's data connection and access its microSD card via USB at the same time.

1. Touch  > **Settings**.
2. Touch **Wireless & networks** > **Tethering & portable hotspot**.
3. Select the **USB tethering** check box to share your data connection.

7.3.3 Sharing Your Phone's Data Connection as a Portable Wi-Fi Hotspot

1. Touch  > **Settings**.
2. Touch **Wireless & networks** > **Tethering & portable hotspot**.
3. Select the **Portable Wi-Fi hotspot** check box to share your data connection.

🔍 When **Portable Wi-Fi hotspot** is selected, you can touch **Portable Wi-Fi hotspot settings** to change its network name or secure it.

7.4 Browser

Your mobile phone comes with an Internet browser pre-installed.

7.4.1 Opening the Browser

Touch  > **Browser** to open the home page.

🔍 When known or open Wi-Fi networks and mobile data networks are available at the same time, your phone will preferably select a Wi-Fi network for Internet access.

Touch  to open the browser options menu and perform one of the following operations:

- **New window:** Touch to open a new window.
- **Bookmarks:** Touch to display bookmarks.
- **Windows:** Touch to view thumbnails of open browser windows. You can switch to another browser window or open a new one on this screen.
- **Refresh:** Touch to refresh the current webpage.
- **Forward:** Touch to browse the next web page.
- **More:** Touch to open other menus and perform operations such as searching, selecting text, downloading, or setting options.

7.4.2 Opening a Webpage

1. In a browser window, touch the URL field at the top of the screen.
2. Use the keyboard to enter a webpage address. You can touch  to enter the web page address by voice.
3. As you enter the address, matching webpage addresses will appear on the screen. If you see the address you want, touch it and go directly to that webpage or complete entering your desired webpage.

7.4.3 Setting a Home Page

1. In a browser window, touch .
2. Touch **More > Settings > Set homepage**.
3. Enter the address of the desired home page, and then touch **OK**.

7.4.4 Managing Bookmarks

You can store as many bookmarks as you want on your mobile phone.

Adding a Bookmark

1. In a browser window, go to the webpage you want to save as a bookmark.
2. Touch , and then touch **Bookmarks > Add**.
3. Edit the bookmark name and then touch **OK**.

Opening a Bookmark

1. In a browser window, touch  , and then touch **Bookmarks**.

On the **Bookmarks** screen, touch the **History** tab to view the pages you have visited, or touch the **Most visited** tab to view the pages you have visited most frequently.

2. Touch the bookmark of the website you want to open.

7.4.5 Customizing Browser Settings

Customize the browser to suit your browsing style. Use **Browser** to set page content, privacy, and security preferences. In a browser window, touch  , and then touch **More > Settings**.

7.5 Bluetooth

Your mobile phone has Bluetooth, which allows you to create a wireless connection with other Bluetooth devices so you can share files with your friends, talk hands-free with a Bluetooth headset, or even transfer photos from your phone to your PC.

If you are using Bluetooth, remember to stay within 10 meters (33 feet) of the other Bluetooth devices to which you want to connect. Be aware that obstacles like walls or other electronic equipment may interfere with your Bluetooth connection.

7.5.1 Turning On Bluetooth

1. Touch  > **Settings**.
2. Touch **Wireless & networks**, and then select the **Bluetooth** check box to turn on Bluetooth. When Bluetooth is turned on, the Bluetooth icon appears in the notification bar.
3. Touch **Bluetooth settings**, and then select the **Discoverable** to make your mobile phone visible to other Bluetooth devices.

7.5.2 Pairing with and Connecting to a Bluetooth Device

Your mobile Bluetooth lets you do the following:

- Hands Free Profile (HFP): allows you to use a hands-free Bluetooth device.
- Headset Profile (HSP): allows you to use a mono Bluetooth headset.

- Object Push Profile (OPP): allows you to transfer files over a Bluetooth connection.
- Advanced Audio Distribution Profile (A2DP): allows you to use a stereo Bluetooth headset.
- AV Remote Control Profile (AVRCP): allows you to control audio playing using a Bluetooth headset remotely.

Before you use Bluetooth, pair your mobile phone with another Bluetooth device as follows:

1. Ensure that the Bluetooth function on your mobile phone is enabled.
2. On the Home screen, touch  > **Settings** > **Wireless & networks** > **Bluetooth settings**. Your mobile phone will then scan for Bluetooth devices in range.
3. Touch the device you want to pair your mobile phone with.
4. If required, enter the pairing password to complete the connection.

7.5.3 Sending Files via Bluetooth

With Bluetooth, you can share pictures, videos, or music files with your family and friends. To send files via Bluetooth:

1. Touch and hold the file to be sent in your mobile phone or SD card. The active options menu is displayed.
2. Touch **Share**, then **Bluetooth** to select a paired device.

7.5.4 Disconnecting from or Unpairing with a Bluetooth Device

1. Touch  > **Settings** > **Wireless & networks** > **Bluetooth settings**.
2. Navigate to the **Bluetooth devices** section, and then touch and hold the device to which you are connected.
3. Touch **Unpair** to disconnect from the device.

8 Entertainment

In addition to being a communication device and personal assistant, your mobile phone also provides you with a multitude of entertainment possibilities. You can take photos, create videos and audio clips, and download and listen to music.

 
8.1 Taking Photos and Recording Videos

The camera is a combination of camera and camcorder that you can use to shoot and share pictures and videos.

8.1.1 Opening Your Camera

- Touch  > **Camera** to open the camera. The camera opens in landscape mode, ready to take a picture or record a video.
- Touch  to close the camera.

Capture Screen

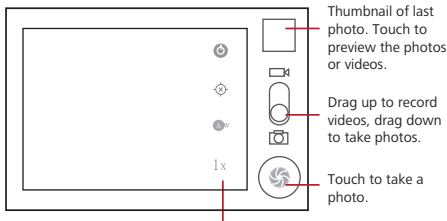

Touch to customize the camera settings.

On the capture screen, touch  to show the capture panel.

8.1.2 Taking a Photo

1. Open your camera application and switch it to camera mode.
2. If necessary, change the camera settings. The preview changes as you change the settings.

3. Frame your photo within the photo capture screen.

4. Touch  to take your photo.

Photos taken are displayed for a moment. You can take another photo or review your photos.

8.1.3 Viewing Your Photos

1. After taking a photo, a thumbnail of the photo you have just taken is shown in the upper right corner of the capture screen. Touch the thumbnail to view it.

2. Touch the onscreen button to do any of the following:

- Touch **Share** to send the photo in a message or post it online.
- Touch **Delete** to delete the photo.
- Touch **More > Set as** to set the photo as a contact icon or the wallpaper.

8.1.4 Recording a Video

1. Open the camera application, and then switch it to camcorder mode.

2. If necessary, change the camcorder settings.

3. Frame the scene with which you want to start your video.

4. Touch  to start recording a video.

5. Touch  to stop recording.

8.1.5 Viewing Your Videos

1. After recording a video, a thumbnail of the video you have just recorded is shown in the upper right corner of the capture screen. Touch the thumbnail to view it.

2. Touch the onscreen buttons to do any of the following:

- Touch **Share** to send the video in a message or post it online.
- Touch **Delete** to delete the video.

On the video playback screen, touch the controls to fast-forward or rewind or to play or pause the video.

3. If you want to view more videos, flick your finger left or right across the screen.

8.2 Using the Gallery

Your **Gallery** application can automatically search for pictures and videos on your mobile phone and microSD card. Use **Gallery** to sort photos and videos into folders, view and edit pictures, watch videos, and set a picture as wallpaper or as a photo for a contact.

8.2.1 Opening the Gallery

On the Home screen, touch  > **Gallery**.

The **Gallery** application categorizes your pictures and videos by storage location and displays these files in folders. Touch a folder to view the pictures or videos inside.

8.2.2 Viewing a Picture

1. In **Gallery**, touch the folder that contains the pictures you want to view.
2. Touch the picture to view it in full-screen mode.
3. Touch the screen. Then the zoom panel appears. You can zoom in or zoom out on the picture.

 The picture viewer supports the automatic rotation function. When you rotate your mobile phone, the picture adjusts itself to the rotation.

8.2.3 Rotating a Picture

1. When viewing a picture, touch  to display the operations panel.
2. Touch **More**.
3. Select either **Rotate left** or **Rotate right**. The picture is saved with the new orientation.

8.2.4 Cropping a Picture

1. When viewing a picture, touch  to display the operation panel, and then touch **More > Crop**.
2. Use the cropping tool to select the portion of the picture to crop.
 - Drag from the inside of the cropping tool to move it.
 - Drag an edge of the cropping tool to resize the image.

- Drag a corner of the cropping tool to resize the image without changing its length to width ratio.
3. Touch **Save** to save the cropped picture. Touch **Discard** to discard the changes.

8.3 Enjoying Music

Before you using music player, you must copy music files from your computer to the microSD card.

Once you have done this, the player will search for music on the microSD card. After the search is complete, you will be able to view all available music files in the music library.

8.3.1 Copying Music to the microSD Card

1. Connect the phone to your computer with a USB cable and mount the microSD card.
2. On the PC, navigate to the USB drive and open it.
3. Create a folder in the root directory of the microSD card (for example, **Music**).
4. Copy the music from your computer to the folder you have created.
5. After copying music, unmount or eject the drive as required by your PC's operating system to safely remove the mobile phone.
6. Disconnect the mobile phone from the PC.

 
8.3.2 Opening the Media Library

Touch  > **Music** to display the media library.

The **Music** application organizes your music files by storage location. It contains four tabs: **Artists**, **Albums**, **Songs** and **Playlists**.

8.3.3 Playing Music

1. Touch a category on the music library screen.
2. Touch the song you want to play.

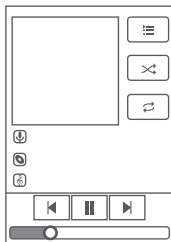

- 🔔 When you are listening to music, touch  , to use another application. Your music continues to play. To return to the music controls, open the notification panel and then touch the song.

8.3.4 Adding Music to a Playlist

1. Touch a category on the music library screen.
2. In the list that appears, select the song you want to add to the playlist.
3. Touch and hold the song, and then touch **Add to playlist** in the options menu.
 - Touch **Current playlist** to add the song to an existing playlist.
 - Touch **New** to create a playlist and add the song to it.

8.3.5 Playing a Playlist

1. Touch the **Playlists** tab on the music library screen.
2. Touch and hold the playlist you want to play.
3. Touch **Play** to play the playlist.

8.4 Listening to the FM Radio

The FM radio lets you listen to FM radio programs on your mobile phone. Since the FM radio uses the provided wired stereo headset as its antenna, before opening the application, connect the headset to your phone's the audio jack.

8.4.1 Opening the FM Radio

1. On the Home screen, touch  > **FM Radio** to open the application.
2. The first time you open FM radio, touch **Auto tuning**, which automatically scans for available FM channels, saves them as presets, and plays the first FM channel found.

8.4.2 Tuning the FM Radio

Open the **FM Radio** application, and then do the following:

- Touch  or  to tune the radio to the previous or next channel.
- Slide the knob left or right to perform precision tuning. When a channel is found, touch , then **Save channel**. Enter the channel name, touch **OK**, and then select an empty channel to save the new channel to the channel list.
- Touch **Auto tuning** to scan automatically for available FM channels.

9 Google Services

 Availability of Google applications, services, and features may vary according to your country or carrier. Please follow local laws and regulations to use them.

When you turn on your mobile phone for the first time, touch a Google services such as **Talk**, **Gmail**, or **Market**, and you will be prompted to sign in to your Google account.

 Ensure that your mobile phone has an active data connection (3G/GPRS) before you sign in to your Google account.

If you already have a Google account, touch **Sign in** and enter your username and password.

9.1 Creating a Google Account

If you do not have a Google account, you can create one:

1. After reading the setup information, touch **Next**.
2. Touch **Create**.
3. Enter the first name, last name, and user name for your Google account, and then touch **Next**. The mobile phone will connect to a Google server to check whether the username is available. If the username you entered is already in use, you will be prompted to choose another one or select one from a list.
4. Enter and confirm your Google account password.
5. Select a security question from the drop-down menu, and then enter the answer.
6. Touch **Create**.
7. When the **Google Terms of Service** screen appears, touch **I agree, Next**.
8. Enter the characters that appear on the screen, and then touch **Next**.

 To use another Google account, go to the **Accounts & sync settings** screen, and touch **Add account** to select which type of accounts you want to add.

9.2 Gmail

Gmail is Google's web-based email service. When you first set up your phone, you may have configured it to use an existing **Gmail** account or create a new account. The first time you open the **Gmail** application on your phone, your **Inbox** will contain the messages from your **Gmail** web account.

9.2.1 Opening Gmail

On the Home screen, touch  > **Gmail**. The **Inbox** mail list appears. Any emails you decide to keep on your mobile phone will go to your **Inbox** folder.

9.2.2 Switching Between Accounts

1. In the mail list, touch  , and then touch **Accounts**.
2. Touch the account that contains the email you want to read.

9.2.3 Creating and Sending an Email

1. In the mail list, touch , and then touch **Compose**.
2. Enter the message recipient's email address in the **To** field. If you are sending the email to several recipients, separate the email addresses with commas. You can add as many message recipients as you want.

If you want to send a copy (Cc) or a blind copy (Bcc) of the email to other recipients, touch , and then touch **Add Cc/Bcc**.

3. Enter the email subject and write your email.

If you want to add a picture attachment, touch , and then touch **Attach** to select the picture you want to attach.

4. After writing your email, touch .

9.2.4 Replying to or Forwarding an Email

1. In the mail list, touch the email that you want to reply to or forward.
2. Touch  to reply. You can also touch , and then touch **Reply**, **Reply all**, or **Forward**.
3. Do one of the following:
 - If you selected **Reply** or **Reply all**, enter your message.
 - If you selected **Forward**, specify the message recipients and add any additional text you want to include in the forwarded message.
4. Touch  to send, or touch  to save as a draft.

9.2.5 Searching for an Email

1. In the mail list, touch , and then touch **Search**.
2. Enter the search keywords in the box, and then touch .

9.2.6 Customizing Your Gmail Settings

In the mail list, touch , and then touch **More > Settings** to customizing your Gmail.

9.3 Talk

Talk is Google's instant messaging service. You can use it to communicate in real time with other people using **Talk** on a phone or on the web.

9.3.1 Opening Talk

On the Home screen, touch  > **Talk** to open the application.

- ❗ Your **Talk** account is based on the Google account you set up with your mobile phone.

9.3.2 Adding a Friend

1. In the friends list, touch , and then touch **Add friend**.
2. Enter the **Talk** instant messaging ID or Gmail address of the friend you want to add.
3. Touch **Send invitation**.

9.3.3 Accepting an Invitation

1. If you have invited anyone to chat or if someone else has invited you to chat, this information will appear in the friends list.
2. Touch a pending invitation, and then touch **Accept**.

9.3.4 Starting a Chat

1. In the friends list, touch a friend's name in the friends list.
2. Use the onscreen keyboard to enter text and chat with your friend.
3. After entering your message, touch **Send**.

9.3.5 Setting Notifications for New Instant Messages

Whenever you receive an instant message, your mobile phone can play a sound, vibrate, or display an icon. To set up one of these handy notifications, start in the friends list, and then touch . Then touch **Settings**. Now choose from one of the following:

IM notifications	Select the check box to receive a notification on the notification bar when you receive an instant message.
Select ringtone	Touch to choose the ringtone used for a new instant message. You will hear a short sample of the ringtone when you select it. To turn the ringtone off, select Silent .
Vibrate	Select the check box to make your mobile phone vibrate when you receive a new instant message.

9.3.6 Signing out of Talk

On the friends list screen, touch , and then touch **Sign out** to quit **Talk**.

9.4 Maps

Maps lets you find your current location, view real-time traffic conditions (depending on availability in your locale), and get detailed directions to various destinations. You can view satellite images, traffic maps, or other kinds of maps of your current or other locations.

9.4.1 Enabling the Location Service

Before you open **Maps** to find your location or search for places of interest, you must enable the location service.

1. On the Home screen, touch  > **Settings**.
2. Touch **Location & security**.
3. In the **My Location** section, select the **Use wireless networks** check box, the **Use GPS satellites** check box, or both.

9.4.2 Opening Maps

On the Home screen, touch  > **Maps** to open the application.

9.4.3 Searching for Places of Interest

1. On the map, touch  , and then touch **Search**.
2. Enter the place you want to search for in the search box, and then touch the Search icon.
3. Your search results will then be displayed. Touch a place you are interested in and the application will show where it is on the map.

9.4.4 Getting Directions

1. While viewing a map, touch  , and then touch **Directions**.
2. Enter the starting point in the first text box, and then enter your destination in the second text box.
3. Touch the icon for car, public transit, or walking directions.
4. Touch **Get Directions**. Your directions will appear in a list.
5. Touch a direction item on the list to show it on the map.
6. When you finish viewing or following the directions, touch  > **More** > **Clear Map**.

9.5 YouTube

YouTube is Google's free online video streaming service for watching, searching for, and uploading videos.

9.5.1 Opening YouTube

On the Home screen, touch  > **YouTube**. You will then see the YouTube screen.

9.5.2 Searching for a Video

1. On the **YouTube** screen, touch  , and then touch **Search**.
2. Enter a search keyword, and then touch the Search icon.
3. You will see a number of search results displayed below the notification bar. Scroll through the results and touch a video to watch it.

9.6 Market

Android Market provides direct access to applications and games which you can download and install on your phone.

9.6.1 Opening Market

1. On the Home screen, touch  > **Market**.
2. When you open **Market** for the first time, the **Android Market Terms of Service** window will appear. Touch **Accept** to continue.

9.6.2 Searching for Applications

There are a few different ways to find applications on the **Market** home screen, including:

- Featured applications
- List of games
- Search function
- My apps

9.6.3 Installing an Application

1. In the **Market**, select a category, and then touch the application you want to download. On the application details screen, you can view more information about the selected application, such as its cost, overall rating, user comments, and similar applications in which you might be interested. You can also scroll down to view information about the application developer, including other applications from the same developer and a link to the developer's website. In addition, you can send the developer an email.
2. To install the application, touch **Download** (if it is free) or touch the button with its price (if it is not free), and confirm your download or purchase.
3. To check the progress of a download, open the notification panel. Most applications are installed within seconds. To stop an application from downloading, touch the cross (×).

After the application has been downloaded and installed on your mobile phone, the content download icon appears in the notification bar.

- ❗ If you want to install a non-Market application, touch  > **Settings** > **Applications**, and then select the **Unknown sources** check box to allow installation of the non-Market application.

9.6.4 Uninstalling an Application

1. On the **Market** screen, touch  > **My Apps**.
2. Touch the application you want to uninstall, and then touch **Uninstall**.
3. When prompted, touch **OK** to remove the application from your mobile phone.

10 Synchronizing Information

Some applications on your mobile phone give you access to the same personal information that you can add, view, and edit on your computer. If you add, change, or delete your information in any of these applications on the web, the updated information also appears on your mobile phone.

This is made possible through over-the-air data synchronization. The process occurs in the background and does not interfere with use of your mobile phone. When your phone is synchronizing, a data synchronization icon will be shown in the notification bar.

10.1 Managing Your Accounts

You can synchronize contacts, email, and other information on your mobile phone with multiple Google accounts or other kinds of accounts, depending on the applications installed on your mobile phone.

For example, you can start by adding your personal Google account, so your personal email, contacts, and calendar are always available. You could then add a work account, so your work-related emails and work contacts are handy. If you like, you may add multiple Google accounts or other accounts.

10.1.1 Adding an Account

When you add an account, the **Contacts** application compares contacts from the newly synchronized account with contacts from your existing mobile phone accounts and attempts to merge duplicates into a single entry in **Contacts**. While it is presented as a single contact entry, the contact data itself is not merged.

1. On the Home screen, touch  > **Settings > Accounts & sync**. The screen displays your current synchronization settings and a list of your current accounts.
 In some cases, you may need to obtain account details from IT support. For example, you may need to know the account's domain or server address.
2. Touch **Add account**.
3. Touch the kind of account to add.
4. Follow the onscreen steps to enter the required and optional information about the account. Most accounts require a username and password, but the details depend on the kind of account and the configuration of the service to which you are connecting.
5. Configure the account. Depending on the kind of account, you may be asked to configure what kind of data you want to synchronize to the mobile phone, to name the account, and for other details. When you are finished, the account is added to the list on the **Accounts & sync settings** screen.

10.1.2 Adding an Exchange Account

1. On the Home screen, touch  > **Settings > Accounts & sync**.
2. Touch **Add account > Corporate**.
3. Follow the instructions and enter the required information about the exchange account you want to add. For details, contact the server administrator.
4. Touch **Next** to display the **Account options** screen. Configure the synchronization settings for this account.
5. Touch **Next** to finish configuring the account settings. If emails are not synchronized properly, contact the server administrator.

10.1.3 Removing an Account

You can remove an account, deleting it and all information associated with it from your mobile phone, including email, contacts, settings, and so on. You cannot, however, remove some accounts, such as the first account you signed into on the mobile phone. If you attempt to remove certain accounts, all personal information associated with it will be deleted.

-  You can only remove the first Google Account by resetting the phone to factory defaults.

1. On the **Accounts & sync settings** screen, touch the account to be deleted.
2. Touch **Sign Out**.
3. Confirm that you want to remove the account.

10.2 Customizing Your Account Synchronization

You can configure background data use and synchronization options for all the applications on your phone. You can also configure what kind of data you synchronize for each account.

For some accounts, synchronization is bi-directional; changes that you make to the information on your mobile phone are made to the copy of that information on the web. Some accounts support only one-way synchronization; the information on your mobile phone is read-only.

10.2.1 Configuring General Synchronization Settings

On the **Accounts & sync settings** screen, do the following:

- Select or clear the **Background data** check box to control whether applications and services can transmit data when you are not working with them directly (that is, when they are running in the background).

If you clear this option, **Gmail** stops receiving new mails, **Calendar** stops synchronizing events, and so on, until you refresh them.

- Select or clear the **Auto-sync** check box to control whether changes you make to information on the phone or on the web are automatically synchronized with each other.

For example, when this option is selected, changes that you make in **Contacts** on the phone are automatically made in Google Contacts on the web.

10.2.2 Changing an Account's Synchronization Settings

1. On the **Accounts & sync settings** screen, touch the account whose synchronization settings you want to change. The data and synchronization screen opens, displaying a list of the kinds of information the account can synchronize.
2. Selected items are configured to synchronize to your mobile phone.

3. Select or clear the check box of information you want to synchronize with the mobile phone.

11 Using Other Applications

11.1 AppInstaller

You can use this installer to install more than one applications at a time.

11.1.1 Install Applications

1. On the Home screen, touch  > **AppInstaller**. Then the installer will scan and display all the applications (.apk files) in the microSD card.
2. In the applications list, select applications you want to install.

 You can touch  , and then touch **Deselect all** or **Select all** to select and deselect all applications.

3. Touch  > **Install**.

The applications you select will be installed in your phone.

11.2 Calendar

Use **Calendar** to create and manage events, meetings, and appointments. Depending on your synchronization settings, the calendar on your phone can be synchronized with the internet-based calendar you use.

11.2.1 Opening Calendar

On the Home screen, touch  > **Calendar** to open the application.

 When you add a Google Account that includes a calendar service to your phone, you can access Google calendar: Touch  , and then touch **More > Calendars**.

11.2.2 Creating an Event

1. In any calendar view, touch , and then touch **New event** to open the **Event details** screen.
 - ❗ If you have more than one calendar, select the calendar where you want to save the event.
2. Enter the event name.
 - If there is a time frame for the event, touch **From** and **To** to set the beginning and end times of the event.
 - If the event is a special occasion such as a birthday or a day-long activity, set the date for **From** and **To**, and then select the **All day** check box.
3. Enter the location of the event and a description.
4. Specify in **Repetition** whether the event recurs and, if it does, how frequently, and then set the time for your event reminder in **Reminders**.
5. Touch **Done**.
 - 👉 To quickly create an event in the day, week, or month view, touch and hold an empty time slot, and then touch **New event**. A new event details screen will appear with the selected time slot and date in the **From** and **To** fields.

11.2.3 Setting an Event Reminder

1. In any calendar view, touch an event to view its details or an event summary.
2. Touch the **Add reminder** button to add a reminder, or touch the reminder's "-" button to delete an existing reminder.
3. Touch the reminder time, and then, from the list displayed, touch the length of time before the event when you want to be reminded. When the time comes, you will receive a notification about the event.

11.2.4 Setting Synchronization and Display

1. In any calendar view, touch . Then touch **More > Calendars**.

The Calendars screen displays all the calendars you have added or subscribed to for each account that is configured to synchronize events to your phone, organized by account. (Calendars for accounts you have configured not to synchronize Calendar events are not included in the list.)

2. Touch the icon next to a calendar to change whether it is synchronize and whether it is displayed.

You remain subscribed to Calendars that you configure not to store on the phone and you can still work with them with Google Calendar on the web.

3. Touch **OK**.

11.2.5 Customizing Calendar Settings

In any calendar view, touch . Then touch **More > Settings** and choose from the following:

- **Hide declined events:** Select to hide events for which you have declined invitations.
- **Set alerts & notifications:** Touch to set event reminders to alert you, to send you a notification, or to turn off event notifications on your mobile phone.
- **Select ringtone:** Touch to select the ringtone to sound when you receive an event reminder.
- **Vibrate:** Select to vibrate the mobile phone when you receive an event notification.
- **Default reminder time:** Touch to select the default time before an event for event reminders to occur.

11.3 File Manager

File Manager is like having a pocket-sized personal assistant (PA), letting you organize, edit, and delete files and folders.

11.3.1 Opening File Manager

On the Home screen, touch  > **File Manager** to open the application.

11.3.2 Creating a Folder

1. On the **File Manager** screen, access the directory in which you want to create a new folder.
2. Touch  to open the options panel, and then touch **New folder**.
3. Enter the name of the new folder in the text box.
4. Touch **Save**.

11.3.3 Moving or Copying a File

1. On the **File Manager** screen, touch  to show the options panel, and then touch **Multiselect**.
2. Touch the file or folder you want to move or copy. When a file or a folder is selected, a check mark will appear.
To select or unselect all files, touch **Select all** or **Unselect all**.
3. Touch **Cut** or **Copy**.
4. Select the path where you want the file to be copied or moved. Touch  to open the options panel, and then touch **Paste** to move or copy the file to the selected path.

11.3.4 Searching for a File

1. On the **File Manager** screen, touch a folder to access the directory where the file you want is located.
2. Touch  to open the options panel, and then touch **Search**.
3. Write a key word of the name of your file in the search box.
4. Touch . Your mobile phone will start the search.
5. A list of search results will be displayed. Touch a file in the list to open it.
6. Touch **New search** for a new search or touch the back key to return to the file manager screen.

11.3.5 Compressing or Extracting Files

Your phone supports compressing and extracting files.

-  You can only compress files and folders into .zip files, but can extract both .zip and .rar files.

Compressing Files

1. On the **File Manager** screen, touch , and then touch **Multiselect**.
2. Select the files or folders you want to compress. When a file is selected, a check mark will appear.
To select or unselect all files, touch **Select all** or **Unselect all**.
3. Touch **Compress**.

4. Edit the save path and the name of the target file, and then touch **OK** to start compressing the files and folders.

Extracting a File

1. Touch and hold a compressed file.
2. Touch **Extract**.
3. Edit the save path for the extracted files.
4. Touch **OK** to start extracting.

11.3.6 Viewing Your Memory Status

On the **File Manager** screen, touch  to open the options panel, and then touch **Memory Status**. The memory management screen will be displayed. This screen allows you to view the memory status and available memory on your mobile phone and microSD card.

11.4 Clock

In addition to displaying the date and time, the **Clock** application displays information about the weather and your phone. You can also use **Clock** to turn your mobile phone into an alarm clock.

11.4.1 Opening the Clock

On the Home screen, touch  > **Clock** to open the application.

Clock opens with the date and time displayed on your Home screen wallpaper, along with your local weather and other useful information.

11.4.2 Opening the Alarms

On the **Clock** screen, touch  to open the **Alarms**.

Adding an Alarm

1. On the alarm list screen, touch **Add alarm**.
2. Set the alarm, and then touch **Done**.

Setting an Alarm

1. On the alarm list screen, touch one of the alarms on the screen.

2. Touch **Time** to set the time of the alarm.
3. Touch **Repeat** to set the days when you want the alarm to sound.
4. Touch **Ring tone** to select a ringtone for the alarm.
5. Select the **Vibrate** check box to enable the phone to vibrate, in addition to playing the ringtone.
6. Touch **Label** to enter a name for the alarm.
7. Touch **Done**.

Customizing Alarm Settings

On the alarm list screen, touch , and then touch **Settings**.

11.5 Calculator

Use **Calculator** to solve simple arithmetic problems or use its advanced operators to solve more complex equations.

11.5.1 Opening Calculator

On the Home screen, touch  > **Calculator** to open the application.

11.5.2 Switching Between Basic and Advanced panel

On the **Calculator** screen, flick the screen to the right or left to switch between **Advanced panel** and **Basic panel**.

11.6 Notepad

Notepad features a simple text processor. In the note list, you can add, edit, and delete notes.

1. On the Home screen, touch  > **Notepad** to open the application.
2. Touch , and then touch **Add note** to create a note.
3. Touch  > **OK** to save the note.

11.7 Weather Clock

You can use **Weather Clock** to check the date and time of cities around the world, to get the latest weather of any city in any time and to share weather information with others.

- ❗ You need to turn on the GPS and data service on your phone before using weather clock.

11.7.1 Setting the Default City

1. On the Home screen, touch  > **Weather Clock**.
2. On the weather clock screen, touch  > **Add city**.
3. Select the city you want to add.

- ❗ In addition to your current city, you can add up to four more cities to the weather clock and get weather information for all of them at the same time.

4. Touch  > **More** > **Set as default city** to set the newly added city as the default city.

11.7.2 Updating Weather

You can update weather information on the weather clock either manually or automatically. To update the current city's latest weather information, touch  > **Refresh** on the weather clock screen.

You can also set your phone to update the weather information automatically.

1. On the weather clock screen, touch  > **More** > **Settings**.
2. Select **Auto update**.
3. Touch **Update interval** to set the interval between automatic weather updates.

11.7.3 Changing a City

1. On the weather clock screen, touch  > **Change city**.
2. Select a city from the **Popular cities** list, or search for another city by entering its name in the search field.

11.7.4 Sharing Weather Information

1. On the weather clock screen, touch  > **Share weather**.
2. Enter a phone number or a contact's name in the **To** field, or touch  to select a **Contacts** or **Groups**.
3. Touch  to send weather information to the recipient.

12 Managing Your Mobile Phone

To configure your mobile phone, touch  > **Settings**.

12.1 Setting the Date and Time

By default, your mobile phone automatically uses the date, time, and time zone provided by the network.

 When your mobile phone is using the date and time settings provided automatically by the network, you cannot manually set the date, time, and time zone.

1. On the **Settings** screen, touch **Date & time**.
2. Clear the **Automatic** check box.
3. Touch **Set date**. On the set date screen, touch  or  to adjust the date, month, and year, and then touch **Set** when the configuration is complete.
4. Touch **Select time zone**, and then select the desired time zone from the list. Scroll the list to view more time zones.
5. Touch **Set time**. On the set time screen, touch  or  to adjust the hour and minute. Touch **Set** when the configuration is complete.
6. Select or clear the **Use 24-hour format** check box to switch between 24-hour and 12-hour formats.
7. Touch **Select date format** to select how you want the date to display on your mobile phone.

12.2 Setting the Display

12.2.1 Adjusting the Screen Brightness

1. On the **Settings** screen, touch **Display > Brightness**.
2. Drag the slider left to make the screen darker, or right to make it brighter.
3. Touch **OK** to save the adjustment.

12.2.2 Adjusting the Time Before the Screen Turns Off

If your mobile phone is idle for several minutes, it will turn off the screen to save battery power. To set a longer or shorter idle time:

1. On the **Settings** screen, touch **Display > Screen timeout**.
2. Select the duration you want the screen to be illuminated.

12.3 Setting Ringers

12.3.1 Turning On Silent Mode

1. On the **Settings** screen, touch **Sound**.
2. Select the **Silent mode** check box to silence all sounds except alarms, and music and video media.

12.3.2 Adjusting the Volume

You can adjust the volume while on the Home screen or on most of the application screens (such as the screen displayed during a call or when playing music or videos). Press the Volume keys to adjust volume to the level you desire. You can also adjust the volume from the settings screen.

1. On the **Settings** screen, touch **Sound > Volume**.
2. Drag the slider left to make the volume lower, or right to make it higher.
3. Touch **OK** to save the adjustment.

12.3.3 Changing the Phone Ringtone

1. On the **Settings** screen, touch **Sound > Phone ringtone**.
2. In the displayed list, select an option:

- **Ringtone:** Select a preinstalled ringtone. The ringtone plays when selected.
- **Music:** Select the music stored in the phone or on the microSD card. The music plays when selected.

3. Touch **OK**.

12.3.4 Changing the Message Ringtone

1. On the Home screen, touch  > **Messaging**.
2. In the message list, touch  > **Settings** > **Select ringtone**.
3. Touch the ringtone you want to use, and then touch **OK**. The ringtone plays when selected.

12.4 Setting Phone Services

12.4.1 Customizing Call Settings

Mobile phone service providers offer different services such as call forwarding, call waiting, fixed dialing numbers, and voicemail. You can customize many of these services if they are part of your calling plan.

On the **Settings** screen, touch **Call settings** to customize your call functions.

12.4.2 Turning on Data Roaming

1. On the **Settings** screen, touch **Wireless & networks** > **Mobile networks**.
2. Select the **Data roaming** check box.

 Accessing data services while roaming may incur additional charges. Ask your wireless service provider about data roaming fees.

12.4.3 Switching off the Data Service

1. On the **Settings** screen, touch **Wireless & networks** > **Mobile networks**.
2. Clear the **Data enabled** check box.

12.5 Configuring Text-to-Speech

Use the Text-to-Speech settings to configure the Android text-to-speech synthesizer, for applications that can take advantage of this feature.

12.5.1 Installing Voice Data

1. On the **Settings** screen, touch **Voice input & output > Text-to-speech settings > Install voice data**.
2. If your mobile phone does not have speech synthesizer data installed, connect to Android Market and let it guide you through the process of downloading and installing the data.
3. Follow the instructions to install the voice data.

12.5.2 Adjusting the Speech Rate

1. On the **Settings** screen, touch **Voice input & output > Text-to-speech settings > Speech rate**.
2. Select a speed at which the text is to be spoken.

12.6 Protecting Your Mobile Phone

12.6.1 Turning on Your SIM Card PIN

1. On the **Settings** screen, touch **Location & security > Set up SIM card lock**.
2. Select the **Lock SIM card** check box.
3. Use the keyboard to enter the PIN, and then touch **OK**.
4. To change the PIN at any time, touch **Change SIM PIN**.

❗ You can dial emergency numbers any time from your mobile phone.

12.6.2 Protecting Your Mobile Phone with a Screen Lock

To keep your data more secure, lock the screen and/or require a screen unlock pattern every time your mobile phone is turned on or wakes up from sleep mode.

1. On the **Settings** screen, touch **Location & security > Set up screen lock > Pattern**.
2. Flick your finger vertically, horizontally or diagonally, connect at least four dots in any order you choose. Lift your finger from the screen when you are finished.

You must drag your finger between the dots on the screen to create the pattern, not simply touch individual dots.

3. Your mobile phone will record the pattern. Touch **Continue**.

4. When prompted, draw the screen unlock pattern again, and then touch **Confirm**.
To change your unlock screen pattern, touch **Location & security > Change screen lock**.

12.6.3 Protecting Your Mobile Phone with a Numeric PIN

You can set up a numeric PIN to lock your phone.

1. On the **Settings** screen, touch **Location & security > Set up screen lock > PIN**.
2. Enter at least four characters.
3. Touch **Continue**.
4. Enter the same characters again and touch **OK**.

To change your PIN, touch **Location & security > Change screen lock**.

12.6.4 Unlocking Your Mobile Phone If You Forget the Screen Lock Pattern

If you have already created a Google account, you can unlock your mobile phone using the following methods.

- After you have entered the wrong sequence five times, a **Forgot pattern?** button will appear. Touch this button to enter the Google account interface. After you have entered your Google account password, you will be able to reset the unlock pattern.
- After you have entered the wrong pattern twenty times, you will be taken directly to the Google account interface. After you have entered your Google account password, you will be able to reset the unlock pattern.

12.7 Managing Applications

12.7.1 Viewing an Installed Application

1. On the **Settings** screen, touch **Applications > Manage applications**.
2. In the applications list, do either of the following:
 - Touch , and then touch **Sort by size**. Then touch an application to view its details.
 - Touch an application directly to view its details.

12.7.2 Uninstalling an Application

❗ You cannot uninstall the applications that are pre-installed on the system.

1. On the **Settings** screen, touch **Applications > Manage applications**.
2. Touch an application, and then touch **Uninstall**.

12.7.3 Moving an Application to the microSD Card

Some applications are designed to be stored on your phone's USB storage or microSD card (depending on the model of your phone), rather than in its internal storage. Others are designed so you can change where they are stored. You may find it helpful to move large applications off your internal storage, to make more room for other applications that do not offer the option.

1. On the **Settings** screen, touch **Applications > Manage applications**.
2. Touch an application in the list. Then touch **Move to SD card** to move the bulk of the application from the phone's internal storage.

The **Storage** section of the application's details screen shows details about the memory used by the application. If the application can be moved, the **Move to SD card** button is active.

Touch **Move to phone** to move the application back to the phone's internal storage.

12.7.4 Ways to Free Up Your Mobile Phone Memory

- Move files and email attachments to the microSD card.
- In **Browser**, clear all temporary Internet files and Browser history information.
- Move applications to the microSD card.
- Uninstall any downloaded programs that you no longer use.
- Reset your mobile phone.

12.8 Resetting Your Mobile Phone

12.8.1 Backing Up My Data

You can use your Google account to back up your mobile phone's settings to Google servers. If you replace your mobile phone, the settings you have backed up will be transferred to the new mobile phone the first time you sign in to your Google account.

1. On the **Settings** screen, touch **Privacy**.
2. Select the **Back up my data** check box.

12.8.2 Restoring Factory Data

If you reset your phone to the settings that were configured at the factory, all of your personal data stored on the phone, including information about your Google Account, any other accounts, your system and application settings, and any applications you have downloaded will be erased. Resetting the phone does not erase any system software updates you have downloaded or any files on your microSD card, such as music clips or photos.

1. On the **Settings** screen, touch **Privacy > Factory data reset**.
2. When prompted, touch **Reset phone**, and then touch **Erase everything**. The mobile phone resets the settings to the original factory settings, and then restarts.

13 FAQs

How Can I Use a microSD Card to Import Contacts to My Phone from a Different Mobile Phone?

Your mobile phone only supports contact files in the **.vcf** format.

1. Save the contacts you want to import to your mobile phone to a microSD card as a **.vcf** file.
2. Insert the microSD card into your mobile phone and find the **.vcf** file using **File Manager**.
3. Touch the **.vcf** file. The phone displays a message asking whether you want to import the contacts.
4. Touch **OK** to import the contacts.

❗ Compatibility problems may occur with **.vcf** files created by different mobile phones and certain contact information may be lost after contacts are imported.

🔍 You can also use Bluetooth to share and import contacts.

How Do I Set a Song As a Phone Ringtone?

In **Music**, touch and hold the song to be set as ringtone, and then touch **Use as phone ringtone**.

How Do I Prevent Automatic Change of Screen Orientation When Rotating My Phone?

On the Home screen, touch  > **Settings** > **Display** > **Auto-rotate screen** to disable the function.

How Do I Set an Unlock Pattern?

On the Home screen, touch  > **Settings** > **Location & security** > **Set up screen lock** > **Pattern**.

How Can I Change the Input Method?

Touch and hold the area where you write text and then select the input method you prefer.

How Do I Stop the Song Playing in the Background?

Touch the notification bar, flick downwards to open the notifications panel, touch the music playing notification to go to the music playing screen, and then stop playing the song.

How Do I Return to the Call Screen?

While in a call, if you're on another screen, you can touch the notification bar, and flick downwards to open the notifications panel. Then touch the current call notification to return to the call screen.

How Do I Create an Application Shortcut on the Home Screen?

Touch and hold an application icon on the application screen until the Home screen is displayed. Then drag the icon to where you want to place it and release your finger.

How Do I Hide the Keyboard?

Touch  to hide the keyboard.

How Do I Forward a Message?

Touch and hold a message, and then touch **Forward** in the menu that opens.

Why Am I Unable To Use Navigation?

Navigation is unavailable in some countries or regions.

How Do I Use Quick GPS?

On the Home screen, touch  > **Settings** > **Location & security** > **Use Quick GPS**.

- ⓘ Quick GPS downloads data to enhance the GPS satellite information and may therefore incur additional data charges.

How Do I Save My Mobile Phone's Power?

On the Home screen, touch  > **Settings** > **Power saving mode** > **Power saving mode**. You can also enable **Power saving mode** when power saving notification appears.

Why Am I Unable To Take Pictures After Removing microSD Card?

You cannot take pictures without a micro SD card inserted.

Where Is Photos Taken By My Mobile Phone?

When microSD card is installed in your mobile phone, files such as photos will be saved in microSD card automatically.

HUAWEI U8185 Smart Phone FAQs



HUAWEI U8185 Smart Phone FAQs V100R001

Issue 01
Date 2011-06-13

Contents

1 Basics	5
1.1 Status Icons	6
1.2 SMS.....	6
1.2.1 What is the difference between the text message (SMS) in an Android OS and that in a traditional system? What is the advantage of the text message in the Android OS?	6
1.2.2 How do I send a text message?	7
1.2.3 How do I change the input method?	7
1.2.4 How do I save a text message as a draft?	7
1.2.5 How do I send a text message to multiple recipients?	8
1.2.6 How do I delete a text message in a message thread?.....	8
1.2.7 What is the function of locking a message?	8
1.2.8 How many text messages can be saved on my phone?	8
1.2.9 While forwarding a message, can I forward all messages in a thread or forward only the latest message?	9
1.2.10 How do I set message ringtone and vibrate?	9
1.2.11 How do I search for a message?	10
1.2.12 How do I disable the key press sound?	10
1.3 MMS	10
1.3.1 How do I send a multimedia message?	10
1.3.2 Is a multimedia message affected by the file size, video format, or resolution?	11
1.3.3 What are the failure causes of sending or receiving a multimedia message? How to solve such problems?.....	11
1.4 Music.....	12
1.4.1 What are the meanings of Artists, Albums, Songs and Playlists?	12
1.4.2 How do I manage my favorite songs?	12
1.4.3 How do I create playlists?	12
1.4.4 What are the play modes?	13
1.4.5 How do I play songs in background and exit Music?	15
1.5 Camera	15
1.5.1 Am I able to take pictures or videos when the SD card is unavailable?	15
1.5.2 What is the default saving path of pictures or videos? How do I change the path?	15
1.5.3 Why am I unable to open certain pictures or start certain videos?	15
1.5.4 How do I edit a picture or video?	16

1.6 Streaming Media	16
1.6.1 Will the phone stop playing streaming media when I receive an incoming call? After the call, does it continue to play?	16
1.6.2 Why does the phone not play certain streaming media?	16
1.6.3 What are the possible reasons of poor quality of playing a streaming media online?	16
1.6.4 During an online streaming media play, will the phone memory be insufficient?	17
1.7 Bluetooth	17
1.7.1 What files can be transmitted via Bluetooth?	17
1.7.2 How do I transmit a file via Bluetooth?	17
1.7.3 Why is my phone unable to be searched by other devices? How do I solve this problem?	17
1.7.4 What is the valid distance of Bluetooth?	18
1.7.5 What are the possible causes of my phone failed to pair with other devices?	18
1.8 Email	18
1.8.1 How do I set up an email account?	18
1.8.2 How do I change to another email account?	19
1.9 Gmail	20
1.9.1 How do I set up a Gmail account?	20
1.9.2 How do I change to another Gmail account?	20
1.9.3 Which applications do the Gmail account and password connect to?	20
1.9.4 What should I do if I forgot my Gmail account or password?	21
1.10 Google Maps	21
1.10.1 How do I choose wireless networks or GPS satellites for Maps?	21
1.10.2 Is it free of charge to use GPS and wireless network locations?	21
1.10.3 Why am I unable to use My Location service and how to solve this problem?	22
1.10.4 How do I quickly search for route?	22
1.10.5 What are the advantages of Google Maps over other maps?	22
2 Common Settings	23
2.1 Forced Upgrade	23
2.2 How do I install the ADB driver?	23
2.3 Network Parameters	26
2.4 How do I enable and disable data service?	26
2.5 How do I use a Wi-Fi router to connect to the Internet?	27
2.5.1 Connect to the Internet using a Wi-Fi router.	27
2.5.2 How come I cannot properly use the Internet after I have connected to the hotspot?	27
2.5.3 Why am I failed to connect to Wi-Fi?	28
2.6 How do I use USB tethering?	28
2.6.1 How do I use USB tethering in the Windows XP operating system?	28
2.6.2 How do I use USB tethering in the Windows Vista and Windows 7 operating systems?	30
2.7 Ringtone Settings	31
2.7.1 How do I set the incoming call ringtone?	31
2.7.2 How do I set incoming call and message vibration?	31
2.7.3 How do I set music of my choice as a ringtone for incoming calls or messages?	32

2.7.4 If music on my SD card is set as my ringtone, will the song still be set as my ringtone, if I eject the SD card?	32
2.8 Language and Keyboard.....	32
2.8.1 How do I change the phone language?.....	32
2.8.2 How will I do if I am unable to select my desired language?	32
2.8.3 Why am I unable to use the input method after the input software is successfully installed?.....	32
2.8.4 How do I change the font size?	33
2.9 Unlock Pattern.....	33
2.9.1 How do I set the screen unlock?	33
2.9.2 How to unlock your mobile phone if you forget the lock pattern?.....	34
3 Applications	35
3.1 What are the third-party applications supported by an Android phone?	35
3.2 How do I get third-party applications?	35
3.3 How do I install, manage, and uninstall applications?	35
3.3.1 How do I install applications?	35
3.3.2 How do I manage applications?	36
3.3.3 How do I uninstall applications?	36
3.4 Why am I unable to install an application and how to solve the problem?	37
4 Data Backup and Restoration	38
4.1 What data can be backed up on my phone?.....	38
4.2 How do I back up and restore contacts in phone Contacts?	38
4.2.1 How do I back up contacts to SD card?	38
4.2.2 How do I restore contacts from SD card to phone?	39
4.3 How do I use third-party applications to synchronize data?.....	39
5 Others	41
5.1 How do I examine files on my SD card?.....	41
5.2 What are the common skills?	41
5.2.1 How do I quickly add a shortcut to the home screen?.....	41
5.2.2 How do I use other applications during a call?	41
5.2.3 How do I set the alarm to ring when the phone is powered off?	41
5.2.4 How do I set my phone to vibrate or mute quickly?	41
5.2.5 Am I able to switch the orientation of the screen when rotating the phone?	42
5.3 How do I maximize the battery life?	42
5.4 How do I save data traffic?.....	42

1 Basics

1.1 Status Icons



Call in progress



Missed call



Problem with sign-in or synchronization



Preparing SD card



Signal strength



No signal



Synchronizing data



Bluetooth is on



Wi-Fi router



Vibrate mode



Battery is full



Battery is charging



Music is playing



New email



Silence mode



Call in progress using a Bluetooth device



Connected to a PC



Memory full



Roaming



Airplane mode



Connected to a Wi-Fi network



Synchronization failed



Connected to another Bluetooth device



Speaker on



Microphone muted



Battery is very low



Alarm is set



New calendar reminder



New message



USB debug mode

1.2 SMS

1.2.1 What is the difference between the text message (SMS) in an Android OS and that in a traditional system? What is the advantage of the text message in the Android OS?

Difference:

 
In a traditional system, text messages are saved in **Inbox** and **Sent**; In an Android system, text messages with the same contact are saved in the same thread, which does not differentiate inbox and sent.

Advantage:

Messaging in an Android phone is similar to the instant messaging services such as MSN or QQ. Therefore, it helps you browse your chat records more quickly and conveniently.


1.2.2 How do I send a text message?

1. Touch **Messaging** and then touch **New message**.
2. Enter a mobile phone number in the **To** field, touch the composition text box to start entering your message, and then touch .

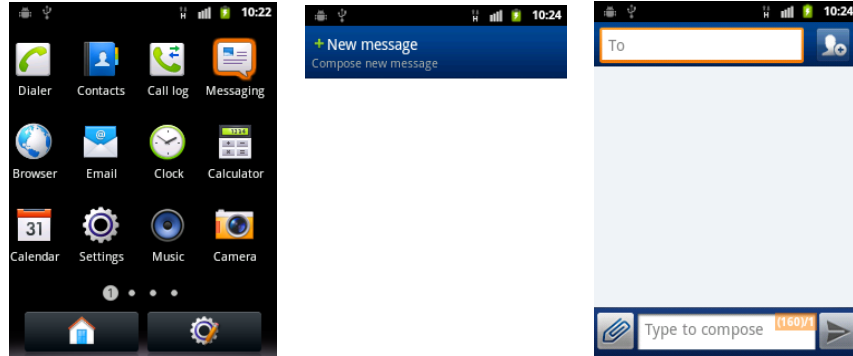


1.2.3 How do I change the input method?

 Touch and hold the composition text box and touch **Select Input method** in the **Edit text** menu. Then, touch **Android keyboard** or **TouchPal Input** in the **Select input method** menu.

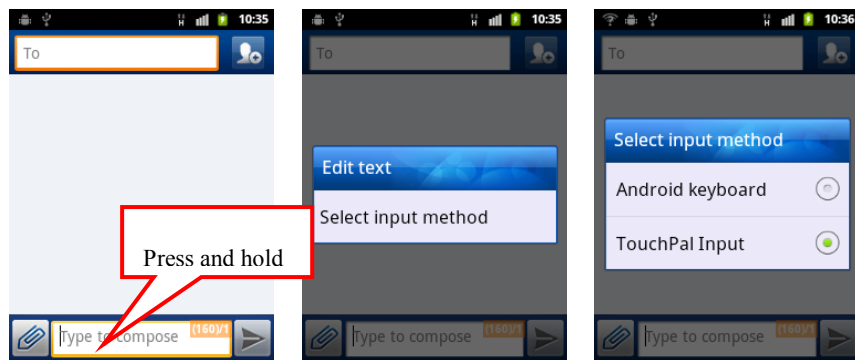

1.2.4 How do I save a text message as a draft?

 
Touch **New message**, enter a mobile phone number in the **To** field and enter your text message in the composition text box, and then touch . The text message is automatically saved as a draft.

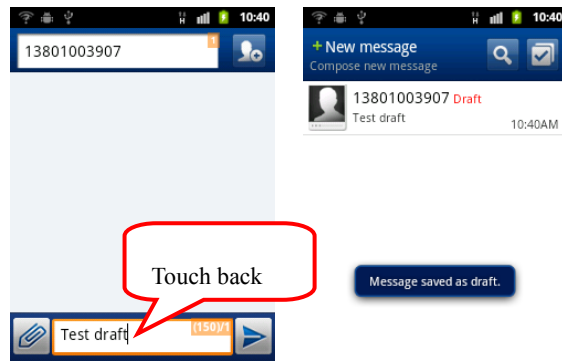

Note: If you enter the text message but do not enter the mobile phone number, you cannot save the text message as a draft.

1.2.5 How do I send a text message to multiple recipients?

 1. Enter multiple phone numbers and separate them with commas.

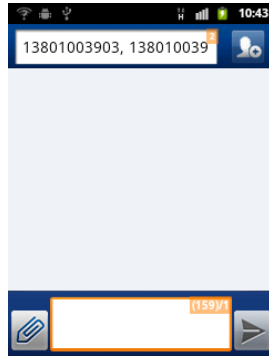

1.2.6 How do I delete a text message in a message thread?

1. Touch and hold the message to be deleted, and then select **Delete message** in the **Message options** menu.
2. Touch  > **Delete threads**, all the message(s) to be deleted.

 
1.2.7 What is the function of locking a message?

When deleting messages in batches, you are unable to delete a locked message without selecting **Delete locked messages**.

1.2.8 How many text messages can be saved on my phone?


1. The total number of messages saved on your phone is related to the phone storage.

Touch  > **Settings** > **Storage** > **Internal storage**.

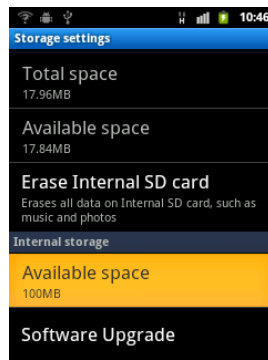

2. A thread can contain up to 999 text messages. By default, a thread contains 200 text messages on your phone.

 To set the text messages in a thread: Touch **Messaging** >  > **Settings** > **Text message limit**, and then set the text message limit.

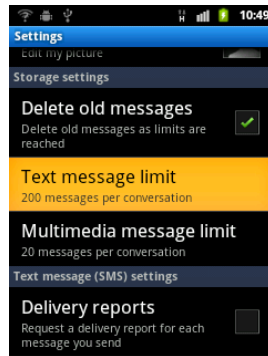


1.2.9 While forwarding a message, can I forward all messages in a thread or forward only the latest message?

You can forward any one message. Touch and hold the message and touch **Forward** in the **Message options** menu.


1.2.10 How do I set message ringtone and vibrate?

 1. To set message ringtone, touch **Messaging** >  > **Settings** > **Select ringtone**.
2. To set message vibrate, touch **Messaging** >  > **Settings** > **Vibrate**.

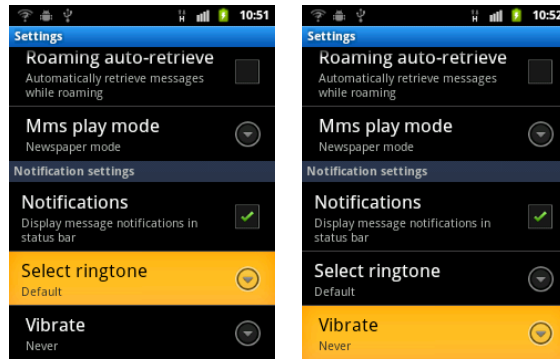

1.2.11 How do I search for a message?

 Touch  (or  > **Search**), enter the search key words, and then touch  . All messages related to the search key words are displayed.

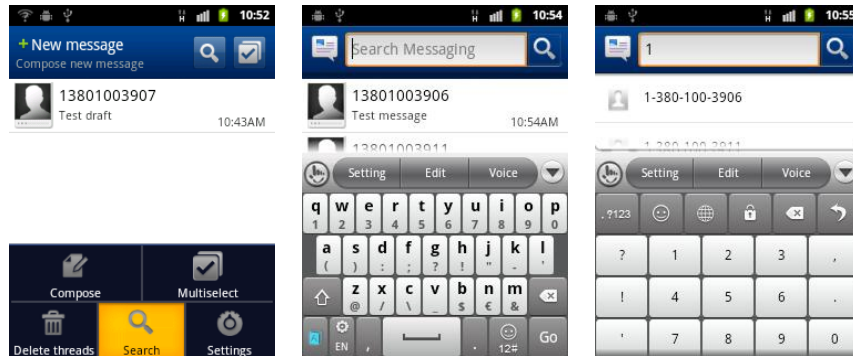

1.2.12 How do I disable the key press sound?

1. The key press sound is related to the input method. In the specific input method menu, you can disable the key press sound.

Touch  > **Settings** > **Language & keyboard**. Select to set a text input method.

 
2. Disabling the key press sound does not affect the incoming call ringtone and text message ringtone.

1.3 MMS

1.3.1 How do I send a multimedia message?


1. Touch **Messaging** and then touch **New message**.
2. Enter a mobile phone number in the **To** field and touch the composition text box to start entering your message. If you enter more than three pages in a text message, the text message is automatically changed to a multimedia message.

3. Touch  > **Add subject**. If you add a subject to a text message, the text message is automatically changed to a multimedia message.
4. Touch  > **Add** to attach pictures, audio files, or videos. If you attach a multimedia file to a text message, the text message is automatically changed to a multimedia message.
5. Touch .

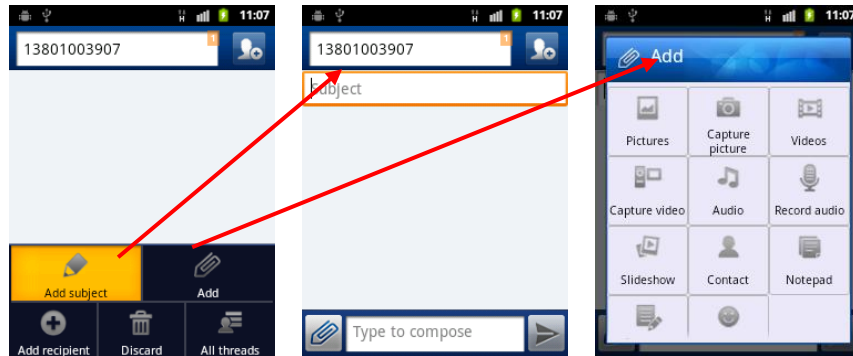

1.3.2 Is a multimedia message affected by the file size, video format, or resolution?

 
1. If an audio file or video exceeds 307 KB, it cannot be attached to the message.
2. If a picture size exceeds the limit, it is automatically compressed. Then, it can be attached to the multimedia message and the received picture will be in low-resolution.

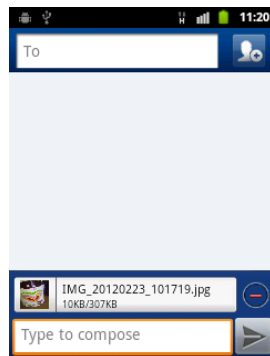

1.3.3 What are the failure causes of sending or receiving a multimedia message? How to solve such problems?


1. If your phone memory is insufficient (smaller than 10%), you cannot receive a multimedia message.

 Solution: Delete unnecessary files to release your phone memory. The available memory should be larger than 10%.

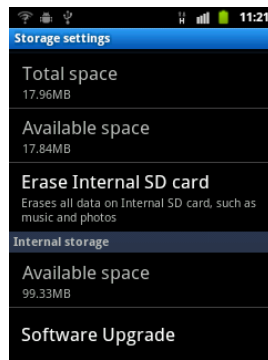

2. If data service is disabled, you are unable to send or receive multimedia messages.

 Solution: Touch  > **Settings** > **Wireless & networks** > **Mobile networks**. Touch to select **Data enabled**.

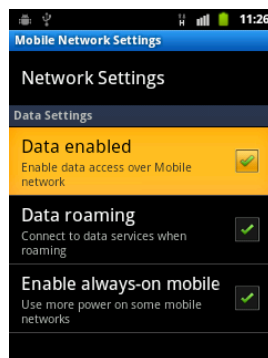

1.4 Music

1.4.1 What are the meanings of Artists, Albums, Songs and Playlists?

 
1. **Artists**: Songs of the same artist(s) are placed in the same directory.
2. **Albums**: Songs of the same album are placed in the same directory.
3. **Songs**: All songs are placed in one directory by naming schemas.
4. **Playlists**: Favorite songs can be added to the playlists.

1.4.2 How do I manage my favorite songs?

You can create different playlists and add songs to the playlists. For details about how to add songs to a playlist, see the next question.


1.4.3 How do I create playlists?

1. Touch **Music** and select any song to be added to the playlist.
2. Touch and hold the song and then touch **Add to playlist** > **New**. Enter a name to the **Playlist name** text box and touch **Save**.

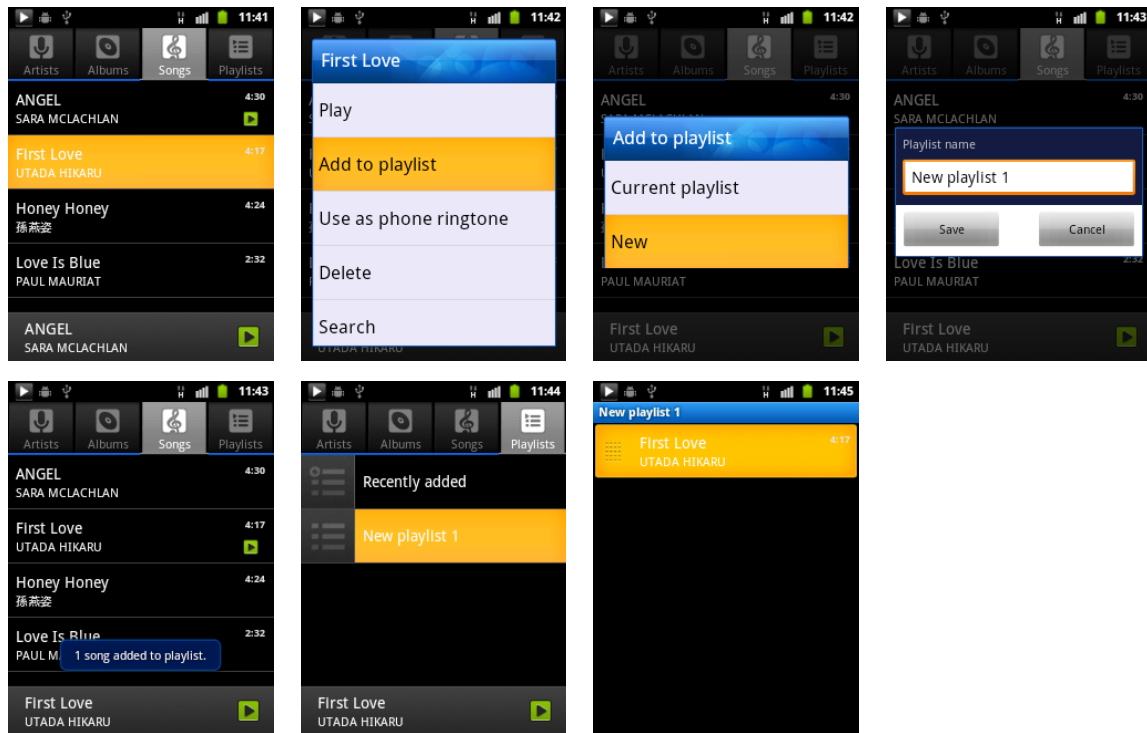


1.4.4 What are the play modes?

 
1. **Shuffle is off** (by default): Set the phone to play all songs in the playlist in order and stop the play after all songs have been played.

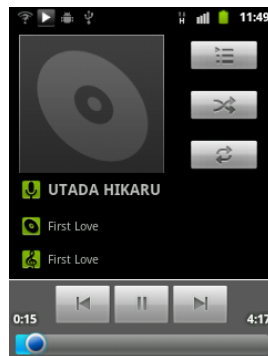

 
2. **Shuffle is on**: Set the phone to play all songs in the playlist in random order and stop the play after all songs have been played.

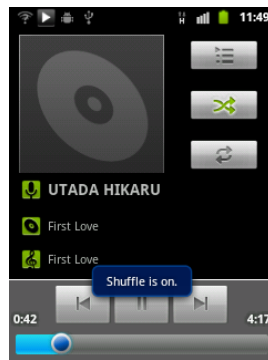

 
3. **Repeating all songs:** Set the phone to play all songs in the playlist in order and repeat to play the songs in the playlist.

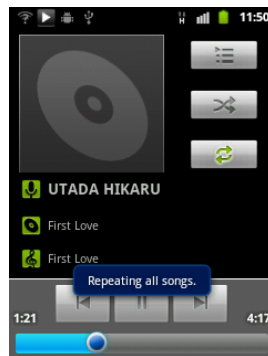

 4. **Repeating current song:** Set the phone to play the current song repeatedly.

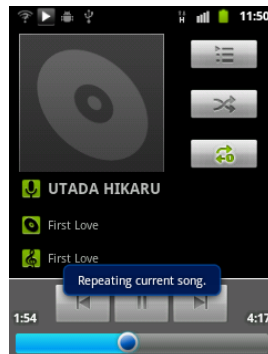

 5. **Shuffle is on + Repeating all songs:** Set the phone to play all songs in the playlist in a random order and repeat to play all songs after all songs have been played.

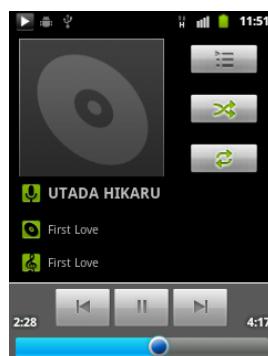

1.4.5 How do I play songs in background and exit Music?

1. Play in background: Touch **Music** and play any audio file. Press . The song is playing in background.
2. Exit **Music**: Touch **Music** and pause the song. Press  to exit **Music**.

1.5 Camera

1.5.1 Am I able to take pictures or videos when the SD card is unavailable?

Yes. When there is no SD card inserted into the phone, you can use the phone storage to store these pictures and video which be taken.



1.5.2 What is the default saving path of pictures or videos? How do I change the path?

1. When the SD card is available:
The default saving path for pictures is sdcard/DCIM/Camera.
The default saving path for videos is sdcard/DCIM/Camera.
2. When the SD card is not available:
The default saving path for pictures is HWUserData/DCIM/Camera
The default saving path for videos is HWUserData/DCIM/Camera
3. The path can't be changed.

 
1.5.3 Why am I unable to open certain pictures or start certain videos?

1. The phone does not support the file format.
2. The phone memory is insufficient. Please close some running third-party applications.

3. The file is damaged.
4. The file is copy-right protected.
5. Unknown error occurs to the application or phone system. This is very rare case and you can restart the phone to try them again.

1.5.4 How do I edit a picture or video?

1. Touch  >**More**> **Rotate** or **Crop**.
2. You are unable to edit a video clip.

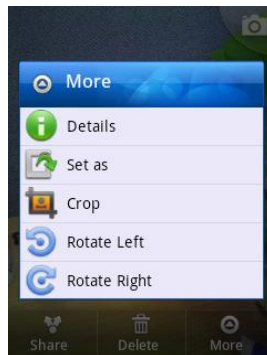

1.6 Streaming Media

1.6.1 Will the phone stop playing streaming media when I receive an incoming call? After the call, does it continue to play?

1. The phone stops playing the streaming media when you have an incoming call.
2. After the call, the phone continues to play the streaming media.

1.6.2 Why does the phone not play certain streaming media?

1. The phone does not support the file format.
2. The network is unstable.
3. The phone memory is insufficient.

1.6.3 What are the possible reasons of poor quality of playing a streaming media online?

1. The source streaming media has poor quality.
2. The network is poor.
3. Phone hardware may be faulty, for example, the phone display is damaged. In such case, compare the streaming media with another device.
4. Phone memory may be insufficient.
5. CPU usage is high.

6. Too much applications are running.

1.6.4 During an online streaming media play, will the phone memory be insufficient?

No. The download occupies RAM rather than the phone memory during an online streaming media play.

1.7 Bluetooth

1.7.1 What files can be transmitted via Bluetooth?

Pictures, audio files, videos, texts, web pages, or contacts are able to be transmitted via Bluetooth.

 
1.7.2 How do I transmit a file via Bluetooth?

1. Touch **File Manger** or **Gallery** and select any file to be sent. Touch and hold the file and touch **Share** > **Bluetooth**.
2. Open the web browser and access any page. Press  and touch **More** > **Share page** > **Bluetooth**.
3. In **Contacts**, press  and touch **Multi-select** > **Send** > **Bluetooth**.

1.7.3 Why is my phone unable to be searched by other devices? How do I solve this problem?


1. Bluetooth may be turned off.

Solution: Touch  > **Settings** > **Wireless & networks** and start **Bluetooth**.

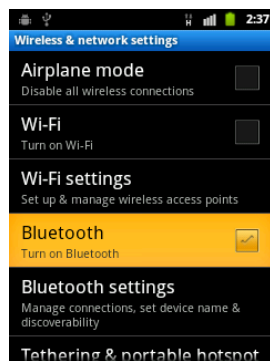

2. The phone may be set to **Hidden** after Bluetooth is turned on.

 Solution: Touch  > **Settings** > **Wireless & networks** > **Bluetooth settings** and touch **Discoverable**.

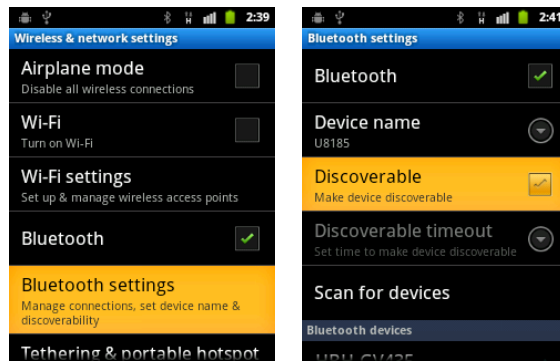

1.7.4 What is the valid distance of Bluetooth?

It is within 10 meters.

 
1.7.5 What are the possible causes of my phone failed to pair with other devices?

 
1. I am unable to search other devices.
Check that Bluetooth on other devices is turned on and the devices are able to be searched.
2. I am unable to search the Bluetooth headset.
Check that the headset is set to **Discoverable**. For details, see the headset user guide.
3. I am unable to connect to other phones when I send files.
Check that the paired phone is able to receive files or supports the file of the specific format.

1.8 Email

1.8.1 How do I set up an email account?

Touch  > **Email** and set up your email account, as shown in the following figures.

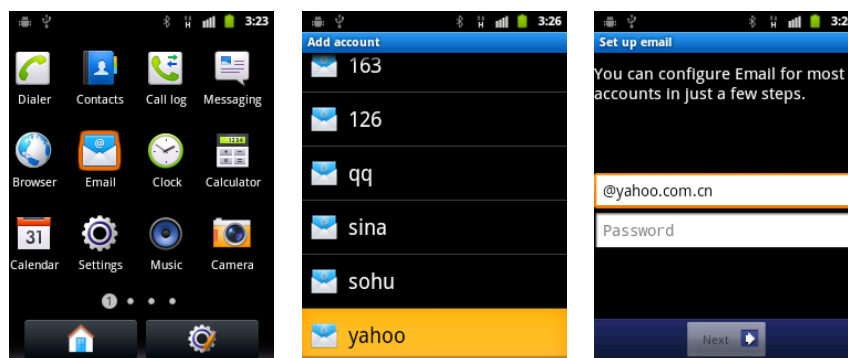

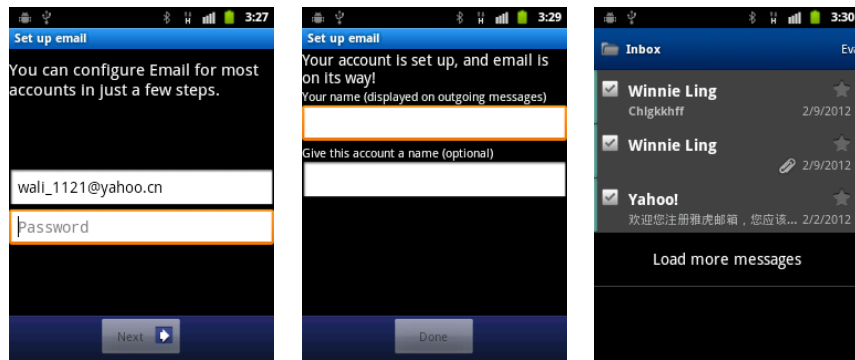


1.8.2 How do I change to another email account?

1. To add another email account:

Touch **Email**, press , touch **More>Accounts**, press  again, and touch **Add account**.

2. To remove an email account:

 
Touch **Email**, press , touch **More>Accounts**, touch and hold the email account to be removed, and touch **Remove account**.

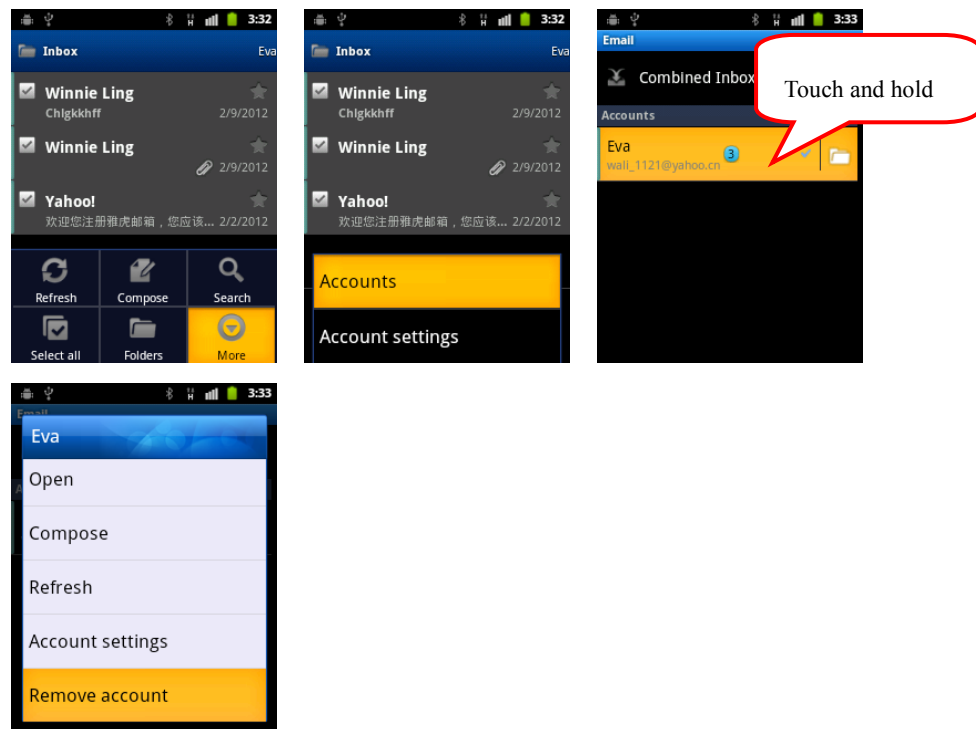

1.9 Gmail

1.9.1 How do I set up a Gmail account?

 1. Touch  > **Gmail** > **Create or Sign in**.
2. Touch  > **Settings** > **Accounts & sync** > **Add account** > **Google** > **Create or Sign in**.
3. Start any Google application and you will be prompted to create or sign in your Gmail account.

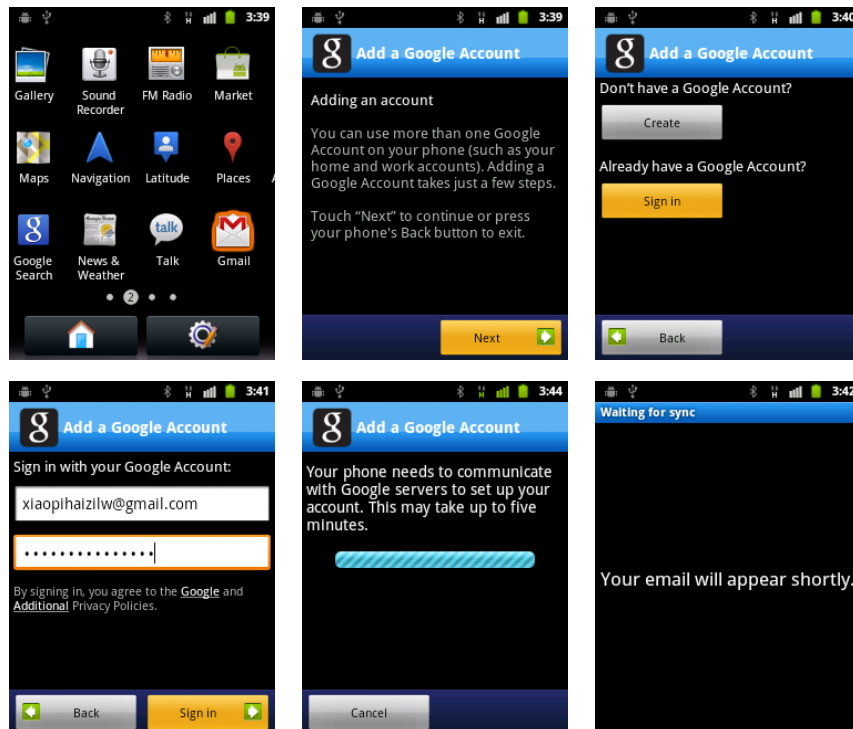

1.9.2 How do I change to another Gmail account?

1. You are unable to remove the first Gmail account which you have signed in. If you must remove the account, you need to restore factory defaults.
2. You are able to add multiple Gmail accounts.

Touch  > **Settings** > **Accounts & sync** > **Add account** > **Google**.

 
1.9.3 Which applications do the Gmail account and password connect to?

You must sign in with your Gmail account before using the Google applications such as Google Talk, Market, or Maps.

1.9.4 What should I do if I forgot my Gmail account or password?

1. Log in to Gmail website to obtain your password.

Enter www.gmail.com in the address bar, touch **Can't access your account?** and access Gmail Help.

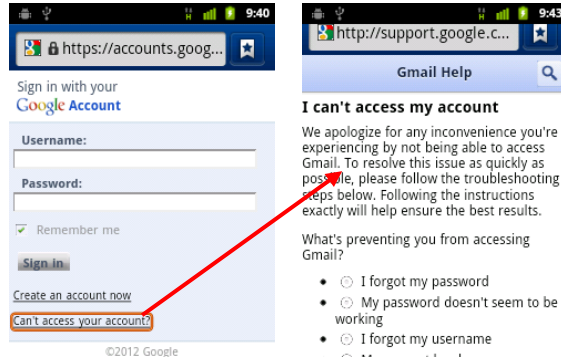


2. Create or sign in with another Gmail account.

1.10 Google Maps

1.10.1 How do I choose wireless networks or GPS satellites for Maps?

 1. Wireless network location: Touch  > **Settings** > **Location & security** and check **Use wireless networks**.
2. GPS location: Touch  > **Settings** > **Location & security** and check **Use GPS satellites**.

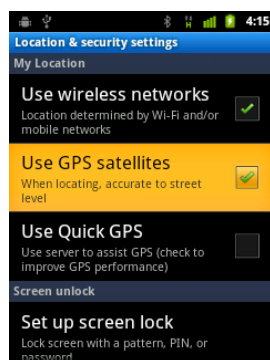

1.10.2 Is it free of charge to use GPS and wireless network locations?

GPS location is free of charge. Wireless network location charge applies.

1.10.3 Why am I unable to use My Location service and how to solve this problem?

1. The My Location feature takes information broadcast from mobile towers near you to locate your current location on the map. When the signal strength is weak or your network operator does not support this service, you may encounter this problem.
2. Solution: Move to a place with better signal strength to use My Location service.

If you fail once, try more times.

1.10.4 How do I quickly search for route?

Touch **Maps**, press , and touch **Directions**. Enter start point and end point and touch **Get directions**.

1.10.5 What are the advantages of Google Maps over other maps?

1. Google Maps is a free application. Mobile operators charge users for the data traffic.
2. Google Inc. provides technical support for Google Maps. For example, the latest Google Maps provides bicycle directions.
3. Google Maps is an open system and allows users to add specific information on the map.
4. Google Maps covers almost all over the world.

2 Common Settings

2.1 Forced Upgrade

 
 
 
The forced upgrade method is as follows:

 
 
Note: After the forced upgrade, all user data (contacts, text messages, and multimedia messages) will be lost.

 
1. Go to <http://www.huaweidevice.com/worldwide/technicalIndex.do> and search for the latest U8185 version, download it to the local drive, and uncompress it to extract the upgrade file.
2. In the SD card root directory, create a new folder named **dload**. Take the extracted upgrade file, **UPDATE.APP**, and copy it to the **dload** folder.
3. Insert the SD card into the mobile phone.
4. When the mobile phone is powered off, press the Volume + and Power keys at the same time to initiate the forced upgrade.
5. After the upgrade is complete, restart the phone, and continue to use as before.

2.2 How do I install the ADB driver?

1. When the phone is connected to the PC through data cable, the PC will display a prompt window. Follow the guide to install the ADB driver.

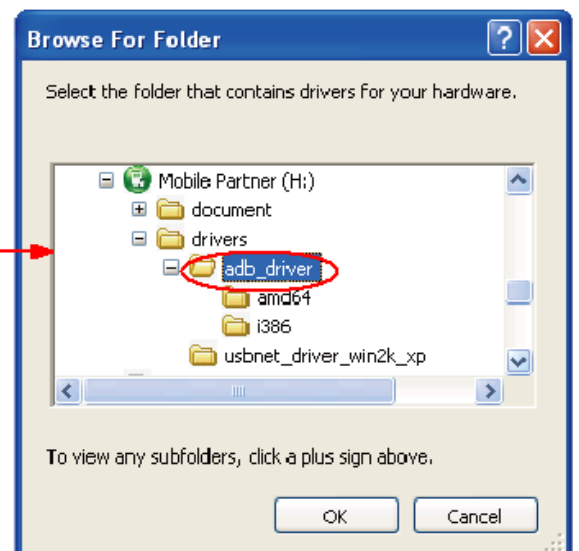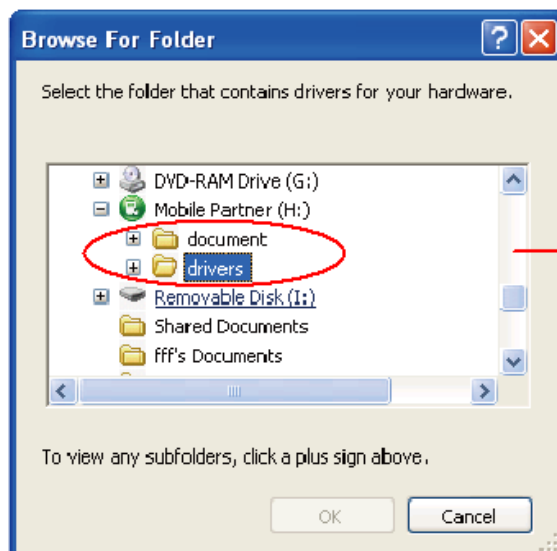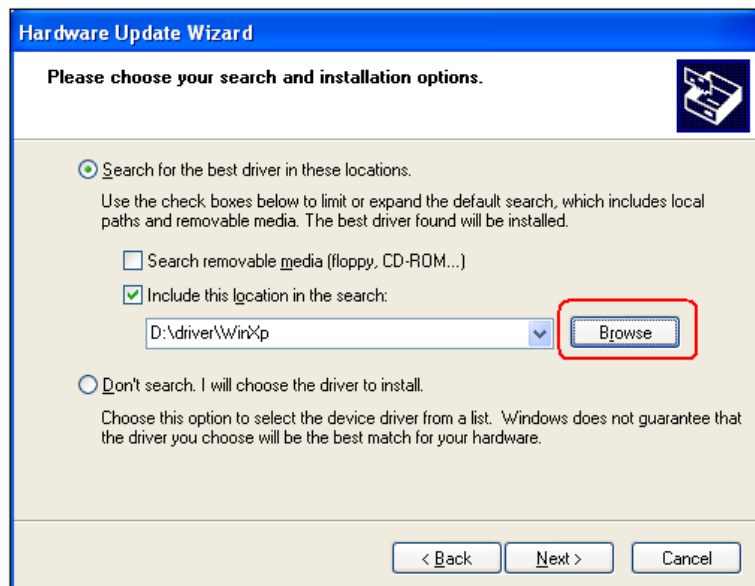

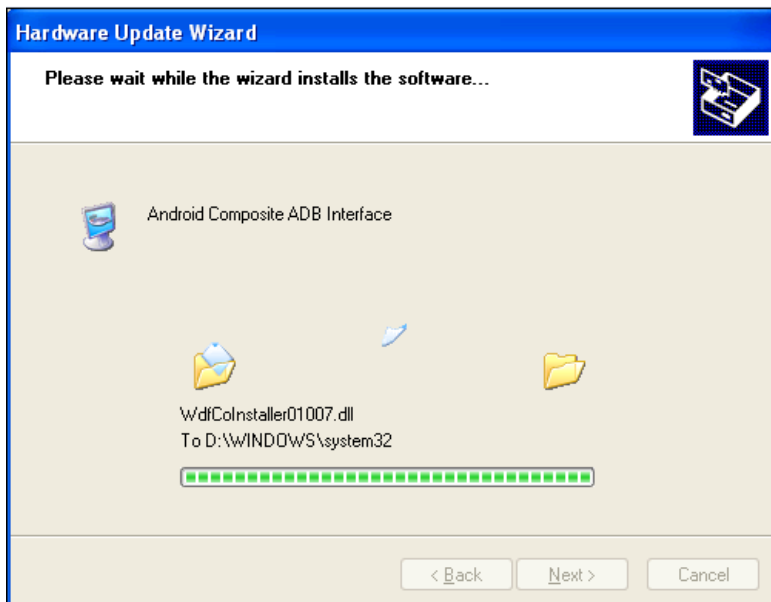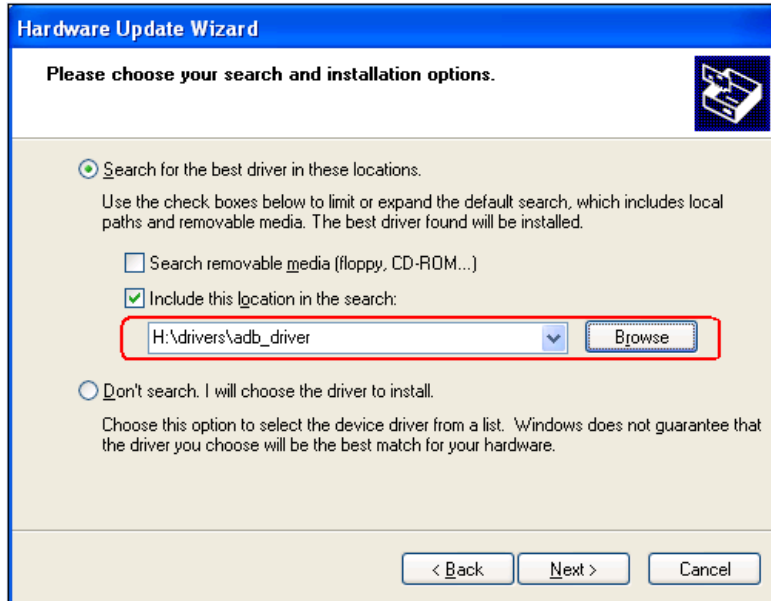

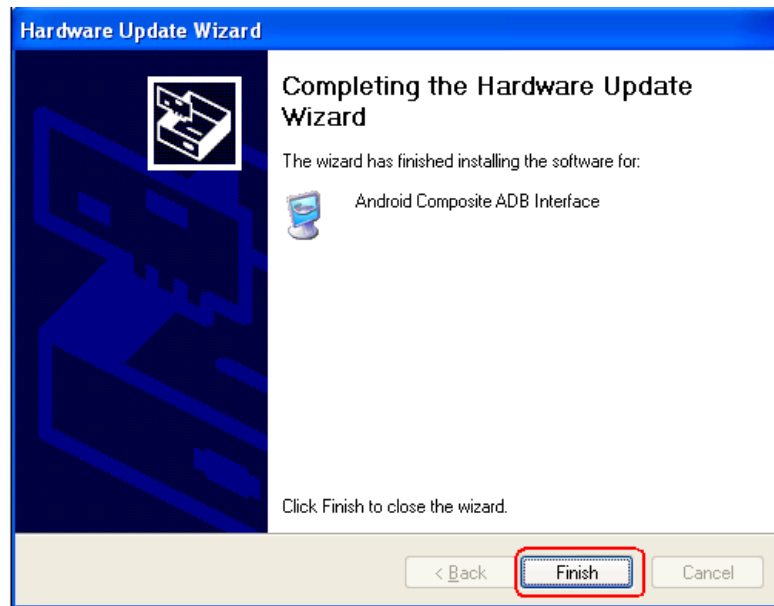


2. If the PC doesn't produce a prompt window after the phone is connected to it, you can click on the new driver to start the installation process.

2.3 Network Parameters

1. Insert the SIM card and the APN is automatically set.
2. To view the APNs, touch  > **Settings** > **Wireless & networks** > **Mobile networks** > **Network Settings** > **Access Point Names**.

2.4 How do I enable and disable data service?

 
To start or stop data service, touch  > **Settings** > **Wireless & networks** > **Mobile networks** > **Data enabled**.

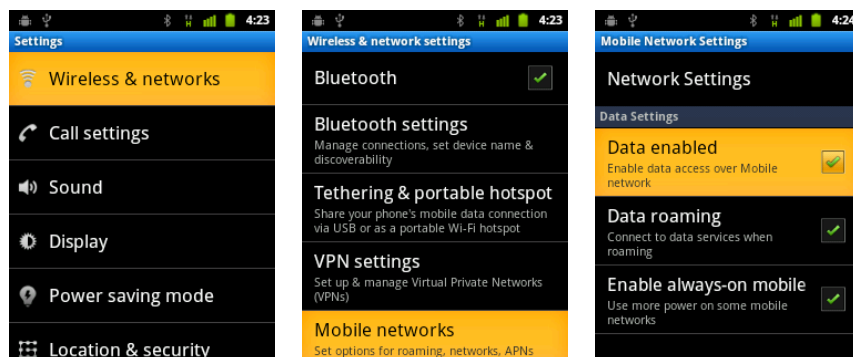


2.5 How do I use a Wi-Fi router to connect to the Internet?

2.5.1 Connect to the Internet using a Wi-Fi router.

 1. Touch  > **Settings > Wireless & networks > Tethering & portable hotspot > Portable Wi-Fi hotspot.**

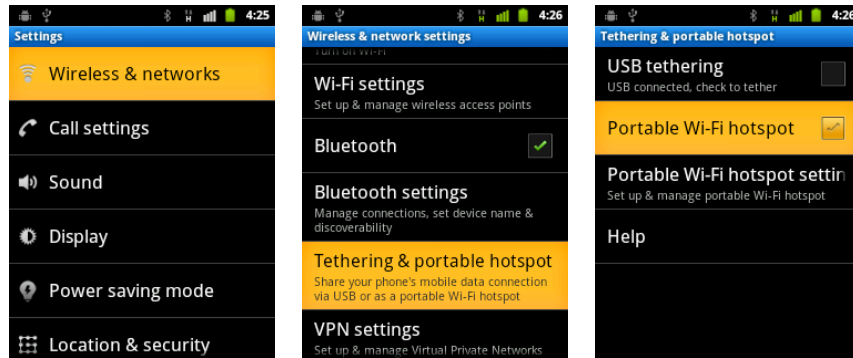

 2. To set Wi-Fi network SSID and password, touch  > **Settings > Wireless & networks > Tethering & portable hotspot > Portable Wi-Fi hotspot > Portable Wi-Fi hotspot settings > Configure Wi-Fi hotspot.**

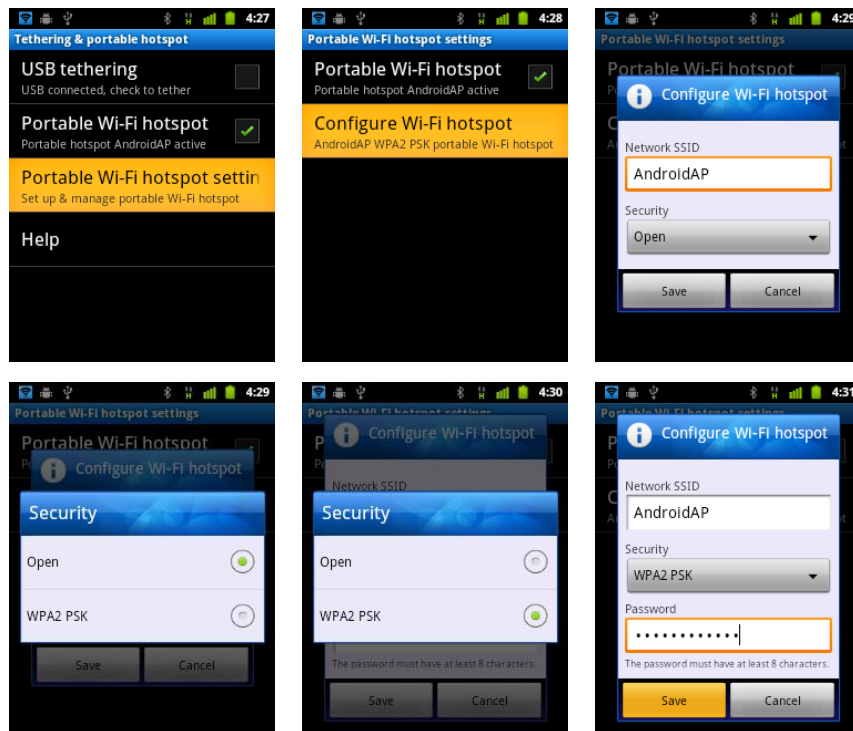

2.5.2 How come I cannot properly use the Internet after I have connected to the hotspot?

1. The network SSID and password have changed.

2. Your SIM or USIM card's balance is low.
3. You are out of the Wi-Fi hotspot signal coverage.
4. The connection limit of the Wi-Fi hotspot has already reached.

 
2.5.3 Why am I failed to connect to Wi-Fi?

1. You are out of the Wi-Fi hotspot signal coverage.
2. The connection limit of the Wi-Fi hotspot has already reached.
3. You have entered the wrong password.


2.6 How do I use USB tethering?

2.6.1 How do I use USB tethering in the Windows XP operating system?


Connect the mobile phone to the PC and go to **My Computer**, and click **Mobile Partner** CD driver.

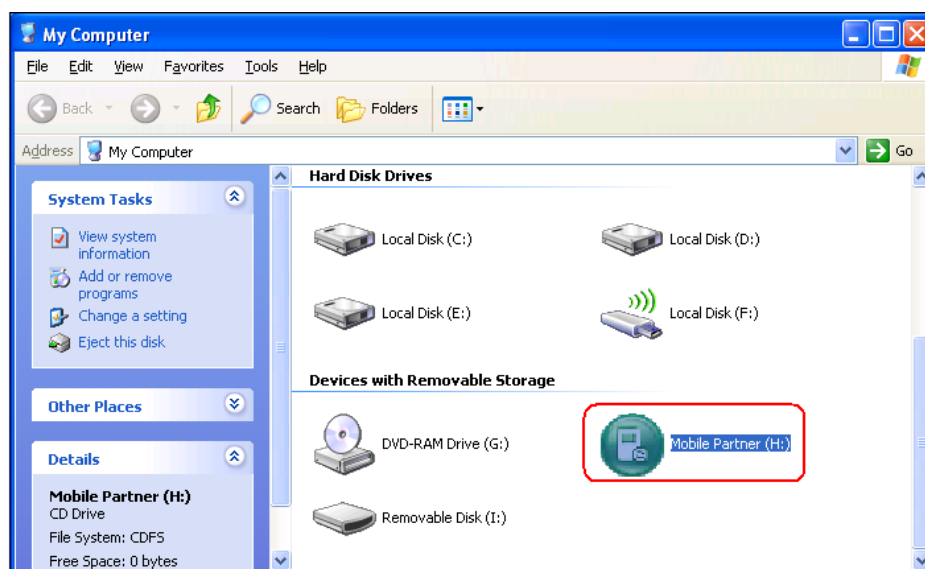


Click **drivers**.

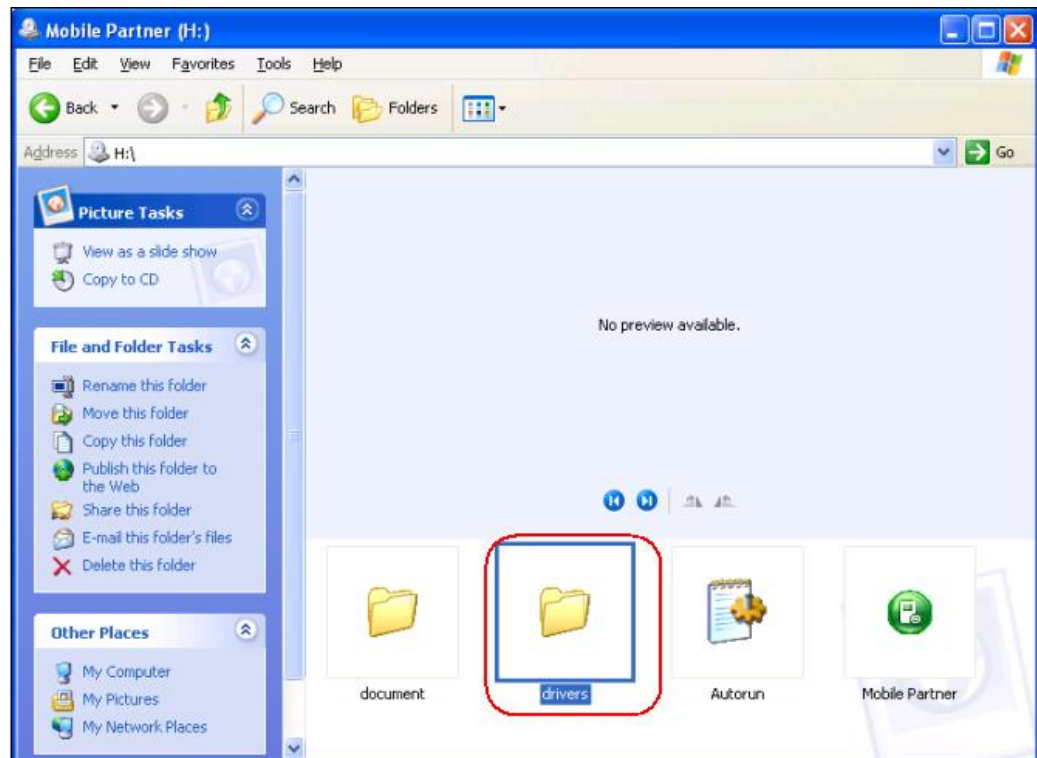 


Click **usbnet_driver_win2k_xp**.

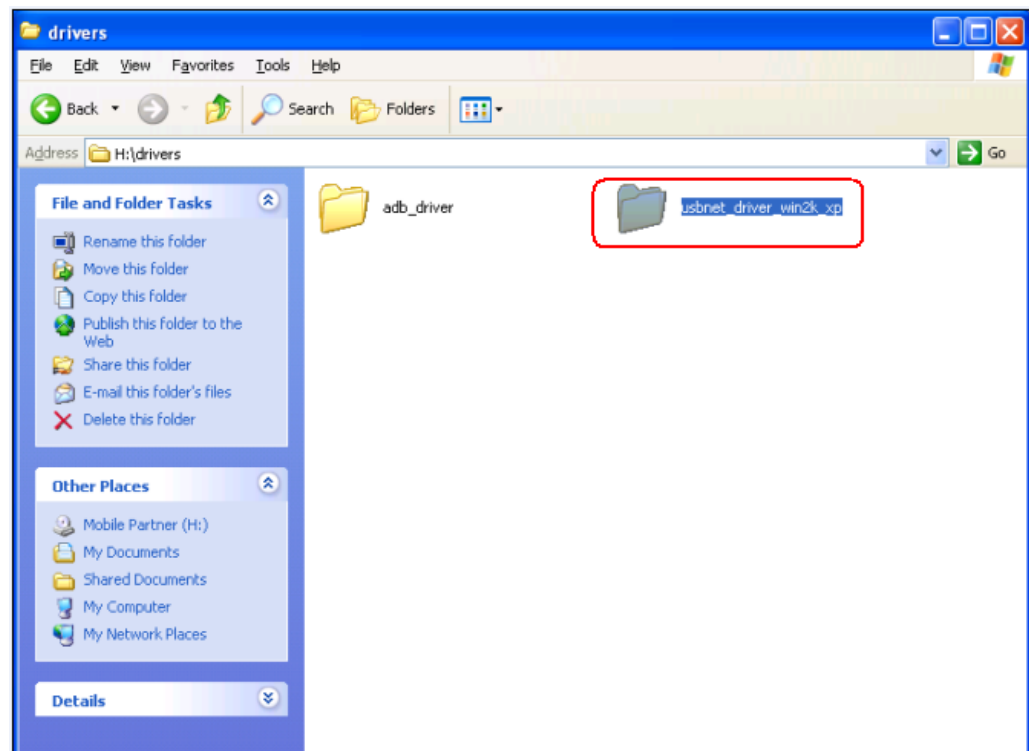 

 Click the **DownloadActiveSync** shortcut. After you have connected to the website, follow the instructions to download the ActiveSync software.

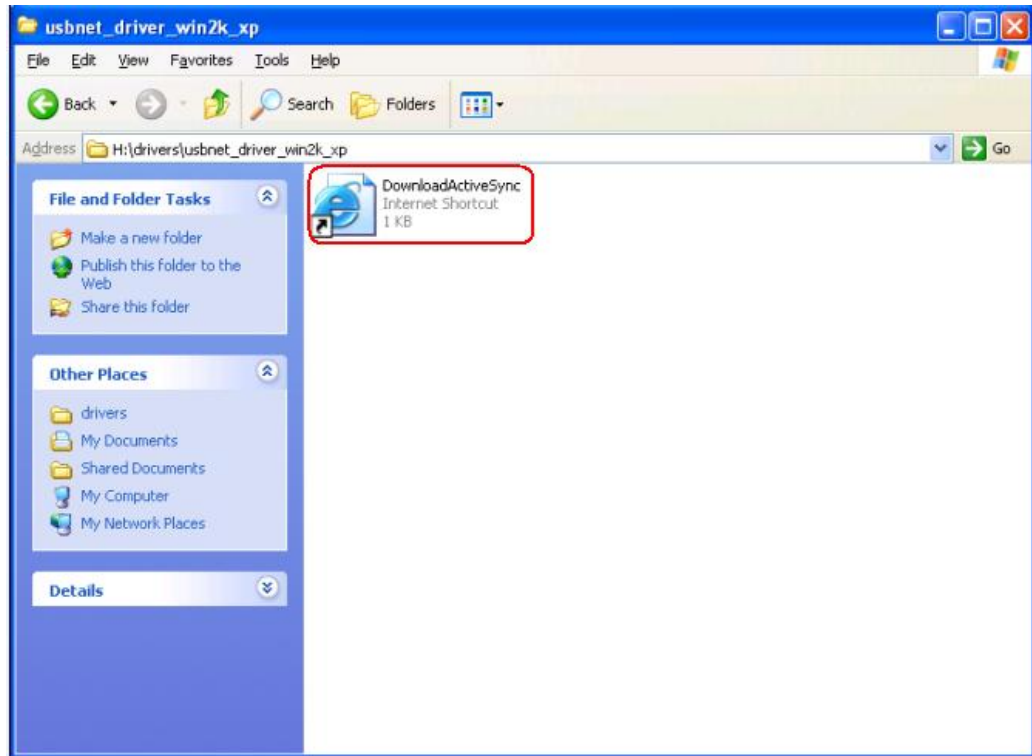

 Connect the mobile phone (SIM/USIM card inserted) to the PC. Touch **Settings > Wireless & networks > Tethering & portable hotspot > USB tethering**.

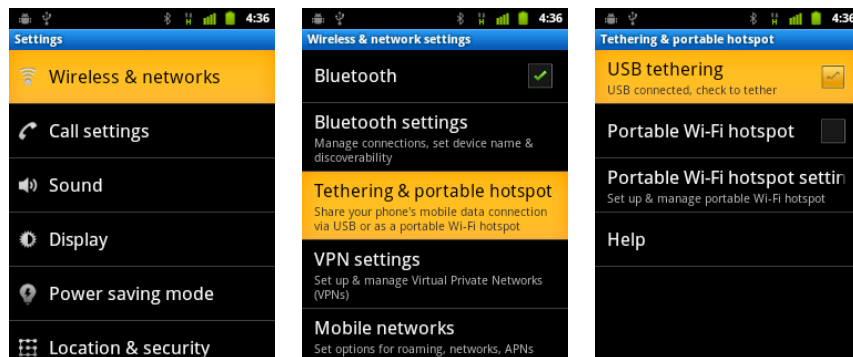

You can now browse the Internet

2.6.2 How do I use USB tethering in the Windows Vista and Windows 7 operating systems?

Connect the phone to the PC using a USB cable. Windows 7 and Windows Vista will automatically install the driver.

 
Touch **Settings > Wireless & networks > Tethering & portable hotspot > USB tethering**. Check the network adapters and network and sharing center.

You can now open the web browser and browse the Internet.

2.7 Ringtone Settings


2.7.1 How do I set the incoming call ringtone?

Incoming call ringtone: Touch  > **Settings** > **Sound** > **Phone ringtone**.

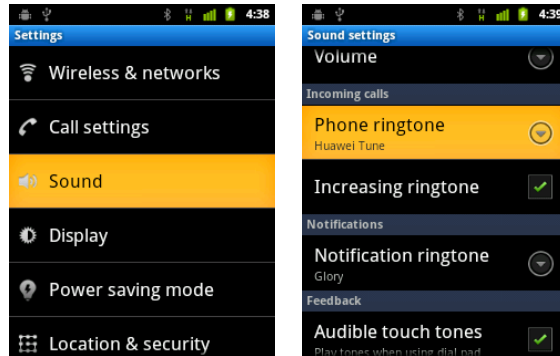


2.7.2 How do I set incoming call and message vibration?

 1. Incoming call vibration: Touch  > **Settings** > **Sound** > **Vibrate**.

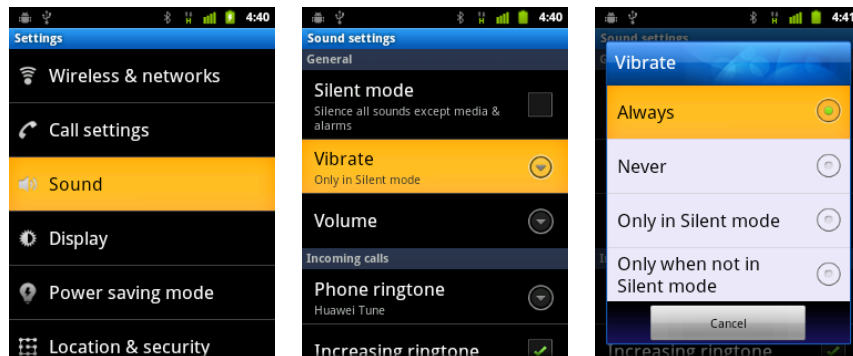


 2. Message vibration: In **Messaging**, press  and touch **Settings** > **Vibrate**.

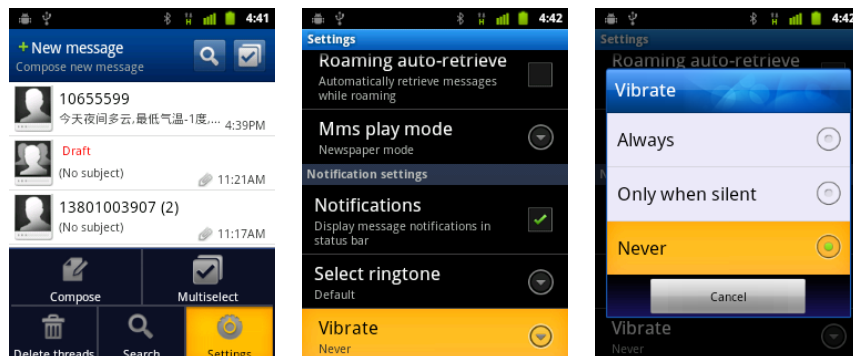

2.7.3 How do I set music of my choice as a ringtone for incoming calls or messages?

 1. Incoming call ringtone: In **Music**, press and hold any song and touch **Use as phone ringtone**.

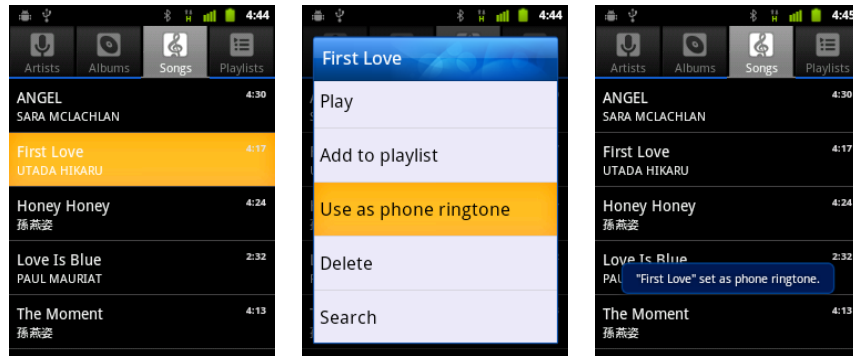

2. Message ringtones cannot be customized.

2.7.4 If music on my SD card is set as my ringtone, will the song still be set as my ringtone, if I eject the SD card?

No. It will be set to the default ringtone and this ringtone is not in the phone ringtone list. After you re-insert the SD card, the phone ringtone will return to the customized ringtone.

2.8 Language and Keyboard

2.8.1 How do I change the phone language?

Touch  > **Settings** > **Language & keyboard** > **Select language** and select the phone language.

2.8.2 How will I do if I am unable to select my desired language?

 
When your phone support your desired language but you are unable to select the language on the phone, insert the SIM card of your desired language. Then, touch  > **Settings** > **Privacy** > **Factory data reset**.

2.8.3 Why am I unable to use the input method after the input software is successfully installed?

After installing an input software, you must check the input method: Touch **Settings** > **Language & keyboard** and check the new input method.

2.8.4 How do I change the font size?

1. You are able to set the text size in Browser: Touch **Browser** and open a web page, and then touch  > **More** > **Settings** > **Text size**.

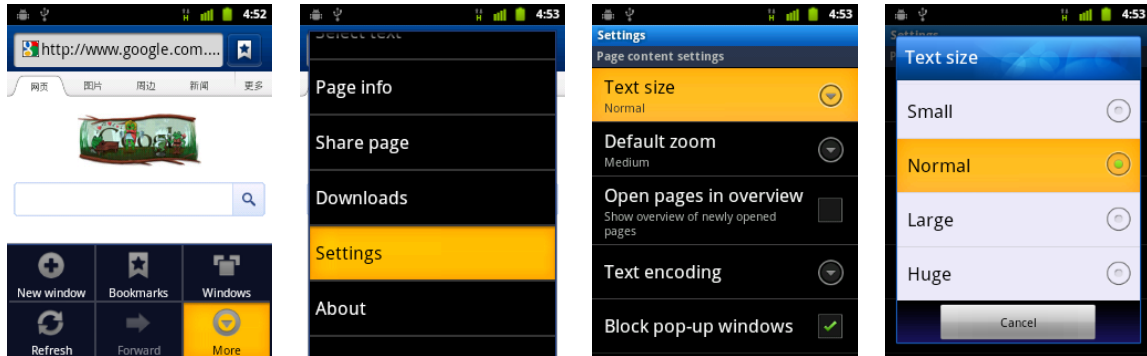


2. The text size on the desktop and phone menus are not allowed to be changed.


2.9 Unlock Pattern

2.9.1 How do I set the screen unlock?

 
1. Touch  > **Settings** > **Location & security** > **Set up screen lock** > **Pattern**. Follow the on-screen instructions.

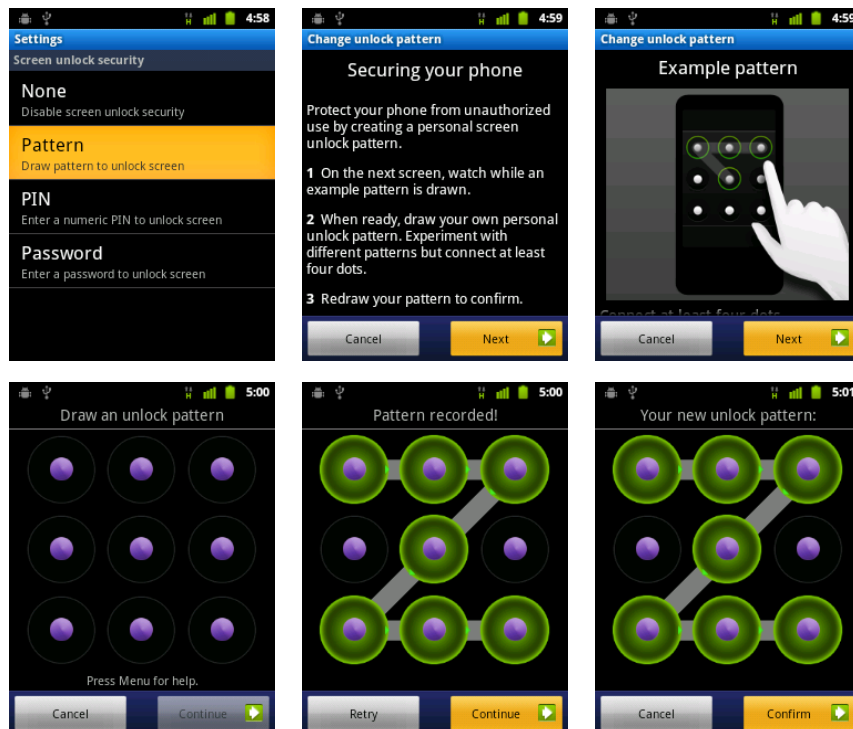

 2. Touch  > **Settings** > **Location & security** > **Set up screen lock** > **PIN**. Follow the on-screen instructions

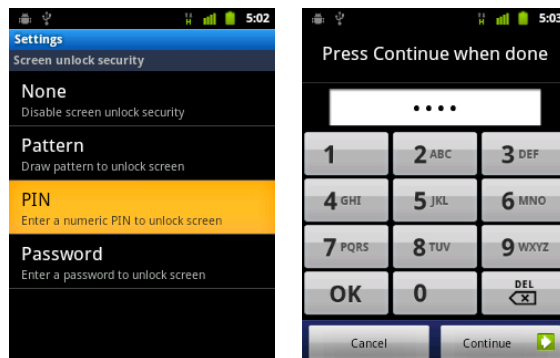

 3. Touch  > **Settings** > **Location & security** > **Set up screen lock** > **Password**. Follow the on-screen instructions.

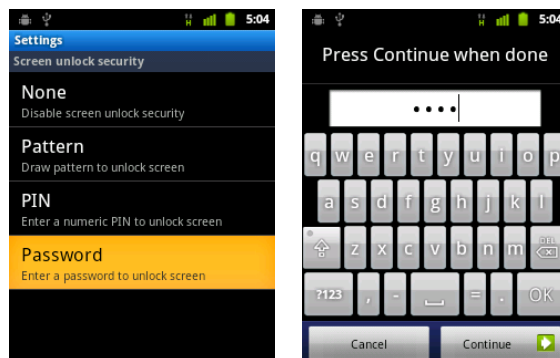

2.9.2 How to unlock your mobile phone if you forget the lock pattern?

If you lose the screen lock password. If you have already created a Google account, you can unlock your mobile phone by the following methods.

- After you have entered the wrong sequence five times, a **Forgot pattern?** button will appear. Touch this button to enter the Google account interface. After you have entered your Google account password, you will be able to reset the unlock pattern.
- After you have entered the wrong pattern twenty times, you will be taken directly to the Google account interface. After you have entered your Google account password, you will be able to reset the unlock pattern.

If you have not created a Google account, the phone will be permanently locked and unusable. You can download U8651T version software from the Huawei Website, (<http://www.huaweidevice.com/worldwide/technicalIndex.do>), to upgrade your phone.

Please refer to **2.1 Force upgrade**.

3 Applications

3.1 What are the third-party applications supported by an Android phone?

 
All applications based on the Android OS are allowed to be installed on your phone.

Java applications, however, are not supported on Android phones.

3.2 How do I get third-party applications?

1. Log in to Android Market to download third party applications. For example, you can download and install angry birds.

Register for a Google account, access the market, and click the search bar to search for angry birds. After the application is found through the search, just touch **Download**.

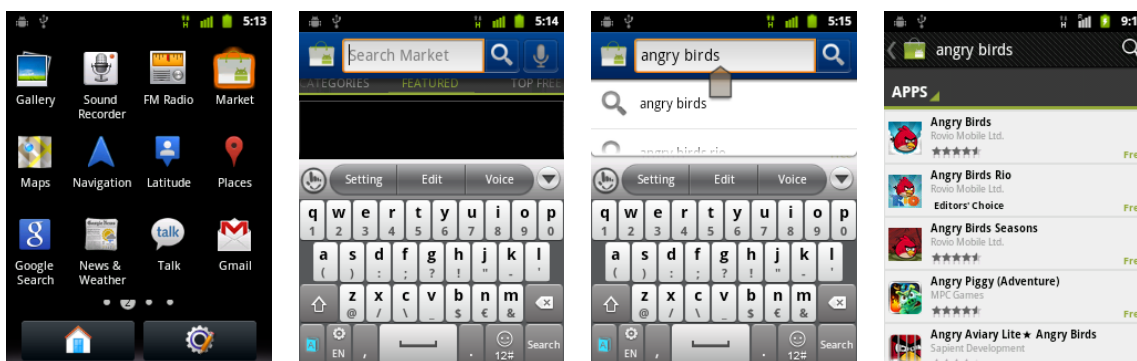


3.3 How do I install, manage, and uninstall applications?

3.3.1 How do I install applications?


1. Touch  > **Settings** > **Applications**. Check **Unknown sources**.

 - Download applications from Market and applications would install automatically; or touch **angry birds** to get downloaded applications and start to install them.

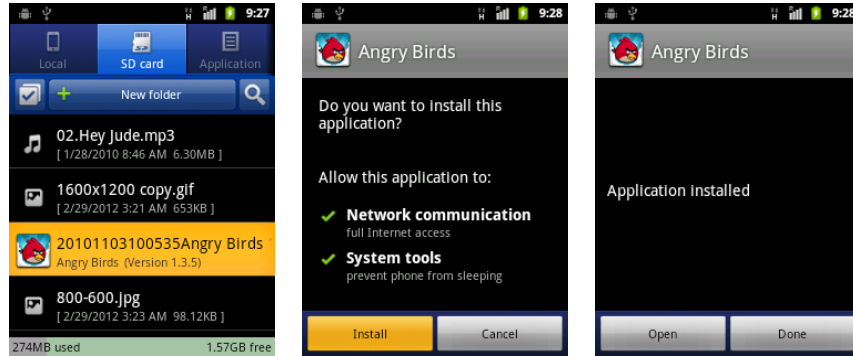

3.3.2 How do I manage applications?

 
- Touch  > **Settings** > **Applications** > **Manage applications**.

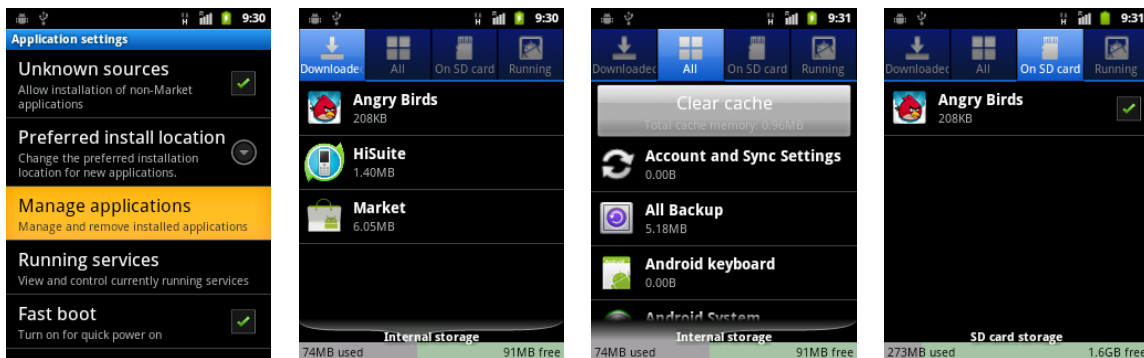

- All applications on your phone are listed. Touch any application to manage it.

3.3.3 How do I uninstall applications?

 Touch  > **Settings** > **Applications** > **Manage applications**. Touch an application and touch **Uninstall**.

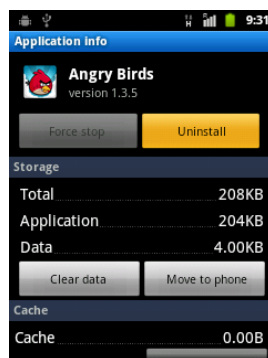

3.4 Why am I unable to install an application and how to solve the problem?

1. The application has defects.
2. The application is already installed. You need to uninstall it first.
3. The phone has insufficient memory.

4 Data Backup and Restoration

 
 
4.1 What data can be backed up on my phone?

1. Contacts: Back up contacts on your phone Contacts.
2. Calendar: (use third party applications)
3. Common data: Via third-party applications.

4.2 How do I back up and restore contacts in phone Contacts?

4.2.1 How do I back up contacts to SD card?


Touch  > **Contacts** >  > **Manage contacts** > **Backup to SD card**. All contacts in **Contacts** are saved to the root directory in the SD card in **.vcf** format.

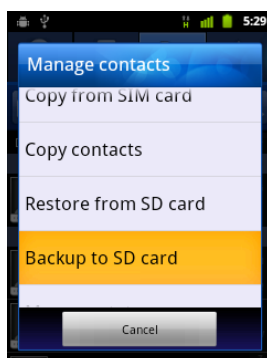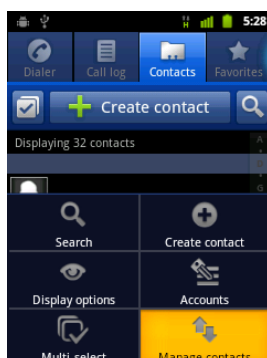



4.2.2 How do I restore contacts from SD card to phone?

 1. Use a file manager to open the root directory in the SD card. Touch the .vcf files and restore the contacts to **Contacts**.
2. Touch  > **Contacts** >  > **Manage contacts** > **Restore from SD card**. Select the .vcf files to be restored and restore them to **Contacts**.

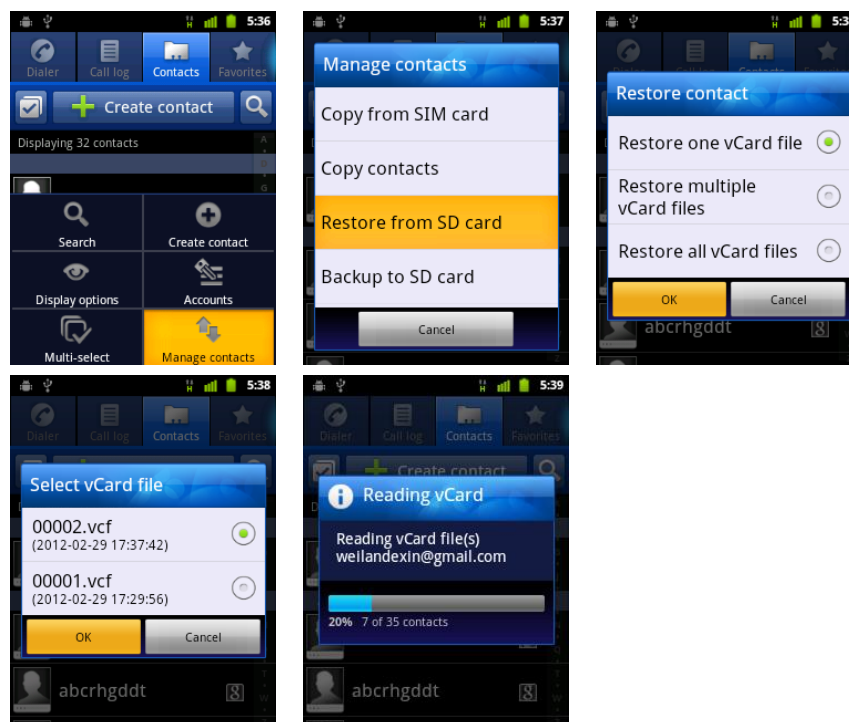

4.3 How do I use third-party applications to synchronize data?

1. Download a backup application from Android Market.
2. Install it on the phone.

3. Use the application to back up contacts, call logs, text messages, multimedia messages, calendar, bookmarks, alarm, dictionary, music, and third-party applications.

5 Others

5.1 How do I examine files on my SD card?

Touch  > **File Manager** > **SD card** , examine content on your SD card.

5.2 What are the common skills?

5.2.1 How do I quickly add a shortcut to the home screen?

Touch  , touch and hold the application to be added as a shortcut, and place it in any place on the home screen.

5.2.2 How do I use other applications during a call?

1. During a call, press  to exit the **Current call** screen. The call will not stop.
2. Touch any application, for example, use contacts or check messages.

5.2.3 How do I set the alarm to ring when the phone is powered off?

You can set alarm before you power off the phone ,the phone will power on self-motion and then the alarm will ring on time

5.2.4 How do I set my phone to vibrate or mute quickly?

1. From the home screen or main menu screen (other than when you are playing multi-media files), press and hold the volume down button. The vibration mode follows the silent mode.
2. Touch **Settings** > **Sound** > **Vibrate** to set the phone to vibrate. To mute the phone, select **Volume**, which is on the same menu page as the **Vibrate** option, and then drag the volume bar all the way to the left.

5.2.5 Am I able to switch the orientation of the screen when rotating the phone?

Yes. You are able to switch the orientation when you rotate your phone 90 degrees counterclockwise.

5.3 How do I maximize the battery life?

1. Press Power key to lock the screen when you do not use the phone.
2. Set the screen timeout to the smallest value: Touch  > **Settings** > **Display** > **Screen timeout**.
3. Set the screen brightness to a lower degree: Touch  > **Settings** > **Display** > **Brightness**.
4. Turn off Bluetooth and Wi-Fi: Touch  > **Settings** > **Wireless & networks** and uncheck **Wi-Fi** and **Bluetooth**.
5. Disable background data synchronization: Touch  > **Settings** > **Accounts & sync** and uncheck **Background data** and **Auto-sync**.
6. Disable data service: Touch  > **Settings** > **Wireless & networks** > **Mobile networks** and uncheck **Data enabled**.
7. Disable GPS: Touch  > **Settings** > **Location & security** and uncheck **Use GPS satellites**.
8. Use only 2G networks: Touch  > **Settings** > **Wireless & networks** > **Mobile networks** > **Network Settings** and check **Use only 2G networks**.

5.4 How do I save data traffic?

1. Disable data service when it is not used.
2. Disable data service in a Wi-Fi environment.
3. Use a WAP website instead of a www website.
4. Disable data service: Touch  > **Settings** > **Wireless & networks** > **Mobile networks**, and then uncheck **Data enabled**.
5. Disable background data synchronization: Touch  > **Settings** > **Accounts & sync** and uncheck **Background data** and **Auto-sync**.