

F7200

Get Started Guide

PTT

Push to Talk Capable



Speakerphone



Mobile Instant Messaging (IM)

 


Stylish Slider Keypad



PHONE OVERVIEW



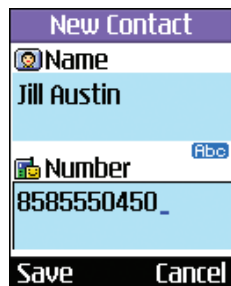


PUSH TO TALK

After initializing PTT, add individuals or groups to your PTT contact list so you can place a PTT call. Individuals and group members must subscribe to the Cingular PTT service.

> Adding a Push to Talk Contact

1. From standby mode, press the **Left Soft Key** for **Menu**, select **Push to Talk (6)**, and press **OK**.
2. Select **Add Contact (2)** and press **OK**.
3. Enter the name of the contact and the phone number and press **OK**.
4. When the contact is confirmed as a valid PTT subscriber, an invitation is sent out which the other user must accept. You will see a while the invitation is in progress.

 Note: You can create up to 99 PTT contacts.

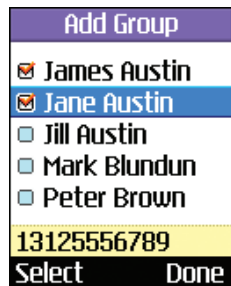

> Adding a Push to Talk Group

1. From standby mode, press the **Left Soft Key** for **Menu**, select **Push to Talk (6)**, and press **OK**.
2. Select **Add Group (3)** and press **OK**.
3. Enter the name that you would like to call the group and press **OK**.
4. Choose **Select In Contacts (1)** and press **OK**. (Choose **New Contact (2)** to add any missing contacts.)
5. Highlight each contact you want in the group and press **OK** to select. When finished, press the **Right Soft Key** for **Done**. An invitation to join the group will be sent to each contact.
6. When the first contact accepts, the group's icon will change from (in progress) to (group available).

Note: You can create up to 30 PTT groups and have 20 members in each group.



> Making a Push to Talk Call

 
1. Push and quickly release the **PTT Key** to access your contact list.
2. Select the contact or group you want to call. Make sure the contact or group shows Available or Silent/Vibrate.
3. Press and *hold* the **PTT Key** to activate the call. A tone will immediately play indicating you have the floor and may begin speaking. Release the **PTT Key** when you are done speaking.
4. To end a session, press the **End Key** . (You'll be automatically disconnected if there is no activity for 30 seconds.)

OTHER VOICE FEATURES

Activating Speakerphone

1. During a call, press and *hold* the side **Speakerphone Key** until you see the icon on the screen.
2. Press and *hold* the side **Speakerphone Key** a second time to return to normal conversation.

Warning! Due to higher volume levels, don't place the phone near your ear while the speakerphone is enabled.

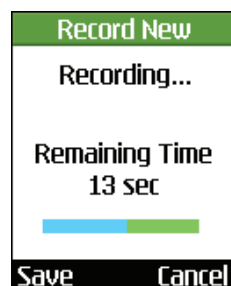

> Recording a Voice Memo

1. Press the **My MEdia** (left) on the Navigation Key, and select **Tools (6)**.
2. Select **Voice Memo (3)** and press **OK**.
3. Press the **Left Soft Key** for **New** and start recording immediately. You have 30 seconds to record the memo.
4. Once you've finished recording, press the **Left Soft Key** for **Save**.

Note: Recorded voice memos can be found in the main menu under **My MEdia (7) > Tools (6) > Voice Memo (3)**.

CONNECTIVITY FEATURES



> Purchasing and Downloading New Content from MEdia Mall

1. From standby mode, press the **Left Soft Key** for **Menu**, select **MEdia Mall (4)**, and press **OK**.
2. Select a category that you would like to download content from (ringtones, games, graphics, multimedia, or applications), and press the **Left Soft Key** for **Connect**.

Note: Downloaded games, ringtones, and graphics are stored in the main menu under **My MEdia (7)**.



 
Accessing the Web

1. Press and **hold** the **OK/Web Key**  until you see the “MEdia Net Connecting” screen.
2. Once connected, choose a category and press **OK**.
3. Press the **End Key**  to end your browsing session, then press the **Left Soft Key** for **Yes** to confirm.

MESSAGING

Signing On to Instant Messaging


1. Press the **Right Soft Key** for **IM**, select an IM provider and press **OK**.
2. Sign on to enter your Screen Name/ID and password and press **OK**.

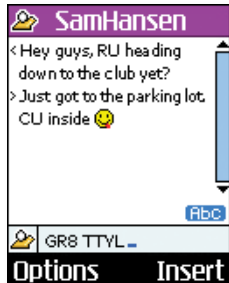

Sending an Instant Message

A color icon will appear next to the screen names that are currently online.

 1. Use the Navigation Key to select the name you'd like to chat with and press **OK**.
2. Enter your message in the blue area at the bottom of the screen and press **OK** to send.
3. Your sent message will appear in the main message area with a left-facing carat/arrow. Incoming replies will be marked with a right-facing carat/arrow.
4. To end your conversation, press the **Left Soft Key** for **Options** and select **End Conversation (3)**.
5. To log out of your IM community, return to your contact screen, press the **Left Soft Key** for **Options**, select **Sign Off /Sign Out**, and choose **Yes**.

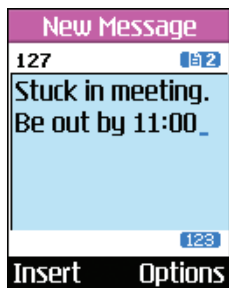

Sending a Text Message

1. Press the **Text Message**  icon (up) on the Navigation Key and enter the message (up to 160 characters) using the keypad, and press **Right Soft Key** for **Options** when done.
2. Select **Send to Number (1)** or **Send to Email (2)** and press **OK**. Press the **Left Soft Key** for **Contacts** to select a recipient, or use the keypad to enter a phone number or e-mail address. Up to 5 recipients can be added.
3. Press the **Left Soft Key** for **Send**.

Sending a Multimedia Message

1. From standby mode, press the **Left Soft Key** for **Menu**, select **Messaging (2)**, and select **Multimedia Messages (3)**.
2. Select **New Message (1)** and press **OK**.
3. Select **New** and press **OK**.
4. Use the keypad to enter a text message, and scroll using the Navigation Key to add an image (that you have downloaded) or a sound (choose from the list or record your own) by pressing the **Left Soft Key** for **Select**.
5. Once your message is complete, press the **Right Soft Key** for **Menu**, then select **Send (1)**.
6. Press the **Left Soft Key** for **Select** to choose phone numbers or e-mail addresses from the Address Book. Or scroll down to enter a phone number or e-mail address and press the **Left Soft Key** for **Done**.
7. Press the **Right Soft Key** for **Menu** and select **Send MMS (1)** to send.



CUSTOMIZABLE FEATURES



Changing the Ringtone

1. From standby mode, press the **Left Soft Key** for **Menu**, select **Settings (9)**, and select **Sounds (1)**.
2. Select **Ringtones (2)**.
3. Choose from the list of available default or downloaded ringtones and press **OK**.

Adjusting Volume Settings

Ringer Volume: While in standby mode, press the side volume keys to adjust the ringer volume.

Earpiece Volume: During a conversation, press the side volume keys to adjust the earpiece volume.

Silent Mode: While in standby mode, press the lower volume key until it reads Silent to mute all sounds.

Changing the Wallpaper Image

 
1. From standby mode, press the **Left Soft Key** for **Menu**, select **Settings (9)**, select **Display (2)**.
2. Select **Wallpaper (1)**.
3. Press **left** or **right** on the Navigation Key to select a default graphic, or download more from MEdia Mall, and press **OK**.

PERSONAL INFORMATION TOOLS




Scheduling an Event

1. Press the **My MEdia**  icon (left) on the Navigation Key, and select **Tools (6)**.
2. Select **Calendar (2)** and press **OK**.
3. Highlight the event date using the Navigation Key and press **OK**. To quickly jump from month to month, press the * or # keys.
4. Add an event by pressing the **Left Soft Key** for **New**. You may set the appropriate subject, event time, recurrence (if any), and alarm by scrolling to the corresponding field, and entering the desired information.
5. Press the **Left Soft Key** for **Save**.

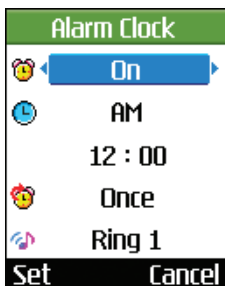

Scheduling an Alarm

 1. Press the **My MEdia**  icon (left) on the Navigation Key, and select **Tools (6)**.
2. Select **Alarm Clock (1)** and press **OK**.
3. Press **left** or **right** on the Navigation Key to select **On** and set the appropriate time, recurrence (if any) and alarm tone by scrolling to the corresponding field.
4. Press the **Left Soft Key** for **Set**.

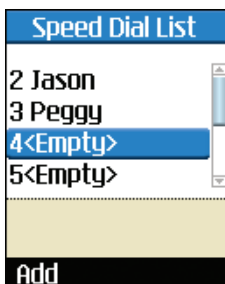

To set speed dial...

3. After step 2 above, from the Address Book menu, select **Speed Dial List (3)**.
4. Select an <Empty> speed dial number (2-9) and press **OK**.
5. Highlight the contact and press **left** or **right** on the Navigation Key to select the phone number you'd like to create a speed dial for, then press **OK**.

Note: To dial a speed dial number, press and *hold* the # key.



To set voice dial...

3. After step 2 above, from the Address Book menu, select **Voice Dial List (4)**.
4. Press the **Left Soft Key** for **Add** when creating your first voice dial.
5. Highlight the contact and press **left** or **right** on the Navigation Key to select the phone number you'd like to create a voice dial for, then press **OK**.

6. You will be prompted twice to say your contact's name.

Note: To initiate voice-activated dialing, press and *hold* the # key while in standby mode. When prompted, say the name of the contact you want to call.

OTHER NOTABLE SETTINGS

Vibrate Mode

1. From standby mode, press and *hold* the **Vibrate Mode Key (*)** for 3 seconds. The phone will vibrate when activated. When set, the vibrate icon  will appear on the idle screen.
2. To turn off Vibrate Mode, press and *hold* the * key until "**Normal Mode**" is displayed.

MENU TREE

RECENT CALLS (1)  1. Missed Calls 2. Dialed Calls 3. Received Calls 4. Delete Recent Calls 5. Call Duration 6. Data Information > 1. Web Data > 2. Data Call > 3. Total Data	GAMES & APPS (3)  1. Shop Games 2. Games & Apps 3. Favorites 4. Information	MY MEDIA (7)  1. Favorites 2. Games & Apps 3. Ringtones/Audio 4. Graphics 5. Multimedia 6. Tools > 1. Alarm Clock > 2. Calendar > 3. Voice Memo > 4. Calculator > 5. Notepad > 6. World Clock > 7. Unit Converter	SETTINGS (9)  1. Sounds > 1. Shop Ringtones > 2. Ringtones > 3. Volume > 4. Ring Alert Type > 5. Message Alert Tones > 6. Key Tones > 7. Slider Tone > 8. Voice Memo 2. Display > 1. Wallpaper > 2. Backlight Timer > 3. Languages > 4. Menu Style 3. Date & Time 4. Call > 1. Call Forwarding > 2. Answer Mode > 3. Send My Number > 4. Call Waiting > 5. Minute Minder > 6. Voice Dial > 7. Auto Redial > 8. Send DTMF Tones 5. Security > 1. Request PIN Code > 2. Auto Key Lock > 3. Fixed Dial Number > 4. Change Codes 6. Connection > 1. GPRS Attach > 2. Network Profile > 3. Reset Network Profile 7. Reset Default
MESSAGING (2)  1. IM 2. Text Messages > 1. New Message > 2. Inbox > 3. Sent > 4. Drafts > 5. Settings > 6. Delete All 3. Multimedia Messages > 1. New Message > 2. Inbox > 3. Outbox > 4. Sent > 5. Drafts > 6. Settings 4. Voice Mail 5. Download Messages > 1. Inbox > 2. Receive 6. Chat 7. Templates > 1. Text > 2. Multimedia > 3. Business Card 8. Check Memory > 1. Text > 2. Multimedia	MEDIA MALL (4)  1. Shop Ringtones 2. Shop Games 3. Shop Graphics 4. Shop Multimedia 5. Shop Applications 6. MEdia Net Home	MEDIA NET (5)  1. MEdia Net Home 2. Favorites 3. Go to URL 4. Network Profile 5. Cache Settings 6. Security Certificates 7. Information	ADDRESS BOOK (8)  1. Contacts 2. New Contact 3. Speed Dial List 4. Voice Dial List 5. Caller Groups 6. Copy All Contacts > 1. Smart Chip To Phone > 2. Phone To Smart Chip 7. Delete All Contacts 8. Set Save Location > 1. Ask Always > 2. SmartChip > 3. Phone 9. Information > 1. Service Dial Number > 2. Check Memory > 3. My Numbers
PUSH TO TALK (6)  1. PTT Contacts 2. Add Contact 3. Add Group 4. PTT Settings > 1. My Availability > Do Not Disturb > Available > 2. Contact Alerts > 3. Set Your Name > 4. Auto Accept Invites > Disable All > Contact Only > Group Only > Enable All > 5. PTT is On/Off 5. Pending Invitations*			



*Dynamic menu