



***muziq***<sup>TM</sup> by LG® SPRINT POWER VISION<sup>SM</sup>



PHONE USER GUIDE



## **Phone User Guide**

**Sprint Power Vision<sup>SM</sup> Phone**  
**Muziq<sup>TM</sup> by LG<sup>®</sup>**

**[www.sprint.com](http://www.sprint.com)**

© 2007 Sprint Nextel. All rights reserved. No reproduction in whole or in part without prior written approval. SPRINT, the NEXTEL name and logo, and other trademarks are trademarks of Sprint Nextel.

Printed in the U.S.A.

# Table of Contents

---

|                                                 |            |
|-------------------------------------------------|------------|
| <b>Welcome to Sprint</b>                        | <b>i</b>   |
| <b>Introduction</b>                             | <b>ii</b>  |
| <b>Your Phone's Menu</b>                        | <b>iii</b> |
| <b>Getting Started</b>                          | <b>1</b>   |
| <b>Setting Up Service</b>                       | <b>2</b>   |
| Getting Started With Sprint Service             | 3          |
| Setting Up Your Voicemail                       | 4          |
| Sprint Account Passwords                        | 5          |
| Getting Help                                    | 6          |
| <b>Your Phone</b>                               | <b>9</b>   |
| <b>Your Phone: The Basics</b>                   | <b>10</b>  |
| Front View of Your Phone                        | 11         |
| Viewing the Display Screen                      | 14         |
| Features of Your Phone                          | 16         |
| Turning Your Phone On and Off                   | 18         |
| Using Your Phone's Battery and Charger          | 19         |
| Navigating Through Phone Menus                  | 22         |
| Displaying Your Phone Number                    | 23         |
| Making and Answering Calls                      | 24         |
| Entering Text                                   | 35         |
| Playing Music Using the External Navigation Pad | 40         |
| Playing Music on Your Phone                     | 41         |
| <b>Controlling Your Phone's Settings</b>        | <b>44</b>  |
| Sound Settings                                  | 45         |
| Display Settings                                | 48         |
| Location Settings                               | 54         |
| Messaging Settings                              | 55         |
| Airplane/Music Mode                             | 58         |
| TTY Use With Sprint Service                     | 59         |
| Phone Setup Options                             | 61         |

|                                             |           |
|---------------------------------------------|-----------|
| <b>Setting Your Phone's Security</b>        | <b>64</b> |
| Accessing the Security Menu                 | 65        |
| Using Your Phone's Lock Feature             | 65        |
| Using Special Numbers                       | 67        |
| Erasing the Contacts List                   | 67        |
| Restricting Your Phone                      | 68        |
| Resetting Favorites                         | 69        |
| Resetting Your Picture Mail Account         | 69        |
| Resetting Default Settings                  | 70        |
| Resetting Your Phone                        | 70        |
| <b>Controlling Your Roaming Experience</b>  | <b>71</b> |
| Understanding Roaming                       | 72        |
| Setting Your Phone's Roam Mode              | 74        |
| Using Call Guard                            | 75        |
| Using Data Roam Guard                       | 76        |
| <b>Managing Call History</b>                | <b>77</b> |
| Viewing History                             | 78        |
| Call History Options                        | 79        |
| Making a Call From Call History             | 80        |
| Saving a Phone Number From Call History     | 80        |
| Prepending a Phone Number From Call History | 81        |
| Erasing Call History                        | 82        |
| <b>Using Contacts</b>                       | <b>83</b> |
| Adding a New Contacts Entry                 | 84        |
| Finding Contacts Entries                    | 85        |
| Contacts Entry Options                      | 87        |
| Adding a Phone Number to a Contacts Entry   | 88        |
| Editing a Contacts Entry's Phone Number     | 88        |
| Assigning Speed Dial Numbers                | 89        |
| Editing a Contacts Entry                    | 90        |
| Selecting a Ringtone Type for an Entry      | 90        |
| Send All Contacts                           | 91        |
| Dialing Sprint Services                     | 92        |

|                                                          |            |
|----------------------------------------------------------|------------|
| Wireless Backup .....                                    | 93         |
| <b>Using the Phone's Calendar and Tools .....</b>        | <b>96</b>  |
| Using Your Phone's Calendar .....                        | 97         |
| Using Your Phone's Alarm Clock .....                     | 100        |
| Using Your Phone's Notepad .....                         | 102        |
| Using Your Phone's Tools .....                           | 102        |
| <b>Using Your Phone's Voice Services .....</b>           | <b>104</b> |
| Using Voice-Activated Dialing .....                      | 105        |
| Using Call [Name] [Type]/[Number] .....                  | 106        |
| Using Send Msg to [Name] [Type]/[Number] .....           | 108        |
| Using Find Contact [Name] [Type] .....                   | 109        |
| Managing Voice Memos .....                               | 110        |
| <b>Using the microSD Card .....</b>                      | <b>112</b> |
| Using Your Phone's microSD Card and Adapter .....        | 113        |
| microSD Settings .....                                   | 115        |
| microSD Folders .....                                    | 116        |
| Transfer Music .....                                     | 117        |
| <b>Using the Music Composer and FM Transmitter .....</b> | <b>118</b> |
| Composing a Melody .....                                 | 119        |
| Music Transmitter .....                                  | 121        |
| <b>Using Your Phone's Built-in Camera .....</b>          | <b>122</b> |
| Taking Pictures .....                                    | 123        |
| Storing Pictures .....                                   | 129        |
| Recording Videos .....                                   | 134        |
| Sending Sprint Picture Mail .....                        | 137        |
| Managing Sprint Picture Mail .....                       | 140        |
| Storing Videos .....                                     | 144        |
| Printing Pictures Using PictBridge .....                 | 144        |
| Settings and Info .....                                  | 146        |
| <b>Using Bluetooth .....</b>                             | <b>147</b> |
| Turning Bluetooth On and Off .....                       | 148        |
| Using the Bluetooth Settings Menu .....                  | 149        |
| Bluetooth Profiles .....                                 | 151        |

|                                                        |            |
|--------------------------------------------------------|------------|
| Pairing Bluetooth Devices .....                        | 153        |
| <b>Sprint Service Features .....</b>                   | <b>157</b> |
| <b>Sprint Service Features: The Basics .....</b>       | <b>158</b> |
| Using Voicemail .....                                  | 159        |
| Using SMS Text Messaging .....                         | 167        |
| Using SMS Voice Messaging .....                        | 170        |
| Using Caller ID .....                                  | 172        |
| Responding to Call Waiting .....                       | 173        |
| Making a Three-Way Call .....                          | 174        |
| Using Call Forwarding .....                            | 175        |
| <b>Sprint Music and Your Player .....</b>              | <b>176</b> |
| Using the Sprint Music Manager .....                   | 177        |
| Multitasking Using Muziq .....                         | 185        |
| <b>Sprint Voice Command .....</b>                      | <b>188</b> |
| Getting Started With Sprint Voice Command .....        | 189        |
| Creating Your Own Address Book .....                   | 190        |
| Making a Call With Sprint Voice Command .....          | 191        |
| Accessing Information Using Sprint Voice Command ..... | 192        |
| <b>Safety and Warranty Information .....</b>           | <b>193</b> |
| <b>Important Safety Information .....</b>              | <b>194</b> |
| General Precautions .....                              | 195        |
| Maintaining Safe Use of and Access to Your Phone ..... | 195        |
| Using Your Phone With a Hearing Aid Device .....       | 198        |
| Caring for the Battery .....                           | 199        |
| Radio Frequency (RF) Energy .....                      | 200        |
| Owner's Record .....                                   | 202        |
| Phone Guide Proprietary Notice .....                   | 202        |
| <b>Manufacturer's Warranty .....</b>                   | <b>203</b> |
| Manufacturer's Warranty .....                          | 204        |
| <b>Index .....</b>                                     | <b>207</b> |



# Welcome to Sprint

---

Sprint and Nextel have come together offering you more choice and flexibility to do whatever you want, whenever you want.

This powerful combination brings you access to more products, more services, and more of what you need to do more of what you want.

**Welcome and thank you for choosing Sprint.**

# Introduction

---

This **Phone Guide** introduces you to Sprint service and all the features of your new phone. It's divided into four sections:

- ◆ **Section 1:** Getting Started
- ◆ **Section 2:** Your Phone
- ◆ **Section 3:** Sprint Service Features
- ◆ **Section 4:** Safety and Warranty Information

Throughout this guide, you'll find tips that highlight special shortcuts and timely reminders to help you make the most of your new phone and service. The Table of Contents and Index will also help you quickly locate specific information.

You'll get the most out of your phone if you read each section. However, if you'd like to get right to a specific feature, simply locate that section in the Table of Contents and go directly to that page. Follow the instructions in that section, and you'll be ready to use your phone in no time.

---

**Phone Guide Note:** Due to updates in phone software, this printed guide may not be the most current version for your phone. Visit [www.sprint.com](http://www.sprint.com) and sign on to **My Sprint Wireless** to access the most recent version of the phone guide.

---

---

**WARNING:** Please refer to the **Important Safety Information** section on page 194 to learn about information that will help you safely use your phone. Failure to read and follow the Important Safety Information in this phone guide may result in serious bodily injury, death, or property damage.

---

# Your Phone's Menu

---

The following list outlines your phone's menu structure. For more information about using your phone's menus, see "Navigating Through Phone Menus" on page 22.

## 1. Web

## 2. Call History

- 1. Missed Calls
  - 2. Incoming Calls
  - 3. Outgoing Calls
  - 4. Recent Calls
  - 5. Delete Call History
1. Missed Calls / 2. Incoming Calls /  
3. Outgoing Calls / 4. Recent Calls /  
5. All Calls

## 3. Sprint TV

## 4. On Demand

## 5. Missed Alerts

## 6. Music

## 7. My Content

Application Manager

Games

Get New / My Content Manager /  
Midnight Bowling / Ms. PAC-MAN  
DEMO by Namco / Rock Empire Demo /  
Tetris Demo Pack / World Series of Poker

Themes

Get New / My Content Manager /  
Muziq / LG / Sprint Messaging

Ringers

Get New / My Content Manager

Screen Savers

Get New / My Content Manager

Applications

Get New / My Content Manager / NFL  
Mobile / Sprint Power View

IM & Email

Get New / My Content Manager /  
Instant Messaging

Call Tones

<Options>

Memory Status / Get New / My  
Content Manager

## 8. Messaging

- |                  |                                                                                                                                                                      |
|------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1. Send Message  | 1. Text Message / 2. VoiceSMS /<br>3. Picture Mail / 4. Email                                                                                                        |
| 2. Text Messages | 1. Inbox / 2. Sent / 3. Outbox / 4. Draft<br>5. Edit Folder / 6. Send Message                                                                                        |
| 3. Picture Mail  | Inbox/Sent Mail/Saved Mail/<br>Pending Messages                                                                                                                      |
| 4. VoiceSMS      |                                                                                                                                                                      |
| 5. Email         |                                                                                                                                                                      |
| 6. IM            | 1. AOL / 2. MSN / 3. Yahoo! / 4. Other                                                                                                                               |
| 7. Chat & Dating |                                                                                                                                                                      |
| 8. Voicemail     | 1. Call Voicemail / 2. Voicemail Details /<br>3. Clear Icon                                                                                                          |
| 9. Settings      | 1. Notification / 2. Message Reminder /<br>3. Callback Number / 4. Auto-Delete /<br>5. Delivery Receipt / 6. Signature /<br>7. Preset Messages / 8. VoiceSMS Options |
| 0. Premium Msgs  |                                                                                                                                                                      |

## 9. Tools

- |                        |                                                                                                                                                                                                                                 |
|------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1. Memory Card Manager |                                                                                                                                                                                                                                 |
| 2. Music Composer      | 1. Compose Melody / 2. My Melody /<br>3. Settings / 4. Help                                                                                                                                                                     |
| 3. Music Transmitter   |                                                                                                                                                                                                                                 |
| 4. USB Mode            | 1. Transfer Music / 2. Mass Storage /<br>3. Phone As Modem / 4. PictBridge                                                                                                                                                      |
| 5. Alarm Clock         | 1. Alarm 1 / 2. Alarm 2 / 3. Alarm 3 /<br>4. Quick Alarm / 5. Reset All<br><Add New>/<Settings>                                                                                                                                 |
| 6. Bluetooth           | 1. Calculator / 2. Ez Tip Calculator                                                                                                                                                                                            |
| 7. Calculator          | 1. Call [Name] [Type]/[Number]<br>2. Send Msg to [Name] [Type]/[Number]<br>/ 3. Find [Name] [Type] / 4. Missed<br>Alerts / 5. Voice Guide / 6. Phone Status<br>/ 7. Training / 8. Bookmark / 9. Help /<br>0. Exit Voice Control |
| 8. Voice Control       |                                                                                                                                                                                                                                 |
| 9. Scheduler           |                                                                                                                                                                                                                                 |
| 0. Voice Memo          |                                                                                                                                                                                                                                 |

- \*. Notepad
- #. World Clock

## 0. Contacts

1. Find/Add Entry
2. Speed Dial #'s
3. Groups
4. My Phone #
5. My Name Card
6. Services
7. Send All Contacts
8. Wireless Backup

1. Customer Service / 2. Dir Assistance /
3. Account Info / 4. Sprint Operator /
5. Voice Command / 6. Community Info /
7. Non Emergency / 8. Traffic Info /
9. Repair Service / 0. TTY Relay Service /
- \*. One Call Service

1. Subscribe / 2. Learn More

## \*. Pictures

1. Camera
2. Camcorder
3. Picture Mail
4. My Albums
5. PictBridge
6. Order Prints
7. Settings and Info

- Video Mail / Long Video  
Inbox / Sent Mail / Saved Mail /  
Pending Messages  
In Phone / Memory Card / Online Albums

- Auto-Save to / Account Info

## #. Settings

1. Display
  1. Main Screen
2. Outer Screen
3. Font Size
4. Keypad Light

1. Screen Saver / 2. Slide Show /
3. Multi-Tasking Alert / 4. Backlight /
5. Themes / 6. Skins / 7. Menu Styles /
8. Foregrounds / 9. Incoming Calls
1. Screen Saver / 2. Clock
1. Messaging / 2. Browser / 3. Notepad
- Always Off / 8 seconds / 15 seconds /
- 30 seconds

- |                 |                   |
|-----------------|-------------------|
| 5. Language     | English / Español |
| 6. Status Light | On / Off          |
2. Sounds
 

|                |                                                                                 |
|----------------|---------------------------------------------------------------------------------|
| 1. Volume      | 1. Ringer / 2. Earpiece / 3. Speakerphone / 4. Power On/Off / 5. Applications   |
| 2. Ringer Type | 1. Voice Calls / 2. Messages                                                    |
| 3. Alerts      | 1. Beep Each Minute / 2. Out of Service / 3. Connect / 4. Signal Fade/Call Drop |
| 4. Keytones    | 1. Tone Length / 2. Tone Volume                                                 |
  3. Airplane/Music Mode
  4. Bluetooth
 

|                        |                                             |
|------------------------|---------------------------------------------|
| 1. On/Off              | On / Off                                    |
| 2. Visibility          | Hidden / Visible for 3 min / Always Visible |
| 3. Device Name         |                                             |
| 4. Device Info         |                                             |
| 5. Exchange FTP Folder |                                             |
  5. Messaging
 

|                     |                                |
|---------------------|--------------------------------|
| 1. Notification     | Message & Icon / Icon Only     |
| 2. Message Reminder | On / Off                       |
| 3. Callback Number  | None / My Phone Number / Other |
| 4. Auto-Delete      | On / Off                       |
| 5. Delivery Receipt | On / Off                       |
| 6. Signature        | None / Custom                  |
| 7. Preset Messages  |                                |
| 8. VoiceSMS Options | Speakerphone / From Name       |
  6. Side Key Guard
 

|  |          |
|--|----------|
|  | On / Off |
|--|----------|
  7. Text Entry
 

|                     |          |
|---------------------|----------|
| 1. Auto-Capital     | On / Off |
| 2. Auto-Space       | On / Off |
| 3. Word Choice List | On / Off |
| 4. Word Prediction  | On / Off |
| 5. Word Completion  | On / Off |
| 6. Use My Words     | On / Off |
| 7. My Words         |          |
| 8. Help             |          |

- |                      |                                                                                                            |
|----------------------|------------------------------------------------------------------------------------------------------------|
| 8. Phone Information | 1. Phone Number / 2. Icon Glossary /<br>3. Version / 4. My Account / 5. Advanced                           |
| 9. More...           |                                                                                                            |
| 1. Accessibility     | 1. TTY / 2. Font Size / 3. Voice Guide                                                                     |
| 2. Call Setup        | 1. Auto-Answer / 2. Abbreviated Dialing /<br>3. Call Answer / 4. Contacts Match                            |
| 3. Data              | 1. On/Off / 2. Net Guard / 3. Update<br>Data Profile                                                       |
| 4. Location          | On / Off                                                                                                   |
| 5. Navigation Keys   | 1. Left Navigation / 2. Right Navigation /<br>3. Up Navigation / 4. Down Navigation                        |
| 6. Restrict and Lock | 1. Restrict Voice / 2. Lock Pictures /<br>3. Lock My Phone                                                 |
| 7. Roaming           | 1. Set Mode / 2. Call Guard /<br>3. Data Roaming                                                           |
| 8. Security          | 1. Lock My Phone / 2. Change Lock Code /<br>3. Special Numbers / 4. Edit Contacts List /<br>5. Erase/Reset |
| 9. Touch Key Vibrate | Off / On / Harder                                                                                          |
| 0. Update Phone S/W  |                                                                                                            |
| * . Wireless Backup  | 1. Subscribe / 2. Learn More                                                                               |



## Section 1

# Getting Started



# Setting Up Service

---

## In This Section

---

- ◆ **Getting Started With Sprint Service** (page 3)
  - ◆ **Setting Up Your Voicemail** (page 4)
  - ◆ **Sprint Account Passwords** (page 5)
  - ◆ **Getting Help** (page 6)
- 

**Setting up service on your new phone is quick and easy.** This section walks you through the necessary steps to unlock your phone, set up your voicemail, establish passwords, and contact Sprint for assistance with your Sprint service.

# Getting Started With Sprint Service

---

## Determining if Your Phone is Already Activated

If you purchased your phone at a Sprint Store, it is probably activated, unlocked, and ready to use. If you received your phone in the mail, it probably has been activated; all you need to do is unlock it.

If your phone is not activated, please refer to the activation card included with your phone.

## Unlocking Your Phone

To unlock your phone, follow these easy steps:

1. Press and hold  to turn the phone on.
2. Press **Unlock** (right softkey).

---

**Note:** To select a softkey, press the softkey button directly below the softkey text that appears at the bottom left and bottom right of your phone's display screen. Softkey actions change according to the screen you're viewing and will not appear if there is no corresponding action available.

---

3. Enter your four-digit lock code. (For security purposes, the code is not visible as you type.)

---

**Tip:** If you can't recall your lock code, try using the last four digits of your wireless phone number. If this doesn't work, call Sprint Customer Service at 1-888-211-4727.

---

# Setting Up Your Voicemail

---

All unanswered calls to your phone are automatically transferred to your voicemail, even if your phone is in use or turned off. Therefore, you will want to set up your voicemail and personal greeting as soon as your phone is activated.

**To set up your voicemail:**

1. From standby mode, press and hold  .
2. Follow the system prompts to:
  - Create your passcode
  - Record your name announcement
  - Record your greeting
  - Choose whether or not to activate One-Touch Message Access (a feature that lets you access messages simply by pressing and holding  , bypassing the need for you to enter your passcode)

---

## **Voicemail Passcode**

If you are concerned about unauthorized access to your voicemail account, Sprint recommends you enable your voicemail passcode.

---

For more information about using your voicemail, see “Using Voicemail” on page 159.

# Sprint Account Passwords

---

As a Sprint customer, you enjoy unlimited access to your personal account information, your voicemail account, and your Sprint Power Vision account. To ensure that no one else has access to your information, you will need to create passwords to protect your privacy.

## Account Password

If you are the account owner, you'll have an account password to sign on to [www.sprint.com](http://www.sprint.com) and to use when calling Sprint Customer Service. Your default account password is the last four digits of your Social Security number. If you are not the account owner (if someone else receives the bill for your Sprint service), you can get a sub-account password at [www.sprint.com](http://www.sprint.com).

## Voicemail Password

You'll create your voicemail password (or passcode) when you set up your voicemail. See "Setting Up Your Voicemail" on page 159 for more information on your voicemail password.

## Sprint Power Vision Password

With your MUZIQ by LG, you may elect to set up a Sprint Power Vision password. This optional password may be used to authorize the purchase of Premium Services content and also to protect personal information on multi-phone accounts.

For more information, or to change your passwords, sign on to [www.sprint.com](http://www.sprint.com) or call Sprint Customer Service at **1-888-211-4727**.

# Getting Help

---

## Visit [www.sprint.com](http://www.sprint.com)

You can go online to:

- Access your account information.
- Check your minutes used (depending on your Sprint service plan).
- View and pay your bill.
- Make your life easier by enrolling in Sprint online billing and automatic payment.
- Purchase accessories.
- Shop for the latest phones.
- View available Sprint service plans and options.
- Learn more about Sprint Power Vision and other great products like Sprint Picture Mail, games, ringers, screen savers, and more.

## Reaching Sprint Customer Service

You can reach Sprint Customer Service many different ways:

- Dial    on your phone
- Sign on to your account at [www.sprint.com](http://www.sprint.com)
- Call us toll-free at **1-888-211-4727** (Consumer customers) or **1-888-788-4727** (Business customers)
- Write to us at Sprint Customer Service, P.O. Box 8077, London, KY 40742

## Receiving Automated Billing Information

For your convenience, your phone gives you access to billing information on your Sprint account. This information includes balance due, payment received, invoicing cycle, and an estimate of the number of minutes used since your last invoicing cycle.

To access automated billing information:

▶ Press   .

---

**Note:** This service may not be available in all Affiliate areas.

---

## Sprint 411

Call     from your phone and you'll have access to a variety of services and information through Sprint 411, including residential, business, and government listings; movie listings or showtimes; driving directions, restaurant reservations, and major local event information. You can get up to three pieces of information per call, and the operator can automatically connect your call at no additional charge.

There is a per-call charge to use Sprint 411 and you will be billed for airtime.

To call Sprint 411:

▶ Press    .

## Sprint Operator Services

Sprint Operator Services provides assistance when placing collect calls or when placing calls billed to a local telephone calling card or third party.

**To access Sprint Operator Services:**

▶ Press  .

For more information or to see the latest in products and services, visit us online at [www.sprint.com](http://www.sprint.com).

## Section 2

# Your Phone



# Your Phone: The Basics

---

### In This Section

---

- ◆ **Front View of Your Phone** (page 11)
  - ◆ **Viewing the Display Screen** (page 14)
  - ◆ **Features of Your Phone** (page 16)
  - ◆ **Turning Your Phone On and Off** (page 18)
  - ◆ **Using Your Phone's Battery and Charger** (page 19)
  - ◆ **Navigating Through Phone Menus** (page 22)
  - ◆ **Displaying Your Phone Number** (page 23)
  - ◆ **Making and Answering Calls** (page 24)
  - ◆ **Entering Text** (page 35)
  - ◆ **Playing Music Using the External Navigation Pad** (page 40)
  - ◆ **Playing Music on Your Phone** (page 41)
- 

**Your phone is packed with features that simplify your life and expand your ability to stay connected to the people and information that are important to you.** This section will guide you through the basic functions and calling features of your phone.

# Front View of Your Phone



## Key Functions

1. **Signal Strength Indicator** represents the signal strength by displaying bars. The more bars displayed, the better the signal strength.
2. **Volume Key** allows you to adjust the ringer volume in standby mode (with the flip open) or adjust the voice volume during a call. The volume key can also be used to scroll up or down to navigate through the different menu options. To mute the ringer during an incoming call, press the volume key up or down.
3. **Softkeys** let you select softkey actions or menu items corresponding to the bottom left and right lines on the display screen.
4. **Speaker Key** enables your phone's built-in speaker, allowing you to hear other callers.
5. **Talk Key** allows you to place or receive calls, answer Call Waiting, use Three-Way Calling, or activate Voice Dial.
6. **Back (Clear) Key** deletes characters from the display in text entry mode. When in a menu, press the Back key to return to the previous menu. This key also allows you to return to the previous screen in a Sprint Power Vision session.
7. **Charger/Accessory Jack** allows you to connect optional accessories, such as a USB cable and connects the phone to the phone charger. **CAUTION!** Inserting an accessory into the incorrect jack may damage the phone.
8. **Service Indicator LED** lets you know phone is in service area with LED lighting.
9. **Flash** allows you to take pictures indoors or at night and also functions as a Message Waiting Indicator (MWI).
10. **Digital Camera** allows you to take sharp, high-resolution digital pictures.

11. **External Navigation Pad** allows you to access the Music Store and music stored on your microSD card, as well as navigate through your music while playing a song.
12. **Headset Jack** allows you to plug in an optional headset for convenient, hands-free conversations. **CAUTION!** Inserting an accessory into the incorrect jack may damage the phone.
13. **microSD Memory Card Slot** allows you to insert a memory card made especially for wireless phones.
14. **Navigation Key** scrolls through the phone's menu options and acts as a shortcut key from standby mode. You may also customize the navigation shortcuts in the Settings menu (see "Shortcuts" on page 61).
  - Press **Up** to access Messaging.
  - Press **Down** to access My Content.
  - Press **Right** to access Sprint Music Store.
  - Press **Left** to access Sprint TV.
15. **End (Power) Key** ends a call. Press and hold this key for two seconds to turn your phone on or off. While in the main menu, it returns the phone to standby mode and cancels your input.
16. **Menu/OK Key** displays the phone's main menu from standby mode. It also selects the highlighted choice when navigating through a menu.
17. **Camera Keys** allows you to access the Pictures menu with the press of a button in standby mode. Press and hold to automatically launch the camera. A single press to the exterior camera key (right side key) will launch the camera.
18. **Music Key** allows you to access the music application. While using the music application, pressing this button toggles the application to the foreground or the background. This key also turns the flash on/off while in camera or camcorder mode.

19. **Display Screen** displays all the information needed to operate your phone, such as the call status, the Contacts list, the date and time, and the signal and battery strength.
20. **Battery Strength Indicator** represents the amount of remaining battery charge currently available in your phone. When all bars are displayed in the battery icon, the phone's battery is fully charged. When no bars are displayed, the phone's battery is completely discharged or empty.
21. **Earpiece** lets you hear the caller and automated prompts.

## Viewing the Display Screen

---

Your phone's display screen provides a wealth of information about your phone's status and options. This list identifies the symbols you'll see on your phone's display screen:

---

**Note:** To view a list of your phone's icons and descriptions, from the main menu select **Settings > Phone Information > Icon Glossary**.

---



indicates your phone is using SSL (Secure Sockets Layer) protocol for client/server communication.



shows your current signal strength. (The more lines you have, the stronger your signal.)



shows a data call is in progress (red bars indicate EVDO mode).



means your phone cannot find a signal.



tells you a call is in progress.



indicates you are "Roaming" off the Sprint National Network.



indicates you have new text messages.



indicates you have new Email.



indicates Multitasking Virtual Machine.

-  indicates you have voicemail messages. (Press and hold  to call your voicemail box.)
-  indicates you have new Voice SMS messages.
-  indicates you have new Picture Mail.
-  indicates you have new messages.
-  indicates your phone's location feature is on.
-  indicates your phone's location feature is off.
-  indicates your Sprint Vision connection is active. (Data is being transferred.)
-  indicates ringer volume is set to vibrate.
-  indicates ringer & vibrate mode is set.
-  indicates Ringer Off/Silence All mode is set.
-  indicates your phone is operating in TTY mode.
-  indicates battery charge level (icon shows full charge).
-  indicates battery needs to be recharged.
-  indicates outgoing calls number.
-  indicates missed calls number.
-  indicates incoming calls number.
-  indicates alarm is activated.
-  indicates speaker is activated.
-  indicates Voice Guide & Speaker On.
-  indicates Bluetooth Enabled (Hidden).
-  indicates Bluetooth Enabled (Visible).
-  indicates Bluetooth Connected.
-  indicates Sprint Vision Service.
-  indicates Sprint Power Vision Service.
-  indicates Camera Mode.
-  indicates Camcorder Mode.

---

**Note:** Display indicators help you manage your roaming charges by letting you know when you're off the Sprint National Network, and whether you're operating in digital or analog mode. (For more information, see Section 2D: Controlling Your Roaming Experience on page 71.)

---

## Features of Your Phone

---

Congratulations on the purchase of your phone. The Muziq™ by LG® is lightweight, easy-to-use, and reliable, and it also offers many significant features and service options. The following list previews some of those features and provides page numbers where you can find out more:

- Dual-band capability allows you to make and receive calls while on the Sprint National Network and to roam on other 1900 and 800 MHz digital networks where Sprint has implemented roaming agreements (page 72).
- SMS Text Messaging (page 167), and SMS Voice Messaging (page 170) provide quick and convenient messaging capabilities.
- Sprint Voice Command lets you dial phone numbers by speaking someone's name or the digits of that person's phone number (page 188).
- Your Contacts list allows you to store up to 500 entries, with up to five phone numbers per entry (page 84).
- The built-in Calendar offers several personal information management features to help you manage your busy lifestyle (page 97).
- Your phone is equipped with a Location feature for use in connection with location-based services that may be available in the future (page 54).
- Your phone's external LCD display allows you to monitor the phone's status and to see who's calling without opening the phone.

- T9 Text Input lets you quickly type messages with one keypress per letter (see page 35).
- Speed dial lets you dial phone numbers with one or two keypresses (see page 34).
- You can wirelessly pair your Bluetooth-enabled phone to certain Bluetooth devices, including headsets and hands-free devices. You may also use a personal computer or hand-held device to pair with the phone for dial-up networking, using the phone as a wireless modem (page 149).
- The built-in camera allows you to take full-color digital pictures, and view your pictures using the phone's display.
- Wireless Backup allows you to back up and manage your phone's Contacts list on a secure Web site (page 93).

Wireless Backup supports the following uses:

- Backing up your phone's Contacts list.
- Transferring your phone's Contacts list to another Wireless Backup—compatible phone on the Sprint network.
- Viewing and editing your phone's Contacts list using a Web browser on a desktop or laptop computer.
- Data Roam Guard will alert you when you are roaming and using your browser or other online applications, giving you the option to continue using those applications while in the roaming area (page 76).
- The microSD card lets you play back, store, and erase the pictures or videos taken with your phone (pages 112). You can also play back and store downloaded MP3 and other media files.

# Turning Your Phone On and Off

---

## Turning Your Phone On

To turn your phone on:

- ▶ Press and hold  for approximately two seconds.

Once your phone is on, it may display “Searching for Service,” which indicates that your phone is searching for a signal. When your phone finds a signal, it automatically enters standby mode – the phone’s idle state. At this point, you are ready to begin making and receiving calls.

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. When a signal is found, your phone automatically returns to standby mode.

In Power Save mode, your phone searches for a signal periodically without your intervention. You can also initiate a search for Sprint service by pressing any key (when your phone is turned on).

---

**Tip:** The Power Save feature helps to conserve your battery power when you are in an area where there is no signal.

---

## Turning Your Phone Off

To turn your phone off:

- ▶ Press and hold  for two seconds until you see the powering-down animation on the display screen.

Your screen remains blank while your phone is off (unless the battery is charging).

# Using Your Phone's Battery and Charger

---

**WARNING:** Use only Sprint-approved or manufacturer-approved batteries and chargers with your phone. The failure to use a Sprint-approved or manufacturer-approved battery and charger may increase the risk that your phone will overheat, catch fire, or explode, resulting in serious bodily injury, death, or property damage.

---

Sprint- or manufacturer-approved batteries and accessories can be found at Sprint Stores or through your phone's manufacturer, or call 1-866-343-1114 to order. They're also available at [www.sprint.com](http://www.sprint.com) – click on the **Accessories** tab and then click **Sprint Accessories**.

## Battery Capacity

Your phone is equipped with a Lithium ion battery. It allows you to recharge your battery before it is fully drained. The battery provides up to 4 hours of continuous digital talk time.

When the battery reaches 5% of its capacity, the battery icon blinks. When there are approximately two minutes of talk time left, the phone sounds an audible alert and then powers down.

---

**Note:** Long backlight settings, searching for service, vibrate mode, and browser use affect the battery's talk and standby times.

---

---

**Tip:** Be sure to watch your phone's battery level indicator and charge the battery before it runs out of power.

---

## Installing the Battery

To install the battery:

1. Place the edge of the battery that has the battery terminals into the opening on the back of the phone (1), and then press it into place (2).
2. Align the tabs on the battery cover with the slots on the back of the phone (3), and then press the cover down until it clicks (4).



## Removing the Battery

---

**WARNING:** Do not handle a damaged or leaking Lithium ion battery as you can be burned.

---

To remove your battery:

1. Move the battery latch up (1), and then lift the battery cover off (2).
2. Lift the left edge (by the LG logo) of the battery (3), and then remove the battery.



## Charging the Battery

Your phone's battery is rechargeable and should be charged as soon as possible so you can begin using your phone.

Keeping track of your battery's charge is important. If your battery level becomes too low, your phone automatically turns off and you will lose all the information you were just working on. For a quick check of your phone's battery level, glance at the battery charge indicator located in the upper-right corner of your phone's display screen. If the battery charge is getting too low, the battery icon (  ) blinks and the phone sounds a warning tone.

Always use a Sprint- or manufacturer-approved desktop charger, travel charger, or vehicle power adapter to charge your battery.

## Using the Phone Charger

To use the phone charger provided with your phone:

- ▶ Plug the round end of the AC adapter into the phone's charger jack and the other end into an electrical outlet.
  - A **red indicator light** on the phone lets you know the battery is charging.
  - A **green indicator light** lets you know that the battery is at least 90 percent charged.

It takes approximately 3 hours to fully recharge a completely rundown battery. With the Sprint-approved battery, you can recharge the battery before it becomes completely run down.

# Navigating Through Phone Menus

---

The navigation key on your phone allows you to scroll through menus quickly and easily. The scroll bar at the right of the menu keeps track of your position in the menu at all times.

To navigate through a menu, simply press the navigation key up or down. If you are in a first-level menu, such as **Settings**, you may also navigate to the next or previous first-level menu by pressing the navigation key right or left.

For a diagram of your phone's menu, please see "Your Phone's Menu" on page iii.

## Selecting Menu Items

As you navigate through the menu, menu options are highlighted. Select any numbered option by simply pressing the corresponding number on the phone's keypad. You may also select any item by highlighting it and pressing .

For example, if you want to view your last incoming call:

1. Press  to access the main menu.
2. Select **Call History** by pressing  or by highlighting it and pressing . (It may already be highlighted.)
3. Select **Incoming Calls** by pressing  or by highlighting it and pressing . (If you have received any calls, they are displayed on the screen.)

---

**Note:** For the purposes of this guide, the above steps condense into "Select **Menu > Call History > Incoming Calls**."

---

## Backing Up Within a Menu

To go to the previous menu:

- ▶ Press .

To return to standby mode:

- ▶ Press .

## Displaying Your Phone Number

---

Just in case you forget your phone number, your phone can remind you.

To display your phone number:

- ▶ Select **Menu > Settings > Phone Information > Phone Number**. (Your phone number and other information about your phone and account will be displayed.)

---

**Note:** To select **Menu**, press . To select menu options (such as **Settings**, above), highlight the option and press . (If the menu options are numbered, you may also select an option simply by pressing the corresponding number key.)

---

# Making and Answering Calls

---

## Making Calls

Placing a call from your phone is as easy as making a call from any landline phone. Just enter the number and press , and you're on your way to clear calls.

To make a call using your keypad:

1. Make sure your phone is on.
2. Enter a phone number from standby mode. (If you make a mistake while dialing, press  to erase one digit at a time. Press and hold  to erase the entire number.)
3. Press . (To make a call when you are roaming and Call Guard is enabled, highlight **Roam Call** and press . See “Using Call Guard” on page 75.)
4. Press  or close the phone when you are finished.

---

**Tip:** To redial your last outgoing call, press **TALK** twice.

---

**Tip:** When making calls off the Sprint National Network, always dial using 11 digits (1 + area code + phone number).

---

You can also place calls from your phone by using Sprint Voice Command (page 188), speed dialing numbers from your Contacts (page 89), and using your Call History listings (page 78).

## Dialing Options

When you enter numbers in standby mode, you will see a variety of dialing options appear on the phone's display screen.

---

**Tip:** To speed dial a phone number from standby mode, press and hold the speed dial number. If the speed dial number is two digits, enter the first digit, and then press and hold the second digit. (For information on setting up speed dial numbers, see “Assigning Speed Dial Numbers” on page 89.) (This feature will not work when you are roaming off the Sprint National Network; when roaming you must dial using eleven digits [1 + the area code + the seven-digit phone number].)

---

- **Call** dials the displayed phone number.
- **Contacts Match** allows you to find Contacts entries that match the displayed number. (When more than three numbers are entered, this option is displayed.)
- **Send Message** allows you to send a text message or picture mail to the number being dialed.
- **Save** allows you to enter a seven- or ten-digit number (phone number and area code) and save the phone number in your Contacts. (See “Saving a Phone Number” on page 31.)
- **Find** allows you to enter a digit or string of digits to display Contacts entries that contain the entered numbers. (See “Finding a Phone Number” on page 31.)
- **Hard Pause** allows you to enter a hard pause. (See “Dialing and Saving Phone Numbers With Pauses” on page 32.)
- **2-sec Pause** allows you to enter a two-second pause. (See “Dialing and Saving Phone Numbers With Pauses” on page 32.)

# Answering Calls

To answer an incoming call:

1. Make sure your phone is on. (If your phone is off, incoming calls go to voicemail.)
2. Press  to answer an incoming call. (Depending on your phone's settings, you may also answer incoming calls by opening the phone or by pressing any number key. See "Call Answer Mode" on page 61 for more information.)

Your phone notifies you of incoming calls in the following ways:

- The phone rings or vibrates.
- The indicator light flashes.
- The backlight illuminates.
- The screen displays an incoming call message.

If the incoming call is from a number stored in your Contacts, the entry's name is displayed. The caller's phone number may also be displayed, if available.

If Call Answer is set to **TALK only**, the following options are also displayed. To select an option, press the corresponding softkey button.

- **Mute** to mute the ringer.
- **Ignore** to send the call to your voicemail box.

---

**Note:** When your phone is off, incoming calls go directly to voicemail.

---

## Answering a Roam Call With Call Guard Enabled

Call Guard is an option that helps you manage your roaming charges when making or receiving calls while outside the Sprint National Network. Please see Section 2D: Controlling Your Roaming Experience for more information about roaming.

To answer a call when you are roaming and Call Guard is enabled:

- ▶ Select **Answer** to answer the call. (See “Call Guard” on page 75 for additional information.)

## Ending a Call

To disconnect a call when you are finished:

- ▶ Close the phone or press .

## Missed Call Notification

When an incoming call is not answered, the Missed Call log is displayed on your screen.

To display the Missed Call entry from the notification screen:

- ▶ Highlight the entry and press . (To dial the phone number, press .)

To display a Missed Call entry from standby mode:

1. Select **Menu > Call History > Missed Calls**.
2. Highlight the entry you wish to view and press .

## Calling Emergency Numbers

You can place calls to 911 (dial     ), even if your phone is locked or your account is restricted.

---

**Note:** When you place an emergency call, your phone automatically enters Emergency mode.

---

During the call, press the desired menu list to display among menu lists. To select menu, highlight it and press .

- **Mute** or **Unmute** to mute your microphone, or to unmute the microphone if it was muted earlier. When making a call to 911, **Unmute** does not function.
- **Speaker On** or **Speaker Off** to route the phone's audio through the speaker or through the earpiece.
  - Select **Speaker On** to route the phone's audio through the speaker. (You can adjust the speaker volume using the volume keys on the side of the phone.)
  - Select **Speaker Off** to use the phone's earpiece.
- **3-Way Call** to set up a three-way conversation.
- **Phone Number**

To exit Emergency mode:

1. Press  to end a 911 call.
2. Highlight **Exit** and press .

---

**Note:** When you are in Emergency mode, you can exit only from the options menu.

---

## Enhanced 911 (E911) Information

This phone features an embedded Global Positioning System (GPS) chip necessary for utilizing E911 emergency location services where available.

When you place an emergency 911 call, the GPS feature of your phone begins to seek information to calculate your approximate location. Depending on several variables, including availability and access to satellite signals, it may take up to 30 seconds or more to determine and report your approximate location.

---

**IMPORTANT:** Always report your location to the 911 operator when placing an emergency call. Some designated emergency call takers, known as Public Safety Answering Points (PSAPs) may not be equipped to receive GPS location information from your phone.

---

## In-Call Options

While a call is in progress, a list of options is displayed that you may use during the call. To select an option, highlight the option and press . The following options are available:

- **Mute or Unmute** to mute your microphone, or to unmute the microphone if it was muted earlier.
- **Speaker On or Speaker Off** routes the phone's audio through the speaker or through the earpiece.
  - Select **Speaker On** to route the phone's audio through the speaker. (You can adjust the speaker volume using the volume keys on the side of the phone.)
  - Select **Speaker Off** to use the phone's earpiece.

---

**Warning!** Due to higher volume levels, do not place the phone near your ear during speakerphone use.

---

- **3-Way Call** to set up a three-way conversation.

- **Contacts** to access the Contacts menu.
- **Recent Calls** to access the Recent Calls list.
- **Send Message** to send a text message.
- **Record Voice Memo** to record the current conversation.
- **Notepad** to display the phone's electronic notepad.
- **Menu** to display the phone's main menu.

## End-of-Call Options

After receiving a call from or making a call to a phone number that is not in your Contacts, the phone number and the duration of the call are displayed. Select this option if you wish to add the new number to your Contacts. (See “Saving a Phone Number” on page 31.)

After receiving a call from or making a call to a phone number that is already in your Contacts, the Contacts entry name and phone number and the duration of the call are displayed. To select one of the following option after a call has ended, press  :

- **Save** to save the phone number in your Contacts list.
- **View** to view the Contacts entry if the number is already in your Contacts list.

---

**Note:** The End-of-Call options are not displayed for calls identified as No ID or Restricted.

---

## Saving a Phone Number

Your phone can store up to five phone numbers in each of 500 Contacts entries. Each entry's name can contain up to 32 characters. Your phone automatically sorts the Contacts entries alphabetically. (For more information, see Section 2F: Using Contacts on page 83.)

To save a number from standby mode:

1. Enter a phone number.
2. Scroll to **Save** and press .
3. Select **New Entry** for a new contact or **Existing Entry** to add a number to an existing contact and press . Select **Mobile**, **Home**, **Office**, **Pager**, **Fax**, or **None** for the phone label.
4. Use the numeric keypad to enter the new contact name and press  to save the new entry.  
— or —  
Search for an existing contact name and press  to save the new number.
5. Press **Done** (left softkey) to save the new entry.

## Finding a Phone Number

You can search Contacts entries for phone numbers that contain a specific string of numbers.

To find a phone number:

1. Enter one or more digits in standby mode. (The more numbers you enter, the more specific the search becomes.)
2. Scroll to **Contacts Match** and press .
3. To display the Contacts entry that contains the phone number, highlight the entry and press .

4. To dial the number, scroll to **Call** and press .

---

**Tip:** You can also dial the number by highlighting it and pressing **TALK** during step 3 above.

---

## Dialing and Saving Phone Numbers With Pauses

You can dial or save phone numbers with pauses for use with automated systems, such as voicemail or credit card billing numbers.

There are two types of pauses available on your phone:

- **Hard Pause** sends the next set of numbers when you press .
- **2-sec Pause** automatically sends the next set of numbers after two seconds.

---

**Note:** You can have multiple pauses in a phone number and combine two-second and hard pauses.

---

**To dial or save phone numbers with pauses:**

1. Enter the phone number.
2. Scroll to either **Hard Pause** or **2-sec Pause** and press . (Hard pauses are displayed as a “P” and two-second pauses as a “T.”)
3. Enter additional numbers.
4. Press  to dial the number.

– or –

To save the number in your Contacts list, highlight **Save** and press .

---

**Note:** When dialing a number with a hard pause, press **OK** to send the next set of numbers.

---

## Plus (+) Code Dialing

When placing international calls, you can use Plus Code Dialing to automatically enter the international access code for your location (for example, 011 for international calls made from the United States).

To make a call using Plus Code Dialing:

1. Press and hold  until a “+” appears on your phone display.
2. Dial the country code and phone number you’re calling and press . (The access code for international dialing will automatically be dialed, followed by the country code and phone number.)

## Dialing From Contacts

To dial directly from a **Contacts** entry:

1. Press  to access the main menu. Contacts may also be accessed by pressing **Contacts** (right softkey) from the standby screen.
2. Select **Contacts**.
3. Scroll to **Find/Add Entry** and press .

---

**Shortcut:** Press **Right** on the navigation key to list entries.

---

4. Use your navigation key to scroll through the Contacts list, and then highlight your desired entry.
  5. Press  to dial the entry’s default phone number.
- or –

To dial another number from the entry, press , highlight the desired number, and press .

## Using Speed Dialing

You can store up to 99 numbers in your phone's speed dial memory to make contacting friends and family as easy as pressing a button or two. With this feature, you can dial speed dial entries using one keypress for locations 1-9 or two keypresses for locations 10-99.

### To use One-Touch Dialing for speed dial locations 1-9:

- Press and hold the appropriate key for approximately two seconds. The display confirms that the number has been dialed when it shows "Calling..."

### To use Two-Touch Dialing for speed dial locations 10-99:

1. Press the first digit.
2. Press and hold the second digit for approximately two seconds. The display confirms that the number has been dialed when it shows "Calling..."

---

**Note :** Speed dialing is not available when you are roaming; when you are roaming off the Sprint National Network, you must always dial using eleven digits (1 + area code + number).

---

# Entering Text

## Selecting a Character Input Mode

Your phone provides convenient ways to enter words, letters, punctuation, and numbers whenever you are prompted to enter text (for example, when adding a Contacts entry or when using Sprint Mail and SMS Text Messaging).

To change the character input mode:

1. When you display a screen where you can enter text, press the right softkey to change the character input mode.
2. Select one of the following options:
  - **Abc** to cycle through the alpha characters associated with the letters on the keypad (see page 38).
  - **T9Word** to enter text using a predictive text-entry system that reduces the number of keystrokes required to enter a word (see page 36).
  - **123** to enter numbers by pressing the numbers on the keypad (see page 39).
  - **Symbols** to enter symbols (see page 39).
  - **Smileys** to enter “emoticons” (see page 39).
  - **Settings** to enter messages settings.
  - **Recent Messages** to enter a recent message.
  - **Preset Messages** to enter preprogrammed messages (see page 39).
  - **Preset Suffix** to enter preset prefixes and suffixes such as `http://www.`, `https://www.`, `www.`, `.com`, `.net`, `.org`, `.edu`, `.wap`, `//`, `“ ”`, `()`, `{ }`, `[]`, `< >`, and `< > >`.

---

**Tip:** When entering text, press the \* (Shift) key to change letter capitalization (**Abc** > **ABC** > **abc**).

---

## Entering Characters Using T9 Text Input

T9 Text Input lets you enter text in your phone by pressing keys just once per letter. (To select the **T9Word** mode when entering text, see “Selecting a Character Input Mode” on page 35.)

T9 Text Input analyzes the letters you enter using an intuitive word database and creates a suitable word. (The word may change as you type.)

**To enter a word using T9 Text Input:**

1. Select the **T9Word** character input mode. (See “Selecting a Character Input Mode” on page 35.)
2. Press the corresponding keys once per letter to enter a word. (For example, to enter the word “Bill,” press     .) (If you make a mistake, press  to erase a single character. Press and hold  to delete an entire entry.)

If the word you want is not displayed after you have entered all the letters, press  to scroll through additional word selections. To accept a word and insert a space, press .

## Adding a Word to the T9 Database

If a word you want to enter is not displayed as an option when you are using T9 Text Input, you can add it to the database.

**To add a word to the T9 Text Input database:**

1. Select the **Abc** character input mode. (See “Selecting a Character Input Mode” on page 35.)
2. Enter the word using multi-tap text entry. (See “Entering Characters by Tapping the Keypad” on page 38.) The word will appear as an option the next time you scroll through options during T9 Text Input.

For more information about T9 Text Input, visit the Tegic Web site at [www.T9.com](http://www.T9.com).

## Entering Characters Using Abc Mode

To enter characters using **Abc Mode** (multi-tap key entry):

1. Select the **Abc** mode. (See “Selecting a Character Input Mode” on page 35.)
2. Press the corresponding keys repeatedly until the desired letter appears. (For example, to enter the word “Bill,” press  twice,  three times,  three times, and  three times again.) (If you make a mistake, press  to erase a single character. Press and hold  to delete an entire entry.)

By default, the first letter of an entry is capitalized and the following letters are lowercased. After a character is entered, the cursor automatically advances to the next space after two seconds or when you enter a character on a different key.

Characters scroll in the following order:

|                                                                                     |             |
|-------------------------------------------------------------------------------------|-------------|
|    | .,@1'?!*# / |
|    | ABC2        |
|    | DEF3        |
|    | GHI4        |
|  | JKL5        |
|  | MNO6        |
|  | PQRS7       |
|  | TUV8        |
|  | WXYZ9       |
|  | 0           |
|  | Space       |
|  | Shift       |

## Entering Numbers, Symbols, Smileys, and Preset Messages

To enter numbers:

- ▶ Select the **123** mode and press the appropriate key. (See “Selecting a Character Input Mode” on page 35).

To enter symbols:

- ▶ Select the **Symbols** mode. (See “Selecting a Character Input Mode” on page 35.) To enter a symbol, press the appropriate key indicated on the display.

To enter “emoticons” (smileys):

- ▶ Select the **Smileys** mode and press the appropriate key. (See “Selecting a Character Input Mode” on page 35.)

To enter preset messages:

1. Select the **Preset Messages** mode. (See “Selecting a Character Input Mode” on page 35.)
2. Scroll to the desired preprogrammed message and press .

To enter recent messages:

1. Select **Send Message > Text Message mode**.
2. In message input mode, select **Mode** (right softkey) and scroll to the **Recent messages** and press .

---

**Note:** Preset messages make composing text messages even easier by allowing you to enter preset messages, such as “Meet me at”, “Let’s get lunch”, or a customized message of your own. (For more information on preset messages, please see “Managing Preset Messages” on page 57.)

---

# Playing Music Using the External Navigation Pad

---

Besides using the main menu, you can also select and listen to music by simply touching the external navigation pad.

**To deactivate the keyguard:**

- ▶ Press and hold the side volume key until the screen displays the message “Key guard is off.”



- ▶ Press  to start the music application.

**To play music:**

- ▶ Press and hold the side camera key to unlock the key guard. Press  or the side music key to start the music application.

## External Navigation Controls While Playing Music Files

|                                                                                     |                                                        |
|-------------------------------------------------------------------------------------|--------------------------------------------------------|
|  | <b>Pause / Resume</b>                                  |
|  | <b>Next song</b> (short press)                         |
|  | <b>Fast Forward</b> (long press)                       |
|  | <b>Previous song / Repeat*</b> (short press)           |
|  | <b>Rewind</b> (long press)                             |
|  | <b>Music List</b> (scroll up/down through music files) |

# Playing Music on Your Phone

Now that you have music on your phone (either uploaded from the Sprint Music Manager or purchased from the Sprint Music Store), you're ready to start listening. Follow the steps below to use the phone's built-in media player to listen to all your music.

## Accessing the Music Player

1. Press  on the external navigation pad, the dedicated Music key on the side of your phone, or select **Music** from the main menu.

- or -

From the Sprint Music Store opening page, use your right navigation key to select the **Player** tab.

2. You should be taken to the **Player** tab. (This tab accesses the microSD card containing all your available music.)
3. From the Player display, select an option:
  - **All My Music** to browse through all of your available music.
  - **<playlist>** to select a customized playlist you've created to organize your music.
  - **Create Playlist...** to set up a custom playlist of songs you like to hear together. Follow the onscreen instructions to create a name for the playlist, select songs by artist, genre, and title, and create an order for the playlist.
4. Once you've displayed a list of songs, you can browse through your available titles by Song, Artist, or Genre to select a specific song.
  - To play a song, select it and press **Play** .

- To listen to a playlist, select it and press  to open the playlist, and then press  again to begin playing the selected playlist. (You can also highlight the playlist and use the softkey menu to begin listening.)

For more information about using the Sprint Music Store, visit the Sprint Web site at [www.sprint.com/musicstore](http://www.sprint.com/musicstore).

## Music Listening Tips

- Use the phone's volume keys to adjust the music volume.
- Press  to toggle between Play and Pause.
- Press and hold the left side of the navigation pad to scan backwards through a song. Press and release the left side to return to the beginning of the song.
- Press and hold the right side of the navigation pad to scan forward through a song. Press and release the right side to start playing the next song in the list.
- You can press  on the external navigation pad or with the phone open you can select **Menu** (right softkey) for options to go back to the player tab or the Sprint Music Store.
- To shuffle the playback order of a list, during playback select **Menu > Shuffle Order** and press . A shuffle icon then appears to the left of the rewind button onscreen.

| Keys                                                                                | Operation                                                                                     |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------|
|  | Plays or pauses a media clip.                                                                 |
|  | Stops the media clip. Returns the phone to standby mode when held down.                       |
|  | Skips to the next clip.                                                                       |
|  | Returns to the beginning of the current clip. Rewinds within the current clip when held down. |
| <b>List</b>                                                                         | Displays a list of media clips.                                                               |

## Exiting the Music Player

You can exit the music player screen while still listening to your music, or you can terminate the application to quit.

- ▶ To return to standby mode while still listening to your music, press  to launch an onscreen pop-up menu where you can choose:
  - **Application Manager** to launch the Application Manager which manages all currently active applications (see page 185).
  - **Send to Background** to keep the music from your current playlist playing in the background and returns you to the Main LCD standby screen.
  - **Resume** to take you back to the previous music playback screen.
  - **Exit** to terminate the currently selected application and returns you to the Main LCD standby screen.

# Controlling Your Phone's Settings

---

### In This Section

---

- ◆ **Sound Settings** (page 45)
  - ◆ **Display Settings** (page 48)
  - ◆ **Location Settings** (page 54)
  - ◆ **Messaging Settings** (page 55)
  - ◆ **Airplane/Music Mode** (page 58)
  - ◆ **TTY Use With Sprint Service** (page 59)
  - ◆ **Phone Setup Options** (page 61)
- 

**Using the menu options available on your phone, you can customize your phone to sound, look, and operate just the way you want it to.** This section describes how you can change your phone's settings to best suit your needs. Take a few moments to review these options and to adjust or add settings that are right for you.

# Sound Settings

## Ringer Types

Ringer types help you identify incoming calls and messages. You can assign ringer types to individual Contacts entries, types of calls, and types of messages. You can select Ringer Types from Single Tones, Ring Tones, Melodies, Voice Memo, My Content, My Albums, Assigned Media, My Melodies, Get New, and Take New Video.

## Selecting Ringer Types for Voice Calls

Your phone provides a variety of ringer options that allow you to customize your ring and volume settings. These options allow you to identify incoming calls by the ring.

To select a ringer type for voice calls:

1. Select **Menu > Settings > Sounds > Ringer Type > Voice Calls**.
2. Select **Caller ID** or **No Caller ID**. (The list of preprogrammed ringers is displayed.)
3. Use your navigation key to scroll through the available ringers. A sample ringer will sound as you highlight each option.
4. Press  to assign the desired ringer.  
— or —

Select **My Content** and scroll through the list of downloaded ringers. Assign the desired ringer by pressing .

## Selecting Ringer Types for Messages

To select a ringer type for messages:

1. Select **Menu > Settings > Sounds > Ringer Type > Messages**.
2. Select **Voicemail**, **Text Messages** or **Picture Mail**. (The list of preprogrammed ringers is displayed.)
3. Use your navigation key to scroll through the available ringers. A sample ringer will sound as you highlight each option.
4. Press  to assign the desired ringer.

## Selecting a Key Tone

Your phone offers a number of options for selecting the audible tones accompanying a keypress. (Longer tone lengths may be better for tone recognition when dialing voicemail or other automated systems.)

To select a key tone:

1. Select **Menu > Settings > Sounds > Key Tones**.
2. Select **Tone Length** or **Tone Volume** and press .

## Adjusting the Phone's Volume Settings

You can adjust your phone's volume settings to suit your needs and your environment.

To adjust your phone's volume settings:

1. Select **Menu > Settings > Sounds > Volume**.
2. Select **Ringer**, **Earpiece**, **Speakerphone**, **Power On/Off**, or **Applications**.
3. Using the navigation key, choose a volume level and press .

**Tip:** You can adjust the ringer volume in standby mode (or the earpiece volume during a call) by using the volume key on the left side of your phone.

## Alert Notification

Your phone can alert you with an audible tone when you change service areas, once a minute during a voice call, when a call has been connected, or when the signal fades or a call is dropped.

To enable or disable alert sounds:

1. Select **Menu > Settings > Sounds > Alerts**.
2. Select **Beep Each Minute, Out of Service, Connect**, or **Signal Fade/Call Drop** and press .
3. Select **On** or **Off** and press .

## Silence All

There may be times when you need to silence your phone entirely. The phone's Silence All option allows you to mute all sounds without turning your phone off.

To activate Silence All:

- ▶ With the phone open, press and hold the volume key down in standby mode. (The screen will display "Silence All.")

To deactivate Silence All:

- ▶ Press the volume key up repeatedly to select a desired volume level.

# Display Settings

---

## Changing the Text Greeting

The text greeting can be up to 16 characters and is displayed on your phone's screen in standby mode. You may choose to keep the phone's default greeting ("Sprint"), or you may enter your own custom greeting.

To display or change your greeting:

1. Select **Menu > Settings > Display > Main Screen > Foregrounds > Greeting > Custom**.
2. Use the numeric keypad to enter a new custom greeting. (See "Entering Text" on page 35.) (To erase the existing greeting one character at a time, press . To erase the entire greeting, press and hold .)
3. Press  to save your new greeting.

## Changing the Backlight Time Length

The backlight setting lets you select how long the display screen is backlit after any keypress is made.

To change the backlight setting:

1. Select **Menu > Settings > Display > Main Screen > Backlight**.
2. Select a time setting and press .

---

**Note:** Long backlight settings affect the battery's talk and standby times.

---

## Changing the Display Screen

Your new phone offers options for what you see on the display screen while powering on or off and when in standby mode.

To change the display images:

1. Select **Menu > Settings > Display > Main Screen > Screen Saver**.  
— or —  
Select **Menu > Settings > Display > Outer Screen > Screen Saver**.
3. Select **Preloaded, My Albums, Assigned Media, My Content, Get New, Take New Picture, or Take New Video**.
4. Use the navigation key to select an image and press  to view the image. (Once an image is displayed, you can use your navigation key to scroll through and view the other default images.)
5. Press  to assign the desired image.

## Changing the Display Screen for Incoming Calls

You can set the screen saver to be shown on the Incoming Calls display.

To set the incoming calls display:

1. Select **Menu > Settings > Display > Main Screen > Incoming Calls**.
2. Select **Caller ID** or **No Caller ID**.
3. Select **Preloaded, My Albums, Assigned Media, My Content, Get New, or Take New Picture**.
4. Use the navigation key to highlight your selection and press  to view the image. (Once an image is displayed, you can use your navigation key to scroll through and view the other default images.)
5. Press  to assign the desired image.

## Slide Show

You can create a slide show screen saver of up to nine images that will change continuously on your standby screen.

To create a slide show:

1. Select **Menu > Settings > Display > Main Screen > Slide Show**.
2. Select a slide from 1 to 9 and press .
3. Select **Preloaded, My Albums, Assigned Media, My Content, or Take New Picture**.
4. Select an image, press , and then press **Add** (left softkey) to add the image to the slide show.
5. When you have finished adding images, press **Options** (right softkey) to preview your slide show, or **Save** (left softkey) to save your slide show.

## Changing the Multitasking Alert

Multitasking is a way of keeping one application active while using another. While your current music selection is playing, you can activate the Menu option and choose from a list of available applications which can be run in tandem with your music.

When the multitasking alert is on, you can use multitasking. An incoming call causes the currently played music file to be paused while the phone call is active. Once the call is ended, you can resume any paused applications.

To turn the multitasking alert on or off:

1. Select **Menu > Settings > Display > Main Screen > Multi-Tasking Alert**.
1. Select **On** or **Off**.

## Changing the Phone's Menu Style

Your phone allows you to choose how the menu appears on your display screen.

To select the display's menu style:

1. Select **Menu > Settings > Display > Main Screen > Menu Styles**.
2. Select **Grid** to view each main menu item as an animated single-screen icon or **List** to view the main menu as a list, and press .

## Changing the Theme Color

You can customize your phone's display appearance by selecting a color scheme to reflect your personality.

To change the display's theme color:

1. Select **Menu > Settings > Display > Main Screen > Skins**.
2. Select **Black, Bubble Gum, Glacial, or Tropical** and press .

## Changing the Theme

You can customize your phone's display theme.

To change the display's theme :

1. Select **Menu > Settings > Display > Main Screen > Themes**.
2. Select **Muziq or LG** and press .

## Changing the Clock Display

Choose whether you want your phone's clock to be displayed in analog mode, digital mode, or with time and date.

To change the clock's appearance on the standby screen:

1. Select **Menu > Settings > Display > Main Screen > Foregrounds > Clock/Calendar**.  
— or —  
Select **Menu > Settings > Display > Outer Screen > Clock**.
3. If you selected **Main Screen**, select **Normal Clock, Analog Clock, Digital Clock, Dual Clock, or Calendar**. If you selected **Outer Screen**, select **Normal Clock, Analog Clock, Digital Clock, or Dual Clock**.
4. Press  to apply the clock display setting.

## Changing the Text Input Font

This setting allows you to adjust the display appearance when entering text (for example, when using the notepad or when adding a Contacts entry).

To change the text input font:

1. Select **Menu > Settings > Display > Font Size**.
2. Select **Messaging, Browser, or Notepad**.
3. Select a size and press .

## Changing the Keypad Light Time Length

The keypad light setting lets you select how long the keypad is backlit after any keypress is made.

To change the keypad light setting:

1. Select **Menu > Settings > Display > Keypad Light**.
2. Select **Always Off, 8 seconds, 15 seconds, or 30 seconds** and press .

## Changing the Status Light Mode

This feature uses a blinking light to inform you of your phone's current status.

To change the status light mode:

1. Select **Menu > Settings > Display > Status Light**.
2. Select **On or Off** and press .

## Display Language

You can choose to display your phone's onscreen menus in English or in Spanish.

To assign a language for the phone's display:

1. Select **Menu > Settings > Display > Language**.
2. Select **English or Español** and press .

# Location Settings

---

Your phone is equipped with a Location feature for use in connection with location-based services that may be available in the future.

The Location feature allows the network to detect your position. Turning Location off will hide your location from everyone except 911.

---

**Note:** Turning Location on will allow the network to detect your position using GPS technology, making some Sprint applications and services easier to use. Turning Location off will disable the GPS location function for all purposes except 911, but will not hide your general location based on the cell site serving your call. No application or service may use your location without your request or permission. GPS-enhanced 911 is not available in all areas.

---

## To enable your phone's Location feature:

1. Select **Menu > Settings > More... > Location**. (The Location disclaimer is displayed.)
2. Read the disclaimer and press .
3. Select **On** or **Off** and press .

When the Location feature is on, your phone's standby screen will display the  icon. When Location is turned off, the  icon will be displayed.

# Messaging Settings

Staying connected to your friends and family has never been easier. With your phone's advanced messaging capabilities, you can send and receive many different kinds of text messages without placing a voice call. (For more information, see "Using SMS Text Messaging" on page 167.)

Your phone's messaging settings make text messaging even faster and easier by letting you decide how you would like to be notified of new messages, create a signature with each sent message, and create your own preset messages, to name just a few.

## Displaying Pop-up Messages

When you receive a text message, your phone notifies you by displaying an icon on your display screen. You can also choose to be notified with a larger pop-up message on your display screen.

To display pop-up messages:

1. Select **Menu > Settings > Messaging > Notification**.
2. Select **Message & Icon** or **Icon Only** and press .

## Setting Message Alerts

When new messages arrive, you can choose to have your phone notify you by playing an audible alert.

To hear an alert when you receive a new message:

1. Select **Menu > Settings > Messaging > Message Reminder**.
2. Select **On** or **Off** and press .

## Callback Number

1. Select **Menu > Settings > Messaging > Callback Number**.
2. Select **None**, **My Phone Number**, or **Other** and press .  
(If you select **Other**, enter a number and press .)

## Deleting Old Messages

You can delete messages that you've already read whenever you like, or you can have your phone delete them automatically for you.

To automatically delete read messages:

1. Select **Menu > Settings > Messaging > Auto-Delete**.
2. Select **On** or **Off** and press .

## Delivery Receipt

This function allows you to know whether the message is successfully transmitted to other party or not when the transmitted message is received in other party's phone. If you want to activate this function, set to on.

1. Select **Menu > Settings > Messaging > Delivery Receipt**.
2. Select **On** or **Off** and press .

## Adding a Customized Signature

Each message you send can have a customized signature to reflect your personality.

To add a customized signature to each sent message:

1. Select **Menu > Settings > Messaging > Signature > Custom**.  
(If you do not wish to attach a signature to your outgoing messages, select **None**.)

2. Enter your signature and press . (See “Entering Text” on page 35.)

## Managing Preset Messages

Your phone is loaded with 20 preset messages to help make sending text messages faster and easier. These messages, such as “Where are you?”, “Let’s get lunch.”, and “Meet me at”, can be customized or deleted to suit your needs. You can even add your own preset messages to the list.

To edit or delete a preset message:

1. Select **Menu > Settings > Messaging > Preset Messages**. (The list of preset messages is displayed.)
2. To edit or delete a preset message, highlight it and press .
3. Scroll to **Edit** and press , edit the selected message (see “Entering Text” on page 35), and press .  
— or —  
Scroll to **Delete** and press , and then select **Yes** to delete the selected message. (Select **No** to cancel the deletion.)

---

**Note:** Default preset messages cannot be deleted.

---

To add a new preset message:

1. Select **Menu > Settings > Messaging > Preset Messages**. (The list of preset messages is displayed.)
2. To add a new preset message, select **<Add New>**.
3. Enter your message (see “Entering Text” on page 35), and press . (Your new message will be added to the beginning of the list.)

## SMS Voice Options

Your phone offers several options for organizing and accessing your SMS Voice messages.

1. Select **Menu > Settings > Messaging > VoiceSMS Options**.
2. Select **Speakerphone** or **From Name** and press .

## Airplane/Music Mode

---

Airplane/Music Mode allows you to use many of your phone's features, such as listening to music, playing games, or using the Notepad or Voice Memos, when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When your phone is in Airplane/Music Mode, it cannot send or receive any calls or access online information.

**To set your phone to Airplane/Music Mode:**

1. Select **Menu > Settings > Airplane/Music Mode**. (The Airplane/Music Mode disclaimer is displayed.)
2. Read the disclaimer and press .

While in Airplane/Music Mode, your phone's standby screen will display "Phone off."

---

**Note:** If Airplane/Music Mode is set to On, this mode is automatically reactivated when you power off or reset the phone.

---



## TTY Use With Sprint Service

TTY (also known as a TDD or Text Telephone) is a telecommunications device that allows people who are deaf, hard-of-hearing, or who have speech or language disabilities, to communicate by telephone.

Your phone is compatible with select TTY devices. Please check with the manufacturer of your TTY device to ensure that it supports digital wireless transmission. Your phone and TTY device will connect via a special cable that plugs into your phone's headset jack. If this cable was not provided with your TTY device, contact your TTY device manufacturer to purchase the connector cable.

When establishing your Sprint service, please call Sprint Customer Service via the state Telecommunications Relay Service (TRS) by first dialing     . Then provide the state TRS with this number: 866-727-4889.

### To turn TTY Mode on or off:

1. Select **Menu > Settings > More... > Accessibility**.  
(An informational message is displayed.)
2. Press .
3. Select **On** and press  to turn TTY mode on.  
– or –  
Select **Off** and press  to turn TTY mode off.

---

**Note:** In TTY Mode, your phone will display the TTY access icon.

---

---

**Note:** If TTY mode is enabled, the audio quality of non-TTY devices connected to the headset jack may be impaired.

---

---

#### **WARNING: 911 Emergency Calling**

Sprint recommends that TTY users make emergency calls by other means, including Telecommunications Relay Services (TRS), analog cellular, and landline communications. Wireless TTY calls to 911 may be corrupted when received by public safety answering points (PSAPs), rendering some communications unintelligible. The problem encountered appears related to TTY equipment or software used by PSAPs. This matter has been brought to the attention of the FCC, and the wireless industry and PSAP community are currently working to resolve this.

---

# Phone Setup Options

## Side Key Guard

1. Select **Menu > Settings > Side Key Guard**. (An information window is displayed.)
2. Read the information and press .
3. Select **On** or **Off** and press .

## Shortcuts

Your phone offers you the option of assigning a shortcut key to a favorite or often-used function. Pressing the navigation key to the left in standby mode will launch your personally designated shortcut.

To assign your shortcut key:

1. Select **Menu > Settings > More... > Navigation Keys**. (An information window is displayed.)
2. Read the information and press .
3. Select **Left Navigation**, **Right Navigation**, **Up Navigation**, or **Down Navigation** and press .
4. Using the navigation key or your keypad, select the desired shortcut and press .
5. Press  to return to standby mode.

## Call Answer Mode

You can determine how to answer incoming calls on your phone, whether only by pressing , by pressing any number key, or simply by opening the phone.

To set call answer mode:

1. Select **Menu > Settings > More... > Call Setup > Call Answer**.
2. To select an option, highlight it and press .
  - **Flip Open / Any Key** to allow an incoming call to be answered by opening the phone or by pressing any key.
  - **TALK Only** to require  to be pressed to answer all incoming calls.

## Auto Answer Mode

You may set your phone to automatically pick up incoming calls when connected to an optional hands-free car kit.

To set Auto Answer mode:

1. Select **Menu > Settings > More... > Call Setup > Auto-Answer**.
2. To select an option, highlight it and press .
  - **Off** to disable Auto Answer.
  - **Car-Kit/Headset** to answer calls automatically when the phone is connected to a hands-free car kit or a headset (sold separately). Remember, your phone will answer calls in Auto Answer mode even if you are not present.

## Dialing Match

Your dialing match options allow you to enable or disable Abbreviated Dialing and Speed Dialing (page 34).

To set your dialing match options:

1. Select **Menu > Settings > More... > Call Setup > Contacts Match**.
2. Select **On** or **Off** and press .

## Abbreviated Dialing

Your dialing match options allow you to enable or disable Abbreviated Dialing and Speed Dialing (page 34).

To set your abbreviated dialing options:

1. Select **Menu > Settings > More... > Call Setup > Abbreviated Dialing**.
2. Select **On** and enter a five- or six-digit number (for example, area code and prefix) and press .

## Text Entry

1. Select **Menu > Settings > Text Entry**.
2. Select **Auto-Capital, Auto-Space, Word Choice List, Word Prediction, Word Completion, Use My Words, My Words, or Help** and press .

## Voice Guide

1. Select **Menu > Settings > More... > Accessibility > Voice Guide**.
2. Select **On** or **Off** and press .

## Touch Key Vibrate

1. Select **Menu > Settings > More... > Touch Key Vibrate**.
2. Select **Off, On, or Harder** and press .

# Setting Your Phone's Security

---

## In This Section

---

- ◆ **Accessing the Security Menu** (page 65)
  - ◆ **Using Your Phone's Lock Feature** (page 65)
  - ◆ **Using Special Numbers** (page 67)
  - ◆ **Erasing the Contacts List** (page 67)
  - ◆ **Restricting Your Phone** (page 68)
  - ◆ **Resetting Favorites** (page 69)
  - ◆ **Resetting Your Picture Mail Account** (page 69)
  - ◆ **Resetting Default Settings** (page 70)
  - ◆ **Resetting Your Phone** (page 69)
- 

**By using the security settings on your phone, you receive peace of mind without sacrificing flexibility.** This section will familiarize you with your phone's security settings. With several options available, you can customize your phone to meet your personal needs.

## Accessing the Security Menu

---

All of your phone's security settings are available through the Security menu. You must enter your lock code to view the Security menu.

To access the Security menu:

1. Select **Menu > Settings > More... > Security**.
2. Enter your lock code to display the Security menu.

---

**Tip:** If you can't recall your lock code, try using the last four digits of your wireless phone number. If this doesn't work, call Sprint Customer Service at 1-888-211-4727.

---

## Using Your Phone's Lock Feature

---

### Locking Your Phone

When your phone is locked, you can only receive incoming calls or make calls to 911, Sprint Customer Service, or special numbers. (See "Using Special Numbers" on page 67.)

To lock your phone:

- ▶ From the Security menu, select **Lock My Phone > Lock Now**. (To set your phone to lock the next time it is turned on, select **On Power Up**.)

### Unlocking Your Phone

To unlock your phone:

1. From standby mode, press **Unlock** (right softkey).
2. Enter your lock code.

## Locking Pictures

To turn picture lock on or off:

1. Select **Menu > Settings > More... > Restrict and Lock**.
2. Enter your lock code and scroll to **Lock Pictures** and press .
2. Highlight **Lock** and press .

## Changing the Lock Code

To change your lock code:

1. Select **Menu > Settings > More... > Security**, and then enter your lock code. (The Security menu is displayed.)
2. Select **Change Lock Code**, and then enter and re-enter your new lock code.

## Calling in Lock Mode

You can place calls to 911 and to your special numbers when in lock mode. (For information on special numbers, see “Using Special Numbers” on page 67.)

To place an outgoing call in lock mode:

- ▶ To call an emergency number, special number, or Sprint Customer Service, enter the phone number and press .

## Using Special Numbers

Special numbers are important numbers that you have designated as being “always available”. You can call and receive calls from special numbers even if your phone is locked.

You can save up to 10 special numbers in addition to your Contacts entries. (The same number may be in both directories.)

**To add or replace a special number:**

1. Select **Menu > Settings > More... > Security**, and then enter your lock code. (The Security menu is displayed.)
2. Select **Special Numbers**.
3. Select a location for your entry.
4. Enter the number and press .

---

**Note:** There are no speed dial options associated with special numbers.

---

## Erasing the Contacts List

You can quickly and easily erase all the contents of your Contacts.

**To erase all the names and phone numbers in your Contacts:**

1. Select **Menu > Settings > More... > Security**, then enter your lock code. (The Security menu is displayed.)
2. Select **Erase/Reset > Erase Contacts**.
3. If you are certain you would like to erase all of your Contacts entries, select **Yes**.

# Restricting Your Phone

---

There may be occasions when you want to limit the numbers your phone can call. You can use the Limit Calls setting to do just that. (The Limit Calls setting does not apply to incoming calls, calls made to 911, or calls made to Sprint Customer Service.)

To restrict your phone:

1. Select **Menu > Settings > More... > Restrict and Lock**, and then enter your lock code.
2. Select **Restrict Voice**.
3. Select **Incoming Calls** or **Outgoing Calls** and press .
4. Select **Contacts Only**, **Special #'s Only**, or **Unlock** and press .
  - **Contacts Only** allows you to call only the entries saved in the Contacts list.
  - **Special #'s Only** allows you to call only the 10 numbers stored in the Special Number section in the Security Menu.
  - **Unlock** allows all calls to be made without any restrictions (default setting).

---

**Note:** “Lock Code” is displayed when your restriction is set to **Contacts Only** and you make a call to a saved number or try to edit an existing entry.

---

## Resetting Favorites

---

This will delete all favorites set by the user.

To reset favorites:

1. Select **Menu > Settings > More... > Security**, and then enter your lock code.
2. Select **Erase/Reset**.
3. Select **Reset Favorites** and press .
4. Select **Yes** or **No**.

## Resetting Your Picture Mail Account

---

This option resets your authentication ID for your Sprint Picture Mail account.

To reset your Picture Mail account:

1. Select **Menu > Settings > More... > Security**, and then enter your lock code. (The Security menu is displayed.)
2. Select **Erase/Reset > Reset Picture Mail**. (A disclaimer appears.)
3. Read the disclaimer and press .
4. If you are certain that you would like to reset your Picture Mail account, select **Yes**.

## Resetting Default Settings

---

Resetting the current default settings restores all the factory defaults, including the ringer types and display settings. The Contacts, Call History, Scheduler, and Messaging are not affected.

To reset default settings:

1. Select **Menu > Settings > More... > Security**, and then enter your lock code. (The Security menu is displayed.)
2. Select **Erase/Reset > Reset All Settings**. (A disclaimer appears.)
3. Read the disclaimer and press .
4. If you are certain that you would like to restore all the factory settings, select **Yes**.

## Resetting Your Phone

---

Resetting the phone resets all settings and erases all data on your phone.

To reset phone:

1. Select **Menu > Settings > More... > Security**, and then enter your lock code. (The Security menu is displayed.)
2. Select **Erase/Reset > Reset Phone**. (A disclaimer appears.)
3. Read the disclaimer and press .
4. If you are certain that you would like to erase all the data and reset your settings, select **Yes**.

# Controlling Your Roaming Experience

---

## In This Section

---

- ◆ Understanding Roaming (page 72)
  - ◆ Setting Your Phone's Roam Mode (page 74)
  - ◆ Using Call Guard (page 75)
  - ◆ Using Data Roam Guard (page 76)
- 

**Roaming is the ability to make or receive calls when you're off the Sprint National Network.** Your new dual-band Muziq™ by LG® works anywhere on the Sprint National Network and allows you to roam on 1900 and 800 MHz digital networks.

This section explains how roaming works as well as special features that let you manage your roaming experience.

# Understanding Roaming

---

## Recognizing the Roaming Icon on the Display Screen

Your phone's display screen always lets you know when you're off the Sprint National Network. Any time you are roaming, the phone displays the roaming icon (  ). If you are roaming on a digital system, the roaming icon will be displayed along with the text **Digital Roam**.

---

**Tip:** Remember, when you are using your phone off the Sprint National Network, always dial numbers using 11 digits (1 + area code + number).

---

---

**Note:** Unless your Sprint service plan includes roaming, you will pay a higher per-minute rate for roaming calls.

---

## Roaming on Other Digital Networks

When you're roaming on other digital networks, your call quality and security will be similar to the quality you receive when making calls on the Sprint National Network. However, you may not be able to access certain features, depending on the available network.

---

**Note:** If you're on a call when you leave the Sprint National Network and enter an area where roaming is available, your call is dropped. If your call is dropped in an area where you think Sprint service is available, turn your phone off and on again to reconnect to the Sprint National Network.

---

## Checking for Voicemail Messages While Roaming

When you are roaming off the Sprint National Network, you will not receive on-phone notification of new voicemail messages. Callers can still leave messages, but you will need to periodically check your voicemail for new messages if you are in a roaming service area for an extended period of time.

**To check your voicemail while roaming:**

1. Dial 1 + area code + your phone number.
2. When you hear your voicemail greeting, press .
3. Enter your passcode at the prompt and follow the voice prompts.

When you return to the Sprint National Network, voicemail notification will resume as normal.

# Setting Your Phone's Roam Mode

---

Your phone allows you to control your roaming capabilities. By using the **Roaming** menu option, you can determine which signals your phone accepts.

## Set Mode

Choose from three different settings on your dual-band phone to control your roaming experience.

To set your phone's roam mode:

1. Select **Menu > Settings > More... > Roaming > Set Mode**.
2. To select an option, highlight it and press .
  - **Automatic** to seek service on the Sprint National Network.
  - **Sprint Only** to access the Sprint National Network only and prevent roaming on other networks.
  - **Roaming Only** to force the phone to seek a roaming system. The previous setting (Sprint Only or Automatic) is restored the next time the phone is turned on.

# Using Call Guard

---

Your phone has two ways of alerting you when you are roaming off the Sprint National Network: the onscreen roaming icon and Call Guard. Call Guard makes it easy to manage your roaming charges by requiring an extra step before you can place or answer a roaming call. (This additional step is not required when you make or receive calls while on the network.)

---

**Note:** Call Guard is turned off by default on your phone.

---

**To turn Call Guard on or off:**

1. Select **Menu > Settings > More... > Roaming > Call Guard**.
2. Highlight **On or Off** and press .

---

**Note:** Voice dialing and speed dialing are not available when you are roaming with Call Guard enabled.

---

**To place roaming calls with Call Guard on:**

1. From standby mode, dial 1 + area code + the seven-digit number and press . (You can also initiate a call from the Contacts, Call History, or Messaging.)
2. Select **Roam Call**.

**To answer incoming roaming calls with Call Guard on:**

1. Press . (A message will be displayed notifying you that roaming charges will apply.)
2. Select **Answer**.

---

**Note:** If the Call Guard feature is set to **On**, you need to take extra steps to make and receive roaming calls.

---

# Using Data Roam Guard

---

You will be asked if you want to continue using your browser or other online applications when you are in a data roaming area. When Data Roam Guard is turned off, your phone will establish or maintain a data connection in a data roaming area without asking you for permission.

---

**Note:** Data Roam Guard is turned off by default on your phone.

---

**To turn Data Roam Guard on or off:**

1. Select **Menu > Settings > More... > Roaming > Data Roaming**.
2. Highlight **Always Ask** or **Never Ask** and press .

# Managing Call History

---

### In This Section

---

- ◆ **Viewing History** (page 78)
  - ◆ **Call History Options** (page 79)
  - ◆ **Making a Call From Call History** (page 80)
  - ◆ **Saving a Phone Number From Call History** (page 80)
  - ◆ **Prepending a Phone Number From Call History** (page 81)
  - ◆ **Erasing Call History** (page 82)
- 

**The Call History keeps track of incoming calls, calls made from your phone, and missed calls.** This section guides you through accessing and making the most of your Call History.

# Viewing History

---

You'll find the Call History feature very helpful. It is a list of the last 50 phone numbers (or Contacts entries) for calls you placed, accepted, or missed. Call History makes redialing a number fast and easy. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

Each entry contains the phone number (if it is available) and Contacts entry name (if the phone number is in your Contacts). All call logs may appear on the list.

To view a Call History entry:

1. Press **Menu** > **Call History**, and then select **Missed Calls**, **Incoming Calls**, **Outgoing Calls**, or **Recent Calls**.
2. Highlight the entry you wish to view and press .

---

**Note:** Call History records only calls that occur while the phone is turned on. If a call is received while your phone is turned off, it will not appear in the phone's Incoming or Missed call logs.

---

---

**Note:** If you return a call from the voicemail menu, it will not appear in your phone's Outgoing call log.

---

# Call History Options

---

For additional information and options on a particular call, highlight a Call History entry and press . This feature displays the date and time of the call, the phone number (if available), and the caller's name (if the number is already in your Contacts). By pressing , you can select from the following options:

- **Call** to dial the number.
- **Save** to save the number if it is not already in your internal Contacts. (See “Saving a Phone Number From Call History” on page 80.)
- **Send Message** to send a message.
- **Prepend** to add numbers to the beginning of the selected number. (See “Prepending a Phone Number From Call History” on page 81.)
- **Delete** to delete the entry.
- **Next** to view the next entry.
- **Previous** to view the previous entry.

---

**Tip:** You can also view the next Call History entry by pressing the navigation key right or view the previous entry by pressing the navigation key left.

---

# Making a Call From Call History

---

To place a call from Call History:

1. Select **Menu > Call History**, and then select **Missed Calls**, **Incoming Calls**, **Outgoing Calls**, or **Recent Calls**.
2. Use your navigation key to select a Call History entry and press .

---

**Note:** You cannot make calls from Call History to entries identified as **No ID** or **Restricted**.

---

# Saving a Phone Number From Call History

---

Your phone can store up to 500 Contacts entries. Contacts entries can store up to a total of five phone numbers, and each entry's name can contain 32 characters.

To save a phone number from Call History:

1. Use your navigation key to select a Call History entry and press .
2. Scroll to **Save** and press .
3. Select **New Entry** to create a new internal Contacts entry for the number or **Existing Entry** to save the number to an existing entry.
4. Use your navigation key to highlight the information you want to edit, and then press .

5. Use the keypad to type in the new entry name and press .

– or –

Use your navigation key to scroll through your existing Contacts entries, highlight a name, and press .

6. Use your navigation key to select a phone number type (Mobile, Home, Office, etc.) and press .
7. Press **Done** (left softkey) to save the entry.

After you have saved the number, the new Contacts entry is displayed. (See “Contacts Entry Options” on page 87.)

---

**Note:** You cannot save phone numbers already in your Contacts or from calls identified as **No ID** or **Restricted**.

---

## Prepending a Phone Number From Call History

---

If you need to make a call from Call History and you happen to be outside your local area code, you can add the appropriate prefix by prepending the number.

To prepend a phone number from Call History:

1. Select a Call History entry and press .
  2. Scroll to **Prepend** and press .
  3. Enter the prefix and press  to call the number.
- or –

Scroll to **Save** and press  to save the amended number in your Contacts.

# Erasing Call History

---

To erase individual Call History entries, see “Call History Options” on page 79.

To erase Call History:

1. Select **Menu > Call History > Delete Call History**.
2. Select **Missed Calls, Incoming Calls, Outgoing Calls, Recent Calls, or All Calls**. (A confirmation dialog will appear.)
3. If you are certain you want to erase the call history, select **Yes**.  
— or —  
Select **No** to return to the previous menu.

# Using Contacts

---

## In This Section

---

- ◆ Adding a New Contacts Entry (page 84)
  - ◆ Finding Contacts Entries (page 85)
  - ◆ Contacts Entry Options (page 87)
  - ◆ Adding a Phone Number to a Contacts Entry (page 88)
  - ◆ Editing a Contacts Entry's Phone Number (page 88)
  - ◆ Assigning Speed Dial Numbers (page 89)
  - ◆ Editing a Contacts Entry (page 90)
  - ◆ Selecting a Ring Type for an Entry (page 90)
  - ◆ Send All Contacts (page 91)
  - ◆ Dialing Sprint Services (page 92)
  - ◆ Wireless Backup (page 93)
- 

**Now that you know the basics that make it easier to stay in touch with people and information, you're ready to explore your phone's more advanced features.** This section explains how to use your phone's Contacts list and helps you make the most of your contacts and time when you are trying to connect with the important people in your life.

# Adding a New Contacts Entry

---

Your phone can store up to 500 Contacts entries. Contacts entries can store up to a total of five phone numbers, and each entry's name can contain 32 characters.

To add a new entry:

1. Select **Menu > Contacts > Find/Add Entry**.
2. Scroll to **<New Entry>** and press .
3. Enter a name for the new entry and press . (See “Entering Text” on page 35.)
4. Scroll to **[Add Number]**, enter the phone number, and then press .
5. Select a label field (Mobile, Home, Office, Pager, Fax, or None) and press .
6. Scroll down to additional fields and enter or edit information as desired.
7. Press **Done** (left softkey).

---

**Shortcut:** You can also begin by entering the phone number in standby mode and selecting Save. (See “Saving a Phone Number” on page 31.)

---

After you have saved the number, the new Contacts entry is displayed. (See “Contacts Entry Options” on page 87.)

# Finding Contacts Entries

---

There are several ways to display your Contacts entries: by name, by speed dial number, and by group. Follow the steps outlined in the sections below to display entries from the Contacts menu.

## Finding Names

To find Contacts entries by name:

1. Select **Menu > Contacts > Find/Add Entry**.
2. Scroll through all the entries using your navigation key.  
— or —

Enter the first letter of a name. (The more letters you enter, the more your search narrows.)

3. To display an entry, highlight it and press .
4. To dial the entry's default phone number, press .
- or —

To display additional Contacts entries, press the navigation key left or right.

---

**Shortcut:** From standby mode, press **Contacts** (right softkey) to display the Contacts feature.

---

## Finding Group Entries

To find entries designated as part of a group:

1. Select **Menu > Contacts > Groups**.
2. Scroll through the group titles using your navigation key.  
To display entries belonging to a group, highlight the group and press .
3. To display an entry within the group, highlight it and press .
4. To dial the entry's default phone number, press .  
— or —  
To display additional Contacts entries, press the navigation key left or right.

## Finding Speed Dial Numbers

To find phone numbers you have stored in speed dial locations:

1. Select **Menu > Contacts > Speed Dial #'s**.
2. Scroll through speed dial entries using your navigation key. Speed dial numbers are displayed in numeric order.  
— or —  
Enter the number of a speed dial location using your keypad.
3. To display an entry, highlight it and press .
4. To dial the entry's default phone number, press .  
— or —  
To display additional Contacts entries, press the navigation key left or right.

# Contacts Entry Options

---

To access a Contacts entry's options, display the entry, highlight **<Edit Entry>**, and press . To select an option, highlight it and press .

-  **[Add Name]** to add a new contact name to the entry.
-  **[Add Number]** to add a phone number to the entry. (See “Adding a Phone Number to a Contacts Entry” on page 88.)
-  **[Add Email]** to add an email address to the entry.
-  **No Group** to assign the entry to a group.
-  **Default** to assign a preprogrammed or downloaded ringer.
-  **[Memo]** to add a note, street address, or other information.
-  **Default** to assign an image type to the entry.
-  **[URL]** to add a Web site's URL to the entry.

---

**Tip:** You can view the next entry by pressing the navigation key right or view the previous entry by pressing the navigation key left.

---

## Adding a Phone Number to a Contacts Entry

---

To add a phone number to an entry:

1. Display a Contacts entry. (See “Finding Contacts Entries” on page 85.)
2. Scroll to <Edit Entry> and press .
3. Highlight [Add Number] and press .
4. Enter the new phone number and press .
5. Use the keypad to enter the new number and press .
6. Press **Done** (left softkey) to save the new number.

— or —

Press **Options** (right softkey), assign a speed dial number for the number, and then press **Done** (left softkey) to save your new settings.

## Editing a Contacts Entry's Phone Number

---

To edit an entry's phone number:

1. Display a Contacts entry (see page 84).
2. Scroll to <Edit Entry> and press .
3. Highlight the number you wish to edit and press .
4. Press  to clear one digit at a time, or press and hold  to erase the entire number.
5. Re-enter or edit the number and press .
6. Press **Done** (left softkey) to save the number.

— or —

Press **Options** (right softkey) for additional options. When you're finished, press **Done** (left softkey) to save your new settings.

# Assigning Speed Dial Numbers

Your phone can store up to 99 phone numbers in speed dial locations. For details on how to make calls using speed dial numbers, see “Using One-Touch/Two-Touch Speed Dialing” on page 34.

Speed dial numbers can be assigned when you add a new Contacts entry, when you add a new phone number to an existing entry, or when you edit an existing number.

**To assign a speed dial number to a new phone number:**

1. Add a phone number to a new or to an existing Contacts entry. (See “Adding a New Contacts Entry” on page 84 or “Adding a Phone Number to a Contacts Entry” on page 88.)
2. Press **Options** (right softkey).
3. Highlight **Set Speed Dial** and press .
4. Select an available speed dial location and press . (A confirmation will be displayed.)
5. Scroll to **Set Speed Dial** and press . (A confirmation will be displayed.)
6. Press **Done** (left softkey) to save the new speed dial number.

**To assign a speed dial number to an existing phone number:**

1. Display a Contacts entry. (See “Finding Contacts Entries” on page 85.)
2. Scroll to **<Edit Entry>** and press .
3. Highlight the phone number for which you wish to assign a speed dial number, and press **Options** (right softkey).

4. Highlight **Set Speed Dial** and press .
5. Select an available speed dial location and press .
6. Scroll to **Set Speed Dial** and press . (A confirmation will be displayed.)
7. Press **Done** (left softkey) to save the new speed dial number.

---

**Note:** If you attempt to assign an already in-use speed dial location to a new phone number, a dialog will appear asking if you wish to replace the existing speed dial assignment. Select **Yes** to assign the location to the new phone number and delete the previous speed dial assignment.

---

## Editing a Contacts Entry

---

To make changes to an entry:

1. Display a Contacts entry.
2. Scroll to **<Edit Entry>** and press .
3. Highlight the part of the entry you wish to edit (**Name**, **Group**, **Ringer**, etc.) and press .
4. Add or edit the desired information and press .
5. Press **Done** (left softkey) to save your changes.

## Selecting a Ringer Type for an Entry

---

You can assign a ringer type to a Contacts entry so you can identify the caller by the ringer type. (See “Ringer Types” on page 45.)

To select a ringer type for an entry:

1. Display a Contacts entry.

2. Scroll to <Edit Entry> and press .
3. Highlight the current ringer type and press  to display the Ringer menu.
4. Select a ringer type and press .
5. Use your navigation key to scroll through available ringers. (When you highlight a ringer type, a sample ringer will sound.)
6. Highlight a ringer and press .
7. Press **Done** (left softkey) to save the new ringer type.

— or —

1. Display a Contacts entry and press .
2. Scroll to <Edit Entry> and press .
3. Highlight the current ringer type and press the navigation key right or left to display available ringer types. (When you highlight a ringer type, a sample ringer will sound.)
4. When you've selected your desired ringer, press **Done** (left softkey) to save the new ringer type.

## Send All Contacts

This allows you to send all contacts information in your phone to other party via Bluetooth.

To Send All Contacts:

1. Select **Menu > Contacts > Send All Contacts**.
2. If Bluetooth is not set to on, set to **On**.
3. Highlight a device to send the contacts information to and press  to send.

# Dialing Sprint Services

Your Contacts list is preprogrammed with contact numbers for various Sprint services:

To dial a service from your Contacts:

1. Select **Menu > Contacts > Services**.
2. Select **Customer Service, Dir Assistance, Account Info, Sprint Operator, Voice Command, Community Info, Non Emergency, Traffic Info, Repair Service, TTY Relay Service, or One Call Service**.

To dial a service from standby mode using your keypad:

1. Dial the appropriate service number:

- **Customer Service** –  
- **Sprint 411** –   
- **Account Info** –  
- **Sprint Operator** – 
- **Voice Command** – 
- **Community Info** –   
- **Non Emergency** –   
- **Traffic Info** –   
- **Repair Service** –   
- **TTY Relay Service** –   
- **One Call Service** –   

2. Press  to place the call.

# Wireless Backup

It may be necessary to transfer or backup all of your contacts to another device. This may be especially helpful if you are changing phones or would like to give another person all your contacts.

To setup and configure wireless backup:

1. Select **Menu > Contacts > Wireless Backup**.
2. Select **<Subscribe>** and press  to enable the service. If the wireless backup service has not been previously enabled on your account, you will be prompted with an onscreen dialog which will ask, "Connect to Vision to check your Wireless Backup subscription status".
3. Select **Yes** and press  to continue checking your status. You will be prompted with an onscreen dialog which will ask, "Wireless Backup is not active on your phone. Learn more?".
4. Select **Yes** and press  to continue onto the Wireless Backup purchase screen.
5. Use the Navigation Pad to highlight **Buy** and press  again to purchase this service.
6. Within a few minutes, you will receive a text message providing you with the Web address ([www.wirelessbackup.sprint.com](http://www.wirelessbackup.sprint.com)) and password for your personal backup folder.

---

**Note:** Wireless backup is a paid service. Activating this feature will incur a monthly charge on your account.

---

7. From your personal computer, launch your Internet browser and go to [www.wirelessbackup.sprint.com](http://www.wirelessbackup.sprint.com).
8. Enter your wireless phone number (without hyphens) in the **Sprint Phone Number** field.

9. Enter the wireless password you received via text message into the **Wireless Backup Password** field.
10. Click **Sign on** and follow the onscreen prompts.

To transfer all contacts to a remote site:

1. Select **Menu > Contacts > Wireless Backup**.
2. Select **View Status** and press .
  - If your Contacts list has changed since the last time you backed-up your data, a Status screen will ask if you would like to initiate an update.
  - Select **Try Now** and press .

---

**Note:** Do not interfere with the update process until the onscreen display has notified you of a successful update.

---

To confirm the transfer of all contacts to the remote site:

1. Select **Menu > Contacts > Wireless Backup**.
2. Select **View Status** and press  to confirm the time and date of the last successful backup.

To access the backup information on the Internet:

1. From your personal computer, launch your Internet browser and go to [www.wirelessbackup.sprint.com](http://www.wirelessbackup.sprint.com).
2. Enter your wireless phone number (without hyphens) in the **Sprint Phone Number** field.
3. Enter the wireless password you received via text message into the **Wireless Backup Password** field.
4. Click **Sign on** and follow the onscreen prompts.

### To unsubscribe from the Wireless Backup Service:

1. Select **Menu > Contacts > Wireless Backup > Unsubscribe**.
2. Follow the onscreen instructions. Unsubscribing from this service requires that you sign on to your Sprint account and unsubscribe online.

# Using the Phone's Calendar and Tools

---

### In This Section

---

- ◆ Using Your Phone's Calendar (page 97)
  - ◆ Using Your Phone's Alarm Clock (page 100)
  - ◆ Using Your Phone's Notepad (page 102)
  - ◆ Using Your Phone's Tools (page 102)
- 

**Your phone is equipped with several personal information management features that help you manage your busy lifestyle.** This section shows you how to use these features to turn your phone into a time management planner that helps you keep up with your contacts, schedules, and commitments. It takes productivity to a whole new level.

# Using Your Phone's Calendar

## Adding an Event to the Calendar

Your Calendar helps organize your time and reminds you of important events.

To add an event:

1. Select **Menu > Tools > Scheduler**.
2. Using your navigation key, highlight the day to which you would like to add an event and press **Add** (left softkey).

---

**Tip:** Press the navigation key up or down to scroll by week through the Calendar.

---

3. Select a time for the event by highlighting the time field and pressing .
  - Using your keypad and/or navigation key, set the start and end time for the event and press .
4. Select a title for the event by highlighting **[Content]** and pressing .
  - Enter the event title and press . (See “Entering Text” on page 35.)
5. Select a repeating status for the event by highlighting the repeat field and pressing .
  - Highlight **None**, **Daily**, **Mon - Fri**, **Weekly**, **Monthly**, or **Yearly** and press .
6. Select an alarm time for the event by highlighting the alarm field and pressing .
  - Highlight **None**, **On time**, **5 minutes**, **10 minutes**, **1 hour**, **1 day**, or **2 days** and press .

7. Select a ringer type for the alarm by highlighting the ringer field and pressing .
  - To select a ringer menu, select **Options > Single Tones, Ring Tones, Melodies, Voice Memo, My Content, My Melodies, Get New** for ringers.
8. Press **Save** (left softkey) to save the event.

## Event Alerts

There are several ways your phone alerts you to scheduled events:

- By playing the assigned ringer type.
- By illuminating the backlight.
- By flashing the LED.

## Event Alert Menu

When your phone is turned on and you have an event alarm scheduled, your phone alerts you and displays the event summary. To silence the alarm and reset the schedule, press .

To view additional options, press the appropriate softkey.

- **Detail** (right softkey) displays the event detail screen.
- **Snooze** (left softkey) silences the alarm and schedules it to replay again in five minutes.

## Viewing Events

To view your scheduled events:

1. Select **Menu > Tools > Scheduler**.
2. Using your navigation key, highlight the day for which you would like to view events and press . (If you have events scheduled for the selected day, they will be listed in chronological order.)

---

**Tip:** In the calendar view, days with events scheduled are underlined.

---

3. To display the details of an event listed in the schedule, highlight it and press .

## Going to Today's Calendar Menu

To go to the Calendar menu for today's date:

- ▶ Select **Menu > Tools > Scheduler > Options > Go to Today**.

## Erasing a Day's Events

To erase a day's scheduled events:

1. Select **Menu > Tools > Scheduler**.
2. Using your navigation key, highlight the day for which you would like to erase events and press .

---

**Tip:** In the calendar view, days with events scheduled are underlined.

---

3. Select **Options > Delete All**. (An alert will appear notifying you of the number of events to be erased.)
4. Select **Yes or No**.

---

**Note:** If the day for which you are erasing events contains a repeating event, you will receive the following prompt: "This is a recurring event. <event name>." Select **Delete this event only** to erase a single occurrence, **Delete all events** to erase all occurrences of the event, or **Cancel** to cancel the deletion of the repeating event.

---

## Purging Events

To delete events scheduled before a specific time and date:

1. Select **Menu > Tools > Scheduler > Options > Delete Old**.
2. Select the option to erase events older than **One week, One month, One year, or One day**. (A dialog will be displayed to inform you how many old events have been erased.)

## Purging All Events

To delete all scheduled events:

1. Select **Menu > Tools > Scheduler > Options > Delete All**. (A dialog will be displayed informing you how many events will be erased.)
2. Select **Yes** to erase all events or **No** to return to the calendar view.

## Using Your Phone's Alarm Clock

---

Your phone comes with a built-in alarm clock with multiple alarm capabilities.

To use the alarm clock:

1. Select **Menu > Tools > Alarm Clock**.
2. Select **Alarm 1, Alarm 2, Alarm 3, or Quick Alarm**.
3. Turn the alarm on or off by highlighting the activation field and pressing .
  - Select **On** or **Off** and press .
4. Select a time for the alarm by highlighting the time field and pressing .

- Using your keypad and/or navigation key, set the alarm time and press .
- 5. Select a repeating status for the alarm by highlighting the repeat field and pressing .
  - Highlight **Once, Daily, Mon - Fri, or Weekends** and press .
- 6. Select a ringer type for the alarm by highlighting the ringer field and pressing .
  - To select a ringer menu, select **Options > Single Tones, Ring Tones, Melodies, Voice Memo, My Content, My Melodies, Get New** for ringers.
- 7. Press **Save** (left softkey) to save your alarm settings.

#### To use the Quick Alarm:

1. Select **Menu > Tools > Alarm Clock**.
  2. Select **Alarm 1~3**.
  3. Customize time and other settings.
- or —
1. Select **Menu > Tools > Alarm Clock**.
  2. Select **Quick Alarm**.
  3. Select the quick alarm time.  
**Off / 1 min later / 10 min later / 30 min later / 1 hour later**

## Using Your Phone's Notepad

---

Your phone comes with a notepad you can use to compose and store reminders and notes to help keep you organized.

**To compose a note:**

1. Select **Menu > Tools > Notepad > <Add New>**.
2. Type your note using the numeric keypad and press . (See “Entering Text” on page 35.)

**To read a saved note:**

1. Select **Menu > Tools > Notepad**.
2. Highlight a note and press .

**To delete saved notes:**

1. Select **Menu > Tools > Notepad**.
2. Highlight a note and press .
3. Press **Delete** (right softkey).
4. Scroll to **Yes** and press .

## Using Your Phone's Tools

---

In addition to helping you be more efficient and organized, your phone offers useful and entertaining tools.

### Using EZ Tips

**To quickly and easily calculate tip amounts:**

1. Select **Menu > Tools > Calculator > Ez Tip Calculator**.
2. Use your keypad and navigation key to enter the bill amount and desired tip percentage. (The correct tip will be calculated instantly.)

3. If you're splitting the check, highlight **Split** and enter the number of people in your party. (An equal split of the bill will be calculated and displayed.)

## Using the Calculator

Your phone comes with a built-in calculator.

To use the calculator:

1. Select **Menu > Tools > Calculator > Calculator**.
2. Enter numbers using your keypad.
  - Press  to enter decimal points.
  - Press  to change the numeric value from positive to negative.
  - Press **Clear** (left softkey) to clear all numbers.
3. Press  for the total.

## World Clock

To view the time in 52 different locations:

1. Select **Menu > Tools > World Clock**.
2. Press **Cities** (right softkey) to select a city.

— or —

Press the navigation key left or right to scroll through different time zones.

# Using Your Phone's Voice Services

---

## In This Section

---

- ◆ **Using Voice-Activated Dialing** (page 105)
  - ◆ **Using Call [Name] [Type]/[Number]** (page 106)
  - ◆ **Using Send Msg to [Name] [Type]/[Number]** (page 108)
  - ◆ **Using Find Contact [Name] [Type]** (page 109)
  - ◆ **Managing Voice Memos** (page 110)
- 

**Your phone's Voice Services let you place calls using your voice, store voice reminders, and record memos right on your phone. This section includes easy-to-follow instructions on using voice-activated dialing and managing voice memos.**

## Using Voice-Activated Dialing

In addition to Sprint Voice Command (see page 188), built-in voice recognition software allows you to say commands to perform common functions supported by your phone. There is no voice training required to use the voice recognition feature. You simply say the predesignated command displayed on your screen in a normal tone of voice to perform the desired function.

**To activate voice recognition:**

1. Select **Menu > Tools > Voice Control**.
2. Wait for the beep and then say one of the following commands:
  - **Call [Name] [Type]/[Number]**
  - **Send Msg to [Name] [Type]/[Number]**
  - **Find [Name] [Type]**

When it recognizes one of these commands, the phone takes the corresponding action. If the phone does not hear a command within approximately eight seconds, it deactivates voice recognition without taking any action.

## Using Call [Name] [Type]/[Number]

---

You can voice dial from your phone with a single command by saying “**Call**” followed by a name or nickname and (optionally) a label stored in your Contacts list; or say “**Call**” followed by a valid phone number. You can also say “**Call**” by itself and be prompted for the name or number.

### Calling Contacts Entries

To place a call using Call [Name] [Type] [Number]:

1. Select **Menu > Tools > Voice Control > Call [Name] [Type]/[Number]**.
2. Say “**Call**” followed by the name and the label for the number you wish to call. For example, say “**Call John Mobile.**” The phone dials the number stored for the contact “**John**” with the label “**Mobile.**”

If the location recognized for the name does not have a number stored in Contacts, your phone will play the message “No number available, John Smith, Mobile,” and then launch the Contacts application for that name.

If a name has only a single number, or if you know the name but are not sure which number to call, say “**Call**” followed by the name only. For example, say “**Call John.**” If the name is recognized and there is only one number for the name, your phone immediately places the call. If there are multiple numbers stored for the contact, the phone prompts you with “**Which Number?**” and displays a list of options. You can select an option by saying it or by using your keypad.

## Calling Phone Numbers (Digit Dialing)

To voice dial a number that is not stored in your Contacts list:

1. Select **Menu > Tools > Voice Control > Call [Name] [Type]/[Number]**.
2. Say “**Call**” followed immediately by a valid string of digits to be dialed, for example, say “**Call 555 6666.**”
3. If the correct number is repeated, say “**Yes**” to dial the selected number.

Speak naturally and clearly and remember to speak one digit at a time — 1-800 should be pronounced “One Eight Zero Zero.”

## Using Send Msg to [Name] [Type]/[Number]

---

With a single voice command you can launch the email message client on the phone and specify a recipient for the email message. An email address must be associated with a Contacts entry. If there is no email address registered, the screen will prompt you to add a new email address to the Contacts entry.

To send an email message:

1. Select **Menu > Tools > Voice Control > Send Msg to [Name] [Type]/[Number]**.
2. Say “**Send**” followed immediately by the name of a person in your Contacts list and, optionally, the type of number you want to send it to. For example, say “**Send Email John Smith.**”

---

**Note:** The contact must have a previously entered email address as part of their profile. If there is no current email, you will be prompted to use the phone’s keypad to enter a new email address before continuing.

---

If you say “**Send**” without specifying a recipient, your phone prompts you with a list of possible matching items.

---

**Note:** When you start an email message through voice activation, the email message opens in VoiceMode automatically.

---

3. Use the phone’s keypad to enter text and press **Next** (left softkey).
4. Press **Send** (left softkey) to complete the process.

## Using Find Contact [Name] [Type]

---

You can look up and display contact information for any person stored in your Contacts list by saying “**Find**,” followed by the name.

To use Find <Name>:

1. Select **Menu > Tools > Voice Control > Find [Name] [Type]**.
2. Say “**Find John Smith.**” The entry information for the specified contact is displayed.

If you say only “**Find**,” your phone prompts you with “Say the name.”

# Managing Voice Memos

---

You can use your phone's Voice Services to record brief memos to remind you of important events, phone numbers, or grocery list items.

## Recording Voice Memos

To record a voice memo:

1. Select **Menu > Tools > Voice Memo**.
2. Scroll to **<Record New>** and press . (The phone prompts you to start recording after the beep.)
3. Wait for the beep and then start speaking. (As it is recording, the phone displays a countdown timer that shows how many seconds are left for recording.)

To end the recording of your memo:

- ▶ Press **Stop** (left softkey).

To record a conversation during a phone call:

- ▶ During a call, scroll to **Record Voice Memo** and press . (A one-minute counter is displayed on the screen to indicate the amount of time a single voice memo can be recorded.)

To end the recording of your conversation:

- ▶ Scroll to **Stop Voice Memo** and press  to end the recording prior to the countdown completion.

---

**Note:** Your phone can store a total of three minutes of memos.

---

## Voice Memo Options

To play the voice memos you have recorded:

1. Press **Menu > Tools > Voice Memo**.
2. Scroll to the voice memo you wish to hear and press .
  - **Play** to play the selected voice memo.
  - **Set As** to assign the recording as a default ringer, a voicemail alert, a message alert, or a Contacts ringer.
  - **View Details** to view the selected voice memo information.
  - **Edit Title** to edit the selected voice memo title.
  - **Delete** to erase the selected voice memo.
3. Scroll to **Play** and press .

## Erasing Voice Memos

To erase all voice memos:

1. Select **Menu > Tools > Voice Memo**.
2. Scroll to **<Delete All>** and press .
3. Scroll to **Yes** and press to confirm that you want to erase all voice memos.

# Using the microSD Card

---

## In This Section

---

- ◆ **Using Your Phone's microSD Card and Adapter** (page 113)
  - ◆ **microSD Settings** (page 115)
  - ◆ **microSD Folders** (page 116)
  - ◆ **Transfer Music** (page 117)
- 

**Your phone allows you to use a microSD card and an adapter to expand the phone's available memory space.** This highly secure digital card enables you to quickly and easily exchange images, music, and voice data between SD-compatible devices.

This section details the features and options of your phone's microSD functionality.

# Using Your Phone's microSD Card and Adapter

---

## Using the microSD Card

Your phone is equipped with a 64 MB microSD (Secure Digital) memory card and its adapter to expand the phone's available memory space. It allows you to easily store images, videos, music, and voice data in your phone.

## Inserting the microSD Card

To insert the microSD card into your phone:

1. Open the microSD access panel located on the right side of the phone.
2. Position the microSD card perpendicular to the opening and gently slide it into place until it is fully inserted and locked.

---

**Note:** Be sure to use only recommended microSD cards (8MB–4GB). Using non-recommended microSD cards could cause data loss and damage your phone.

---

## Removing the microSD Card

To remove the microSD card from your phone:

1. Open the microSD access panel located on the right side of the phone.
2. Push in and then release the microSD card to eject.
3. Pull the microSD card out of the phone.

---

**Note:** The microSD card and its adapter can be easily damaged by improper operation. Please be careful when inserting, removing, or handling them.

---

## microSD Icon Indicators

The following icon will appear on your phone's display screen when a microSD card is properly inserted into the microSD card slot:



Indicates that a microSD card has been inserted into your phone.

---

**Note: DO NOT** remove a microSD card while files are being accessed or transferred. It will result in loss or damage of data. Make sure your battery is fully charged before using the microSD card. Your data may become damaged or unusable if the battery runs out while using the microSD card.


---

## Using the microSD Adapter

The supplied microSD adapter allows microSD cards to be used in SD-compatible devices. Before using the SD-compatible device, you will need to insert the microSD card into the microSD adapter.

**To insert the microSD card into the microSD adapter:**

- ▶ With the label side of the microSD card facing up, insert the card into the supplied microSD adapter and gently slide the card until it is fully inserted.

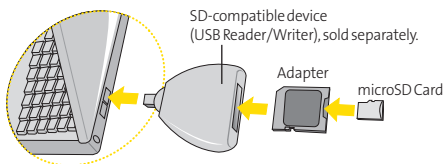

**To remove the microSD card from the microSD adapter:**

- ▶ Hold the front edge of the microSD card and gently pull outward to remove it from the adapter.

## Using the Phone as a USB Flash Drive

You can use the supplied USB cable to load files from your computer onto the microSD inserted into your phone. Voice calls will be disabled during the USB connection.

To view the microSD card contents from your computer:

1. Connect the USB cable to your phone and computer. After connecting the USB, you can manage the microSD contents from your computer.
2. Select **Menu > Tools > USB Mode > Mass Storage**.
3. Select **Yes** to confirm the USB connection message.

## microSD Settings

### Creating Folders in the microSD Card

The following steps allow your phone to create folders for storing files in your microSD card.

To create folders in the microSD card:

1. With the microSD inserted, select **Menu > Tools > Memory Card Manager**.
2. Press **Options** (right softkey) and select **Create New Folder**.

### Viewing Memory in the microSD Card

To view the used and available memory in the inserted microSD card:

1. With the microSD inserted, select **Menu > Tools > Memory Card Manager**.

2. Press **Options** (right softkey) and select **Memory Info**.  
(The used and available memory space will be displayed.)

## Formatting the microSD Card

Formatting a microSD card permanently removes all files currently stored on the card.

To format your microSD card:

1. With the microSD inserted, select **Menu > Tools > Memory Card Manager**.
2. Press **Options** (right softkey) and select **Format Memory Card**.
3. If you are sure you wish to remove all the files from your microSD card, select **Delete** and press .

---

**Note:** The formatting procedure erases all the data on the microSD card, after which the files CANNOT be retrieved. To prevent the loss of important data, please check the contents before you format the card.

---

## microSD Folders

---

### Displaying Your microSD Folders

All the files stored in your microSD are accessible through your microSD card folders.

To access the microSD card folders:

1. With the microSD card inserted, select **Menu > Tools > Memory Card Manager**.
2. Select a folder (**DCIM, Music**) and press .
3. To view or play a preview of a file, highlight it with your navigation key, and then press or the appropriate softkey.

## File Format Compatibility

Content loaded onto the microSD must be stored in the proper folder in order to be fully utilized on the phone.

**Folders for compatible media formats:**

- DCIM: jpg, 3g2
- Music: 3g2, mp4, 3gp, aac, amr, mid, mp3, qcp, 3gpp, pmd, m4v, m4a, koz

---

**Note:** Handsets in the past may have created a Media folder on the microSD card to store MP3, AAC and other music file formats. All music formats should be located within the Music folder in order to be utilized on your phone. To move files from the Media to the Music folder, connect to your phone as a USB flash drive from your computer then cut and paste the files. This phone does not support wma format.

---

## Transfer Music

This allows you to transmit music files to other devices with UMS technology through USB.

**To use transfer music :**

1. Connect your phone and your PC using the supplied USB cable.
2. Select **Menu > Tools > USB Mode > Transfer Music**.
3. With the Music Manager open on your PC, click the Transfer tab.
4. Highlight all the songs you wish to download to your phone and then drag them to the Transfer Music list section.
5. Once you have all the songs you wish to transfer, click **Transfer Now** to begin copying the songs to your phone.
6. Select **Done** to stop using the phone for Mass Storage and return to the main LCD standby mode.

---

**Note:** Do not disconnect phone while the transfer is in progress.

---

# Using the Music Composer and FM Transmitter

---

## In This Section

---

◆ **Composing a Melody** (page 119)

◆ **Music Transmitter** (page 121)

---

The Music Composer lets you use your phone to compose a melody and then use the tune on your phone. You can whistle or hum a tune into the phone and let it convert it into music, or you can use the phone's score or keyboard modes to create your own soundtrack.

The FM transmitter lets you broadcast your Sprint Music Store or audio media player files to a car stereo or other FM receiver.

# Composing a Melody

The Music Composer lets you compose your own music or transpose your own vocal tune, complete with background beats, and then convert it into your own customized ringer.

To compose a melody:

1. Select **Menu > Tools > Music Composer > Compose Melody** to activate Music Composer.
2. Highlight the desired selection and press .
  - **Humming Mode:** Hum a tune into the phone's microphone for up to 30 seconds.
  - **Keyboard Mode:** Using the onscreen keyboard, input the notes for your melody. You can customize your tune using the following options:
    - **To Score Mode** to change the input method to Score Mode (see below).
    - **Import** to use settings from a saved melody.
    - **Arrange** to select the style, instrument, rhythm, and tempo for your composition.
    - **Reset** to restore default settings.
    - **Exit** to return to the Music Composer main menu.
    - **Help** to access information about Keyboard Mode.
  - **Score Mode:** Using the keypad, input notes by pitch and length on a musical scale. You can customize your tune using the following options:
    - **To Keyboard Mode** to change the input method to Keyboard Mode (see above).
    - **Import** to use settings from a saved melody.

- **Arrange** to select the style, instrument, rhythm, and tempo for your selections.
- **Insert a Note** to insert a note into your melody.
- **Reset** to restore default settings.
- **Exit** to return to the Music Composer main menu.
- **Help** to access information about Score Mode.

#### To check your melody:

1. Select **Menu > Tools > Music Composer**.
2. Highlight **My Melody** and press .
3. Select a melody and press  to play, edit, or delete the melody.

#### To customize Music Composer settings:

1. Select **Menu > Tools > Music Composer**.
2. Highlight **Settings** and select either:
  - **Arrange** to customize the style, instrument, rhythm, and tempo.
  - **Metronome** to set the metronome speed (Fast/Normal/Slow).

# Music Transmitter

---

The FM transmitter lets you broadcast your Sprint Music Store or audio media player files to any FM receiver. To minimize interference and provide the strongest signal, your phone should be five feet or less from the radio.

FM frequency range: 88.1 MHz - 107.9 MHz.

To set the music transmitter:

1. Select **Menu > Tools > Music Transmitter**.
2. Scroll left or right to select a frequency from 88.1 MHz to 107.9 MHz and press .

To activate the music transmitter during media playback:

1. During the playback, press **Menu** (right softkey).
2. Select **Music Transmitter On**.

# Using Your Phone's Built-in Camera

---

## In This Section

---

- ◆ **Taking Pictures** (page 123)
  - ◆ **Storing Pictures** (page 129)
  - ◆ **Recording Videos** (page 134)
  - ◆ **Sending Sprint Picture Mail** (page 137)
  - ◆ **Managing SprintPicture Mail** (page 142)
  - ◆ **Storing Videos** (page 144)
  - ◆ **Printing Pictures Using PictBridge** (page 144)
  - ◆ **Settings and Info** (page 146)
- 

**Your phone's built-in camera gives you the ability to take full-color digital pictures, view your pictures using the phone's display, and instantly send them to family and friends. It's fun and as easy to use as a traditional point-and-click camera: just take a picture, view it on your phone's display, and send it from your phone to up to 25 people.**

This section explains the features and options of your phone's built-in camera.

# Taking Pictures

Taking pictures with your phone's built-in camera is as simple as choosing a subject, pointing the lens, and pressing a button. You can activate the phone's camera mode whether the phone is open or closed.

**To take a picture with the phone open:**

1. Select **Menu > Pictures > Camera** to activate camera mode. (Additional camera options are available through the camera mode **Options** menu. See "Camera Mode Options" on page 125 for more information.)

---

**Shortcut:** Press the side camera key to access the camera. To return to camera mode, select Options and then Take New Picture (see illustration on page 11).

---

2. Using the phone's main LCD as a viewfinder, aim the camera lens at your subject.
3. Press **Capture** (left softkey), , , or the side camera key until the shutter sounds. (The picture will automatically be saved to the In Phone Folder if you do not have a microSD card inserted. If you have a microSD card in the phone then the pictures will be automatically saved to your memory card instead. To change this option go to the Pictures menu, select **Settings and Info**, and then select the **Auto-Save to** option. Select **Memory Card** or **In Phone**.)
  - To return to camera mode to take another picture, press .

4. Press **Options** (right softkey) for more options:

- **Send** to send the picture to up to 25 contacts at one time.
- **Upload** to upload the picture you just took to the Sprint Picture Mail Web site ([www.sprint.com/picturemail](http://www.sprint.com/picturemail)). Depending on your settings, you may be prompted to accept a Sprint Vision connection.
- **Assign** to assign the picture to a phone task. Select an option:
  - **Picture ID** to assign the picture to a Contacts entry.
  - **Screen Saver** to use the picture as a screen saver.
  - **Incoming Calls** to display the picture for all incoming calls.
- **Delete** to delete the picture you just took.
- **Print** to order prints that can be delivered by mail or picked up at a retail outlet; or to print directly to a printer using Bluetooth or PictBridge.
- **Post to Service** to send the image to a number of popular third-party Web image services.
- **Review/Send Media** to go to the In Phone Folder to review your saved pictures.
- **Take New Picture** to return to Camera mode to take another picture.

**To take a picture with the phone closed:**

1. Press and hold the side camera key to activate camera mode.
2. Point the camera lens at your subject. (You can check the picture framing through the external display screen.)

---

**Note:** When taking a picture with the phone closed, the subject image appears in reverse on the external display. The captured image will not be saved in reverse.

---

3. Press the side camera key to take the picture.

## Camera Mode Options

When the phone is open and in camera mode, press **Options** (right softkey) to display additional camera options:

- **View Mode** to select from the following options:
  - **Normal**
  - **Full Screen**
  - **Widescreen**
- **Flash** to activate the flash. (See “Setting the Flash” on page 126 for details.)
- **SelfTimer** to activate the camera’s timer. (See “Setting the SelfTimer” on page 126 for details.)
- **ColorTone**: Press the navigation key right or left to select **Normal**, **Black & White**, **Negative**, or **Sepia**. (The default setting is **Normal**.)
- **Image Controls** to select from the following options:
  - **Brightness** to select **Auto** or **Manual** brightness control. If you select **Manual**, press the navigation key right (increase) or left (decrease) to select a setting, and press  to apply the selected setting.
  - **White Balance** to adjust white balance based on changing conditions. Select from **Auto**, **Tungsten**, **Fluorescent**, **Sunny**, **Cloudy**, or **Manual -5~5**.
- **Settings** to select **Resolution**, **Quality**, **Shutter Sound**, or **Image Enhancer**. (See “Selecting Camera Settings” on page 127 for details.)
- **Review/Send Media** to display the pictures saved in the InPhone or Memory Card folder.
- **Camcorder Mode** to switch to Video mode. (See “Recording Videos” on page 134 for details.)

## Setting the Flash

To activate the flash:

1. From camera mode, select **Options > Flash**.
2. Select one of the following options and press :
  - **Off** to deactivate the flash.
  - **On This Shot** to activate the flash for one shot.
  - **Always On** to activate the flash each time you take a picture.

## Setting the Self Timer

To activate the self timer:

1. From camera mode, select **Options > Self Timer**.
2. Highlight the length of delay you want the timer to use (**5 seconds** or **10 seconds**) and press .
3. Select **Start** (left softkey) when you are ready to start the timer. ( appears on the upper right portion of the main LCD during the self timer countdown.)
4. Get ready for the picture. (When the timer is down to three seconds, the self timer icon will turn red and the phone will begin to beep.)

To cancel the self-timer after it has started:

- ▶ Press **Cancel** (right softkey).

---

**Note:** While the self-timer is active, all keys are disabled except **Back**, **End**, and the right softkey button **Cancel**.

---

## Using the Zoom

This feature allows you to zoom in on an object when you take a picture. Depending on your resolution settings, you can adjust the zoom from 1x to 15x steps.

To use the zoom:

1. From camera mode, press the navigation key or the side volume key up or down to adjust the zoom. (The gauge bar appears.)
2. Press **Capture** (left softkey), , , or the side camera key to take the picture. (The picture will automatically be saved in the In Phone Folder.)

---

**Note:** The Zoom gauge will not appear when the Resolution setting is High. Zoom is available only when using VGA or QVGA resolution.



---

## Selecting Camera Settings

To select your camera settings:

1. From camera mode, select **Options > Settings**.
2. Select one of the following options and press  :
  - **Resolution** to select a picture's file size (**1.3M (960\*1280)**, **VGA (480\*640)**, or **QVGA (240\*320)**).
  - **Quality** to select the picture quality setting (**Fine**, **Normal**, or **Economy**).
  - **Shutter Sound** to select a shutter sound (**Shutter 1~4**, or **Off**).
  - **Image Enhancer** to enhance image resolution from -2EV to 2EV.

## Viewing Your Camera's Status Area Display

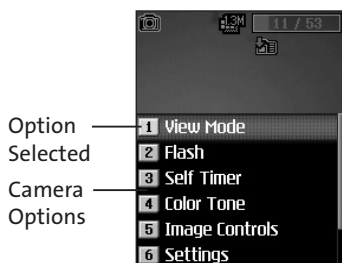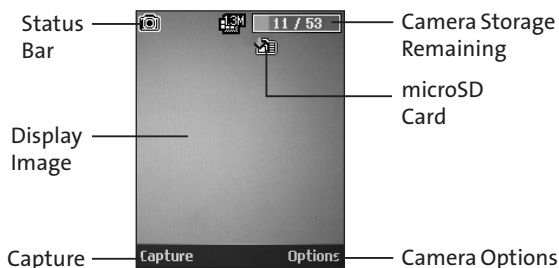

# Storing Pictures

Your phone's picture storage area is called **My Albums**. There are three types of folders that can be used separately according to your needs:

- **In Phone**
- **Memory Card**
- **Online Albums**

## In Phone Folder

The storage area of your phone is called the In Phone folder. Once a picture is taken, it is automatically saved to the In Phone folder (unless you have a microSD card inserted, in which case the picture will be automatically saved to your memory card instead).

From the In Phone folder, you can view pictures and videos saved in your phone, send them to the Sprint PCS Picture Mail Web site ([www.sprint.com/picturemail](http://www.sprint.com/picturemail)), delete images, and access additional options.

To review your stored pictures in the In Phone folder:

1. Select **Menu > Pictures > My Albums > In Phone**.
2. Use your navigation key to view and scroll through the pictures.

## In Phone Folder Options

When you are viewing the In Phone folder, press **Options** (right softkey) to display the following options:

- **Play** to play a video that was just recorded (if applicable).
- **Send** to send an image to another user using Picture Mail.

- **Upload** to upload pictures from the In Phone folder to the Sprint Picture Mail Web site ([www.sprint.com/picturemail](http://www.sprint.com/picturemail)). Depending on your settings, you may be prompted to accept a Sprint Vision connection. Choose **My Uploads** or **My Albums**.

---

**Note:** If this is the first time you have accessed the Sprint Picture Mail account, you will be prompted to create your Sprint Picture Mail password.

---

- **Assign** to display the following options:
  - **Picture ID** to display the currently highlighted picture for incoming calls from a specific Contacts entry. Select the desired entry and press .
  - **Screen Saver** to display the currently highlighted picture as a screen saver.
  - **Incoming Calls** to display the currently highlighted picture for all incoming calls.

---

**Note:** Pictures assigned as a Picture ID or Screen Saver will automatically be copied to the **In Phone** folder.

---

- **Delete** to delete pictures in the In Phone Folder. Select **Delete selection** or **Delete all**.
- **Print** to order prints that can be delivered by mail or picked up at a retail outlet; or to print directly to a printer using Bluetooth or PictBridge.
- **Post to Service** to send the image to a number of popular third-party Web image services.

---

**Note:** Deleting pictures from the In Phone folder will free up memory space in your phone to enable you to take more pictures. Once deleted, pictures cannot be uploaded to your online Sprint Picture Mail account or assigned to phone tasks.

---

- **Copy/Move** to copy or move the image from the In Phone memory to the installed memory card.

- **Detail/Edit** to display the following options:
  - **Text Caption** to edit the selected picture's caption.
  - **Media Info** to display information such as Caption, Model, Taken, Resolution, File size, Quality, and Uploaded.
- **Media Filter** to display the following options:
  - **All** to display all media.
  - **Pictures Only** to display only pictures.
  - **Videos Only** to display only videos.
- **Album List** to display the My Album list.
- **Camera/Camcorder Mode** to activate Camera/Camcorder mode.
- **Zoom**

When you are viewing the In Phone folder, press **Expand** (left softkey) to display the following option:

- **Expand/Thumbnail** to switch the display from expanded view to thumbnail view (up to nine pictures per screen).



## Memory Card

When no memory card is present the pictures will be automatically saved in the In Phone folder.

To review your stored pictures in the Memory Card:

1. Select **Menu > Pictures > My Albums > Memory Card**.
2. Use your navigation key to view and scroll through the pictures.

## Memory Card Options

- ▶ When viewing the pictures in your memory card, press **Options** (right softkey) to display picture options. (The Memory Card options are identical to the In Phone Folder options; please see “In Phone Folder Options” on page 129 for details.)

## Online Albums

Sprint Picture Mail allows you to save your pictures to Online Albums that make it easy to save, organize and share all your pictures.

---

**Note:** If this is the first time you have accessed the Sprint Picture Mail account, you will be prompted to create your Sprint Picture Mail password.

---

To save pictures to an online album:

1. Select **Menu > Pictures > My Albums > In Phone or Memory Card**.
2. Choose picture(s) you want to upload and then select **Options**.
3. Select an album (**My Uploads** or **My Albums**) and press  to upload your picture(s).

To review your online albums:

1. Select **Menu > Pictures > My Albums > Online Albums**.  
(The **Uploads** folder and your albums appear.)
2. Select **Uploads** or an album title and press  to display your saved images.

## Online Album Options

When you are viewing images in your online albums, press **Options** (right softkey) to display the following options:

- **Send** to send an image to another user using Picture Mail.
- **Assign** to download the selected picture and assign it to a phone task. (See “In Phone Folder Options” on page 129.)
- **Delete** to delete pictures from the current online album.  
Select **Delete selection** or **Delete all**.
- **Print** to order prints that can be delivered by mail or picked up at a retail outlet; or to print directly to a printer using Bluetooth or PictBridge.
- **Post to Service** to send the image to a number of popular third-party Web image services.
- **Save To** to download the image to your phone’s In Phone Folder or Memory Card.
- **Copy/Move** to copy or move images between the currently selected folder and another folder in Online Albums.
- **Detail/Edit** to display the following options:
  - **Text Caption** to edit the selected picture’s caption.
  - **Media Info** to display information such as the Caption, Model, Taken, Resolution, File size, Quality, and Uploaded.
- **Media Filter** to display the following options:
  - **All** to display all media.

- **Pictures Only** to display only pictures.
- **Videos Only** to display only videos.
- **Album List** to display the My Album list.

## Recording Videos

---

In addition to taking pictures, you can also record, view, and send videos to your friends and family with your phone's built-in video camera.

To record a video:

1. Select **Menu > Pictures > Camcorder > Video Mail or Long Video** to activate video mode. (Additional video options are available through the video mode **Options** menu. See “Video Mode Options” on page 135 for more information.)
2. Using the phone's main LCD as a viewfinder, aim the camera lens at your subject.
3. Press **Record** (left softkey), , , or the side camera key to begin recording. (The maximum recording time is 20 seconds.)
4. Press **Done** (left softkey) or the side camera key to stop recording. (The video will automatically be saved to the In Phone Folder if you do not have a microSD card inserted. If you have a microSD card in the phone then the video will be automatically saved to your memory card instead. To change this option go to the Pictures menu, select **Settings and Info**, and then select the **Auto-Save to** option. Select **Memory Card** or **In Phone**.)
5. Press **Options** (right softkey) for more options:
  - **Play** to play the video that was just captured.

- **Send** to send the video to up to 25 contacts at one time.
- **Upload** to upload videos from the In Phone Folder to the Sprint Picture Mail Web site ([www.sprint.com/picturemail](http://www.sprint.com/picturemail)). Depending on your settings, you may be prompted to accept a Sprint Vision connection. Choose **My Uploads** or **My Albums**.
- **Assign** to assign the video as an animated screen saver or ringer.
  - **Screen Saver** to display the currently highlighted picture as a screen saver.
  - **Ringers** to display the video for all incoming calls.
- **Delete** to delete videos in the In Phone or Memory Card folder.
- **Post to Service** to send the video to a number of popular third-party Web image services.
- **Review/Send Media** to display the videos saved in the In Phone folder or to send videos.
- **Take New Video** to return to camcorder mode.

## Video Mode Options

When the phone is open and in camcorder mode, press **Options** (right softkey) to display additional camera options:

- **Video Light** to activate the video light.
- **Color Tone**: Press the navigation key right or left to select **Normal**, **Black & White**, **Negative**, or **Sepia**. (The default setting is **Normal**.)
- **Image Controls** to select from the following options:

- **Brightness** to select **Auto** or **Manual** brightness control. If you select **Manual**, press the navigation key right (increase) or left (decrease) to select a setting and press  to apply the selected setting.
- **White Balance** to adjust white balance based on changing conditions. Select from **Auto**, **Tungsten**, **Fluorescent**, **Sunny**, **Cloudy**, or **Manual -5~5**.
- **Settings** to select **Resolution**, **Quality**, **Cue Sound**, or **Video Length**. (See “Selecting Video Settings” below for details.)
- **Review/Send Media** to display the videos saved in the In Phone or Memory Card folder and to send the videos.
- **Camera Mode** to switch to Camera mode. (See “Taking Pictures” on page 123 for details.)

## Selecting Video Settings

To select your video settings:

1. From camcorder mode, select **Options > Settings**.
2. Select one of the following options and press  :
  - **Resolution** to select a video’s file size (**QCIF(144\*176)**, **sub-QCIF(96\*128)**).
  - **Quality** to select the video quality setting (**Fine**, **Normal**, or **Economy**).
  - **Cue Sound** to select a cue sound (**Cue 1~3**, or **Off**).
  - **Video Length** to select **Video Mail** or **Long Video**.

# Sending Sprint Picture Mail

---

Once you've taken a picture or video, you can use the messaging capabilities of your phone to instantly share it with family and friends. You can send a picture to up to 25 people at a time using their email addresses or their wireless phone numbers.

## Sending Pictures From the In Phone Folder

To send pictures from the In Phone folder:

1. Press **Menu > Pictures > My Albums > In Phone**.
2. Highlight a picture you wish to send and press . (The check box in the lower right corner of the picture will be marked. You can select multiple pictures.)
3. Press **Options** (right softkey) > **Send**.
4. Select **From Contacts, Mobile, Email, or Recent List** and press .

---

**Note:** The first time you send Sprint Picture Mail, you will be prompted to establish an account via the Sprint Picture Mail Web site.

---

5. Select a contact or enter a mobile number or an email address using the keypad, and press . (This action activates the input keys on the phone side).
6. Use the keypad to enter a number or email address and press **OK** (left softkey) to continue.
7. Enter additional recipients or press **Next** (left softkey) to continue.

8. If you wish to include a subject, scroll to Subject and press **Add** (right softkey). Enter your subject using the keypad and press **Next** (left softkey) to save and exit. (The phone then deactivates the phone and activates the Main LCD, which displays a preview of the message.)
9. If you wish to include a text message, scroll to Text and press . Enter your message using the phone's keypad (or press **Options** (right softkey) to select from **Preset Msg** or **Recent Msg**) and press **Next** (left softkey) to save and exit.
10. If you wish to include a voice memo message with the picture, use the Navigation Pad to highlight the Audio box and press **Record** (right softkey). Press **Stop** (left softkey) to stop recording. (The maximum recording time is 10 seconds.)
11. Confirm the recipients, subject, message, attached audio and picture.
  - To change a recipient, highlight the recipient, select the appropriate softkey, and follow the instructions in step 5 to select or edit the recipient.
  - To change the text message, scroll to Text and select the appropriate softkey.
  - To change the voice memo, highlight the box next to **Audio**, select **Review**, and select **Re-Record** under **Options**.
  - To change the attached picture(s), select the thumbnail picture and press **Change** (right softkey). Select In Phone and press **Next** (left softkey).
12. Press **Send** (left softkey) to send the picture. If you are notified that “**Your message is being sent,**” press **Continue** (left softkey) to complete the process of sending the picture.

## Sending Pictures From Messaging

You can also send Sprint Picture Mail from your phone's Messaging menu.

To send pictures from the Messaging menu:

1. Select **Menu > Messaging > Send Message > Picture Mail**.
2. **From Contacts** or **Recent List** to select a contact, or select **Mobile** or **Email** and enter a mobile number or an email address using the keypad and press **OK** (right softkey).
3. Enter additional recipients or press **Next** (right softkey) to continue.
4. Use the navigation key to select one of the following media sources and press .
  - **In Phone**
  - **Memory Card**
  - **Online Albums**
  - **Take New Picture**
  - **Take New Video**
  - **Text Only**
5. Display the picture you wish to send and press . (You can select multiple pictures.)
6. Press **Next** (right softkey) to continue.

---

**Tip:** To take and send a new picture from Messaging, select **New Picture** during step 4 above, take the new picture, select **Next** (right softkey), and follow steps 5-12 in "Sending Pictures From the In Phone Folder" on page 139.

---

# Managing Sprint Picture Mail

---

## Using the Sprint Picture Mail Web Site

Once you have uploaded pictures from your phone to your online Sprint Picture Mail account at [www.sprint.com/picturemail](http://www.sprint.com/picturemail), you can use your computer to manage your pictures. From the Sprint Picture Mail Web site ([www.sprint.com/picturemail](http://www.sprint.com/picturemail)) you can share pictures, edit album titles, add captions, and organize images. You can even send your pictures to be printed at participating retail locations.

You will also have access to picture management tools to improve and customize your pictures. You'll be able to lighten, darken, crop, add antique effects, add comic bubbles and cartoon effects, and use other features to transform your pictures.

**To access the Sprint Picture Mail Web site:**

1. From your computer's Internet connection, go to [www.sprint.com/picturemail](http://www.sprint.com/picturemail).
2. Enter your phone number and Sprint Picture Mail password to login.

## Managing Online Pictures and Videos From Your Phone

You can use your phone to manage, edit, or share pictures you have uploaded to the Sprint Picture Mail Web site at [www.sprint.com/picturemail](http://www.sprint.com/picturemail).

To view your online pictures from your phone:

1. Select **Menu > Pictures > My Albums > Online Albums**.  
(Depending on your settings you may be prompted to accept a Power Vision connection.) (The **Uploads** folder and your albums appear.)
2. Highlight Uploads or an album title and press  to display thumbnail images (up to nine per screen).

---

**Tip:** To expand a selected picture from thumbnail to full-screen, select **Expand** (left softkey).

---

3. Use the navigation key to select a picture.
4. Press **Options** (right softkey) to display your online picture options.
  - **Send**
  - **Assign**
  - **Delete**
  - **Print**
  - **Post to Service**
  - **Save To**
  - **Copy/Move**
  - **Detail/Edit**
  - **Media/Filter**
  - **Album List**

## Uploading Pictures

To upload pictures:

1. Select **Menu > Pictures > My Albums > In Phone** or **Memory Card**. (Thumbnail pictures will be displayed.)
2. Select the picture(s) you wish to upload by placing a check mark on each image and press **Options** (right softkey).
3. Select **Upload** and choose **Upload Selection** or **Upload All** and press . (Up to 30 pictures at a time can be uploaded.)
4. Press **Continue** (left softkey) to start uploading.

## Downloading Your Online Pictures

From your online Sprint Picture Mail albums display at [www.sprint.com/picturemail](http://www.sprint.com/picturemail), you can select pictures to download to your phone.

To download pictures from the Sprint Picture Mail Web site:

1. From the online pictures display, select the picture you wish to download and press **Options** (right softkey).
2. Highlight **Assign** and press .
3. Select one of the following options and press .
  - **Picture ID** to download and assign the selected picture as a Picture ID.
  - **Screen Saver** to download and assign the selected picture as a screen saver.
  - **Incoming Calls** to download a picture and assign to incoming calls with or without caller ID.

## Accessing Online Picture Options From Your Phone

1. Select a picture from your online Picture Mail.
2. Press **Options** (right softkey) to display options.
3. To select an option, highlight it and press .
  - **Copy/Move** to copy or move pictures to a selected album:
    - **Copy This** to copy the selected picture to the album.
    - **Copy All** to copy all pictures in the current album (or Inbox) to the target album.
    - **Move This** to move the selected picture to the album.
    - **Move All** to move all pictures in the current album (or Inbox) to the target album.
  - **Save to Phone** to copy the selected picture to the Saved to Phone folder.
  - **Erase** to select **Erase Selection** or **Erase All** to erase a single picture or all pictures saved in the current album (or Inbox).
  - **Expand** (left softkey) to expand the selected picture.

### To access your Online Albums options from your phone:

1. Display the album list in the Online Sprint Picture Mail menu.
2. Use the navigation key to select an album (or Inbox).
3. Press **Options** (right softkey) to display options.
4. To select an option, highlight it and press .
  - **Send** to send the album through the Sprint Picture Mail Web site.

- **Create Album** to create a new album.
- **Album Info** to display information about the album. You can view the name of the album, the creation date, and the number of pictures and videos in the album.

## Storing Videos

---

Your phone's video storage area is called My Albums. There are three types of folders in the My Albums menu that can be used separately according to your needs:

- **In Phone** (See "In Phone Folder" on page 129.)
- **Memory Card** (See "Memory Card" on page 132.)
- **Online Albums** (See "Online Albums" on page 132.)

## Printing Pictures Using PictBridge

---

PictBridge is an industry standard established by the Camera & Imaging Products Association (CIPA) that enables a range of digital photo solutions, including direct photo printing from a digital camera to a printer without the need for a PC.

### Printing From Your Phone

Your phone's built-in camera allows you to print images directly to a printer using the PictBridge technology. A USB cable must be connected between the two devices before any printing can occur.

## To use PictBridge to print pictures from your phone:

1. Insert one end of the USB accessory cable into the USB slot on the printer. (The printer must support PictBridge technology.)
2. Select **Menu > Pictures > PictBridge**.
3. Insert the other end of the USB accessory cable into your phone.
4. Read the Connect Printer message and press **Next** (left softkey). The Select Folder pop-up appears in the display. Select the folder location of the image.
5. Highlight the desired image and press **Next** (left softkey). (To select multiple images, press  to place a check mark next to each image selected.)
6. Highlight **Copies** and press the navigation key left or right to select the desired number of copies to print.
7. Press the navigation key down to select **Type**. Press the navigation key left or right to select one of the following:
  - **Standard**: prints the standard image.
  - **Index**: prints the index information.

---

**Note:** These options may vary and are dependent on the printer's capabilities.

---

8. Press the navigation key down to select **Paper Size**. Press the navigation key left or right to select an available print size.

---

**Note:** These sizes may vary and are dependent on the printer's capabilities.

---

9. Press the navigation key down to select **Date**. Press the navigation key left or right to turn this option on or off.

10. Press the navigation key down to select **Border**. Press the navigation key left or right to turn this option on or off.
11. Press **Preview** (right softkey) to preview the image, or press **Print** (left softkey) to print the image.
12. Select **Yes** to confirm printing and press .

## Settings and Info

---

The settings and info menu allows you to configure where pictures or videos are saved, view your account information, or switch the format between portrait or landscape mode.

To access the settings and info menu:

1. Select **Menu > Pictures > Settings and Info**.
2. Select one of the following options and press .
- **Auto-Save to** to select where to save pictures and videos. The available options are **Memory Card** and **In Phone**.
- **Account Info** to display your current Sprint account settings via an online connection.

# Using Bluetooth

---

## In This Section

---

- ◆ **Turning Bluetooth On and Off** (page 148)
  - ◆ **Using the Bluetooth Settings Menu** (page 149)
  - ◆ **Bluetooth Profiles** (page 151)
  - ◆ **Pairing Bluetooth Devices** (page 153)
- 

**Your phone features built-in Bluetooth technology, allowing you to share information more easily than ever before.**

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets, hands-free car kits, and Bluetooth-enabled handhelds, PCs, printers, and wireless phones. The Bluetooth communication range is usually up to approximately 10 meters (30 feet).

This section details how to set up and make the most of your phone's Bluetooth capabilities.

# Turning Bluetooth On and Off

---

By default, your device's Bluetooth functionality is turned off. Turning Bluetooth on makes your phone "discoverable" by other in-range Bluetooth devices.

**To turn Bluetooth on:**

1. Select **Menu > Settings > Bluetooth > On/Off**.
2. Press the navigation key up or down to select **On** and press  to enable Bluetooth.

**To turn Bluetooth off:**

1. Select **Menu > Settings > Bluetooth > On/Off**.
2. Press the navigation key up or down to select **Off** and press  to disable Bluetooth.

## Bluetooth Status Indicators

The following icons show your Bluetooth connection status at a glance:



indicates Bluetooth Enabled (Hidden).



indicates Bluetooth Enabled (Visible).



indicates Bluetooth Connected.

# Using the Bluetooth Settings Menu

The **Bluetooth Settings** menu allows you to set up many of the characteristics of your phone's Bluetooth service, including:

- Entering or changing the name your phone uses for Bluetooth communication.
- Setting your phone's visibility (or "discoverability") for other Bluetooth devices.
- Displaying your phone's Bluetooth address.

To access the Bluetooth Settings menu:

1. Select **Menu > Settings > Bluetooth**.
2. Use the navigation key to select **Visibility** or **Device Info**, and press .

## Bluetooth Settings: My Bluetooth Name

The **My Bluetooth Name** section of the Bluetooth Settings menu allows you to select a Bluetooth name for your phone. Your phone's Bluetooth name will appear to other in-range Bluetooth devices, depending on your visibility settings.

To set a Bluetooth name for your phone:

1. Select **Menu > Settings > Bluetooth > Device Name**.
2. Press  to clear the current name.
3. Use your keypad to enter a new name and press  to save and exit. (See "Entering Text" on page 35.)

## Bluetooth Settings: Visibility

The **Visibility** section of the Bluetooth Settings menu allows you to manage your phone's availability to other Bluetooth devices.

To configure your phone's visibility (discoverability) to other Bluetooth devices:

1. Select **Menu > Settings > Bluetooth > Visibility**.
2. Select your desired visibility setting and press  :
  - **Hidden** to prevent other Bluetooth devices from detecting and identifying your phone.
  - **Visible for 3 min** to allow Bluetooth devices to detect and identify your phone for three minutes.
  - **Always Visible** to allow Bluetooth devices to detect and identify your phone at any time it is within range.

---

**Note:** Any changes you make to your Bluetooth settings will be saved to the current profile when you exit the Bluetooth Settings menu.

---

## Bluetooth Settings: My Bluetooth Address

To display your phone's Bluetooth address:

- ▶ Select **Menu > Settings > Bluetooth > Device Info**.

# Bluetooth Profiles

Different profiles can be used for specific Bluetooth functions.

- **Headset Profile (HSP)**— This profile functions as a wireless ear jack. When an incoming call is received, the ringer can be heard through the headset and a built-in alert tone can be heard through the phone. The call can then be received by pushing a button. While using the phone, you can use the headset instead of the phone by pushing a button on the headset, the same as inserting a jack into the phone. Increase or decrease the volume by using the volume key on the side of the phone.
- **Hands-Free Profile (HFP)**— This profile functions as a wireless car kit. Incoming calls ring to the hands-free headset or device. Calls can be received by pressing a button on the headset or device. For dialing, four functions are supported: recent call dial, voice dial, speed dial, and number dial. Increase or decrease the volume by using the volume key on the side of the phone.
- **Dial-Up Network Profile (DUN)**— This profile functions as a wireless data cable, connecting a PC or PDA to a network through your phone.
- **Object Push Profile (OPP)**— You can send a Contacts or a Calendar entry in your phone to other Bluetooth-enabled devices. The menu for “Send Contact via Bluetooth” is under “**Contacts > Find/Add Entry.**” The menu for “Send Calendar via Bluetooth” is under “**Tools > Scheduler > Options.**”
- **Advanced Audio Distribution Profile / Audio / Video Remote Profile (A2DP / AVRCP)**— The A2DP profile allows you to connect other A2DP-compatible accessories including Bluetooth stereo headsets.\* The AVRCP profile enables

you to rewind, fast forward, pause, and resume media playback with other AVRCP-compatible accessories including Bluetooth stereo headsets.

When a call is received during playback, the playback is automatically suspended. After the call is complete, simply resume playback from either the accessory headset or from the phone.

Supported media formats: AAC, WMA, MP3, and M4A.

Unsupported media formats: M3U, streaming media, and MP4.

*\*When using a Bluetooth headset, the headset volume can be controlled only by the headset volume control – the phone's volume control will not affect the headset.*

- **Basic Printing Profile (BPP)** – You can print pictures on your phone directly to a printer, without the need for a PC. This function works with BPP-profile-enabled printers. This option can be found under “**Pictures > My Albums > (Select Album) > Options > Print > Bluetooth**” or “**Tools > Bluetooth > Trusted Devices > (Select Printer Device) > Print.**”
- **File Transfer Profile (FTP)** – With an FTP connection, you can move or copy files from your PC to your phone. However, you cannot transfer files from your phone to your PC. By default, FTP transfers take place in your Exchange Folder, but you may also designate the files to be sent either to the DCIM.

To access the Exchange Folder:

Select **Menu > Tools > Bluetooth > <Settings> > Exchange FTP Folder.**

- **Phone Book Access Profile (PBAP)** - With a PBAP connection, you can see your phone's Call History and phonebook, including detailed information about Contacts entries. To use this function, your car kit must support PBAP.

# Pairing Bluetooth Devices

## Add Device

The Bluetooth pairing process allows you to establish trusted connections between your phone and another Bluetooth device. When devices are paired, a passcode is shared between devices. (Passcodes are typically four digits. Please refer to your device user guide for further passcode instructions, as passcodes may be device-specific or user-defined.)

**To pair your phone with another Bluetooth device:**

1. Select **Menu > Tools > Bluetooth > <Add New> > Search**. (Your phone will display a list of discovered in-range Bluetooth devices.)
2. Select the device you wish to pair with and press .
3. Enter the passcode and press .

## Trusted Devices

After you have set up a Bluetooth wireless connection between your phone and another Bluetooth-enabled device, you may want to set up additional trusted devices. When your phone recognizes a trusted device, it automatically accepts communication, bypassing the discovery and authentication process.

**To create a trusted pair:**

- Select **Add Device** and press . The phone starts a device search. Scroll to the device you want to pair with and press .

Exchange passcodes. The device is added to the Paired devices list.

- To cancel pairing: Scroll to the device whose pairing you want to cancel and press .

If you are currently connected to a device, and delete the pairing with that device, the pairing is removed and the device connection is terminated, but the Bluetooth function remains active on the phone.

---

**Note:** The phone supports Bluetooth specification version 1.1.

---

## Exchange Folder

When your phone has an FTP connection, you may transfer files from your PC to your phone. However, you cannot transfer files from your phone to your PC.

To access the Exchange Folder:

1. Select **Menu > Tools > Bluetooth > <Settings> > Exchange FTP Folder.**
2. Select one of the following options:
  - **Memory Card** (Memory Card) : Upload any type of file.
  - **Pictures** (In Phone / Memory Card): Allows you to upload picture and video files.  
(You can also check this in **Menu > Pictures > My Albums > In Phone / Memory Card.**)
  - **Music** (Memory Card only): Allows you to upload music files. (You can also check this in **Menu > Music > All My Music.**)
  - **Voice Memo** (In Phone): Upload voice memo files.  
(You can also check this in **Menu > Tools > Voice Memo.**)

## Using the Bluetooth transfer audio function during a call

1. Check that a Bluetooth headset is connected to your phone.
2. During the call, transfer the phone's sound output from the phone to the headset (select **Transfer to Bluetooth**); or from the headset to the phone (select **Transfer to Phone**).

---

**Note:** Bluetooth QD ID (Qualified Design ID) is mandatory marking by Bluetooth SIG (Bluetooth Special Interest Group) for all models supporting Bluetooth.

**Bluetooth QD ID B012725**

---



## Section 3

# Sprint Service Features



# Sprint Service Features: The Basics

---

### In This Section

---

- ◆ **Using Voicemail** (page 159)
  - ◆ **Using SMS Text Messaging** (page 167)
  - ◆ **Using SMS Voice Messaging** (page 170)
  - ◆ **Using Caller ID** (page 172)
  - ◆ **Responding to Call Waiting** (page 173)
  - ◆ **Making a Three-Way Call** (page 174)
  - ◆ **Using Call Forwarding** (page 175)
- 

**Now that you've mastered your phone's fundamentals, it's time to explore the calling features that enhance your Sprint service.** This section outlines your basic Sprint service features.

# Using Voicemail

---

## Setting Up Your Voicemail

All unanswered calls to your phone are automatically transferred to your voicemail, even if your phone is in use or turned off. Therefore, you will want to set up your Sprint Voicemail and personal greeting as soon as your phone is activated.

**To set up your voicemail:**

1. Press and hold .
2. Follow the system prompts to:
  - Create your passcode.
  - Record your name announcement.
  - Record your greeting.
  - Choose whether or not to activate One-Touch Message Access (a feature that lets you access messages simply by pressing and holding , bypassing the need for you to enter your passcode).

---

### **Voicemail Passcode**

If you are concerned about unauthorized access to your voicemail account, Sprint recommends you enable your voicemail passcode.

---

## Voicemail Notification

There are several ways your phone alerts you to a new message:

- By displaying a message on the screen.
- By sounding the assigned ringer type.
- By the LED blinking red.
- By displaying  at the top of your screen.

## New Voicemail Message Alerts

When you receive a new voice message, your phone alerts you and prompts you to call your voicemail.

**To call your voicemail:**

- ▶ Press and hold .

**To display your Missed Log:**

- ▶ Press **Detail** (right softkey).

---

**Note:** When you are roaming off the Sprint National Network, you may not receive notification of new voicemail messages. It is recommended that you periodically check your voicemail by dialing 1 + area code + your wireless phone number. When your voicemail answers, press (\*) and enter your passcode. You will be charged roaming rates when accessing voicemail while roaming off the network.

---

---

**Note:** Your phone accepts messages even when it is turned off. However, you are only notified of new messages when your phone is turned on and you are in a Sprint service area.

---

## Retrieving Your Voicemail Messages

You can review your messages directly from your phone or from any other touch-tone phone. To dial from your phone, you can either speed dial your voicemail or use the menu keys.

### Using One-Touch Message Access

- ▶ Press and hold . (Your phone will dial your voicemail box.)

### Using the Menu Keys on Your Phone to Access Your Messages

1. Select **Menu > Messaging > Voicemail**.
2. Press  to listen to your messages.

---

**Note:** You are charged for airtime minutes when you are accessing your voicemail from your phone

---

### Using a Phone Other Than Your Phone to Access Messages

1. Dial your wireless phone number.
2. When your voicemail answers, press .
3. Enter your passcode.

---

**Tip:** When you call into voicemail, you first hear the header information (date, time, and sender information) for the message. To skip directly to the message, press **4** during the header.

---

## Vicemail Key Guide

Here's a quick guide to your keypad functions while listening to voicemail messages. For further details and menu options, see "Voicemail Menu Key" on page 166.

|                                                                                   |                                                                                   |                                                                                             |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|
|  |  |            |
| Date/Time                                                                         | Send Reply                                                                        | Advance                                                                                     |
|  |  |            |
| Replay                                                                            | Rewind                                                                            | Forward                                                                                     |
|  |  |            |
| Erase                                                                             | Call Back                                                                         | Save                                                                                        |
|  |  |  |
| Cancel                                                                            | Help                                                                              | Skip                                                                                        |

## Vicemail Options

Your phone offers several options for organizing and accessing your voicemail.

### Using Expert Mode

Using the Expert Mode setting for your personal voicemail box helps you navigate through the voicemail system more quickly by shortening the voice prompts you hear at each level.

**To turn Expert Mode on or off:**

1. Press and hold  to access your voicemail. (If your voicemail box contains any new or saved messages, press  to access the main voicemail menu.)
2. Press  to change your Personal Options, following the system prompts.

3. Press **4**  for Expert Mode.
4. Press **1**  to turn Expert Mode on or off.

## Setting Up Group Distribution Lists

Create up to 20 separate group lists, each with up to 20 customers.

1. Press and hold **1**  to access your voicemail. (If your voicemail box contains any new or saved messages, press **\*SHIFT** to access the main voicemail menu.)
2. Press **3**  to change your Personal Options, following the system prompts.
3. Press **2**  for Administrative Options.
4. Press **5**  for Group Distribution Lists.
5. Follow the voice prompts to create, edit, rename, or delete group lists.

## Sprint Callback

Return a call after listening to a message without disconnecting from voicemail.

- ▶ Press **8**  after listening to a message. (Once the call is completed, you're returned to the voicemail main menu.)

## Voicemail-to-Voicemail Message

Record and send a voice message to other Sprint Voicemail users.

1. From the main voicemail menu, press **2**  to send a message.
2. Follow the voice prompts to enter the phone number.

3. Follow the voice prompts to record and send your voice message.

## **Voicemail-to-Voicemail Message Reply**

Reply to a voice message received from any other Sprint Voicemail user.

1. After listening to a voice message, press .
2. Follow the voice prompts to record and send your reply.

## **Voicemail-to-Voicemail Message Forwarding**

Forward a voice message, except those marked “Private,” to other Sprint Voicemail users.

1. After listening to a message, press .
2. Follow the voice prompts to enter the phone number.
3. Follow the voice prompts to record your introduction and forward the voice message.

## **Voicemail-to-Voicemail Receipt Request**

Receive confirmation that your voice message has been listened to when you send, forward, or reply to other Sprint users.

1. After you have recorded a message, press  to indicate you are satisfied with the message you recorded.
2. Press  to mark receipt requested.
3. Press  to send your voicemail message.

## Continue Recording

When leaving a voice message, you can choose to continue recording even after you've stopped.

- ▶ Before pressing  to indicate that you are satisfied with the message you recorded, press  to continue recording.

## Extended Absence Greeting

When your phone is turned off or you are off the Sprint National Network for an extended period, this greeting can be played instead of your normal personal greeting.

1. From the main voicemail menu, press  for Personal Options.
2. Press  for Greetings.
3. Press  to record an Extended Absence Greeting.

## Clearing the Message Icon

Your phone may temporarily continue to display the message icon after you have checked your voice and text messages.

To clear the icon from the display screen:

1. Select **Menu > Messaging > Voicemail > Clear Icon**.
2. Select **Clear All** or **Clear Icon** and press .

## Vicemail Menu Key

Following the prompts on the voicemail system, you can use your keypad to navigate through the voicemail menu. The following list outlines your phone's voicemail menu structure.

- 1  Listen
  - 1  Envelope Information
  - 2  Reply
  - 3  Advance 8 Seconds
  - 4  Replay
  - 5  Rewind
  - 6  Forward Message
  - 7  Erase
  - 8  Callback
  - 9  Save
  - 0  Options
- 2  Send a Message
- 3  Personal Options
  - 1  Settings
    - 1  Skip Passcode
    - 2  Autoplay On/Off
    - 3  Message Date & Time On/Off
    - 4  Change Passcode
    - 5  Group Distribution List
    - 6  Numeric Paging to a Phone On/Off
    - \*  Return to Personal Options Menu
  - 2  Greetings
    - 1  Main Greetings
    - 2  Recorded Name
    - 3  Extended Absence Greeting



Return to Personal Options Menu



Expert Mode (On/Off)



Place a Call



Disconnect

## Using SMS Text Messaging

With SMS Text Messaging, you can use other people's wireless phone numbers to send instant text messages from your phone to their messaging-ready phones – and they can send messages to you. When you receive a new message, it will automatically be displayed on your phone's screen.

In addition, SMS Text Messaging includes a variety of preset messages, such as “I’m running late, I’m on my way,” that make composing messages fast and easy. You can also customize your own preset messages (up to 100 characters) from your phone or at [www.sprint.com](http://www.sprint.com).

### Composing SMS Text Messages

To compose an SMS Text message:

1. Select **Menu > Messaging > Send Message > Text Message** and select the entry method you prefer:
  - **From Contacts** to select a recipient from your internal Contacts. (Qualifying Contacts entries must contain a wireless phone number or an email address.)
  - **Mobile** to use the keypad to enter the wireless phone number of the person to whom you wish to send a message.
  - **Email** to enter the recipient's email address.
  - **Recent List** to select a recipient from your recent messages.

2. Press  to save the recipient. (To include additional recipients, input a new phone number or email address. You may include up to 25 recipients per message.)
3. Press **Next** (left softkey) when you have finished selecting/entering recipients, and compose a message or use the preset messages or smileys (emoticons) and press .
  - To type a message, use your keypad to enter your message. Use the right softkey to select a character input mode. (See “Entering Text” on page 35.)
  - To use a preset message or a smiley, press the right softkey, select **Preset messages** or **Smileys**, and then highlight your desired message or emoticon and press .

---

**Note:** For more information about using and managing preset messages, see “Managing Preset Messages” on page 57.

---

4. Scroll to **Priority** and press your navigation key right or left to set the message priority (**Normal** or **Urgent**).
5. If you wish to change your callback number, scroll to it and press , then select **None**, **My Phone Number**, or **Other**, and press . (If you select **Other**, enter the desired number and press .)
6. Press **Send** (left softkey) to send the message.

## Accessing SMS Text Messages

To read an SMS Text message:

- ▶ When you receive a text message, it will automatically appear on your phone's main display screen. Use your navigation key to scroll down and view the entire message.

To reply to an SMS Text message:

1. While the message is open, select **Reply** (left softkey).
2. Compose your reply or use the preset messages or icons.
  - To type a message, use your keypad to enter your message. Use the right softkey to select a character input mode. (See "Entering Text" on page 35.)
  - To use a preset message or a smiley, press the right softkey, select **Preset messages** or **Smileys**, highlight your desired message or emoticon, and press .
3. Scroll to **Priority** and press your navigation key right or left to set the message priority (**Normal** or **Urgent**).
4. If you wish to change your callback number, scroll to it and press , select **None**, **My Phone Number**, or **Other** and press . (If you select **Other**, enter the desired number and press .)
5. Press **Send** (left softkey) to send the message.

## Using Preset Messages

Preset messages make sending text messages to your friends, family, and coworkers easier than ever.

To add or edit preset messages:

1. Select **Menu > Settings > Messaging > Preset Messages > <Add New>**.  
— or —  
Highlight a message you wish to edit and press , select **Edit** or **Delete**.
2. Enter your new message or changes and press .  
(See “Entering Text” on page 35.)

---

**Note:** You may also add or edit preset messages in the “My Online Tools” area at [www.sprint.com](http://www.sprint.com).

---

## Using SMS Voice Messaging

In addition to sending and receiving SMS Text messages, your phone is enabled with SMS Voice Messaging. With SMS Voice Messaging, you can quickly and easily send a voice message to other SMS-enabled phones or working email addresses without making a phone call. Just record a message and send it directly to the recipient’s phone messaging inbox.

### Activating SMS Voice Messaging

To use SMS Voice Messaging capabilities, you will first need to register your phone. Once you have registered, incoming SMS Voice messages will be automatically downloaded to your phone.

## Playing an SMS Voice Message

To play an SMS Voice message from the main menu:

1. Select **Menu > Messaging > Voice SMS**. (  indicates an unplayed message.)
2. Select the message you want to play.
3. Press  to play the message. (To display the message options, press **Options** [right softkey].)

## Composing SMS Voice Messages

To compose an SMS Voice message:

1. Select **Menu > Messaging > Voice SMS**.
2. Select **Options** (right softkey) > **Compose New**.
3. Select **From Contacts, Mobile, Email**, or **Recent List** to enter a recipient's wireless phone number or email address directly.
4. Select **Next** (left softkey) when you have finished selecting and entering recipients.
5. Start recording after the beep. (You can record up to two minutes.)
6. To finish recording, press **Done** (left softkey).
7. Press **Send** (left softkey) to send the voice message.

## Accessing SMS Voice Messages

To play an SMS Voice message:

- ▶ When you receive a voice message, a pop-up notification will automatically appear on your phone's main display screen. Select **Yes** to access the SMS Voice Message.

To reply to an SMS Voice message:

1. From the SMS Voice inbox, press **Reply** (left softkey).
2. Record your reply, then press **Send** (left softkey).

## Using Caller ID

---

Caller ID allows people to identify a caller before answering the phone by displaying the number of the incoming call. If you do not want your number displayed when you make a call, just follow these easy steps.

To block your phone number from being displayed for a specific outgoing call:

1. Press   .
2. Enter the number you want to call.
3. Press .

To permanently block your number, call Sprint Customer Service.

## Responding to Call Waiting

---

When you're on a call, Call Waiting alerts you to incoming calls by sounding two beeps. Your phone's screen informs you that another call is coming in and displays the caller's phone number (if it is available and you are in digital mode).

**To respond to an incoming call while you're on a call:**

- ▶ Press . (This puts the first caller on hold and answers the second call.)

**To switch back to the first caller:**

- ▶ Press  again.

---

**Tip:** For those calls where you don't want to be interrupted, you can temporarily disable Call Waiting by pressing **\*70** before placing your call. Call Waiting is automatically reactivated once you end the call.

---

# Making a Three-Way Call

---

With Three-Way Calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

**To make a Three-Way Call:**

1. Enter a number you wish to call and press .
2. Once you have established the connection, enter the second number you wish to call and press . (This puts the first caller on hold and dials the second number.)
3. When you're connected to the second party, press  again to begin your three-way call.

If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all other callers are disconnected.

# Using Call Forwarding

Call Forwarding lets you forward all your incoming calls to another phone number – even when your phone is turned off. You can continue to make calls from your phone when Call Forwarding is activated.

## To activate Call Forwarding:

1. Press   .
2. Enter the area code and phone number to which your future calls should be forwarded.
3. Press . (You will see a message and hear a tone to confirm the activation of Call Forwarding.)

## To deactivate Call Forwarding:

1. Press    .
2. Press . (You will see a message and hear a tone to confirm the deactivation.)

---

**Note:** You are charged a higher rate for calls you have forwarded.

---

# Sprint Music and Your Player

---

## In This Section

---

- ◆ **Using the Sprint Music Manager** (page 177)
  - ◆ **Multitasking Using Muziq** (page 185)
- 

**With Muziq you have all your music in the palm of your hand.** The Sprint Music Manager works hand in hand with Muziq to help keep both your local and downloaded music collections organized and in sync with your phone.

# Using the Sprint Music Manager

---

Muziq lets you use the Sprint Music Manager application to manage the music content on your PC and then easily copy it to your phone's microSD™ card. Just install the software from your CD and you're on your way. The Sprint Music Manager application helps you use your PC to organize, search for, purchase, and play music files and burn music CDs.

Larger media content requires the use of a microSD card.

## To install the Sprint Music Manager Application:

1. Insert the disc into your PC's disc tray. The disc should launch the Sprint Installation Wizard, which will guide you through the setup process.
  - If the installation does not begin immediately, locate your PC's disc drive (often D:/ or E:/) and then find and double-click on **SMSetup.exe** to begin the installation wizard.
2. Follow the onscreen prompts and agree to the Sprint Licensing Agreement to complete the installation process.
  - The installation will also verify and update (if necessary) your phone drivers and Windows® Media Player application.
3. Click Finish to complete the process and reboot your computer. Rebooting complete the installation of the application and phone drivers.

## To launch the Sprint Music Manager Application:

- ▶ From your computer, select **Start > Programs > Sprint Music Manager > Sprint Music Manager**

— or —

Navigate to your Desktop and double click on the Sprint Music Manager shortcut.

## Sprint Music Manager Overview

During the initial launch of the Sprint Music Manager application, you are guided through by an onscreen Quick Start Guide which covers the following topics:

- **Connecting your phone to your computer.**
- **Downloading music from Sprint's Digital Music Lounge.**
- **Using the Sprint Music Manager.**

Clicking on each topic within the Quick Start Guide launches a tutorial which guides you through the application.

The Sprint Music Manager can be divided into three areas, each activated by its own tab:

- **Transfer:** Allows you to organize and copy compatible music files from your PC to your phone's microSD card. A USB connection (via USB Data Cable) must be used to access and transfer music.
- **Get Music:** Provides access to several online music sites where you can purchase new music for your PC and your phone.
- **Manage:** Lists all current music files found on your PC. These files are organized by category (Song, Artist, Album, Genre), Playlist, and Digital Lounge Downloads.

## Transferring Music to Your Phone

The Sprint Music Manager lets you transfer music from your PC to your phone's microSD card. You can access and transfer your existing music collection (on PC) or you can purchase and transfer new music from leading online music stores.

## Connecting Your Phone and Your PC

Transferring music requires a direct USB connection between your PC and your phone.

To configure your phone for direct USB communication:

1. Turn the phone on by pressing . Make sure the phone is not locked and that a microSD card has been previously installed. (See “Using the microSD Card” on page 112.)
2. Insert the USB connector into a USB port on your computer.
3. Connect the remaining end of the USB cable into the power interface connector.
4. If necessary, complete the “Found New Hardware” wizard on your computer. When ready, the computer will display “New Device Detected” and a new drive letter will be assigned to the phone.
5. Select **Menu > Tools > USB Mode > Transfer Music**.  
— or —

When a USB cable is connected to your PC and your phone, files are automatically detected.

6. Once the phone has established an active connection to the PC, the **Connected** indicator appears at the upper-right corner of the screen. Your phone is now ready to receive music files from your PC. See “Using the Transfer Tab” on page 183 to copy music to your phone's microSD card.

## Using the Manage Tab

This feature lets you find, organize, and manage all the music files stored on your computer.

### Searching for music files on your computer:

1. Launch the Sprint Music Manager application and click the **Manage** tab.
2. Click **Add Music** (bottom-right of the tab) to launch the **Add Music Wizard**.
3. Select a Search Type:
  - **Quick Search** looks for any new music files that have not already been added to the Sprint Music Manager.
  - **Full Search** scans all hard drives and storage devices connected to your computer. This search for all music files is recommended during the initial setup of the Music Manager application.
  - **Custom Search** performs a search for music files within a specified folder location.
4. Place a checkmark next to the music file format(s) you wish to search for (**MP3**, **WMA**, **MP4**, and **WAV**).

---

**Note:** Any compatible WMA files (without DRM [Digital Rights Management] restrictions) copy protection will be detected by the Sprint Music Manager and converted to an AAC+ format prior to being uploaded to Muziq.

---

5. Click **Search** to begin the search. You will see a list of all matching music files found on your computer.
6. If you are satisfied with the results of the search, click **Finish** to add the files to your application and return to the **Manage** tab.
  - Click **Back** to return to the previous screen and change your search options.

### Managing the files in your library:

1. Launch the Sprint Music Manager application and click the **Manage** tab.

---

**Note:** All music imported into the Music Manager application is analyzed to register its file format and file properties such as: size, artist information, genre, album art, and album information.

---

2. If you have previously added music to the application, you can click on any of the various category entries within the left pane to see how Music Manager has begun organizing your files by using their file properties. Some of these categories include:
  - **Songs** displays a complete list of all music files which have been added to the Music Manager database.
  - **Artists** lists songs grouped alphabetically by artist. If an imported song's file properties do not contain artist information, it will be grouped into a generic Artist # category.
  - **Albums** lists songs alphabetically by album.
  - **Genre** lists songs alphabetically by genre.
  - **My Playlists** generates a list of Windows Media Player playlists detected on your computer. You can add or remove songs from the playlists at any time.

- **Digital Lounge Downloads** provides a list of songs which have been purchased via Sprint's Digital Lounge online media store.

### Playing songs from within the Music Manager:

1. Launch the Sprint Music Manager application and click the **Manage** tab.
2. Click a category to find a desired song.
3. Click a song title.
4. From the upper-right of the application screen, click the **Play** button to begin playback of the selected song.
  - Use the slider (found below the song title) to move back and forth within the song.
  - Use the **Shuffle Songs** button to randomize the playback of songs in your currently active playlist.
  - Use the **Repeat Playlist** button to repeat playback of the entire list of songs in your playlist.
  - Use the **Play/Pause** button to play or pause the current song.
  - Use the **Rewind** button to play the previous song in the playlist. Use the **Forward** button to play the next song in the playlist.
  - Use the **Volume** slider to adjust the song's volume level.

## Using the Transfer Tab

This tab allows you to copy music files from your PC to your phone's microSD card.

To copy songs to your phone:

1. Connect your phone and your PC using the supplied USB cable. (See “Connecting Your Phone and Your PC” on page 179.)
2. With the Music Manager open on your PC, click the **Transfer** tab.
3. Double-click the **Songs** folder in the left pane.
4. Highlight all the songs you wish to download to your phone and then drag them to the gray **Music Transfer List** section at the bottom of the window.
5. Once you have all the songs you wish to transfer, click on the **Transfer Now** button to begin copying the songs to your phone.
  - A red progress bar indicates the upload progress of each song to the phone.

---

**Warning:** Do not disconnect phone while the transfer is in progress.

---

---

**Note:** A memory card is required to listen to any music stored or downloaded to the phone. The number of files you can store depends on the size and format options of the memory card.

---

6. Select **Done** to stop using the phone for Mass Storage and return to the Main LCD standby screen.

## Using the Get Tab

This tab allows you to log into the Sprint Digital Lounge by using your Sprint account username and password.

### Accessing the Digital Lounge:

1. Launch the Sprint Music Manager application and click the **Get** tab.
2. Enter your Sprint Account username/phone number (no hyphens) and password into their respective **Username** and **Password** fields.
3. Click **Sign on>** to validate your login information and access Sprint's Digital Lounge.
4. Shop the Digital Lounge to purchase ringers, music, applications, and videos.
  - **Overview** provides an overview of the Digital Lounge. This page can be used to navigate to the various areas within the site.
  - **Personalization** displays the Personalization page where you can download ringers, screen savers, and call tones. These are all available for purchase and can be easily uploaded to your phone.
  - **Entertainment** displays the Entertainment page where you can download games, TV/Radio programs, and music. It's this music section where you'll purchase the music files which can be uploaded to your phone via the Music Manager application.
  - **Applications** displays the Applications page where you can download Weather, News & Music, TV & Movies, Entertainment, Sports, and Chat & Messaging applications.

# Multitasking Using Muziq

Your phone functions as a multitasking virtual machine (MVM), which allows you to keep one application active while using another. You can activate the Menu option and choose from a list of available applications which can be run in tandem with your music. (See "Changing the Multitasking Alert" on page 51.)

## To multitask on your phone:

1. Play a music file from your local media library. (See "Playing Music on Your Phone" on page 41.)
2. Press  to exit the application without closing it.
  - If this key is pressed while the song is still playing, the Main LCD will display the standby screen.
3. Press  to launch a multitasking screen which provides you access to several applications:
  - **Application Manager** manages all currently active applications. With your music still playing, the Sprint Music Store entry appears in the list. Press **Options** to access the following management options:
    - **Bring to Foreground** reactivates the current application screen. For example, if your music is currently playing in the background, selecting this option activates the Music Player tab with the song displayed.
    - **Exit Application** terminates the currently selected application and returns you to the Main LCD standby screen.
    - **Launch New Application** allows you to launch an application from the My Contents listing.

- **Send Text Msg.** launches the Messaging application and allows you to send a new text message.

---

**Note:** If you wish to receive text messages without interrupting your music, your phone must be set to vibrate mode and the music must be playing in the background.

---

- **Web** launches the built-in Internet browser.
- **My Content** launches the My Content menu screen.
- **On Demand** launches the On Demand application.
- **Music** launches the music Player tab. This is similar to selecting **Music Library** from the Main LCD and pressing  .
  - If you are currently playing a music file, selecting Music opens the Player tab with the current song properties displayed.

## Receiving an Incoming Call While Playing Your Music

An incoming call causes the currently played music file to be paused while the phone call is active. Once the current call is ended, you can resume any paused applications.

1. Answer an incoming call by selecting **Answer**. (This deactivates the Main LCD and activates the Phone Display.)
2. When you are done with your call, press . The Phone Display then displays a popup message asking whether you would like to resume the paused application.
3. Use the navigation key to highlight **Yes** and press . (The phone then deactivates the Phone Display, switches over, and activates the Main LCD with the application now running.)

# Sprint Voice Command

---

## In This Section

---

- ◆ **Getting Started With Sprint Voice Command** (page 189)
  - ◆ **Creating Your Own Address Book** (page 190)
  - ◆ **Making a Call With Sprint Voice Command** (page 191)
  - ◆ **Accessing Information Using Sprint Voice Command** (page 192)
- 

**With Sprint Voice Command, reaching your friends, family, and coworkers has never been easier—especially when you're on the go.** You can even listen to Web-based information, such as news, weather, and sports. Your voice does it all with Sprint Voice Command.

This section outlines the Sprint Voice Command service.

# Getting Started With Sprint Voice Command

---

With Sprint Voice Command:

- You can store all your Contacts' phone numbers, so you can simply say the name of the person you want to call.
- There's no need to punch in a lot of numbers, memorize voicemail passwords, or try to dial while you're driving.
- You can call anyone in your address book—even if you don't remember their phone number.
- You don't need to worry about losing your contacts or address book. This advanced service is network-based, so if you switch or happen to lose your phone, you won't lose your contacts or address book.

## It's Easy to Get Started

There are two easy ways to sign up for Sprint Voice Command:

- ▶ Sign up when you purchase and activate your phone.
- ▶ Just dial    from your phone to contact Sprint Customer Service and sign up.

There is a monthly charge for Sprint Voice Command.

# Creating Your Own Address Book

---

You can program up to 500 names into your personal address book, with each name having up to five phone numbers. That's 2500 phone numbers, and with the advanced technology of Sprint Voice Command, you can have instant access to all of them.

There are four ways to update your address book:

- **On the Web.** Go to [www.talk.sprintpcs.com](http://www.talk.sprintpcs.com) and sign on with your phone number and password to access a fully functional Web-based address book to create and update your contacts.
- **Use an Existing Address Book.** Automatically merge address books from desktop software applications with Sprint Sync<sup>SM</sup> Services for no additional charge. Simply click on the "Click to synchronize" button within your Sprint Voice Command personal address book at [www.talk.sprintpcs.com](http://www.talk.sprintpcs.com).
- **Use Voice Recordings.** Simply dial   and say, "Add name." You will then be asked to say the name and number you want to add to your personal address book. Your address book can store up to 20 voice recorded names at once.
- **Call Sprint 411.** If you don't have a computer or Internet access handy, you can have Sprint 411 look up phone numbers for you and automatically add them to your address book. Just dial   and say "Call operator" and we'll add two names and all the numbers associated with those names to your address book for our standard directory assistance charge.

# Making a Call With Sprint Voice Command

To make a call with Sprint Voice Command:

1. Press   and you'll hear the "Ready" prompt.
2. After the "Ready" prompt, simply say, in a natural voice, "Call" and the name of the person or the number you'd like to call. (For example, you can say, "Call Jane Smith at work," "Call John Baker on the mobile phone," "Call 555-1234," or "Call Bob Miller.")
3. Your request will be repeated and you will be asked to verify. Say "Yes" to call the number or person. (The number will automatically be dialed.) Say "No" if you wish to cancel.

---

**Tip:** Keep in mind that Sprint Voice Command recognizes not only your voice, but any voice, so that others can experience the same convenience if they use your phone.

---

For more helpful hints on Sprint Voice Command, including a list of recognized commands and an interactive tutorial, visit [www.talk.sprintpcs.com](http://www.talk.sprintpcs.com).

# Accessing Information Using Sprint Voice Command

---

To access information using Sprint Voice Command:

1. Press  .
2. Say “Call the Web” and choose from a listing of information categories like news, weather, and sports.  
– or –  
Simply say “Call news room,” “Call the weather,” “Call Sports Central,” etc.

## Section 4

# Safety and Warranty Information



# Important Safety Information

---

### In This Section

---

- ◆ **General Precautions** (page 195)
  - ◆ **Maintaining Safe Use of and Access to Your Phone** (page 195)
  - ◆ **Using Your Phone With a Hearing Aid Device** (page 198)
  - ◆ **Caring for the Battery** (page 199)
  - ◆ **Radio Frequency (RF) Energy** (page 200)
  - ◆ **Owner's Record** (page 202)
  - ◆ **Phone Guide Proprietary Notice** (page 202)
- 

**This phone guide contains important operational and safety information that will help you safely use your phone.** Failure to read and follow the information provided in this phone guide may result in serious bodily injury, death, or property damage.

# General Precautions

---

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- Hold the phone with the antenna raised, fully extended, and over your shoulder.
- Try not to hold, bend, or twist the phone's antenna.
- Don't use the phone if the antenna is damaged.
- Speak directly into the mouthpiece.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery.
- Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending, or sitting on it.
- Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment.

---

**Note:** For the best care of your phone, only Sprint authorized personnel should service your phone and accessories. Failure to do so may be dangerous and void your warranty.

---

## Maintaining Safe Use of and Access to Your Phone

---

### Do Not Rely on Your Phone for Emergency Calls

Mobile phones operate using radio signals, which cannot guarantee connection in all conditions. Therefore you should never rely solely upon any mobile phone for essential communication (e.g., medical emergencies). Emergency calls may not be possible on all cellular networks or when certain network services and/or mobile phone features are in use. Check with your local service provider for details.

## Using Your Phone While Driving

Talking on your phone while driving (or operating the phone without a hands-free device) is prohibited in some jurisdictions. Laws vary as to specific restrictions. Remember that safety always comes first.

---

**Tip:** Purchase an optional hands-free accessory at your local Sprint Store, or call Sprint at 1-800-974-2221 or by dialing **# 2 2 2** on your phone.

---

## Following Safety Guidelines

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

## Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating systems or entertainment systems in motor vehicles. Check with the manufacturer or their representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

---

**Note:** Always turn off the phone in health-care facilities and request permission before using the phone near medical equipment.

---

## Turning Off Your Phone Before Flying

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

## Turning Off Your Phone in Dangerous Areas

To avoid interfering with blasting operations, turn your phone off when in a blasting area or in other areas with signs indicating two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

Turn your phone off when you're in any area that has a potentially explosive atmosphere. Although it's rare, your phone and accessories could generate sparks. Sparks can cause an explosion or fire, resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They include:

- Fueling areas such as gas stations.
- Below deck on boats.
- Fuel or chemical transfer or storage facilities.
- Areas where the air contains chemicals or particles such as grain, dust, or metal powders.
- Any other area where you would normally be advised to turn off your vehicle's engine.

---

**Note:** Never transport or store flammable gas, flammable liquids, or explosives in the compartment of your vehicle that contains your phone or accessories.

---

## Restricting Children's Access to Your Phone

Your phone is not a toy. Do not allow children to play with it as they could hurt themselves and others, damage the phone or make calls that increase your Sprint invoice.

# Using Your Phone With a Hearing Aid Device

---

Your Sprint Nextel phone has been tested for hearing aid device compatibility. When some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that have been rated have a label located on the box.

## **Your Muziq™ by LG has an M4 rating and T4 rating.**

These ratings are not guarantees. Results will vary depending on the level of immunity of your hearing device and degree of your hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

**M-Ratings:** Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

**T-Ratings:** Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. T4 is the better/higher of the two ratings. (Note that not all hearing devices have telecoils in them.)

The more immune your hearing aid device is, the less likely you are to experience interference noise from your wireless phone. Hearing aid devices should have ratings similar to phones. Ask your hearing healthcare professional for the rating of your hearing aid. Add the rating of your hearing aid and your phone to determine probable usability:

- Any combined rating equal to or greater than six offers best use.
- Any combined rating equal to five is considered normal use.
- Any combined rating equal to four is considered usable.

Thus, if you pair an M3 hearing aid with an M3 phone, you will have a combined rating of six for "best use." This is synonymous for T ratings.

Sprint Nextel further suggests you experiment with multiple phones (even those not labeled M3/T3 or M4/T4) while in the store to find the one that works best with your hearing aid device. Should you experience interference or find the quality of service unsatisfactory after purchasing your phone, promptly return it to the store within 30 days of purchase. With the Sprint 30-day Risk-Free Guarantee, you may return the phone within 30 days of purchase for a full refund.

## Getting the Best Hearing Device Experience With Your Phone

One way to minimize interference is to set the phone's Display and Keypad backlight settings to ensure the minimum time interval.

To ensure the minimum interference for your Main Display's backlight, follow these steps:

1. Select **Menu > Settings > Display > Main Screen > Backlight**.
2. Scroll and select the minimum time interval setting (8 seconds).

To ensure the minimum interference for the Keypad backlight, follow these steps:

1. Select **Menu > Settings > Display > Keypad Light**.
2. Scroll and select the minimum time interval setting (8 seconds).

## Caring for the Battery

### Protecting Your Battery

The guidelines listed below help you get the most out of your battery's performance.

- Recently there have been some public reports of wireless phone batteries overheating, catching fire or exploding. It appears that many, if not all, of these reports involve counterfeit or inexpensive, aftermarket-brand batteries with unknown or questionable manufacturing standards. Sprint is not aware of similar problems with Sprint phones resulting from the proper use of batteries and accessories approved by Sprint or the manufacturer of your phone. Use only Sprint- or manufacturer-approved batteries and accessories found at Sprint Stores or through your phone's manufacturer, or call 1-866-343-1114 to order. They're also available at [www.sprint.com](http://www.sprint.com) — click the **Wireless** link under Personal, and then click **Accessories**.

Buying the right batteries and accessories is the best way to ensure they're genuine and safe.

- In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° C).
- Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- Never dispose of the battery by incineration.
- Keep the metal contacts on top of the battery clean.
- Don't attempt to disassemble or short-circuit the battery.
- The battery may need recharging if it has not been used for a long period of time.
- It's best to replace the battery when it no longer provides acceptable performance. It can be recharged hundreds of times before it needs replacing.
- Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:

Less than one month:

-4° F to 140° F (-20° C to 60° C)

More than one month:

-4° F to 113° F (-20° C to 45° C)

## Disposal of Lithium ion Batteries

Do not handle a damaged or leaking Lithium ion battery as you can be burned.

For safe disposal options of your Lithium ion batteries, contact your nearest Sprint authorized service center.

**Special Note:** Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

## Radio Frequency (RF) Energy

---

### Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

## Knowing Radio Frequency Safety

The design of your phone complies with updated NCRP standards described below.

In 1991-92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

### Body-Worn Operation

To maintain compliance with FCC RF exposure guidelines, if you wear a handset on your body, use the Sprint supplied or approved carrying case, holster or other body-worn accessory. If you do not use a body-worn accessory, ensure the antenna is at least 7/16 inch (1.5 centimeters) from your body when transmitting. Use of non-Sprint approved accessories may violate FCC RF exposure guidelines.

For more information about RF exposure, visit the FCC Web site at [www.fcc.gov](http://www.fcc.gov).

## Specific Absorption Rate (SAR) for Wireless Phones

The SAR is a value that corresponds to the relative amount of RF energy absorbed in the head of a user of a wireless handset.

The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean variations in safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

The highest reported SAR values of the Muziq™ are:

**CDMA mode (Part 22):**

Head: 0.549 W/kg; Body-worn: 0.603 W/kg

**PCS mode (Part 24):**

Head: 1.22 W/kg; Body-worn: 0.507 W/kg

## FCC Radiofrequency Emission

This phone meets the FCC Radiofrequency Emission Guidelines.

FCC ID number: BEJLX570. More information on the phone's SAR can be found from the following FCC Web site: <http://www.fcc.gov/oet/fccid>.

## Owner's Record

---

The model number, regulatory number and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This will be helpful if you need to contact us about your phone in the future.

Model: Muziq™ by LG®

Serial No.:

## Phone Guide Proprietary Notice

---

CDMA Technology is licensed by QUALCOMM Incorporated under one or more of the following patents:

4,901,307 5,109,390 5,267,262 5,416,797

5,506,865 5,544,196 5,657,420 5,101,501

5,267,261 5,414,796 5,504,773 5,535,239

5,600,754 5,778,338 5,228,054 5,337,338

5,710,784 5,056,109 5,568,483 5,659,569

5,490,165 5,511,073

T9 Text Input is licensed by Tegic Communications and is covered by U.S. Pat. 5,818,437, U.S. Pat. 5,953,541, U.S. Pat. 6,011,554 and other patents pending.

Phone Guide template version 6A (052806)

# Manufacturer's Warranty

---

## In This Section

---

- ◆ **Manufacturer's Warranty** (page 204)
- 

**Your phone has been designed to provide you with reliable, worry-free service.** If for any reason you have a problem with your equipment, please refer to the manufacturer's warranty in this section.

For information regarding the terms and conditions of service for your phone, please visit [www.sprint.com](http://www.sprint.com) or call Sprint Customer Service at 1-888-211-4727.

# Manufacturer's Warranty

---

## 1. WHAT THIS WARRANTY COVERS:

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the unit and enclosed accessories shall be a period of one (1) year from the date of original purchase. The remaining warranty period for the unit being repaired or replaced shall be determined by presentation of the original sales receipt for the purchase of the unit.
- (2) The limited warranty extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser / end user.
- (3) The limited warranty is good only to the original purchaser of the product during the warranty period as long as it is in the U.S., including Alaska, Hawaii, U.S. Territories, and all Canadian Provinces.
- (4) The external housing and cosmetic parts shall be free of major defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
- (5) Upon request from LG, the consumer must provide information satisfactory to LG to prove the date of purchase or exchange.
- (6) The customer shall bear the cost of shipping the product to the Customer Service Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

## 2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damage resulting from use of the product in other than its normal and customary manner.
- (2) Defect or damage from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, or spills of food or liquid.

- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) Alleged defects or malfunctions of the product if the Customer Service Department at LG was not notified by the consumer during the applicable limited warranty period.
- (5) Products which have had the serial number removed or made illegible.
- (6) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including but not limited to any implied warranty of marketability merchantability or fitness for a particular use.
- (7) Damage resulting from use of non-LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).

### 3. WHAT LG WILL DO:

LG will, at its sole option, either repair, replace or refund the purchase price of any unit that does not conform to this limited warranty. LG may choose at its option to use functionally equivalent re-conditioned, refurbished or new units or parts or any units. In addition, LG will not re-install or back-up any data, applications or software that you have added to your phone. It is therefore recommended that you back-up any such data or information prior to sending the unit to LG to avoid the permanent loss of such information.

### 4. STATE LAW RIGHTS:

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY OR MERCHANTABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY OR MERCHANTABILITY APPLICABLE TO THIS PRODUCT.

Some states do not allow the exclusion of limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

## **5. HOW TO GET WARRANTY SERVICE:**

To obtain warranty service, please call the following telephone number from anywhere in the continental United States:

LG Electronics Service

201 James Record Road

Huntsville, AL 35824

Tel. 1-800-793-8896 Email: <http://us.lgservice.com>

Please call or write for the location of the LGE authorized service center nearest you and the procedures for obtaining warranty claims.

# Index

## A

Airplane/Music Mode 58  
Alarm Clock 100  
Answering Calls 26

## B

Battery 19-21  
    Capacity 19  
    Charging 21  
    Installing 20  
    Removing 20  
Bluetooth 147-155  
    Bluetooth Profiles 151  
    Bluetooth Settings Menu  
        149  
    Pairing Bluetooth Devices  
        153  
    Turning Bluetooth On and  
        Off 148

## C

Calculator 103  
Calendar 97-100  
Call Forwarding 175  
Call History 77-82  
    Erasing 82  
    Making a Call From 80  
    Prepending a Phone  
        Number 81  
    Saving a Phone Number  
        From 80  
Call Waiting 173  
Caller ID 172  
Camera 122-146

Changing the Lock Code 66  
Composing a Melody 119  
Contacts 83  
    Adding 84  
    Erasing 67  
    Finding 85  
    Wireless Backup 93

## D

Dialing Options 25  
Display Screen 14  
Display Settings 48

## E

Entering Text 35-39  
    Abc Mode 38  
    Numbers 39  
    Preset Messages 39  
    Selecting Mode 35  
    Smileys 39  
    Symbols 39  
    T9 Text Input 36  
EZ Tips 102

## K

Key Functions 12

## L

Location Settings 54  
Locking Your Phone 65

## M

Making Calls 24  
Menu iii  
Messaging Settings 55  
microSD Card 112-117  
    Folders 116

- Removing 113
- Settings 115
- Using 113
- Using the microSD Adapter 114
- Music Transmitter 121

## N

- Notepad 102

## P

- Phone (Illus.) 11
- Phone Number
  - Displaying 23
  - Finding 31
  - Saving 31
- Phone Setup Options 61
- PictBridge 144
- Picture Mail 137
- Playing Music 40
- Plus (+) Code Dialing 33

## R

- Resetting 69
  - Default Settings 70
  - Favorites 69
  - Your Phone 70
  - Your Picture Mail Account 69
- Restricting Your Phone 68
- Roaming 72

## S

- Saving a Phone Number 31
- Security 64-70
  - Security Menu 65

- SMS Text Messaging 167-170
- SMS Voice Messaging 170-172
- Sound Settings 45
- Special Numbers 67
- Sprint Customer Service 6
- Sprint Music Manager 177
- Sprint Service
  - Account Passwords 5
  - Operator Services 8
  - Setting Up 2-8
- Storing Pictures 129

## T

- T9 Text Input 36
- Taking Pictures 123-128
  - Camera Mode Options 125
- Three-Way Call 174
- Turning Your Phone On and Off 18

## U

- Unlocking Your Phone 65

## V

- Videos 134-146
  - Recording 134-136
  - Settings and Info 146
  - Storing 144
  - Video Mode Options 135
- Voice Command 188
  - Accessing Information 192

- Creating Your Own Address Book 190
- Making a Call 191
- Voice Memos 110-111
- Voice Services 104
- Voicemail
  - Menu Key 166
  - Options 162
  - Retrieving 161
  - Setting Up 4, 159

## W

- Warranty 204
- Welcome i
- World Clock 103

[illegible]