



PM225

Get Started Guide



VGA Camera with Digital Zoom



Full-Duplex Speakerphone



Full-Color External and Internal LCDs



Compact Design with Internal Antenna



PHONE OVERVIEW

Volume
Up/Down



VGA Digital Camera

Service/Message
Indicator Light†

External LCD

Side Camera Key

Charging Port

† Blinks green slowly when service is on.
Blinks red during incoming call or when
text message or voicemail is waiting.

MAIN MENU



Pictures



Messaging



Web



Tools



Call History



Contacts



Voice Services



Downloads



Settings

Speakerphone



Messaging*

Left Soft Key

Scheduler*

TALK Key

BACK Key

Voicemail

Microphone

OK/Camera Key

Right Soft Key

Contacts*

Downloads*

END/PWR Key

 
* Default
Shortcut
Setting

The PM225 has an array of features for taking VGA-quality photographs and viewing, storing or sharing them.



> Taking and Sending a Picture


1. Press and *hold* the **OK/Camera Key** until the camera viewfinder turns on.
2. Press **left** or **right** on the Navigation Key to zoom, and **up** or **down** to adjust the brightness.
3. Press the **OK/Camera Key** to take the picture. Pictures are automatically saved in the **Pictures > My Pictures > In Camera** menu.
4. Press the **Left Soft Key** for **Next**. Select **Send Picture** and press **OK**.
5. Choose **Mobile**, **Email**, **Contact(s)**, **Recent List**, or **Other Services** and press **OK**.
6. Enter the mobile number, e-mail address, or select the contact(s) to which you would like to send the message and press **OK**.
7. Press the **Left Soft Key** for **Next** to preview or to add a text or voice memo.
8. Press the **Left Soft Key** for **Send**.

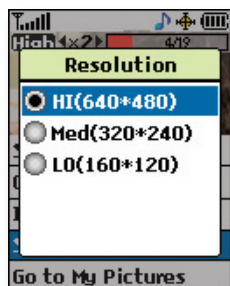

> Changing the Resolution

The PM225 can store up to 20 high (VGA), 42 medium (QVGA) or 100 low (QQVGA) images.

 
1. Press and *hold* the **OK/Camera Key** until the camera viewfinder turns on.
2. Select the **Right Soft Key** for **Options**.
3. Select **Settings** and press **OK**.
4. Select **Resolution** and press **OK**.
5. Select **HI** (640x480 pixels), **Med** (320x240 pixels) or **LO** (160x120 pixels) and press **OK**.

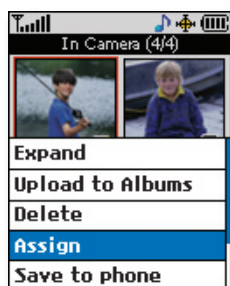

> Setting a Picture as Caller ID

1. From the **Pictures (1)** menu, select **My Pictures** and press **OK**.
2. Select **In Camera** and press **OK**.
3. Use the Navigation Key to highlight the desired picture and press **OK**. (A red check mark will appear)
4. Press the **Right Soft Key** for **Options** and select **Assign**.
5. Select **Picture ID**.
6. Select **New Entry** or **Existing Entry** and press **OK**.
7. For a **New Entry**, enter the information and press the **Left Soft Key** for **Done**. For an **Existing Entry**, highlight the desired contact and press **OK**.

 CONNECTIVITY FEATURES

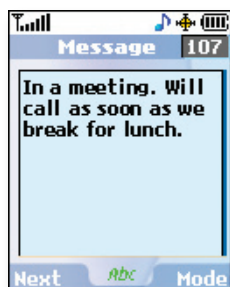

> Sending a Text Message

1. From the **Messaging (2)** menu, select **Send Message**.
2. Select **Text Message**.
3. Enter the ten-digit telephone number, select a name from your contact or recent list or enter an e-mail address into the appropriate field and press **OK**.
4. Press the **Left Soft Key** for **Next**. Enter the message (up to 160 characters) using the keypad and press **OK**.
5. Press the **Left Soft Key** for **Send**.

 
Shortcut: While in standby mode, press **up** on the Navigation Key to access the default **Messaging** shortcut.

Downloading New Content from PCS Vision (Games, Ringers, Screen Savers, etc.)

The PM225 can store up to 1,024 kilobytes of downloaded content from PCS Vision.

1. From the **Downloads (8)** menu, select the desired content classification (**Games**, **Ringers**, **Screen Savers**, or **Applications**) and press **OK**.
2. Select **Get New** and press **OK** to initiate a web session.
3. Select the desired content and follow PCS Vision prompts to complete the purchase and download (extra fees may apply on some services).

Shortcut: While in standby mode, press **down** on the Navigation Key to access the default **Downloads** shortcut.

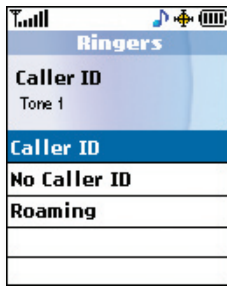

> Changing the Call Ringer

1. From the **Settings (9)** menu, select **Sounds**.
2. Select **Ringers**.
3. Select **Caller ID**, **No Caller ID** or **Roaming**.
4. Choose from the list of available default, downloaded or voice memo ringers and press **OK**.

Adjusting Volume Settings

Ringer Volume: While in standby mode, press the side volume keys to adjust the ringer volume.

Earpiece Volume: During a conversation, press the side volume keys to adjust the earpiece volume.

Silent Mode: While in standby mode, press the lower volume key until it reads Silent to mute all sounds.



> Changing the Screen Saver Image

1. From the **Settings (9)** menu, select **Display**.
2. Select **Screen Saver**.
3. Select **Main LCD** or **Front LCD**.
4. Select from the list of ten default images, or press **left** or **right** on the Navigation Key to view the list of downloaded (only for main LCD), in camera, and saved to phone images.
5. Press **OK** to preview the image, and press **OK** again to save.

Changing the Theme Skin

1. From the **Settings (9)** menu, select **Display**.
2. Scroll to **Theme Skins** and press **OK**.
3. Select from the list of six available theme skins and press **OK**.

Shortcut: From the main menu, press the **Right Soft Key** to access theme skins.

PERSONAL INFORMATION TOOLS



> Scheduling an Event

1. From the **Tools (4)** menu, select **Scheduler**.
2. Highlight the event date using the Navigation Key and press the **Left Soft Key** for **Add**.
3. You may set the appropriate start and end times, content, recurrence (if any), alarm and ringer by scrolling to the corresponding field, and entering the desired information and pressing **OK**.
4. Press the **Left Soft Key** for **Save**.

Shortcut: While in standby mode, press **left** on the Navigation Key to access the default **Scheduler** shortcut.

Scheduling an Alarm

 
1. From the **Tools (4)** menu, select **Alarm Clock**.
2. Select **Alarm 1**, **Alarm 2**, **Alarm 3** or **Quick Alarm** and press **OK**.
3. You may set the appropriate time, recurrence (if any) and ringer by scrolling to the corresponding field and entering the desired information.
4. Press the **Left Soft Key** for **Save**.

> Recording a Voice Memo

Record up to 30 voice memos (3 minutes total), which may also be assigned as caller ID ringers.

1. From the **Voice Services (7)** menu, select **Voice Memo**.
2. Select **Record New**.
3. Start recording after the tone. To stop recording, press **OK**.

Note: Recorded voice memos can be found in the **Voice Services (7) > Voice Memo** menu.

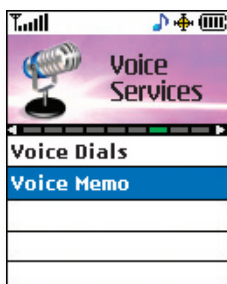




Adding a New Phone Contacts Entry

The internal phone book is capable of storing up to 500 entries with up to 5 numbers, 3 e-mail addresses and 1 web address per entry.

1. From the **Contacts (6)** menu, select **Find/Add Entry**, then select **New Entry** and press **OK**.
2. Enter the name and number into the appropriate fields and press **OK**.
3. Select a label (**Mobile, Home, Office, Fax or Pager**) and press **OK**.
4. To set the speed dial or voice dial, highlight the number and press the **Right Soft Key** for **Options**.
 - Select **Set Speed Dial** and press **OK**. Enter the speed dial number (2–99) and press **OK** twice to set.
 - Select **Set Voice Dial** and press **OK**. Select **OK** to record voice dial. Up to 30 three-second voice dials may be recorded.
5. Press the **Left Soft Key** for **Done**.

Shortcut: While in standby mode, press **right** on the Navigation Key to access the default **Find/Add Entry** shortcut.

 OTHER NOTABLE SETTINGS

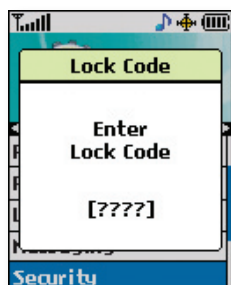

Activating Speakerphone

1. During a call, press the **Speakerphone Key** for hands-free conversation.
2. Press the **Speakerphone Key** a second time to return to normal conversation.

Warning! Due to higher volume levels, don't place the phone near your ear while the speakerphone is enabled.

Locking the Handset

This helps protect the phone from unauthorized use. Once the phone is locked, the phone is restricted from making calls until the lock code is entered. However, you can make emergency calls and calls to up to 10 stored security phone numbers, as well as receive incoming calls while in the locked mode.

1. From the **Settings (9)** menu, scroll to **Security** and press **OK**.
2. Enter your lock code (commonly the last four digits of your mobile phone number).
3. Choose **Lock Phone**, select **Lock now** or **On power up**, and press **OK**. The **On power up** function will lock the handset when the phone is power cycled.



Programming Navigation Key Shortcuts

1. From the **Settings (9)** menu, scroll to **Setup/Others** and press **OK**.
2. Select **Shortcuts** and press **OK**. Press **OK** again after reading the instructions on the screen.
3. Choose **Left Navigation, Right Navigation, Up Navigation** or **Down Navigation** and press **OK**.
4. Select the desired function from the list provided and press **OK**.

Note: Pressing a direction on the Navigation Key in standby mode will now access the set function(s).



Upgrading Software

Software upgrades for your handset may periodically be available. Use this feature to check for upgrade availability and to download and install the update package. Service and activation are required for this feature.

1. From the **Settings (9)** menu, scroll to **Setup/Others** and press **OK**.
2. Scroll to **Update Phone SW** and press **OK**.
3. Follow the on-screen prompts.

MENU TREE

PICTURES (1)  - Camera (options) > Self Timer > Color Tone > Image Controls > Settings > Go to My Pictures - My Pictures > In Camera > Saved to Phone - Online Albums > View Albums > Upload Pictures - Order Prints - Account Info	CONTACTS (6)  - Find/Add Entry - Groups - Speed Dials - Voice Dials - My Phone Number - Services > Customer Service > Dir Assistance > Account Info > Sprint Operator > Voice Command	- Service Change - Minute Beep - Call Connect - Signal Fade - Display > Greeting > Backlight - Main LCD - Keypad > Screen Saver - Main LCD - Front LCD > Incoming Calls > Contrast > Menu Style > Theme Skins > Clock - Main LCD - Front LCD > Font Size - Message - Browser - Notepad > Power Save Mode > Status Light - PCS Vision > Enable/Disable PCS Vision > Net Guard > Update Vision Profile - Roaming > Set Mode - Automatic - Sprint Only - Roaming Only > Call Guard - Location - Messaging > Notification	> Callback Number - None - My Phone Number - Other > Signature - None - Custom > Preset Messages - Security > Lock Phone > Restrict > Picture Mail > Change Lock > Special #s > Delete Contacts > Reset Phone - Voice Dial > Activate > Train Words - Setup/Others > Shortcuts > Answer Call > Auto-Answer > Dialing Match - Abbreviated Dialing - Contacts Match - Speed Dial > Plus Code Dialing > Auto Volume > Language > TTY Mode > Airplane Mode > Update Phone SW - Phone Info > My Phone Number > Version > Icon Glossary > Advanced	
MESSAGING (2)  - Send Message - Picture Mail - Text Messages - Instant Message - Email - Voicemail	VOICE SERVICES (7)  - Voice Dials - Voice Memo			
WEB (3) 	DOWNLOADS (8)  - Games - Ringers - Screen Savers - Applications <Memory Status>			
TOOLS (4)  - Scheduler - Alarm Clock - Notepad - Ez Tip Calc - Calculator - World Clock	SETTINGS (9)  - Sounds > Ringers - Caller ID - No Caller ID - Roaming > Key Tones > Volume - Ringer - Earpiece - Key Beep - Application - Power On/Off > Alerts - Voicemail Alerts - Message Alerts			
CALL HISTORY (5)  - Outgoing Calls - Incoming Calls - Missed Calls - Delete Calls				