



User Guide



User Guide

ML67864301 (1.0) W



Guía del
Usuario



*Copyright©2013 LG Electronics, Inc. All rights reserved.
Revere is registered trademark of Verizon Wireless and its
related entities. All other trademarks are the property of their
respective owners.*

Table of Contents 1

Phone Overview 6

Rear view 7

Menus Overview 8

Getting Started with Your Phone 11

Step 1. Remove the Back Cover 11

Step 2. Insert the Battery 11

Step 3. Replace the Back Cover 11

Step 4. Charge the Phone 11

Installing the Battery 12

Removing the Battery 12

Charging the Battery 12

Charging with USB 13

Battery Temperature Protection 13

Battery Charge Level 13

Signal Strength 13

Turning the Phone On and Off 13

Turning the Phone On 13

Turning the Phone Off 14

Making Calls 14

Correcting Dialing Mistakes 14

Redialing Calls 14

Receiving Calls 14

Screen Icons 14

Quick Access to Convenient Features 15

Vibrate Mode 15

Sounds Off 15

Mute Function 15

Quick Volume Adjustment 15

Quick Font Resize 15

Call Waiting 15

3-way call 15

Caller ID 16

Voice Commands 16

Dial Search 17

Entering and Editing Information 18

Text Input 18

Text Input Modes 18

Contacts in Your Phone's Memory 19

Storing Basics 19

Customizing Individual Entries 19

Speed Dial 19

Storing a Number with Pauses 20

Adding a Pause to an Existing Contact Entry 20

Adding Another Phone Number 20

From standby mode 20

From the Contact List Screen 21

Changing Saved Information 21

Changing the Default Number 21

Deleting 22

Table of Contents

Deleting a Contact Entry	22
Removing a Speed Dial	22
Speed Dialing	22
Single Digit Speed Dials	22
Multiple Digit Speed Dials	22
Speed Dials 95, 96, 97, 98, and 99	22
Contacts	23
1. New Contact	23
2. Contact List	23
3. Backup Assistant	24
4. Favorites	24
5. Groups	25
Adding Contacts to a Group	25
6. Speed Dials	25
7. In Case of Emergency (ICE)	26
Entering Your ICE Personal Info	26
To unassign an ICE Contacts	26
To delete Personal Info entry	27
8. My Name Card	27
Messaging	28
1. New Message	28
1.1 TXT Message	28
1.2 Picture Message	30
1.3 Voice Message	32
2. Inbox	32
Viewing Your Inbox	33
Message Icon Reference	33
3. Sent	34
4. Drafts	35
Message Icon Reference	35
5. Voicemail	35
6. Mobile Email	36
7. Social Networks	36
Messaging Settings	36
Message Settings Sub-Menu	
Descriptions	37
Erasing Messages	38
Recent Calls	39
1. Missed	39
2. Received	39
3. Dialed	40
4. All	40
5. View Timers	40
Mobile Web	42
Media Center	43
1. Mobile Web	43
Ending a Browser Session	43
Navigating Through the Mobile Web	43
Scrolling	43
Fast Scrolling	43
Scrolling by Page	44
Home Page	44
Soft Keys	44
Entering Text, Numbers, or Symbols	44
Deleting Text/Number Entered	44
Initiating a Phone Call	
From the Mobile Web	44
2. Tunes & Tones	44

2.1 Get New Ringtones	44
2.2 Get Ringback Tones	45
2.3 My Ringtones	45
2.4 My Sounds	46
3. Pictures	46
3.1 Get New Pictures	46
3.2 My Pictures	47
3.3 Take Picture	47
3.4 Online Album	48
4. Games	48
5. Browse & Download	49
6. Extras	50

Mobile Email / V CAST Tones / My Pictures

Mobile Email	51
V CAST Tones	51
My Pictures	51

Settings & Tools

1. My Verizon	52
2. Master Volume	52
3. Tools	52
3.1 Voice Commands	52
Access and Options	52
3.1.1 Call <Name or Number>	53
3.1.2 Send Msg to <Name or Number or Group>	53
3.1.3 Go to <Menu>	53
3.1.4 Check <Item>	53
3.1.5 Contacts <Name>	54

3.1.6 Redial	54
3.1.7 My Verizon	54
3.1.8 Help	54
3.2 Calculator	54
3.3 Ez Tip Calculator	54
3.4 Calendar	55
Editing and Deleting calendar entries	55
3.5 To Do List	56
3.6 Alarm Clock	56
How to delete alarms	56
How to edit alarms	57
3.7 Info Search	57
3.8 Stopwatch	57
3.9 World Clock	58
3.10 Notepad	58

4. Bluetooth® Menu

Turn On Bluetooth	59
4.1. Add New Device	59
For pairing with a new Bluetooth® device	59
Icon Reference in Adding New Device	60
Icon References When a Bluetooth® Wireless Connection is Searched (neither connected nor paired)	60
Icon References When Successfully Connected	60
My Device Info	60
Discovery Mode	61
Supported Profiles	61
5. Sounds Settings	61
5.1 Easy Set-up	61
5.2 Call Sounds	62

Table of Contents

5.2.1 Call Ringtone	62	7.7 Security	71
5.2.2 Call Vibrate	62	7.7.1 Edit Codes	71
5.2.3 Caller ID Readout	62	7.7.2 Restrictions	72
5.3 Alert Sounds	62	7.7.3 Phone Lock Setting	72
5.4 Keypad Volume	63	7.7.4 Lock Phone Now	72
5.5 Digit Dial Readout	63	7.7.5 Reset Default	73
5.6 Service Alerts	63	7.7.6 Restore Phone	73
5.7 Power On/Off	64	7.8 System Select	73
5.8 Voice Clarity	64	7.9 NAM Select	74
6. Display Settings	64	8. Call Settings	74
6.1 Easy Set-up	64	8.1 Answer Options	74
6.2 Banner	65	8.2 Call Forwarding	74
6.2.1 Personal Banner	66	8.3 Auto Retry	75
6.2.2 ERI Banner	66	8.4 TTY Mode	75
6.3 Backlight	66	Connecting TTY Equipment and a Terminal	75
6.4 Brightness	66	8.5 One Touch Dial	76
6.5 Wallpaper	67	8.6 Voice Privacy	76
6.6 Display Themes	67	8.7 DTMF Tones	77
6.7 Main Menu Settings	67	8.8 Assisted Dialing	77
6.8 Font Type	68	8.9 Dial Search	77
6.9 Font Size	68	9. Memory	78
6.10 Internal Clock	69	10. Phone Info	78
7. Phone Settings	69	10.1 My Number	78
7.1 Airplane Mode	69	10.2 SW/HW Version	78
7.2 Set Shortcut Keys	69	10.3 Icon Glossary	79
7.2.1 Set My Shortcuts	69	10.4 Software Update	79
7.2.2 Set Directional Keys	70	11. Set-up Wizard	80
7.3 Voice Commands	70		
7.4 Language	70		
7.5 Location	70		
7.6 Current Country	71		

Important Safety Precautions

81

Safety84

Consumer Information About Radio
Frequency Emissions.....86

Consumer Information on SAR90

FCC Hearing-Aid Compatibility
(HAC) Regulations for Wireless
Devices92

Caution:

Avoid potential hearing loss.94

TIA Safety Information.....95

Safety Information98

FDA Consumer Update.....103

Driving 111

10 Driver Safety Tips 111

LIMITED WARRANTY STATEMENT 115

Technical Details 118

Important Information..... 118

Glossary.....122

Terminology122

Acronyms and Abbreviations...122

Index.....124

Phone Overview



1. **Camera Lens** Use to take photos. Keep it clean for optimal photo quality.
2. **Front LCD Screen** Displays the digital clock and phone status.
3. **Earpiece** Lets you hear the caller and automated prompts.
4. **Flip** Use to make or answer calls. Flip open to reveal the keypad to dial a number or answer an incoming call. Close the flip to end the call.
5. **Main LCD Screen** Displays messages, indicator icons and active functions.
6. **OK Key / Directional Key** Use the OK Key to select the function displayed at the bottom of the LCD between the Left and Right Soft Key functions. Use the Directional Key  to scroll through the menu items and highlight a specific field or object by moving up, down, left or right.
7. **Left Soft Key** Performs functions identified on the bottom-left corner of the screen.
8. **Speakerphone Key** Use to change to speakerphone mode.
9. **Headset Jack** Allows you to plug in an optional 2.5mm headset for convenient, hands-free conversations.
10. **Send Key** Use to make and answer calls. Press to access the All Calls list.
11. **Volume Keys** Use to adjust the Master Volume in standby mode* and the Earpiece Volume during a call. Use to adjust font sizes when viewing messages, entering phone numbers (in standby mode) or browsing menus (except for the Main menu).
12. **Accessory/Charger Port** Connects the phone to the Wall/USB charger, or other compatible accessories.
14. **Right Soft Key**
15. **Clear/ Voice Commands Key**
16. **Camera Key**
17. **Power/End Key**
18. **Alphanumeric Keypad**
19. **Vibrate Mode Key**
20. **Microphone**

* Standby mode is when the phone is waiting for input from you. No menu is displayed and the phone isn't performing any action. It's the starting point for all of the instruction steps.

13. **International Call Prefix Key** To make an international call, press and hold  for 3 seconds. + is the international calling code.
14. **Right Soft Key** Performs functions identified on the bottom-right corner of the screen.
15. **Clear/ Voice Commands Key** Deletes single spaces or characters with a quick press, or press and hold to delete entire words in text entry screens. Press to back out of menus, one level at a time. Use for quick access to Voice Commands.
16. **Camera Key** Press the Camera Key to turn the handset in to camera mode to take pictures.
17. **Power/End Key** Use to turn the power on/off and to end a call. Also returns to standby mode.
18. **Alphanumeric Keypad** Use to enter numbers and characters and select menu items.
19. **Vibrate Mode Key** Use to set Vibrate mode (from standby mode press and hold for about 3 seconds).
20. **Microphone** Allows other callers to hear you clearly when you are speaking to them.

Rear view



NOTE

- It's important to fully charge the battery before using the phone for the first time.
- Battery life and signal strength are significant factors (among others) that affect your phone's ability to send/receive calls or data transfer.

NOTE

The antenna is located inside your phone.

Tip

If you hold the phone enclosing the lower edge, you may interfere with the antenna's ability to receive a clear signal which affects call quality for voice or data transfer.



Contacts

1. **New Contact**
2. **Contact List**
3. **Backup Assistant**
4. **Favorites**
 1. ADD
 1. Contacts
 2. Group
5. **Groups**
6. **Speed Dials**
7. **In Case of Emergency**
8. **My Name Card**

Messaging

1. **New Message**
 1. TXT Message
 2. Picture Message
 3. Voice Message
2. **Inbox**
3. **Sent**
4. **Drafts**
5. **Voice Mail**
6. **Mobile Email**
7. **Social Networks**

Settings

1. Inbox View
2. Entry Mode
3. Auto Save Sent
4. Auto Erase Inbox

5. Messaging Font Size
6. TXT Auto View
7. TXT Instant Reply
8. TXT Auto Scroll
9. Multimedia Auto Receive
10. Quick Text
11. Emergency Alert
 1. Receive Alerts
 2. Alert Reminder
 3. Alert Vibrate
12. Voicemail #
13. Callback #
14. Signature
15. Delivery Receipt

Options

1. Erase Inbox
2. Erase Sent
3. Erase Drafts
4. Erase All

Recent Calls

1. **Missed**
2. **Received**
3. **Dialed**
4. **All**
5. **View Timers**

Mobile Web

Media Center

1. **Mobile Web**

2. **Tunes & Tones**

1. Get New Ringtones
 1. Get New Applications
2. Get Ringback Tones
3. My Ringtones
 1. Get New Applications
4. My Sounds
 1. Record New

3. **Pictures**

1. Get New Pictures
 1. Get New Applications
2. My Pictures
3. Take Picture
4. Online Album

4. **Games**

1. Get New Applications

5. **Browse & Download**

1. Get New Applications

6. **Extras**

1. Get New Applications

Mobile Email

V CAST Tones

My Pictures

Settings & Tools

1. My Verizon

2. Master Volume

3. Tools

1. Voice Commands
 1. Call <Name or Number>
 2. Send Msg to <Name or Number>
 3. Go to <Menu>
 4. Check <Item>
 5. Contacts <Name>
 6. Redial
 7. My Verizon
 8. Help
2. Calculator
3. Ez Tip Calculator
4. Calendar
5. To Do List
6. Alarm Clock
7. Info Search
8. Stopwatch
9. World Clock
10. Notepad

4. Bluetooth Menu

1. Add New Device

5. Sounds Settings

1. Easy Set-up
2. Call Sounds
 1. Call Ringtone
 2. Call Vibrate
 3. Caller ID Readout
3. Alert Sounds
 1. TXT Message
 2. Multimedia Message
 3. Voicemail
 4. Emergency Tone
 5. Missed Call
4. Keypad Volume
5. Digit Dial Readout
6. Service Alerts
 1. ERI
 2. Minute Beep
 3. Call Connect
 4. Charge Complete
 5. Software Update
7. Power On/Off
 1. Power On
 2. Power Off
8. Voice Clarity

6. Display Settings

1. Easy Set-up
2. Banner
 1. Personal Banner
 2. ERI Banner
3. Backlight
 1. Display Backlight
 2. Keypad Backlight
4. Brightness
5. Wallpaper
 1. My Pictures
 2. Fun Animations
 3. Slide Show
6. Display Themes
7. Main Menu Settings
 1. Menu Layout
 2. Replace Menu Items
 3. Position Menu Items
 4. Reset Menu Settings
8. Font Type
9. Font Size
10. Internal Clock

7. Phone Settings

1. Airplane Mode
2. Set Shortcuts
 1. Set My Shortcuts
 2. Set Directional Keys
3. Voice Commands
 1. Confirm Choices
 2. Sensitivity
 3. Adapt Voice
 4. Prompts
 5. Clear/Voice Commands Key Activation
4. Language
5. Location
6. Current Country
7. Security
 1. Edit Codes
 2. Restrictions
 3. Phone Lock Setting
 4. Lock Phone Now
 5. Reset Default
 6. Restore Phone
8. System Select
9. NAM Select

8. Call Settings

1. Answer Options
2. Call Forwarding
 1. Forward Call
 2. Cancel Forwarding
3. Auto Retry
4. TTY Mode
5. One Touch Dial
6. Voice Privacy
7. DTMF Tones
8. Assisted Dialing
9. Dial Search

9. Memory

1. Memory Usage
2. My Pictures
3. My Ringtones
4. My Sounds
5. My Contacts

10. Phone Info


1. My Number
2. SW/HW Version
3. Icon Glossary
 1. Status
 2. Home Screen
 3. Media Center
 4. Messaging
 5. Contacts
 6. Recent Calls
 7. Settings & Tools
4. Software Update
 1. Status
 2. Check New

11. Set-up Wizard

Getting Started with Your Phone

Step 1. Remove the Back Cover

1. Hold the phone securely with both hands.
2. Use your thumb to press down on the indentation near the bottom of the back cover and slide the cover upwards to remove it.

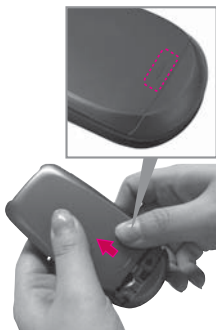

Step 2. Insert the Battery

Align the battery contacts with the terminals near the top of the battery compartment and press down until the battery clicks into place.



Step 3. Replace the Back Cover

Align the back cover over the battery compartment and slide it downwards until it clicks into place.



Step 4. Charge the Phone

Your device comes with a Wall/USB charger and a USB cable which connect together to charge your phone. To charge your phone:

1. Before turning on your phone, charge it fully. Be sure to use the charger that came with your phone.



NOTICE: Please make sure that the 'B' side faces up before inserting a charger or USB cable into the Accessory/Charger Port of your phone.

Installing the Battery

2. Use your thumb to press down on the indentation near the bottom of the back cover and slide the cover upwards to remove it.
3. Align the battery contacts with the terminals near the top of the battery compartment and press down until the battery clicks into place.
4. Align the back cover over the battery compartment and slide it downwards until it clicks into place.



Removing the Battery

1. Turn the phone off.
2. Use your thumb to press down on the indentation near the bottom of the back cover and slide the cover upwards to remove it.

3. Use the fingertip opening near the bottom of the battery compartment to lift the battery out.

Charging the Battery

Your device comes with a wall adapter and a USB cable which connect together to charge your phone. To charge your phone:

NOTICE

Please use only an approved charging accessory to charge your LG phone. Improper handling of the Accessory/Charger Port, as well as the use of an incompatible charger, may cause damage to your phone and void the warranty.

1. Connect the USB cable into the wall adapter.



Wall Adapter

2. Gently uncover the Accessory/Charger Port, then plug the USB cable into the phone's Accessory/Charger Port and the other end into an electrical outlet.



NOTE

Please make sure that the 'B' side faces up before inserting a charger or USB cable into the Accessory/Charger Port of your phone.

The charge time varies depending upon the battery level.

Charging with USB

You can use your computer to charge your phone. To be able to charge with the USB cable, you may need to have the necessary USB Driver installed on your PC first. Connect one end of the USB cable to the Accessory/Charger Port on your phone and the other end to the USB port on your PC.

NOTE Low-power USB ports are not supported, such as the USB ports on your keyboard or bus-powered USB hub.

Battery Temperature Protection

If the battery gets overheated, the phone will automatically turn off. When you turn the phone back on, a message pops up alerting you that the phone was powered off for your safety.

Battery Charge Level

You can find the battery charge level  at the top right corner of the LCD screen. When the charge level becomes low, the battery sensor sounds a warning tone, blinks the battery icon, and/or displays a warning message. As the charge level approaches empty, the phone automatically switches off without saving.

Signal Strength

Call quality depends on the signal strength in your area. You can tell how much signal strength you have by the number of bars next to the signal strength icon : the more bars, the stronger the signal. If you're having problems with signal quality, move to an open area or, when inside a building, try moving near a window.

Turning the Phone On and Off

Turning the Phone On

1. Insert the battery and connect the phone to an external power source if the battery level is low.
2. With the flip open, press the **Power/End Key**  until the LCD screen lights up.

Turning the Phone Off

With the flip open, press and hold the **Power/End Key**  until the LCD screen turns off.

Making Calls

1. Open the flip and enter the phone number.
2. Press the **Send Key**  to dial the call.
3. Press the **Power/End Key**  to end the call.

NOTE Your phone has a Voice Commands feature that also lets you make calls by saying a phone number or Contact name. To access it, open the flip and press the **Clear/Voice Commands Key**  and say Call followed by the name or number.

Correcting Dialing Mistakes

While entering a phone number, press the **Clear/Voice Commands Key**  once to erase the last digit entered, or hold it down for at least two seconds to delete all the digits.

Redialing Calls

With the flip open, press the **Send Key**  twice to redial the last number dialed.

Receiving Calls

1. When the phone rings or vibrates, you can answer the call by simply opening the flip.

NOTE If the 'Flip Open' (Menu > Settings & Tools > Call Settings > Answer Options) answer option is NOT MARKED, you can:

- Open the flip and press the **Send Key**  to answer the call.
- Open the flip and press the Left Soft Key  [Quiet] to mute the ringing or vibration for that call.
- Open the flip and press the Right Soft Key  [Ignore] to end the call or send it directly to Voicemail.
- Open the flip and press  [TXT] to end the call and send a quick text message.

2. Press the **Power/End Key**  to end the call, or simply close the flip.

Screen Icons

When the phone is on, the top line of the LCD screen displays phone status icons.

To see the icon glossary, with the flip open, press  [MENU] >  **Settings & Tools** > **Phone Info** > **Icon Glossary** and select a subcategory.

Vibrate Mode

Sets the phone to vibrate instead of ringing ( is displayed). To set Vibrate Mode, with the flip open, press and hold . To return to Normal Mode, press and hold  again.

Sounds Off

Quickly deactivate your phone's sounds when you're in a place where phone sounds would be disruptive.

From standby mode with the flip open, press and hold the **Volume Down Key**  for 3 seconds. To return to normal sounds mode, press and hold the **Volume Up Key** .

Mute Function

The Mute Function prevents the transmission of your voice to the caller. To quickly activate Mute while on a call, press the Left Soft Key  [**Mute**], then to unmute press the Left Soft Key  [**Unmute**] again.

Quick Volume Adjustment

Quickly adjust ringer and earpiece volumes by pressing the Volume Keys  on the left side of the

phone. Press the **Volume Up Key**  to increase and **Volume Down Key**  to decrease the volume.

NOTE The earpiece volume can only be adjusted during a call and Keypad Volume can only be adjusted through the Sounds Settings menu.

Quick Font Resize

When you view messages, enter phone numbers, or view sub-menus, press the Volume Keys  to quickly adjust the font size.

NOTE Not supported on the Main menu.

Call Waiting

During a call, one beep indicates another incoming call. Press the **Send Key**  to answer it and put the first call on hold. Press the **Send Key**  again to return to the first call.

3-way call

You can talk with two people at the same time with a three-way conversation on your wireless phone. Airtime and other charges, which may include toll or long distance charges, will apply for all simultaneous calls until you end one call.

1. While on the first call, dial the

Quick Access to Convenient Features

- 10-digit number of the second person.
2. Press the **Send Key** . The first person is automatically put on hold while the call is made.
3. When the second person answers, press **OK** [MERGE] to create a conference call.
4. If the second person does not answer, press the **Send Key**  twice to end the connection and go back to the first person.
5. To end both conversations completely, press the **Power/End Key** .

Caller ID

Caller ID displays the number and/or name and picture (if applicable) of the person calling when your phone rings.

Voice Commands

Voice Commands allow you to do things by verbal command (e.g., make calls, check Voicemail, etc.). With the flip open, press the **Clear/Voice Commands Key**  on the keypad.

1. **Call** Say "Call" and then call someone simply by saying the name or phone number.

2. **Send Msg to** Say "Send Message" and the command will prompt you for the type of message.
3. **Go to** This allows you to access a menu within the phone.
4. **Check** This allows you to check out a wide range of items such as **Phone Status**, **Voicemail**, **Messages**, **Missed Calls**, **Time**, **Signal Strength**, **Battery Level**, **Volume**, **Balance**, **Minutes**, **Payment** and **My Number**.
5. **Contacts** You can look up names in your Contacts as well as manage your Contact List including creating, erasing or modifying.
6. **Redial** Say "Redial" and the phone will redial the last phone number.
7. **My Verizon** This command provides you with direct access to your Verizon Wireless account information.
8. **Help** Provides a general guideline to using Voice Commands.

NOTE Voice Commands can also be started with the designated key on your Bluetooth® device. Please check the user manual of the Bluetooth® device for further instructions.

Dial Search

Set the Dial Search setting to **On** (see page 77) to easily find entries in your Contacts. From standby mode with the flip open, press the keypad key(s) with the first letter(s) of the Contact name you are trying to find. A list of matching names will be displayed for you to select to call, message, or view.

Entering and Editing Information

Text Input

The following key functions are available to help with text entry:

 **Left Soft Key:** Press to change the text input mode.

 **Shift:** Press to change capitalization (initial cap, caps lock, lowercase).

 **Next:** Press to display other matching words in the database in T9 word mode.

 **Space:** Press to complete a word and insert a space.

 **Clear:** Press to delete a single space or character. Hold to delete words.

 **Punctuation:** Press to insert punctuation symbols.

Text Input Modes

In a text field, press the Left Soft Key  to select a text input mode:

T9 Word/ Abc/ ABC/ 123/

T9 Palabra/ Symbols/

Quick Text/ Simplified Chinese/ Korean

NOTE

- T9 Palabra is the Spanish counterpart of T9 Word which utilizes accents, tildas, etc. for correct Spanish word spelling.
- Simplified Chinese supports PinYin as entry mode.
- Korean provides a key guide. To use the key guide, select Options > Show Key Guide.

Storing Basics

1. With the flip open, enter a number (max. 48 digits), then press the Left Soft Key  [Save].
2. Use the Directional Key  to highlight **Add New Contact/ Update Existing**, then press .
3. Use the Directional Key  to highlight **Mobile 1/ Home/ Business/ Mobile 2/ Fax**, then press .
4. Enter a name (max. 32 characters), and any additional information, then press  [SAVE].

NOTE If you selected Update Existing after you select the number type, the contact information is automatically updated.

Customizing Individual Entries

1. With the flip open, press the Right Soft Key  [Contacts], then use the Directional Key  to highlight an entry.
2. Press the Left Soft Key  [Edit].
3. Use the Directional Key  to highlight the information to customize.
4. Change the entry as you want,

then press  [SAVE] to save your changes.

Speed Dial

Allows you to set up your Speed Dials.

1. With the flip open, press the Right Soft Key  [Contacts], then use the Directional Key  to highlight an entry.
2. Press the Left Soft Key  [Edit].
3. Use the Directional Key  to highlight a phone number, then press the Right Soft Key  [Options].
4. Use the Directional Key  to highlight **Set Speed Dial**, then press .
5. Select a Speed Dial digit.
 - Enter a digit using the keypad, then press  [SET].
 - Use the Directional Key  to highlight the Speed Dial digit, then press  [SET].
6. Press  [Yes] to confirm, then press  [SAVE] to update your contact entry.

Storing a Number with Pauses

Pauses allow you to enter additional series of numbers to access automated systems such as Voicemail or credit billing numbers. Pause types are:

Wait (W) The phone stops dialing until you press the Left Soft Key  [Release] to advance to the following series of numbers.

2-Sec Pause (P) The phone waits two seconds before dialing the next string of digits.

1. With the flip open, enter the phone number, then press the Right Soft Key  [Options].
2. Use the Directional Key  to highlight Add 2-Sec Pause or Add Wait, then press .
3. Enter the additional number(s) (e.g., pin number, credit card number, etc.).
4. Press the Left Soft Key  [Save].
5. Choose Add New Contact/ Update Existing.
6. Choose Mobile 1/ Home/ Business/ Mobile 2/ Fax.
7. Continue entering information for the Contact entry as necessary.

NOTE If you selected Update Existing after you select the number type, the contact information is automatically updated. You do not have the option to enter additional information.

8. Press  [SAVE] to update your contact entry.

Adding a Pause to an Existing Contact Entry

1. With the flip open, press the Right Soft Key  [Contacts].
2. Use the Directional Key  to highlight a Contact entry, then press the Left Soft Key  [Edit].
3. Use the Directional Key  to highlight the number, then press the Right Soft Key  [Options].
4. Press  Add 2-Sec Pause or  Add Wait.
5. Enter the additional number(s), then press  [SAVE] to update your contact entry.

Adding Another Phone Number

From standby mode

1. With the flip open, enter a phone number, then press the Left Soft Key  [Save].
2. Use the Directional Key  to highlight Update Existing, then press .

3. Use the Directional Key  to highlight an existing entry then press  [SAVE] to update your contact entry.
4. Use the Directional Key  to highlight **Mobile 1/ Home/ Business/ Mobile 2/ Fax**, then press  [SAVE] to update your contact entry.

From the Contact List Screen

1. With the flip open, press the Right Soft Key  [Contacts].
2. Use the Directional Key  to highlight an entry, then press the Left Soft Key  [Edit].
3. Use the Directional Key  to highlight the phone number field you wish to add. Then enter the number and press  [SAVE] to update your contact entry.

Changing Saved Information

To edit any information you stored, access the Edit Contact screen:

1. With the flip open, press the Right Soft Key  [Contacts].
2. Use the Directional Key  to highlight a Contact entry, then press the Left Soft Key  [Edit].
3. Use the Directional Key  to highlight the field you want to change.
4. Make the changes, then press  [SAVE] to update your contact entry.

Changing the Default Number

The default number is the phone number you first entered when you created the Contact. However, another number can be saved as the default number.

1. With the flip open, press the Right Soft Key  [Contacts].
2. Use the Directional Key  to highlight an entry.
3. Press the Left Soft Key  [Edit].
4. Use the Directional Key  to highlight a phone number, then press the Right Soft Key  [Options].
5. Use the Directional Key  to highlight **Set As Default**, then press .
6. Press  [Yes] to confirm the new number as the default. A confirmation message is displayed.
7. Press  [SAVE] to update your contact entry.

Deleting

Deleting a Contact Entry

1. With the flip open, press the Right Soft Key  [Contacts].
2. Use the Directional Key  to highlight an entry.
3. Press the Right Soft Key  [Options].
4. Press  Erase.
5. Press  [Yes] to confirm.

Removing a Speed Dial

1. With the flip open, press the Right Soft Key  [Contacts].
2. Use the Directional Key  to highlight a Contact entry to edit and press  [VIEW].
3. Highlight the phone number with the Speed Dial, then press  [EDIT].
4. Press the Right Soft Key  [Options].
5. Press  Remove Speed Dial.
6. Press  [Yes] to confirm.
7. Press  [SAVE] to update your contact entry.

Speed Dialing

Allows you to make phone calls quickly and easily to numbers

stored in Contacts.

NOTE Speed Dial 1 is reserved for Voicemail.

Single Digit Speed Dials

Press and hold the Speed Dial digit. Your phone recalls the phone number from your Contacts, displays it, and dials it for you.

Multiple Digit Speed Dials

When you press and hold a number key, it signals the phone to call a Speed Dial. To dial Speed Dials with multiple digits, press the first digit(s), then press and hold the last digit. For example, to call Speed Dial 25, press , then press and hold .

NOTE You can also enter the Speed Dial digit(s) and press the Send Key .

Speed Dials 95, 96, 97, 98, and 99

Speed Dials 95, 96, 97, 98, and 99 are preset to access certain phone account information: 95 (#Warranty Center), 96 (#DATA), 97 (#BAL), 98 (#MIN), 99 (#PMT) and 411 (Directory Assistance). Unlike Speed Dial 1, these can be changed if you want.

Contacts

The Contacts menu allows you to store names, phone numbers and other information in your phone's memory.

Shortcut The Right Soft Key  is a shortcut key to the Contact List.

1. New Contact

Allows you to add a new contact to your Contact List.

NOTE Using this submenu, the number is saved as a new Contact, not into an existing Contact.

1. Open the flip and press  [MENU].
2. Press  Contacts.
3. Press  New Contact.
4. Enter the name and press the Directional Key  downward until the phone number type you want is highlighted.
5. Enter the number and any additional contact information and press  [SAVE] to update your contact entry.

NOTE For more detailed information, see page 19.

2. Contact List

Allows you to view your Contact List.

1. Open the flip and press  [MENU].
2. Press  Contacts.
3. Press  Contact List.
4. Use the Directional Key  to scroll through your Contacts alphabetically.

- Press the Right Soft Key  [Options] to select one of the following:

New Contact/ Erase/
New TXT Message/ New
Picture Message/ New
Voice Message/ Set As ICE
Contact/ Call/ Manage
Contacts/ Set As Favorite/
Search Entry Mode

- Press the Left Soft Key  [Edit] to edit.
- Press  [VIEW] to view the entry details.

TIP Use the Go To field, for quick access to an entry without scrolling. For example, to go to "Vet", enter the letter V.

3. Backup Assistant

Backup Assistant safeguards your mobile phone's address book and automatically saves a copy of the names, phone numbers, and email addresses stored in your phone. You can also view, print, add, delete, and edit your Contacts online. If you lose, damage, or upgrade your phone, Backup Assistant will restore your Contact List to a new or replacement phone.

Additional fees may apply. See your service provider for details.

NOTE To use the Backup Assistant service, you are required to activate the service from your phone.

1. Open the flip and press **OK** [MENU].
2. Press **1** **Contacts**.
3. Press **3** **Backup Assistant**.
4. Follow the instructions to download the application.

4. Favorites

Allows you to add Contact entries or Contact groups to your list of Favorites to easily view, call, or send messages.

1. Open the flip and press **OK**

[MENU].

2. Press **1** **Contacts**.
3. Press **4** **Favorites**.
4. Press **OK** [ADD].

TIP You can add up to 10 Contacts and/or Contact groups as Favorites to easily make calls, send messages, and view messages.

5. Select whether you want to add a favorite from your **Contacts** or **Group**.
6. Use the Directional Key **4** to scroll through your Contacts or Groups alphabetically and press **OK** [MARK].
7. Press the Left Soft Key **Left** [Done]. Once you have added Contacts to the Favorites list, the following options will become available in the Favorites menu:

Left Soft Key **Left**: View

OK Key **OK**: New Message/
View Messages

Right Soft Key **Right**: Options
Move Position/ Remove/
Remove All/ Set As ICE
Contact

5. Groups

Allows you to view your grouped Contacts, add a new group, change the name of a group, delete a group, or send a message to everyone in the selected group.

1. Open the flip and press **OK** [MENU].
2. Press **1** **Contacts**.
3. Press **5** **Groups**.
4. View a Group

Use the Directional Key **↑** to highlight a group, then press **OK** [VIEW].

Add a New Group

Press the Left Soft Key **⏏** [New] to add a new group to the list. Enter a name and picture (if desired) and press **OK** [SAVE].

Group's options

Press the Right Soft Key **⏏** [Options] to select one of the following:

New TXT Message/ New Picture Message/ New Voice Message/ Edit Group Name & ID/ Edit Members / Erase Group/ Set As Favorite/ Send Name Card/ Search Entry Mode

Adding Contacts to a Group

1. From Groups submenu, press **OK** [VIEW] and press **OK** [ADD].
OR
2. If the Group already has members added, highlight the group name and press the Right Soft Key **⏏** [Options], then press **5** **Edit Members**.
3. Highlight a desired contact and press **OK** [MARK].
4. Press the Left Soft Key **⏏** [Done] to add contact to a group.

6. Speed Dials

Allows you to view your list of Speed Dials or designate Speed Dials for numbers entered in your Contacts.

1. Open the flip and press **OK** [MENU].
2. Press **1** **Contacts**.
3. Press **6** **Speed Dials**.
4. Use the Directional Key **↑** to highlight the Speed Dial position, or enter the Speed Dial digit and press **OK** [SET].
5. Use the Directional Key **↑** to highlight the Contact then press **OK**. (For Contacts with

multiple numbers, highlight the number for the Speed Dial, then press **OK**.)

6. Press **OK** [**Yes**] to confirm. A confirmation message is displayed.

7. In Case of Emergency (ICE)

This menu allows you to store names, phone numbers and other information, which will be very helpful in case of emergency.

1. Open the flip and press **OK** [**MENU**].
2. Press **1** **Contacts**.
3. Press **7** **In Case of Emergency**.
4. Use the Directional Key **↓** to highlight **Contact 1, 2, or 3**, then press **OK** [**ADD**].
5. Press **1** **From Contacts** or **2** **From Favorites** to add a Contact from your Contact List.

OR

Press **3** **New Contact** to enter information not stored in your Contact List.

6. Select the contact and press **OK**.

7. The Contact label changes to the specified name.

Entering Your ICE Personal Info

1. Open the flip and press **OK** [**MENU**].
2. Press **1** **Contacts**.
3. Press **7** **In Case of Emergency**.
4. Use the Directional Key **↓** to highlight **Personal Info**, then press **OK** [**VIEW**].
5. Use the Directional Key **↓** to highlight one of the **Note** entries, then press **OK** [**ADD**].
6. Enter information that would be helpful in an emergency (e.g., your medical record number), then press **OK** [**SAVE**]. The note label changes to the text entered.

TIP When you've assigned ICE Contacts and your phone is locked, the Left Soft Key **☰** appears as [**ICE**] allowing the emergency information to be viewed without unlocking the phone.

To unassign an ICE Contacts

From the ICE Contacts menu, press the Right Soft Key **☰** [**Options**], then press **2** **Unassign**. Then press **OK** [**Yes**].

To delete Personal Info entry

From the Personal Info menu, press the Right Soft Key  [Erase]. Then press  [Yes].

8. My Name Card

Allows you to create, edit, and view your own personal Contact information including name, phone numbers, and email address in one entry.

1. Open the flip and press  [MENU].
2. Press  Contacts.
3. Press  My Name Card.
4. Press  [EDIT] to enter your personal Contact information.
5. Use the Directional Key  to scroll to the information you want to enter.
6. Enter your information as necessary, then press  [SAVE].

NOTE Press the Right Soft Key  [Send] to send your name card.

Messaging

Shortcut From standby mode, pressing the Left Soft Key  is a shortcut to your Messaging.

Depending on the content and size of your messages, the phone can store up to 600 messages (including a max. of 300 text messages, 200 emergency alerts and 100 multimedia messages in the Inbox). Content stored in the message may be limited by phone model and service capability. Other limits to available characters per message may exist. Please check with your service provider for system features and capabilities.

- When viewing a received message, you can call the sender back by pressing the Send Key .

New Message Alert

Your phone can alert you when you have new messages. Options include:

1. The phone displays a message on the screen.
2. The message icon  is displayed on the screen. In the case of a high priority message, the icon  will flash.

1. New Message

Allows you to send messages (Text, Picture, and Voice). Each message has a destination (Address) and information (Message). Depending on the type of message you choose to send, you can also attach files to your messages including pictures, sounds, and name cards.

1.1 TXT Message

The Basics of Sending a Text Message

1. Open the flip and press the Left Soft Key  [Message].
 2. Press  New Message.
 3. Press  TXT Message.
 4. Enter the phone number of the recipient or the email address for an email message. You can enter up to 20 addresses for a single message.
- NOTE** If you enter a phone number or email address saved in your contacts, the contact name will appear in the To field.
5. Press the Directional Key  downward to access the text field.
 6. Type your message in the Text field.
 7. Press  [SEND].

Using Messaging Options

• 'To' Field Options

1. With the 'To' field highlighted, press the Right Soft Key  [Add].
2. Select from the following add option(s).

From Contacts/ From Recent Calls/ Favorites/ Groups/ Social Networks

• Text Field Options

1. With the Text field highlighted, press the Right Soft Key  [Options].
2. Select from the following option(s).

Insert Quick Text Allows you to add Quick Text.

Save As Draft Saves the message into the Drafts folder.

Add Allows you to add Graphic, Animation, Sound, Name Card, or Contact Number/Email.

Copy Text Allows you to copy text.

Paste Allows you to paste the text you last copied into a text field.

Format Text Allows you to change the look of the text.
Alignment/ Font Size/

Font Style/ Text Color/ Background

Priority Level Allows you to set the priority level for the message.

High/ Normal

Callback # Inserts a pre-programmed callback number with your message.

On/ Off/ Edit

Save Quick Text Allows you to save the message as a Quick Text.

Cancel Message Cancels message editing and goes to the previous menu.

3. Complete and then press  [SEND] to send the message.

NOTE Refer to page 18 for the Left Soft Key  [Abc] options when in a text field.

Using Contacts to Send a Message

You can designate an entry saved in your Contacts as the address instead of manually entering the destination.

1. Open the flip and press the the Left Soft Key  [Message].
2. Press  New Message.
3. Press  TXT Message.

4. Press the Right Soft Key  [Add].
5. Use the Directional Key  to highlight **From Contacts** and press .
6. Use the Directional Key  to highlight the Contact entry containing the destination and press  [MARK].
7. Press the Left Soft Key  [Done].

NOTE The Address feature allows a maximum of 20 total addresses.

8. Complete the message as necessary.

1.2 Picture Message

The Basics of Sending a Picture Message

1. Open the flip and press the Left Soft Key  [Message].
2. Press  New Message.
3. Press  Picture Message.
4. Enter the phone number or email address of the recipient.
5. Press the Directional Key  downward to access the text field.
6. Type your message in the Text field.
7. Use the Directional Key  to

highlight the **Picture** field and press the Left Soft Key  [My Pics]. Use the Directional Key  to highlight the image you want to send, then press .

8. Use the Directional Key  to highlight the **Sound** field, then press the Left Soft Key  [Sounds]. Use the Directional Key  to highlight the audio file you want to send and press .
9. Use the Directional Key  to highlight the **Name Card** field, then press the Left Soft Key  [Add]. Use the Directional Key  to choose **My Name Card** or **From Contacts** and select an entry.
10. Use the Directional Key  to highlight the **Subject** field, and enter the subject.
11. Press  [SEND].
A confirmation message is displayed.

• 'To' Field Options

1. With the To field highlighted, press the Right Soft Key  [Add].
2. Select from the following add option(s).
From Contacts/ From Recent

**Calls/ Favorites/ Groups/
To Online Album/ Social
Networks**

- **Text Field Options**

1. With the Text field highlighted, press the Right Soft Key  [Options].
2. Select from the following option(s).

Preview Displays the Picture message as it would be seen by the recipient.

Save As Draft Saves the message into the Drafts folder.

Insert Quick Text Allows you to add Quick Text.

Copy Text Allows you to copy already-entered text.

Paste Allows you to paste the text you last copied into a text field.

Add Slide Insert multiple pictures into a picture message.

Priority Level Allows you to set the priority level for the message.

High/ Normal

Callback # Inserts a preprogrammed callback number with your message.

On/ Off/ Edit

Cancel Message Cancels message editing and returns to the Messaging menu.

- **Picture Field Options**

1. With the Picture field highlighted, press the Right Soft Key  [Options].
2. Select from the following option(s).
Preview/ Save As Draft/ Add Slide/ Priority Level/ Remove Picture/ Cancel Message

- **Sound Field Options**

1. With the Sound field highlighted, press the Right Soft Key  [Options].
2. Select from the following option(s).
Preview/ Save As Draft/ Add Slide/ Priority Level/ Remove Sound/ Cancel Message

- **Name Card Field Options**

1. With the Name Card field highlighted, press the Right Soft Key  [Options].
2. Select from the following option(s).
Preview/ Save As Draft/ Add Slide/ Priority Level/ Remove Name Card/ Cancel Message

- **Subject Field Options**

1. With the Subject field highlighted, press the Right Soft Key  [Options].
2. Select from the following option(s).
Preview/ Save As Draft/ Insert Quick Text/ Copy Text/ Paste/ Add Slide/ Priority Level/ Cancel Message

1.3 Voice Message

The Basics of Sending a Voice Message

1. Open the flip and press the Left Soft Key  [Message].
2. Press  **New Message**.
3. Press  **Voice Message**.
4. Press  to start recording.
5. Record your voice message.
6. Press  [STOP] to end the recording.
7. Enter the phone number or email address of the recipient.
8. Press the Directional Key  downward to access the text field.
9. Type your message.
10. Use the Directional Key  to highlight the **Name Card** field, then press the Left Soft Key  [Add]. Use the Directional Key  to choose **My Name Card** or **From Contacts** and select an entry.

11. Use the Directional Key  to highlight the **Subject** field and enter the subject.

12. Press  [SEND] to send.

- **Voice Memo**

The voice memo can be activated by long pressing the **Clear/Voice Commands Key** .

The saved Voice messages are saved as memos.

Once the recording has stopped, the audio file will be automatically saved.

You are allowed to record up to 1 Minute or 60 Minutes . To change, press the Right Soft Key  [Options] > **Recording Time**.

2. Inbox

The phone alerts you in up to 3 ways when you receive a new message:

- By displaying a notification message on the screen.
- By sounding a tone or vibration, if set.
- By displaying (The icon will be

when you get a high priority message.)

Viewing Your Inbox

1. Open the flip and press the Left Soft Key  [Message].
2. Press  **Inbox**.
3. Highlight a message. The following options are available.
 - Press  [OPEN] to view the message.
 - Press the Left Soft Key  [Erase] to erase the highlighted message.
 - Press the Right Soft Key  [Options] to access the following options:

Reply Replies to the sender's address of the received message.

Reply With Copy Replies to the sender's address with a copy of the original message text included.

Forward Forwards the message to other destination address(es).

Add To Contacts Stores the callback number, email address, and numbers from the address of the received message into your Contacts.

Extract Addresses Allows you to extract addresses.

Sort By Sender/Time Allows you to sort messages alphabetically by sender's name or by time received.

Settings Refer to Messaging settings.

Manage Inbox Allows you to manage (lock, erase and more) multiple messages.

Message Info Allows you to check the received message information.

Message Icon Reference

-  New TXT Message
-  Read TXT Message
-  New Media Message
-  New Media Message Received
-  Unread Media Message
-  Read Media Message
-  Message Delivered
-  Message Failed
-  Pending Message
-  Message Sent
-  New Webmail
-  Read Webmail

 Multiple Messages Delivered

 Multiple Messages Failed

 Multiple Message Delivery Incomplete

 Multiple Messages Pending

 Multiple Messages Sent

 TXT Message Draft

 Media Message Draft

 Namecard

 High Priority

 Lock

 Unlock

 Mobile Web Mail

* Multimedia Message indicates Picture/Voice Message.

3. Sent

Depending on the content and size of your messages, you can save up to 150 messages (100 text messages/50 multimedia messages). This menu lists your Sent messages. Content stored in the message may be limited by phone model and service capability. Other limits, such as available characters per message, may exist. Please check with your service provider for system features

and capabilities. Use it to verify whether the transmission was successful or not and view message contents.

1. Open the flip and press the Left Soft Key  [Message].
2. Press  Sent.
3. Highlight a message. The following options are available.
 - Press  [OPEN] to view the message.
 - Press the Left Soft Key  [Erase] to erase highlighted message.
 - Press the Right Soft Key  [Options].

Forward Forwards a sent message to other destination address(es).

Reply To All Replies to all recipients of the selected message.

Send/Resend Allows you to retransmit the selected message.

Add To Contacts Stores the callback number, email address, and numbers from the address of the message into your Contacts.

Sort By Recipient/Time Allows you to sort alphabetically by

recipient's name or by time sent.

Settings Refer to Messaging settings.

Manage Sent Allows you to manage (erase or lock) multiple messages.

Message Info Allows you to check the sent message information.

4. Drafts

Saved message drafts are stored here.

1. Open the flip and press the Left Soft Key  [Message].
2. Press  Drafts.
3. Highlight a message. The following options are available.
 - Press  [EDIT] to continue editing the message.
 - Press the Left Soft Key  [Erase] to erase the message.
 - Press the Right Soft Key  [Options] for the following options.

Send Sends the selected message.

Add To Contacts Stores the number, email address, and numbers from the address

included in the message into your Contacts.

Manage Drafts Allows you to manage (erase or lock) messages.

Message Icon Reference



Draft Text Message



Draft Multimedia Message

5. Voicemail

Allows you to view the number of new voice messages recorded in the Voicemail box. Once you exceed the storage limit, old messages are overwritten. When you have a new voice message, your phone will alert you.

Checking Your Voicemail Box

1. Open the flip and press the Left Soft Key  [Message].
2. Press  Voicemail.
3. The following options are available.
 - Press the Left Soft Key  [Clear] to clear the Voicemail Counter, then then press  [Yes].
 - Press the Send Key  or  [CALL] to listen to the message(s).

OR

1. Enter (*VM) and press the **Send Key** from your phone or dial your wireless phone number from any touch-tone phone.

OR

Press and hold from your phone, as a speed dial to your voicemail.

2. When the recorded announcement begins, press to interrupt (if applicable).
3. When prompted, enter your password, then .

6. Mobile Email

Allows you to send an email via Mobile Web. You can also send and receive emails through Mobile Email after downloading the application.

1. Open the flip and press the Left Soft Key [Message].
2. Press **Mobile Email**.
3. Subscribe to the service (if necessary).
4. Accept the Terms of Service.
5. Highlight an email provider and press .
6. Follow the instructions to set up

your account(s).

7. Social Networks

The upgraded text-based social networks allows you to update your status, send messages, upload pictures, and write on someone's wall by sending a text message.

1. Open the flip and press the Left Soft Key [Message].
2. Press **Social Networks**.
3. Select one of the social networking service providers.
4. Update your information as desired.

NOTE Press the Right Soft Key [Help] to find out how to subscribe to text-based updates.

Messaging Settings

Allows you to configure settings for your messages.

1. With the flip open, press the Left Soft Key [Message].
2. Press the Left Soft Key [Settings].
3. Use the Directional Key to highlight one of the settings and press to select it.

Message Settings Sub-Menu Descriptions

1. Inbox View

Select **Time** to display messages chronologically in Inbox and Sent folders. Select **Contact** to sort all messages alphabetically by Contact in one message folder.

NOTE By default, Time is set as the Inbox View setting. If changed to Contact, the Messaging menu will appear differently.

2. Entry Mode

Select **T9 Word, Abc, ABC, 123, T9 Palabra, Simplified Chinese** or **Korean** to be your default input method.

3. Auto Save Sent

Select **On** to automatically save your Sent messages. Select **Off** if you don't want to save automatically. Select **Prompt** to be asked to save.

4. Auto Erase Inbox

Select **On** to automatically delete read messages when you exceed the storage limit. Or, select **Off**.

5. Messaging Font Size

Select **Resizable, Small, Normal** or **Large** for the size of the Messaging

characters.

6. TXT Auto View

Select **On** to automatically display message content on the screen. Select **On + Readout** to automatically display content and read it aloud. Select **Off** for more security and privacy by requiring the message to be opened to view it.

7. TXT Instant Reply

Select **On** to text a reply instantly. Or, select **Off**.

8. TXT Auto Scroll

Select **On** to automatically scroll text down while viewing messages. Or, select **Off**.

9. Multimedia Auto Receive

Select **On** to automatically download attachments to Multimedia messages. Or, select **Off**.

10. Quick Text

Displays your list of Quick Text phrases to help you to reduce manual input into messages. Use this submenu to edit and add text.

11. Emergency Alert

Set your configuration for receiving emergency alerts. This menu has three options: **Receive Alerts/Alert Reminder/Alert Vibrate**

12. Voicemail

Allows you to manually enter the access number for Voicemail Service. This number should be only used when a VMS (Voicemail Service) access number is not provided by the network.

13. Callback

Select **On** to automatically send a designated callback number with your messages. Or, select **Off**.

14. Signature

Select **Custom** to create/edit a signature to automatically send with your messages. Select **None** for no signature.

15. Delivery Receipt

When **Delivery Receipt** is set to **On**, you can see if your sent messages have been delivered (). Or select **Off**.

Erasing Messages

You can erase messages stored in your Inbox, Sent, or Drafts folders. You can also erase all messages at the same time.

1. Open the flip and press the Left Soft Key  **[Message]**.
2. Press the Right Soft Key  **[Options]** then select one of the following:

**Erase Inbox/ Erase Sent/
Erase Drafts/ Erase All**

3. Press  **[Yes]** to confirm the deletion or select which messages you want to delete.

A confirmation message is displayed.

Recent Calls

The Recent Calls menu is a list of the last phone numbers or Contact entries for calls you placed, accepted, or missed. It's continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

1. Missed

Allows you to view the list of missed calls; up to 90 entries.

1. Open the flip and press  [MENU].
2. Press  Recent Calls.
3. Press  Missed.
4. Use the Directional Key  to highlight an entry, then
 - Press  [OPEN] to open the entry.
 - Press the Send Key  to place a call to the number.
 - Press the Right Soft Key  [Options] to select:
Save To Contacts (Contact Info)/ Erase/ Lock(Unlock)/ Erase All/ View Timers

- Press the Left Soft Key  [Message] to select:
TXT Message/ Picture Message/ Voice Message

2. Received

Allows you to view the list of incoming calls; up to 90 entries.

1. Open the flip and press  [MENU].
2. Press  Recent Calls.
3. Press  Received.
4. Use the Directional Key  to highlight an entry, then
 - Press  [OPEN] to open the entry.
 - Press the Send Key  to place a call to the number.
 - Press the Right Soft Key  [Options] to select:
Save To Contacts (Contact Info)/ Erase/ Lock(Unlock)/ Erase All/ View Timers
 - Press the Left Soft Key  [Message] to select:
TXT Message/ Picture Message/ Voice Message

3. Dialed

Allows you to view the list of outgoing calls; up to 90 entries.

1. Open the flip and press [MENU].
2. Press Recent Calls.
3. Press Dialed.
4. Use the Directional Key to highlight an entry, then
 - Press [OPEN] to open the entry.
 - Press the Send Key to place a call to the number.
 - Press the Right Soft Key [Options] to select:
Save to Contacts(Contact Info)/ Erase/ Lock(Unlock)/ Erase All/ View Timers
 - Press the Left Soft Key [Message] to select:
TXT Message/ Picture Message/ Voice Message

4. All

Allows you to view the list of all calls; up to 270 entries.

1. Open the flip and press [MENU].
2. Press Recent Calls.

3. Press All.

4. Use the Directional Key to highlight an entry, then

- Press [OPEN] to open the entry.
- Press the Send Key to place a call to the number.
- Press the Right Soft Key [Options] to select:
Save to Contacts(Contact Info)/ Erase/ Lock(Unlock)/ Erase All/ View Timers
- Press the Left Soft Key [Message] to select:
TXT Message/ Picture Message/ Voice Message

Shortcut To view a quick list of all your recent calls, press the Send Key from standby mode.

5. View Timers

Allows you to view the duration of selected call types.

1. Open the flip and press [MENU].
2. Press Recent Calls.
3. Press View Timers.
4. Use the Directional Key to highlight a call list.
Last Call/ All Calls/ Received

Calls/ Dialed Calls/ Roaming
Calls/ Transmit Data/
Received Data/ Total Data/
Last Reset/ Lifetime Calls/
Lifetime Data Counter

5. Press the Left Soft Key 
[Reset] to reset the highlighted
timer.
6. Reset all the recorded timers by
pressing the Right Soft Key 
[Reset All].

NOTE Lifetime Calls and Lifetime Data
Counter cannot be reset.

Mobile Web

Allows you to access news, sports, weather, and email from your Verizon Wireless device. Accessibility and selections within this feature are dependent upon your service provider. For specific information on Mobile Web access through your phone, contact your service provider.

Shortcut Pressing the Left Directional Key  is the shortcut to accessing the Browser when the flip is open.

1. Open the flip and press  [MENU].
2. Press  **Mobile Web**.

NOTE Refer to the Media Center section on the following page for more Browser information.

Media Center

Media Center allows you to do more than just talk on your phone. Media Center is a technology and service that allows you to use applications on your phone. With Media Center, it's quick and easy to personalize your phone to your lifestyle and tastes. Just download the applications that appeal to you. With a wide range of software available, you can be assured that you can find something useful, practical, or entertaining.

Anything Unclear?

From the Media Center menu, press the Right Soft Key  [Info] to see your memory status, and Media Center status. Use the **Help** option to view information from buying new applications to expired applications.

1. Mobile Web

1. Open the flip and press  [MENU].
2. Press  **Mobile Web**.

OR

Press  **Media Center**, then press  **Mobile Web**.

Ending a Browser Session

End a Browser session by pressing the **Power/End Key** .

Navigating Through the Mobile Web

On-screen items appear in one of the following ways:

- **Numbered options**

You can use your numeric keypad or you can select the items by moving the cursor and pressing the appropriate Soft Keys.

- **Links embedded in content**

You can act on the options or the links using the Soft Keys just below the display screen.

- **Text or numbers**

You can select the items by moving the cursor and pressing .

Scrolling

Use the Directional Key . The browser's cursor will highlight currently selected items.

Fast Scrolling

Press and hold the Directional Key  to quickly move the cursor up and down on the current screen.

Scrolling by Page

Press the Volume Keys  to move up and down a page at a time.

Home Page

Press the Right Soft Key  [Menu] and select **1. VZW Home** or press and hold  to go to the Home Page.

Soft Keys

To use (if available) special functions press the Soft Keys. The function, associated with the Soft Keys can change for each page and depends on each highlighted item.

Entering Text, Numbers, or Symbols

When prompted to enter text, the current text entry method appears above the Right Soft Key  as **Word, Abc, ABC, 123 or Symbols**.

To change the input mode, press the Right Soft Key . To enter an upper case character, press .

Deleting Text/Number Entered

When entering text or numbers, press  to clear the last number, letter, or symbol. Press and hold  to clear the input field completely.

Initiating a Phone Call From the Mobile Web

You can make a phone call from the Mobile Web if the site you are using supports the feature (the phone number or **Call** can be highlighted). Highlight the link and press  to place the call. The browser connection is terminated when you initiate the call. After you end the call, your phone returns to the screen from which you initiated the call.

2. Tunes & Tones

Personalize your phone with ringtones. A wide variety of choices are available, such as current hits, pop, hip-hop, and more.

Access and Options

1. Open the flip and press  [MENU].
2. Press  **Media Center**.
3. Press  **Tunes & Tones**.
4. Select a submenu by pressing the number that corresponds with the submenu.

2.1 Get New Ringtones

Allows you to connect to Media Center and download various ringtones.

1. Open the flip and press **[OK]** **[MENU]**.
2. Press **[5 M]** **Media Center**.
3. Press **[2 abc]** **Tunes & Tones**.
4. Press **[1 i]** **Get New Ringtones**.
5. Press **[1 i]** **Get New Applications** to shop for ringtones and ringtone applications.

- **Playing the ringtone**

Press **[OK]** **[Play]** you can listen to the tone prior to selecting.

- **Removing the ringtone**

1. Highlight the ringtone you would like to delete.
2. Press the Right Soft Key **[Options]**.
3. Highlight **Erase** or **Erase All** and press **[OK]**.
4. Highlight **Yes** and press **[OK]** to delete the ringtone.

2.2 Get Ringback Tones

Allows you to select a desired ringback tone or download a new ringback tone.

1. Open the flip and press **[MENU]**.
2. Press **[5 M]** **Media Center**.
3. Press **[2 abc]** **Tunes & Tones**.

4. Press **[2 abc]** **Get Ringback Tones**.
5. Follow the on-screen prompts.

2.3 My Ringtones

Allows you to select a desired ringtone.

1. Open the flip and press **[OK]** **[MENU]**.
2. Press **[5 M]** **Media Center**.
3. Press **[2 abc]** **Tunes & Tones**.
4. Press **[3 def]** **My Ringtones**.
5. Use the Directional Key **[Up]** to highlight a ringtone and press **[OK]** **[PLAY]** to play the ringtone or the Left Soft Key **[Set As]** to set the ringtone as:

- **[1 i] Ringtone:** Sets the ringtone for your incoming calls.
- **[2 abc] Contact ID:** Highlight and select the Contact to be identified by the ringtone you selected.
- **[3 def] Alert Sounds:** Press the corresponding number key to set the ringtone for one of the following:
All Messages/ TXT Message/ Multimedia Message/ Voicemail

2.4 My Sounds

Allows you to record a new sound or select a desired sound.

How to record a new sound

1. Open the flip and press **OK** [MENU].
2. Press **5** **Media Center**.
3. Press **2** **Tunes & Tones**.
4. Press **4** **My Sounds**.
5. Press **1** **Record New** and press **OK** to start recording, then press **OK** [STOP] to end recording.

How to select a sound

1. Open the flip and press **OK** [MENU].
2. Press **5** **Media Center**.
3. Press **2** **Tunes & Tones**.
4. Press **4** **My Sounds**.
5. Use the Directional Key **⬅** to scroll and highlight a preloaded sound.

Options with a sound file highlighted:

- Press the Left Soft Key **⬅** [Set As] to set it as the Ringtone, Contact ID or Alert Sounds.
- Press **OK** [PLAY].

- Press the Right Soft Key **⬇** [Options] to select:
Send/ Send via Email/ To Online Album/ Rename/ Lock/ Erase/ Erase All/ File Info

3. Pictures

View, take, and share digital pictures right from your wireless phone.

Access and Options

1. Open the flip and press **OK** [MENU].
2. Press **5** **Media Center**.
3. Press **3** **Pictures**.
4. Browse the submenus.

3.1 Get New Pictures

Allows you to download a variety of images for My Pictures.

1. Open the flip and press **OK** [MENU].
2. Press **5** **Media Center**.
3. Press **3** **Pictures**.
4. Press **1** **Get New Pictures**.
5. Press **1** **Get New Applications**.
6. Select the application you wish to use to download new

pictures and press **OK**. Follow the on-screen prompts.

3.2 My Pictures

Allows you to view and manage photos stored in the phone.

1. Open the flip and press **OK** [MENU].
2. Press **5** **Media Center**.
3. Press **3** **Pictures**.
4. Press **2** **My Pictures**.
5. Highlight a picture with the Directional Key **4**.

The following options are available:

- Press **OK** [VIEW] to view it.
- Press the Left Soft Key **6** [Erase] to delete it.
- Press the Right Soft Key **7** [Options] to select one of the following options:

Send Picture Message/ To Online Album/ To Social Network/ Send via Email/ Via Bluetooth

Set As Wallpaper/ Picture ID

Take Picture Turns on the camera function.

Get New Pictures Allows you to connect to picture downloading services.

Slide Show Plays all pictures as a slide show.

Manage Pictures Allows you to mark multiple pictures to be erased, sent or locked/unlocked.

Rename Allows you to change the file name.

***Lock (Unlock)** Allows you to lock or unlock. Locked files can't be erased accidentally.

File Info Allows you to view information about the file.

* Only appears when the picture is stored on the phone.

3.3 Take Picture

Lets you to take digital pictures.

Shortcut Press the Camera Key **8** to open the camera function.

1. Open the flip and press **OK** [MENU].
2. Press **5** **Media Center**.
3. Press **3** **Pictures**.
4. Press **3** **Take Picture**.
5. Set the brightness by pressing the Directional Key **4** up and down, zoom by pressing the

Directional Key  left and right, and press the Right Soft Key  [Options] to change other settings.

NOTE Zooming is not available on the highest resolution.

- Select the option(s) to customize.

RESOLUTION 1280X960/
640X480/ 320X240

SELF TIMER Off/ 3 Seconds/
5 Seconds/ 10 Seconds

WHITE BALANCE Auto/ Sunny/
Cloudy/ Fluorescent/ Glow

SHUTTER SOUND Shutter/ No
Sound /Say "Cheese"/ Ready!
1 2 3

COLOR EFFECTS Normal/
Negative/ Aqua/ Sepia/
Black&White

NIGHT MODE On/ Off

NOISE REDUCTION On/ Off
Turning this setting on provides
improved picture quality in low-
lighting shots.

AUTO SAVE On/ Off

PREVIEW Actual view/ Full
screen

6. Take a picture by pressing  [TAKE].
7. Press the Left Soft Key 

[Save]. The picture is stored in
My Pictures.

3.4 Online Album

Use to access the Online Album
(PIX Place).

1. Open the flip and press  [MENU].
2. Press  Media Center.
3. Press  Pictures.
4. Press  Online Album.
5. Login with your mobile number
and password, as applicable.

4. Games

Allows you to download games and
applications. Games already on
your phone are listed in this menu.

1. Open the flip and press  [MENU].
2. Press  Media Center.
3. Press  Games.
4. Press  Get New
Applications.
5. Follow the on-screen prompts.
Or select one of the preloaded
games.

Removing a download application or game

1. Highlight the application or game you would like to delete.
2. Press the Right Soft Key  [Options].
3. Highlight **Remove** and press .
4. Highlight **Yes** and press  to delete the application or game.

5. Browse & Download

Browse & Download allows you to find applications for your phone. It also allows you to use any other downloaded applications.

1. Open the flip and press  [MENU].
2. Press  **Media Center**.
3. Press  **Browse & Download**.
4. Select one of the applications already on your phone.

OR

Press  **Get New Applications** and follow the on-screen prompts.

Backup Assistant

Backup Assistant safeguards your mobile phone's address book and automatically saves a copy of the names, phone numbers, and email

addresses stored in your phone. See page 24 for additional details.

City ID

City ID is an enhanced Caller ID feature on select Verizon Wireless handsets that automatically displays the city and state of every wireless call received. City ID reads the area code and local exchange of an incoming call and displays the location associated with that number. City ID includes over 20,000 cities, towns and neighborhoods in North America and over 200 country codes from around the world - providing mobile subscribers with a remarkably accurate tool to help identify incoming callers. After the free trial period, subscribers will receive a message to purchase the application. Subscribers are then presented with the available purchase options. If after purchasing City ID a subscriber decides to cancel the application, the subscriber can follow the standard Media Center process to cancel a subscription.

Daily Scoop

Daily Scoop is an application available in the Browse &

Download menu. It allows you to receive interesting and valuable information and offers from restaurants and retailers in your area. You will receive exclusive discounts on products and services useful to you, when and where they are most useful. For details, visit www.verizonwireless.com.

Mobile Email

Mobile Email is an application downloadable from the Browse & Download Menu. Don't miss an important email. Thanks to Mobile Email, you can get your emails on your phone while you're on the go. Mobile Email works with many providers, including Yahoo!, AOL, Verizon.net and others. Get alerts from your Phone when new email has arrived. Additional fees may apply.

6. Extras

Allows you to access extra applications.

1. Open the flip and press  **[MENU]**.
2. Press  **Media Center**.
3. Press  **Extras**.
4. Press  **Get New Applications**.
5. Follow the on-screen prompts.

Mobile Email

The Mobile Email menu allows you to set up your email account and conveniently exchange emails wirelessly using your device. To use this feature, you may need to download the application first; read the instructions on your device and follow them.

1. Open the flip and press  [MENU].
2. Press  Mobile Email.
3. Follow the on-screen prompts.

V CAST Tones

Download and use of this app (including browsing and previewing content) will be build on a per-megabyte basis, or according to any data package you may have. Content cost is displayed at time of purchase. Monthly subscription required to buy Ringback Tones, valid for one year. You may cancel your subscription at any time. Ringback Tones require voicemail. Verizon Wireless may provide a default tone and greeting with your subscription. You agree not to copy, sublicense, transfer or use tones for any unauthorized purpose.

1. Open the flip and press  [MENU].
2. Press  V CAST Tones.
3. Follow the on-screen prompts.

My Pictures

Allows you to view and manage the pictures stored in your phone. You can also take new photos and download new pictures.

1. Open the flip and press  [MENU].
2. Press  My Pictures.

See page 47 for more information.

Settings & Tools

1. My Verizon

Check your subscription information ranging from your payment plan to your software upgrade or other available service.

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  My Verizon.

2. Master Volume

Allows you to set the Master Volume settings.

4. Open the flip and press  [MENU].
5. Press  Settings & Tools.
6. Press  Master Volume.
7. Adjust the volume with the Directional Key  and press  [SET] to save the setting.

3. Tools

Your phone tools include Voice Commands, Calculator, Ez Tip Calculator, Calendar, To Do List, Alarm Clock, Info Search, Stopwatch, World Clock, and Notepad.

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Tools.

3.1 Voice Commands

This feature provides you with the following options equipped with AVR (Advanced Voice Recognition) technology. Each option has its detailed information on the phone and you can check it out by pressing the Left Soft Key  [Info].

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Tools.
4. Press  Voice Commands.

Access and Options

With the flip open, press the Voice Command Key  on the keypad.

The Voice Commands feature has several settings which allow you to customize how you want to use it. Access Voice Commands, then press the Right Soft Key  [Settings].

Confirm Choices Automatic/
Always Confirm/ Never Confirm

Sensitivity Set the sensitivity as **More Sensitive/ Automatic/ Less Sensitive**.

Adapt Voice If the phone often asks you to repeat voice command, train the phone to recognize your voice patterns.

Train Words/ Train Digits

Prompts Mode/ Audio Playback/ Timeout

- For Mode, set **Prompts/ Readout + Alerts/ Readout/ Tones Only**.
- For Audio Playback, set **Speakerphone or Earpiece**.
- For Timeout, set **5 Seconds or 10 Seconds**.

CLR Key Activation On/ Off

By default, the **Clear/Voice Commands Key**  on the keypad activates the Voice Command feature. To deactivate, change the CLR Key Activation setting to Off.

3.1.1 Call <Name or Number>

Say "Call" and then call someone simply by saying the name or phone number. Please speak clearly and say the name or number exactly as it is entered in your Contact List. When you have more than one contact number, you can

state the name and number type of the contact (for example, 'Call John Work').

3.1.2 Send Msg to <Name or Number or Group>

Say "Send Message" and the command will prompt you for the type of message. After choosing the message type, you will be prompted for the contact name, number or group. It will automatically start a message. If you say a full-sentence command, such as 'Send Message to Bob', it will automatically start a text message without asking for the message type. When using 'Send Message' command, speak clearly and say the name, number or group exactly as it is entered in your Contact List.

3.1.3 Go to <Menu>

The 'Go to' command allows you to access a menu within the phone (for example, 'Go to Calendar').

If no menu option is stated, a list of options will be provided.

3.1.4 Check <Item>

The 'Check' command allows you to check out a wide range of items such as **Phone Status, Voicemail,**

Messages, Missed Calls, Time, Signal Strength, Battery Level, Volume, Balance, Minutes, Payment and My Number.

3.1.5 Contacts <Name>

You can look up names in your Contacts (for example, 'Contacts John') as well as manage your Contact List including creating, erasing or modifying.

Call/ Read out/ Create New/ Modify/ Erase

3.1.6 Redial

Say "Redial" and the phone will redial the last phone number.

3.1.7 My Verizon

The 'My Verizon' command provides you with direct access to your Verizon Wireless account information.

3.1.8 Help

Provides a general guideline to using Voice Commands.

3.2 Calculator

Allows you to perform simple mathematical calculations.

1. Open the flip and press  [MENU].

2. Press  Settings & Tools.
3. Press  Tools.
4. Press  Calculator.
5. Enter the numbers to get the value you want. To clear entered items, press the Left Soft Key  [Clear].
6. Use the Right Soft Key  [Operators] to add other operators.
7. Use the Directional Key  to enter an operation between numbers and press  [=] for the result.

NOTE To insert a decimal, press . To insert + and -, press .

- Press the Directional Key  Up for + (addition).
- Press the Directional Key  Down for - (subtraction).
- Press the Directional Key  Left for ÷ (division).
- Press the Directional Key  Right for x (multiplication).

3.3 Ez Tip Calculator

Allows you to quickly and easily calculate bill amounts using the bill total, tip % and number of people as variables.

1. Open the flip and press **OK** [MENU].
2. Press **Setup** Settings & Tools.
3. Press **Tools** Tools.
4. Press **Ez Tip Calculator** Ez Tip Calculator.
5. Enter the variable fields (Total Bill, Tip (%), Split) and the corresponding calculation fields (tip and total for each person) appear automatically.
6. Press the Left Soft Key **Reset** for another calculation.

3.4 Calendar

Allows you to keep your agenda convenient and easy to access. Simply store your appointments and your phone will alert you with a reminder you set.

1. Open the flip and press **OK** [MENU].
2. Press **Setup** Settings & Tools.
3. Press **Tools** Tools.
4. Press **Calendar** Calendar.
5. Use the Directional Key **Left** to highlight the scheduled day.
Left: Previous Day
Right: Next Day
Up: Previous Week
Down: Next Week

6. Press the Left Soft Key **Add**.
7. Enter the Subject, then scroll down to set the remaining settings.
8. Highlight a Calendar setting field, then press the Left Soft Key **Set**. For each Calendar event you can set:
 - Subject
 - Start Date
 - Start Time
 - End Date
 - End Time
 - Repeat
 - Until
 - Alerts
 - Tones
 - Vibrate
9. Use the Directional Key **Right** to highlight the setting you want, then press **OK**.
10. Press **OK** [SAVE] when Calendar information is complete.

Editing and Deleting calendar entries

1. From the calendar entry list, press **OK** [VIEW].
2. Press **OK** [EDIT] to edit the calendar entry or press the Left Soft Key **Erase** to delete the calendar entry.

3.5 To Do List

Allows you to add tasks to a To Do List.

1. Open the flip and press [MENU].
2. Press Settings & Tools.
3. Press Tools.
4. Press To Do List.
5. Press the Left Soft Key [Add].
6. Enter the subject in the Subject field, then press the Down Directional Key to highlight Due Date.
7. Press the Left Soft Key [Date].
8. Enter the due date using numeric keypad. (For example, press the key , for NOV.) And use the Directional Key to move the cursor to the date or year.

OR

Press the Right Soft Key [More] to enter more specific information such as Subject, Start Date, Due Date, Priority, Alert, Alert Date, Alert Time, or Tones.

9. Press [SAVE] when completed.

3.6 Alarm Clock

Allows you to set up to 10 alarms. At the alarm time, your alarm will be displayed on the LCD screen and the alarm will sound.

1. Open the flip and press [MENU].
2. Press Settings & Tools.
3. Press Tools.
4. Press Alarm Clock.
5. Press the Left Soft Key [Add].
6. Use the Directional Key to highlight the information you want to set, then press the Left Soft Key [Set] to view your setting choices.

Enter the alarm information including:

- Turn On/Off
- Set Time
- Repeat
- Ringtone

7. Press [SAVE] after setting all of the Alarm fields as necessary.

NOTE Snooze or Dismiss the alarm using the Soft Keys (flip open).

How to delete alarms

1. From the Alarm Clock list, press the Right Soft Key [Options] to view the available options.

2. Press **Erase** to delete an alarm or **Erase All** to delete all alarm entries.
3. Press **[Yes]**.

How to edit alarms

1. From the Alarm Clock list, press **[VIEW]** and then press **[EDIT]**.

3.7 Info Search

Allows you to search items stored on the phone.

1. Open the flip and press **[MENU]**.
2. Press **Settings & Tools**.
3. Press **Tools**.
4. Press **Info Search**.
5. Enter two or more characters in the search field and press **[SEARCH]**.
6. By default, the phone will search all the categories. To specify the categories, highlight All and press the Left Soft Key **[Set]**. Use the Directional Key to highlight a category and press **[MARK]** to mark/unmark the category. After specifying the categories, press the Left Soft Key **[DONE]**.
7. To view a search result, highlight

the desired results and press **[VIEW]**. If you want to retry the search, press the Right Soft Key **[Retry]**. If you want to start a new search, press the Left Soft Key **[Search]**, enter your key word, then press .

8. If no results are found, you will be prompted to try again. Choose **Yes** to try again or **No** to return to the Tools menu.

3.8 Stopwatch

Allows you to use your phone as a typical stopwatch.

1. Open the flip and press **[MENU]**.
2. Press **Settings & Tools**.
3. Press **Tools**.
4. Press **Stopwatch**.
5. Press **[START]**.
6. Pressing **[STOP]** will stop or resume Stopwatch time.
7. While measuring time, press the Left Soft Key **[Lap]** to record a lap.
8. After time has stopped, press the Right Soft Key **[Reset]**.

3.9 World Clock

Allows you to determine the current time in another time zone or country.

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Tools.
4. Press  World Clock.
5. Press the Right Soft Key  [Cities] for a list of available cities.
6. Highlight a city from the list, then press .
7. The display shows the position of the city on a global map.
8. Press  again to zoom in on the city and view its date and time information.

NOTE Press the Left Soft Key  [Set DST], to set daylight saving time. Select Yes and press  to set DST.

3.10 Notepad

Allows you to add, read, edit, and erase notes to yourself.

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Tools.

4. Select **Notepad**.

5. Press the Left Soft Key  [Add] to write a new note.
6. Press the Left Soft Key  to change the entry mode. Or press the Right Soft Key  [Options] to copy and paste text or to cancel the notepad entry.
7. After entering the note, press  [SAVE] to save it.

4. Bluetooth® Menu

The phone is compatible with devices that support the Headset, Handsfree, Phonebook Access, Object Push for vCard and vCalendar, File Transfer, and Message Access profiles.

You may create and store 20 pairings within the phone and connect to one device.

The approximate communication range for Bluetooth® wireless technology is up to 30 feet (10 meters).

NOTE Read the user guide of each Bluetooth® accessory that you are trying to pair with your phone because the instructions may be different.

NOTE Your phone is based on the Bluetooth® specification, but it is not guaranteed to work with all devices

enabled with Bluetooth® wireless technology.
Phone does not support ALL Bluetooth® OBEX Profiles.

* For vehicle/accessory compatibility go to www.verizonwireless.com/bluetoothchart

Turn On Bluetooth

Allows you to turn Bluetooth on or off and connect to other Bluetooth devices.

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Bluetooth Menu.
4. Press the Left Soft Key  [Turn On].

NOTE By default, your device's Bluetooth® functionality is turned off.

4.1. Add New Device

Pairing is the process that allows the handset to locate, establish, and register 1-to-1 connection with the target device.

For pairing with a new Bluetooth® device

1. Follow the Bluetooth® accessory instructions to set the device to pairing mode.
2. Open the flip and press  [MENU].
3. Press  Settings & Tools.
4. Press  Bluetooth Menu.
5. Press  Add New Device.
6. Set the desired device to discovery mode.
7. The device will appear in Add New Device menu once it has been located. Highlight the device and press  [PAIR].
8. The handset will prompt you for the passcode. Consult the Bluetooth® accessory instructions for the appropriate passcode (typically "0000" - 4 zeroes). Enter the passcode and press  . When Auto Pair Handsfree is set to On, the device will try to autopair for headsets.
9. When pairing with the PC or PDA is successful, highlight either **Always Ask** or **Always Connect** and press  to connect with the device.
10. Once connected, you will see the device listed in the Bluetooth® Menu and when the pair is transferring information the Bluetooth® indicator will show up on your screen.

Icon Reference in Adding New Device

When the Bluetooth® wireless connection is built and paired devices are found, the following icons are displayed.

Icon References When a Bluetooth® Wireless Connection is Searched (neither connected nor paired).

	When a carkit device is found by your device
	When an audio device is found by your device
	When a PC is found by your device
	When a PDA is found by your device
	When another phone device is found by your device
	When other undefined devices are found by your device

Icon References When Successfully Connected

The following options are available in the paired device.

1. **Remove Device:** You can remove the device from the pairing list.
2. **Rename Device:** You can rename the paired device.

3. **Incoming Security:** Allows you to set permission before connecting an incoming device.
4. **Service Discovery:** Allows you to search for the services that the selected device supports.
5. **Device Info:** Shows the device information.

NOTES While in the Bluetooth Menu, you can turn the Bluetooth functionality off by pressing the Left Soft Key [Turn Off]. You can turn it on by pressing the Left Soft Key [Turn On] again.

When connected with a Phone or PC supporting OPP, the following menus are possible:

- **Send Name Card:** Allows my contact data to send other device up to 1000 Contacts.
- **Get Name Card:** Allows you to pull name card of other device.
- **Exchange Name Card:** Allows you to exchange the handset's name card with other device.
- **Send Calendar Event:** Allows you to send Calendar events to other devices.

My Device Info

Allows you to view and/or edit the name of the Bluetooth® device.

1. Open the flip and press **[OK]** **[MENU]**.
2. Press **[9]** **Settings & Tools**.
3. Press **[4]** **Bluetooth Menu**.

4. Press the Right Soft Key  [Options].
5. Press  My Device Info.
6. Press  to clear the existing name.
7. Use the keypad to enter a new custom name.
8. Press  to save and exit.

Discovery Mode

Allows you to set whether your device is able to be discovered/ found by other Bluetooth® devices in the area.

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Bluetooth Menu.
4. Press the Right Soft Key  [Options].
5. Press  Discovery Mode.
6. Use the Directional Key  to highlight a setting, then press .

On/ Off

NOTE If you choose On for Discovery Mode, your device is able to be searched by other in-range Bluetooth® devices.

Supported Profiles

Allows you to see profiles that your phone can support.

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Bluetooth Menu.
4. Press the Right Soft Key  [Options].
5. Press  Supported Profiles.

5. Sounds Settings

Provides options to customize the phone's sounds.

5.1 Easy Set-up

Allows you to quickly set the main Sounds Settings for keypad volume, incoming calls and messages (text, multimedia, and voicemail).

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Sounds Settings.
4. Press  Easy Set-up.
5. Read each setting description. Press the Right Soft Key  [Skip] to go to the next menu item. Press the Left Soft Key .

[Play] to listen to the volume setting. Highlight the setting you want, then press **OK** [SET].

NOTE Set each alert separately with Ring Only, Vibrate Only, Ring and Vibrate, and Be Silent.

5.2 Call Sounds

Allows you to set how the phone alerts you for types of incoming calls.

1. Open the flip and press **OK** [MENU].
2. Press **9** Settings & Tools.
3. Press **5** Sounds Settings.
4. Press **2** Call Sounds.

5.2.1 Call Ringtone

1. Open the flip and press **OK** [MENU].
2. Press **9** Settings & Tools.
3. Press **5** Sounds Settings.
4. Press **2** Call Sounds.
5. Press **1** Call Ringtone.
6. Use the Directional Key **↶** to highlight a ringtone then press **OK** to save the sound.

TIP To hear a ringtone before you set it, press the Left Soft Key **↶** [Play].

5.2.2 Call Vibrate

1. Open the flip and press **OK** [MENU].
2. Press **9** Settings & Tools.
3. Press **5** Sounds Settings.
4. Press **2** Call Sounds.
5. Press **2** Call Vibrate.
6. Use the Directional Key **↶** to highlight a setting, then press **OK**.
On/ Off

5.2.3 Caller ID Readout

1. Open the flip and press **OK** [MENU].
2. Press **9** Settings & Tools.
3. Press **5** Sounds Settings.
4. Press **2** Call Sounds.
5. Press **3** Caller ID Readout.
6. Use the Directional Key **↶** to highlight a setting, then press **OK**.

Ring Only/ Caller ID + Ring/
Name Repeat

5.3 Alert Sounds

Allows you to select the alert type sounds.

1. Open the flip and press **OK** [MENU].

2. Press **[Settings]** Settings & Tools.
3. Press **[Sounds]** Sounds Settings.
4. Press **[Alerts]** Alert Sounds.
5. Select TXT Message/
Multimedia Message/
Voicemail/ Emergency Tone/
Missed Call
6. The Alert Sounds menu has these options:
Tone/ Vibrate/ Reminder
The exception for this is the Emergency Tone menu. This menu has these options:
Alert/ Vibrate/ Off

5.4 Keypad Volume

Allows you to set the keypad volume.

1. Open the flip and press **[OK]** [MENU].
2. Press **[Settings]** Settings & Tools.
3. Press **[Sounds]** Sounds Settings.
4. Press **[4]** Keypad Volume.
5. Adjust the volume with the Directional Key **[Up]** and press **[OK]** [SET] to save the setting.

5.5 Digit Dial Readout

Allows you to set the Digit Dial Readout.

1. Open the flip and press **[OK]**

[MENU].

2. Press **[Settings]** Settings & Tools.
3. Press **[Sounds]** Sounds Settings.
4. Press **[5]** Digit Dial Readout.
5. Use the Directional Key **[Up]** to highlight a setting, then press **[OK]**.

On/ Off

5.6 Service Alerts

Allows you to set any of the five Alert options to either On or Off.

1. Open the flip and press **[OK]** [MENU].
2. Press **[Settings]** Settings & Tools.
3. Press **[Sounds]** Sounds Settings.
4. Press **[6]** Service Alerts.
5. Select an alert option.

ERI Alerts you to the status of cellular service.

ERI: Enhanced Roaming Indicator

Minute Beep Alerts you 10 seconds before the end of every minute during a call.

Call Connect Alerts you when the call is connected.

Charge Complete Alerts you when the battery is completely charged.

Software Update Alerts you of an OTA software update to the device.

6. Use the Directional Key  to highlight a setting, then press .

On/ Off

NOTE When highlighting On, you can play the alert option by pressing the Left Soft Key  [Play].

5.7 Power On/Off

Allows you to set the phone to sound a tone when the phone is powered on/off.

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Sounds Settings.
4. Press  Power On/Off.
5. Highlight **Power On** or **Power Off** and press .
6. Use the Directional Key  to highlight a setting, then press .

On/ Off

5.8 Voice Clarity

Allows you to set the phone to automatically adapt to noisy environments by adjusting the listening level and improving speech intelligibility.

NOTE The Voice Clarity feature is automatically disabled when you use the speakerphone or the hands-free devices.

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Sounds Settings.
4. Press  Voice Clarity.
5. Use the Directional Key  to highlight a setting, then press .

On/ Off

6. Display Settings

Provides options to customize the phone's display screen.

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Display Settings.

6.1 Easy Set-up

Allows you quickly set the main Display Settings.

1. Open the flip and press **OK** [MENU].
2. Press **Settings & Tools**.
3. Press **Display Settings**.
4. Press **Easy Set-up**.

Customize the following display settings:

- **PERSONAL BANNER**

Allows you to enter a string of up to 18 characters which displays on the screen.

- **DISPLAY BACKLIGHT**

Set Backlight duration for the Main screen.

7 Seconds/ 15 Seconds/ 30 Seconds/ Always On/ Always Off

- **KEYPAD BACKLIGHT**

Set Backlight duration for keypad.

7 Seconds/ 15 Seconds/ 30 Seconds/ Always On/ Always Off

- **WALLPAPER**

Allows you to set the wallpaper for your phone.

- **DISPLAY THEMES**

Select your device Display Theme.

Classic/ Luna

- **MENU LAYOUT**

Select your Main Menu Layout.

Grid/ List/ Tab

- **FONT SIZE**

When resizable is set, you can use the side up and down keys to adjust the font size.

Dial Digits/ Menu & List/ Message

- **INTERNAL CLOCK**

Select the format of the Internal clock.

Analog/ Digital 12/ Large Digital 12/ Digital 24/ Large Digital 24/ Dual City/ Off

5. Read each setting description, highlight the setting you want, then press **OK** [SET]. When finished, press the Right Soft Key **Done**.

6.2 Banner

Allows you to enter a string of up to 18 characters which displays on the LCD screen.

1. Open the flip and press **OK** [MENU].
2. Press **Settings & Tools**.
3. Press **Display Settings**.

4. Press  Banner.

6.2.1 Personal Banner

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Display Settings.
4. Press  Banner.
5. Press  Personal Banner.
6. Enter your own banner text.

NOTE Press the Directional Key  to change the color of the text. Use the Directional Key  to select the color you want.

7. Press  to save the setting.

6.2.2 ERI Banner

If you use ERI Service, ERI Text is shown on the sub banner.

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Display Settings.
4. Press  Banner.
5. Press  ERI Banner.
6. Use the Directional Key  to highlight a setting, then press .

On/ Off

6.3 Backlight

Allows you to set the duration for illuminating the backlight for the main display, front display, and keypad. Each is set separately.

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Display Settings.
4. Press  Backlight.
5. Highlight a Backlight submenu and press .

- **Display Backlight: 7**
Seconds/ 15 Seconds/
30 Seconds/ Always On/
Always Off
- **Keypad Backlight:**
7 Seconds/ 15 Seconds/ 30
Seconds/ Always On/ Always
Off

6.4 Brightness

Allows you to set the backlight levels.

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Display Settings.
4. Press  Brightness.

5. Use the Directional Key  to highlight a setting, then press .

NOTE Brightness level can be 1 to 7.

6.5 Wallpaper

Allows you to choose the kind of background to be displayed on the phone's LCD in standby mode.

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Display Settings.
4. Press  Wallpaper.
5. Highlight a Wallpaper submenu and press .

**My Pictures/ Fun Animations/
Slide Show**

6. Press  to set.

6.6 Display Themes

Allows you to choose between the different themes for the phone's menus.

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Display Settings.
4. Press .

5. Use the Directional Key  to highlight a setting, then press .

Classic/ Luna

NOTE Press the Left Soft Key  [Preview] to preview the selected display theme. Default setting is Luna.

6.7 Main Menu Settings

Allows you to choose how the Main Menu displays for menu selection.

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Display Settings.
4. Press  Main Menu Settings.
5. Use the Directional Key  to highlight a setting, then press .

- **Menu Layout**
Grid/ List/ Tab

- **Replace Menu Items**
Select the item you want to replace then press  [EDIT]. Select in the list the item you want to replace it with, then press  [SET].

- **Position Menu Items**
Select the item you want to move, then press  [MOVE]. Move highlight to

desired position by pressing Up, Down, Right and Left Directional Keys, then press  [SET].

- **Reset Menu Settings**
Menu Layout/ Menu Items/
Item Positions/ All

NOTE This User Guide gives navigation instructions according to the default "List" Main Menu Layout in the Display Settings menu. If other menus are set, navigating the phone's menus may be different.

NOTE Press the Left Soft Key  [Preview] to preview the selected menu setting.

6.8 Font Type

Allows you to set the font type.

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Display Settings.
4. Press  Font Type.
5. Use the Directional Key  to highlight a setting, then press .

VZW Font/ LG Secret/ LG
Mint

NOTE Press the Left Soft Key  [Preview] to preview the selected font type.

6.9 Font Size

Allows you to set the font size for Dial Digits, Menu & List and Message. Plus, the Volume Key Resize setting allows you to use the side Volume Keys  to instantly scale screen fonts. This setting is helpful for those who need the text to display a little bit larger.

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Display Settings.
4. Press  Font Size.
5. Use the Directional Key  to highlight Dial Digits/ Menu & List/ Message.
6. Use the Directional Key  to highlight a setting, then press  [SET].

Dial Digits: Resizable/ Small/
Normal/ Large

Menu & Lists: Resizable/
Small/ Normal/ Large

Message: Resizable/ Small/
Normal/ Large

NOTE Press the Left Soft Key  [Preview] to preview the selected font size.

6.10 Internal Clock

Allows you to choose the kind of clock to be displayed on the front and main LCD screens.

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Display Settings.
4. Select Internal Clock.
5. Use the Directional Key  to highlight a setting, then press .

Analog/ Digital 12/ Large
Digital 12/ Digital 24/ Large
Digital 24/ Dual City/ Off

NOTE Press the Left Soft Key  [Preview] to preview the selected clock format.

7. Phone Settings

The Phone Settings menu allows you to designate specific settings to customize how you use your phone.

7.1 Airplane Mode

Turning on Airplane Mode will disable all wireless communications.

1. Open the flip and press  [MENU].

2. Press  Settings & Tools.
 3. Press  Phone Settings.
 4. Press  Airplane Mode.
 5. Use the Directional Key  to highlight a setting, then press .
- On/ Off

7.2 Set Shortcut Keys

Allows you to set shortcuts to phone menus using the down, up, left and right Directional Keys.

7.2.1 Set My Shortcuts

NOTE To access these shortcuts, press the Directional Key  from standby mode (by default) to display My Shortcuts.

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Phone Settings.
4. Press  Set Shortcut Keys
5. Press  Set My Shortcuts.
6. Use the Directional Key  to highlight a shortcut key you want to set.

Shortcut 1/ Shortcut 2/
Shortcut 3/ Shortcut 4

7. Press  [SET] to display the available shortcuts. Use the

Directional Key  to highlight one, then press **OK**.

7.2.2 Set Directional Keys

NOTE To access these shortcuts open the flip, then press the Directional Key  in the direction (up, down, left) set from standby mode for the Shortcut you want to access.

1. Open the flip and press **OK** [MENU].
2. Press **9** Settings & Tools.
3. Press **7** Phone Settings.
4. Press **2** Set Shortcut Keys
5. Press **2** Set Directional Keys.
6. Use the Directional Key  to highlight a shortcut key you want to set.

Up Directional Key/ Left
Directional Key/ Down
Directional Key

7. Press **OK** [SET] to display the available shortcuts. Use the Directional Key  to highlight one, then press **OK**.

7.3 Voice Commands

Please refer to page 52 for details.

7.4 Language

Allows you to set the Multi-language (English, Spanish, Chinese, Korean) feature

according to your preference.

1. Open the flip and press **OK** [MENU].
2. Press **9** Settings & Tools.
3. Press **7** Phone Settings.
4. Press **4** Language.
5. Use the Directional Key  to highlight a setting, then press **OK** [SET].

English/ Español/Simplified
Chinese/ Korean.

7.5 Location

Allows you to set GPS (Global Positioning System: Satellite assisted location information system) mode.

1. Open the flip and press **OK** [MENU].
2. Press **9** Settings & Tools.
3. Press **7** Phone Settings.
4. Press **5** Location.
5. Use the Directional Key  to highlight a setting, then press **OK**.

Location On/ E911 Only

NOTES

- GPS satellite signals are not always received by the phone, especially under bad atmospheric and environmental conditions, indoors, etc.

- When a Location Setting Restriction is activated in the Security Menu, the lock code is required when you enter location menu. The lock code is the same 4 digits you use as your device lock code; initially the last 4 digits of your phone number.
- When in Airplane Mode, services supporting Location On functionality will be suspended.

7.6 Current Country

The Current Country menu allows to select your current location.

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Phone Settings.
4. Press  Current Country.
5. Use the Directional Key  to highlight a setting, then press .

NOTE To assure that your phone works properly while you travel, please verify the country of your current location, so the correct Country Code can be applied.

Once the current country value is set, the value cannot be changed until next location change or initialization of all setting info such as 'Reset Default' or 'Restore Phone'.

7.7 Security

The Security menu allows you to secure the phone electronically.

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Phone Settings.
4. Press  Security.
5. Enter the four-digit lock code.

The lock code is the last 4 digits of your mobile phone number if it is set. The lock code is the last 4 digits of your MEID if your mobile phone number is not set.

7.7.1 Edit Codes

Allows you to enter a new four-digit lock code.

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Phone Settings.
4. Press  Security.
5. Enter the four-digit lock code.
6. Press  Edit Codes.
7. Select Phone Only or Calls & Services.
8. Enter your new four-digit lock code.

9. For confirmation, it will ask you to enter the new lock code again.

7.7.2 Restrictions

Allows you to set separate restrictions for Location Setting, Calls and Messages.

1. Open the flip and press **OK** [MENU].
2. Press **9** Settings & Tools.
3. Press **7** Phone Settings.
4. Press **7** Security.
5. Enter the four-digit lock code.
6. Press **2** Restrictions.
7. Enter the four-digit service code.
8. Select a Restrictions menu then press **OK**.

Location Setting/ Calls/ Messages

9. Use the Directional Key **⬅** to highlight the restriction then press **OK**.

Location Setting Lock Setting/ Unlock Setting

Calls: Incoming Calls Allow All / Contacts Only / Block All

Calls: Outgoing Calls Allow All / Contacts Only / Block All

Messages: Incoming Messages

Allow All / Block All

Messages: Outgoing Messages

Allow All / Block All

7.7.3 Phone Lock Setting

Keeps your phone from unauthorized use. Once the phone is locked, it's in restricted mode until the lock code is entered. You can still receive phone calls and make emergency calls. You can modify the lock code using Edit Codes submenu within the Security menu.

1. Open the flip and press **OK** [MENU].
2. Press **9** Settings & Tools.
3. Press **7** Phone Settings.
4. Press **7** Security.
5. Enter the four-digit lock code.
6. Press **3** Phone Lock Setting.
7. Highlight an option and press **OK**.

Unlocked remains unlocked, by default.

On Power Up The phone is locked when it is turned on.

7.7.4 Lock Phone Now

1. Open the flip and press **OK** [MENU].

2. Press  **Settings & Tools**.
3. Press  **Phone Settings**.
4. Press  **Security**.
5. Enter the four-digit lock code.
6. Press  **Lock Phone Now**.

NOTE To unlock the phone from standby mode, press the Right Soft Key  **Unlock** and enter the four-digit lock code.

7.7.5 Reset Default

Allows you to reset your phone to the factory default settings.

1. Open the flip and press  **[MENU]**.
2. Press  **Settings & Tools**.
3. Press  **Phone Settings**.
4. Press  **Security**.
5. Enter the four-digit lock code.
6. Press  **Reset Default**.
7. Press  after reading the warning message.
8. Highlight **Revert** and press .

A confirmation message is displayed briefly before the phone resets itself.

7.7.6 Restore Phone

Allows you to erase all user data and Contact information you've entered in the phone's memory so

it's as if it just left the factory.

1. Open the flip and press  **[MENU]**.
2. Press  **Settings & Tools**.
3. Press  **Phone Settings**.
4. Press  **Security**.
5. Enter the four-digit lock code.
6. Press  **Restore Phone**.
7. Press  after reading the warning message.
8. Enter the four-digit lock code.

7.8 System Select

Allows you to set up the phone management environment. Leave this setting as the default unless you want to alter system selection as instructed by your service provider.

1. Open the flip and press  **[MENU]**.
2. Press  **Settings & Tools**.
3. Press  **Phone Settings**.
4. Press  **System Select**.
5. Use the Directional Key  to highlight a setting, then press .

Home Only/ Automatic

7.9 NAM Select

Allows you to select the phone's NAM (Number Assignment Module) if the phone is registered with multiple service providers.

1. Open the flip and press  [MENU].
2. Press  **Settings & Tools**.
3. Press  **Phone Settings**.
4. Press  **NAM Select**.
5. Use the Directional Key  to highlight a setting, then press .

NAM1/ NAM2

8. Call Settings

The Call Settings menu allows you to designate how the phone handles both incoming and outgoing calls.

8.1 Answer Options

Allows you to determine how the phone will answer an incoming call.

1. Open the flip and press  [MENU].
2. Press  **Settings & Tools**.
3. Press  **Call Settings**.
4. Press  **Answer Options**.
5. Use the Directional Key  to

to select the setting(s) you want to use, then press  [MARK].

Flip Open/ Any Key/ Auto with Handsfree

6. Press the Left Soft Key  [Done] when you have marked the setting(s) you want.

NOTE Auto with Handsfree is available when any external device is connected to your phone or speaker is set to on.

8.2 Call Forwarding

Allows an incoming call to be redirected to a mobile telephone or other telephone number.

1. Open the flip and press  [MENU].
2. Press  **Settings & Tools**.
3. Press  **Call Settings**.
4. Press  **Call Forwarding**.
5. Use the Directional Key  to highlight either **Forward Call** or **Cancel Forwarding**, then press .
6. After selecting Forward Call, enter the number to forward to and press  [FWD]. To cancel forwarding, select **Cancel Forwarding**.

8.3 Auto Retry

Allows you to set the length of time the phone waits before automatically redialing a number when the attempted call fails.

1. Open the flip and press **OK** [MENU].
2. Press **Settings & Tools**.
3. Press **Call Settings**.
4. Press **Auto Retry**.
5. Use the Directional Key **↔** to highlight a setting, then press **OK**.

Off/ Every 10 Seconds/
Every 30 Seconds/ Every 60
Seconds

8.4 TTY Mode

Allows you to attach a TTY device enabling you to communicate with parties also using a TTY device. A phone with TTY support is able to translate typed characters to voice. Voice can also be translated into characters and then displayed on the TTY.

1. Open the flip and press **OK** [MENU].
2. Press **Settings & Tools**.
3. Press **Call Settings**.
4. Press **TTY Mode**.

5. An explanation message is displayed.
6. Press **OK** to continue.
7. Use the Directional Key **↔** to highlight a setting, then press **OK**.

TTY Full: Users who cannot talk or hear send and receive a text message through TTY equipment.

TTY + Talk: Users who can talk but cannot hear receive a text message and send voice through TTY equipment.

TTY + Hear: Users who can hear but cannot talk send a text message and receive voice through TTY equipment.

TTY Off: Users send and receive without TTY equipment.

Connecting TTY Equipment and a Terminal

1. Connect a TTY cable to TTY connection on the terminal (TTY connection location is the same as a headset jack).
2. Enter the phone menu and set the desired TTY mode.
3. After setting a TTY mode, check the LCD screen of the phone for the TTY icon.

4. Connect the TTY equipment to the power source and turn it on.
5. Make a phone connection to the desired number.
6. When connection is made, use the TTY equipment to type in and send a text message or send voice.
7. The voice or text message from the receiver end displays on the TTY equipment display.

8.5 One Touch Dial

Allows you to initiate a speed dial call by pressing and holding the speed dial digit. If set to Off, Speed Dial numbers designated in your Contacts will not function.

1. Open the flip and press **OK** [MENU].

2. Press **Settings & Tools**.
3. Press **Call Settings**.
4. Press **One Touch Dial**.
5. Use the Directional Key **Up** to highlight a setting, then press **OK**.

On/ Off

8.6 Voice Privacy

Allows you to set the voice privacy feature for CDMA calls. CDMA offers inherent voice privacy. Check with your service provider for availability.

1. Open the flip and press **OK** [MENU].
2. Press **Settings & Tools**.
3. Press **Call Settings**.
4. Press **Voice Privacy**.

TTY Mode (Tele Type writer)

Menu	User	Menu	Transmission/ Receiving Mode	When making communications with a non-TTY terminal
TTY Full	For hearing-/ verbally-impaired		Text message transmission, text message receiving	Operator required
TTY + Talk	For hearing- impaired	Able to talk	Voice transmission, text message receiving	Operator required
TTY + Hear	For verbally- impaired	Audible	Text message transmission, voice receiving	Operator required
TTY Off			Voice transmission, voice receiving	

5. Use the Directional Key  to highlight a setting, then press .

On/ Off

8.7 DTMF Tones

Allows you to set the DTMF tone length.

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Call Settings.
4. Press  DTMF Tones.
5. Use the Directional Key  to highlight a setting, then press .

Normal/ Long

8.8 Assisted Dialing

Supports easy dialing on international calls while traveling in non-U.S. roaming region. If set to On, Assisted Dialing is displayed in calling screen.

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Call Settings.
4. Press  Assisted Dialing.

5. Use the Directional Key  to highlight a setting, then press .

On/ Off

6. Highlight Reference Country and press the Left Soft Key  Set to select country.
7. Use the Directional Key  to scroll to the desired country.
8. Press the Left Soft Key  Details to edit and save the Country Code, IDD Prefix (International Direct Dial), NDD Prefix (National Direct Dial), Area/City Code and Length (Length of Phone Number), then press  [SAVE] to set.
9. Press  to set.

NOTE For example, if you make a call from China to U.S when assisted dialing option is on (Reference Country is set to 'U.S.A'), '+' code will be automatically replaced by the matched IDD prefix of China.

8.9 Dial Search

Dial Search assists you to easily dial any one of your contact numbers without searching the contact list. Press a number key that matches with the first character of the contact name you wish to call. If dial search option is

on, the matched contact searched list will be showed up on the dial screen.

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Call Settings.
4. Press  Dial Search.
5. Use the Directional Key  to highlight a setting, then press .

On/ Off

9. Memory

Allows you to check your phone's internal memory. Shows the memory information saved in your phone.

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Memory.
4. Use the Directional Key  to select file storage type in the phone, then press  to view the memory used.

Memory Usage / My Pictures /
My Ringtones / My Sounds /
My Contacts

10. Phone Info

Allows you to view the information specific to your phone and software.

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Select Phone Info.

10.1 My Number

Allows you to view your phone number.

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Select Phone Info.
4. Press  My Number.

10.2 SW/HW Version

Allows you to view the versions of various applications such as SW, PRL, ERI, Browser, Media Center, AVR, EMS, MMS, Bluetooth®, OTADM Version, MSUI, HW Version, MEID, Warranty Date Code and Operating System.

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Select Phone Info.

4. Press  SW/HW Version.

10.3 Icon Glossary

Allows you to view all the icons and their meanings.

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Select Phone Info.
4. Press  Icon Glossary.
5. Select a subcategory to view the icons.

10.4 Software Update

This feature gives your phone the ability to upgrade to the latest software and keeps your phone operating with the latest features without visiting a Verizon Wireless Communications Store for the upgrade. You can either be notified automatically that there is an updated version of software available for your phone, or you can manually check to see if there are any updates available for you to download.

Automatic Update

Your phone will receive a notification that there is an updated version of software

available to be downloaded. You can press  when notified that a download is available or it can happen automatically. Once the download is complete you may, depending on the nature of the update, have three options available: Accept the update, Defer the update, or Reject the update.

NOTE During the update you cannot make or receive phone calls, including 911 calls, or text messages.

Manual Update

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Select Phone Info.
4. Press  Software Update.

The two options shown will be Status and Check New.

Press  Status to see the status of a download or update and see information on the last successful update. If updates have not yet been performed, status information will be unavailable.

Press  Check New to check if any new software updates are available to download. If a newer software version is available, it will automatically begin

downloading after 30 seconds or you can begin the download immediately by pressing .

24/ Large Digital 24/ Dual City/ Off

5. Press the Right Soft Key  [Done] to complete set-up.

11. Set-up Wizard

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Select Set-up Wizard.
4. Use the Directional Key  to scroll to a setting, then press  [SET].

NOTE If you don't want to change the setting, press the Right Soft Key  [Skip] to go to the next setting.

- **FONT SIZE**

When you view menus and lists, you can adjust the font size using the Volume Keys .

- **CALL SOUNDS**

Ring Only/ Vibrate Only/
Ring and Vibrate/ Be Silent

- **DISPLAY THEMES**

Classic/ Luna

- **MENU LAYOUT**

Grid/ List/ Tab

- **INTERNAL CLOCK**

Select the format of the Internal clock. Analog/ Digital
12/ Large Digital 12/ Digital

Important Safety Precautions

Read these instructions. Breaking the rules may be dangerous or illegal. Further detailed information is given in this user guide.

WARNING! Violation of the instructions may cause serious injury or death.



1. Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode.



2. Never place your phone in a microwave oven as it will cause the battery to explode.

3. Never store your phone in temperatures less than -4°F or greater than 122°F .

4. Do not dispose of your battery by fire or with hazardous or flammable materials.



5. When riding in a car, do not leave your phone or set up the hands-free kit near to the air bag. If wireless equipment is improperly installed and the air bag is deployed, you may be seriously injured.

6. Do not use a hand-held phone while driving.



7. Do not use the phone in areas where its use is prohibited. (For example: aircraft)

8. Do not use your device for long periods of time while a part of your body is making direct contact with it. The temperature of the product may increase during normal operation and this may result in harming or burning your skin.

Important Safety Precautions



9. Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.



10. Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. This could cause a fire.

11. Do not drop, strike, or shake your phone severely. It may harm the internal circuit boards of the phone.

12. Do not use your phone in high explosive areas as the phone may generate sparks.



13. Do not damage the power cord by bending, twisting, pulling, or heating. Do not use the plug if it is loose as it may cause a fire or electric shock.



14. Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause electric shock or fire.



15. Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.



16. Do not disassemble the phone.

17. Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.



18. Do not hold or let the antenna come in contact with your body during a call.



19. Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.

20. Store the battery out of reach of children.



21. Be careful that children do not swallow any parts (such as rubber plugs, earphone, connection parts of the phone, etc.) This could cause asphyxiation or suffocation resulting in serious injury or death.



22. Unplug the power cord and charger during lightning storms to avoid electric shock or fire.

23. Only use the batteries and chargers provided by LG. The warranty will not be applied to products provided by other suppliers.



24. Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.



25. Your service provider programs one or more emergency phone numbers, such as 911, that you can call under any circumstances, even when your phone is locked. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

HAC

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.

FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that causes undesired operation.

Any changes or modifications not

expressly approved in this user guide could void your warranty for this equipment. Use only the supplied antenna.

Use of unauthorized antennas (or modifications to the antenna) could impair call quality, damage the phone, void your warranty and/or violate FCC regulations.

Don't use the phone with a damaged antenna. A damaged antenna could cause a minor skin burn. Contact your local dealer for a replacement antenna.

FCC RF Exposure Information

WARNING! Read this information before operating the phone.

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to Radio Frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC

guidelines and these international standards.

Bodily Contact During Operation

This device was tested for typical use with the back of the phone kept 0.78 inches (2.0 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.78 inches (2.0 cm) must be maintained between the user's body and the back of the phone. Third-party belt-clips, holsters, and similar accessories containing metallic components may not be used. Avoid the use of accessories that cannot maintain 0.78 inches (2.0 cm) distance between the user's body and the back of the phone and have not been tested for compliance with FCC RF exposure limits.

Vehicle-Mounted External Antenna

(Optional, if available.)

To satisfy FCC RF exposure requirements, keep 8 inches (20 cm) between the user / bystander and vehicle-mounted external antenna. For more information about RF exposure, visit the FCC

website at www.fcc.gov.

Caution

Use only the supplied antenna. Use of unauthorized antennas (or modifications to the antenna) could impair call quality, damage the phone, void your warranty and/or violate FCC regulations.

Don't use the phone with a damaged antenna. A damaged antenna could cause a minor skin burn. Contact your local dealer for a replacement antenna.

Part 15.19 statement

This device complies with part 15 of FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Part 15.21 statement

Changes or modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Part 15.105 statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If you experience interference with reception (e.g., television), determine if this equipment is causing the harmful interference by turning the equipment off and then back on to see if the interference is affected. If necessary, try correcting the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different

from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

Consumer Information About Radio Frequency Emissions

Your wireless phone, which contains a radio transmitter and receiver, emits radio frequency energy during use. The following consumer information addresses commonly asked questions about the health effects of wireless phones.

Are wireless phones safe?

Scientific research on the subject of wireless phones and radio frequency ("RF") energy has been conducted worldwide for many years, and continues. In the United States, the Food and Drug Administration ("FDA") and the Federal Communications Commission ("FCC") set policies and procedures for wireless phones. The FDA issued a website publication on health issues related to cell phone usage where it states, "The scientific community at

large ... believes that the weight of scientific evidence does not show an association between exposure to radiofrequency (RF) from cell phones and adverse health outcomes. Still the scientific community does recommend conducting additional research to address gaps in knowledge. That research is being conducted around the world and FDA continues to monitor developments in this field. You can access the joint FDA/FCC website at <http://www.fda.gov> (under "c" in the subject index, select Cell Phones > Research). You can also contact the FDA toll-free at (888) 463-6332 or (888) INFO-FDA. In June 2000, the FDA entered into a cooperative research and development agreement through which additional scientific research is being conducted. The FCC issued its own website publication stating that "there is no scientific evidence that proves that wireless phone usage can lead to cancer or a variety of other problems, including headaches, dizziness or memory loss." This publication is available at <http://www.fcc.gov/cgb/cellular.html> or through the FCC at (888) 225-5322 or (888) CALL-FCC.

What does "SAR" mean?

In 1996, the FCC, working with the FDA, the U.S. Environmental Protection Agency, and other agencies, established RF exposure safety guidelines for wireless phones in the United States. Before a wireless phone model is available for sale to the public, it must be tested by the manufacturer and certified to the FCC that it does not exceed limits established by the FCC. One of these limits is expressed as a Specific Absorption Rate, or "SAR." SAR is a measure of the rate of absorption of RF energy in the body. Tests for SAR are conducted with the phone transmitting at its highest power level in all tested frequency bands. Since 1996, the FCC has required that the SAR of handheld wireless phones not exceed 1.6 watts per kilogram, averaged over one gram of tissue.

Although the SAR is determined at the highest power level, the actual SAR value of a wireless phone while operating can be less than the reported SAR value. This is because the SAR value may vary from call to call, depending on factors such as proximity to a cell site, the proximity of the phone

to the body while in use, and the use of hands-free devices. For more information about SARs, see the FCC's OET Bulletins 56 and 65 at http://www.fcc.gov/Bureaus/Engineering_Technology/Documents/bulletins or visit the Cellular Telecommunications Industry Association website at http://www.ctia.org/consumer_info/index.cfm/AID/10371. You may also wish to contact the manufacturer of your phone.

Can I minimize my RF exposure?

If you are concerned about RF, there are several simple steps you can take to minimize your RF exposure. You can, of course, reduce your talk time. You can place more distance between your body and the source of the RF, as the exposure level drops off dramatically with distance. The FDA/FCC website states that "hands-free kits can be used with wireless phones for convenience and comfort. These systems reduce the absorption of RF energy in the head because the phone, which is the source of the RF emissions, will not be placed against the head. On the other hand, if the phone is mounted against the waist or other part of the body during use, then

that part of the body will absorb more RF energy. Wireless phones marketed in the U.S. are required to meet safety requirements regardless of whether they are used against the head or against the body. Either configuration should result in compliance with the safety limit." Also, if you use your wireless phone while in a car, you can use a phone with an antenna on the outside of the vehicle. You should also read and follow your wireless phone manufacturer's instructions for the safe operation of your phone.

Do wireless phones pose any special risks to children?

The FDA/FCC website states that "the scientific evidence does not show a danger to users of wireless communication devices, including children." The FDA/FCC website further states that "some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all". For example, the Stewart Report from the United Kingdom ["UK"] made such a recommendation in December 2000. In this report a group of independent experts noted that no evidence exists that

using a cell phone causes brain tumors or other ill effects. [The UK's] recommendation to limit cell phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists. A copy of the UK's leaflet is available at <http://www.dh.gov.uk> (search "mobile"), or you can write to: NRPB, Chilton, Didcot, Oxon OX11 0RQ, United Kingdom. Copies of the UK's annual reports on mobile phones and RF are available online at www.iegmp.org.uk and <http://www.hpa.org.uk/radiation/> (search "mobile"). Parents who wish to reduce their children's RF exposure may choose to restrict their children's wireless phone use.

Where can I get further information about RF emissions?

For further information, see the following additional resources (websites current as of April 2005):

U.S. Food and Drug Administration

FDA Consumer magazine
November-December 2000
Telephone: (888) INFO-FDA

<http://www.fda.gov> (Under "c" in the subject index, select Cell Phones > Research.)

U.S. Federal Communications Commission

445 12th Street, S.W.
Washington, D.C. 20554
Telephone: (888) 225-5322
<http://www.fcc.gov/oet/rfsafety>

Independent Expert Group on Mobile Phones

<http://www.iegmp.org.uk>

Royal Society of Canada Expert Panels on Potential Health Risks of Radio Frequency Fields from Wireless Telecommunication Devices

283 Sparks Street
Ottawa, Ontario K1R 7X9
Canada
Telephone: (613) 991-6990
http://www.rsc.ca/index.php?page=Expert_Panels_RF&Lang_id=120

World Health Organization

Avenue Appia 20 1211 Geneva 27
Switzerland

Telephone: 011 41 22 791 21 11

<http://www.who.int/mediacentre/factsheets/fs193/en/>

International Commission on Non-Ionizing Radiation Protection

c/o Bundesamt für Strahlenschutz
Ingolstaedter Landstr. 1
85764 Oberschleissheim
Germany

Telephone: 011 49 1888 333 2156
<http://www.icnirp.de>

American National Standards Institute

1819 L Street, N.W., 6th Floor
Washington, D.C. 20036
Telephone: (202) 293-8020
<http://www.ansi.org>

National Council on Radiation Protection and Measurements

7910 Woodmont Avenue, Suite 800
Bethesda, MD 20814-3095
Telephone: (301) 657-2652
<http://www.ncrponline.org>

Engineering in Medicine and Biology Society, Committee on Man and Radiation (COMAR) of the Institute of Electrical and Electronics Engineers

<http://ewh.ieee.org/soc/embs/comar/>

Consumer Information on SAR

(Specific Absorption Rate)

This model phone meets the government's requirements for exposure to radio waves. Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to Radio Frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of

all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body)

as required by the FCC for each model.

The highest SAR value for this model phone when tested for use at the ear is 0.78 W/kg and when worn on the body, as described in this user guide, is 0.58 W/kg (body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID BEJVN150. Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.ctia.org/>.

* In the United States and Canada,

the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue.

The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless phones under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require digital wireless phones be compatible with hearing-aids. The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities.

While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are

more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless phones, to assist hearing device users to find phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box.

 
The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to generate less interference

to hearing devices than phones that are not labeled. T4 is the better/ higher of the two ratings.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise. The hearing aid and wireless phone rating values are then added together. A sum of 5 is considered acceptable for normal use. A sum of 6 is considered for best use.



In the above example, if a hearing aid meets the M2 level rating and the wireless phone meets the M3 level rating, the sum of the two values equal M5. This should provide the hearing aid user with “normal usage” while using their hearing aid with the particular wireless phone. “Normal usage” in this context is defined as a signal quality that’s acceptable for normal operation.

The M mark is intended to be synonymous with the U mark.

The T mark is intended to be synonymous with the UT mark. The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U and UT marks are referenced in Section 20.19 of the FCC Rules. The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

When you’re talking over the cell phone, it’s recommended you’d turn the BT (Bluetooth) mode off for HAC.

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies,

consult your service provider or phone retailer.

For information about hearing aids and digital wireless phones

Wireless Phones and Hearing Aid Accessibility

<http://www.accesswireless.org/hearingaid/>

FCC Hearing Aid Compatibility and Volume Control

http://www.fcc.gov/cgb/consumerfacts/hac_wireless.html

Caution: Avoid potential hearing loss.

Prolonged exposure to loud sounds (including music) is the most common cause of preventable hearing loss. Some scientific research suggests that using portable audio devices, such as portable music players and cellular telephones, at high volume settings for long durations may lead to permanent noise-induced hearing loss. This includes the use of headphones (including headsets, earbuds and Bluetooth® or other wireless devices).

Exposure to very loud sound has also been associated in some studies with tinnitus (a ringing in the ear), hypersensitivity to sound and distorted hearing. Individual susceptibility to noise-induced hearing loss and other potential hearing problems varies.

The amount of sound produced by a portable audio device varies depending on the nature of the sound, the device, the device settings and the headphones. You should follow some commonsense recommendations when using any portable audio device:

- Set the volume in a quiet environment and select the lowest volume at which you can hear adequately.
- When using headphones, turn the volume down if you cannot hear the people speaking near you or if the person sitting next to you can hear what you are listening to.
- Do not turn the volume up to block out noisy surroundings. If you choose to listen to your portable device in a noisy environment, use noise-cancelling headphones to block out background environmental noise.

- Limit the amount of time you listen. As the volume increases, less time is required before your hearing could be affected.
- Avoid using headphones after exposure to extremely loud noises, such as concerts, that might cause temporary hearing loss. Temporary hearing loss might cause unsafe volumes to sound normal.
- Do not listen at any volume that causes you discomfort. If you experience ringing in your ears, hear muffled speech or experience any temporary hearing difficulty after listening to your portable audio device, discontinue use and consult your doctor.

TIA Safety Information

The following is the complete TIA Safety Information for wireless handheld phones.

Exposure to Radio Frequency Signal

Your wireless handheld portable phone is a low power radio transmitter and receiver. When ON, it receives and sends out Radio Frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) *

NCRP Report 86 (1986)

ICNIRP (1996)

* American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission on Non-Ionizing Radiation Protection

Those standards were based

on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of your phone complies with the FCC guidelines (and those standards).

Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

Phone Operation

NORMAL POSITION: Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

Tips on Efficient Operation

For your phone to operate most efficiently: Don't touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at

a higher power level than otherwise needed.

Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6) inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. Persons with pacemakers:

Should ALWAYS keep the phone more than six (6) inches from their pacemaker when the phone is turned ON;

- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference;

- Should turn the phone OFF immediately if there is any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives).

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Health Care Facilities

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may use equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Turn your phone OFF in any facility where posted notices so require.

Aircraft

FCC regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a “blasting area” or in areas posted: “Turn off two-way radio”. Obey all signs and instructions.

Potentially Explosive Atmosphere

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas

could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always marked clearly. Potential areas may include: fueling areas (such as gasoline stations); below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles (such as grain, dust, or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

For Vehicles Equipped with an Air Bag

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage.

Caution

Violation of the instructions may cause minor or serious damage to the product.

- Do not disassemble or open, crush, bend or deform, puncture or shred.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard. Such conditions may present the risk of fire or explosion.
- Only use the battery for the system for which it is specified.
- Only use the battery with a charging system that has been approved and qualified with the system per IEEE-Std-1725-2006. Use of an unqualified and non-approved battery or charger may present a risk of fire, explosion, leakage, or other hazard.

- Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.
- Replace the battery only with another battery that has been approved and qualified with the system per this standard, IEEE-Std-1725-2006. Use of an unqualified and non-approved battery may present a risk of fire, explosion, leakage or other hazard.
- Promptly dispose of used batteries in accordance with local regulations.
- Battery usage by children should be supervised.
- Avoid dropping the phone, battery or exposing the phone or battery to a liquid. If the phone or battery is dropped, especially on a hard surface, or is exposed to a liquid or comes into contact with a sharp object take it to a service center for inspection.
- At least, one of the Authentication methods may be implemented. (e.g. H/W, S/W, Mechanical, Hologram, etc.)
- Improper battery use may result

in a fire, explosion or other hazard.

Charger and Adapter Safety

- The charger and adapter are intended for indoor use only.
- Insert the battery pack charger vertically into the wall power socket.
- Only use the approved battery charger. Otherwise, you may cause serious damage to your phone.
- Use the correct adapter for your phone when using the battery pack charger abroad.

Battery Information and Care

- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Please read the manual of proper installation and removal of the battery.
- Please read the manual of specified charger about charging method.
- Do not damage the power cord by bending, twisting, or heating. Do not use the plug if it is loose

as it may cause electric shock or fire.

- Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause electric shock or fire.
- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it's dirty. When using the power plug, ensure that it's firmly connected. If not, it may cause excessive heat or fire. If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.
- Recharge the battery after long periods of non-use to maximize battery life. Battery life will vary due to usage pattern and environmental conditions.
- Please use only an approved charging accessory to charge your LG phone. Improper handling of the charging port, as well as the use of an incompatible charger, may cause damage to your phone and void

the warranty.

- Never store your phone in temperature less than -4°F or greater than 122°F. Charge the battery in range of 0°C ~ 45°C.
- Charging temperature range is regulated between 0°C and 45°C. Do not charge the battery out of recommended temperature range. Charging out of recommended range might cause the generating heat or serious damage of battery. And also, it might cause the deterioration of battery's characteristics and cycle life.
- Do not use or leave the battery under the blazing sun or in heated car by sunshine. The battery may generate heat, smoke or flame. And also, it might cause the deterioration of battery's characteristics or cycle life.
- The battery pack has protection circuit to avoid the danger. Do not use nearby the place where generates static electricity more than 100V which gives damage to the protection circuit. If the protection circuit were broken, the battery would generate smoke, rupture or flame.

- When the battery has rust, bad smell or something abnormal at first-time-using, do not use the equipment and go to bring the battery to the shop which it was bought.
- In case younger children use the battery, their parents should teach them how to use batteries according to the manual with care.
- If the skin or cloth is smeared with liquid from the battery, wash with fresh water. It may cause the skin inflammation. Remove and do not use the battery.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.
- Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.
- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. This could cause a fire. Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire. Don't short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.
- Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode. Only use the batteries and chargers provided by LG. The warranty will not be applied to products provided by other suppliers. Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.

Explosion, Shock, and Fire Hazards

- Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the power cord and heat sources.
- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it's dirty.
- When using the power plug, ensure that it's firmly connected. If not, it may cause excessive heat or fire.
- If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone and may cause an explosion. Always cover the receptacle when not in use.
- Don't short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag or contact with sharp objects including animal bites may short-circuit the + and - terminals of the battery (metal strips on the battery) upon moving. Short-circuit of

the terminal may damage the battery and cause an explosion.

General Notice

- Using a damaged battery or placing a battery in your mouth or animal's mouth may cause serious injury including a fire or explosion.
- Do not place items containing magnetic components such as a credit card, phone card, bank book, or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.
- Talking on your phone for a long period of time may reduce call quality due to heat generated during use. When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
- Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact an LG Authorized Service Center to replace the

damaged antenna.

- Do not immerse your phone in water, liquid, or expose to high humidity. If this happens, turn it off immediately and remove the battery. Immediately, take it to an LG Authorized Service Center.
- Do not paint your phone.
- The data saved in your phone might be deleted due to careless use, repair of the phone, or upgrade of the software. Please backup your important phone numbers. (Ringtones, text messages, voice messages, pictures, and videos could also be deleted.) The manufacturer is not liable for damage due to the loss of data.
- When you use the phone in public places, set the ringtone to vibration so you don't disturb others.
- Do not turn your phone on or off when putting it to your ear.
- Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.

FDA Consumer Update



The U.S. Food and Drug Administration's Center for Devices and Radiological Health Consumer Update on Mobile Phones:

1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of Radio Frequency (RF) energy in the microwave range while being used. They also emit very low levels of RF when in standby mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those

studies, or in determining the reasons for inconsistent results.

2. What is the FDA's role concerning the safety of wireless phones?

Under the law, the FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit Radio Frequency (RF) energy at a level that is hazardous to the user. In such a case, the FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace, or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, the FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way

that minimizes any RF exposure to the user that is not necessary for device function; and

- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

The FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

The FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that

are sold in the United States must comply with FCC safety guidelines that limit RF exposure. The FCC relies on the FDA and other health agencies for safety questions about wireless phones.

The FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

3. What kinds of phones are the subject of this update?

The term “wireless phone” refers here to handheld wireless phones with built-in antennas, often called “cell”, “mobile”, or “PCS” phones. These types of wireless phones can expose the user to measurable Radio Frequency (RF) energy because of the short distance between the phone and the user’s head.

These RF exposures are limited by FCC safety guidelines that were

developed with the advice of the FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person’s RF exposure decreases rapidly with increasing distance from the source. The so-called “cordless phones,” which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of Radio Frequency (RF) energy exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed

increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we do not know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop — if they do — may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

6. What is the FDA doing to find out more about the possible health effects of wireless phone RF?

The FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to Radio Frequency (RF) energy.

The FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The project has also helped develop a series of public information documents on EMF issues.

The FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research And Development Agreement (CRADA) to do research on wireless phone safety. The FDA provides the

scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts with independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

7. How can I find out how much Radio Frequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit Radio Frequency (RF) energy exposures. The FCC established these guidelines in consultation with the FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless phones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and

Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

8. What has the FDA done to measure the Radio Frequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the Radio Frequency (RF) energy exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, "Recommended Practice for Determining the Spatial-Peak

Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques", sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

9. What steps can I take to reduce my exposure to Radio Frequency energy from my wireless phone?

If there is a risk from these products — and at this point we do not know that there is — it is probably very small. But if you are concerned about avoiding even potential risks, you can take a

few simple steps to minimize your exposure to Radio Frequency (RF) energy. Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure. If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna. Again, the scientific data does not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to Radio Frequency (RF) energy, the

measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

11. What about wireless phone interference with medical equipment?

Radio Frequency (RF) energy from wireless phones can interact with some electronic devices. For this reason, the FDA helped develop a detailed test method to measure Electro Magnetic Interference (EMI)

of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by the FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI.

The FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a “compatible” phone and a “compatible” hearing aid at the same time. This standard was approved by the IEEE in 2000.

The FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur,

the FDA will conduct testing to assess the interference and work to resolve the problem.

12. Where can I find additional information?

For additional information, please refer to the following resources:

FDA web page on wireless phones
(<http://www.fda.gov/cellphones/>)

Federal Communications
Commission (FCC) RF Safety
Program
(<http://www.fcc.gov/oet/rfsafety>)

International Commission on Non-
Ionizing Radiation Protection
(<http://www.icnirp.de>)

World Health Organization (WHO)
International EMF Project
(<http://www.who.int/emf>)

National Radiological Protection
Board (UK)
(<http://www.hpa.org.uk/radiation/>)

Driving

Check the laws and regulations on the use of wireless phones in the areas where you drive and always obey them. Also, if using your phone while driving, please observe the following:

- Give full attention to driving -- driving safely is your first responsibility;
- Use hands-free operation, if available;
- Pull off the road and park before making or answering a call if driving conditions or the law require it.

10 Driver Safety Tips

Your wireless phone gives you the powerful ability to communicate by voice almost anywhere, anytime. An important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When operating a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features such as speed dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phones offer, including automatic redial and memory. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.
2. When available, use a hands-free device. A number of hands-free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your wireless phone or a

- speaker phone accessory, take advantage of these devices if available to you.
3. Make sure you place your wireless phone within easy reach and where you can reach it without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.
 4. Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.
 5. Don't take notes or look up phone numbers while driving. If you are reading an address book or business card, or writing a "to-do" list while driving a car, you are not watching where you are going. It is common sense. Do not get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.
 6. 6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light, or otherwise stationary. But if you need to dial while driving, follow this simple tip -- dial only a few numbers, check the road and your mirrors, then continue.
 7. Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and driving do not mix; they are distracting and even dangerous when you are behind the wheel of a car. Make people you are talking with aware you are driving and if necessary, suspend conversations which have the potential to divert your attention from the road.
 8. Use your wireless phone to call for help. Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations -- with your phone

at your side, help is only three numbers away. Dial 911 or other local emergency number in the case of fire, traffic accident, road hazard, or medical emergency. Remember, it's a free call on your wireless phone!

9. Use your wireless phone to help others in emergencies. Your wireless phone provides you a perfect opportunity to be a "Good Samaritan" in your community. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.
10. Call roadside assistance or a special wireless non-emergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call for emergency services. But you can still use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you

know to be stolen, call roadside assistance or other special non-emergency wireless number.

The above tips are meant as general guidelines. Before deciding to use your mobile device while operating a vehicle, it is recommended that you consult your applicable jurisdiction's local laws or other regulations regarding such use. Such laws or other regulations may prohibit or otherwise restrict the manner in which a driver may use his or her phone while operating a vehicle.

7.11 Warranty Laws

The following laws govern warranties that arise in retail sales of consumer goods:

- The California Song-Beverly Consumer Warranty Act [CC §§1790 et seq],
- The California Uniform Commercial Code, Division Two [Com C §§2101 et seq], and
- The federal Magnuson-Moss Warranty Federal Trade Commission Improvement Act [15 USC §§2301 et seq; 16 CFR Parts 701 – 703]. A typical Magnuson-Moss Act warranty is a written promise that the

product is free of defects or a written promise to refund, repair, or replace defective goods. [See 15 USC §2301 (6).] Remedies include damages for failing to honor a written warranty or service contract or for violating disclosure provisions. [See 15 USC §2310(d).] Except for some labeling and disclosure requirements, the federal Act does not preempt state law. [See 15 USC §2311.]

The Consumer Warranty Act does not affect the rights and obligations of parties under the state Uniform Commercial Code, except the provisions of the Act prevail over provisions of the Commercial Code when they conflict. [CC §1790.3.]

For purposes of small claims actions, this course will focus on rights and duties under the state laws.

1. WHAT THIS WARRANTY COVERS:

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the product extends for TWELVE (12) MONTHS beginning on the date of purchase of the product with valid proof of purchase, or absent valid proof of purchase, FIFTEEN (15) MONTHS from date of manufacture as determined by the unit's manufacture date code.
- (2) The limited warranty extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser/end user.
- (3) This warranty is good only to the original purchaser of the product during the warranty period as long as it is in the U.S., including Alaska, Hawaii, U.S. Territories and Canada.
- (4) The external housing and cosmetic parts shall be free of defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.

(5) Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.

(6) The customer shall bear the cost of shipping the product to the Customer Service Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damages resulting from use of the product in other than its normal and customary manner.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.
- (3) Breakage or damage to antennas unless caused directly by

LIMITED WARRANTY STATEMENT

defects in material or workmanship.

(4) That the Customer Service Department at LG was not notified by consumer of the alleged defect or malfunction of the product during the applicable limited warranty period.

(5) Products which have had the serial number removed or made illegible.

(6) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of marketability or fitness for a particular use.

(7) Damage resulting from use of non LG approved accessories.

(8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.

(9) Products operated outside published maximum ratings.

(10) Products used or obtained in a rental program.

(11) Consumables (such as fuses).

3. WHAT LG WILL DO:

LG will, at its sole option, either repair, replace or refund the purchase price of any unit that does not conform to this limited warranty. LG may choose at its option to use functionally equivalent re-conditioned, refurbished or new units or parts or any units. In addition, LG will not re-install or back-up any data, applications or software that you have added to your phone. It is therefore recommended that you back-up any such data or information prior to sending the unit to LG to avoid the permanent loss of such information.

4. STATE LAW RIGHTS:

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY

TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY APPLICABLE TO THIS PRODUCT.

Some states do not allow the exclusive limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

5. HOW TO GET WARRANTY SERVICE:

If you experience any problems with either the Bluetooth headset or the mobile handset, in each case as may be covered by this limited warranty, you need only return the affected device. For example, if a problem exists with the Bluetooth headset, please DO NOT return your mobile handset with the headset. Likewise, if a problem exists with the mobile handset, please DO NOT return the Bluetooth Headset with the handset.

To obtain warranty service, please call or fax to the following telephone numbers from anywhere in the continental United States:

Tel. 1-800-793-8896 or Fax.
1-800-448-4026

Or visit <http://us.lgservice.com>.
Correspondence may also be mailed to:

LG Electronics Service- Mobile
Handsets, P.O. Box 240007,
Huntsville, AL 35824

DO NOT RETURN YOUR PRODUCT TO THE ABOVE ADDRESS. Please call or write for the location of the LG authorized service center nearest you and for the procedures for obtaining warranty claims.

Important Information

This user's guide provides important information on the use and operation of your phone. Please read this guide carefully prior to using the phone to be able to use your phone to its greatest advantage and to prevent any accidental damage or misuse. Any unapproved changes or modifications will void your warranty.

FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that causes undesired operation.

Information to User

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Modifications not expressly approved by the manufacturer could void the user's authority to

operated the equipment under FCC rules.

Technical Details

The LG Revere™ 2 is an all digital phone that operates on both Code Division Multiple Access (CDMA) frequencies: Cellular services at 800 MHz and Personal Communication Services (PCS) at 1.9 GHz.

CDMA technology uses a feature called DSSS (Direct Sequence Spread Spectrum) that enables the phone to keep communication from being crossed and to use one frequency channel by multiple users in the same specific area. This results in a 10-fold capacity increase when compared with analog mode. In addition, features such as soft / softer handoff, hard handoff, and dynamic RF power control technologies combine to reduce call interruptions.

The Cellular and PCS CDMA networks consist of MSO (Mobile Switching Office), BSC (Base Station Controller), BTS (Base Station Transmission System), and MS (Mobile Station).

* TSB -74: Protocol between an IS-95A system and ANSI J-STD-008

1xRTT system receives twice as many subscribers in the wireless section as IS-95. Its battery life is twice as long as IS-95.

The table on the following page lists some major CDMA standards.

Part 15.105 statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If you experience interference with reception (e.g., television), determine if this equipment is causing the harmful interference by turning the equipment off and then back on to see if the interference is affected. If necessary, try correcting the interference by one or more of the following measures:

CDMA Standard	Designator	Description
Basic Air Interface	TIA/EIA-95A TSB-74 ANSI J-STD-008 TIA/EIA-IS2000	CDMA Dual-Mode Air Interface 14.4kbps radio link protocol and inter-band operations IS-95 adapted for PCS frequency band CDMA2000 1xRTT Air Interface
Network	TIA/EIA/IS-634 TIA/EIA/IS-651 TIA/EIA/IS-41-C TIA/EIA/IS-124	MAS-BS PCSC-RS Intersystem operations Non-signaling data comm.
Service	TIA/EIA/IS-96-B TIA/EIA/IS-637 TIA/EIA/IS-657 IS-801 TIA/EIA/IS-707-A	Speech CODEC Short Message Service Packet Data Position Determination Service (gpsOne) High Speed Packet Data

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Part 15.21 statement

Changes or modifications that are not expressly approved by the manufacturer could void the

user's authority to operate the equipment.

FCC RF Exposure Information

WARNING! Read this information before operating the phone.

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to Radio Frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously

set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

Bodily Contact During Operation

This device was tested for typical use with the back of the phone kept 0.78 inches (2.0 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.78 inches (2.0 cm) must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Avoid the use of accessories that cannot maintain 0.78 inches (2.0 cm) distance between the user's body and the back of the phone and have not been tested for compliance with FCC RF exposure limits.

Vehicle-Mounted External Antenna

(Optional, if available.)

To satisfy FCC RF exposure requirements, keep 8 inches (20 cm) between the user / bystander

and vehicle-mounted external antenna. For more information about RF exposure, visit the FCC website at www.fcc.gov.

Caution

Use only the supplied antenna. Use of unauthorized antennas (or modifications to the antenna) could impair call quality, damage the phone, void your warranty and/or violate FCC regulations.

Don't use the phone with a damaged antenna. A damaged antenna could cause a minor skin burn.

Contact your local dealer for a replacement antenna.

Terminology

EZ Tip Calculator

Feature for easy bill calculation using the total cost, tip, and number of people as variables.

Advanced Voice Recognition

Feature that allows you to perform a wide range of verbal commands by training the phone to recognize your individual speech patterns.

Bluetooth® wireless technology

Technology used to allow mobile phones, computers, and other personal devices to be easily coordinated and interconnected using a short-range wireless connection.

Media Center

Feature that accesses the Internet to provide the ability to access and even download a wide variety of software, information, and more right on your LG Verizon wireless phone.

Acronyms and Abbreviations

DTMF

Dual-Tone Multi Frequency (or “touch-tone”) is a method used to communicate keys pressed on the phone. Pressing a key generates two simultaneous tones, one for the row and one for the column to determine which key was pressed.

ERI

Enhanced Roaming Indicator is a feature to indicate whether a mobile phone is on its home system, a partner network, or a roaming network. Many phones indicate home vs. roaming as an icon, but ERI capable phones can clearly indicate third “partner network” status.

GPS

Global Positioning System is a system of satellites, computers, and receivers able to determine the latitude and longitude of a specific receiver on Earth. Position is calculated using time and distance.

IS 2000

Type of digital signaling. It's the second generation of CDMA digital

cellular, an extension of IS-95. Differences between signaling types have to do with pilot signal and links to provide more traffic channels, and control protocols.

NAM

Number Assignment Module is how the phone stores the phone number and its electronic serial number.

SSL

Secure Sockets Layer Protocol used to encrypt data sent over the air.

TTY

Teletypewriter. An electromechanical typewriter that either transmits or receives messages coded in electrical signals. A phone with TTY support is able to translate typed characters to voice or translate voice into characters to display on the TTY.

Numbers

3-way call 15

A

Acronyms and

Abbreviations 122

Adding Another Phone
Number 20

Add New Device 59

Airplane Mode 69

Alarm Clock 56

Alert Sounds 62

All 40

Answer Options 74

Assisted Dialing 77

Auto Retry 75

B

Backlight 66

Backup Assistant 24

Banner 65

Battery Charge Level 13

Battery Temperature
Protection 13

Bluetooth® Menu 58

Brightness 66

Browse & Download 49

C

Calculator 54

Calendar 55

Caller ID 16

Call Forwarding 74

Call Settings 74

Call Sounds 62

Call Waiting 15

Changing Saved
Information 21

Changing the Default
Number 21

Charging the Battery 12

Charging with USB 13

Contact List 23

Contacts 23

Contacts in Your Phone's
Memory 19

Current Country 71

Customizing Individual
Entries 19

D

Deleting 22

Dialed 40

Dial Search 17, 77

Digit Dial Readout 63

Discovery Mode 61

Display Settings 64

Display Themes 67

Drafts 35

DTMF Tones 77

E

Easy Set-up 61, 64

Entering and Editing
Information 18

Erasing Messages 38

Extras 50

Ez Tip Calculator 54

F

Favorites 24

Font Size 68

Font Type 68

G

Games 48

Get New Pictures 46

Get New Ringtones 44

Get Ringback Tones 45

Getting Started with Your
Phone 11

Glossary 122

Groups 25

I

Icon Glossary 79

Important Safety
Precautions 1, 81

Inbox 32

In Case of Emergency
(ICE) 26

Info Search 57
Installing the Battery 12
Internal Clock 69

K

Keypad Volume 63

L

Language 70
LIMITED WARRANTY
STATEMENT 115
Location 70

M

Main Menu Settings 67
Making Calls 14
Master Volume 52
Media Center 43
Memory 78
Menus Overview 8
Messaging 28
Messaging Settings 36
Missed 39
Mobile Email 36, 51
Mobile Email / V CAST
Tones / My Pictures 51
Mobile Web 42, 43
Mute Function 15
My Device Info 60
My Name Card 27
My Number 78

My Pictures 47, 51
My Ringtones 45
My Sounds 46
My Verizon 52

N

NAM Select 74
New Contact 23
New Message 28
Notepad 58

O

One Touch Dial 76
Online Album 48

P

Phone Info 78
Phone Overview 6
Phone Settings 69
Picture Message 30
Pictures 46
Power On/Off 64

Q

Quick Access to
Convenient Features 15
Quick Font Resize 15
Quick Volume
Adjustment 15

R

Received 39
Receiving Calls 14
Recent Calls 39
Redialing Calls 14
Removing the Battery 12

S

Safety 84
Screen Icons 14
Security 71
Sent 34
Service Alerts 63
Set Shortcut Keys 69
Settings & Tools 52
Set-up Wizard 80
Signal Strength 13
Social Networks 36
Software Update 79
Sounds Off 15
Sounds Settings 61
Speed Dial 19
Speed Dialing 22
Speed Dials 25
Stopwatch 57
Storing a Number with
Pauses 20
Storing Basics 19
Supported Profiles 61
SW/HW Version 78
System Select 73

T

- Take Picture 47
- Technical Details 118
- Terminology 122
- Text Input 18
- To Do List 56
- Tools 52
- TTY Mode 75
- Tunes & Tones 44
- Turning the Phone On
and Off 13
- TXT Message 28

V

- V CAST Tones 51
- Vibrate Mode 15
- View Timers 40
- Voice Clarity 64
- Voice Commands 16,
52, 70
- Voicemail 35
- Voice Message 32
- Voice Privacy 76

W

- Wallpaper 67
- World Clock 58

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.