



Clear and Simple Quick Start Guide

LG Stylo™ 2



Getting to know your LG Stylo™ 2



Phone setup

Inserting the battery, nano-SIM card, and microSD™ card

1. Carefully remove the back cover by using a finger or thumb to pull from the bottom left-hand side of the device.
2. Remove the battery.
3. Insert the nano-SIM into the slot as shown with the gold-colored contacts facing down. Reinsert the battery.
4. Insert the microSD card (optional) into the microSD slot as shown with the gold-colored contacts facing down.
5. Replace the back cover (the cover is secure when it clicks into place) and charge your phone.

Touch screen

Using the touch screen

- Use your fingertip to lightly touch the screen.
- Tap, drag, or slide your finger up, down, left, and right on the touch screen to perform different functions.
- To return to the previous screen, tap the **Back key** ◀.
- Press the **Home key** ○ at any time to return to the main home screen.
- Tap the **Recent apps key** □ to view and access a list of apps you've recently used.
- From the main home screen, slide left to access applications on your phone.

Notifications panel

- View a quick summary of alerts on your phone, such as new messages, emails, calls, and software updates with the Notifications panel.
- Swipe down from the top of any screen to access the Notifications panel.
 - Clear individual notifications by swiping left or right on the alert, or tap **Clear** to remove all notifications.

Personalize

Customizing home screens

Personalize your home screen with widgets and wallpapers. Tap and hold a blank part of the home screen to access customization options, then select **Widgets** and **Wallpapers**. Browse widget options by swiping to scroll through, and then tap or drag an item to add it to a home screen. To choose a wallpaper, tap **Gallery**, **Wallpaper gallery**, **Live wallpapers**, or **Photos** to make your selection.

Organizing home screens

- To move a widget or folder, tap and hold it, and then drag it to a new location.
- To delete a widget, tap and hold and then drag an item to **Remove**.
- To uninstall downloaded apps, tap and hold and then drag an item to **Uninstall**.
- To create a folder, tap and hold an icon and drag it on top of another icon.
- To rename a folder, tap it, tap the folder name, and tap the **Folder name** field to bring up the keyboard.

Calls and voicemail

Make a call

1. From the home screen, tap **Phone**.
2. Select an option to place a call:
 - **Dial**: Manually enter telephone numbers.
 - **Call logs**: Retry or return recent calls.
 - **Contacts**: Call a saved contact from your address book.
 - **Groups**: Find contacts more easily by their groups.

Use call waiting

With call waiting, you can take two calls at once.

1. While on a call, you will hear a tone if another call comes in.
2. Tap **Answer** and swipe in any direction to receive the call. Your current call will automatically be placed on hold, and both calls will be listed on screen.
3. Simply tap a call in the list to make it active.

Check voicemail

1. From the home screen, tap **Phone**.
2. From the Dial tab, tap **Voicemail**.

Text and picture messaging

Send a text message

1. From the home screen, tap **Messaging**.
2. Tap **Compose** to begin a new message.
3. In the **To** field, enter a number or a contact name, or tap **Contacts** to select a contact from the address book.
4. Tap the **Enter message** field and enter your text.
5. Tap **Send**.

Send a picture message

1. Follow steps 1-4 above.
2. Tap **Attach**.
3. Tap **Image** and select a picture, or choose another file to attach.
4. Tap **Send**.

More information

On the web

Detailed support information, including device specifications and the full user manual, is available at: www.cricketwireless.com/support/devices.

On the phone

- Call Customer Care at **1-855-246-2461** or
- Dial **611** from your phone

Accessories

Cricket offers a full line of accessories. For more information, go to www.cricketwireless.com/shop/accessories or visit your local Cricket retailer.



Product meets FCC Radio Frequency Exposure Guidelines—FCC ID ZNFB181AL. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Copyright © 2016 LG Electronics MobileComm U.S.A., Inc. ALL RIGHTS RESERVED. LG, LG Life's Good, and the LG logo are registered trademarks of LG Corp. Stylo is a trademark of LG Electronics, Inc. All features, functionality, and other product specifications are subject to change without notice. Screen shots are simulated and subject to change. © 2016 Cricket Wireless LLC. All rights reserved. Cricket and the Cricket logo are registered trademarks under license to Cricket Wireless LLC. MBM65459601 (1.0) Printed in China

Cricket services

These services make using Cricket even better and easier!

My Cricket: Access billing, make a quick payment, view usage, and access support from the palm of your hand.

Visual Voicemail: Quickly view, access, and play back your voicemail messages. Easily save important numbers to your Favorites list and respond to messages by calling back or texting.

Cricket Wi-Fi Manager: Helps you save your high-speed data by seeking out free and open Wi-Fi® hotspots whenever you're near them. Also remembers your favorite Wi-Fi hotspots and connects you automatically. Cricket does the searching so you can do the saving.

Deezer: Listen on-the-go with ad-free streaming music, download your favorites to your phone, and get customized playlists based on your preferences.

Apps on Google Play™

Access Google Play

1. From the home screen, tap **Play Store**.
2. Use your existing Google™ account to log in, or create one following the on-screen instructions.

Navigate Google Play

Find apps, games, and more in the Play Store.

1. Tap a category to browse popular apps, games, movies, and music organized by popularity or category.
2. Tap the search bar at the top of the screen to search the Play Store for a specific game or app.
3. To install, tap the app and follow the on-screen instructions. Once installed, you will see an alert in the Notifications panel. Open the app from this notification or by swiping left from the main home screen and locating it on a secondary home screen.

Camera and video

Take a picture

1. From the home screen, tap **Camera**, then tap **Menu**.
2. Tap **Settings** to adjust your camera settings, such as timer, grid, or resolution. Zoom in and out by pinching/spreading two fingers on the screen.
3. Tap **Shutter** or press the **Volume up/down key** to take a photo.

Take a video

1. In camera mode, tap **Camcorder** to automatically start recording.
2. Tap **Stop recording** to end recording. You may also pause a recording and continue later by tapping **Pause** > **Resume** and capture photos while recording by tapping.

Send a picture or video

After taking a picture or video, tap the share option icon that appears above the Gallery thumbnail in the corner of the screen or swipe **Share** to choose a share option such as YouTube™, Messaging, Email, and more.

View pictures and videos

1. From the home screen, tap **Gallery**.
2. Tap an album, and then tap an image or video.

Note: You will need to set up a payment method in the My account folder in the Play Store settings to purchase apps.

QuickMemo®+

Create memos with QuickMemo+

1. Swipe left from the main home screen, and then tap **QuickMemo+**.
2. Tap to add a new memo, or to take a photo to add text or draw on the image.
3. Tap ✓ to save your memo.
4. To add a time or location reminder to a memo, tap a memo and then tap **Add reminder**.

Knock Code™ and Knock On™

Set Up Knock Code

Knock Code allows you to unlock your phone with a simple tap pattern code.

1. From the home screen, long press the **Recent apps key**, then tap **Lock screen settings**.
2. Tap **Select screen lock** and then tap **Knock Code**.
3. Tap **NEXT**.
4. Tap the quadrants on the screen to set your unlock pattern.
5. Tap **NEXT**, enter your tap pattern again, and then tap **CONFIRM**.
6. Tap **NEXT**.
7. Enter a backup PIN and tap **NEXT**. Confirm it and tap **OK**.
8. Select the type of notifications you'd like to have shown on the Lock screen and tap **OK**.

Wake up your screen with Knock On

1. While the phone is in sleep mode, tap the screen twice with your finger.
2. When the screen wakes up, you may view notifications, access apps on your lock screen, or unlock your phone.

