

CONTENTS

READ ME FIRST.....	3
INSTRUCTIONAL ICONS	3
GETTING STARTED	4
PHONE LAYOUT.....	4
INSERTING SIM CARD.....	4
INSERTING MEMORY CARD	5
TURNING YOUR PHONE ON/ OFF	6
CHARGING THE BATTERY.....	7
HOME SCREEN.....	7
CUSTOMIZE HOME SCREEN	8
HANDSET KEYS.....	9
LOCKING/UNLOCKING THE PHONE	10
PLACING AND RECEIVING CALLS.....	10
MAKE A CALL.....	10
END A CALL	10
DISABLE PHONE CALLS.....	11
HEADSET	11
CHANGING THE PHONE'S VOLUME	11
PHONEBOOK.....	12
MANAGING NOTIFICATIONS	12
OPEN THE NOTIFICATIONS PANEL.....	12
RESPOND TO NOTIFICATIONS	13

CLOSE NOTIFICATIONS PANEL	13
NOTIFICATION SHORTCUT ICONS	14
MULTIMEDIA	15
CAMERA	15
MUSIC	15
VIDEO PLAYER	15
FM RADIO	16
CONNECTING TO NETWORKS AND DEVICES	16
PAIR WITH BT DEVICES	16
SAFETY PRECAUTIONS	18
TAKING CARE OF YOUR DEVICE	19
BATTERY RECOMMENDATIONS	20
RECYCLE YOUR PHONE	20
DISCLAIMERS	21
COPYRIGHT	21

Read Me First

- Please read all safety precautions and this manual carefully before using your device to ensure safe and proper use.
- The descriptions in this manual are based on the default settings of your device.
- Available features and additional services may vary by device, software, or service provider.
- Applications and their functions may vary based on the country, region, software or hardware specifications. Micromax is not liable for performance issues caused by third-party applications.

INSTRUCTIONAL ICONS

Before you start, please familiarize yourself with the icons you will see in this manual:



Information: Provides useful information



Warning: Situations that could cause injury to yourself or others



Caution: Situations that could cause damage to your device or other equipment



Tips to help you with the features.

GETTING STARTED

PHONE LAYOUT



INSERTING SIM CARD



1. Turn back your phone.



2. Remove the back cover.



3. Remove the battery.



4. Insert SIM card(s) in respective slots.



Please keep the SIM Card out of the reach of children.



The card and the contacts are vulnerable to damage due to scratching or bending. Therefore, be careful when using, inserting or removing the cards

INSERTING MEMORY CARD

To store additional multimedia files and enhance your phone storage capacity, you must insert a memory card.



1. Turn back your phone.



2. Remove the back cover.



3. Remove the battery.



4. Insert memory card in the card slot.



Use only compatible memory cards approved by Micromax with this device. Incompatible memory cards may damage the card or the device and corrupt the data stored in the card.

TURNING YOUR PHONE ON/ OFF

Switch On: Press and hold the Power key for a few seconds.

Switch Off: Press and hold the Power key for a few seconds.



CHARGING THE BATTERY

Before using the device for the first time, you must charge the battery. You can charge the device with a travel adapter or connecting the device to a PC with a USB cable.



 Tip: You can also use a compatible USB charger to charge your battery.

 Use only Micromax approved chargers and cables. Unapproved chargers or cables can cause battery to explode or damage your device.

 We suggest you charge the battery for 4 hours continuously for the first time.

HOME SCREEN

When you start up, the home screen opens. You can view the left or right extended home screen by swiping the home screen to the left or right. You can

personalize your home screen with shortcuts, widgets, themes, wallpapers and other items.

- Swipe left or right on the home screen to view the next extended home screen. Your X337 has five home screens including one center home screen and 4 extended home screens.
- Also, there will be the following four launcher icons in the bottom pane of the home screen.

	Opens the Application Menu for you to view all applications.
	Opens M!Live link on the web browser.
	Opens the messaging section of your phone.
	Opens the dial pad for you to make calls instantly.

CUSTOMIZE HOME SCREEN

When the device is in default mode, you will see limited predefined icons. You can place desired indicator icons, widgets and shortcuts to applications on the home screen.

Add Widgets and Icons to Home Screen

You can personalize the default home screen by adding shortcuts to applications or items in applications or widgets.

To add items to the home screen, long press on the home screen or tap



button of the phone to view the additional bottom pane on the screen. Tap **Widgets/Shortcut/Wallpaper** in the bottom pane and proceed to add your desired widget or shortcut or to change your home screen wallpaper.

Rearrange or Remove Widgets and Icons on your Home Screen

- Long press and hold the widget or icon you want to move. Drag the widget or icon to a new location on the screen.
- Press and hold on an icon in the home screen and  icon will get displayed on the top-right corner of each widget/shortcut icon on the home screen. Tap the  icon on the widget/shortcut icon that is to be removed from the home screen.

HANDSET KEYS

The three buttons of your X337 offer the following functions and shortcuts.

Button	Press
	Back: Opens the previous screen you were working on. If the onscreen keyboard is open, closes the keyboard.
	Menu: Opens a menu with items that affect the current screen or application.
	Home: Opens the Home screen. If you are viewing the left or right extended Home screen, opens the central Home screen.

LOCKING/UNLOCKING THE PHONE

You can unlock your screen by pressing the Power key and then dragging the



icon upwards. You can set a phone lock password from  →  →

Security settings → **Phone lock**. Turn on Phone lock and set phone lock password, as desired.

PLACING AND RECEIVING CALLS

MAKE A CALL

To make a call:

1. Tap  on the main menu or the home screen to dial the desired number.
2. Dial the number to be called directly from the dial pad.

Or

Open the Contacts list by tapping the **Contacts** tab and select the desired number from the list.

Or

Open the call log by tapping the **Call log** tab and tap the number that is to be dialed.

3. Tap **Call** to make call.

END A CALL

To end a call, tap **End Call**.

DISABLE PHONE CALLS

Some locations may require you to disable all the wireless features of your mobile. The Airplane Mode enables you to disable all incoming and outgoing calls, and BT connections.

To activate the airplane mode, drag down the notification panel and tap  to activate or deactivate airplane mode.

HEADSET

Insert Headset to divert all types of phone sounds to your headset. You will be required to plug in your headset before starting the FM Radio. The headset works as antenna for the FM radio.



CHANGING THE PHONE'S VOLUME

You can adjust the volume of your handset by using the volume keys on the left side of the handset as shown:



PHONEBOOK



Your phonebook stores all your saved contacts for anytime use. Your phonebook data can be stored in your SIM card or your phone memory. You can manage your contacts from here. Now group your contacts, share contacts over networks, and add new contacts to your contact list.

MANAGING NOTIFICATIONS

The phone provides you with various notifications to alert you of various events.

- Notification icons inform you of new messages and events.
- When you receive a notification, its icon appears in the status bar, along with a brief summary.

OPEN THE NOTIFICATIONS PANEL

Drag the status bar down from the top of the screen as shown below.



The Notifications panel displays your network provider's name and a list of your current notifications.

RESPOND TO NOTIFICATIONS

Open the notification panel and tap a notification to respond to it. What happens next depends on the notification.

CLOSE NOTIFICATIONS PANEL

Drag the Notifications panel from bottom to the top of the screen or just tap the back button. The panel also closes when you tap a notification to respond to it.



NOTIFICATION SHORTCUT ICONS

Open the Notifications panel and a list of the following shortcut icons will be displayed.

Icons	Description
	Turn BT on and off.
	Turn airplane mode on and off.
	Tap to manage the sound profile of the phone.
	Tap to adjust the display brightness.

MULTIMEDIA

CAMERA



You can view the captured pictures and videos from the Gallery from  → .

- To share any picture or video, tap and hold the picture(s) or video(s) that you want to share and tap the  icon and share via BT, etc.
- Tap  to delete the selected picture(s) and video(s).

MUSIC



You can easily transfer your favorite music from a PC to your phone and experience a world of interesting and melodious music. Use the intuitive buttons and icons on the phone in music interface to enjoy the features of your music player.

Press the phone's volume up/down keys on the left side of the mobile phone to adjust the volume.

Note: You can use an SD card to enhance the storage capacity for your multimedia files such as music, photos, emails, and so on.

VIDEO PLAYER



Play videos in the inbuilt video player with great ease. Use the intuitive buttons and icons in the player interface to enjoy various features of your video player. Press the phone's volume up/down keys on the left side of the mobile phone to adjust the volume.

Note: You can use an SD card to enhance the storage capacity for your multimedia files such as music, photos, emails, and so on.

FM RADIO



You can listen to your favorite FM channels using the inbuilt FM receiver of your phone. Before starting the FM, you need to plug-in the headset as it works as antenna for the FM radio. You can listen to FM radio stations using your device - just plug in a headset and select a station.

- Use the intuitive buttons and icons on the phone in the radio interface to enjoy the features of your inbuilt FM radio.
- Press the phone's volume up/down keys on the left side of the mobile phone to adjust the volume.

CONNECTING TO NETWORKS AND DEVICES

Your phone can connect to a variety of networks and devices, including Internet and BT. You can also transfer files to/from your PC through the data cable.

PAIR WITH BT DEVICES



- If BT is off, turn it on.

- To pair with another device, tap **BT settings** and then tap the **Paired devices**. Tap **Search** to search for all devices in range. If the device you want to pair with is not in the list, make it discoverable and then search again. Tap the ID of the other device in the list to pair with them. You will be prompted to confirm passkey on both devices. Tap **Pair** to confirm the passkey and pair the devices. On successful pairing, your phone connects to the device.
- You can also manage the visibility and BT name of your device from this BT section.

SAFETY PRECAUTIONS



Remember to comply with legal requirements and local restrictions when using the phone.



Your Phone's radio waves may interfere with inadequately shielded medical devices. Consult a physician or manufacturer of the medical device to know whether they are adequately shielded from external Radio Frequency. Switch off your device when regulations require you to do so.



Always keep the phone and accessories out of reach of small children. Small parts such as the SIM card, dust cap, lens ring and lens cap as well as the microSD card can be dismantled and swallowed by small children.



Do not place the phone near electromagnetic data carriers such as credit/Debit cards. Information stored on them could be lost.



Permanent hearing loss may occur if you use earphones at high volume for prolonged periods. Set your volume to a safe level. If you experience discomfort in your ears, reduce the volume or discontinue the use of your earphones.



Ring tones, info tones and hands-free talking are reproduced through the loudspeaker. Do not hold the phone to the ear when it rings or when you have switched on the hands-free function.



The mains voltage (V) specified on the power supply unit must not be exceeded to prevent damage to the charging device. The power supply must be plugged into an easily accessible AC power socket when charging the battery.



You may only open the phone to replace the battery, SIM and micro SD card. You must not open the battery under any circumstances. All other changes to this device are strictly prohibited and will invalidate the warranty.



The phone may cause interference in the vicinity of TV sets, radios and PCs.

Only use Micromax specified batteries and charging devices.



All batteries can cause property damage, injury or burns if a conductive material Tap the exposed terminals. Exercise care in handling any charged battery, particularly when placing it inside your pocket, purse or other container with metal objects. Do not dispose of batteries in fire as they may explode.



Do not use the phone while driving. When you have to use the phone, please use the personal hands-free kit\$.

Please put the phone safely in the phone stand. Do not put it onto any passenger seat or any place from which it may fall down in case of vehicular collision or emergency braking.



Flight is influenced by interference caused by the phone. It is illegal to use a phone on the airplane. Please turn off your phone during a flight.



Professional service: The phone must be installed or repaired by Micromax authorized personnel. You are likely to suffer a huge risk when you install or repair this phone by yourself, which also goes against the warranty rules.

TAKING CARE OF YOUR DEVICE

Your device is a product of superior design and craftsmanship and should be handled with care. The following suggestions will help you protect your phone.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can rust the electronic circuits. If your device gets wet, remove the battery, wipe it with a dry cloth and take it to an authorized service center.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.

- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can get damaged.
- Do not attempt to open the device other than as instructed in this guide. Repairing this phone by yourself other than our authorized service agents/centers goes against the warranty rules.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not store your device near magnetic fields or allow your device to come in contact with magnetic fields for extended period of time.

BATTERY RECOMMENDATIONS

- Please put the battery in a cool and well-ventilated place out of direct sunlight. We recommend you to charge the battery at room temperature range.
- Batteries have life cycles. If the time that the battery powers equipment becomes much shorter than usual, the battery life is at an end. Replace the battery with a new battery of the same make and specification.
- Use manufacturer approved batteries, chargers, accessories and supplies. Micromax will not be held responsible for user's safety when using unapproved accessories or supplies.
- Do not discard the battery with household trash. Please dispose of used battery according to your local environmental laws and guidelines.

RECYCLE YOUR PHONE



The WEEE logo (shown at the left) appears on the product (battery, handset, and charger) to indicate that this product must not be disposed off or dumped with your other household wastes. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such hazardous waste.

Collection and proper recovery of your electronic waste equipments at the time of disposal will allow us to help preserve the environment. Recycling of the electronic waste equipment will ensure safety of

human health and environment. For more information on best practices for disposal of electronic and electrical waste, please visit to our web site: www.micromaxinfo.com/weee.php.

Note: Micromax will not bear any responsibility for any in compliance with the above mentioned guidelines or improper usage of the mobile phone.

DISCLAIMERS

- The colors, specifications, functions and graphics shown/mentioned in the user manual may differ from the actual product. In such a case, the latter shall govern. Images shown are for representation purpose only. Specifications are subject to change without prior notice. Micromax keeps the right to modify the content in this user guide without prior notice.
- Upon first use of your device, your device will send information related to your mobile, IMEI numbers, location details and other software details through SMS* automatically. This information may be used as further specified in Micromax privacy policy**.
- Talk and standby times are affected by network preferences, type of SIM cards, connected accessories and individual usage patterns. Services and some features may be dependent on the network, service/content providers, SIM cards, compatibility of the devices used and the content formats supported.
- Other product logos and company names mentioned herein may be trademarks or trade names of their respective owners.

*Operator tariff shall be applicable for SMS.

**Micromax privacy policy is available at www.micromaxinfo.com.

COPYRIGHT

All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Micromax is strictly prohibited.