



MOTOKRZR™ K1




MOTOMANUAL

www.motorola.com

HELLOMOTO

Introducing your new **MOTOKRZR™** k1 GSM wireless phone. Here's a quick anatomy lesson.

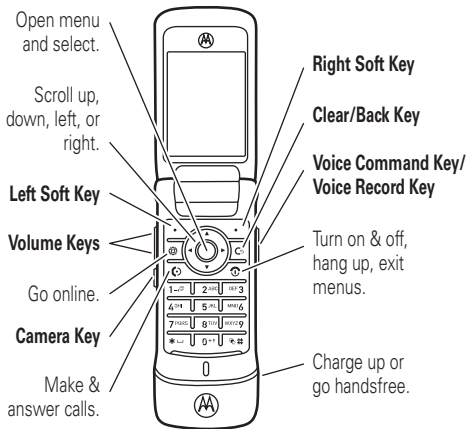

Home Screen



- ② Press the Center Key (•◉•) key to open the **Main Menu**.

- ① Press and hold the **Power Key** (⏻) for a few seconds or until the display lights up to turn on your phone.

Main Menu



- ③ Press the Navigation Key **up, down, left, or right** (•◉•) to highlight a menu feature.

- ④ Press the Center Key (•◉•) to select it.

Motorola, Inc.
Consumer Advocacy Office
1307 East Algonquin Road
Schaumburg, IL 60196

www.hellomoto.com

1-800-331-6456 (United States)

1-888-390-6456 (TTY/TDD United States for hearing impaired)

1-800-461-4575 (Canada)

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. Microsoft, Windows and Windows Me are

registered trademarks of Microsoft Corporation; and Windows XP is a trademark of Microsoft Corporation.

© Motorola, Inc., 2006.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Manual Number: 6809505A91-A

contents

menu map	6	videos	23	time & date	44
Use and Care	8	text messages	25	wallpaper	44
essentials	9	memory card	26	screen saver	45
about this guide	9	cable connections	28	themes	45
SIM card	10	phone updates	30	display appearance	45
battery	10	basics	31	answer options	46
turn it on & off	12	display	31	calls	47
make a call	13	text entry	34	turn off a call alert	47
answer a call	13	volume	38	delay answering	47
store a phone number	13	navigation key	38	recent calls	47
call a stored phone		voice commands	38	redial	49
number	14	external display	41	return a call	49
your phone number	15	handsfree speaker	41	caller ID	50
main attractions	16	codes & passwords	41	emergency calls	50
Bluetooth™ wireless	16	lock & unlock phone	42	voicemail	51
audio player	18	customize	43	other features	52
photos	20	ring style	43	advanced calling	52

phonebook	55	Registration	98
messages	61	Export Law	99
instant messaging . . .	64	Recycling	99
personalizing	65	Perchlorate Label	100
call times & costs . . .	67	Driving Safety	101
handsfree	68	index	103
data calls	69		
network	71		
personal organizer . . .	72		
security	75		
fun & games	76		
service and repairs	80		
SAR Data	81		
EU Conformance	83		
Safety Information	86		
Industry Canada Notice	91		
FCC Notice	92		
Warranty	93		
Hearing Aids	97		
WHO Information	98		

menu map

main menu



Internet*

- Internet
- Browser Setup
- Web Sessions *



Media

- Themes
- Voice Records
- Camera
- Video Camera
- Graphics
- Sounds
- Videos



Games & Apps



Call History

- (press the  or  to scroll through the call lists)



Rogers Mall

- Search
- Get Music & Tones
- Get Games
- Get Graphics
- Get Email/Chat
- Get TV/Video
- Get Celebrity Voicemail
- Get News & Info
- Internet



Messages

- Create Message
- Email Msgs
- Message Inbox
- Voicemail
- Browser Msgs
- Info Services *
- Outbox
- Drafts
- Templates
- IM



Tools

- SIM Applications *
- Calculator
- Datebook
- Alarm Clock
- Dialing Services
 - Fixed Dial *
 - Service Dial *
 - Quick Dial



Contacts



Settings

- (see next page)

* optional features

This is the standard main menu layout.

Your phone's menu may be different.

Tip: Press  to exit the current menu, or  to exit all menus.

settings menu



Personalize

- Home Screen
- Menu
- Voice Dial Setup
- Skin
- Greeting
- Wallpaper
- Screen Saver



Ring Styles

- Style
- (style) Detail



Connection

- Bluetooth™ Link
- USB Settings
- MOTOSYNC™ *



Call Forward *

- Voice Calls
- Fax Calls
- Data Calls
- Cancel All
- Forward Status



In-Call Setup

- In-Call Timer
- Call Cost Setup *
- My Caller ID
- Answer Options
- Call Waiting



Initial Setup

- Time and Date
- Speed Dial
- Display Timeout
- Backlight
- TTY Setup *
- Scroll
- Text Marquee
- Language
- Brightness
- DTMF
- Master Reset
- Master Clear



Phone Status

- My Tel. Numbers
- Credit Info/Available *
- Active Line *
- Battery Meter
- Download Location
- Storage Devices
- Software Update *
- Other Information



Headset

- Auto Answer
- Voice Dial



Car Settings

- Auto Answer
- Auto Handsfree
- Power-Off Delay
- Charger Time



Airplane Mode

- Airplane Mode
- Prompt at Power Up



Network

- New Network
- Network Setup
- Available Networks
- Service Tone *
- Call Drop Tone



Security

- Phone Lock
- Lock Application
- Fixed Dial *
- Restrict Calls *
- Call Barring *
- SIM PIN
- New Passwords
- Certificate Mgmt *



Java™ Settings

- Java App Loader
- Java System
- Delete All Apps
- App Vibration
- App Volume
- App Backlight

* optional features

Use and Care

To care for your Motorola phone, please keep it away from:



liquids of any kind

Don't expose your phone to water, rain, extreme humidity, sweat, or other moisture.



dust and dirt

Don't expose your phone to dust, dirt, sand, food, or other inappropriate materials.



extreme heat or cold

Avoid temperatures below -10°C/14°F or above 45°C/113°F.



cleaning solutions

To clean your phone, use only a dry soft cloth. Don't use alcohol or other cleaning solutions.



microwaves

Don't try to dry your phone in a microwave oven.



the ground

Don't drop your phone.

essentials

CAUTION: Before using the phone for the first time, read the *Important Safety and Legal Information* included in the gray-edged pages at the back of this guide.

about this guide

This guide shows how to open a menu feature as follows:

Find it:  >  **Messages** > **Create Message**

This means that, from the home screen:

- 1 Press the *center key*  to open the menu.
- 2 Press the *navigation key*  to scroll to  **Messages**, and press the *center key*  to select it.
- 3 Press the navigation key  to scroll to **Create Message**, and press the center key  to select it.

symbols



This means a feature is network, SIM card, or subscription dependent and may not be available in all areas. Contact your service provider for more information.

symbols



This means a feature requires an optional accessory.

SIM card


Caution: Don't bend or scratch your SIM card. Keep it away from static electricity, water, and dirt.

Your *Subscriber Identity Module* (SIM) card contains personal information like your phone number and phonebook entries.


To insert and use a **memory card**, see page 26.

Turn off your phone and remove your battery before you install or remove a SIM card.

1

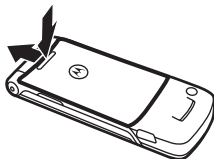

2

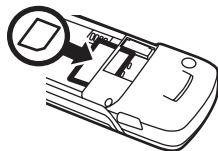

battery

battery tips

Battery life depends on the network, signal strength, temperature, features, and accessories you use.

- Always use Motorola Original batteries and chargers. The warranty does not cover damage caused by non-Motorola batteries and/or chargers.



- New batteries or batteries stored for a long time may take more time to charge.
- When charging your battery, keep it near room temperature.
When storing your battery, keep it uncharged in a cool, dark, dry place.
- Never expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.




Contact your local recycling center for proper battery disposal.

Warning: Never dispose of batteries in a fire because they may explode.


Before using your phone, read the battery safety information in the "Safety and General Information" section included in this guide.

battery installation


1

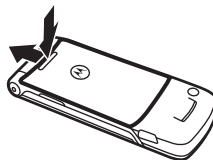

2

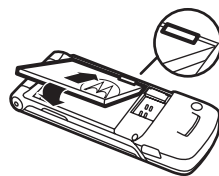


3

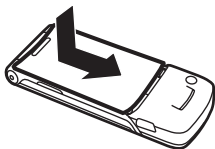

battery charging

New batteries are not fully charged. Plug the battery charger into your phone and an electrical outlet. Your phone might take several seconds to start charging the battery. When finished, your display shows **Charge Complete**.

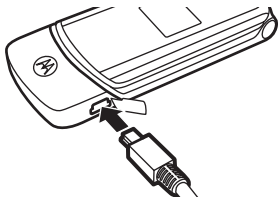

Tip: Relax, you can't overcharge your battery. It will perform best after you fully charge and discharge it a few times.

You can charge your battery by connecting a **cable** from your phone's mini-USB port to a USB port on a computer. Both your phone and the computer must be turned on, and your computer must have the correct software drivers installed. Cables and software drivers are available in Motorola Original data kits, sold separately.




turn it on & off

Caution: Some phones ask for your SIM card PIN code when you turn them on. If you enter an incorrect PIN code three times before the correct code, your SIM card is disabled, and your display shows **SIM Blocked**. Contact your service provider.

To turn on your phone, press and hold  for a few seconds or until the keypad or display

lights up. If prompted, enter your eight-digit SIM card PIN code and/or four-digit unlock code.

To turn off your phone, press and hold  for a few seconds.

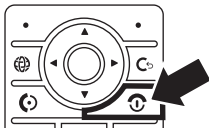

make a call

To make a call, enter a phone number and press . **To “hang up,”** close the flip or press .

To use voice commands for calling, see page 38.

answer a call

To answer a call when your phone rings and/or vibrates, just open the flip or press . **To “hang up,”** close the flip or press .

Note: Your phone cannot receive data over an EDGE network while it is playing videos or some sound files. The EDGE  status indicator appears at the top of your display when you can receive data over an EDGE network.



store a phone number

You can store a phone number in your phonebook:

Find it:  >  **Contacts**, then press **Options** > **Create New** > **Phone Contact** or **SIM Contact**

Note: You can store new contacts in your **phone’s memory** or on your **SIM card**.

Contacts on the SIM card only have a **Name** and **Number**.

- 1 Enter a name and other details for the phone number. To select a highlighted item, press the *center key* .
- 2 Press the **Done** key to store the number.

To **edit** or **delete** a phonebook entry, see page 57.

You can store an **email** address from the home screen to your phonebook, press  >  **Contacts** > **Phone Contact**. Enter the new contact's name and **Email** information.

Email addresses can be stored in your phone only.

Shortcut: Enter a phone number in the home screen, then press the **Store** key to create a contact. To choose whether your phone stores these contacts in your phone's memory or on your SIM card, go back to the

home screen and press  >  **Contacts**, then press **Options** > **Setup** > **Default Storage** > **Phone** or **SIM Card**.

call a stored phone number

Find it:  >  **Contacts**

- 1 Scroll to the phonebook entry.

Shortcut: In the phonebook, press keypad keys to enter the first letters of an entry you want.

- 2 Press  to call the entry.

Note: You can show contacts stored in your phone's memory or on your SIM card. To choose which contacts you see, press  >  **Contacts**, then press **Options** > **View**. You can select **Phone & SIM Card**, **SIM Card**, or **Phone Contacts**.

To use voice commands for calling, see page 38.

your phone number

From the home screen, press *the clear key*  then  to see your number.

Tip: Want to see your phone number while you're on a call? Press **Options > My Tel. Number**.

main attractions

You can do much more with your phone than make and receive calls!

Bluetooth™ wireless

Your phone supports Bluetooth wireless connections. You can connect your phone with a Bluetooth headset or car kit to make handsfree calls. You can also connect your phone with a phone or computer that supports Bluetooth connections to exchange files.

Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or

restricted in certain areas. Always obey the laws and regulations on the use of these products.

For maximum Bluetooth security, you should always connect Bluetooth devices in a safe, private environment.

use a headset or handsfree car kit

Before you try to connect your phone with a handsfree device, make sure the device is **on** and **ready** in *pairing* or *bonding* mode (see the user's guide for the device). You can connect your phone with only one device at a time.

Find it:  >  **Settings** > **Connection**
> **Bluetooth Link** > **Audio Devices**
> **[Look For Devices]**



Your phone lists the devices it finds within range.

- 1 Scroll to a device in the list and press the *center key* .
- 2 Press the **Yes** or **OK** key to connect to the device.
- 3 If necessary, enter the device passkey (such as **0000**) and press the **OK** key.

When your phone is connected, the Bluetooth indicator  appears in the home screen.

Shortcut: When your phone's Bluetooth power is on, your phone can automatically connect to a handsfree device you have used before. Just turn on the device, or move it near the phone. If the device doesn't connect, turn it off and back on.

Tip: Want to know more about your headset or car kit? For specific information about a device, refer to the instructions that came with it.

copy files to another device

You can copy a media file, phonebook entry, or datebook event from your phone to a computer or other device.



Note: You can't copy some copyrighted objects.

- 1 On your phone, scroll to the object that you want to copy to the other device.
- 2 Press **Options**, then select:
 - **Manage > Copy** for media files.
 - **Send Contact** for phonebook entries.
 - **Send** for datebook events.

- 3 Select a recognized device name, or **[Look For Devices]** to search for the device where you want to copy the file.

If your phone could not copy the file to the other device, make sure the device is **on** and **ready** in *discoverable* mode (see the user's guide for the device). Also, make sure the device is not busy with another similar Bluetooth connection.

Note: Once you connect your phone to a Bluetooth device, that device can start similar Bluetooth connections with your phone. Your display shows the Bluetooth indicator  at the top when there is a Bluetooth connection.

receive files from another device

If you do not see the Bluetooth indicator  at the top of your phone display, turn on your phone's



Bluetooth feature by pressing  >  **Settings** > **Connection** > **Bluetooth Link** > **Setup** > **Power** > **On**.

- 1 Place your phone near the device, and send the file from the device.

If your phone and the sending device don't recognize each other, place your phone in discoverable mode so the sending device can locate it: press

 >  **Settings** > **Connection** > **Bluetooth Link** > **Find Me**.

- 2 Press the **Accept** key on your phone to accept the file from the other device.


Your phone notifies you when file transfer is complete. If necessary, press the **Store** key to save the file.

audio player

Your phone can play song files:

Find it:  >  **Media** > **Sounds** and select the file you want to play

Press  up to play or pause. Press  down to stop. Press  right or  left to go forward or back.

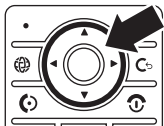

To download songs to your phone, see page 77. To copy files between your phone and a computer, see page 29.

Note: Your phone may not play audio files that have a bit rate higher than 128 kbps. If you try to download or play one of these files, your phone might show you an error or ask you to delete the file.

Tip: You can listen to tunes on your way. Use *airplane mode* to make your phone safe to use with a wired headset, even while you're on a plane. See page 79.

playlist

You can create and reorder playlists:

Find it:  >  **Media** > **Sounds** > **New Playlist**

- 1 Enter a name for the playlist and press **OK**.
- 2 Press  to select **Audio Files** files. Your display shows a list of song titles.
- 3 Press  to select songs for the playlist. Press **Done** when you have completed your selection.
- 4 Press  to select the Storage Device: **Memory Card** or **Phone**. Press **Done** to store the list.

The following options are available for playlists. Press **Options** to choose: **Listen via Bluetooth**, **Edit**, **Reorder**, **Create New**, **Manage**, **Categories**, **Assign to Category**, **View Storage Devices**, **Free Space**, **Sounds Setup**, and **Download Ring Tune**.

 >  **Media** > **Sounds** > *Playlist*

Your display shows the songs in the playlist, and lets you change the order.

Highlight the **Playlist** that you want to reorder and press the **Options** key.

Select **Reorder** and press the **Grab** key to select a song to reorder.

Press **◀▶** to move it up or down in the order. when you have it in the right spot, press the **Add Media** key.

Press **Done** to store the list.

To hear your playlist, highlight it under **Playlists** and press **◀▶**.


To hear your playlist, highlight it under **Sounds** and press **◀▶**.

photos

Your camera lens is on the back of your phone when the phone is open. **To get the clearest**

pictures, wipe the lens clean with a dry cloth before you take a picture.

1 Press **◀▶** > **Media** > **Camera** to see the camera viewfinder.

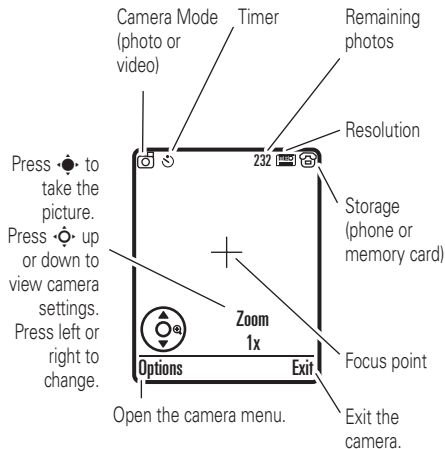

The following options are available:

options	
Zoom	Increase or decrease image size.
Style	Set to Color, Black and White, Bluish, Antique, Reddish, Greenish, or Negative.
Exposure	Increase or decrease exposure.
Lighting Conditions	Set to Automatic, Sunny, Cloudy, Indoor (Home), Indoor (Office), or Night.

Note: Adjusting the exposure affects the brightness of both the viewfinder display and the captured photo.

- 2 Press the *center key*  to take the photo in the viewfinder. You can:

- Press the **Options** key to **Store in Phone**, **Discard**, **Apply as**, and **Print** the photo.
- Press the **Send** key to send the photo in a message.

Your phone might tell you that this is a **Multimedia Msg**, since it has a picture in it. Some other phones or networks do not support picture messages. Press the **Yes** key to send the message.

- Press  to discard the photo and return to the active viewfinder.

Before you capture the photo, you can press **Options** to open the camera menu:

options	
View Phone Album	See stored pictures and photos.
Go To Video Mode	Switch to the video camera.

options	
Auto-Timed Capture	Set a timer for the camera to take a photo.
Camera Setup	Open the setup menu to adjust photo settings.
Switch Storage Device	Choose to store pictures on your phone or a memory card. 
Free Space	See how much memory remains. Note: Your service provider may store some content in user memory before you receive the phone.

self portrait

If you close your phone while the viewfinder is active, the external display shows the image. Press the volume keys to zoom, or press the smart key to capture and store the image.

send a stored photo in a message

Find it:  >  **Messages** > **Create Message** > **Message**, then press **Options** > **Add Media** > **Picture**



- 1 Scroll to the picture you want and press **Add Media**.
- 2 Enter the message text and press **Send To**.
- 3 Scroll to a recipient address and press the *center key* .

- 4 Press the **Send** key to send the message.




Your phone might tell you that this is a **Multimedia Msg**, since it has a picture in it. Some other phones or networks do not support picture messages. Press the **Yes** key to send the message.

videos

To view, delete, or manage videos you've recorded, see page 76.

Your camera lens is on the back of your phone, when your phone is open. **To get the clearest videos, wipe the lens clean with a dry cloth before you capture a video.**

Press > **Media** > **Video Camera** to see the video viewfinder.

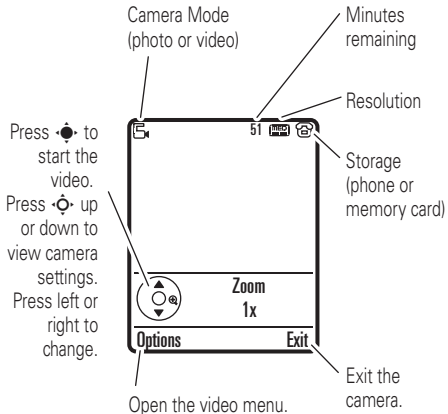

Note: The number of minutes remaining is an estimate.

The following options are available:

options	
Zoom	Increase or decrease image size.
Style	Set to Color, Black and White, Bluish, Antique, Reddish, Greenish, or Negative.
Exposure	Increase or decrease exposure.
Lighting Conditions	Set to Automatic, Sunny, Cloudy, Indoor (Home), Indoor (Office), or Night.

Tip: If you want to send your video in a message, the video length must be set to **MMS**. To set length, press **Options**
> **Video Camera Setup** > **Video Length**.

- 1 Press the *center key*  to start recording the video in the viewfinder.
- 2 Press the **Stop** key to stop recording the video. You can:

- Press the **Options** key to **Store in Phone** or **Discard** the video.
- Press the **Send** key to send the video in a message.



Enter text and press **Send To**, then scroll to a recipient address and press the *center key*  to select it. Press the **Options** key to enter a new number. To send the message, press the **Send** key.

Note: Some other phones or networks do not support messages with videos.

- Press  to discard the video and return to the active viewfinder.

text messages

To create a group mailing list, see page 59.
For more message features, see page 61.

send a text message

A text message can contain text and pictures, sounds, or other media objects. You can add multiple pages to a message, and you can put text and media objects on each page. You can send a message to other compatible phones or to email addresses.



Find it: > **Messages** > **Create Message**
> **Message**

- 1 Press keypad keys to enter text on the page (for details about text entry, see page 34).

To insert a **picture, sound, or other object** on the page, press

Options > **Add Media**. Select the file type and the file.

To insert **another page** in the message, simply continue to enter text or media and new pages will be created as needed. You can enter more text and objects on the new page.

- 2 When you finish the message, press the **Send To** key.
- 3 Scroll to a recipient and press the *center key* . Repeat to add other recipients.

To enter a **new** number or email address, press the **Options** key and select **Enter Number** or **Enter Email**.

- 4 Before you send a message, you can press **Options** to choose **Add Media**, **Preview**, **Page Options**, **Sending Options**, **Message Details**, **Save to Drafts**, **Save as a Template**, **Cancel Message**,

Editing Options, Change Text Mode Options, or Text Setup.

5 To **send** the message, press the **Send** key.

Your phone might tell you that this is a **Multimedia Msg**, if it has multiple pages or media objects in it. Some other phones or networks do not support multimedia messages. Press the **Yes** key to send the message.

receive a text message

When you receive a message, your phone plays an alert, and the display shows **New Message** with a message indicator, such as . Press the **Read** key to open the message.



To see all of your text messages:

Find it:  >  **Messages** > **Message Inbox**

If a multimedia message contains media objects:

- Photos, pictures, and animations show as you read the message.
- A sound file plays when its slide shows. Use the volume keys to adjust the sound volume.
- Attached files are added to the end of the message. To open an attachment, scroll to the file indicator/filename and press the **View** key (image), **Play** key (sound), or **Open** key (phonebook vCard, datebook vCalendar entry, or unknown file type).

memory card

You can use a removable memory card with your phone to store and retrieve




multimedia objects (such as photos and sounds).

Note: If you download a copyrighted file and store it on your memory card, you can use the file only while your memory card is inserted in your phone. You cannot send, copy, or change copyrighted files.

install or remove a memory card

1 Remove the battery door (see page 11).

2 **To install the memory card**, make sure the memory card's metal contacts are facing down, and slide the top of the memory card under the metal band.

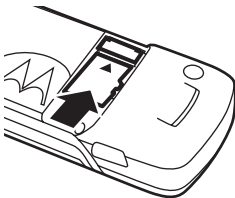

To remove the memory card, slide it back out of the holder.

3 Replace the battery door.

Do not remove your memory card while your phone is using it or writing files on it.

see and change memory card information

To **see the files** stored on your memory card and on your phone, open a file list, such as **Pictures** (see page 76). Icons can indicate if a file is stored in your phone memory (📱) or on your memory card (💾). To copy or move a file from your phone to your memory card, highlight it in the list and press **Options > Manage > Copy** or **Move > Memory Card**. You cannot copy or move some copyrighted files.

To **copy files** between your memory card and a computer, you can use a cable connection

(see page 29) or a Bluetooth connection (see page 17).

To see your **memory card name, available memory**, and other information about the card:

Find it:  >  **Settings** > **Phone Status**
> **Storage Devices** > **Memory Card**


- 1 Press  to scroll to the memory card that is installed.
- 2 Press the *center key*  to see the memory card information. Your phone stores any content that you add, like ring tones or games, in *user memory*. Your service provider may store some content in user memory before you receive the phone.

or

Press **Options** to see the **Storage Devices** menu, which lets you **View Details**, **Rename**, or **Format** the memory card.

cable connections

 Your phone has a mini-USB port so you can connect it to a computer to transfer data.

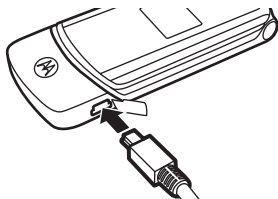

Note: Motorola Original USB data cables and supporting software are sold separately. Check your computer or hand-held device to determine the type of cable you need. To **transfer data** between your phone and computer, you might need to install the software included with the Motorola Original



data kit. See the data kit user's guide for more information. To make **data calls** through a connected computer, see page 69.

connect your memory card to a computer

You can use a cable connection to access your phone's memory card with a PC.

Note: When your phone is connected to a computer, you can only access the memory card through the computer.

On your phone:

Disconnect the cable from your phone, if it is connected, then press  >  **Settings**
> **Connection** > **USB Settings** > **Default Connection**
> **Memory Card**.

This directs the USB connection to your memory card.

Connect the cable to your phone and to an available USB port on your computer. Then follow these steps:

On your computer:

- 1 Open your "My Computer" window, where your phone's memory card appears as a "Removable Disk" icon.
- 2 Click on the "Removable Disk" icon to access the files on your phone's memory card.
- 3 To store the desired files onto the memory card, drag and drop them as follows:
audio files: > mobile > audio
screen savers: > mobile > picture
wallpapers: > mobile > picture
video clips: > mobile > video
- 4 When you finish, disconnect your phone by selecting the "Safely Remove

Hardware” icon in the system tray at the bottom of your computer screen. Then disconnect the “USB Mass Storage Device.”

- 5 Disconnect the cable from your phone and computer.

On your phone:

To return to **Data** as your USB default connection, press  >  **Settings** > **Connection** > **USB Settings** > **Default Connection** > **Data Connection**.

Note: Software updates do not affect your phonebook entries or other personal entries. If you receive a software update but choose to install it later, see page 71.

phone updates

Sometimes we think of ways to make your phone’s software faster or more efficient after you’ve purchased your phone. You can find out if your phone can be updated at: <http://hellomoto.com/update>




basics

See page 1 for a basic phone diagram.

display

The *home screen* appears when you turn on the phone.

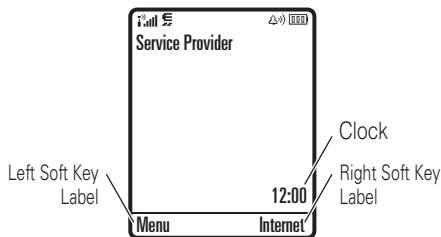


Note: Your home screen might look different from the one shown, depending on your service provider.

To dial a number from the home screen, press number keys and .

Press  up, down, left, or right in the home screen to open basic menu features.

Press the *center key*  to open the menu. *Soft Key Labels* show the current soft key functions. For soft key locations, see page 1.

Status indicators can show at the top of the home screen:

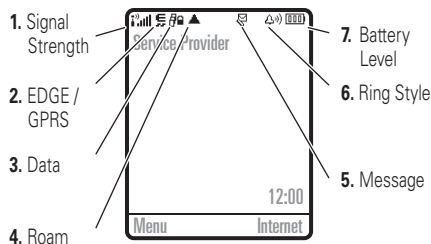

1 Signal Strength Indicator – Vertical bars show the strength of the network connection. You can't make or receive calls when or appears.

2 EDGE/GPRS Indicator – Shows when your phone is using a high-speed *Enhanced Data for GSM Evolution* (EDGE) or *General Packet Radio*



Service (GPRS) network connection. Indicators can include:

- GPRS PDP context active
- EDGE
- GPRS packet data available

3 Data Indicator – Shows connection status.



secure packet data transfer

unsecure packet data transfer

secure application connection

unsecure application connection

secure *Circuit Switch Data* (CSD) call

unsecure CSD call

 Bluetooth™ connection is active

4 Roam Indicator – Shows ▲ when your phone is seeking or using a network outside your home network.



5 Message Indicator – Shows when you receive a new message. Indicators can include:



 text message  voice message

 voice & text message

 IM message

6 Ring Style Indicator – Shows the ring style setting.

 loud ring

 vibrate & ring

 soft ring

 vibrate then ring

 vibrate

 silent


7 Battery Level Indicator – Vertical bars show the battery charge level. Recharge the battery when your display shows **Low Battery**.

text entry

Some features let you enter text.

For indicator descriptions see following section.

Flashing cursor indicates insertion point.

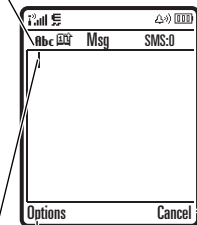

Press the **Options** key to open the submenu.

Press the **Cancel** key to exit without making changes.

Press **[#]** in a text entry view to select an entry mode:

entry modes	
[1] or 1	Your Primary text entry mode can be set to any iTAP™ [1] or tap 1 mode.
[2] or 2	Your Secondary text entry mode can be set to any iTAP [2] or tap 2 mode, or set to None if you don't want a secondary entry mode.
123	Numeric mode enters numbers only.
@%	Symbol mode enters symbols only.

To set your primary and secondary text entry modes, press **Options > Text Setup** in a text entry view and select **Primary Text** or **Secondary Text**.

iTAP™ and tap mode tips

- Press **[0]** in a text entry view to change text case to all capital letters

(**ABC**), no capitals (**abc**), or next letter capital (**Abc**).


- To enter numbers quickly, press and hold a number key to temporarily switch to numeric mode. Press the number keys to enter the numbers you want. Press and hold any number key to change back to iTAP or Tap modes.
- Press  to enter punctuation or other characters.
- Press  to move the flashing cursor to enter or edit message text.
- Press  to delete the character to the left of the cursor. Hold  to delete the word.
- To cancel your message, press .

iTAP™ mode

Press  in a text entry view to switch to iTAP mode. If you don't see  or , press **Options > Text Setup** to set iTAP mode as your primary or secondary text entry mode.

iTAP mode lets you enter words using one keypress per letter. The iTAP software combines your keypresses into common words and predicts each word as you enter it.

For example, if you press **7 7 6 4**, your display shows:

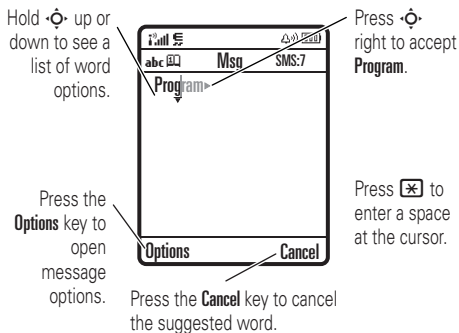

If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining letters.

Tip: Don't worry if you forget how iTAP works. In a text entry display, you can press


Options > Text Setup > Text Tutorial to see an explanation.

tap and tap extended modes

Press **#** in a text entry view to switch to tap mode. If you don't see **Abc1** or **Abc2**, press **Options > Text Setup** to set tap mode as your primary or secondary text entry mode.

To enter text in **Tap** mode, press a keypad key repeatedly to cycle through the letters and number on the key. Repeat this step to enter each letter. The **Tap Extended** mode works the same way, but includes more special characters and symbols.

For example, if you press **[7]** one time, your display shows:

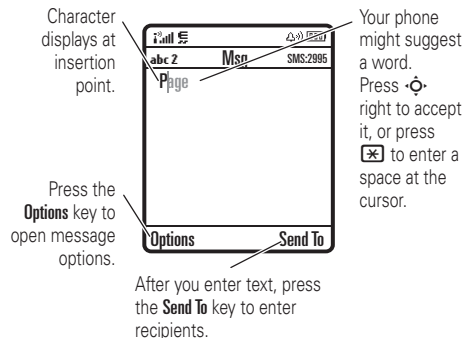

The first character of every sentence is capitalized. If necessary, press **[down arrow]** down to change the character to lowercase before the cursor moves to the next position.

numeric mode

Press **[#]** in a text entry view until you see **123**. Press the number keys to enter the numbers you want.

Shortcut: You can press and hold a number key to temporarily switch to numeric mode from iTAP™ or Tap modes. Press the number keys to enter the numbers you want. Press and hold any number key to change back to iTAP or Tap modes.

symbol mode

Press **[#]** in a text entry view until your display shows a list of symbols. Scroll to the symbol you want, then press the *center key* **[center arrow]**.


Press and hold **[#]** to switch back to iTap or Tap modes.

volume

Press the volume keys to:


- turn off an incoming call alert
- change the earpiece volume during calls
- change the ringer volume from the home screen

Tip: Sometimes silence really is golden. That's why you can quickly set your ringer to **Vibrate** or **Silent** by holding the down volume key while you are in the home screen. You can also switch to **Silent** or back by holding **#** in the home screen.

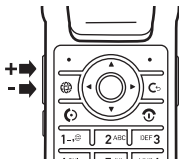

navigation key

Press the *navigation key* (a circle with four dots) up, down, left, or right to scroll to items in the display. When you scroll to an item, press the *center key* (a circle with a dot in the center) to select it.

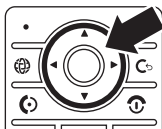

voice commands

You can use voice commands to tell your phone what to do.

- 1 Press and release the **voice command key** on the right side of your phone.
Your phone says "Say a command."
- 2 Say a voice command from the list
(replace 555-1212 with a phone number,

and replace *John Smith* with a phonebook entry name):

voice commands
" Call 555-1212"
" Call John Smith"
" Send Email John Smith"
" Send Voice Note 555-1212"
" Send Voice Note John Smith"
" Send Message 555-1212"
" Send Message John Smith"
" Lookup John Smith"
" Go to Voicemail "
" Go to Camera "
" Go to Redial "
" Go to Received Calls "

voice commands
" Check Status " Your phone tells you its battery strength, network signal strength, and whether its coverage is normal or roaming.
" Check Battery "
" Check Signal "
" Check Network "
" Check My Phone Number "
" Turn Prompts Off " Your phone turns off the sound on your voice command prompts (such as "Say a command."). To turn prompts on again, say " Turn Prompts On. " Your phone confirms by saying "Voice prompts on."

Tip:

- You can say a phonebook entry's name and number type together. For example, say "Call John Smith Mobile" to call the Mobile number stored for John Smith.
- Speak numbers at a normal speed and volume, pronouncing each digit distinctly. Don't pause between digits.
- For voice command help, press the **voice command key**, then press the **Help** key.

voice command setup

You can change voice command settings.

- 1 Press and release the **voice command key** on the right side of the phone.
- 2 Press the **Settings** key.

3 Choose one of the settings below:

voice command settings	
Choice Lists	Turn choice lists on or off. Your phone uses choice lists to confirm voice commands by asking "Did you say..." followed by a choice list item.
Sensitivity	Make your phone more or less likely to reject a voice command.
Digit Dialing	Train your phone to recognize how you say digits.
Sound	Adjust the sound settings for your voice commands.
About	Select Automatic, Always On, or Always Off.

external display

When your phone is closed, the external display shows the time, date, status indicators, and notifications for incoming calls and other events. For a list of phone status indicators, see page 32.

handsfree speaker

You can use your phone's handsfree speaker to make calls without holding the phone to your ear.

To turn the handsfree speaker on during a call, press the **Speaker** key (if available), or **Options** > **Spkrphone On**. Your display shows **Spkrphone On** until you turn it off or end the call.

Note: The handsfree speaker won't work when your phone is connected to a handsfree car kit or headset.

codes & passwords

Your phone's four-digit **unlock code** is originally set to **1234**. The six-digit **security code** is originally set to **000000**. If your service provider didn't change these codes, you should change them:

Find it:  >  **Settings** > **Security**
> **New Passwords**

You can also change your **SIM PIN** password.

If you forget your unlock code: At the **Enter Unlock Code** prompt, try entering 1234 or the last four digits of your phone number. If that doesn't work, press  and enter your six-digit security code instead.

If you forget other codes: If you forget your security code, SIM PIN code, PIN2 code, or call barring password, contact your service provider.

lock & unlock phone

You can lock your phone to keep others from using it. To lock or unlock your phone, you need the four-digit unlock code.

To **manually lock** your phone:

Press  >  **Settings** > **Security** > **Phone Lock** > **Lock Now**.

To **automatically lock** your phone whenever you turn it off: Press  >  **Settings** > **Security** > **Phone Lock** > **Automatic Lock** > **On**.

Note: You can make emergency calls on a locked phone (see page 50). A locked phone still rings or vibrates for incoming calls or messages, **but you need to unlock it to answer**.

customize

ring style

Each ring style profile uses a different set of sounds or vibrations for incoming calls and other events. Here are the profiles you can choose:

 Loud

 Soft

 Vibrate

 Vibe & Ring

 Vibe then Ring

 Silent

The ring style profile's indicator appears at the top of your home screen. To choose your profile:

Find it:  >  Settings > Ring Styles
> **Style:** *style name*

change alerts in a ring style

You can change the alerts for incoming calls and other events. Your changes are saved in the current ring style profile.

Find it:  >  Settings > Ring Styles
> *style* **Detail**

Note: *Style* represents the current ring style. You can't set an alert for the **Silent** ring style setting.

- 1 Scroll to **Calls** (or **Line 1** or **Line 2** for dual-line phones), then press the **Edit/Add** key to change it.
- 2 Scroll to the alert you want, then press the *center key* .

3 Press the **Back** key to save the alert setting.

time & date

Your phone can automatically update your time zone, time, and date. It uses the time and date for the datebook.

To **synchronize** the time zone, time, and date with the network: Press  >  **Settings** > **Initial Setup** > **Time and Date** > **Autoupdate** > **Time & Time Zone**. If you don't want your phone to automatically update your time zone and date, choose **Time Only** instead.



Press **Back** to save the **Time and Date** setting.

To **manually** set the time zone, time, and date, turn off **Autoupdate**, then: Press  >  **Settings** > **Initial Setup** > **Time and Date** > **Time Zone**, *time* or *date*. To jump to a city in the time zone list, enter the first letter of its name by pressing keypad keys.

To choose an **analog or digital** clock for your home screen, press  >  **Settings** > **Personalize** > **Home Screen** > **Clock**.

wallpaper

Set a photo, picture, or animation as a wallpaper (background) image in your home screen.

Find it:  >  **Settings** > **Personalize** > **Wallpaper**

options	
Picture	Press  up or down to select a picture, or select None for no wallpaper.
Layout	Select Center to center the image in the display, Tile to repeat the image across the display, or Fit-to-screen to stretch the image across the display.

screen saver

Set a photo, picture, or animation as a screen saver. The screen saver appears when the flip is open and no activity is detected for a specified time.

Tip: This feature helps save your screen, but not your battery. To extend battery life, turn off the screen saver.

Find it:  >  **Settings** > **Personalize**
> **Screen Saver**

options	
Picture	Press  up or down to select a picture or animation, or select None for no screen saver.
Delay	Select the length of inactivity before the screen saver appears.

themes

A *phone theme* is a group of image and sound files that you can apply to your phone. Most themes include a wallpaper image, screen saver image, and ring tone. Your phone may come with some themes, and you can download more.



To **apply** a theme, press  >  **Media**
> **Themes** > *theme*.

To **download** a theme, see page 77.

To **delete themes you downloaded**, press  >  **Media** > **Themes**, scroll to the theme, and press **Options** > **Delete** or **Delete All**.

display appearance

To choose a phone **skin** that sets the look and feel of your phone's display: Press  >  **Settings** > **Personalize** > **Skin**.

To set your display **brightness**: Press  >  **Settings** > **Initial Setup** > **Brightness**.

To save battery life, your keypad **backlight** turns off when you're not using your phone. The backlight turns on when you open the flip or press any key. To set how long your phone waits before the backlight turns off:

Press  >  **Settings** > **Initial Setup** > **Backlight**.

Note: To turn the backlight on or off for Java™ applications, press  >  **Settings** > **Java Settings** > **App Backlight**.

To save battery life, the **display** can turn off when you're not using your phone. The display turns back on when you open the flip or press any key. To set how long your phone waits before the display turns off:

Press  >  **Settings** > **Initial Setup** > **Display Timeout**.

answer options

You can use different ways to answer an incoming call. To turn on or turn off an answer option:

Find it:  >  **Settings** > **In-Call Setup** > **Answer Options**

options	
Multi-Key	Answer by pressing any key.
Open to Answer	Answer by opening the flip.
Delayed Answer	Set up your delayed answering option (see page 47).

calls

To make and answer calls, see page 13.

turn off a call alert

You can press the volume keys to turn off a call alert before answering the call.

delay answering

If you want to answer a call, but need to step outside first, you can delay answering the call.

When your phone rings, press the **Delay** key or your voice key. Your phone stops ringing and plays a brief message for the caller, such as "Please hold, your call will be answered in a moment." The call remains on hold until you press the **Talk** key.

To turn **Delayed Answer** on, or record your **Delayed Answer** message (up to 10 seconds), press  >  **Settings** > **In-Call Setup** > **Answer Options** > **Delayed Answer**

Note: When **Delayed Answer** is on, the **Open to Answer** feature is disabled.

recent calls

Your phone keeps lists of incoming and outgoing calls, even for calls that didn't connect. The most recent calls are listed first. The oldest calls are deleted as new calls are added.

Shortcut: Press  from the home screen to see a list of dialed calls.

Find it:  >  **Call History**, then press  or  to switch to **Received Calls**, **Dialed Calls**, or **Missed Calls**

Scroll to a call. A ✓ next to a call means the call connected.

- To call the number, press .
- To see call details (like time and date), press the *center key* .
- To see the **Call History Menu**, press **Options**. This menu can include:

options	
Store	Create a phonebook entry with the number in the No. field. Store does not appear if the number is already stored.
Delete	Delete the entry.
Delete All	Delete all entries in the list.

options	
Show ID	Show your caller ID for the next call.
Hide ID	Hide your caller ID for the next call.
Send Message	Open a new text message with the number in the To field.
Send Voice Message	Record and send a voice message to the number.
Add Digits	Add digits after the number.
Attach Number	Attach a number from the phonebook or recent calls lists.
Send Tones	Send the number to the network as DTMF tones. Note: This option appears only during a call .

options	
Filter by	Select all, dialed, received, or missed calls.
Notepad	Open the number in a text editor.
Call Times	Open your call time information. 
Call Cost	Open your call cost information. 
Data Times	See how much time you have spent on data transfers. 
Data Volumes	See how much data you have transferred. 

redial

- 1 Press  from the home screen to see a list of recent calls.

- 2 Scroll to the entry you want to call, then press .

If you hear a **busy signal**, and you see **Call Failed**, you can press  or the **Retry**  key to redial the number. When the call goes through, your phone rings or vibrates one time, shows **Redial Successful**, and connects the call.

return a call

Your phone keeps a record of your unanswered calls, and shows **X Missed Calls**, where **X** is the number of missed calls.

- 1 Press the **View** key to see the received calls list.
- 2 Scroll to the call you want to return, then press .

caller ID

Calling line identification (caller ID) shows the phone number for an incoming call in your external and internal displays.

Your phone shows the caller's name and picture when they're stored in your phonebook, or **Incoming Call** when caller ID information is not available.

You can set your phone to play a different ringer ID for an entry stored in your phonebook (see page 57).

To show or hide **your phone number** from the next person you call, enter the phone number and press **Options > Hide ID/Show ID**.



emergency calls

Your service provider programs one or more emergency phone numbers, such as 911 or 112, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.

Note: Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

- 1 Press the keypad keys to dial the emergency number.
- 2 Press  to call the emergency number.

voicemail

Your network stores the voicemail messages you receive. To listen to your messages, call your voicemail number.



Note: Your service provider may include additional information about using this feature.

When you **receive** a voicemail message, your phone shows the voicemail message indicator  and **New Voicemail**. Press the **Call** key to listen to the message.

To **check** voicemail messages:

Find it:  >  **Messages** > **Voicemail**

Your phone may prompt you to store your voicemail phone number. If you don't know your voicemail number, contact your service provider.

Note: You can't store a **p** (pause), **w** (wait), or **n** (number) character in this number. If you want to store a voicemail number with these characters, create a phonebook entry for it. Then you can use the entry to call your voicemail.

To **change** your voicemail number or turn off voicemail notification, press  >  **Messages**, then press the **Options** key and select **Setup** > **Voicemail Setup** > **Notification**.

other features

advanced calling

To use voice commands for calling, see page 38.

features

attach a phone number



Dial an area code or prefix for a phonebook number, then press **Options** > **Attach Number**.

features

notepad

Press  >  **Call History**, press the **Options** key, then > **Notepad**.

- To call the number, press .
- To create a phonebook entry with the number in the **No.** field, press the **Store** key.
- To open the **Dialing Menu** to attach a number or insert a special character, press **Options**.

features

international calls



If your phone service includes international dialing, press and hold **0** to insert your local international access code (indicated by +). Then, press the keypad keys to dial the country code and phone number.

hold a call

Press **Options > Hold** to put all active calls on hold.

mute a call

Press the **Mute** key (if available) or **Options > Mute** to put all active calls on mute.

features

call waiting



When you're on a call, you'll hear an alert if you receive a second call.

Press **☎** to answer the new call.

- To switch between calls, press the **Switch** key.
- To connect the two calls, press **Options > Link**.
- To end the call on hold, press **Options > End Call On Hold**.

To turn the call waiting feature on or off, press **⚙ > Settings > In-Call Setup > Call Waiting > On or Off**.

features	
conference call	
During a call:	
Dial the next number, press  , and press Options > Link .	
transfer a call	
During a call:	
Options > Transfer , dial transfer number, press 	
call forwarding	
Set up or cancel call forwarding:	
 >  Settings > Call Forward	

features	
restrict calls	
Restrict outgoing or incoming calls:	
 >  Settings > Security > Restrict Calls	
Tell your phone to allow All , None , or only the calls from your Contacts .	
call barring	
Restrict outgoing or incoming calls:	
 >  Settings > Security > Call Barring	
TTY calls	
Set up your phone for use with an optional TTY device:	
 >  Settings > Initial Setup > TTY Setup	

features

change phone line



If you have a dual-line-enabled SIM card, you can change your line to make and receive calls from your other phone number.

 >  **Settings** > **Phone Status** > **Active Line**

fixed dial



When you turn on fixed dialing, you can call only numbers stored in the fixed dial list.

Turn fixed dialing on or off:

 >  **Settings** > **Security** > **Fixed Dial**

Use the fixed dial list:

 >  **Tools** > **Dialing Services** > **Fixed Dial**

features

quick dial



Dial preprogrammed phone numbers:

 >  **Tools** > **Dialing Services** > **Quick Dial**

DTMF tones

Activate DTMF tones:

 >  **Settings** > **Initial Setup** > **DTMF**

To send DTMF tones during a call, just press number keys or scroll to a number in the phonebook or recent calls lists and press **Options** > **Send Tones**.

phonebook

To store and call phonebook entries, see page 13.

Note: You can show contacts stored in your phone's memory or on your SIM card. To

choose which entries you see, press  >  **Contacts**, then press **Options** > **View**. You can select **Phone & SIM Card**, **SIM Card**, or **Phone Contacts**.

features

assign a speed dial key to a phonebook entry

You can assign the keys  through  to phonebook entries. Then, when you press and hold a key, your phone calls the entry.

Note: Your service provider might assign some keys, such as  for your voicemail number. You can only speed dial the phonebook entries stored on your phone (not on your SIM card).

Press  >  **Contacts** and scroll to the phonebook entry. Then, press **Options** > **Add to Speed Dial** and pick a speed dial key.

features

use the speed dial key for a phonebook entry

To **use a speed dial key** that you assigned to a phonebook entry, just press and hold the key while in your home screen.

edit your speed dial keys

 >  **Contacts**, then press **Options** > **Manage Contacts** > **Speed Dial**

choose a speed dial key list

You can set speed dial to call the entries in your phone memory  or your Fixed Dial list: Press  >  **Settings** > **Initial Setup** > **Speed Dial** > **Phone Memory** or **Fixed Dial**.

features

edit or delete a phonebook entry

Edit a number stored in the phonebook:

 >  **Contacts**, scroll to the phonebook entry, and press **Options**. You can select **Edit Contact**, **Delete Contact**, or other options.

Shortcut: In the phonebook, press keypad keys to enter the first letters of an entry you want. You can also press  and  to see the entries in your categories or entries you used recently.

features

set ringer ID for a phonebook entry

Assign a ring alert (ringer ID) to an entry:

 >  **Contacts** > *entry*, then press **Options** > **Edit Contact** > **Ringer ID** > *ringer name*

Note: The **Ringer ID** option is not available for entries stored on the SIM card. To copy an entry from SIM to phone memory, see page 60.

To activate ringer IDs:

 >  **Settings** > **Ring Styles** > *style Detail* > **Ringer IDs** > **On**

features

set picture ID for a phonebook entry

Assign a photo or picture to show when you receive a call from an entry:

☎ > 📁 **Contacts** > *entry*, then press
Options > **Edit Contact** > **Picture** > *picture name*

Note: The **Picture** option is not available for entries stored on the SIM card. To copy an entry from SIM to phone memory, see page 60

set picture ID view for phonebook

Show entries as a text list, or with picture caller ID photos:

☎ > 📁 **Contacts**, then press **Options** > **Setup**
> **View by** > *view name*

features

set category for a phonebook entry

☎ > 📁 **Contacts** > *entry*, then press
Options > **Edit Contact** > **Category** > *category name*

Note: The **Category** option is not available for entries stored on the SIM card. To copy an entry from SIM to phone memory, see page 60

When you open your phonebook, press
✳ or # to see your categories.

set category view for phonebook

☎ > 📁 **Contacts**, then press **Options** > **Filter by**
> **Category** > *category name*

You can show **All** entries, entries in a predefined category (**Business**, **Personal**, **General**, **VIPs**), or entries in a category you create.

Shortcut: When you open your phonebook, press ✳ or # to see your categories.

features

create a new category

•◉ > ☐ **Contacts**, then press
Options > Manage Contacts > Edit Categories
> **[New Category]**

Enter the category name, and select its members from your phonebook entries.

edit a category

•◉ > ☐ **Contacts**, then press
Options > Manage Contacts > Edit Categories

Scroll to the category name and press
Options > Edit Category.

You can edit the category name, members, ringer ID, or picture. Your phone uses the ringer ID and picture whenever you receive calls from numbers in the category.

features

create group mailing list

You can put several phonebook entries in a group mailing list, then send a message to the list. To create a list:

•◉ > ☐ **Contacts**, then press
Options > Create New > Message List

Note: A **Message List** cannot include entries stored on the SIM card. To copy an entry from SIM to phone memory, see page 60.

sort phonebook list

Set the order in which entries are listed:

•◉ > ☐ **Contacts**, then press
Options > Setup > Sort by > First Name or Last Name

features

copy one phonebook entry

Copy an entry from the phone to the SIM card, or from the SIM card to the phone:

☎ >  **Contacts**, scroll to the entry, press **Options** > **Copy to SIM Card** or **Copy to Phone**

copy multiple phonebook entries

Copy multiple phonebook entries between the phone and SIM card:

☎ >  **Contacts**, then press **Options** > **Select Multiple to**, and select **Copy Phone to SIM** or **Copy SIM to Phone**

send phonebook entry to another device

Send a phonebook entry to another phone, computer, or device:

☎ >  **Contacts**, scroll to the entry, press **Options** > **Send Contact**

features

print phonebook entry over Bluetooth™ connection

You can use a Bluetooth wireless connection to send a phonebook entry from your phone to a printer.

☎ >  **Contacts**

Scroll to the entry you want to print, and press **Options** > **Print**.

You cannot print a **Mailing List**. For more about Bluetooth connections, see page 16.

messages

For basic text message features, see page 25.

features	
send a text message	
•◂◃• > ✉ Messages > Create Message > Message	
send email	
•◂◃• > ✉ Messages > Create Message > New Email	

features	
send voice message	
•◂◃• > ✉ Messages > Create Message > New Voice Msg	
Your phone starts recording the voice message. To stop recording, press the Stop key. Your phone inserts the voice recording into a message and lets you enter email addresses or phone numbers of the recipients.	
use a message template	
•◂◃• > ✉ Messages > Templates > Text Templates or Multimedia Templates	
Select a template to create a new message based on the template.	

features

read and manage messages



⬂ > ✉ Messages > Message Inbox

Icons next to each message indicate if it is read  or unread . Icons can also indicate if the message has an attachment , might be SPAM , or is locked , urgent , or low priority .

To **Reply**, **Forward**, **Lock**, or **Delete** a message, scroll to it and press **Options**.

To open a message, press . Then, you can press **Options** to use or store any phone numbers, email addresses, Web sites, or files in the message.

features

read and manage email



⬂ > ✉ Messages > Email Msgs

To **Reply**, **Forward**, **Lock**, or **Delete** a message, scroll to it and press **Options**.

To open a message, press . Then, you can press **Options** to use or store any phone numbers, email addresses, Web sites, or files in the message.

store message objects



Go to a multimedia message page, or scroll to an object in a message, then:

Options > **Store**

features

print message over Bluetooth™ connection



You can use a Bluetooth wireless connection to send a message from your phone to a printer.

••• > ✉ **Messages** > **Message Inbox, Email Msgs, Outbox, or Drafts**

Scroll to the message you want to print and press **Options** > **Print**.

You cannot print message **Templates**. For more about Bluetooth connections, see page 16.

features

store text messages on your SIM card



To store incoming text messages on your SIM card, press:

••• > ✉ **Messages**, then press **Options** > **Setup**
> **Message Setup** > **Text Msg Setup** > **Default Storage**
> **SIM Card**

features

edit email settings



You can edit the settings for your Email connections. To use email, you need to store your email **User ID** and **Password**.

•◉ > ✉ Messages, then press **Options > Setup > Email Msg Setup > Account Settings**

If you have more than one email account, select an account to edit.

Your phone shows a list of email settings. Here is where you store your email **User ID** and **Password**.

Note: To create a new account, select **[New Entry]** in the **Account Settings** list. Your display shows a folder for each email account under •◉ > ✉ Messages > Options > Setup > Email Msg Setup. Select **Account Settings** and press **Add/Edit**. Add a **[New Entry]**.

features

browser messages



Read messages received by your micro-browser:

•◉ > ✉ Messages > Browser Msgs

info services



Read subscription-based information services messages:

•◉ > ✉ Messages > Info Services

instant messaging

features

log in



•◉ > ✉ Messages > IM

Select an IM account to log in, or select **[New Account]** to set up an IM account.

features	
log in automatically 	
•◉ > ✉ Messages > IM, press the Options key, then > Offline Settings Turn on Auto-Login to start the IM login whenever you select •◉ > ✉ Messages > IM. Turn on Power-On Login to start the IM login whenever you turn on your phone.	
set IM ring style 	
Select a ring or vibration for new IM messages and contact alerts. •◉ > ⚙ Settings > Ring Styles > <i>style Detail</i> > IM	

personalizing

features	
language	
Set menu language: •◉ > ⚙ Settings > Initial Setup > Language	
scroll	
Set the scroll bar to Up/Down or Wrap Around in menu lists: •◉ > ⚙ Settings > Initial Setup > Scroll	
text marquee 	
Set the speed for scrolling text in your display: •◉ > ⚙ Settings > Initial Setup > Text Marquee	

features

activate ringer IDs

Activate ringer IDs assigned to phonebook entries and categories:

📱 > ⚙️ Settings > Ring Styles > *style* Detail
> Ringer IDs

ring volume

📱 > ⚙️ Settings > Ring Styles > *style* Detail
> Ring Volume

keypad volume

📱 > ⚙️ Settings > Ring Styles > *style* Detail
> Key Volume

features

reminders

Set a reminder for when you have not responded to an incoming call, message, or other event:

📱 > ⚙️ Settings > Ring Styles > *style* Detail
> Reminders

menu view

Show the main menu as graphic icons or as a text-based list:

📱 > ⚙️ Settings > Personalize > Menu > View

main menu

Reorder your phone's main menu:

📱 > ⚙️ Settings > Personalize > Menu > Reorder

features

show/hide menu icons



Show or hide menu feature icons in the home screen:

⬇️ > ⚙️ Settings > Personalize > Home Screen
> Home Keys > Icons

master reset

Reset all options **except** unlock code, security code, and lifetime timer:

⬇️ > ⚙️ Settings > Initial Setup > Master Reset

features

master clear

Caution: Master clear **erases all information you have entered** (including phonebook and datebook entries) **and content you have downloaded** (including photos and sounds) stored in your phone's memory. After you erase the information, you can't recover it.

⬇️ > ⚙️ Settings > Initial Setup > Master Clear

call times & costs

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, contact your service provider.

features

call times



Show call timers:

☎ > 📞 Call History, press the **Options** key,
then > **Call Times**

in-call timer



Show time or cost information during
a call:

☎ > ⚙ Settings > In-Call Setup > In-Call Timer

features

call cost



Show call cost trackers:

☎ > 📞 Call History, press the **Options** key,
then > **Call Cost**

handsfree

Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the

laws and regulations on the use of these products.

features	
speakerphone	
Activate the speakerphone during a call: Press the Speaker key (if available) or Options > Spkrphone On .	
auto answer (car kit or headset)	
Automatically answer calls when connected to a car kit or headset:  >  Settings > Car Settings or Headset > Auto Answer	
voice dial (headset)	
Enable voice dial with headset send/end key:  >  Settings > Headset > Voice Dial	

features	
auto handsfree (car kit)	
Automatically route calls to a car kit when connected:  >  Settings > Car Settings > Auto Handsfree	

data calls

To connect your phone with a USB cable, see page 28.

features	
send data	
Connect your phone to the device, then place the call through the device application.	

features

receive data or fax



Connect your phone to the device, then answer the call through the device application.

talk then fax



Connect your phone to the device, enter fax number, press **Options > Talk then Fax**, then press  to make the call.

features

set up Exchange ActiveSync



You can use the Internet to synchronize your phone's phonebook and datebook entries with an email account on a Microsoft® Exchange 2003 Server.

You need to know the email account's **user name** and **password**, the Microsoft® Exchange **server name**, and the **user domain name**. Confirm that the **Mobility** option is enabled on the email account, and that **data service** is activated with your phone service provider.

features

use Exchange ActiveSync



Once you set up an Exchange ActiveSync partner, you can schedule your phone to synchronize with the account automatically.

To **schedule** synchronization, press
☛ > ⚙ Settings > **Connection** > **MOTOSYNC**
> **Exchange**, press the **Options** key, then
> **Auto Sync Setup**. Enter the time and days you
want your phone to synchronize.

network

features

network settings



See network information and adjust network settings:

☛ > ⚙ Settings > **Network**

software update



Your service provider can send updated phone software over the air to your phone. When your phone receives a software update, you can choose to download it and install it later. To install a software update you downloaded:

☛ > ⚙ Settings > **Phone Status** > **Software Update**
> **Install Now**

personal organizer

features

set alarm

 >  Tools > Alarm Clock

turn off alarm

When an alarm happens:

To turn off the alarm, press the **Disable** key or . To set an eight-minute delay, press the **Snooze** key.

Note: The **Snooze** key is available only if the phone is already powered on when the alarm sounds.

features

add new datebook event

 >  Tools > Datebook, scroll to the day, press , scroll to **Create New Event**, and press .

If you set a reminder for a datebook event,  can appear at the top of your screen.

see datebook event

See or edit event details:

 >  Tools > Datebook, scroll to the day, and press .

Scroll to the event and press . To edit the details, press **Options** > **Edit**.

Tip: Keeping up with life can be tough work. To see a list of your upcoming events, open the datebook and press **Options** > **View** > **Organized Events**.

features

event reminder

When an event reminder happens:
To see reminder details, press the **View** key.
To close the reminder, press the **Exit** key.

send datebook event to another device

Send a datebook event to another phone, computer, or device:

•◂ >  **Tools > Datebook**, scroll to the day, press •◂, scroll to the event, press **Options > Send > with Bluetooth**

features

print datebook month, week, or day over Bluetooth™ connection

You can use a Bluetooth wireless connection to send a datebook month, week, or day from your phone to a printer.

•◂ >  **Tools > Datebook**

Go to the month, week, or day view and press **Options > Print**.

For more about Bluetooth connections, see page 16.

features

create voice record

Create a voice record:

 >  Media > Voice Record

Press  to start recording the new voice record. Press **Stop** when done. Press **Options** to select the following: **Discard**, **Preview**, **Send**, or **Apply as Ringtone**.

or

Press and hold the **Voice Record Key** and speak into the phone. Release the **Voice Record Key** when done.

Note: Recording phone calls is subject to varying state and federal laws regarding privacy and recording of conversations. Always obey the laws and regulations on the use of this feature.

features

play voice record

Play back a voice record:

 >  Media > Voice Records > Options
> Go to Voice Notes

calculator

 >  Tools > Calculator

currency converter

 >  Tools > Calculator, then press
Options > Exchange Rate

Enter exchange rate, press the **OK** key, enter amount, and press **Options** > **Convert Currency**.

security

features

SIM PIN

Caution: If you enter an incorrect PIN code three times before the correct code, your SIM card is disabled and your display shows **SIM Blocked**.

Lock or unlock the SIM card:

 >  **Settings** > **Security** > **SIM PIN**

lock feature

 >  **Settings** > **Security** > **Lock Application**

features

manage certificates



Enable or disable Internet access certificates stored on your phone:

 >  **Settings** > **Security** > **Certificate Mgmt**

Certificates are used to verify the identity and security of Web sites when you download files or share information.

fun & games

For basic information on the camera, see page 20.

features

view, delete, or manage pictures

Manage photos, pictures, and animations:

 >  Media > Graphics

To **delete** a file, scroll to it in the list and press **Options > Manage > Delete**.

To **copy or move** a file from your memory card () to your phone memory () scroll to it in the list and press **Options > Manage > Copy or Move > Phone**. You cannot copy or move some copyrighted files.



features

view, delete, or manage video clips

 >  Media > Videos

To **delete** a file, scroll to it in the list and press **Options > Manage > Delete**.

To **copy or move** a file from your memory card () to your phone memory () scroll to it in the list and press **Options > Manage > Copy or Move > Phone**. You cannot copy or move some copyrighted files.



features

hear, delete, or manage sounds

Manage ring tones and music that you have downloaded or composed:

•◂◃• >  **Media** > **Sounds**

Note: Your phone cannot receive data over an EDGE network while it is playing some sound files. Indicators appear at the top of your display when you can receive EDGE  data.

To **delete** a file, scroll to it in the list and press **Options** > **Manage** > **Delete**.

To **copy or move** a file from your memory card () to your phone memory () , scroll to it in the list and press **Options** > **Manage** > **Copy** or **Move** > **Phone**. You cannot copy or move some copyrighted files.



features

start micro-browser



Just press .

create playlist

Create a playlist:

•◂◃• >  **Media** > **Sounds** > **New Playlist**

Enter the **Name**. Select **Audio Files** to be included, and select the **Storage Device**.

download objects from Web page



Download a picture, sound, or other object from a Web page:

Press , go to the page that links to the file, scroll to the link, and select it.

To activate downloaded copyrighted files, press •◂◃• >  **Tools** > **Activation List** > *file type* > *file*. You can see file's **Status**, **Type**, **Activation**, and **Counts Remaining**.

features

store downloaded files in your phone or memory card

You can choose to store your downloaded files on your phone or your memory card you download choose where to store the files you download:

 >  **Settings** > **Phone Status**
> **Download Location** > **Memory Card** or **Phone**

To see how much memory is available on your phone or memory card, see page 27.

Web sessions



A *Web Session* stores settings that your phone uses to access the Internet. To select or create a Web session:

 >  **Internet** > **Web Sessions**

features

clear micro-browser history



Clear the micro-browser's history, cache, or cookies:

 >  **Internet** > **Browser Setup** > **Clear History**, **Reset Cache**, or **Clear Cookies**

download game or application



You can download a Java™ game or application the same way you download pictures or other objects:

Press , go to the page that links to the file, scroll to the link, and select it.

features

start game or application



Start a Java™ game or application:

⬇ > 🎮 **Games & Apps**, scroll to the game or application, press the *center key* ⬇.

Note: To install and run games stored on your memory card, press

⬇ > 🎮 **Games & Apps** > **[Download Games]**.

features

airplane mode

You can switch your phone to airplane mode to prevent it from communicating with the network. This lets you use games or other applications while you are on an airplane, without interfering with airplane communications.

Note: Your phone cannot make Bluetooth™ connections when **Airplane Mode** is on.

⬇ > ⚙️ **Settings** > **Airplane Mode** > **Airplane Mode**
> **On**

You can make the airplane mode option appear whenever you turn on your phone:

⬇ > ⚙️ **Settings** > **Airplane Mode**
> **Prompt At Power Up** > **On**

service and repairs

If you have questions or need assistance,
we're here to help.

Go to

www.motorola.com/consumer/support,
where you can select from a number of
customer care options. You can also contact
the Motorola Customer Support Center at
1-800-331-6456 (United States),
1-888-390-6456 (TTY/TDD United States for
hearing impaired), or 1-800-461-4575
(Canada).

Specific Absorption Rate Data

This model wireless phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg.¹ Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR

level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is 1.07 W/kg, and when worn on the body, as described in this user guide, is 1.19 W/kg. The SAR value for this product in its data transmission mode (body-worn use) is 0.88 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements).²

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://www.phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

European Union Directives Conformance Statement



Hereby, Motorola declares that this product is in compliance with

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives



The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at www.motorola.com/rtte. To find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the web site.



MOTOROLA

Important Safety and Legal Information

Safety and General Information

This section contains important information on the safe and efficient operation of your mobile device. Read this information before using your mobile device.*

Exposure to Radio Frequency (RF) Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

Your Motorola mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

For optimal mobile device performance and to be sure that human exposure to RF energy does not exceed the guidelines set forth in

* The information provided in this document supersedes the general safety information in user's guides published prior to May 1, 2006.

the relevant standards, always follow these instructions and precautions.

External Antenna Care

If your mobile device has an external antenna, use only a Motorola-supplied or approved replacement antenna. Use of unauthorized antennas, modifications, or attachments could damage the mobile device and/or may result in your device not complying with local regulatory requirements in your country.

DO NOT hold the external antenna when the mobile device is IN USE. Holding the external antenna affects call quality and may cause the mobile device to operate at a higher power level than needed.

Product Operation

When placing or receiving a phone call, hold your mobile device just like you would a landline phone.

If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case, or body harness. If you do not use a body-worn accessory supplied or approved by Motorola, keep the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body when transmitting.

When using any data feature of the mobile device, with or without an accessory cable, position the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body.

Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at: www.motorola.com.

RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your mobile device may cause interference with other devices.

Follow Instructions to Avoid Interference Problems

Turn off your mobile device in any location where posted notices instruct you to do so. These locations include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

Pacemakers

If you have a pacemaker, consult your physician before using this device.

Persons with pacemakers should observe the following precautions:

- ALWAYS keep the mobile device more than 20 centimeters (8 inches) from your pacemaker when the mobile device is turned ON.
- DO NOT carry the mobile device in the breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some mobile devices may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer or physician to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult your physician or the manufacturer of your device to determine if it is adequately shielded from RF energy.

Driving Precautions

Check the laws and regulations on the use of mobile devices in the area where you drive. Always obey them.

When using your mobile device while driving, please:

- Give full attention to driving and to the road. Using a mobile device may be distracting. Discontinue a call if you can't concentrate on driving.
- Use handsfree operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Responsible driving practices can be found in the "Smart Practices While Driving" section at the end of this guide and/or at the Motorola Web site: www.motorola.com/callsmart.

Operational Warnings

Obey all posted signs when using mobile devices in public areas, such as health care facilities or blasting areas.

Automobile Air Bags

Do not place a mobile device in the air bag deployment area.

Potentially Explosive Atmospheres

Areas with potentially explosive atmospheres are often but not always posted, and can include fueling areas such as below decks

on boats, fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

When you are in such an area, turn off your mobile device, and do not remove, install, or charge batteries. In such areas, sparks can occur and cause an explosion or fire.

Damaged Products

If your mobile device or battery has been submerged in water, punctured, or subjected to a severe fall, do not use it until you take it to a Motorola Authorized Service Center. Do not attempt to dry it with an external heat source, such as a microwave oven.

 
Batteries and Chargers

If jewelry, keys, beaded chains, or other conductive materials touch exposed battery terminals, this could complete an electrical circuit (short circuit), become very hot, and could cause damage or injury. Be careful when handling a charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects. **Use only Motorola Original batteries and chargers.**

Caution: To avoid risk of personal injury, do not dispose of your battery in a fire.



Your battery, charger, or mobile device may contain symbols, defined as follows:

Symbol	Definition
	Important safety information follows.
	Do not dispose of your battery or mobile device in a fire.
	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Do not throw your battery or mobile device in the trash.
	Your mobile device contains an internal lithium ion battery.
	Do not let your battery, charger, or mobile device get wet.
	Listening at full volume to music or voice through a headset may damage your hearing.

Choking Hazards

Your mobile device or its accessories may include detachable parts, which may present a choking hazard to small children. Keep your mobile device and its accessories away from small children.

Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service center.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing video games. These may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your physician before playing video games or enabling a flashing-lights feature (if available) on your mobile device.

Discontinue use and consult a physician if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave the

lights on in the room, take a 15-minute break every hour, and stop use if you are very tired.

Caution About High Volume Usage



Listening at full volume to music or voice through a headset may damage your hearing.

Repetitive Motion

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a physician.

Industry Canada Notice to Users

Operation is subject to the following two conditions: (1) This device may not cause interference and (2) This device must accept any interference, including interference that may cause undesired operation of the device. See RSS-GEN 7.1.5.

FCC Notice To Users

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

If your mobile device or accessory has a USB connector, or is otherwise considered a computer peripheral device whereby it can be connected to a computer for purposes of transferring data, then it is considered a Class B device and the following statement applies:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Motorola Limited Warranty for the United States and Canada

What Does this Warranty Cover?

Subject to the exclusions contained below, Motorola, Inc. warrants its telephones, pagers, messaging devices, and consumer and professional two-way radios (excluding commercial, government or industrial radios) that operate via Family Radio Service or General Mobile Radio Service, Motorola-branded or certified accessories sold for use with these Products ("Accessories") and Motorola software contained on CD-ROMs or other tangible media and sold for use with these Products ("Software") to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a consumer's exclusive remedy, and applies as follows to new Motorola Products, Accessories and Software purchased by consumers in the United States or Canada, which are accompanied by this written warranty:

Products and Accessories

Products Covered	Length of Coverage
Products and Accessories as defined above, unless otherwise provided for below.	One (1) year from the date of purchase by the first consumer purchaser of the product unless otherwise provided for below.
Decorative Accessories and Cases. Decorative covers, bezels, PhoneWrap™ covers and cases.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.
Monaural Headsets. Ear buds and boom headsets that transmit mono sound through a wired connection.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.

Products Covered	Length of Coverage
Consumer and Professional Two-Way Radio Accessories.	Ninety (90) days from the date of purchase by the first consumer purchaser of the product.
Products and Accessories that are Repaired or Replaced.	The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.

Exclusions

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola, are excluded from coverage.

Use of Non-Motorola Products and Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products, Accessories, Software or other peripheral equipment are excluded from coverage.

Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, or its authorized service centers, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products, Accessories or Software due to any communication service or signal you may subscribe to or use with the Products Accessories or Software is excluded from coverage.

Software

Products Covered	Length of Coverage
Software. Applies only to physical defects in the media that embodies the copy of the software (e.g. CD-ROM, or floppy disk).	Ninety (90) days from the date of purchase.

Exclusions

Software Embodied in Physical Media. No warranty is made that the software will meet your requirements or will work in combination with any hardware or software applications provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.

Software NOT Embodied in Physical Media. Software that is not embodied in physical media (e.g. software that is downloaded from the internet), is provided “as is” and without warranty.

Who Is Covered?

This warranty extends only to the first consumer purchaser, and is not transferable.

What Will Motorola Do?

Motorola, at its option, will at no charge repair, replace or refund the purchase price of any Products, Accessories or Software that does not conform to this warranty. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products, Accessories or parts. No data, software or applications added to your Product, Accessory or Software, including but not limited to personal contacts, games and ringer tones, will be reinstalled. To avoid losing such data, software and applications please create a back up prior to requesting service.

How to Obtain Warranty Service or Other Information

USA	Phones 1-800-331-6456 Pagers 1-800-548-9954 Two-Way Radios and Messaging Devices 1-800-353-2729
Canada	All Products 1-800-461-4575
TTY	1-888-390-6456
For Accessories and Software , please call the telephone number designated above for the product with which they are used.	

You will receive instructions on how to ship the Products, Accessories or Software, at your expense, to a Motorola Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, ACCESSORY OR SOFTWARE, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, SOFTWARE OR APPLICATIONS OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS, ACCESSORIES OR SOFTWARE TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another.

Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted Motorola software such as the exclusive rights to reproduce and distribute copies of the Motorola software. Motorola software may only be copied into, used in, and redistributed with, the Products associated with such Motorola software. No other use, including without limitation disassembly of such Motorola software or exercise of the exclusive rights reserved for Motorola, is permitted.

Hearing Aid Compatibility with Mobile Phones

Some Motorola phones are measured for compatibility with hearing aids. If the box for your particular model has “Rated for Hearing Aids” printed on it, the following explanation applies.

When some mobile phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label on the box.

The ratings are not guarantees. Results will vary depending on the user’s hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device’s telecoil (“T Switch” or “Telephone Switch”) than unrated phones. T4 is the better/higher of the two ratings. (Note that not all hearing devices have telecoils in them.)

Hearing devices may also be measured for immunity to this type of interference. Your hearing device manufacturer or hearing health professional may help you find results for your hearing device. The more immune your hearing aid is, the less likely you are to experience interference noise from mobile phones.

Information from the World Health Organization

Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF

exposure by limiting the length of calls or by using handsfree devices to keep mobile phones away from your head and body.

Source: WHO Fact Sheet 193

Further information: <http://www.who.int./peh-emf>

Product Registration

Online Product Registration:

[direct.motorola.com/hellomoto/
Motosupport/source/registration.asp](http://direct.motorola.com/hellomoto/Motosupport/source/registration.asp)

Product registration is an important step toward enjoying your new Motorola product. Registering helps us facilitate warranty service, and permits us to contact you should your product require an update or other service. Registration is for U.S. residents only and is not required for warranty coverage.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola Personal Communications Product you will need to provide a copy of your dated sales receipt to confirm warranty status.

Thank you for choosing a Motorola product.

Export Law Assurances

This product is controlled under the export regulations of the United States of America and Canada. The Governments of the United States of America and Canada may restrict the exportation

or re-exportation of this product to certain destinations. For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade.

Wireless: The New Recyclable

Your wireless mobile device can be recycled. Recycling your mobile device reduces the amount of waste disposed in landfills and allows recycled materials to be incorporated into new products.

The Cellular Telecommunications Industry Association (CTIA) and its members encourage consumers to recycle their mobile devices and have taken steps to promote the collection and environmentally sound recycling of end-of-life devices.

As a mobile device user, you have an important role in ensuring that this device is recycled properly. When it comes time to give this mobile device up or trade it in for a new one, please remember that the mobile device, the charger, and many of its accessories can be recycled. It's easy. To learn more about CTIA's Recycling Program for Used Wireless Devices, please visit us at:

[recycling.motorola.young-america.com/
index.html](http://recycling.motorola.young-america.com/index.html)

California Perchlorate Label

Some mobile phones use an internal, permanent backup battery on the printed circuit board that may contain very small amounts of perchlorate. In such cases, California law requires the following label:

"Perchlorate Material – special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate."

There is no special handling required by consumers.

Smart Practices While Driving

Drive Safe, Call SmartSM

Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas. Go to www.motorola.com/callsmart for more information.

Your mobile device lets you communicate by voice and data—almost anywhere, anytime, wherever wireless service is available and safe conditions allow. When driving a car, driving is your first responsibility. If you choose to use your mobile device while driving, remember the following tips:

- **Get to know your Motorola mobile device and its features such as speed dial and redial.** If available, these features help you to place your call without taking your attention off the road.
- **When available, use a handsfree device.** If possible, add an additional layer of convenience to your mobile device with one of the many Motorola Original handsfree accessories available today.
- **Position your mobile device within easy reach.** Be able to access your mobile device without removing your



eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.

- **Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- **Do not take notes or look up phone numbers while driving.** Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility—driving safely.
- **Dial sensibly and assess the traffic; if possible, place calls when your car is not moving or before pulling into traffic.** If you must make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- **Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations that can divert your attention away from the road.

- **Use your mobile device to call for help.** Dial 911 or other local emergency number in the case of fire, traffic accident, or medical emergencies.*
- **Use your mobile device to help others in emergencies.** If you see an auto accident, crime in progress, or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.*
- **Call roadside assistance or a special non-emergency wireless assistance number when necessary.** If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.*

* Wherever wireless phone service is available.

index

A

- accessories 10, 68
- accessory connector port 1
- activation list 77
- active line, changing 55
- ActiveSync 70, 71
- airplane mode 79
- alarm clock 72
- alert
 - set 38, 43
 - turn off 38, 47
- animation 76
- answer a call 13, 46
- attach a number 48, 52
- audio player 18

B

- backlight 46
- battery 11, 12
 - extending battery life 10
- battery indicator 33
- battery life, extending 45, 46
- Bluetooth connection
 - datebook entry, printing 73
 - datebook entry, sending 73
 - description 16
 - messages, printing 63
 - phonebook entries 60
- brightness 46
- browser messages 64
- browser. See micro-browser

C

- cables 28
- calculator 74
- call
 - answering 13, 46
 - barring 54
 - end 13
 - ending 13
 - forwarding 54
 - making 13
 - timers 68
 - waiting 53
- caller ID 48, 50, 58
- camera 20
- car kit 68
- categories 58, 59
- center key 1, 38

- center select key 9
- certificate management 75
- clock 44
- codes 41, 42
- conference call 54
- copy files 17
- copyrighted files, activating 77
- costs, tracking 68

D

- data call 69, 70
- data indicator 32
- date, setting 44
- datebook 72, 73
- delayed answer 47
- dial a phone number 13, 55
- dialed calls 47
- digital audio 18
- display 2, 31, 45
- downloaded files

- activating 77
 - from Web pages 77
 - in messages 62
 - storage location 78
- drafts folder 25
- DTMF tones 48, 55

E

- earpiece volume 38
- EDGE indicator 32
- email
 - reading and managing 62
 - sending 61
 - settings 64
- emergency number 50
- end a call 13
- end key 1, 13
- Enter Unlock Code message 41
- export regulations 99
- external display 22, 41

F

- fax call 69, 70
- fixed dial 55
- flip 13, 46
- forward calls 54

G

- games 78
- GPRS indicator 32
- group mailing list 59

H

- handsfree speaker 41
- headset 68
- headset jack 1
- hearing aids 97
- hold a call 53
- home screen 2, 31, 67

I

IM 64
Incoming Call message 50
information services 64
instant messaging. See IM
international access code 53
iTAP text entry mode 35

J

Java applications 78

K

keypad 46, 66

L

language 65
linking. See Bluetooth
 connection
lock
 application 75

phone 42

SIM card 75

Low Battery message 33

M

make a call 13
master clear 67
master reset 67
memory card 26
menu 2, 9, 31, 65, 66
menu icons 31, 66, 67
message 61, 62, 63
message indicator 26, 33
message reminders 66
micro-browser 64, 77, 78
Missed Calls message 49
MMS, defined 25
MOTOSYNC 70, 71
MP3 sound files 18, 19
multimedia message 25, 61,
 62, 63

music 77

mute a call 53

N

navigation key 1, 9, 38
network settings 71
notepad 52
number. See phone number
numeric entry mode 37

O

object exchange 17
1-touch dial 56
open to answer 46
optional accessory 10
optional feature 9

P

pairing. See Bluetooth
 connection

passwords. See codes
perchlorate label 100
personalize 65
phone number 15, 55
phonebook 48, 52, 55, 56
photo 20, 76
picture 76
picture ID 50, 58
PIN code 13, 41, 75
PIN2 code 41
power key 1, 13

Q

quick dial 55

R

received calls 47
recent calls 47
recycling 99
redial 49
reminders 66

restrict calls 54
return a call 49
ring style indicator 33
ring style, setting 38, 43
ring tone 77
ringer ID 50, 57, 66
ringer volume 38, 66
roam indicator 33

S

safety information 86
safety tips 101
screen saver 45
scrolling 65
security code 41
send key 1, 13
signal strength indicator 32
silent answer 47
SIM Blocked message 12,
75
SIM card 10, 13, 41, 63, 75

skin 45
soft keys 1, 31
software update 71
speakerphone 68
speed dial 56
store your number 15
symbol entry mode 37
synchronizing 70, 71

T

tap text entry mode 36
telephone number. See
phone number
text entry 34
text marquee 65
text message 62, 63
theme 45
time zone 44
time, setting 44
timers 68
transfer a call 54

TTY device 54
turn on/off 12

U

unlock
 application 75
 phone 13, 41, 42
 SIM card 75
unlock code 41, 42
USB cables 28

V

video clip 76
videos 23
voice commands 38
voice dial 38, 69
voice message 61
voice record 74, 77
voicemail 51
voicemail message indicator
 33, 51

volume 38, 66

W

wallpaper 44
warranty 93
Web pages 77
Web sessions 78
WHO information 98

Y

your phone number 15

