

**MOTOROLA**

# User's Guide



## DIGITAL WIRELESS TELEPHONE

 




# Welcome

---

Welcome to the world of Motorola digital wireless communications! We are pleased that you have chosen the Motorola  Series 120c wireless phone to keep you connected with ease.

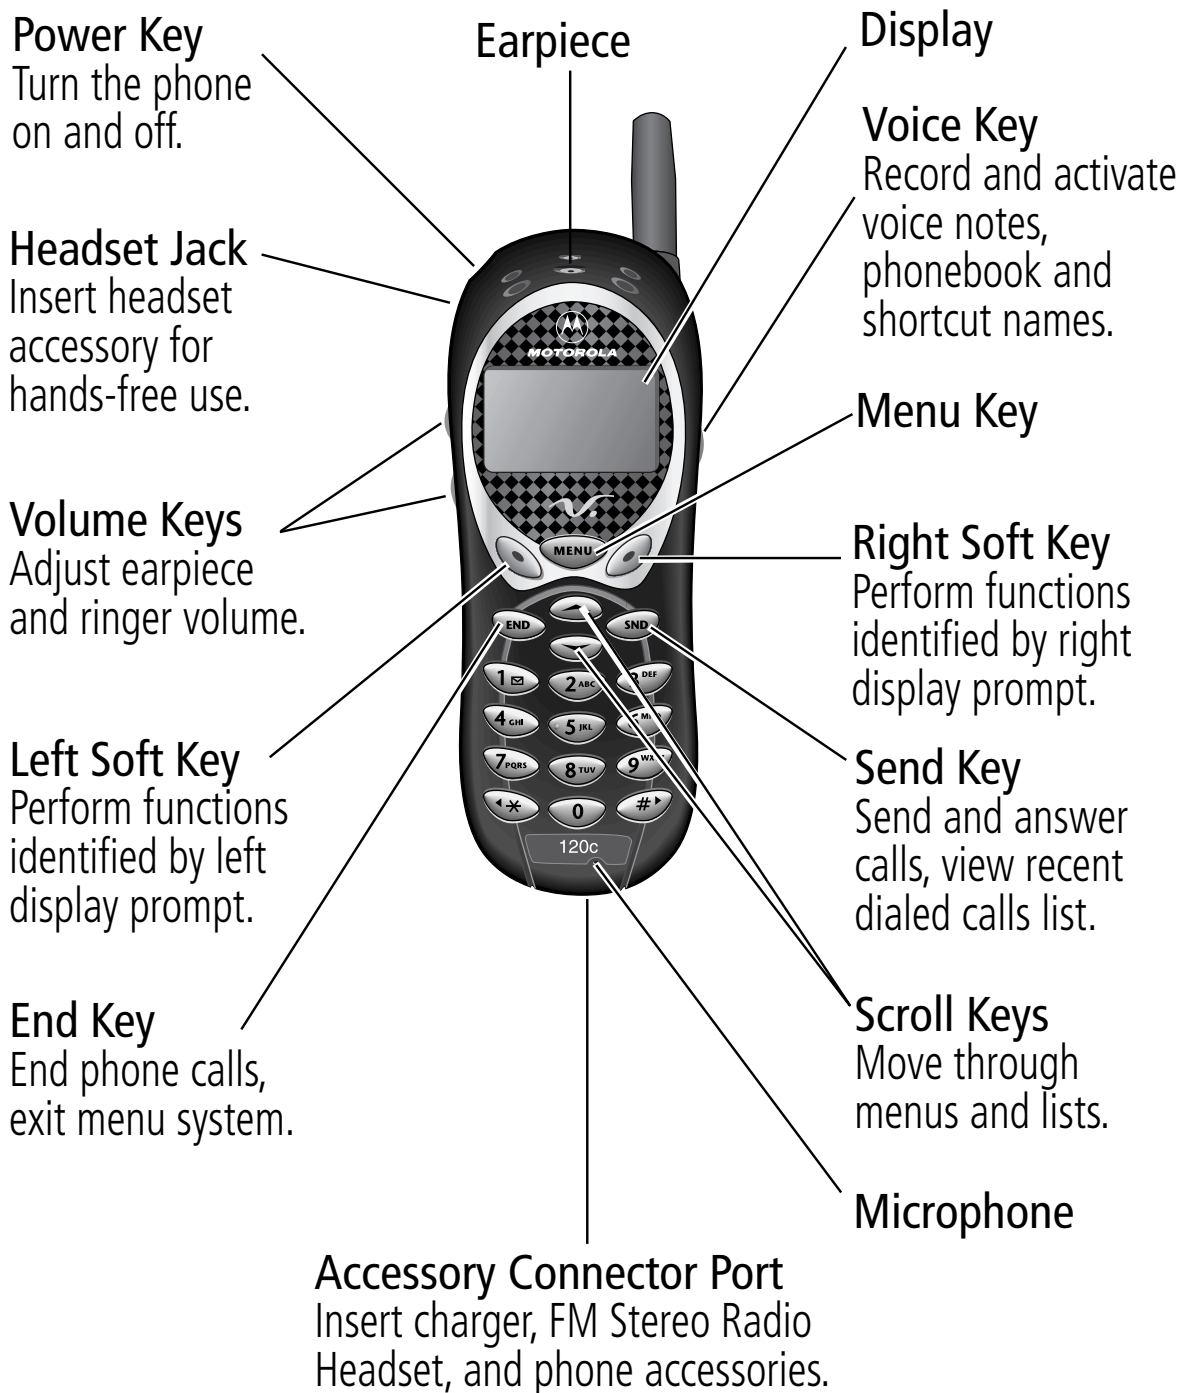

Personal Communications Sector  
600 North U.S. Highway 45  
Libertyville, Illinois 60048  
1-800-331-6456 (United States)  
1-888-390-6456 (TTY/TDD United States)  
1-800-461-4575 (Canada)  
[www.motorola.com](http://www.motorola.com) (United States)  
[www.motorola.ca](http://www.motorola.ca) (Canada)

MOTOROLA, the Stylized M Logo and all other trademarks indicated as such herein are trademarks of Motorola, Inc. ® Reg. U.S. Pat. & Tm. Off. TrueSync, Sidekick, Starfish, and the Stylized Starfish Logo are registered trademarks of Starfish Software, Inc., a wholly owned independent subsidiary of Motorola, Inc. All other product or service names are the property of their respective owners.

© 2001 Motorola, Inc. All rights reserved. Printed in the U.S.A.

## **Software Copyright Notice**

The Motorola products described in this manual may include copyrighted Motorola and third party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Manual number: 6809436A16-A  
Cover number: 8988485L07-O



# Menu Map

## Main Menu

- **Recent Calls**
  - Received Calls
  - Dialed Calls
  - Notepad
  - Call Times
- **Phonebook**
- **Quick Dial**
- **Radio**
- **Messages**
  - Voicemail
  - Text Msgs
  - Browser Alerts
  - Quick Notes
  - Outbox
  - Drafts
- **Shortcuts**
- **Voice Notes**
- **Browser**
- **Settings**  
(see next page)

**Note:** This is the standard phone menu layout. You or your service provider may have changed the menu layout or changed some feature names. Not all features may be available for all users.

For example, the **Radio** feature on the main menu (left) is displayed only when the optional FM Stereo Radio Headset accessory is plugged into the accessory connector port on your phone (see phone illustration, page 1).

For a description of the standard menu features, see pages 47 to 58.

| Shortcuts                                                                             |
|---------------------------------------------------------------------------------------|
| <b>Change display zoom:</b><br>Press <b>MENU</b> , then<br>press and hold <b>MENU</b> |
| <b>Lock/unlock keypad:</b><br>Press <b>MENU</b> <b>*X</b>                             |
| <b>Display my phone number:</b><br>Press <b>MENU</b> <b>#P</b>                        |
| <b>Dial voicemail number:</b><br>Press and hold <b>1</b> <b>☐</b>                     |
| <b>Go to dialed calls list:</b><br>Press <b>SND</b>                                   |
| <b>Exit menu system:</b><br>Press <b>END</b>                                          |

# Settings Menu



- **Ring Styles**
  - Style
  - *Style* Detail
  - My Tones
- **Phone Status**
  - My Tel. Number
  - Battery Meter
  - Other Information
- **Connection**
  - Incoming Call
- **In-Call Setup**
  - In-Call Timer
  - Answer Options
- **Security**
  - Phone Lock
  - Lock Keypad
  - Lock Application
  - Restrict Calls
  - New Passwords



- **Other Settings**
  - Personalize
    - Main Menu
    - Keys
    - Greeting
    - Banner
    - Quick Dial
  - Initial Setup
    - Time and Date
    - Auto PIN Dial
    - Auto Redial
    - Backlight
    - Zoom
    - Scroll
    - Animation
    - Language
    - Contrast
    - DTMF
    - Master Reset
    - Master Clear
  - Network
  - Car Settings
  - Headset

# Contents

---

|                                       |    |
|---------------------------------------|----|
| <b>Menu Map</b>                       | 3  |
| <b>About This Guide</b>               | 8  |
| <b>Safety and General Information</b> | 10 |
| <b>Getting Started</b>                | 17 |
| What's in the Box?                    | 17 |
| Installing the Battery                | 17 |
| Charging the Battery                  | 18 |
| Turning Your Phone On                 | 19 |
| Sending a Call                        | 20 |
| Ending a Call                         | 20 |
| Receiving a Call                      | 21 |
| Displaying Your Phone Number          | 21 |
| <b>About Your Phone</b>               | 22 |
| Display                               | 22 |
| Changing the Zoom Setting             | 25 |
| Volume Keys                           | 25 |
| Battery Use                           | 26 |
| <b>Sending and Receiving Calls</b>    | 28 |
| Redialing a Number                    | 28 |
| Using Automatic Redial                | 28 |
| Caller ID                             | 29 |
| Dialing an Emergency Number           | 29 |
| Dialing With Speed Dial               | 30 |
| Dialing With One-Touch Dial           | 31 |
| Additional Dialing Features           | 31 |
| <b>Using Features While On a Call</b> | 34 |
| Using Call Waiting                    | 34 |
| Making a Three-Way Call               | 34 |

# Contents

|                                                           |    |
|-----------------------------------------------------------|----|
| Additional On-Call Features . . . . .                     | 35 |
| <b>Using the Menu</b> . . . . .                           | 36 |
| Navigating to a Feature . . . . .                         | 36 |
| Selecting a Feature Option . . . . .                      | 37 |
| Entering Feature Information . . . . .                    | 38 |
| <b>Entering Text.</b> . . . . .                           | 40 |
| Choosing a Text Mode . . . . .                            | 40 |
| Tap Method . . . . .                                      | 41 |
| Symbol Mode . . . . .                                     | 43 |
| Predictive Text Entry with iTAP™ Software . . . . .       | 44 |
| <b>Menu Feature Descriptions.</b> . . . . .               | 47 |
| <b>Phonebook</b> . . . . .                                | 59 |
| Fields in a Phonebook Entry . . . . .                     | 59 |
| Storing a Phonebook Entry . . . . .                       | 60 |
| Recording a Voice Name For a Phonebook Entry . . . . .    | 62 |
| Dialing a Phonebook Entry . . . . .                       | 63 |
| <b>Radio</b> . . . . .                                    | 65 |
| Turning the Radio On and Off . . . . .                    | 65 |
| Tuning a Station . . . . .                                | 65 |
| Storing a Preset . . . . .                                | 66 |
| Selecting a Preset . . . . .                              | 66 |
| Sending and Receiving Calls With the Radio On . . . . .   | 66 |
| <b>Messages—Voicemail</b> . . . . .                       | 68 |
| Storing Your Voicemail Number . . . . .                   | 68 |
| Receiving a New Voicemail Message . . . . .               | 68 |
| Listening to a Voicemail Message . . . . .                | 69 |
| Turning Off the Voice Message Waiting Indicator . . . . . | 69 |
| <b>Messages—Text</b> . . . . .                            | 70 |
| Setting Up the Text Message Inbox . . . . .               | 70 |

# Contents

|                                                           |     |
|-----------------------------------------------------------|-----|
| Receiving a Text Message . . . . .                        | 71  |
| Reading, Locking, or Deleting a Text Message . . . . .    | 72  |
| Sending a Text Message . . . . .                          | 73  |
| Sending a Quick Note Text Message . . . . .               | 75  |
| <b>Voice Notes</b> . . . . .                              | 78  |
| Recording a Voice Note . . . . .                          | 78  |
| Playing a Voice Note . . . . .                            | 79  |
| <b>Micro-Browser</b> . . . . .                            | 80  |
| Starting a Micro-Browser Session . . . . .                | 80  |
| Interacting With Web Pages . . . . .                      | 81  |
| <b>Adjusting Your Settings</b> . . . . .                  | 82  |
| Ring Styles . . . . .                                     | 82  |
| Reordering Menu Items . . . . .                           | 88  |
| Customizing a Soft Key Function . . . . .                 | 89  |
| <b>Security</b> . . . . .                                 | 90  |
| Assigning a New Code or Password . . . . .                | 90  |
| Locking and Unlocking Your Phone . . . . .                | 90  |
| Locking and Unlocking Your Keypad . . . . .               | 92  |
| <b>Troubleshooting</b> . . . . .                          | 93  |
| <b>Programming Instructions</b> . . . . .                 | 97  |
| <b>Specific Absorption Rate Data</b> . . . . .            | 98  |
| <b>Additional Health and Safety Information</b> . . . . . | 101 |
| <b>Warranty</b> . . . . .                                 | 110 |
| <b>Export Law Assurances</b> . . . . .                    | 118 |
| <b>Index</b> . . . . .                                    | 119 |
| <b>Wireless Phone Safety Tips</b> . . . . .               | 127 |

# About This Guide

---

## Using Your Phone's Features

This user guide introduces you to the many features in your Motorola  phone. A reference guide for your phone is also available that explains the phone's features in more detail. To obtain a copy of the reference guide or another copy of this user guide, see the Motorola Web site at:

<http://motorola.com/consumer/manuals> (United States)

<http://www.motorola.ca/manuals> (Canada)

or contact the Motorola Customer Call Center at 1-800-331-6456 in the United States or 1-800-461-4575 in Canada.

## Navigating To a Menu Feature

You can access many of your phone's features through the menu system. This guide shows you how to navigate to a specific menu feature as follows:

### Find the Feature

 > Recent Calls  
> Dialed Calls

The > symbol means that you should scroll to and select the feature. This example shows that you must press , scroll to and select **Recent Calls**, then scroll to and select **Dialed Calls** to view the dialed calls list.

# About This Guide

## Optional Features



Features marked with this label are optional network and/or subscription-dependent features. These features may not be offered by all service providers in all geographical areas. Contact your service provider for information about availability.

## Optional Accessories



Features marked with this label require the use of an optional Motorola Original™ accessory.

# ***Safety and General Information***

---

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION. READ THIS INFORMATION BEFORE USING YOUR PHONE.

## ***RF Operational Characteristics***

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits radio frequency (RF) energy. The phone operates in the frequency range of 824 MHz to 849 MHz in analog and digital mode and 1851.25 MHz to 1908.75 MHz in digital mode.

When you communicate with your phone, the system handling your call controls the power levels at which your phone transmits. The output power level typically may vary over a range from 0.05 watts to 0.44 watts in analog mode and 0.0 watts to 0.24 watts in digital mode.

## ***Exposure To Radio Frequency Energy***

Your Motorola phone is designed to comply with the following national and international standards and guidelines regarding exposure of human beings to radio frequency electromagnetic energy (EME):

- United States Federal Communications Commission, Code of Regulations; 47 CFR part 2 sub-part J
- American National Standards Institute (ANSI) / Institute of Electrical and Electronic Engineers (IEEE) C95. 1-1992



- Institute of Electrical and Electronic Engineers (IEEE) C95.1-1999 Edition
- National Council on Radiation Protection and Measurements (NCRP) of the United States, Report 86, 1986
- International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1998
- Ministry of Health (Canada) Safety Code 6. Limits of Human Exposure to Radiofrequency Electromagnetic Fields in the Frequency Range from 3 kHz to 300 GHz, 1999
- Australian Communications Authority Radiocommunications (Electromagnetic Radiation-Human Exposure) Standard 1999

To assure optimal phone performance and make sure human exposure to radio frequency electromagnetic energy is within the guidelines set forth in the above standards, always adhere to the following procedures:

## ***Portable Phone Operation and EME Exposure***

### ***Antenna Care***

**Use only the supplied or an approved replacement antenna.** Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

# ***Safety and General Information***

**Do NOT hold the antenna when the phone is in use.**

Holding the antenna affects call quality and may cause the phone to operate at a higher power level than needed.

## ***Phone Operation***

When placing or receiving a phone call, hold your phone as you would a wireline telephone. **Speak directly into the microphone.**

## ***Body-Worn Operation***

To maintain compliance with FCC/Health Canada RF exposure guidelines, if you wear a phone on your body when transmitting, always place the phone in a **Motorola-supplied or approved clip, holder, holster, case, or body harness for this product.** Use of non-Motorola-approved accessories may exceed FCC/Health Canada RF exposure guidelines. **If you do not use a body-worn accessory, and are not holding the phone in the normal use position at the ear, ensure the phone and its antenna are at least one inch (2.5 centimeters) from your body when transmitting.**

## ***Data Operation***

When using any data feature of the phone, with or without an accessory cable, **position the phone and its antenna at least one inch (2.5 centimeters) from your body.**

## ***Approved Accessories***

For a list of approved Motorola accessories, visit our website at [www.motorola.com](http://www.motorola.com).



## ***Electromagnetic Interference/ Compatibility***

**Note:** Nearly every electronic device is susceptible to electromagnetic interference (EMI) if inadequately shielded, designed, or otherwise configured for electromagnetic compatibility.

## ***Facilities***

To avoid electromagnetic interference and/or compatibility conflicts, turn off your phone in any facility where posted notices instruct you to do so. Hospitals or health care facilities may be using equipment that is sensitive to external RF energy.

## ***Aircraft***

When instructed to do so, turn off your phone when on board an aircraft. Any use of a phone must be in accordance with applicable regulations per airline crew instructions.

## ***Medical Devices***

### ***Pacemakers***

The Advanced Medical Technology Association recommends that a minimum separation of 6 inches (15 centimeters) be maintained between a handheld wireless phone and a pacemaker. These recommendations are consistent with the independent research by, and recommendations of, the United States Food and Drug Administration.

# ***Safety and General Information***

Persons with pacemakers should:

- ALWAYS keep the phone more than six inches (15 centimeters) from your pacemaker when the phone is turned ON.
- NOT carry the phone in the breast pocket.
- use the ear opposite the pacemaker to minimize the potential for interference.
- turn OFF the phone immediately if you have any reason to suspect that interference is taking place.

## **Hearing Aids**

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

## **Other Medical Devices**

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

## ***Safety and General***

### ***Use While Driving***

Check the laws and regulations on the use of phones in the area where you drive. Always obey them.

When using your phone while driving, please:



- give full attention to driving and to the road.
- use hands-free operation, if available.
- pull off the road and park before making or answering a call if driving conditions so require.

## ***Operational Warnings***

### ***For Vehicles With an Air Bag***

Do not place a portable phone in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a portable phone is placed in the air bag deployment area and the air bag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.

### ***Potentially Explosive Atmospheres***

Turn off your phone prior to entering any area with a potentially explosive atmosphere, unless the phone is a model specifically identified as being "Intrinsically Safe." Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

**Note:** The areas with potentially explosive atmospheres referred to above include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders, and any other area where you would normally be advised to turn off your vehicle engine. Areas with potentially explosive atmospheres are often but not always posted.

## ***Blasting Caps and Areas***

To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted: "Turn off two-way radio." Obey all signs and instructions.

## ***Operational Cautions***

### ***Antennas***

**Do not use any portable phone that has a damaged antenna.** If a damaged antenna comes into contact with your skin, a minor burn can result.

### ***Batteries***

All batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewelry, keys, or beaded chains touches exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects.

ITC01-076

# Getting Started

---



## What's in the Box?

Your digital wireless phone typically comes equipped with a battery and a charger. Other accessory options can customize your phone for maximum performance and portability.

To purchase Motorola Original™ accessories, please contact the Motorola Customer Call Center at 1-800-331-6456 in the United States or 1-800-461-4575 in Canada.

## Installing the Battery

Before you can use your phone, you need to install and charge the battery.



Your phone is designed to be used only with Motorola Original batteries and accessories. We recommend that you store batteries in their protective cases when not in use.

### Do This

- 1 Remove the battery from its protective clear plastic case.
- 2 If the phone's battery door is already in place, lightly slide down the battery door release latch and lift the battery door off of the phone.



# Getting Started

## Do This

- 3 Insert the battery, printed arrows first, into the battery compartment and push down.



- 
- 4 Replace the battery door.
- 

## Charging the Battery

Before you can use your phone, you need to install and charge the battery.

## Do This

- 1 Plug the travel charger into your phone with the release tab facing up.



- 
- 2 Plug the other end of the travel charger into the appropriate electrical outlet.
  - 3 When your phone indicates that the battery is fully charged, press the release tab and remove the travel charger.
-



## Turning Your Phone On

### Do This

- 1 Press and hold   
(the power key)



### To

turn on your phone

- 2 Enter your four-digit unlock code and press **OK** ()

unlock your phone, if necessary

The unlock code is originally set to 1234, but in some instances your service provider may program a new code.

## Sending a Call

To call a number, your phone must be turned on, be unlocked, and have a network connection with adequate signal strength.

| Do This                        | To                                                                                                                                                                                                                            |
|--------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 Extend the antenna.          | optimize signal reception<br><b>Tip:</b> Your phone uses a two-stage antenna that must be fully extended for proper operation. You may have to pull on the antenna a second time to extend the antenna to its maximum length. |
| 2 Press the keypad keys        | dial the phone number (up to 32 digits)<br><b>Tip:</b> If you make a mistake, press <b>DELETE</b> (🗑️) to delete the last digit, or press and hold <b>DELETE</b> (🗑️) to clear all digits.                                    |
| 3 Press <b>SEND</b> (send key) | send the call                                                                                                                                                                                                                 |

**Note:** You can make an emergency call even when the phone is locked. See “Dialing an Emergency Number” on page 29.

## Ending a Call

| Press                | To           |
|----------------------|--------------|
| <b>END</b> (end key) | end the call |



## Receiving a Call

To receive a call, your phone must be turned on and have a network connection with adequate signal strength. If your phone is locked, you must unlock the phone to answer the call.

When you receive a call, your phone rings and/or vibrates and displays an incoming call message.

| Press                                                                                                                                                                                    | To              |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
|  or <b>ANSWER</b> (  ) | answer the call |

## Displaying Your Phone Number

From the idle display:

| Press                                                                                                                                                                   | To                    |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------|
|   | see your phone number |

# ***About Your Phone***

---


See page 1 for a diagram of your phone that describes basic phone components.

## ***Display***

The top section of the display shows phone status indicators. The following illustration shows some of the common indicators that you may see at the top of the display when using your phone.

Messages, phone numbers, and menu options appear in the middle of the display. Text labels at the bottom corners of the display show the current soft key functions. A  (menu) indicator in the bottom center of the display indicates that you can open the main menu or a feature sub-menu to see more options. For more information about the soft key and menu key labels, see “Using the Menu” on page 36.

 Some of the phone functions described in this guide must be performed from the idle display. The term *idle display* refers to the standard display that you see when your phone is on and ready to use, when you are *not* on a call or using the menu system.

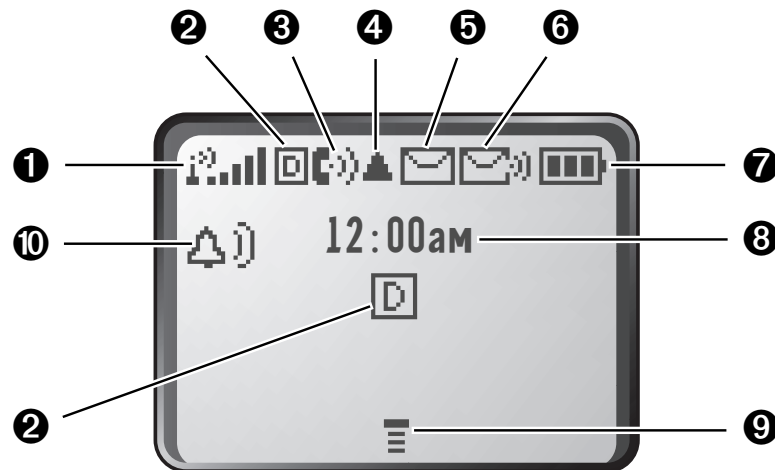

**1 Signal Strength Indicator** Shows the strength of your phone's connection with the network.

Strong      No signal

You cannot send or receive calls when the "no signal" indicator is displayed.



## **2 Digital (D) or Analog (A) Signal**

**Indicators** Your service provider may use one or both of these indicators to indicate whether you are receiving a digital or analog signal.

**3 In Use Indicator** Appears when a call is in progress.

**4 Roam Indicator** Appears when your phone uses another network system outside your home network. When you leave your home network area, your phone *roams* or seeks another network.

# About Your Phone



**⑤ Message Waiting Indicator** Appears when your phone receives a text message.



**⑥ Voice Message Waiting Indicator** Appears when you receive a voicemail message.

**⑦ Battery Level Indicator** Shows the amount of charge left in your battery. The more segments visible, the greater the charge.

High Empty

Recharge your battery as soon as possible when you see the **Low Battery** warning message.



**⑧ Clock** Shows the current time. In some instances, your phone may prompt you to enter the correct time when you turn it on.

**⑨ Menu Indicator** Indicates that you can press to open a menu. See "Using the Menu" on page 36.

**⑩ Alert Setting Indicator** Shows the current selected alert. The default alert setting is a ringer.



Loud ring



Soft ring



Vibrate



Ring and vibrate



Silent



## Changing the Zoom Setting

You can set your phone's display to show either three lines or two lines of text plus soft key labels. Three lines of text display more information, while two lines increase text size.

To change the display view, press **MENU** once, then press and hold **MENU** again within two seconds of the first press.

You can also adjust the zoom setting from the menu. See the "Zoom" item on page 56.

## Volume Keys

Use the upper and lower volume keys to adjust your phone's earpiece and ringer volume. The volume keys are located on the left side of the phone.

| When                  | Press       | To                                           |
|-----------------------|-------------|----------------------------------------------|
| During a call         | volume keys | increase or decrease earpiece speaker volume |
| From the idle display | volume keys | increase or decrease ringer volume           |

You can also use the volume keys to scroll up or down through menus and lists.

To change keypad volume, see "Customize an Alert Style" on page 83.

## ***Battery Use***

**Caution:** To prevent injuries or burns, do not allow metal objects to contact or short-circuit the battery terminals.

To maximize your battery's performance:

- Always use Motorola approved batteries and battery chargers. The phone warranty does not cover damage caused from using non-Motorola batteries and/or battery chargers.
- New batteries or batteries that have been stored for long periods of time may require a longer charge time.
- Maintain the battery at or near room temperature when charging.
- Do not expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- When you do not intend to use a battery for a while, store it uncharged in a cool, dark, dry place, such as a refrigerator.
- Over extended periods of time, batteries gradually wear down and require longer charging times. This is normal. If you charge your battery regularly and notice a decrease in talk time or an increase in charging time, then it is probably time to purchase a new battery.
- The more you talk on the phone or use phone features (like sending text messages), the less standby time your battery has.



The rechargeable batteries that power this product must be disposed of properly and may need to be recycled. Refer to your battery's label for battery type. Contact your local recycling center for proper disposal methods. Never dispose of batteries in a fire because they may explode.

# ***Sending and Receiving Calls***

---

For basic instructions on how to send a call, end a call, and receive a call, see page 20 of the “Getting Started” section.

## ***Redialing a Number***

If you hear an ordinary busy signal, the phone number you dialed is busy.

| Press                                                                               | To                     |
|-------------------------------------------------------------------------------------|------------------------|
| 1  | hang up                |
| 2  | redial the busy number |

## ***Using Automatic Redial***

If the network is busy, you hear a fast busy signal, and your phone displays the message **Call Failed**.

When automatic redial is turned on, your phone automatically repeats the call attempt over the next four minutes. When the call goes through, your phone rings or vibrates one time, displays the message **Redial Successful**, and then connects the call.

You must turn on automatic redial to use this feature. See the “Auto Redial” option on page 56 to turn on automatic redial.

When automatic redial is turned off, you can manually activate the feature to redial a phone number. When you hear a busy signal and see the **Call Failed** message:

| Press                                                                                                                                                                                       | To                        |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------|
|  or <b>RETRY</b> (  ) | activate automatic redial |



## Caller ID



The *calling line identification* (caller ID) feature lets you see who is calling before you answer.

- If the caller's name is stored in your phonebook, the phone automatically displays the name. Otherwise, the phone displays the caller's phone number.
- If caller ID information is not available, your phone displays the message **Incoming Call**.

## Dialing an Emergency Number

Your service provider programs one or more emergency phone numbers (such as 911) that you can call under any circumstances. You can dial and call the emergency number even when your phone or keypad is locked, or when you are prompted to enter a code or password.

**Note:** Emergency numbers vary by country. Your phone's emergency number(s) may not work in all locations.

To call the emergency number at any time:

| Press                                                                                 | To                                      |
|---------------------------------------------------------------------------------------|-----------------------------------------|
| 1 keypad keys                                                                         | dial the emergency number (such as 911) |
| 2  | call the emergency number               |

# ***Sending and Receiving Calls***

When you call an emergency number, your phone displays **Emergency Mode**. During the next ten minutes, the emergency operator may place a call back to your phone, unless you make another call or turn the phone off.

## ***Dialing With Speed Dial***

The *speed dial* feature lets you dial any phonebook entry with a minimal number of keypresses.

Whenever you store an entry in your phonebook, the entry is assigned a unique speed dial number. The speed dial number identifies the location where the entry is stored in phonebook memory. If you know the speed dial number for the phonebook entry you want to call, you can use the speed dial feature.

| Press                                                                                 | To                                                                                                                       |
|---------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------|
| 1    keypad keys                                                                      | enter the one-, two-, or three-digit speed dial number for the entry you want to dial                                    |
| 2  | submit the number                                                                                                        |
|                                                                                       | <b>Note:</b> On some networks, you can skip this step for phonebook entries stored in speed dial locations 1 through 99. |
| 3  | call the entry                                                                                                           |



To make an entry in the phonebook or view an existing entry's speed dial number, see "Storing a Phonebook Entry" on page 60.



## ***Dialing With One-Touch Dial***

You can call phonebook entries 2 through 9 with the push of a single key. Just press and hold the one-digit speed dial number for one second.

You *cannot* use one-touch dial to call phonebook entry number 1, since the  key is reserved for dialing your voicemail number. See “Listening to a Voicemail Message” on page 69.

To store entries in locations 2 through 9 in the phonebook, see “Storing a Phonebook Entry” on page 60.

## ***Additional Dialing Features***

In addition to pressing numbers on your keypad, you can insert numbers or characters and send calls in a variety of ways.

While dialing (with digits visible in the display):

| <b>Do This</b>                                                                                                      | <b>To</b>                                                                                    |
|---------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------|
| Press <br>> <b>Attach Number</b> | attach a number from the phonebook or recent calls list to the end of the digits you entered |
| Press <br>> <b>Send Message</b>  | create a text message addressed to the number entered                                        |

# ***Sending and Receiving Calls***

| Do This                                                                                                                                                                                                                                                                                                                                                             | To                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>Press  and then scroll to and select one of the following:</p> <ul style="list-style-type: none"><li>• <b>Insert Pause</b><br/>(to insert a <b>p</b>)</li><li>• <b>Insert Wait</b><br/>(to insert a <b>w</b>)</li><li>• <b>Insert 'n'</b><br/>(to insert an <b>n</b>)</li></ul> | <p>insert a special character when making a call that requires you to dial and send additional digits (for example, to make a calling card call, or to retrieve messages from an answering machine):</p> <ul style="list-style-type: none"><li>• <b>Pause</b> tells your phone to wait until the call connects before it automatically sends the next digit(s) in a series.</li><li>• <b>Wait</b> tells your phone to wait until the call connects, and then to prompt you for confirmation before it sends the next digit(s).</li><li>• <b>'n'</b> tells your phone to prompt you for a number before dialing the call. The number you enter is inserted into the dialing sequence in place of the <b>n</b> character</li></ul> |

# ***Sending and Receiving Calls***



You can also call numbers using these features:

| <b>Do This</b>                                                                                                                                                                      | <b>To Call</b>                                                                                                    |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------|
| Press and release the voice key on the right side of your phone and say the entry's name (in two seconds).                                                                          | a phone number using the voice dial feature<br><br>See "Recording a Voice Name For a Phonebook Entry" on page 62. |
| Press  > <b>Recent Calls</b> > <b>Received Calls</b> or <b>Dialed Calls</b> > <i>entry to call</i> | a missed call or a number from a call you recently dialed or received                                             |

# Using Features While On a Call

---

## Using Call Waiting



If you subscribe to call waiting, an alert tone sounds while you are on a call to indicate that you have received a second call.

To put the first call on hold and answer the second call:

| Press                                                                               | To                            |
|-------------------------------------------------------------------------------------|-------------------------------|
| 1  | answer the new call           |
| 2  | switch back to the first call |

## Making a Three-Way Call



During a call, you can call and connect a third party so that the three of you can talk together. You cannot do this if you already have a call on hold.

While you are on a call:

| Press                                                                                 | To                                                                                                                                                                                                                  |
|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 keypad keys                                                                         | enter the third person's number<br><br><b>Note:</b> On some networks, you must press  before entering the third person's number. |
| 2  | call the number and connect the new person                                                                                                                                                                          |



| Press                                                                               | To                    |
|-------------------------------------------------------------------------------------|-----------------------|
| 3  | connect the two calls |
| 4  | end the entire call   |

## Additional On-Call Features

While you are on a call, you can perform the following tasks:

| Do This                                                                                                                                     | To                                                                                                                                                                                                                                                             |
|---------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Press <b>MUTE</b> (  )                                     | mute a call                                                                                                                                                                                                                                                    |
| Press <br>> <b>My Tel. Number</b>                          | view your phone number                                                                                                                                                                                                                                         |
| Press  > <b>Send Tones</b>                                 | send a number to the network as DTMF tones, for credit card calling or password entry<br><br><b>Note:</b> This option appears only when you enter digits or select stored digits during a call.<br><br>To activate DTMF tones, see the "DTMF" item on page 57. |
| Press <br>> <b>Received Calls</b> or <b>Dialed Calls</b> | view the telephone numbers from calls you have recently received or dialed                                                                                                                                                                                     |
| Press  > <b>Messages</b>                                 | view or send messages from the message center                                                                                                                                                                                                                  |
| Press <br>> <b>Other Information</b>                     | view a list of feature specifications for your phone                                                                                                                                                                                                           |

# Using the Menu

---

## Navigating to a Feature

You can access many of your phone's features by using these keys to move through the menu system:

### Left Soft Key

Perform the function shown in the lower left corner of the display (usually **EXIT** or **BACK**).

### Volume Keys

Move up or down through menus and lists.

### Menu Key

Enter the menu system, or open a sub-menu, when  appears in the bottom center of the display.

### End Key

Exit the menu system without making changes, return to the idle display.

 
### Right Soft Key

 
Perform the function shown in the lower right corner of the display (usually **SELECT** the highlighted menu item).

### Scroll Keys

Move up or down through menus and lists.

 and   
Cycle through and set the value of the highlighted menu item.

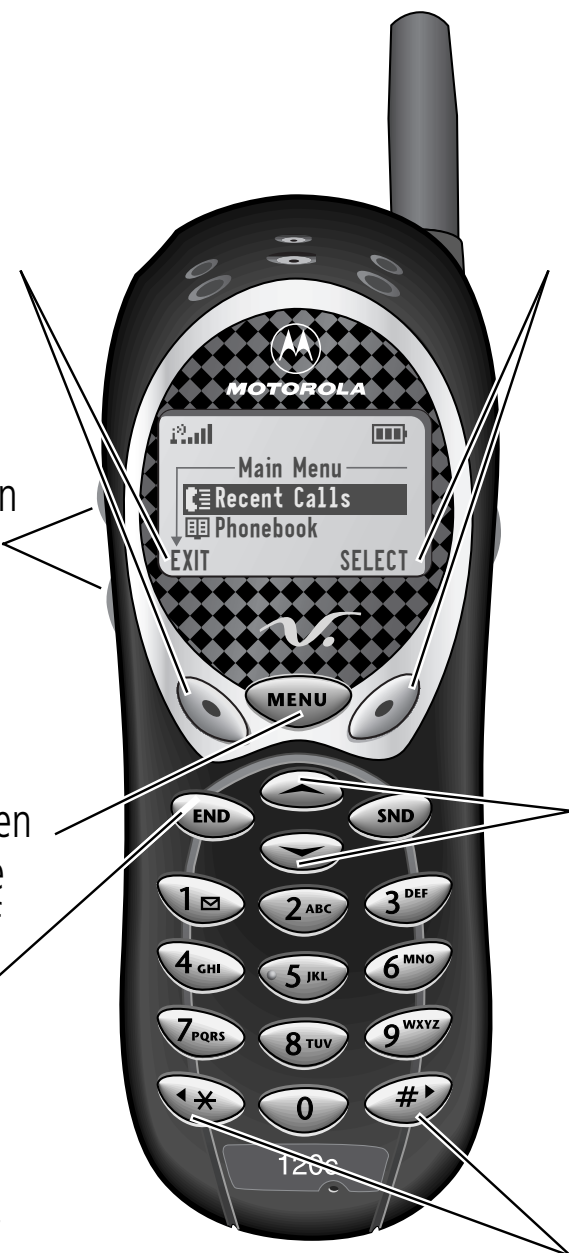

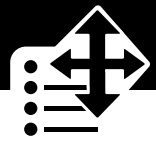

This guide shows you how to navigate to a specific menu feature as follows:

## Find the Feature

 
 > Recent Calls  
> Dialed Calls

The > symbol means that you should scroll to and select the feature. This example shows that you must press , scroll to and select **Recent Calls**, then scroll to and select **Dialed Calls** to see the dialed calls list.

## Selecting a Feature Option

Some features require you to select an item from a list:

Press **BACK** () to go back to the previous screen.

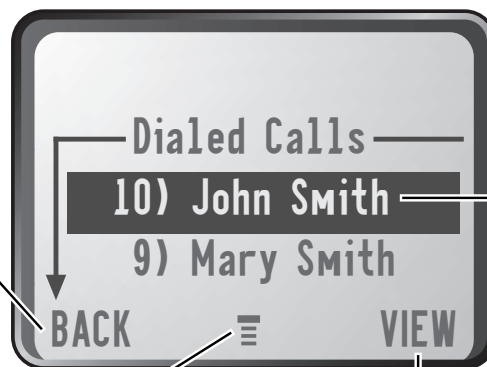

Highlighted item

A sub-menu is available. Press  to open the sub-menu.

Press **VIEW** () to view details of the highlighted item. **STORE** () appears if you can store the item in your phonebook.

Select an item by highlighting it. Use one of the following approaches:


- Press  to scroll up or down to the item you want.
- In a numbered list, press a number key to highlight the item.

# Using the Menu

 
- In an alphabetized list, press a key multiple times to cycle through the letters on the key and highlight the closest matching list item.

## Entering Feature Information

Features such as the phonebook require you to enter information to fill in an entry's details:

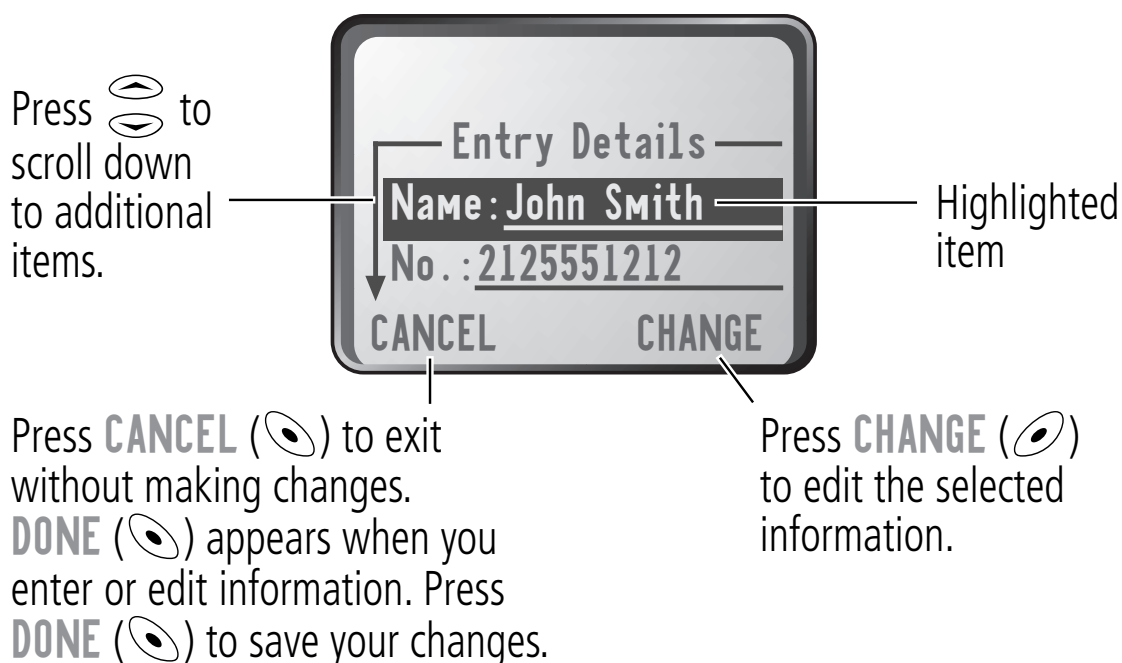

 - Enter numbers or text with the keypad. (See "Entering Text" on page 40.)
- When an item has a list of possible values, press or to scroll through and select a value.
- When an item has a list of possible numeric values, press a number key to set the value.

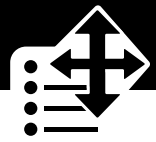

- If you enter or edit information and then decide that you do not want to save your changes, press **END** to exit without saving.

The message center lets you compose and send text messages. (See "Entering Text" on page 40.) A *flashing cursor* shows you where the text will appear:

*Flashing cursor* indicates insertion point.



Press **CANCEL** (⏏) to exit without making changes.

Press **MENU** (☰) to open the sub-menu.

Press **BROWSE** (🔍) to view and insert a name, number, or message from previously stored information.

When you enter text, the flashing cursor changes to a *block cursor*, and the soft key functions change:

*Block cursor* indicates current highlighted character.



Press **OK** (⏏) to accept and store the text.

After two seconds, the block cursor reverts to a flashing cursor and moves to the next position.

Press **DELETE** (⏏) to delete the character to the left of the insertion point.

# Entering Text

---

Various text entry methods make it easy for you to enter names, numbers, email addresses, and text messages on your phone.

You can enter all characters (letters, numbers, and symbols) using the standard tap method. Other text modes let you easily enter numbers and symbols, or insert text already stored on your phone. Finally, a predictive text mode lets you enter text messages with a minimum of keypresses.

## Choosing a Text Mode

To activate a text mode, press  from any text entry screen and select the text mode from the **Entry Method** menu:

**iTAP** Let the phone predict each word as you enter it, then choose the word from a list (see “Predictive Text Entry with iTAP™ Software” on page 44).

**Tap Method** Enter characters one at a time by pressing the key for the letter, number, or symbol (see “Tap Method” on page 41). **This is the standard mode for entering text on your phone.**

**Numeric** Enter only the number that appears on each key.

**Symbol** Enter symbols only (see “Symbol Mode” on page 43).

**Browse** Browse through your phonebook and recent calls lists to select a name or number to enter.

**Note:** The text mode you select remains active until you change it by selecting another mode.



## Tap Method

Tap method is the default standard mode for entering text on your phone.

To activate tap method from any text entry screen, press  and select the **Tap Method** menu option.

To enter text using the tap method:

| Do This                                                                                                          | To                                                                                                                             |
|------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------|
| <b>1</b> Press a number key one or more times                                                                    | cycle through the characters associated with the key and select the character you want (see the "Character Chart" on page 42). |
| <b>2</b> Continue to press number keys                                                                           | enter the rest of the characters in the text message                                                                           |
| <b>3</b> Press <b>OK</b> (  ) | accept and store the text when you are finished                                                                                |

## General Text Entry Rules

Use the keypad to enter letters, numbers, symbols, and other characters with the tap method. Press the same key repeatedly to cycle through available characters (see the "Character Chart" on page 42):

- To enter text at a flashing cursor, press a number key.
- To enter the desired character, press the number key as many times as necessary. For example, press  three times to enter the "c" character.

# Entering Text

- Press and hold a number key to switch between tap method and numeric text entry mode.
- To move the flashing cursor up or down one line in a text message, or to change a character in block cursor to uppercase or lowercase, press  or .
- To move the flashing cursor to the left or right in a text message, press  or .
- If you do not press a key for two seconds, the character in the block cursor is accepted, and the cursor moves to the next position.
- The first character of every sentence is capitalized unless you manually change it. (Press  down to force the character to lowercase while it is highlighted by the block cursor.)

## Character Chart

Use this chart as a guide for entering spaces, numbers, letters, symbols, and other characters with the tap method.

|                                                                                     |                                                                  |
|-------------------------------------------------------------------------------------|------------------------------------------------------------------|
|  | <i>space</i> . 1 ? ! , @ _ & ~ : ; " - ( )<br>' ÿ i % £ \$ ¥ ¤ € |
|  | + - 0 x * / \ [ ] = > < # §                                      |



## Symbol Mode

Your phone provides an alternate way to find and enter symbol characters in a text message. You can view and select from a variety of available symbols.

To activate symbol mode from any text entry screen, press  and select the **Symbol** menu option.

To enter a symbol in symbol mode:

| Do This                                                                                                                                                                                                                                     | To                                                                                                                                                                                                                               |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>1</b> Press a number key one time                                                                                                                                                                                                        | display its symbol options (see the "Symbol Chart" on page 44)<br><br>The symbols associated with the key you pressed are shown at the bottom of the display. If necessary, press other keypad keys to find the symbol you want. |
| <b>2</b> Press  or <br><br><b>or</b><br>the number key multiple times | highlight the symbol you want                                                                                                                                                                                                    |
| <b>3</b> Press <b>SELECT</b> (  )                                                                                                                        | add the highlighted symbol to the text area at the top of the display                                                                                                                                                            |

# Entering Text

## Symbol Chart

Use this chart as a guide for entering symbols in symbol mode.

|                                                                                       |                                                            |
|---------------------------------------------------------------------------------------|------------------------------------------------------------|
| 1    | space . ? ! , @ _ &<br>~ : ; " - ( ) ' ÿ i<br>% £ \$ ¥ ¤ € |
| 2    | @ _ \                                                      |
| 3    | / : ;                                                      |
| 4    | " & '                                                      |
| 5    | ( ) [ ] { }                                                |
| 6    | ÿ i ~                                                      |
| 7   | < > =                                                      |
| 8  | \$ £ ¥ ¤ €                                                 |
| 9  | # % *                                                      |
| 0  | + - x * / = > <<br># §                                     |

## Predictive Text Entry with iTAP™ Software

iTAP™ software provides a predictive text entry method that lets you enter the letters of a word using only one keypress per letter.

You must activate iTAP software prior to entering letters. You can do this from any text entry screen by pressing  to open the Entry Method menu and selecting the **iTAP** menu option.



## Enter Words

To enter a word with iTAP software:

| Do This                                                                                                                                                                                                                                      | To                                                                                                                                                                                             |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>1</b> Press a number key one time                                                                                                                                                                                                         | enter the first letter of the word<br>The letters associated with the key you pressed are shown at the bottom of the display.                                                                  |
| <b>2</b> Press number keys (one per letter)                                                                                                                                                                                                  | enter the rest of the word<br>Alternative words and letter combinations are shown at the bottom of the display based on the keys you press. These word choices are updated with each keypress. |
| <b>3</b> When you have entered all the letters of the word, press  or  | locate and highlight the word you want                                                                                                                                                         |
| <b>4</b> Press <b>SELECT</b> (  )                                                                                                                         | add the highlighted word to the text area at the top of the display<br>A space is automatically inserted after the word.                                                                       |

 
## Enter Novel Words

You may enter a word that is not in the iTAP software dictionary. If you enter all the letters of a word but the word is not displayed:

| Do This                                                                                                                                                                                                       | To                                                                                               |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|
| 1 Press <b>DELETE</b> (  ) one or more times                                                                                 | delete one or more letters until you see a letter combination that matches the start of the word |
| 2 Press  or                                 | highlight the letter or letter combination                                                       |
| 3 Press <b>SELECT</b> (  ) , then press  | shift the text entry cursor to the left and "lock" the selected portion of the word              |
| 4 Continue entering letters and highlighting letter combinations                                                                                                                                              | spell the word                                                                                   |

# ***Menu Feature Descriptions***

---



This chapter describes all of your phone's features in order of the menu map shown on page 3. Some descriptions also include page numbers where you can find more detailed information. If you would like to learn more about a specific feature, a reference guide for your phone is also available. To obtain a copy of the reference guide or another copy of this user guide, see the Motorola Web site at:

<http://motorola.com/consumer/manuals> (United States)

<http://www.motorola.ca/manuals> (Canada)

or contact the Motorola Customer Call Center at  
1-800-331-6456 (United States) or 1-800-461-4575 (Canada).

## ***Main Menu***

### **RECENT CALLS**

View the numbers of your recent dialed calls and received calls. Press **SND** to go directly to the dialed calls list from the idle display.

#### ***Received Calls***

**MENU** > Recent Calls  
> Received Calls

View a list of recently received calls.

Your phone keeps a list of the numbers from calls you recently received, even if you did not answer. You can scroll through the list until you find an entry you want to call, store, or delete.

# Menu Feature Descriptions

## Dialed Calls



> Recent Calls  
> Dialed Calls

View a list of recently dialed calls. Your phone keeps a list of recently dialed phone numbers, even if the calls did not connect. A ✓ means the call connected. You can scroll through the list until you find an entry you want to call, store, or delete.

## Notepad



> Recent Calls  
> Notepad

Stores the last phone number entered on the keypad. The number may be the last number you called or a number you entered during a phone call.

You can call the number on the notepad or you can store it as part of a phonebook entry.

## Call Times



> Recent Calls  
> Call Times

View call timers, which record *network connection time*, the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . The is a small icon consisting of the word "END" inside an oval.

**The amount of network connection time you track on your timer may not equal the amount of time for which you are billed by your service provider. For billing information, please contact your service provider directly.**

You can scroll through a list of five timers: Last Call, Dialed Calls, Received Calls, All Calls, and Lifetime.



## PHONEBOOK



> Phonebook



> Phonebook Menu

Create and manage a personalized phonebook. You can call phone numbers stored in the phonebook or, for entries with email addresses, you can send a text message directly from your phone.

Create a phonebook entry Enter a name, phone number or email address, and type indicator, such as home or work. The phone will assign a speed dial number. See page 60.

Set up voice dial Record a voice name you can use to dial a phone number by saying the person's name. See page 62.

Edit a phonebook entry View and then update details of a phonebook entry.

Dial a phonebook entry Use the phonebook list, voice dial, speed dial, or one-touch dial to call a number or send a text message to an email address. See pages 28 and 64.

Delete a phonebook entry Use the **Phonebook Menu** to remove outdated entries.

Sort phonebook entries Accept the standard sort by speed dial number or sort entries by name or voice dial.

## QUICK DIAL



> Quick Dial

Dial pre-programmed customer service numbers.



# Menu Feature Descriptions

Your service provider may program one or more quick dial numbers, such as the customer service number, into your phone. You can call them by selecting them from the quick dial list.

**Note:** Your service provider may use a different name for this feature.

## RADIO

 > **Radio**

Listen to FM radio stations. This menu feature is displayed only when the optional Motorola Original™ FM Stereo Radio headset is plugged into the accessory connector port on your phone. See “Radio” on page 65.



## MESSAGES

 > **Messages**

Adjust message settings, view and manage the various types of messages your phone can receive and/or send:



### **Voicemail**

Store and call the voicemail number provided by your service provider. See “Messages—Voicemail” on page 68.

### **Text Msgs**

Send and receive text messages. See “Messages—Text” on page 70.

### **Browser Alerts**

Read alert messages received by your micro-browser.

### **Quick Notes**

Select and send pre-written messages from the quick notes list.

### **Outbox**

View all outgoing text messages, delivered and undelivered.



## Drafts

Store and edit text messages that you have written but not sent.

## SHORTCUTS

 > **Shortcuts**

Create keypad or voice shortcuts to menu features.

## VOICE NOTES

 > **Voice Notes**

Use the voice key to record and playback messages and phone calls. See "Voice Notes" on page 78.

## BROWSER

 > **Browser**

Access Web pages and run Web-based applications.



The micro-browser delivers WAP (Wireless Application Protocol) pages from your service provider directly to your phone. See "Micro-Browser" on page 80.

## Settings Menu

### RING STYLES

#### *Style*

 > **Settings**  
> **Ring Styles**  
> **Style**

Select a type of ring or vibration alert style for incoming calls and messages. See "Ring Styles" on page 82.

#### *Style Detail*

 > **Settings**  
> **Ring Styles**  
> **Style Detail**

Change details about the ring or vibration alert style. *Style* represents the name of the current alert setting style. See "Ring Styles" on page 82.

# Menu Feature Descriptions

## ***My Tones***

-  > Settings
- > Ring Styles
- > My Tones

Create custom alert tones for your phone. See "Use the My Tones Feature" on page 84.

## **PHONE STATUS**

### ***My Tel. Number***

-  > Settings
- > Phone Status
- > My Tel. Number

View, enter, and edit your name and phone number.

### ***Battery Meter***

-  > Settings
- > Phone Status
- > Battery Meter

View a detailed battery charge meter.

### ***Other Information***

-  > Settings
- > Phone Status
- > Other Information

View the phone's feature specifications (if available from the service provider).

## **CONNECTION**

Connect your phone to a computer or hand-held device to send and receive data and fax calls on the connected device. Connect your phone using a serial cable or USB cable.





## ***Incoming Call***

**MENU** > **Settings**  
> **Connection**  
> **Incoming Call**

Specify the format for the next incoming call. You can select **Fax In Only**, **Data In Only**, or **Normal**.

## **IN-CALL SETUP**

Use the in-call setup menu to set the features that are active during a call, such as the in-call timer and call answering options.

## ***In-Call Timer***

**MENU** > **Settings**  
> **In-Call Setup**  
> **In-Call Timer**

Adjust call timer display and beep settings. You can set your timer to beep at a selected interval during your calls. (60 seconds is the default.) You can also turn on or off a display timer during calls as follows:

**Time** Display the elapsed time for the current call.

**Off** Hide the in-call timer.

## ***Answer Options***

**MENU** > **Settings**  
> **In-Call Setup**  
> **Answer Options**

Turn call answering options on or off:

**Multi-Key** Answer by pressing any key.

# Menu Feature Descriptions

## SECURITY

Lets you change the four-digit unlock code and a six-digit security code that will prevent other users from accessing your personal information or modifying your phone settings.

### **Phone Lock**

 > **Settings** > **Security**  
> **Phone Lock**

Lock and unlock your phone. See "Locking and Unlocking Your Phone" on page 90.

### **Lock Keypad**

 > **Settings** > **Security**  
> **Lock Keypad**

Lock and unlock your keypad to prevent accidental keypresses that might inadvertently dial an emergency number or one-touch dial number.

### **Lock Application**

 > **Settings** > **Security**  
> **Lock Application**

Lock and unlock specific phone applications (such as phonebook) so that users must enter the unlock code before they can use the applications.

### **Restrict Calls**

 > **Settings** > **Security**  
> **Restrict Calls**

Stop all incoming and/or outgoing calls, or restrict outgoing calls to the numbers stored in your phonebook.

You can still place calls to emergency numbers when outgoing calls are restricted. Your phone still receives incoming text messages when incoming calls are restricted.



## **New Passwords**

 > **Settings** > **Security**  
> **New Passwords**

Change your unlock code or your security code (originally set to 000000). See "Assigning a New Code or Password" on page 90.

## **OTHER SETTINGS**

Use the other settings menu to view or adjust personal options, the initial setup of your phone, the way your phone connects to your service provider's network, and the setup of optional equipment needed for hands-free use.

## **Personalize**

 > **Settings**  
> **Other Settings**  
> **Personalize**

Set several personal phone options:

### **Main Menu**

Change the order of the main menu. See "Reordering Menu Items" on page 88.

### **Keys**

Change the functions of the soft keys in the idle display. See "Customizing a Soft Key Function" on page 89.

### **Greeting**

Change the text displayed when you turn on your phone.

### **Banner**

Change the text that appears in the idle display.

### **Quick Dial**

Change quick dial number(s).



# Menu Feature Descriptions

## Initial Setup



- > Settings
- > Other Settings
- > Initial Setup

Set many basic phone options:

### Time and Date

Set the phone's time and date.

### Auto PIN Dial

Some networks require an authenticating PIN to allow outgoing calls. Use this feature to automatically dial your PIN.



### Auto Redial

Automatically redial calls that fail due to busy network conditions.

### Backlight

Set the amount of time that the display backlight remains on, or turn off the backlight to conserve battery power.

### Zoom

Switch between three lines (**Zoom Out**) and two lines (**Zoom In**) of display text.

### Scroll

Force the cursor to stop or wrap around when it reaches the top or bottom of a list in the display.

### Animation

Turn animation off (to conserve the battery) or on. Animation makes your phone's menus move smoothly as you scroll up and down.

### Language

Set the language for phone menus.



|                     |                                                                                                                                                                                 |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Contrast</b>     | Adjust the contrast setting for your display.                                                                                                                                   |
| <b>DTMF</b>         | Switch DTMF tones to be long, short, or off.                                                                                                                                    |
| <b>Master Reset</b> | Reset all options back to their original factory settings <i>except</i> for the unlock code, security code, and lifetime timer.                                                 |
| <b>Master Clear</b> | Reset all options back to their original factory settings <i>except</i> for the unlock code, security code, and lifetime timer, <i>and</i> clear all user settings and entries. |

**Note:** This option *erases all user-entered information* stored in your phone's memory, including phonebook entries. Once you erase the information, it cannot be recovered.

## **Network**

 **> Settings**  
**> Other Settings**  
**> Network**

View and adjust your phone's network settings.

Your service provider registers your phone to a network. You can view information about the current network, change how your phone searches for a network, and turn on/off alerts that indicate when a call is dropped or network registration changes.

# Menu Feature Descriptions

## Car Settings



- > Settings
- > Other Settings
- > Car Settings



Adjust hands-free settings for an optional Motorola Original™ car kit you have purchased.

**Note:** The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

### Auto Answer

Set the car kit to automatically answer calls after two rings.

### Auto Handsfree

Set your phone to detect and automatically route calls to the car kit.

### Power-Off Delay

Specify the amount of time the car kit delivers power to the phone after you switch off the ignition.

### Charger Time

Specify the amount of time the car kit uses your car battery to charge your phone after you switch off the ignition.

## Headset



- > Settings
- > Other Settings
- > Headset



Set your phone to automatically answer calls after two rings when connected to a headset.

# Phonebook



You can store a list of names and phone numbers or email addresses in your phone's electronic phonebook. You can view these entries and call them directly from your phone.

For email addresses, you can send a text message directly from your phone.

 


To see the list of names stored in your phonebook, press **MENU** > **Phonebook** from the idle display. Scroll to a name and press **VIEW** (👁️) to view details of the phonebook entry as shown in the following display.

## Fields in a Phonebook Entry

**Voice Name** indicator  
indicates a recorded voice name

**Type** indicator  
identifies number  
type:

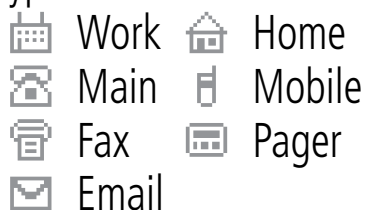

Entry's Name

 
Entry's phone  
number or  
email address

Entry's speed  
dial number

Edit entry

Return to list

Press **MENU** to open  
the **Phonebook Menu**

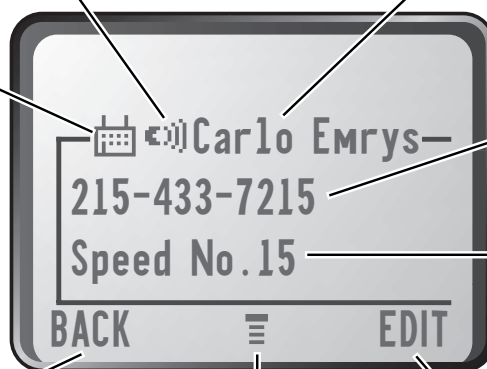

## Storing a Phonebook Entry

A phone number is required for a phonebook entry. All other information is optional.

**Shortcut:** Enter a phone number in the idle display, then press **STORE** (⦿) to create a phonebook entry with the number in the **No.** field. Go directly to step 3 in the following procedure to enter additional information and store the entry.

### Enter Information

#### Find the Feature

**MENU** > **Phonebook**  
**MENU** > **New**

| Press                                                                                 | To                                                                    |
|---------------------------------------------------------------------------------------|-----------------------------------------------------------------------|
| 1  | scroll to <b>Phone Number</b> or <b>Email Address</b>                 |
| 2 <b>SELECT</b> (⦿)                                                                   | select the type of entry                                              |
| 3 <b>CHANGE</b> (⦿)                                                                   | select <b>Name</b>                                                    |
| 4 keypad keys                                                                         | enter a name for the phonebook entry (see "Entering Text" on page 40) |
| 5 <b>OK</b> (⦿)                                                                       | store the name                                                        |
| 6 <b>CHANGE</b> (⦿)                                                                   | select <b>No.</b> or <b>Email</b>                                     |
| 7 keypad keys                                                                         | enter the phone number or email address                               |
| 8 <b>OK</b> (⦿)                                                                       | store the phone number or email address                               |



| Press                                                                                                                   | To                                                                                                                                                                                                                                           |
|-------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>9</b> <b>CHANGE</b> (⦿)                                                                                              | select <b>Type</b>                                                                                                                                                                                                                           |
|                                                                                                                         | <b>Note:</b> This option is not available for email entries. Your phone automatically applies an  (email) type indicator when you enter an email address. |
| <b>10</b> ⬆<br>⬇                                                                                                        | scroll to the type of phone number                                                                                                                                                                                                           |
| <b>11</b> <b>SELECT</b> (⦿)                                                                                             | select the number type                                                                                                                                                                                                                       |
| <b>12</b> <b>RECORD</b> (⦿)<br><br>or<br>Go to step 13 if<br>you do not want<br>to record a voice<br>name for the entry | record a voice name for the entry, if<br>desired<br><br>See "Recording a Voice Name For a<br>Phonebook Entry" on page 62.                                                                                                                    |
| <b>13</b> ⬆<br>⬇                                                                                                        | scroll to <b>Speed No.</b> , the number to<br><i>speed dial</i> the entry<br><br>The next available speed dial number<br>is assigned to a new phonebook<br>number by default.                                                                |
| <b>14</b> <b>CHANGE</b> (⦿)                                                                                             | select <b>Speed No.</b> if you want to<br>change it                                                                                                                                                                                          |
| <b>15</b> keypad keys                                                                                                   | enter a different speed number, if<br>desired                                                                                                                                                                                                |

# Phonebook

| Press         | To                                                                                                                                                        |
|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
| 16 OK (⦿)     | save the modified speed number<br><br>If your chosen speed number is already assigned to another entry, you are asked if you want to replace that entry.  |
| 17 SELECT (⦿) | select <b>MORE</b> if you want to create another entry with the same <b>Name</b><br><br><b>Note:</b> You must enter a name and number to use this option. |

## ***Complete Phonebook Entry***

When you are finished entering information for a phonebook entry:

| Press    | To                                               |
|----------|--------------------------------------------------|
| DONE (⦿) | store the entry and return to the phonebook list |

## ***Recording a Voice Name For a Phonebook Entry***

You can record a voice name when you create a new phonebook entry, or when you edit a previously stored phonebook entry. This lets you use voice dial to call the number without dialing (see "Voice Dial" on page 64).

**Tip:** Make your voice recording in a quiet location. Hold the phone about four inches (10 centimeters) from your mouth, and



Speak directly into the phone's microphone in a normal tone of voice.

## Find the Feature



> Phonebook

| Do This                                                                                                     | To                                                                                      |
|-------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------|
| 1 Press                    | scroll to the entry that needs a voice name                                             |
| 2 Press <b>VIEW</b> (  )   | display the entry's detailed view                                                       |
| 3 Press <b>EDIT</b> (  )   | edit the phonebook entry                                                                |
| 4 Press                    | scroll to <b>Voice Name</b>                                                             |
| 5 Press <b>RECORD</b> (  ) | begin the recording process<br>The phone displays <b>Press Voice key then say name.</b> |
| 6 Press and release the voice key on the right side of your phone and say the entry's name (in two seconds) | record the voice name<br>The phone displays <b>Press Voice Key then REPEAT name.</b>    |
| 7 Press the voice key and repeat the name                                                                   | confirm the voice name<br>The phone displays <b>Trained: Voice Name.</b>                |
| 8 Press <b>DONE</b> (  ) | store the voice name                                                                    |

## Dialing a Phonebook Entry

You can use the phonebook list, voice dial, speed dial, or one-touch dial to call a number (or send a text message to an

email address) stored in your phonebook. To use speed dial, see “Dialing With Speed Dial” on page 30. To use one-touch dial, see “Dialing With One-Touch Dial” on page 31.

## Phonebook List

To call a number or send email to an entry in the phonebook list:

### Find the Feature



> Phonebook

| Press                                                                                | To                                   |
|--------------------------------------------------------------------------------------|--------------------------------------|
| 1   | scroll to the entry you want to call |
| 2   | send the call (for a phone number)   |
| <b>or</b>                                                                            |                                      |
| open a new message form with the entry's address in the To field (for email entries) |                                      |

## Voice Dial

To call a number or send an email using voice dial:

| Do This                                                                                                    | Result                                                                                                                                                                                                    |
|------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Press and release the voice key on the right side of your phone and say the entry's name (in two seconds). | Your phone goes to the entry in the phonebook list, repeats the voice name, waits two seconds, then automatically dials the call (for a phone number) or opens a new message form (for an email address). |

# Radio



You can use your phone to tune, store presets, and listen to FM radio stations when the optional Motorola Original™ FM Stereo Radio Headset accessory is plugged into the phone's accessory connector port.

## Turning the Radio On and Off

| Press            | To                        |
|------------------|---------------------------|
| <b>Radio</b> (📶) | turn the radio on and off |

Alternatively, you can use the following procedure:

| Press                                    | To                       |
|------------------------------------------|--------------------------|
| <b>1</b> <b>MENU</b> (⏮)                 | open the menu            |
| <b>2</b> (⏮)                             | scroll to <b>Radio</b>   |
| <b>3</b> <b>On</b> (📶) or <b>Off</b> (📶) | turn the radio on or off |

**Note:** The **Radio** (📶) soft key option and **Radio** menu feature are displayed only when the FM Stereo Radio Headset is plugged into the accessory connector port.

## Tuning a Station

| Do This            | To                                                     |
|--------------------|--------------------------------------------------------|
| Press (⏮)          | scroll up or down to the next frequency                |
| <b>or</b>          |                                                        |
| Press and hold (⏮) | scroll up or down to the next available stereo station |

## Storing a Preset

To store a station to a preset that you can recall later:

| Do This                                               | To                                            |
|-------------------------------------------------------|-----------------------------------------------|
| Press and hold a number key (1 to 9 <sup>WXYZ</sup> ) | assign its preset number to the tuned station |

## Selecting a Preset

To select a preset radio station:

| Press                                  | To                                              |
|----------------------------------------|-------------------------------------------------|
| a number key (1 to 9 <sup>WXYZ</sup> ) | tune the station stored at that preset location |

## Sending and Receiving Calls With the Radio On

Your phone interrupts the radio signal and rings or vibrates as usual to notify you of an incoming call, message, or other event. When you receive a call:

| Do This                                                                                         | To                                                                                                                                     |
|-------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|
| Press <b>IGNORE</b> (👁)                                                                         | ignore the call                                                                                                                        |
| Press <b>ANSWER</b> (👁)<br><br>or<br>Press the button on the FM Stereo Radio Headset microphone | answer the call<br><br><b>Note:</b> You can use the FM Stereo Radio Headset microphone to converse with the other party during a call. |



To end the call and resume the FM broadcast:

| Do This                                                                                 | To           |
|-----------------------------------------------------------------------------------------|--------------|
| Press  | end the call |
| <b>or</b>                                                                               |              |
| Press and hold the button<br>on the FM Stereo Radio<br>Headset microphone               |              |

Turn the radio off before dialing outgoing calls from the phone keypad. You do not have to turn off the FM radio feature to dial emergency numbers, or numbers selected from your phonebook or other lists.

**Tip:** To dial a recently called number, press  or the button on the FM Stereo Radio Headset microphone to go to the dialed calls list. For more information, see “Recent Calls” on page 47.

# Messages—Voicemail

---



You can listen to your voicemail messages by calling your network voicemail phone number. Voicemail messages are stored on the network—not on your phone. Contact your service provider for more details.

## Storing Your Voicemail Number

Store your voicemail number in your phone to make it faster and easier to use voicemail. Your voicemail number is provided by your service provider.

### Find the Feature



> Messages



> VoiceMail Setup

| Press         | To                                        |
|---------------|-------------------------------------------|
| 1 keypad keys | enter the phone number for your voicemail |
| 2 OK (ⓘ)      | store the number                          |

## Receiving a New Voicemail Message

When you receive a voicemail message, your phone displays the ⓘ (voice message waiting) indicator and a **New VoiceMail** notification. (Some networks only indicate when you have messages, whether they are new or not.) If reminders are turned on, your phone sends a reminder every five minutes until you close the new message notification, listen to the message, or turn off your phone.



From the new message notification:

| Do This                                                                                                 | To                               |
|---------------------------------------------------------------------------------------------------------|----------------------------------|
| Press <b>CALL</b> (  ) | call your voicemail phone number |
| <b>or</b>                                                                                               | and listen to the message        |
| Press and hold         |                                  |

## ***Listening to a Voicemail Message***

To listen to your voicemail messages at any time:

**Find the Feature**       > **Messages** > **VoiceMail**

Your phone calls the voicemail phone number you stored. If you do not have a voicemail number stored, the phone guides you through storing a number.

**Shortcut:** You can also press and hold  to listen to your voicemail message(s). A  (voicemail) indicator is printed on the  key as a function reminder.

## ***Turning Off the Voice Message Waiting Indicator***

When you receive a voicemail message, your phone displays the  (voice message waiting) indicator until you listen to the message. To clear the voice message waiting indicator manually, you can reset the voicemail counter to zero.

**Find the Feature**       > **Messages**  
                                  > **Clear Count**

# Messages—Text

---



Text messages are brief messages that you can send and receive (such as **Where are we meeting?**). Received messages appear on your phone display or in your text message inbox.

Quick notes are pre-written text messages that you can customize and send quickly.

Your text message inbox must be set up *before* you can send and receive these messages. The total number of messages the inbox can hold depends on the length of the messages, and the number of other messages and drafts stored in your phone.

## Setting Up the Text Message Inbox

**Note:** Your service provider may have already programmed the text message inbox settings for you.

### Find the Feature



> Messages



> Text Msg Setup

| Press               | To                                                                                                                                           |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| 1 <b>CHANGE</b> (ⓘ) | change the <b>Cleanup</b> setting                                                                                                            |
| 2 ⓘ ⓘ               | scroll to the number of days that messages should stay in the text message inbox, or the number of messages that should be kept in the inbox |



| Press               | To                                                                                                                                       |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------------|
| 3 <b>SELECT</b> (⦿) | select the cleanup setting<br><br>If you select <b>Custom</b> , continue.<br>Otherwise, go directly to step 8 to complete the procedure. |
| 4    ⬆              | scroll to the number of days or messages                                                                                                 |
| 5    ▶ (⦿)          | move to the type identifier                                                                                                              |
| 6    ⬆              | scroll to <b>days</b> or <b>msgs</b>                                                                                                     |
| 7 <b>DONE</b> (⦿)   | store the custom cleanup period                                                                                                          |
| 8 <b>DONE</b> (⦿)   | save the text message inbox settings                                                                                                     |

## Receiving a Text Message

**Note:** Your text message inbox must be set up before you can receive text messages.

When you receive a new message, your phone displays the  (message waiting) indicator and a **New message** notification, and gives an alert. If reminders are turned on, your phone sends a reminder every five minutes until you close the new message notification, read the message, or turn off your phone.

From the new message notification:

| Press           | To                                                                           |
|-----------------|------------------------------------------------------------------------------|
| <b>READ</b> (⦿) | open the message (or your text message inbox if there are multiple messages) |

As memory space for storing messages gets close to full, the  (message waiting) indicator flashes and your phone displays **Memory is Low!** when you receive a new message. When no more messages can be stored, your phone displays **Memory is Full!** and the network temporarily holds your new messages. To receive these new messages, you must delete some existing messages from your inbox, outbox, or drafts folder.

## ***Reading, Locking, or Deleting a Text Message***

You can open your text message inbox to read, lock, or delete messages at any time.

Messages in the text message inbox are sorted from newest to oldest. The oldest messages are deleted automatically as specified by the inbox cleanup setting (see “Setting Up the Text Message Inbox” on page 70). If you want to save a message, you should lock it to prevent it from being deleted during cleanup.

### **Find the Feature**



> **Messages** > **Text Msgs**

| Press                                                                                                 | To                                                                                                                                                                                                                                                                                                                                                   |
|-------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1                  | scroll to the message you want<br>(  = unread and urgent,  = read,<br> = read and locked) |
| 2 <b>READ</b> (  ) | open the message                                                                                                                                                                                                                                                                                                                                     |



| Press             | To                                                                                       |
|-------------------|------------------------------------------------------------------------------------------|
| 3 <b>SAVE</b> (⌂) | close the message without changes                                                        |
| or                |                                                                                          |
| <b>DELETE</b> (⌂) | delete the message                                                                       |
| or                |                                                                                          |
| <b>MENU</b>       | open the <b>Text Msg Menu</b> and scroll to other operations, such as <b>Lock/Unlock</b> |

---

## ***Sending a Text Message***

You can create and send a text message to one or more recipients. The text message feature lets you manually enter each recipient's phone number or email address, or select one or more numbers/addresses from the phonebook or recent calls lists.

**Note:** When you manually enter phone numbers or email addresses in the **To** field, you must insert a space between each phone number/address. Press **1** (⌂) one time, wait for the space to appear, then enter the next phone number or email address.

### **Find the Feature**

**MENU** > **Messages**  
**MENU** > **Create Message**

| Press               | To               |
|---------------------|------------------|
| 1 <b>CHANGE</b> (⌂) | select <b>To</b> |

---

# Messages—Text

| Press                                                                                                 | To                                                                                                                                                                                                      |
|-------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2 keypad keys                                                                                         | enter one or more phone numbers or email addresses where you want to send the message                                                                                                                   |
|                                                                                                       | <b>Tip:</b> Remember to press  one time to insert a space between each phone number/address that you enter manually. |
| or<br><b>BROWSE</b>  | select one or more phone numbers or email addresses from the phonebook or recent calls lists                                                                                                            |
| 3 <b>OK</b>         | store the number(s) and/or email address(es)                                                                                                                                                            |
| 4 <b>CHANGE</b>    | select <b>Msg</b>                                                                                                                                                                                       |
| 5 keypad keys                                                                                         | enter the text message (see “Entering Text” on page 40)                                                                                                                                                 |
|                                                                                                       | <b>Note:</b> Message length is limited. A two-digit counter at the top of the display shows how many characters are left.                                                                               |
| 6 <b>OK</b>        | store the text message                                                                                                                                                                                  |
| 7 <b>CHANGE</b>    | select <b>Priority</b>                                                                                                                                                                                  |
| 8                  | scroll to the priority you want                                                                                                                                                                         |
| 9 <b>SELECT</b>    | set the priority                                                                                                                                                                                        |
| 10 <b>CHANGE</b>   | select <b>Call</b>                                                                                                                                                                                      |



| Press                                               | To                                                                                                                                                                         |
|-----------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 11    keypad keys                                   | enter the number you want your recipient to call back (the message's <b>From</b> field)                                                                                    |
| 12 <b>OK</b> (⦿)                                    | store the number                                                                                                                                                           |
| 13 <b>DONE</b> (⦿)                                  | finish the message<br><br>Your phone displays <b>Send Message Now?</b>                                                                                                     |
| 14 <b>YES</b> (⦿)<br><br><b>or</b><br><b>NO</b> (⦿) | send the message<br><br>cancel the message or save it as a draft<br><br>A saved message is stored in the drafts folder, where you can edit it and send it at a later time. |

## ***Sending a Quick Note Text Message***

Quick notes are short, pre-written text messages that you can create, select, edit, and send quickly (for example, **Meet me at ...**). You can also create new quick note messages and store them for later use.

To send a quick note message:

**Find the Feature**      **MENU** > **Messages** > **Quick Notes**

| Press       | To                       |
|-------------|--------------------------|
| 1    ⬆<br>⬇ | scroll to the quick note |

# Messages—Text

| Press                                                                                               | To                                                                                             |
|-----------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|
| <b>2 READ</b> (  ) | read the quick note                                                                            |
| <b>or</b>                                                                                           |                                                                                                |
|                    | open the <b>Quick Note Menu</b> to perform other procedures as described in the following list |

---

---

The **Quick Note Menu** includes the following options:

| Option        | Description                                                                                                                                                                                                                    |
|---------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>New</b>    | Open an editor where you can create a new quick note.<br><br>Enter text and press <b>OK</b> (  ) to save it as a quick note.               |
| <b>Edit</b>   | Open an editor where you can edit the selected quick note.<br><br>Edit the quick note text and press <b>OK</b> (  ) to save your changes. |
| <b>Delete</b> | Delete the selected quick note.                                                                                                                                                                                                |



| Option      | Description                                                                                                                                                                                                                                                                                                                                                                                              |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Send</b> | <p>Open a new message, with the selected quick note text in the <b>Msg</b> field.</p> <p>Complete the other fields in the message (for details, see “Sending a Text Message” on page 73).</p> <p>To send the quick note to multiple recipients, enter multiple phone numbers and/or email addresses in the To field as described in step 2 of the procedure for “Sending a Text Message” on page 73.</p> |

# Voice Notes

---

The voice note feature lets you record personal messages or phone calls. You can play back a voice note at any time. There are no pre-recorded voice notes on your phone.

## **Recording a Voice Note**

Use this procedure to record a voice note when the idle display is visible, or use it during a phone call to record the call. Your phone plays an alert tone to notify the other party that the call is being recorded.

**Note:** Recording phone calls is subject to varying state and federal laws regarding privacy and recording of conversations.

**Tip:** Make your voice recording in a quiet location. Hold the phone about four inches (10 centimeters) from your mouth, and speak directly into the phone's microphone in a normal tone of voice.

| Do This                                                                                           | Result                                                                                        |
|---------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------|
| 1 Press and hold the voice key on the right side of your phone for the duration of the recording. | A tone sounds in the earpiece and the phone displays the <b>Recording Voice Note</b> message. |
| 2 Speak your voice note into the phone while continuing to hold the voice key.                    | The phone records the message and displays a recording timer.                                 |
| 3 Release the voice key to stop recording.                                                        | The phone displays the voice notes list number and the total recording time.                  |



## Playing a Voice Note

To play a recorded voice note:

### Find the Feature



> Voice Notes

| Press                                                                                               | To                       |
|-----------------------------------------------------------------------------------------------------|--------------------------|
| 1                  | scroll to the voice note |
| 2 <b>PLAY</b> (  ) | play the voice note      |

When an optional Motorola Original™ headset accessory or FM Stereo Radio Headset accessory is connected to your phone, voice note playback is automatically routed to the headset.

**Tip:** You can play a voice note while taking a call. It won't be transmitted to the other party.

# Micro-Browser

---



The micro-browser lets you access Web pages on your phone. Contact your service provider to set up access, if necessary.

## Starting a Micro-Browser Session

To open the micro-browser:

### Find the Feature



> **Browser**

The micro-browser displays the home page set up by your service provider.

| Press                                                                                                   | To                              |
|---------------------------------------------------------------------------------------------------------|---------------------------------|
| 1                    | scroll to a bookmark or service |
| 2 <b>SELECT</b> (  ) | select the service              |

**Shortcut:** If you open a text message with a Web address (URL) embedded in it, you can press  > **Go To** to launch the micro-browser and go directly to the URL. If more than one URL is embedded, you can select one from a list.

If you are unable to establish a network connection with the micro-browser, contact your service provider.



## Interacting With Web Pages

You can perform the following operations on a Web page:

| Do This                                                                                                                                                                                                                                                                                                             | To                                                                                                                                                                                        |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Press                                                                                                                                             | scroll through a text message                                                                                                                                                             |
| Press   and then <b>SELECT</b> (  )                              | scroll through and select items in a list                                                                                                                                                 |
| Press keypad keys and then <b>OK</b> (  )                                                                                                                                                                                          | enter requested information<br><b>Tip:</b> Press  to delete one letter at a time if you make a mistake. |
| Press   to scroll to a phone number on a Web page, then press  | call the number from the micro-browser                                                                                                                                                    |
| Press                                                                                                                                                                                                                            | go back to the previous Web page                                                                                                                                                          |
| Press                                                                                                                                                                                                                            | open the <b>Browser Menu</b>                                                                                                                                                              |

# Adjusting Your Settings

---

You can adjust a wide variety of phone settings to suit your needs.

## Ring Styles

Your phone rings or vibrates to notify you of an incoming call, message, or other event. This ring or vibration is called an *alert*. You can select one of five different alert styles:

- |                                                                                   |           |                                                                                   |                  |
|-----------------------------------------------------------------------------------|-----------|-----------------------------------------------------------------------------------|------------------|
|  | Loud ring |  | Soft ring        |
|  | Vibrate   |  | Ring and vibrate |
|  | Silent    |                                                                                   |                  |

The alert setting indicator in your display shows the current alert style (see illustration on page 23).

Each alert style contains settings for ringer and keypad volume. It also includes alert tone settings for different events: incoming calls, text messages, voicemail messages, data calls, fax calls, alarms, and reminders. You can modify the settings in each style.

## Select an Alert Style

### Find the Feature



> Settings > Ring Styles  
> Style

### Press

1



### To

scroll to the alert style you want to use

---



| Press               | To                                                                                     |
|---------------------|----------------------------------------------------------------------------------------|
| 2 <b>SELECT</b> (⦿) | select the alert style<br><br>The phone displays the<br><b>Changed: Style</b> message. |

## Customize an Alert Style

You can customize an alert style by changing the alerts used for specific events (such as incoming calls, text messages, etc.). Your phone includes multiple preset alert tones and vibrations. Any changes you make are saved to the current alert style.

**Tip:** This feature also lets you set the alert style's ringer volume and keypad volume.

### Find the Feature



> **Settings** > **Ring Styles**  
> **Style Detail**

**Note:** *Style* represents the name of the current alert style.

| Press               | To                                                                       |
|---------------------|--------------------------------------------------------------------------|
| 1 ⬆<br>⬇            | scroll to the event for which you want to set a new alert                |
| 2 <b>CHANGE</b> (⦿) | select the event<br><br>The phone displays the list of available alerts. |
| 3 ⬆<br>⬇            | scroll to the alert you want for the event                               |

# Adjusting Your Settings

| Press               | To                                                                    |
|---------------------|-----------------------------------------------------------------------|
| 4 <b>SELECT</b> (⦿) | select the alert                                                      |
|                     | The phone displays the<br><b>Changed:</b> <i>Event Alert</i> message. |

## Use the My Tones Feature

You can create custom alert tones for your phone. The tones you create appear in the list of available alerts (see “Customize an Alert Style” on page 83).

### Creating a Tone

#### Find the Feature

**MENU** > **Settings** > **Ring Styles**  
> **My Tones** > **[New Tone]**

| Press               | To                          |
|---------------------|-----------------------------|
| 1 <b>CHANGE</b> (⦿) | select <b>Notes</b>         |
| 2 keypad keys       | enter notes for the tone    |
| 3 <b>OK</b> (⦿)     | store the notes             |
| 4 <b>CHANGE</b> (⦿) | select <b>Name</b>          |
| 5 keypad keys       | enter the name for the tone |
| 6 <b>OK</b> (⦿)     | store the name              |
| 7 <b>DONE</b> (⦿)   | store the tone              |



## Entering Notes

To create a new tone, use the keypad keys to enter each note in turn. You can modify a note's pitch, octave, or length by entering an octave/note/length combination as described below:

| Key | Note or Option | Description                  |
|-----|----------------|------------------------------|
| 1   | 1              | set octave one               |
|     | 2              | set octave two               |
|     | 3              | set octave three             |
| 2   | A              | note A                       |
|     | B              | note B                       |
|     | C              | note C                       |
| 3   | D              | note D                       |
|     | E              | note E                       |
|     | F              | note F                       |
| 4   | G              | note G                       |
|     | R              | rest                         |
| 7   | #              | sharp                        |
|     | b              | flat                         |
| 0   | q              | quarter note or quarter rest |
|     | h              | half note or half rest       |
|     | w              | whole note or whole rest     |

# Adjusting Your Settings

Enter a note as follows:

| Task                                   | Action                                                                                                                                                                                                                                                                                                                                  |
|----------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Change the octave                      | Set the new octave ( <b>1</b> , <b>2</b> , or <b>3</b> ) <i>before</i> selecting the note. The new octave applies to the note and all following notes until you change it again.                                                                                                                                                        |
| Select the note (required)             | Press a keypad key to enter a note.                                                                                                                                                                                                                                                                                                     |
| Change a note to a sharp or flat       | Enter a sharp or flat ( <b>#</b> or <b>b</b> ) <i>after</i> selecting the note.<br><br>Some sharps and flats are played as standard notes. For example, <b>B#</b> is the same as <b>C</b> . Press  to scroll to valid notes when entering a new note. |
| Change a note's length                 | Set the new length ( <b>q</b> , <b>h</b> , or <b>w</b> ) <i>after</i> selecting the note. The new length applies to the note and all following notes until you change it again.                                                                                                                                                         |
| Add a rest                             | Enter one or more rests ( <b>R</b> characters) as needed in the tone sequence. You can set the length of the rest by entering a <b>q</b> , <b>h</b> , or <b>w</b> character <i>after</i> the rest, just as you can for a note.                                                                                                          |
| Listen to a new tone as you compose it | Press  to enter the <b>Compose Menu</b> , and select <b>Play All</b> to play the notes you have entered.                                                                                                                                             |



## Playing a Tone

### Find the Feature

**MENU** > **Settings** > **Ring Styles**  
> **My Tones**

| Press                                                                                                       | To                                                                                  |
|-------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| 1                          | scroll to the tone you want                                                         |
| 2 <b>MENU</b>              | open the <b>My Tones Menu</b>                                                       |
| 3                          | scroll to <b>Play</b>                                                               |
| 4 <b>SELECT</b> (  )       | select <b>Play</b><br><br>The phone displays the playback meter and plays the tone. |
| 5 <b>PLAY</b> (  )        | play the tone again                                                                 |
| or<br><b>CANCEL</b> (  ) | return to the my tones list                                                         |

## Editing a Tone

You cannot edit the standard tones included with your phone. To edit a custom tone that you created:

### Find the Feature

**MENU** > **Settings** > **Ring Styles**  
> **My Tones**

| Press                                                                                                 | To                                                                        |
|-------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------|
| 1                  | scroll to the tone you want to edit                                       |
| 2 <b>EDIT</b> (  ) | open the tone details                                                     |
| 3                  | scroll to the details you want to edit<br>( <b>Name</b> or <b>Notes</b> ) |

# Adjusting Your Settings

| Press               | To                                  |
|---------------------|-------------------------------------|
| 4 <b>CHANGE</b> (⦿) | select the details you want to edit |
| 5 keypad keys       | enter new text or notes             |
| 6 <b>OK</b> (⦿)     | store the details                   |

## Deleting a Tone

You cannot delete the standard tones included with your phone. To delete a custom tone that you created:

### Find the Feature

**MENU** > **Settings** > **Ring Styles**  
> **My Tones**

| Press               | To                            |
|---------------------|-------------------------------|
| 1 ⬆<br>⬇            | scroll to the tone you want   |
| 2 <b>MENU</b>       | open the <b>My Tones Menu</b> |
| 3 ⬆<br>⬇            | scroll to <b>Delete</b>       |
| 4 <b>SELECT</b> (⦿) | select <b>Delete</b>          |
| 5 <b>YES</b> (⦿)    | confirm the deletion          |

## Reordering Menu Items

You can customize the order of the items in your phone's main menu, depending upon your usage.

### Find the Feature

**MENU** > **Settings**  
> **Other Settings**  
> **Personalize** > **Main Menu**



| Press                                                                                                 | To                                       |
|-------------------------------------------------------------------------------------------------------|------------------------------------------|
| 1                    | scroll to the menu item you want to move |
| 2 <b>GRAB</b> (  )   | grab the menu item you want to move      |
| 3                    | move the item up or down the menu        |
| 4 <b>INSERT</b> (  ) | insert the item in the new location      |

## Customizing a Soft Key Function

You can relabel the soft keys ( and ) to access different main menu items from the idle display.

### Find the Feature

 > **Settings**  
 > **Other Settings**  
 > **Personalize** > **Keys**

| Press                                                                                                   | To                                                             |
|---------------------------------------------------------------------------------------------------------|----------------------------------------------------------------|
| 1                    | scroll to <b>Left</b> or <b>Right</b>                          |
| 2 <b>CHANGE</b> (  ) | open the key editor                                            |
| 3                    | scroll to the new key function                                 |
| 4 <b>CHANGE</b> (  ) | confirm the new function                                       |
|                                                                                                         | The key will have the new function whenever the phone is idle. |

# ***Security***

---

## ***Assigning a New Code or Password***

Your phone's four-digit unlock code and the six-digit security code (originally set to 000000) are set at the factory. Your service provider may reset these numbers before you receive your phone.

If your service provider has *not* reset these numbers, we recommend that you change them to prevent other users from accessing your personal information or modifying your phone settings. The unlock code must contain four digits, and the security code must contain six digits. Be sure to make a note of the new numbers.

## ***Locking and Unlocking Your Phone***

You can lock your phone manually or set your phone to lock automatically whenever you turn it off.

When you try to use a locked phone, it asks you to enter the unlock code. A locked phone still rings or vibrates for incoming calls or messages, *but you must unlock it to answer.*

You may be able to make emergency calls on your phone even when it is locked. See "Dialing an Emergency Number" on page 29.



## Lock Your Phone Manually

### Find the Feature



> Settings > Security  
> Phone Lock > Lock Now

| Press         | To                                |
|---------------|-----------------------------------|
| 1 keypad keys | enter your four-digit unlock code |
| 2 OK (⌂)      | lock the phone                    |

## Set Your Phone to Lock Automatically

You can set your phone to lock every time you turn it off:

### Find the Feature



> Settings > Security  
> Phone Lock  
> Automatic Lock > On

| Press         | To                                  |
|---------------|-------------------------------------|
| 1 keypad keys | enter your four-digit unlock code   |
| 2 OK (⌂)      | set the phone to lock automatically |

## Unlock Your Phone

At the Enter Unlock Code prompt:

| Press         | To                                |
|---------------|-----------------------------------|
| 1 keypad keys | enter your four-digit unlock code |
| 2 OK (⌂)      | unlock your phone                 |

## ***Locking and Unlocking Your Keypad***

You can lock your phone keypad to prevent accidental use. This feature is useful in situations where an accidental keypress might inadvertently dial an emergency number or one-touch dial number (for example, when carrying your phone in a purse or pocket).

| Press                                                                                                                                                               | To                         |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------|
|   | lock or unlock your keypad |

**Note:** Incoming calls and messages unlock the keypad.

# Troubleshooting



Check these questions first if you have problems with your phone:

| Question                                                                                                                                              | Answer                                                                                                                                                                                                                                                                                                   |
|-------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Is your phone set up correctly?</b>                                                                                                                | Press <b>MENU</b> <b>#&gt;</b> . If you do not see your phone number, contact your service provider.                                                                                                                                                                                                     |
| <b>Is your battery charged? Do you see  in the display?</b>          | The battery level indicator should have at least one segment showing (  ). If it does not, recharge your battery. (See "Charging the Battery" on page 18 and "Battery Use" on page 26.)                               |
| <b>Does the handset have a signal? Do you see  in the display?</b> | Make sure that your antenna is fully extended (if applicable). The signal strength indicator should have at least one segment showing (  ). If it does not, move to an area with a stronger signal to use your phone. |
| <b>Is the earpiece volume too low or does the phone not ring?</b>                                                                                     | Press the upper volume key on the side of the phone.                                                                                                                                                                                                                                                     |

# Troubleshooting

| Question                                                   | Answer                                                                                                                                                                                                                        |
|------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Has the phone been damaged, dropped, or gotten wet?</b> | Dropping your phone, getting it wet, or using a non-Motorola battery or battery charger can damage the phone. The phone's limited warranty does not cover liquid damage or damage caused from using non-Motorola accessories. |
| <b>Was a non-Motorola battery or battery charger used?</b> |                                                                                                                                                                                                                               |

The following refer to specific problems:

| Problem                                                               | Solution                                                                                                                                                                                                                                                                                                                               |
|-----------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>I pressed the power key, but nothing happened.</b>                 | Be sure to press and hold  the power key until the display appears and you hear an audible alert (this could take a couple of seconds). If nothing happens, check that a charged battery is installed. (See "Installing the Battery" on page 17.) |
| <b>The display says: Enter Unlock Code. How do I unlock my phone?</b> | Enter the factory-preset unlock code, or the last four digits of your phone number. (See "Locking and Unlocking Your Phone" on page 90.) If this fails, call your service provider (the company that sends you your monthly wireless service bill).                                                                                    |



| Problem                                | Solution                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|----------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>I cannot send/receive calls.</b>    | <p>Make sure that your antenna is fully extended (if applicable) and that you have a phone signal (see the “Signal Strength Indicator” item on page 23). Avoid electrical or radio interference, and obstructions such as bridges, parking garages, or tall buildings.</p> <p>Your phone also may have the <b>Restrict Calls feature</b> turned on. If you know the unlock code, you can change this setting in the security menu (<b>MENU</b> &gt; <b>Settings</b> &gt; <b>Security</b>).</p> |
| <b>I cannot open my inbox.</b>         | <p>Before you can use text or information services messages, you must set up the appropriate inbox. See “Setting Up the Text Message Inbox” on page 70.</p>                                                                                                                                                                                                                                                                                                                                    |
| <b>My phone’s display is too dark.</b> | <p>You can use the <b>Contrast</b> feature (see page 57) to change the level of contrast in your phone display.</p> <p>You can also use the <b>Backlight</b> feature (see page 56) to change the length of time that your phone’s backlight display stays on.</p>                                                                                                                                                                                                                              |

# Troubleshooting

| Problem                                                                            | Solution                                                                                                                                                                                                                                                                                                                                                           |
|------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>I am unable to record a voice note or voice name.</b>                           | Try moving to a quieter location to make your voice recording. Hold the phone about four inches (10 centimeters) away from your mouth, and speak directly into your phone's microphone in a normal tone of voice.                                                                                                                                                  |
| <b>I launched the micro-browser but the display says: Service Not Available.</b>   | You may be in an area without service. If you have wireless service, look in the display for the digital signal indicator (D). If you do not see the indicator, you may be in an area that has only analog service or no service at all. If you see the digital signal indicator, you may be connected to a digital network that does not support Internet access. |
| <b>I launched the micro-browser but the display says: Data Server Unavailable.</b> | Try again in a few minutes. The servers may be temporarily busy.                                                                                                                                                                                                                                                                                                   |

# Programming Instructions

---

Follow this procedure if you need to program your phone's phone number or system ID.

**Note:** Programming is normally done by a trained technician at the site of purchase. Users should not make changes other than ones in the following procedure.

Before programming, ask your service provider for your:

- 10-digit MIN (Mobile Identification Number)
- 8- to 15-digit IMSI (International Mobile Service Identifier)
- 8- to 15-digit MDN (Mobile Directory Number)
- 5-digit AMPS SysID number
- 5-digit CDMA SysID number

| Do This                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | To                                         |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------|
| <b>1</b> Press     <br>  <br>(These keys spell P-H-O-N-E<br>+    ). | open the user activation menu              |
| <b>2</b> Press <b>SELECT</b> (  )                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | select <b>NAM1</b>                         |
| <b>3</b> Press the keypad keys for the 10-digit MIN                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | open the MIN display and enter the new MIN |
| <b>4</b> Press <b>OK</b> (  )                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | store the new MIN                          |
| <b>5</b> Similarly, enter appropriate numbers for the IMSI, MDN, AMPS SysID, and CDMA SysID                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |                                            |
| <b>6</b> Press <b>DONE</b> (  )                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | close the NAM1 list                        |
| <b>7</b> Press <b>BACK</b> (  )                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | close the user activation menu             |

# ***Specific Absorption Rate Data***

---

**This model phone meets the government's requirements for exposure to radio waves.**

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the U.S. Federal Communications Commission for the United States and by Health Canada for Canada. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by Health Canada is 1.6 W/kg.<sup>1</sup> Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network.

In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is  $1.55 \text{ W/kg}^2$ , and when worn on the body, as described in this user guide, is  $1.41 \text{ W/kg}^2$  (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure.

The FCC and Industry Canada have granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as being in compliance with the FCC and Health Canada RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of:

<http://www.fcc.gov/oet/fccid>

after searching on FCC ID IHDT56AL1. You may also refer to Motorola's Web site:

<http://www.motorola.com/rfhealth>

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

ITC01-064

***The U.S. Food and Drug  
Administration's Center for Devices  
and Radiological Health Consumer  
Update on Mobile Phones***

---



FDA has been receiving inquiries about the safety of mobile phones, including cellular phones and PCS phones. The following summarizes what is known—and what remains unknown—about whether these products can pose a hazard to health, and what can be done to minimize any potential risk. This information may be used to respond to questions.

**Why the concern?**

Mobile phones emit low levels of radio frequency energy (i.e., radio frequency radiation) in the microwave range while being used. They also emit very low levels of radio frequency energy (RF), considered non-significant, when in the stand-by mode. It is well known that high levels of RF can produce biological damage through heating effects (this is how your microwave oven is able to cook food). However, it is not known whether, to what extent, or through what mechanism, lower levels of RF might cause adverse health effects as well. Although some research has been done to address these questions, no clear picture of the biological effects of this type of radiation has emerged to date. Thus, the available science does not allow us to conclude that mobile phones are absolutely safe, or that they are unsafe. However, the available scientific evidence does not demonstrate any adverse health effects associated with the use of mobile phones.

## **What kinds of phones are in question?**

Questions have been raised about hand-held mobile phones, the kind that have a built-in antenna that is positioned close to the user's head during normal telephone conversation. These types of mobile phones are of concern because of the short distance between the phone's antenna—the primary source of the RF—and the person's head. The exposure to RF from mobile phones in which the antenna is located at greater distances from the user (on the outside of a car, for example) is drastically lower than that from hand-held phones, because a person's RF exposure decreases rapidly with distance from the source. The safety of so-called “cordless phones,” which have a base unit connected to the telephone wiring in a house and which operate at far lower power levels and frequencies, has not been questioned.

## **How much evidence is there that hand-held mobile phones might be harmful?**

Briefly, there is not enough evidence to know for sure, either way; however, research efforts are on-going. The existing scientific evidence is conflicting and many of the studies that have been done to date have suffered from flaws in their research methods. Animal experiments investigating the effects of RF exposures characteristic of mobile phones have yielded conflicting results. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. In one study, mice genetically altered to be predisposed to developing one type of cancer developed more than twice as many such cancers when they were exposed to RF energy compared to controls. There is much uncertainty among scientists about whether results obtained from animal studies apply to the use of mobile phones.

First, it is uncertain how to apply the results obtained in rats and mice to humans. Second, many of the studies that showed increased tumor development used animals that had already been treated with cancer-causing chemicals, and other studies exposed the animals to the RF virtually continuously—up to 22 hours per day.

For the past five years in the United States, the mobile phone industry has supported research into the safety of mobile phones. This research has resulted in two findings in particular that merit additional study:

- 1 In a hospital-based, case-control study, researchers looked for an association between mobile phone use and either glioma (a type of brain cancer) or acoustic neuroma (a benign tumor of the nerve sheath). No statistically significant association was found between mobile phone use and acoustic neuroma. There was also no association between mobile phone use and gliomas when all types of types of gliomas were considered together. It should be noted that the average length of mobile phone exposure in this study was less than three years.

When 20 types of glioma were considered separately, however, an association was found between mobile phone use and one rare type of glioma, neuroepitheliomatous tumors. It is possible with multiple comparisons of the same sample that this association occurred by chance. Moreover, the risk did not increase with how often the mobile phone was used, or the length of the calls. In fact, the risk actually decreased with cumulative hours of mobile phone use. Most cancer causing agents increase risk with increased exposure. An ongoing study of brain cancers by the

National Cancer Institute is expected to bear on the accuracy and repeatability of these results.<sup>1</sup>

- 2 Researchers conducted a large battery of laboratory tests to assess the effects of exposure to mobile phone RF on genetic material. These included tests for several kinds of abnormalities, including mutations, chromosomal aberrations, DNA strand breaks, and structural changes in the genetic material of blood cells called lymphocytes. None of the tests showed any effect of the RF except for the micronucleus assay, which detects structural effects on the genetic material. The cells in this assay showed changes after exposure to simulated cell phone radiation, but only after 24 hours of exposure. It is possible that exposing the test cells to radiation for this long resulted in heating. Since this assay is known to be sensitive to heating, heat alone could have caused the abnormalities to occur. The data already in the literature on the response of the micronucleus assay to RF are conflicting. Thus, follow-up research is necessary.<sup>2</sup>

FDA is currently working with government, industry, and academic groups to ensure the proper follow-up to these industry-funded research findings. Collaboration with the Cellular Telecommunications Industry Association (CTIA) in particular is expected to lead to FDA providing research recommendations and scientific oversight of new CTIA-funded research based on such recommendations.

Two other studies of interest have been reported recently in the literature:

- 1 Two groups of 18 people were exposed to simulated mobile phone signals under laboratory conditions while they

performed cognitive function tests. There were no changes in the subjects' ability to recall words, numbers, or pictures, or in their spatial memory, but they were able to make choices more quickly in one visual test when they were exposed to simulated mobile phone signals. This was the only change noted among more than 20 variables compared.<sup>3</sup>

- 2 In a study of 209 brain tumor cases and 425 matched controls, there was no increased risk of brain tumors associated with mobile phone use. When tumors did exist in certain locations, however, they were more likely to be on the side of the head where the mobile phone was used.

Because this occurred in only a small number of cases, the increased likelihood was too small to be statistically significant.<sup>4</sup>

In summary, we do not have enough information at this point to assure the public that there are, or are not, any low incident health problems associated with use of mobile phones. FDA continues to work with all parties, including other federal agencies and industry, to assure that research is undertaken to provide the necessary answers to the outstanding questions about the safety of mobile phones.

### **What is known about cases of human cancer that have been reported in users of hand-held mobile phones?**

Some people who have used mobile phones have been diagnosed with brain cancer. But it is important to understand that this type of cancer also occurs among people who have not used mobile phones. In fact, brain cancer occurs in the U.S. population at a rate of about 6 new cases per 100,000 people

each year. At that rate, assuming 80 million users of mobile phones (a number increasing at a rate of about 1 million per month), about 4800 cases of brain cancer would be expected each year among those 80 million people, whether or not they used their phones. Thus it is not possible to tell whether any individual's cancer arose because of the phone, or whether it would have happened anyway. A key question is whether the risk of getting a particular form of cancer is greater among people who use mobile phones than among the rest of the population. One way to answer that question is to compare the usage of mobile phones among people with brain cancer with the use of mobile phones among appropriately matched people without brain cancer. This is called a case-control study. The current case-control study of brain cancers by the National Cancer Institute, as well as the follow-up research to be sponsored by industry, will begin to generate this type of information.

## **What is FDA's role concerning the safety of mobile phones?**

Under the law, FDA does not review the safety of radiation-emitting consumer products such as mobile phones before marketing, as it does with new drugs or medical devices. However, the agency has authority to take action if mobile phones are shown to emit radiation at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of mobile phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions at this time, FDA has urged the mobile phone

industry to take a number of steps to assure public safety. The agency has recommended that the industry:

- support needed research into possible biological effects of RF of the type emitted by mobile phones
- design mobile phones in a way that minimizes any RF exposure to the user that is not necessary for device function
- cooperate in providing mobile phone users with the best possible information on what is known about possible effects of mobile phone use on human health

At the same time, FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of mobile phone safety to ensure a coordinated effort at the federal level. These agencies are:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Health and Safety Administration
- National Telecommunications and Information Administration

The National Institutes of Health also participates in this group.

### **In the absence of conclusive information about any possible risk, what can concerned individuals do?**

If there is a risk from these products—and at this point we do not know that there is—it is probably very small. But if people are concerned about avoiding even potential risks, there are simple steps they can take to do so. For example, time is a key

factor in how much exposure a person receives. Those persons who spend long periods of time on their hand-held mobile phones could consider holding lengthy conversations on conventional phones and reserving the hand-held models for shorter conversations or for situations when other types of phones are not available.

People who must conduct extended conversations in their cars every day could switch to a type of mobile phone that places more distance between their bodies and the source of the RF, since the exposure level drops off dramatically with distance. For example, they could switch to:

- a mobile phone in which the antenna is located outside the vehicle
- a hand-held phone with a built-in antenna connected to a different antenna mounted on the outside of the car or built into a separate package
- a headset with a remote antenna to a mobile phone carried at the waist

Again, the scientific data do not demonstrate that mobile phones are harmful. But if people are concerned about the radio frequency energy from these products, taking the simple precautions outlined above can reduce any possible risk.

## **Where can I find additional information?**

For additional information, see the following Web sites:

**Federal Communications Commission** (FCC) RF Safety Program (select "Information on Human Exposure to RF Fields from Cellular and PCS Radio Transmitters"):

<http://www.fcc.gov/oet/rfsafety>

**World Health Organization (WHO)** International Commission on Non-Ionizing Radiation Protection (select Qs & As):

<http://www.who.int/emf>

**United Kingdom, National Radiological Protection**

**Board:** <http://www.nrpb.org.uk>

**Cellular Telecommunications Industry Association (CTIA):**

<http://www.wow-com.com>

**U.S. Food and Drug Administration (FDA)** Center for Devices and Radiological Health: <http://www.fda.gov/cdrh/consumer/>

1. Muscat et al. Epidemiological Study of Cellular Telephone Use and Malignant Brain Tumors. In: State of the Science Symposium; 1999 June 20; Long Beach, California.
2. Tice et al. Tests of mobile phone signals for activity in genotoxicity and other laboratory assays. In: Annual Meeting of the Environmental Mutagen Society; March 29, 1999, Washington, D.C.; and personal communication, unpublished results.
3. Preece, AW, Iwi, G, Davies-Smith, A, Wesnes, K, Butler, S, Lim, E, and Varey, A. Effect of a 915-MHz simulated mobile phone signal on cognitive function in man. *Int. J. Radiat. Biol.*, April 8, 1999.
4. Hardell, L, Nasman, A, Pahlson, A, Hallquist, A and Mild, KH. Use of cellular telephones and the risk for brain tumors: a case-control study. *Int. J. Oncol.*, 15: 113-116, 1999.

ITC00-010

# ***Warranty***

---

## **Limited Warranty for Motorola Personal Communications Products and Accessories Purchased in the United States and Canada**

### **I. What This Warranty Covers**

Defects in materials and workmanship in the following new **"Products"** manufactured, sold or certified by Motorola, with which this limited warranty is included in/on the package:  
(a) wireless cellular telephones, pagers and two-way radios that operate via "Personal Radio Service" (such as Family Radio Service and General Mobile Radio Service), together with software imbedded in any of these products, and (b) subject to the following exceptions, accessories or software sold for use with these products.

- Battery Exception. This limited warranty extends only to batteries in which the fully-charged capacity falls below 80% of rated capacity and batteries that leak;
- Software Exceptions. This limited warranty extends only to physical defects in the media (such as CD-ROM) that tangibly embodies each copy of any software sold and/or certified by Motorola for use with Products. Software that is not tangibly embodied in media and that is purchased separately from Products (such as software that is downloaded from the internet) comes **"as is" and without warranty**.

## II. What the Period of Coverage Is

Subject to the following exceptions, one year from the date the Products are purchased by the first end-user:

- 90-Day Warranty Exception. The warranty is for 90 days for: (a) any software tangibly embodied in media or (b) any accessories for two-way radios that are covered by this warranty, as described in Section I, above.
- Limited Lifetime Warranty Exception. The warranty is a limited lifetime warranty for the lifetime of ownership by the first end-user of the following products, **only**: (a) decorative covers, including bezel, PhoneWrap™ or case (any model); and (b) ear buds and boom headsets that transmit mono sound through a wire connection (this does **not** include ear buds or boom headsets that either transmit stereo sound or that are wireless, or both).
- Repair/Replacement Exception. The warranty is for the balance of the original warranty or for 90 days from the date returned and delivered to the first end-user, whichever is longer.

## III. Who is Covered

This warranty extends to you only if you are the first end-user purchaser.

## IV. What We Will Do to Correct Warranty Problems

At no charge to you, we have the option to repair or replace the Products that do not conform to the warranty, or to refund the Products' purchase price. We may use functionally equivalent

# **Warranty**

reconditioned/refurbished/pre-owned or new Products or parts.  
No software updates are provided.

## **V. How to Get Warranty Service**

### **PLEASE CALL US — DO NOT SHIP:**

#### **USA**

**Cellular 1-800-331-6456**

**Paging 1-800-548-9954**

**FRS Radios 1-800-353-2729**

**TTY (Text Telephone)**

**1-888-390-6456**

#### **Canada**

**All Products**

**1-800-461-4575**

**TTY (Text Telephone)**

**1-888-390-6456**

Accessories and software—call the number designated for the product with which they are used.

You will receive instructions on how to ship the Products to Motorola or our designated resource. If instructed to ship the Products, you must ship them with freight, duties and insurance prepaid. Regardless of where you are instructed to return the Products, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider (if this Product requires subscription service); (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number. If requested, you must also return all detachable parts such as antennas, batteries and chargers. **RETAIN YOUR ORIGINAL PROOF OF PURCHASE.**

For Products we ask you ship to us, we will ship repaired or replacement Products at our expense for the freight and insurance, but at your expense for any duties. If additional

information is needed, please contact us at the telephone number listed above.

## **VI. What This Warranty Does Not Cover**

- **Products that are operated in combination with ancillary or peripheral equipment or software not furnished or otherwise certified by Motorola for use with the Products ("ancillary equipment"), or any damage to the Products or ancillary equipment as a result of such use. Among other things, "ancillary equipment" includes batteries, chargers, adaptors, and power supplies not manufactured or supplied by Motorola. Any of these voids the warranty.**
- Someone other than Motorola (or its authorized service centers) tests, adjusts, installs, maintains, alters, modifies or services the Products in any way. Any of these voids the warranty.
- Rechargeable batteries that: (a) are charged by other than the Motorola-approved battery charger specified for charging such batteries; (b) have any broken seals or show evidence of tampering; (c) are used in equipment other than the Product for which they are specified; or (d) are charged and stored at temperatures greater than 60 degrees centigrade. Any of these voids the warranty.
- Products that have: (a) serial numbers or date tags that have been removed, altered or obliterated; (b) board serial numbers that do not match each other, or board serial numbers that do not match the housing; or

# Warranty

(c) nonconforming or non-Motorola housings or parts. Any of these voids the warranty.

- Defects or damage that result from: (a) use of the Products in a manner that is not normal or customary; (b) improper operation or misuse; (c) accident or neglect such as dropping the Products onto hard surfaces; (d) contact with water, rain, extreme humidity or heavy perspiration; (e) contact with sand, dirt or the like; or (f) contact with extreme heat, or spills of food or liquid.
- Physical damage to the surface of the Products, including scratches, cracks or other damage to a display screen, lens or other externally exposed parts.
- Failure of Products that is due primarily to any communication service or signal you may subscribe to or use with the Products.
- Coil cords that are stretched or that have any broken modular tabs.
- Leased Products.

Flat-rate repair rates may apply to Products not covered by this warranty. To obtain information about Products needing repairs that are not covered by this warranty, please call the telephone number previously listed. We will provide information on repair availability, rates, methods of payment, where to send the Products, etc.

## VII. Some Other Limitations

**This is Motorola's complete warranty for the Products, and states your exclusive remedies. This warranty is**

given in lieu of all other express warranties. Implied warranties, including without limitation, the implied warranties of merchantability and fitness for a particular purpose, are given only if specifically required by applicable law. Otherwise, they are specifically excluded.

No warranty is made as to coverage, availability, or grade of service provided by the Products, whether through a service provider or otherwise.

No warranty is made that the software will meet your requirements or will work in combination with any hardware or applications software products provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.

In no event shall Motorola be liable, whether in contract or tort (including negligence) for damages in excess of the purchase price of the Product, or for any indirect, incidental, special or consequential damages of any kind, or loss of revenue or profits, loss of business, loss of information or data, or other financial loss arising out of or in connection with the ability or inability to use the Products, to the full extent these damages may be disclaimed by law.

## **VIII. Patent and Software Provisions**

At Motorola's expense, we will defend you, and pay costs and damages that may be finally awarded against you, to the extent that a lawsuit is based on a claim that the Products directly

infringe a United States patent. Our obligation is conditioned on: (a) you notifying us promptly in writing when you receive notice of the claim; (b) you giving us sole control of the defense of the suit and all negotiations for its settlement or compromise; and (c) should the Products become, or in Motorola's opinion be likely to become, the subject of a claim of infringement of a United States patent, you permit us, at our option and expense, either to: procure for you the right to continue using the Products; replace or modify them so that they become non-infringing; or grant you a credit for such Products, as depreciated, and accept their return. The depreciation will be an equal amount per year over the lifetime of the Products, as established by Motorola.

Motorola will have no liability to you with respect to any claim of patent infringement that is based upon the combination of the Products or parts furnished under this limited warranty with ancillary equipment, as defined in VI., above.

**This is Motorola's entire liability with respect to infringement of patents by the Products.**

## **IX. State Law and Other Jurisdiction Rights**

Some states and other jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from jurisdiction to jurisdiction.

# Warranty

To obtain information on Motorola Personal Communications Products, including warranty service, accessories and optional Extended Warranties on selected Products, please call:

## USA

**Cellular 1-800-331-6456**

**Paging 1-800-548-9954**

**FRS Radios 1-800-353-2729**

**TTY (Text Telephone)**

**1-888-390-6456**

## Canada

**All Products**

**1-800-461-4575**

**TTY (Text Telephone)**

**1-888-390-6456**

Accessories and software—call the telephone number designated above for the product with which they are used.

**DO NOT SHIP PRODUCTS TO THESE ADDRESSES —  
INSTEAD PLEASE CALL.**

To correspond with Motorola about Products, please write us at <http://www.motorola.com> or at:

In the USA:

Motorola, Inc.

600 North U.S. Highway 45

Libertyville, IL 60048

In Canada:

Motorola Canada Limited

5875 Whittle Road

Mississauga, ON L4Z 2H4

ITC01-078

# ***Export Law Assurances***

---

This product is controlled under the export regulations of the United States of America and Canada. The Governments of the United States of America and Canada may restrict the exportation or re-exportation of this product to certain destinations. For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade.

# ***Index***

---

## **A**

- accessories
  - standard 17
- accessories, optional 9, 65, 79
- accessory connector port 1
- alert
  - creating 84–88
  - defined 82
  - indicators 24, 82
  - type, selecting 83–84
- alert setting indicator 24
  - defined 82
- alert style
  - customizing 83–84
  - defined 82
  - setting 82–83
- animation 56
- antenna 20
- application, locking 54
- Attach Number** feature 31
- auto PIN dial 56
- automatic redial
  - activating 56
  - using 28

## **B**

- backlight 56
- banner text 55

## **battery**

- charging for first time 18
- charging with car kit 58
- extending battery life
  - 26–27, 56
- installing 17–18
- level indicator 24
- meter 52
- block cursor, defined 39
- browse text mode 40
- browser alerts 50
- browser. *See* micro-browser 51

## **C**

### **call**

- alert style, setting 82–83
- alert type, selecting 83–84
- alert, creating 84–88
- answer options 53
- answering 21
- attaching phone number to
  - prefix digits 31
- call waiting 34
- calling card 32
- data call, setting 53
- dialed calls list 33, 35, 48
- emergency number 29
- ending 20

- call (continued)
  - fax call, setting 53
  - in-call timer 53
  - incoming call type, setting 53
  - message center, accessing 35
  - muting 35
  - placing 20
  - received calls list 33, 35, 47
  - receiving 21
  - restricting 54
  - sending 20
  - three-way call 34
  - voice dial 33
- Call Failed** message 28
- call timers 48
- call waiting 34
- caller ID 29
- calling card call 32
- calling line identification. *See* caller ID
- car kit 58
- charging with car kit 58
- clock 24
- contrast 57
- cursor 39
- customer service, calling 49–50
- customizing the menu 88

## D

- data call
  - connecting to external device 52
  - incoming call format, setting 53
- date, setting 56
- default passwords 90
- dialed calls list 33, 35, 48
- digital/analog signal indicator 23
- display
  - animation 56
  - backlight 56
  - banner text 55
  - contrast 57
  - described 22–24
  - greeting 55
  - idle display 22
  - language 56
  - zoom 25, 56
- drafts folder 51
- DTMF tones 35, 57

## E

- earpiece
  - illustration 1
  - volume, adjusting 25

- email
  - sending 73–75
  - storing address 59
- emergency number 29
- end key
  - functions 1, 20
  - menu functions 36
- ending a call 20
- Enter Unlock Code** message 91
- event alert 83–84

## F

- fax call
  - connecting to external device 52
  - incoming call format, setting 53
- flashing cursor, defined 39
- FM radio headset 50, 65
- FM Stereo Radio Headset 79
- for hands-free use 58

## G

- greeting, display 55

## H

- hands-free use 58

- headset
  - FM radio 50, 65
  - FM Stereo Radio Headset 79
  - for hands-free use 58
  - jack 1

## I

- idle display, defined 22
- in use indicator 23
- inbox, text message 70
- in-call timer 53
- Incoming Call** message 29
- incoming call type 53
- indicators
  - alert setting 24, 82
  - battery level 24
  - digital/analog signal 23
  - in use 23
  - menu 22
  - message waiting 24, 72
  - ring alert 24, 82
  - roam 23
  - signal strength 23
  - silent alert 24, 82
  - vibrate alert 24, 82
  - voice message waiting 24, 68, 69
  - voice name 59

iTAP software  
  activating 44  
  entering words 45–46

## J

jack for hands-free headset 1

## K

key  
  end 1, 20, 36  
  left soft key 1, 36, 89  
  lock 92  
  menu 1, 21, 36  
  power 1, 19  
  right soft key 1, 36, 89  
  scroll 1, 36  
  send 1, 20, 21  
  voice 1, 63, 78  
  volume control 1, 36  
keypad  
  volume, setting 83  
keypad, answering calls with  
  53

## L

language 56  
left soft key  
  customizing 89  
  functions 1, 36

lock  
  applications 54  
  keypad 92  
  phone 90–91  
lock application feature 54  
loud ring alert 24, 82

## M

making a call 20  
master clear 57  
master reset 57  
**Memory is Full!** message 72  
**Memory is Low!** message 72  
menu  
  customizing 88–89  
  entering text 40–46  
  features 47–51  
  language, setting 56  
  locking applications 54  
  **My Tones Menu** 87, 88  
  navigating 8, 36–37  
  **Phonebook Menu** 49, 59  
  **Quick Note Menu** 76–77  
  rearranging features 88–89  
  scroll feature 56  
  **Text Msg Menu** 73  
  using features 8, 37–39  
menu indicator 22, 24  
menu key 1, 21, 36

- message
  - deleting 72–73
  - drafts folder 51
  - inbox setup 70–71
  - locking 72–73
  - outbox 50
  - quick note 50, 75–77
  - reading 72–73
  - receiving, text 71–72
  - reminders 68, 71
  - sending 73–75
  - text 50, 70–75
  - voicemail 50, 68–69
- message waiting indicator 24
  - flashing 72
- micro-browser
  - browser alerts 50
  - call a number from 81
  - defined 51, 80
  - functions 81
  - go to previous page 81
  - starting 80
- microphone 1
- muting a call 35
- my telephone number 35, 52
- my tones 84–88
- My Tones Menu** 87, 88

## N

- 'n' character 32

- network settings 57
- notepad 48
- numeric text mode 40

## O

- one-touch dialing 31
- optional accessory, defined 9
- optional feature, defined 9
- outbox 50

## P

- passwords
  - changing 55, 90
  - default 90
- pause character 32
- phone
  - accessories, optional 9
  - accessories, standard 17
  - answer options 53
  - connecting to external device 52
  - date, setting 56
  - feature specifications 35, 52
  - keypad, locking and unlocking 92
  - language, setting 56
  - locking 90–91
  - muting a call 35
  - network settings 57

- phone (continued)
  - one-touch dialing 31
  - passwords 55, 90
  - specifications 35, 52
  - speed dial, using 30
  - time, setting 56
  - turning on/off 19
  - unlocking 19, 90–91
  - voice dial 33
- phone number
  - attaching to prefix digits 31
  - redialing 28
  - viewing your own 21, 35
  - voice dial 33
- phonebook
  - attaching phone number to
    - prefix digits 31
  - dialing an entry number 63
  - email address 59
  - entry name 59
  - fields 59
  - number type indicator 59
  - one-touch dialing 31
  - phone number 59
  - speed dial number 30, 59, 61–62
  - speed dial, using 30
  - storing an entry 60–62
  - voice name entry 62–63
  - voice name indicator 59

- Phonebook Menu** 49, 59
- PIN code, dialing automatically 56
- power key 1, 19
- predictive text entry
  - activating 44
  - entering words 45–46

## Q

- quick dial
  - setting number 55
  - using 49–50
- quick note 50, 75–77
  - defined 70
- Quick Note Menu** 76–77

## R

- radio 50, 65–67
- received calls list 33, 35, 47
- receiving a call 21
- recent calls
  - attaching phone number to
    - prefix digits 31
  - menu description 47
- redial
  - automatic redial 28
  - busy number 28

- reminders
  - text message 71
  - voicemail message 68
- restricting calls 54
- right soft key
  - customizing 89
  - functions 1, 36
- ring alert
  - creating 84–88
  - indicators 24, 82
  - setting 82–83
  - type, selecting 83–84
- ring and vibrate alert
  - indicator 82
- ringer
  - setting 82–83
  - volume, adjusting 83
- ringer volume 25
- roam indicator 23

## **S**

- scroll feature 56
- scroll keys 1, 36
- send key 1, 20, 21
- sending a call 20
- short message service. *See* message
- signal strength indicator 23
- silent alert indicator 24, 82
- SMS. *See* message

- soft keys
  - customizing 55, 89
  - functions 36
  - illustration 1
- soft ring alert 24, 82
- speed dial
  - changing number 61–62
  - number, defined 30
  - using 30
- standby time, increasing 26
- style, alert
  - defined 82
  - setting 82–83
- symbol text mode 43–44
- symbols, entering 43–44

## **T**

- tap method text entry 41–42
- text
  - block cursor 39
  - browse mode 40
  - changing text mode 40
  - character chart 42
  - entering from keypad 40–46
  - flashing cursor 39
  - iTAP software predictive text entry 44–46
  - numeric mode 40
  - symbol chart 44

- text (continued)
  - symbol mode 43–44
  - tap method 41–42
- text message. *See* message
- text mode, changing 40
- Text Msg Menu** 73
- three-way call 34
- time, setting 56
- timers 48
- travel charger 18

## **U**

- unlock
  - keypad 92
  - phone 90–91

## **V**

- vibrate alert
  - indicator 24, 82
  - setting 82–83
  - type, selecting 83–84
- voice dial
  - dialing a number 33, 64
  - recording voice name 62–63
- voice key
  - dialing a number 33
  - functions 1
  - recording a voice name 63
  - recording a voice note 78

- voice message waiting indicator 24, 68, 69
- voice name
  - defined 62
  - phonebook indicator 59
  - recording 62–63
- voice note
  - defined 78
  - playing 79
  - recording 78
- voicemail 50, 68–69
- volume
  - earpiece 25
  - keypad 83
  - ringer 25, 83
- volume keys 1, 25, 36

## **W**

- wait character 32
- warranty 110–117
- Web pages
  - functions 81
  - viewing 80

## **Z**

- zoom setting 25, 56

**U.S. patent Re. 34,976**



# ***Wireless Phone Safety Tips***

*"Safety is your most important call!"*

**Your Motorola wireless telephone gives you the powerful ability to communicate by voice—almost anywhere, anytime, wherever wireless phone service is available and safe conditions allow. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.**

**When driving a car, driving is your first responsibility. If you find it necessary to use your wireless phone while behind the wheel of a car, practice good common sense and remember the following tips:**

- 1 Get to know your Motorola wireless phone and its features such as speed dial and redial.** If available, these features help you to place your call without taking your attention off the road.
- 2 When available, use a hands-free device.** If possible, add an additional layer of convenience to your wireless phone with one of the many Motorola Original™ hands-free accessories available today.



- 3 Position your wireless phone within easy reach.** Be able to access your wireless phone without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.
- 4 Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- 5 If you receive an incoming call at an inconvenient time do not take notes or look up phone numbers while driving.** Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility—driving safely.
- 6 Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic.** Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- 7 Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations which have the potential to divert your attention away from the road.
- 8 Use your wireless phone to call for help.** Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies.\*



- 9 Use your wireless phone to help others in emergencies.** If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.\*
- 10 Call roadside assistance or a special non-emergency wireless assistance number when necessary.** If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.\*

\* Wherever wireless phone service is available.

**Check the laws and regulations on the use of wireless telephones and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas.**



For more information,  
please call  
1-888-901-SAFE  
or visit the  
CTIA Web site at  
[www.wow-com.com](http://www.wow-com.com)<sup>TM</sup>







**MOTOROLA**



DIGITAL WIRELESS TELEPHONE

8988485Lo7-O