



EN


MOTOROLA XYBOARD 10.1

YOUR TABLET

The MOTOROLA XYBOARD 10.1 is a fit that's just right. It's thinner, lighter and one of the fastest, packed with new things to do and ways to do them. MotoCast lets you stream videos or music from your computer. With Evernote, you can write notes and check them later from your computer.

At a glance—Explore what your tablet can do:

- **Customize:** “**PERSONALIZE**” your tablet, then “**SURF**” and bookmark your favorite websites.
- **Stream:** “**STREAM**”, Share, and download media and other files with a computer.
- **Enjoy:** “**LOAD UP**” Apps, games, or “**PLAY & RECORD**” video, music, and more.

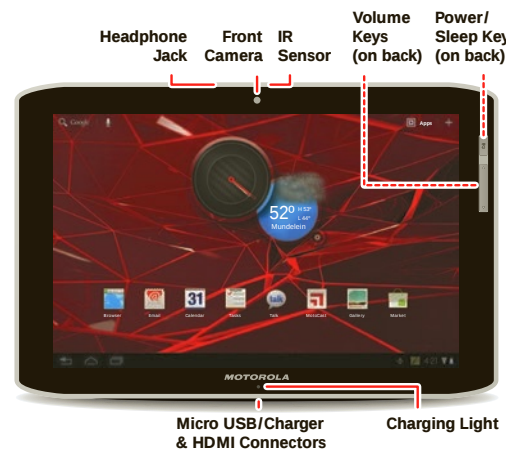

START

Press and hold Power/Lock on the back to turn on and off.

Note: Certain apps and features may not be available in all countries.

Before assembling, charging, or using your device for the first time, please read the important safety, regulatory and legal information provided with your product.

Tip: In the unlikely event that your tablet becomes unresponsive, try a forced reboot—press and hold both Power/Sleep and the down volume key for at least twelve seconds.


TOUCH

It's all in the touch:

- **Touch:** Choose or open an icon or option.
- **Touch & hold:** Move items on the home screen, or open options for items in lists.
- **Drag or Flick:** Scroll slowly (drag) or quickly (flick).
- **Pinch or double-tap:** Zoom in and out on websites, photos, and maps.

TIPS & TRICKS

- **Flick & stop:** When you flick a long list, touch the screen to stop it from scrolling.
- **Maps:** Twist a map with two fingers to rotate it, and pull two fingers down to tilt it.

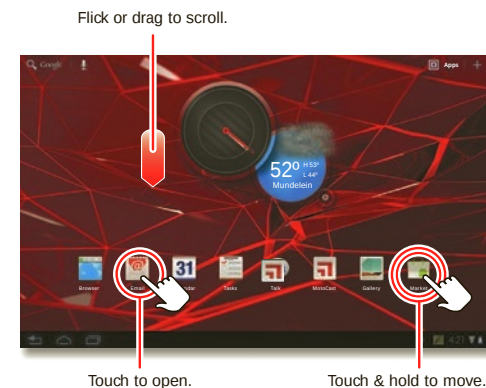

STREAM

Your computer, your tablet—make them the best of friends. Stream or download music and videos to your tablet and share photos, documents, and files. It's like having your own mini-cloud. The free MotoCast app gives you fast and secure access to your files.

To get started, touch > **MotoCast** and follow the on-screen instructions to create an account on your tablet. You'll be prompted to download and install MotoCast on your computer, log into the same account, and specify the files you want to share.

Next, finish the setup process on your tablet to share your files.

Note: If you have owned a previous Motorola device with a MOTOBLUR ID, this can be your MotoCast ID. If you don't have a MotoCast ID, then simply create one.



WANT MORE?

You can get more information, more help, more free stuff. We're here to help.

- **Answers:** Check out the help center on your tablet—touch > **Help Center**.
- **Support:** Tablet software updates, PC software, user guides, online help, and more at www.motorola.com or www.motorola.com/myxyboard10.1. You can call us with warranty and support questions at 1-800-734-5870 (United States), 1-888-390-6456 (TTY/TDD United States for hearing impaired), or 1-800-461-4575 (Canada).
- **Updates:** To keep your tablet current, software updates may be available. Touch > **Settings** > **About tablet** > **System updates** to see if your tablet is up to date. If it isn't, touch **Update**.
- **Join us:** Get the latest news, apps, tips & tricks, videos and so much more—join us on:

YouTube™ www.youtube.com/motorola

Facebook™ www.facebook.com/motorola

Twitter www.twitter.com/motomobile

Copyright & Trademarks

SAR This product meets the applicable limit for exposure to radio waves (known as SAR) of 1.6 W/kg (FCC & IC). The limits and guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The highest SAR values measured for this device are listed in the regulatory information packaged with your product. Certain features, services and applications are network dependent and may not be available in all areas; additional terms, conditions and/or charges may apply. Contact your service provider for details.

Note: The images in this guide are examples only. MOTOROLA and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. Google, the Google logo, Google Maps, Google Talk, Google Latitude, Gmail, YouTube, Picasa, Google Books, Google Docs, Google Goggles, Google Finance, Google Places, Google Maps Navigation Beta, Google Calendar, Android and Android Market are trademarks of Google, Inc. All other product or service names are the property of their respective owners. © 2011 Motorola Mobility, Inc. All rights reserved. Product ID: MOTOROLA XYBOARD 10.1 (Model MZ615) Manual Number: 68016377001-B

NAVIGATE

Find your way around:

- **Search:** Search with text or voice.
- **App menu:** See all your apps (if you have a lot, flick left and right to see them all).
- **Home:** To return to the home screen, touch in the bottom left.
- **Back:** Return to the previous screen.
- **Recent apps:** See recent apps. Touch an icon to open the app.

PERSONALIZE

Go ahead, add your personal touch. Change your widgets, wallpaper, and more—make it yours.

- **Home screen:** To move widgets or shortcuts, touch and hold them. To add Widgets, Wallpapers, and more, touch in the top right.
- **Sound & display:** To open settings quickly, touch the clock in the bottom right, then touch and Settings to choose Screen, Sound, or more.

TIPS & TRICKS

- **Add to your home screen:** Just touch and hold an empty spot on your home screen.
- **Remove from your home screen:** Touch and hold a widget or shortcut, then drag it to the trash can at the top right.
- **Settings app:** To open settings from the app menu, touch > Settings.

LOAD UP

Your tablet comes with fun games and apps—explore them, and download even more from Android Market™! Touch > Market.

- **Find:** To find a game or app, touch at the top.
- **Review:** To show the apps you've downloaded from Market, touch in the top right corner.

TIPS & TRICKS

- **Help:** To get help and more, touch Menu in the top right corner.
- **On a computer:** You can find and manage apps from any computer. Just go to market.android.com and log in with the email and password for your Google account.
- **Uninstall:** To uninstall your apps from Android Market, touch in the top right corner. Touch an app to show the Uninstall button.

SURF

You're surfing on the big screen. Access all your favorite sites: Touch > Browser.

- **Tabs:** Open multiple tabs in a single browser window, and switch between them with a simple touch.
- **Bookmarks:** If you love that website, bookmark it. With thumbnail views in the bookmark list, it's easy to find what you want.

TIPS & TRICKS

- **Touch & hold:** Touch and hold a link or text field for options.
- **Zoom:** To zoom in or out, pinch your fingers together or move them apart on the screen.
- **Share:** To send a website link to a friend, just touch Menu > Share page.

PLAY & RECORD

See it, capture it, share it! Snap photos with the 5MP camera, record video 1080p HD, or relax with music.

- **Photos & videos:** Touch > Camera, then slide the toggle to change to video mode.
- **Gallery:** View, edit, share. Touch > Gallery.
- **Music:** Touch > Music.

TIPS & TRICKS

- **Zoom:** To zoom in or out on photos, pinch your fingers together or move them apart on the screen.
- **Camera settings:** In the photo viewfinder, touch to open Camera settings.

EMAIL

Keep in touch with friends and colleagues the way you want.

- **Email:** Check your home and work email accounts—touch > Email or Gmail.
- **Add accounts:** Touch > Settings > Accounts & sync, then touch Add account in the top right. For Microsoft Exchange® work accounts, choose Corporate and enter settings from your IT department.

TIPS & TRICKS

- **Keypad:** Touch a text field to open the touchscreen keypad.
- **Drag or flick:** When you flick a long list of contacts or emails, touch the screen to stop it from scrolling.
- **Social networking:** Get Facebook™, Twitter, and lots more. Visit Android Market™ to grab the official latest apps and widgets, and see what everyone is up to. Touch > Market.

