



Your Palm[®] Treo[™] 750
Smart Device

Intellectual property notices

© 2007 Palm Inc. All rights reserved. Palm, Treo, and the Palm and Treo logos are among the trademarks or registered trademarks owned by or licensed to Palm Inc. AT&T, AT&T logo, Cingular and Cingular logos are trademarks of AT&T Knowledge Ventures and/or AT&T affiliated companies. All other brand and product names are or may be trademarks of, and are used to identify products or services of, their respective owners.

This product is protected by one or more of the following United States patents:

7,007,239; 6,976,226; 6,975,304; 6,965,375; 6,961,567; 6,961,029; 6,957,397; 6,952,571; 6,950,988; 6,947,975; 6,947,017; 6,943,667; 6,940,490; 6,924,752; 6,907,233; 6,906,701; 6,906,741; 6,901,276; 6,850,780; 6,845,408; 6,842,628; 6,842,335; 6,831,662; 6,819,552; 6,804,699; 6,795,710; 6,788,285; 6,781,824; 6,781,575; 6,766,490; 6,745,047; 6,744,451; 6,738,852; 6,732,105; 6,724,720; 6,721,892; 6,712,638; 6,708,280; 6,697,639; 6,687,839; 6,685,328; 6,665,803; 6,618,044; 6,590,588; 6,539,476; 6,532,148; 6,523,124; 6,519,141; 6,516,202; 6,490,155; 6,480,146; 6,457,134; 6,456,247; 6,442,637; 6,441,824; 6,437,543; 6,429,625; 6,425,087; 6,389,572; 6,388,877; 6,381,650; 6,363,082; 6,344,848; 6,317,085; 6,241,537; 6,222,857; 6,185,423; 6,147,314; 6,115,248; 6,064,342; 6,041,251; D429,252; D466,128; D478,091. Patent pending.

This product also is licensed under United States patent 6,058,304.

MPEG Layer-3 audio decoding technology is licensed from Fraunhofer IIS and Thomson. Palm, Inc. is an authorized licensee of the MultiMediaCard trademark. This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary. All rights reserved.

Disclaimer and limitation of liability

Palm Inc. and its suppliers assume no responsibility for any damage or loss resulting from the use of this guide. Palm Inc. and its suppliers assume no responsibility for any loss or claims by third parties that may arise through the use of this software. Palm Inc. and its suppliers assume no responsibility for any damage or loss caused by deletion of data as a result of malfunction, dead battery, or repairs. Be sure to

make backup copies of all important data on other media to protect against data loss.

End user notice

NOTE The Voice Command application is not available in all languages. See [Setting up voice commands](#).

Microsoft® Voice Command Version 1.5 for Windows Mobile®

IMPORTANT Do not become distracted from driving safely if operating a motor vehicle while using Device Software.

Operating certain parts of this Device requires user attention. Diverting attention away from the road while driving can possibly cause an accident or other serious consequences. Even occasional, short diversions of attention can be dangerous if your attention is diverted away from your driving task at a critical time. Do not change system settings or enter data non-verbally (using your hands) while driving. Stop the vehicle in a safe and legal manner before attempting these operations. This is important since while setting up or changing some functions you might be required to distract your attention away from the road and remove your hands from the wheel.

Microsoft makes no representations, warranties, or other determinations that ANY use of the Software Product is legal, safe, or in any manner recommended or intended while driving or otherwise operating a motor vehicle.

General Operation

NOTE The Voice Command application is not available in all languages. See [Setting up voice commands](#).

Voice Command Control: Many of the functions of the Device Software can be accomplished using only voice commands. Using voice commands while driving allows you to initiate the command with a button and then operate the Device mostly without removing your hands from the wheel.

Prolonged Views of Screen: If you are driving, do not access any function requiring a prolonged view of the screen. Pull over in a safe

and legal manner before attempting to access a function of the system requiring prolonged attention. Even occasional short scans to the screen may be hazardous if your attention has been diverted away from your driving task at a critical time.

Volume Setting: Do not raise the volume excessively. Keep the volume at a level where you can still hear outside traffic and emergency signals while driving. Driving while unable to hear these sounds could cause an accident.

Let Your Judgment Prevail: The Device Software is only an aid. Make your driving decisions based on your observations of local

conditions and existing traffic regulations. The Device Software is not a substitute for your personal judgment.

Use of Speech Recognition Functions: Speech recognition software is inherently a statistical process which is subject to errors. It is your responsibility to monitor the speech recognition functions and address any errors.

PN: 406-11010-00
v 1.0

Contents

Welcome	1
What's in the box?	1
What do I need to get started?	2
Do I need another SIM card?	3
Chapter 1: Setting up	5
Palm Treo 750 smart device overview	7
Inserting the SIM card and battery	9
Charging the battery	11
Making your first call	14
Setting up synchronization	16
Chapter 2: Moving around on your Palm® Treo™ 750 smart device	17
Navigating around the screen	19
Using the keyboard	26
Opening and closing applications	30
Using your Today screen	31
Chapter 3: Your phone	33
Turning your Palm® Treo™ 750 smart device on/off	35
Making calls from the Today screen	36
Other ways of making calls	40
Receiving calls	41
Using voicemail	42
What can I do during a call?	43
Defining speed-dial buttons	49
Using a phone headset	52

Customizing phone settings	56
What are all those icons?	63
Chapter 4: Synchronizing information	67
How do I synchronize?	70
What can I synchronize?	71
Setting up your computer for synchronization	72
Synchronizing using the sync cable	77
Setting up wireless synchronization	77
Other ways to synchronize	82
Setting synchronization options	84
Chapter 5: Your email	85
Setting up	87
Sending and receiving messages	93
Working with email messages	96
Sending email messages from within another application	100
Chapter 6: Your text and multimedia messages	101
Using the Messaging application	103
Customizing the Messaging application	111
Using Pocket MSN	115
Chapter 7: Your connections to the web and wireless devices	117
Browsing the web	119
Connecting to devices with Bluetooth® wireless technology	125
Using your device as a wireless modem	129

Chapter 8: Your photos, videos, and music	133
Camera	135
Pictures & Videos	140
Windows Media Player Mobile	144
Chapter 9: Your personal information organizer	151
Contacts	153
Calendar	156
Tasks	162
Notes	164
Chapter 10: Your Microsoft Office tools	169
Synchronizing your Microsoft Office files	171
Word Mobile	171
PowerPoint Mobile	177
Excel Mobile	178
Chapter 11: Your application and info management tools	189
Finding information	191
Installing applications	193
Removing applications	196
Sharing information	196
Beaming information	197
Using expansion cards	199
Calculator	203
Chapter 12: Your personal settings	205
Today screen settings	207
System sound settings	208
Display and appearance settings	210
Application settings	212

Locking your Treo 750 and info	216
System settings	220
Connection settings	226
Chapter 13: Common questions	229
Transferring info from another device	229
Reinstalling the desktop software	229
Resetting your Treo 750	230
Performance	234
Screen	235
Network connection	235
Synchronization	239
Email	245
Web	247
Camera	248
Third-party applications	249
Making room on your Treo 750	250
Voice quality	251
Where to learn more	253
Terms	255
Regulatory information	261
Specifications	267
Index	271

Welcome

Congratulations on the purchase of your Palm® Treo™ 750 smart device. In one compact and indispensable device, you now have all of the following:

- An advanced wireless smart device
- A Windows Mobile® organizer with portable expansion capability (miniSD)
- High-speed data with GPRS/EDGE and UMTS support
- A 1.3-megapixel digital camera (camera version only)

DID YOU KNOW? The AT&T business-to-business sales department offers a Treo 750 without a camera.

- Support for numerous mobile email solutions
- Text and multimedia messaging
- Windows Media® Player Mobile
- Microsoft® Office Mobile suite

This guide will help you set up your Treo 750 and quickly learn to use it.

NOTE If you want to use your phone and send and receive text messages, you need a service contract with AT&T. If you also want to browse the web and send and receive email, you need not only a service contract but also high-speed data service from AT&T. You may also need high-speed data service to send and receive multimedia messages. Data speeds vary based on network availability and capacity.

TIP LOOK HERE: Don't miss the helpful tips and cross-references given in this box.

What's in the box?

You should have received all of the following items in the Treo 750 box:

Hardware

- Treo 750 smart device
- Rechargeable battery (1200 mAh)
- AC charger
- USB sync cable

- SIM card (certain Treo 750 packages only)
- Stereo headset
- Screen protector

Documentation and software

- *Read This First* setup poster
- *Treo 750 Smart Device Quick Reference Guide*
- Windows Mobile Getting Started Disc, which includes the following:
 - ActiveSync® desktop synchronization software
 - Additional software for your Treo 750
 - User Guide (this guide)
- Palm warranty
- End User License Agreement

What do I need to get started?

As you work through the instructions in this guide, you need all the items that came in

the Treo 750 box (see [What's in the box?](#)) as well as the following:

- An activated wireless account (using a AT&T SIM card) with data services
- If you plan to synchronize personal information between your Treo 750 and a computer, you need access to that computer during setup, including the following:

- Microsoft Outlook 2002 or later for synchronization of your email, calendar, contacts, notes, and tasks
- Windows Media Player 10 or later for synchronization of music and videos

For more information about synchronization, see [Setting up your computer for synchronization](#).

- You must also have your Treo 750 within range of AT&T cellular coverage.

NOTE If you need Microsoft Office Outlook or Windows Media Player you can get these applications from the Getting Started CD. Insert the CD into your computer's CD drive, select **Add new programs to my desktop PC** and follow the onscreen prompts.

NOTE Windows Vista users: Before inserting the Palm Software Installation CD, please visit www.palm.com/windows/vista, where you'll find installation instructions and information about using your smartphone and desktop software with Windows Vista.

Do I need another SIM card?

You must have a 3G SIM card in your Treo 750 to take advantage of fast broadband speeds. To determine if you have a 3G SIM card, look for "3G" to the left of the gold connector on the back of the card.

If you do not have a 3G SIM card, please visit your local AT&T retail store to swap your existing SIM card for a 3G SIM card. There is no charge to exchange your SIM card for a 3G SIM card.



Setting up

Congratulations on the purchase of your new Palm® Treo™ 750 smart device. You're about to discover the many things about your Treo 750 that will help you better manage your life and have fun, too.

As you become more familiar with your Treo 750, you'll want to personalize the settings and add applications to make it uniquely yours. But first, take these few easy steps to set up your Treo 750 and get it running.

Benefits

- Know where your Treo 750 controls are located
- Start using your Treo 750 right away

In this chapter

Palm Treo 750 smart device overview	7
Inserting the SIM card and battery.	9
Charging the battery.	11
Making your first call	14
Setting up synchronization	16

Palm Treo 750 smart device overview

Front view




TIP Be careful not to scratch or crush your Treo 750 screen. Do not store it in a place where other items might damage it. Visit www.palm.com/mytreo750cingular to find a variety of useful accessories, including carrying cases that protect the screen.


DID YOU KNOW? By default, pressing the Side button opens the Windows Media® Player Mobile application (see [Windows Media Player Mobile](#)). You can change the function of the Side button (see [Reassigning buttons](#)).

IMPORTANT The Treo 750 speaker includes a large magnet, so be sure not to store your Treo 750 near credit cards or other items that could be demagnetized.

Back view

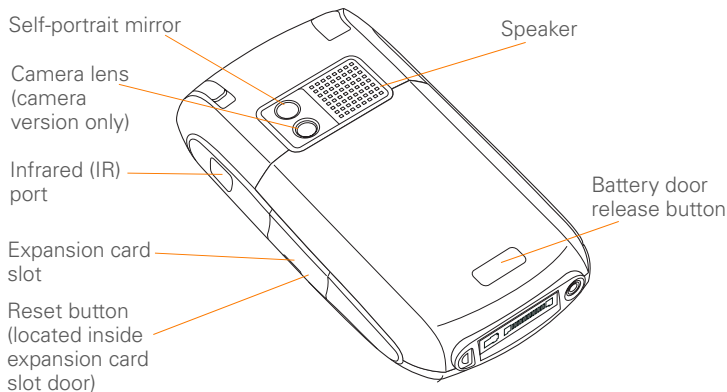

Top view

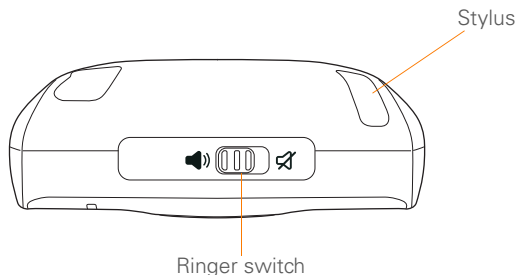

DID YOU KNOW? The Ringer switch silences all sounds, including music, at once; you don't need to hunt for "off" or "mute" settings in individual applications.


Inserting the SIM card and battery

Your SIM card contains account information such as your phone number and voicemail access number. To use your Treo 750 smart device's phone, email, or


web features, you need to insert a SIM card. If a SIM card is not included in your Treo 750 box, AT&T will provide you with one.

TIP If you don't have a SIM card, contact AT&T customer care at 1-866-246-4852 or dial 611 from your Treo 750.


- 1 Use one hand to press the **Battery door release** button, and use your other hand to slide the battery door downward to remove it from your Treo 750.

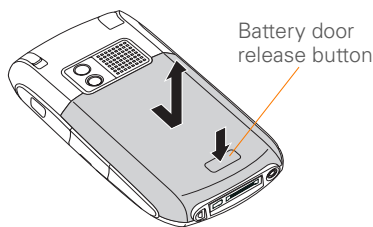

- 2 If the battery is installed, remove it. Slide your finger under the left side of the battery (nearest the stylus) and lift up to remove.
- 3 With the metal contacts facing the battery compartment, slide the SIM card into the cutout in the lower-right corner of the compartment until you feel it snap into place. Align the notches to make sure you have the card oriented correctly.

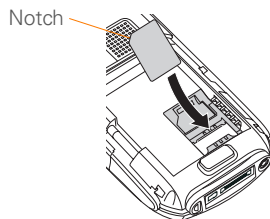

- 4 Align the metal contacts on the battery with the contacts inside the battery compartment, insert the battery into the compartment at a 45-degree angle, and then press it into place.

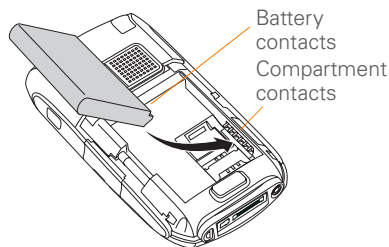

- 5 Slide the battery door back into place. Your Treo 750 screen turns on. Wait for the progress bar to fill and the Windows Mobile® screen to appear.

TIP If your Treo 750 does not turn on after you insert the battery, you need to connect it to the AC charger to charge it; see [Charging the battery](#). If it still doesn't start, perform a soft reset; see [Performing a soft reset](#) for information.

- 6 Follow the onscreen instructions to finish the installation.
- 7 If your SIM card is not already activated, follow the activation steps provided by AT&T, or contact AT&T directly for assistance. If you plan to use email and web browsing, you need high-speed data service from AT&T in addition to your service contract. You may also need high-speed data service to send and receive multimedia messages.


TIP You can buy an extra battery as a spare for long airplane trips or periods of heavy data use. To ensure proper functioning, be sure to use batteries from Palm only. Visit www.palm.com.

Charging the battery

Although the battery may come with a sufficient charge to complete the setup process, we recommend that after setup you charge your Treo 750 for three hours (or until the indicator light is solid green) to give it a full charge. See [Maximizing battery life](#) for tips on making your battery's power last longer.

BEFORE YOU BEGIN Make sure the battery is inserted before you charge. If you connect your Treo 750 to a power source without the battery inserted, nothing happens.

- 1 Plug the AC charger into a wall outlet.
- 2 With the arrow on the connector facing up (toward your Treo 750 screen), connect the charger cable to the bottom of your Treo 750.

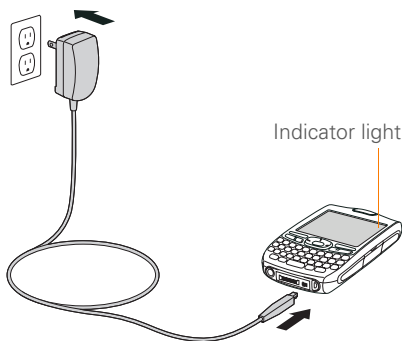

- 3** Check the indicator light to confirm that your Treo 750 is being charged.
- Solid red indicates that your Treo 750 is being charged.
 - Solid green indicates that your Treo 750 is fully charged.

DID YOU KNOW? If the battery is low, the indicator light flashes red.

When your Treo 750 is on (see [Turning your Palm® Treo™ 750 smart device on/off](#)), the

onscreen battery icon displays the charging status:



A solid lightning bolt indicates that the battery is connected to a wall outlet and is charging.




A shaded lightning bolt indicates that the battery is connected to a wall outlet and is fully charged.



A partial battery without a lightning bolt indicates that the battery is not connected to a wall outlet and that it has some power.



An exclamation point (!) indicates that the battery needs to be charged immediately.

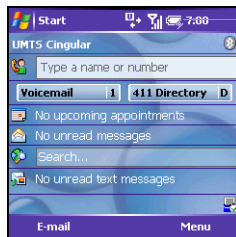

Battery icon

DID YOU KNOW? If your battery ever becomes fully drained, your info remains safely stored on your Treo 750. Recharge the battery to access your info.

Maximizing battery life

Battery life depends on how you use your Treo 750. You can maximize the life of your battery by following a few easy guidelines:

- Charge your Treo 750 whenever you're at your desk, or charge it overnight each day. The battery in your Treo 750 has a much longer useful life if you charge it frequently instead of waiting until it's fully drained.
- If you spend a lot of time using the camera (if included), games, media players (including listening to music with wireless headphones using the built-in Bluetooth® wireless technology), eBooks, or other applications, keep an eye on the battery icon and charge when necessary.
- The wireless features (phone, email, messaging, and web) on your Treo 750 generally consume more power than the organizer features. If you don't plan

to use the wireless features on your Treo 750 for a while, turn off your wireless services (see [Turning wireless services on/off](#)). You can forward calls to a different number or let all calls be picked up by voicemail (see [Forwarding calls](#)). To see if your wireless services are on, tap the phone-off  icon, and then select **Wireless Manager**.

DID YOU KNOW? You can also see if your wireless services are on by pressing **Menu** (right action key) and selecting **Wireless Manager**.

- If you are synchronizing email and other information directly with your corporate Exchange Server using Microsoft Exchange ActiveSync®, set the synchronization interval to a maximum of every 15 minutes during peak times and every hour (or turned off completely) during non-peak times (see [Setting the synchronization schedule](#)).
- Turn off the Bluetooth feature when you do not need to make a Bluetooth connection (see [Entering basic Bluetooth settings](#)).

- Turn the voice command feature off (see [Setting up voice commands](#)).
- As with any mobile phone, if you are in an area with no wireless coverage, your Treo 750 searches for a signal, which consumes power. If you cannot move to an area of better coverage, temporarily turn off your phone (see [Turning your Palm® Treo™ 750 smart device on/off](#)).
- Turn down the screen brightness (see [Adjusting the brightness](#)).
- Set your screen to turn off automatically after a shorter period of inactivity (see [Optimizing power settings](#)).
- Turn off the option to receive beamed information (see [Beaming a record](#)).
- Keep your battery away from direct sunlight and other sources of heat. Temperatures over 120 degrees Fahrenheit (50 degrees Celsius) can permanently reduce the capacity and life span of any lithium ion battery.

Making your first call



- 1 Press **Phone/Send**  to display your Today screen.

TIP You can also press **Power/End** to display your Today screen, unless you are on a call. If you're on a call, pressing Power/End hangs up the call.

- 2 If prompted, press **Center**  to turn off **Keyguard** (see [Locking your keyboard \(Keyguard\)](#) for more info).
- 3 Use the number pad on the keyboard to enter the number you want to call.

TIP The Dial Lookup list might appear while you are dialing a number. Continue entering numbers to place the call. For more info on the Dial Lookup list, see [Dialing by contact name](#).

- 4 Press **Phone/Send**  to dial.
- 5 When your call is complete, press **Power/End**  to end the call.



Adjusting call volume

While a call is in progress, press the **Volume** button on the side of your Treo 750 to adjust the call volume.



What's my number?

- 1 Make sure your phone is on (see [Turning your Palm® Treo™ 750 smart device on/off](#)).
- 2 If you do not see your Today screen, press **Phone/Send** .
- 3 Press **Menu**  (right action key).
- 4 Select **Preferences > Phone Settings**.
- 5 On the Phone tab, look for your phone number below the title bar.

Look here for your
phone number



6 Press **OK** .

TIP If your phone number doesn't appear on the Phone Settings screen, your network has not yet sent the number to the SIM card (this does not affect SIM card functionality). Turn your phone off, wait a few hours, and then turn on your phone and repeat these steps. If your phone number still does not appear, please contact AT&T for assistance.

Setting up synchronization

Once you've finished setting up your Treo 750, we recommend that you set up a synchronization method to get the most out of your Treo 750. Synchronization allows you to enter or change information on your Treo 750 or in Microsoft Office Outlook® on your computer; your info is then automatically updated in both places—no need to enter the info twice. See [Synchronizing information](#).



Moving around on your Palm[®] Treo[™] 750 smart device

Have you ever been to a new city and felt a bit lost until you figured out that the numbered streets run north/south and the avenues run east/west? Learning to move around on your Palm[®] Treo[™] 750 smart device is similar. Most applications that work on your Treo 750 use the same set of controls. So once you learn how to use these controls, you'll be driving all over town and you won't even need a map.

Benefits

- Quickly move around and complete tasks in applications using one thumb on the 5-way navigator
- Access extra features with menus
- Find and open applications quickly

In this chapter

Navigating around the screen	19
Using the keyboard	26
Opening and closing applications.	30
Using your Today screen	31

Navigating around the screen

To navigate around the Treo 750 screen, you can use the 5-way navigator or you can tap items on the screen with the stylus. As you become familiar with your Treo 750, you'll find your own favorite way to scroll, highlight, and select items.


Using the 5-way, press **Right** ▶, **Left** ◀, **Up** ▲, or **Down** ▼ to move around the

screen. Press **Center** ○ to highlight and select items.

TIP Some third-party applications may not work with the 5-way navigator, and you must use the stylus instead.

DID YOU KNOW? Custom navigation features are available when you browse the web using Internet Explorer. See [Viewing a web page](#).

TIP The arrow icons that indicate directions on the 5-way are different from the onscreen scroll arrows and the arrows that indicate that a list is available (see [Selecting options in a list](#)).

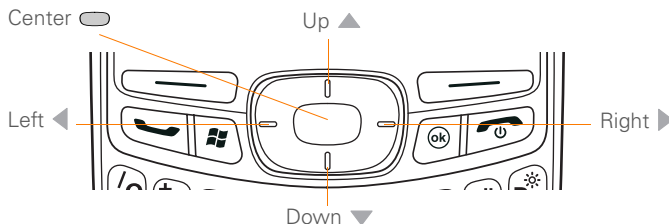

Scrolling through screens

As on a computer, on your Treo 750 you scroll to move from field to field or page to page, or in some cases to highlight an item or option in a list. There are several methods of scrolling:


- Press the 5-way on the front of your Treo 750. Press **Right** ►, **Left** ◄, **Up** ▲, or **Down** ▼ to move to the next field, button, or action in that direction.
- Press and hold **Option** Ⓞ while pressing **Up** ▲ or **Down** ▼ to scroll one screen at a time. These keys work just like the Page Up and Page Down keys on your computer keyboard.

TIP Can't find the Option key? See [Using the keyboard](#).

- Press and hold **Option** Ⓞ while pressing **Left** ◄ or **Right** ► to jump to the top or bottom of the current document or entry.

TIP When you are using applications such as Inbox, Internet Explorer Mobile, and Word Mobile, press and hold **Option** while pressing **Left** or **Right** on the 5-way to automatically go to the top and bottom of a screen.

- When viewing a screen with tabs, such as when adding a contact, press **Down** ▼ to scroll to the tabs, and then press **Left** ◄ or **Right** ► to move between tabs.
- When inside a text field, press **Right** ► or **Left** ◄ to move to the next character, and press **Up** ▲ or **Down** ▼ to move between lines.
- When inside a list, press and hold **Up** ▲ or **Down** ▼ to rapidly scroll through the list.
- Tap an onscreen scroll arrow.

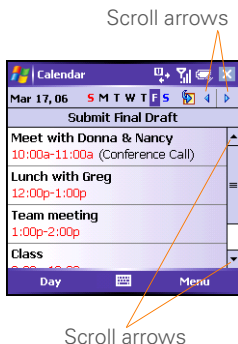

- Tap and drag the slider of an onscreen scroll bar.

Closing screens

To accept the information you entered on a screen and to return to the previous screen—or to return to the previous screen without making any changes—do one of the following:

- Press **OK** .
- Use the stylus to tap **ok** or **X** in the upper-right corner of the screen. These buttons are not accessible using the 5-way.

 
Highlighting and selecting items

On most screens, one item—a button, a list entry, or a check box—is highlighted by default. The highlight identifies which item is affected by your next action. Use the 5-way to move the highlight from one item to another before opening or selecting it.


TIP The best way to learn to use the 5-way is to experiment. Press the 5-way buttons and as you do, follow the movement of the border around the screen. The behavior of the 5-way varies slightly in each application.

The highlight can take one of two forms, depending on what is highlighted:

- **Border:** This rectangular border highlights items such as an onscreen button (such as OK, Dismiss, or Hide), a check box, an option, or a web link.



 - **Reverse type (light text on a dark background):** This highlights items such as a phone number, an email address, text, or an item in a list.



After highlighting an item with the 5-way, you can select or activate it by pressing **Center**  or by tapping the item with the stylus.

Highlighting text

You can use the 5-way or the stylus to highlight text on the screen:


- **5-way:** Press and hold **Shift** () or ) while pressing **Right** , **Left** , **Up** , or **Down**  to extend the highlight in that direction.

- **Stylus:** Tap and drag the stylus across the text you want to highlight. To highlight a word, double-tap it. To highlight a paragraph, triple-tap it.

TIP When text is highlighted, you can press **Backspace** to delete the highlighted text.

Using the action keys


The left and right action keys give you quick access to tasks that you can do on the current screen, so the action key items vary from application to application and from screen to screen. Look on the screen directly above the action key to see the action that it takes in the current context. In some contexts, these keys may do nothing at all. In most cases the right action key  opens the menu, and the left action key  activates a specific command, such as New or Edit. Remember that action key functions vary from screen to screen, so be sure to check the onscreen label before pressing the action keys.

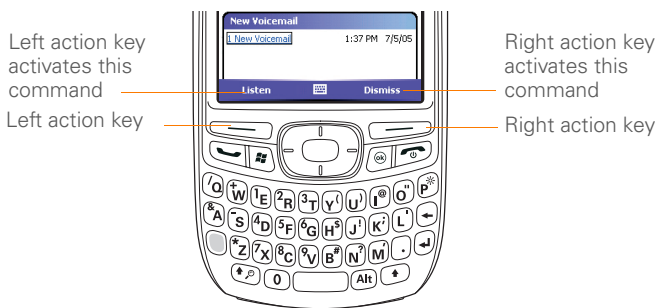

Selecting menu items

In many applications, a menu provides access to additional features. The menu is hidden until you press Menu (right action key). To get the most out of your Treo 750, it's a good idea to familiarize yourself with the additional features available through the menu in various applications.

- 1 Press **Menu** (right action key) to display an application's menu.
- 2 Press **Up** ▲ or **Down** ▼ to highlight a menu item.

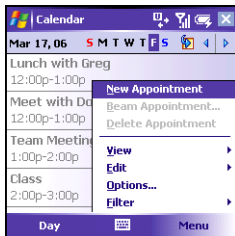


- 3 If an arrow appears next to a menu item, press **Center**  or **Right**  to display additional options for that item, and then press **Up**  or **Down**  to highlight a menu item. To return to the main menu without making a selection, press **Left** .
- 4 Press **Center**  to select the menu item, or press **Left**  or **Menu**  (right action key) to close the menu and cancel your selection.

DID YOU KNOW? You can select most menu items by pressing a key on the keyboard. To quickly access a menu item, press **Menu** (right action key) followed by the underlined letter in the menu item's name.

Selecting options in a shortcut menu

Most applications also provide access to context-sensitive, shortcut menus—similar to the right-click menus on a computer. The shortcut menu options vary based on the highlighted selection.

- 1 Highlight the item whose shortcut menu you want to see.

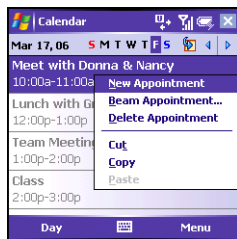

- 2 Press and hold **Center**  to open the shortcut menu.



TIP You can also tap and hold the stylus on an item to open the shortcut menu.

- 3 Press **Up**  or **Down**  to highlight a menu item.
- 4 Press **Center**  to select the menu item or press **Left**  to cancel your selection.

Selecting options in a list

Lists enable you to select from a range of options. You can identify whether a list is available when you select the field. If a rectangle appears around the field along with a downward-pointing arrow, a list is

available. Lists are different from the menus described earlier in this section.

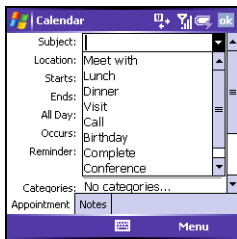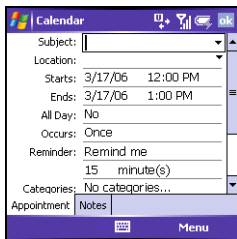

TIP When selecting fields you might not see the downward-pointing arrow until you press Center on the 5-way.


To select from a list, do any of the following:

- Use the 5-way to highlight the field, and then press **Center** to display the items in the list. Press **Up** or **Down** to highlight the item you want, and then press **Center** to make your selection.
- Use your stylus to tap the arrow, and then tap the item in the list.

DID YOU KNOW? In fields where you see a downward-pointing arrow but no rectangle, you must tap the arrow with the stylus to expand the field.

- To exit the list and cancel your selection, press **Left**.

Using the keyboard

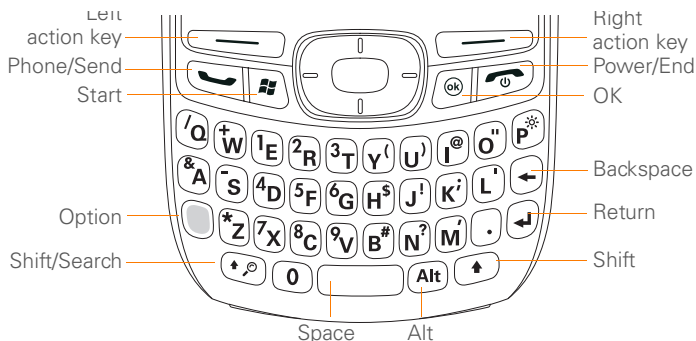

TIP When using the keyboard, most people find it easiest to hold the Treo 750 with two hands, using the tips of both thumbs to press the keys.

DID YOU KNOW? You can also use the onscreen keyboard to enter letters, numbers, and other characters in applications that support this feature. Tap the keyboard icon in the center at the bottom of any screen where it appears. After opening the keyboard, you can set various input options by tapping the arrow to the right of the keyboard icon.

Understanding the keyboard backlight

Your Treo 750 includes a keyboard backlight for low light conditions. The keyboard backlight activates automatically when the screen turns on. The backlight turns off automatically when the screen turns off or when you are on a call or playing music in the background for longer than the time specified in Backlight Settings. You can set different time intervals depending on whether the Treo 750 is operating on battery power or is connected to an

external power source. The backlight also turns off when an application's power-saving features turn it off.

TIP You can change the backlight shut-off interval. Press **Start** and select **Settings**. Select the **System** tab, and then select **Backlight**. Set the time interval on the Battery Power tab and on the External Power tab.

Entering lowercase and uppercase letters

By default, the first letter of each sentence or field is capitalized and the remaining text you enter is lowercase. To enter other uppercase letters, do one of the following:

- Press **Shift** ( or ) , and then enter a letter. You don't need to press and hold Shift while entering a letter.
- Press **Shift** ( or ) twice to turn on Caps Lock, and then enter a series of letters. When Caps Lock is on, this symbol appears at the bottom of the screen: . To turn off Caps Lock, press **Shift** ( or ) again.

TIP You can turn off the first-letter capitalization setting. For details see [Setting input options](#).

Entering numbers, punctuation, and symbols

Numbers, punctuation, and symbols appear above the letters on the keys. To enter these characters, do one of the following:

- Press **Option**  , and then press the key of the desired character. You don't need to hold Option while pressing the key.
- Press **Option**  twice to turn on Option Lock, and then press the desired keys to enter a series of characters. When Option Lock is on, this symbol appears at the bottom of the screen: . To turn off Option Lock, press **Option**  again.

Entering other symbols and accented characters

You can enter symbols and accented characters that don't appear on the keys by using the alternate characters list.

TIP The alternate characters are grouped according to their similarity to the corresponding key. For example, the alternate character available for the R key is ®, and for the T key is ™. If you press the wrong key, press **Backspace** to return to the full list of alternate characters. You can then press another key.

- 1 Press **Alt**  to display the alternate character list.
- 2 Narrow the list by pressing the key that corresponds to the character you want. For example, to enter an é, press e. See the following table for a list of corresponding characters.
- 3 Press **Up**  or **Down**  to highlight the desired character.
- 4 Press **Center**  to insert the character.

Symbols and accented characters

Press Alt (Alt) and enter...	to select...	Press Alt (Alt) and enter...	to select...	Press Alt (Alt) and enter...	to select...
a	á à â ã ä å æ	n	ñ	x or X	x ☐
A	Á Â Ã Ä Å Æ	N	Ñ	y	ý ŷ
b or B	ß	o	ó ò ö ô õ ø	Y	Ý Ÿ
c	ç ¢ ©	O	Ó Ò Ö Ô Õ Æ Õ	0	°
C	Ç ¢ ©	p or P	¶	1	¹ ¼ ½
e	é è ê ë	r or R	®	2	2
E	É Ê Ë Ì	s	ß š	3	³ ¾
f or F	f	S	ß Š	!	¡
i	í î ï	t or T	™	\$	€ £ ¥ ¢ \$
I	Í Î Ï	u	ú û ü û		
l or L	£	U	Ú Û Ü Û		

Press Alt (Alt) by itself to select these characters:

: & _ • % = ÷ ^ € £ ¥ ¢ \$ [] { } < > « » © ® ° ~ \ Ø μ |

Opening and closing applications

Opening applications

You can access all the applications on your Treo 750 through the Start menu.

- 1 Press **Start**  to open the Start menu.

TIP With the Start menu open, press the letter underlined in the application's name to open the app. For example, press **H** to open Help. Or, select the shortcut icons at the top of the Start menu to open recently used applications.

In Programs, press a letter to jump to the first app that begins with that letter. For example, press **C** to jump to Calculator. Press **C** again to jump to Camera, and so on.

DID YOU KNOW? You can open apps by pressing and holding **Option** and then pressing **Phone/Send, Start**, or **OK**. You can change which app a button combination opens; see [Reassigning buttons](#) for details.



- 2 Use the 5-way navigator to highlight the application you want to use. To view additional applications, select **Programs**.
- 3 Press **Center**  to open the highlighted application.
- 4 (Optional) Press **OK**  to return to Programs and open another application. The current application continues to run in the background.

Closing applications

You can have several applications open at once, so you don't need to exit an application to open another one. In most cases, applications close automatically when available memory is low, but you can also close applications manually.

NOTE If you press **OK**  to leave an application, the current application continues to run in the background. Manually closing applications helps conserve battery power and frees up memory.

- 1 Press and hold **OK**  to open Memory Settings.
- 2 On the Running Programs tab, do one of the following:
 - Select the application you want to close, and then select **Stop** to close it.
 - Select **Stop All** to close all your open applications.


Using your Today screen

Your Today screen is your home base. From your Today screen you can quickly look up a contact, make a call, see your latest calendar appointments, see the number of unread email messages, and even perform a web search.

To access your Today screen, press **Phone/Send** .

TIP If you press **Phone/Send** while a number is highlighted, your Treo 750 dials the number. If a number is highlighted, deselect the number, or use the Start menu to access the Today screen.

TIP You can also open the Today screen by pressing **Power/End**, unless you are on a call. If you're on a call, pressing Power/End hangs up the call. If the Today screen is already displayed and you're not on a call, pressing Power/End turns off the screen display.

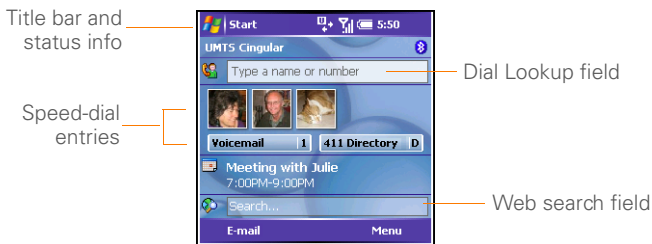

- **Title bar and status info:** See [What are all those icons?](#) to learn about the icons that appear in this area.
- **Dial Lookup field:** Type the number you want to call and press **Center**  to dial, or begin typing a name to look up the associated number in Contacts. See [Dialing by contact name](#) for more info.
- **Speed-dial entries:** Select a speed-dial button—either a picture or text—to call the number assigned to it. See [Defining speed-dial buttons](#) to create your own.
- **Web search field:** Enter a web address or a keyword and press **Center**  or **Return**  to view a list of search results based on the address or word (data services connection required).

TIP You can select a picture for your Today screen background and select which items appear in the Today screen. See [Today screen settings](#) for details.



Your phone

The phone, along with the Today screen, is your home base for making and receiving calls.

You can creatively manage multiple calls; for example, you can swap between calls, send text messages to ignored calls, and create conference calls.

And you can do more than manage your phone calls. You can send text messages, open applications, go to your favorite web pages, see your upcoming appointments, and even find out how many unread email messages you have.

Benefits

- Stay in touch—you choose how
- Work in other applications when on an active call.
- Create speed-dial buttons with pictures of your friends

In this chapter

Turning your Palm® Treo™ 750 smart device on/off	35
Making calls from the Today screen.	36
Other ways of making calls	40
Receiving calls	41
Using voicemail	42
What can I do during a call?	43
Defining speed-dial buttons	49
Customizing phone settings.	56
What are all those icons?	63

Turning your Palm® Treo™ 750 smart device on/off

The term *smart device* (or *device*) refers to the device and its physical aspects. The term *phone* refers to the wireless feature of your Palm® Treo™ 750 smart device that enables you to connect to the AT&T network so that you can make and receive calls, and send and receive data.

The phone and the screen of your Treo 750 can be turned off and on separately. This means you can wake up the screen to use just the organizer features of your device without turning on the phone. Also, when the screen is turned off the phone can be on and ready for you to receive phone calls or messages.

Turning your phone on

From the Today screen, press **Menu**  (right action key), select **Wireless Manager**, and then select **Phone**. When your Treo 750 locates a signal, AT&T appears in the upper-left of the screen and

the signal-strength  icon appears at the top of the screen.

When you turn on your phone, it connects to a mobile network so that you can make and receive phone calls and use other wireless services (if supported by the local network). When you are inside a coverage area, the signal-strength  icon has bars in it. If you're outside a coverage area, the indicator light flashes amber and no bars appear in the signal-strength icon.

DID YOU KNOW? You can press and hold the **Power/End** button to turn your phone on and off.

DID YOU KNOW? You can go to Wireless Manager by tapping the signal-strength icon and tapping **Wireless Manager**.

Turning your phone off

From the Today screen, press **Menu**  (right action key)), select **Wireless Manager**, and then select **Phone**. When your phone is off, the phone-off  icon appears at the top of the screen and Phone Off appears in the upper-left of the screen. Your phone is not connected to any mobile network. Although you can no longer use

the phone, you can still use Microsoft Office apps and all the organizer features of your Treo 750.

Waking up the screen and turning it off

Wake up the screen and leave the phone turned off when you want to use only the organizer features of your Treo 750, for example, when you're on a plane and want to look at your calendar. You can also turn off the screen without turning off the wireless features on your Treo 750. You can turn your screen on and off by pressing

Power/End .

TIP You can set how long the screen stays on. Press **Start**, select **Settings**, select the **System** tab, and then select **Power**. Select the **Advanced** tab. Adjust the number of minutes the phone stays on when idle using the **On battery power** setting.


Making calls from the Today screen

Your Treo 750 offers several ways to make phone calls from the Today screen.

IMPORTANT Don't use slash (/) when entering phone numbers on your computer. For example, do not enter 415/555-5555. Your Treo 750 does not recognize the slash in phone numbers that are transferred from your computer, and you cannot select numbers written like this to make a call.

Dialing from the Today screen

- 1 Go to your Today screen.

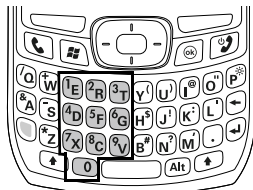

- 2 Using the numbered keys on the keyboard, enter a phone number in the **Dial Lookup** field.

DID YOU KNOW? When you're dialing a phone number, you can enter * and # without first pressing Option. This makes it easy to respond to further dialing instructions.

- 3 Press **Phone/Send**  to dial.

NOTE You do not need to press Option to access the numbers on the keyboard. However, when dialing short numbers, the number may conflict with a contact name. If this occurs, press **Option**  to avoid starting a contact lookup. For emergencies, you can always dial 911 without pressing Option first.

TIP If you press **Phone/Send** while a number is highlighted, your device dials the number. If a number is highlighted and you want to access the Today screen, deselect the number or use the Start menu.

Dialing with a speed-dial button

Your Treo 750 enables you to create both picture and text speed-dial buttons so that

you can select a button on the Today screen to quickly dial a number.

BEFORE YOU BEGIN Create some speed-dial buttons. See [Defining speed-dial buttons](#). You can customize the default speed-dial buttons. See [Editing a speed-dial button](#).

You can make a call using your speed-dial buttons by doing any of the following:

- Select a speed-dial button with the 5-way, and then press **Center** .



- Tap a speed-dial button with the stylus.
- Press and hold the Quick Key that you assigned to the speed-dial button.
- To dial an alternate number for a contact, highlight the speed-dial button

and press and hold **Center** , or tap and hold the button, and then select a number from the shortcut menu.

To see more speed-dial buttons, highlight the picture speed-dial area and press **Right**  or **Left**  repeatedly, or highlight the text speed-dial area and press **Up** , **Down** , **Right** , or **Left** .

TIP You can hide your speed-dial buttons on your Today Screen and still use your Quick Keys to call a speed-dial number.

Dialing by contact name


You can look up contacts quickly by entering just a few letters of a contact's name directly from your Today screen.

BEFORE YOU BEGIN Before you can dial a number by contact name, you must create some contacts (see [Adding a contact](#).) or import them by synchronizing (see [Defining speed-dial buttons](#)).

Make sure your phone is on and that you're inside a coverage area (see [Turning your phone on](#)).

- 1 Go to your Today screen.

- 2 Using the keyboard, begin entering one of the following for the contact you want to call:

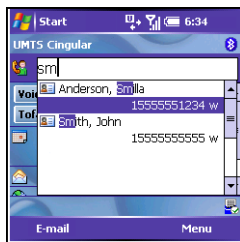

- First name (JOH for John)
- Last name (SMI for Smith)
- First initial, a space, and then last initial (J S for John Smith)
- First name and last name (JOH SMI for John Smith)

For example, entering SM finds both Smilla Anderson and John Smith. Entering SMA finds only Smilla Anderson.

To clear the Dial Lookup field and start another Contacts search, press **OK**. To delete letters when correcting a misspelled name, press **Backspace**.

TIP To see a contact's address, company, and other details, press **Up** to highlight the name and press **Center** on the 5-way.

- 3 Select the number you want to dial.
- 4 Press **Phone/Send**  or press **Center**  to dial.

DID YOU KNOW? After you look up a contact, you can select how you want to communicate with that person. Press and hold **Center** on the 5-way, or tap and hold, and then select the communication method you want to use.

Dialing using the onscreen Dial Pad

The onscreen Dial Pad is useful when you need to dial numbers that are expressed as letters and when you need large numbers that you can tap with your finger or the stylus.



DID YOU KNOW? You can paste numbers directly into the Dial Pad. Copy a number from another application, switch to Dial Pad, and then press and hold **Center** on the 5-way to paste the number.

BEFORE YOU BEGIN Make sure your phone is on (see [Turning your phone on](#)).

- 1 Go to your Today screen.
- 2 Press **Phone/Send**  and select **Dial Pad**.
- 3 Tap the onscreen Dial Pad to enter the number.
- 4 Press **Phone/Send**  to dial.

Redialing a recently called number

- **To dial the last number you called:** Go to your Today screen, and then press and hold **Phone/Send** .



- **To select from your most recently dialed numbers:** Go to your Today screen, press **Phone/Send** , highlight the number or contact name you want to call, and then press **Phone/Send**  to dial.
- **To select from a chronological list of calls:** Go to your Today screen, press **Phone/Send** , and then select **Call Log**. Highlight the number you want to call, and then press **Call**  (left action key) to dial or press **Phone/Send** .

TIP You can also access the Call Log and Dial Pad from the Today screen by pressing **Menu** (right action key).

Other ways of making calls

Your Treo 750 offers several other ways to make phone calls than from the Today screen. Try them all and you'll discover which methods you prefer.

Dialing by company name


BEFORE YOU BEGIN Make sure your phone is on (see [Turning your phone on](#)).

- 1 Press **Start**  and select **Contacts**.
- 2 Press **Menu**  (right action key) and select **View By > Company**.
- 3 Press **Phone/Send**  to go to your Today screen.
- 4 Using the keyboard, begin entering the first few letters of the company name.
- 5 Select the number you want to dial.

6 Press **Phone/Send**  to dial.

Dialing from a web page or message

Your Treo 750 recognizes most phone numbers that appear in web pages or in messages (text, email, or multimedia).

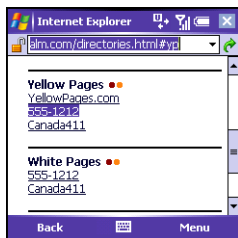

- 1 Use the 5-way to highlight the phone number you want to dial in the web page or message.
- 2 Press **Center**  to open the Phone dial box, and then select **Yes** to dial.

TIP If you can't dial a phone number directly from a web page or a message, then highlight the number, select **Edit** (right action key), and select **Copy**. Open the Dial Pad, and then press and hold **Center** on the 5-way to paste. Press **Phone/Send** to dial.

Receiving calls

To receive calls, your phone must be on. This is different from having only the screen turned on (see [Turning your phone on](#)). When your phone is off, your calls go to voicemail.

To see a picture of the person calling you! Learn how to assign a caller ID picture in [Assigning a caller ID ringtone](#).

If music is playing when a call arrives, the Treo 750 rings softly. You can answer the phone as you normally would. The audio pauses during your call.

To answer a call, do one of the following:

- Press **Phone/Send** .
- Press **Answer**  (left action key).
- If the headset is attached, press the headset button.

To ignore a call and send it to voicemail, press **Menu**  (right action key) and select **Ignore** or press the **Power/End**  key.

To silence the ringer while your Treo 750 is ringing:

- Press the **Volume** button or any key on your Treo 750 except **Phone/Send** (📞), **Power/End** (🔌), **Alt** (Alt), **Start** (Start), **OK** (OK), or the 5-way.
- To immediately silence all system sounds including the ringer, slide the ringer switch to **Sound Mode Off** (🔇). All sounds remain off until you slide the ringer switch back to **Sound On** (🔊).

When you silence the ringer, you can either answer the call or let it ring through to voicemail.

DID YOU KNOW? You can also ignore a call and send a text message. Press **Menu** (right action key) and select **Ignore with text message**.

Using voicemail

Setting up voicemail.

- 1 Go to your Today screen.

- 2 Press and hold **1** on the keyboard or tap the Voicemail speed-dial button to dial the AT&T voicemail system.
- 3 Follow the voice prompts to set up your voicemail.

Retrieving voicemail messages from the Today screen



DID YOU KNOW? When a Voicemail icon appears at the top of the screen, you can tap this icon to retrieve your voicemail.

When you have unretrieved voicemail messages, a Voicemail icon (📞) appears at the top of your screen.

- 1 Go to your Today screen.
- 2 Press **1** on the keyboard to dial the AT&T voicemail system.
- 3 Enter your voicemail password using the keyboard, or press **Extra Digits**  (left action key) if you defined this option (see [Creating a speed-dial button](#) for details).
- 4 Select **Play**  to listen to your messages.

Retrieving messages from a voicemail notification

NOTE Not all service plans support voicemail notification. Check with AT&T for more information.

You can retrieve voicemail messages when you receive a notification or you can dismiss the notification and retrieve the messages later.

- When you have a new voicemail message, a notification screen appears.




- To hear your message now, press **Listen** .
- To retrieve your message later, press **Dismiss** .

What can I do during a call?

Your Treo 750 offers many advanced telephone features, including call waiting, six-way conferencing, and call forwarding. These features depend on your service plan. Please contact AT&T for more information.

When you make or receive a call, the active call info appears on your Today screen.

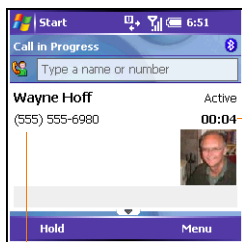

Caller's name
and number

Current duration
of call

During a call, you can do any of the following:

- **Navigate around the Today screen:** Use Up ▲ and Down ▼ to move around or highlight items.
- **Put the call on hold:** Press **Hold** (left action key). To take the call off hold, press **Off Hold** (left action key).
- **Use the built-in speakerphone:** Press **Menu** (right action key) and select **Speakerphone**. To use the earpiece again, press **Menu** (right action key) again and select **Speakerphone Off**.

DID YOU KNOW? You can send and receive text messages during a call. This is a great way to stay connected with colleagues during a long call.

- **Mute the microphone so you can't be heard:** Press **Menu** (right action key) and select **Mute**. To turn the microphone back on, press **Menu** (right action key) again and select **Cancel Mute**.
- **Switch to another application:** Press **Start** and select the application.

DID YOU KNOW? When a call lasts longer than one minute, the screen dims. After two minutes, it dims more. Press any key, except Power/End, to light up the screen.

Ending a call

Do one of the following:

- Press **Power/End**.
- Press the headset button (if the headset is attached and has a button on it). Some headsets do not have a button.

Switching applications during an active call


You can use many other applications on your Treo 750 while holding a phone conversation, including the organizer and text message features. You cannot, however, make some data connections during an active call while connected to a GPRS network. If you're connected to a GPRS network, you cannot browse the web, or send and receive email or MMS messages while on a voice call. If you're connected to a UMTS network, you can perform simultaneous voice and data functions. How can you tell which kind of network you're connected to? See [What are all those icons?](#)

To open an application, see [Opening and closing applications](#).

From any application, press **Phone/Send**  to return to your Today screen.

Saving phone numbers

After you hang up, you can add the number to Contacts if it's not already in your list. If an incoming call uses caller ID blocking, you do not see the Add Contact prompt.

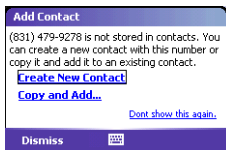

- To create a new contact for this number, select **Create New Contact**.
- To add this number to an existing contact, select **Copy and Add**, and then select a contact name.
- To decline adding the number, press **Dismiss**  (left action key).
- To permanently disable the Add Contact prompt, select **Don't show this again**.

TIP You can also save contact info from other applications, such as Messaging.


If you don't add a number right away, follow these steps to add it later:

- 1 Go to the Call Log (see [Other ways of making calls](#)).
- 2 Highlight the number you want to save.
- 3 Press and hold **Center**  to open the shortcut menu, and then select **Save to Contacts**.
- 4 Enter the information for the entry.
- 5 Press **OK** .

Making a second call

You can make a second call while your first call is still active:

- 1 Place your first call on hold by pressing **Hold**  (left action key).

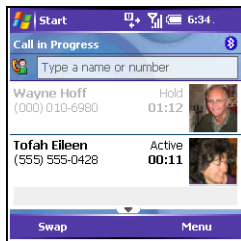

- 2 Dial a second number using any of the methods described in [Making calls from the Today screen](#). If you're dialing by contact name or with the keyboard, you must first use the 5-way to select the Dial Lookup field.


When two calls are active, your Today screen includes two call status sections, each representing one of the calls.

Answering a second call (call waiting)

When you're on a call and you receive a second call, the call waiting notification appears if you have chosen to be notified (see [Setting call waiting notification](#)). You can do any of the following:

- **Send the new call to voicemail:** Press **Menu**  (right action key) and select **Ignore**.
- **Send the new caller a text message:** Press **Menu**  (right action key) and select **Ignore with text message**. The second call is sent to voicemail. A new text message opens with the phone number of the caller entered in the To field.

- **Hang up the current call and answer the new call:** Press **Menu** (right action key)) and select **Drop and Answer**. You can also press **Power/End** to hang up the current call, and then choose to answer or ignore the new call.
- Place the current call on hold and answer the new call:
Press **Answer** (left action key) or **Phone/Send**. Once you have answered the call:

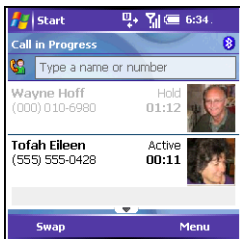


- Press **Swap** (left action key) to move between callers by placing the current active call on hold and talking on the other line.
- Make the calls a conference call. See [Making a conference call](#).

Making a conference call


IMPORTANT You can join up to five calls into a 6-way conference call. The number of calls you can join in conference depends on your service plan. Additional charges may apply, and minutes in your mobile account may be deducted for each call. Please contact AT&T for more information.

- 1 Answer a second call or put the first call on hold, and make a second call.

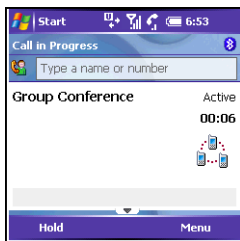

- 2 Press **Conference** (right action key); this joins the two calls with you in a conference.

- 3 (Optional) Do one or more of the following:
 - Make more calls and join them into the conference call. The number of calls you can join in conference depends on your service plan.
 - Extract a caller from the conference call to talk with them privately by pressing **Menu**  (right action key), selecting **Extract**, and then selecting the name. The extracted call becomes the active call.

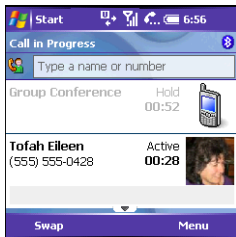

- Swap between the conference call and the private call by pressing **Swap**  (left action key).

- 4 When you're done, press **Power/End**  twice to hang up on all calls or press **Power/End**  once to hang up on the active call.

Forwarding calls

You can forward calls to another phone number. Please check with AT&T about availability and pricing of forwarded calls; additional charges may apply.

When all calls are forwarded, the call forwarding icon  appears in the title bar.

BEFORE YOU BEGIN Make sure your phone is on and that you're inside a coverage area (see [Turning your phone on](#)).

- 1 Go to your Today screen.
- 2 Press **Menu**  (right action key), select **Preferences**, and then select **Phone Settings**.
- 3 Select the **Services** tab, and then select **Call Forwarding** from the list.

- 4 Set your call forwarding settings. Some of the settings are already set by AT&T to send your calls to Voicemail.



- 5 Press **OK** .


Defining speed-dial buttons

Your Treo 750 enables you to create both picture and text speed-dial buttons so that you can select a button on the Today screen to quickly dial a number.

Creating a speed-dial button

You can create up to 20 picture buttons and 50 text buttons.

- 1 Go to your Today screen.

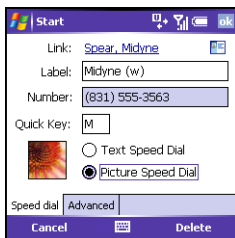

- 2 Press **Menu**  (right action key) and select **New Speed Dial**.
- 3 Do one of the following:
- Select **Link to contact**, select the contact you want to link to this button, and then select the number you want to dial with this button.
 - Select **Label** and enter a name for this button, and then select **Number** and enter the phone number you want to dial with this button.

- 4 (Optional) Enter a Quick Key. When the Today screen is showing, you can press and hold the **Quick Key** to instantly dial this number.

Quick Keys can be letters or numbers, but you can't use both the letter and number on the same key. For example, the voicemail Quick Key is 1. The letter equivalent for that key is E, so you cannot assign E as a Quick Key to another speed-dial button.


- 5 If this button is linked to a contact entry with a picture, select either **Text Speed Dial** or **Picture Speed Dial** to indicate which type of button you want to create. If this button is not linked to a contact or the contact doesn't have a picture, the Picture Speed Dial option is not available.

TIP You can add a special ringtone to a contact associated with the speed-dial button. See [Adding a contact](#).

- 6 (Optional) Select the **Advanced** tab and set any of the following options:

Extra Digits: Defines additional numbers to dial, such as a password or

extension. In addition to numbers, you can enter the following symbols: star (*) and pound (#). To enter a one-second pause, enter a comma (,).

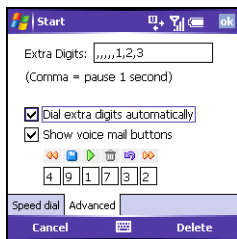

Dial extra digits automatically: Dials predefined Extra Digits immediately after dialing the phone number. If you do not check this box, you need to press **Extra Digits** (left action key) to dial these digits.

Show voice mail buttons: Displays the voicemail playback controls after you dial this speed-dial number. When this option is checked, you can enter numbers below each control to tailor the controls to your voicemail system.

Plays the previous message.

-  Saves the current message.
-  Plays the current message.
-  Deletes the current message.
-  Repeats the current message.
-  Plays the next message.

7 Press **OK** .

DID YOU KNOW? The playback controls for the AT&T Voicemail speed-dial button are already set up.

Editing a speed-dial button

- 1 Go to your Today screen.
- 2 Highlight the speed-dial button you want to edit.
- 3 Press and hold **Center**  to open the shortcut menu, and then select **Edit Speed Dial**.
- 4 Make the desired changes.
- 5 Press **OK** .

TIP You can also edit a speed-dial button by pressing **Menu** and selecting **Speed Dial Options**, and then selecting the button you want to edit.

Deleting a speed-dial button

- 1 Go to your Today screen.
- 2 Highlight the speed-dial button you want to delete.
- 3 Press and hold **Center**  to open the shortcut menu, and then select **Edit Speed Dial**.
- 4 Press **Delete**  (right action key).
- 5 Select **Yes** to confirm the deletion.

Arranging your speed-dial buttons


- 1 Go to your Today screen.
- 2 Press **Menu**  (right action key) and select **Speed Dial Options**.
- 3 Highlight the button you want to move.
- 4 Press **Option**  + **Left**  or **Right**  or **Up**  or **Down**  to move the button in that direction.

Using a phone headset

You can connect a phone headset for hands-free operation. You can use the headset that came with your Treo 750 or compatible third-party headsets.

IMPORTANT If driving while using a Treo 750 is permitted where you are and you need to make a call, we recommend using a phone headset or a hands-free car kit (sold separately). If you must use the wired headset while driving, place a speaker in only one ear. Leave the other ear free to hear outside noises. Make such a call only if it is legal to do so and you can do so safely.

Using a wired headset

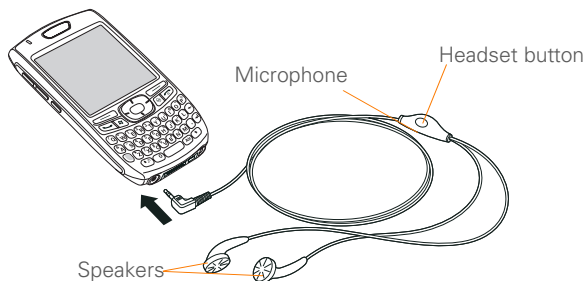

The headset button is context-sensitive, and it performs various actions based on the situation. You can press the headset button to perform any of the following tasks:

- Answer an incoming call
- Respond to call waiting
- Hang up all calls
- Swap between calls

NOTE Your Treo 750 works with headsets that have a 2.5mm, 3-pin connector (look for two colored bands on the plug). When in doubt, ask the third-party headset manufacturer if the product is compatible with your Treo 750. If you hear a headset buzz or poor microphone performance, your headset may be incompatible with your Treo 750.

Connecting to a Bluetooth® hands-free device


Your Treo 750 is also compatible with many headsets and car kits (sold separately) enabled with Bluetooth® wireless technology version 1.1 or 1.2.

For a list of compatible hands-free devices with Bluetooth wireless technology, go to www.palm.com/us/support/treo/treo750cingular.

After you set up a connection with a Bluetooth headset or hands-free car kit, you can communicate with that device whenever it is within range and the Bluetooth feature on your Treo 750 is turned on. The range varies greatly, depending on environmental factors; the maximum is about 30 feet (10 meters).

DID YOU KNOW? If you have both a compatible Bluetooth headset and car kit, the one you connected to your Treo 750 last becomes the active device.

- 1 If necessary, prepare the device you want to connect with to accept a new connection. Check the device's documentation for details; be sure to find out if the device has a predefined passkey that you need to enter on your Treo 750 in step 7.

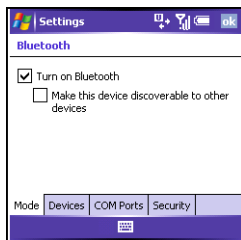

- 2 Go to your Today screen, and then tap **Bluetooth** .
- 3 Check the **Turn on Bluetooth** box to turn on the Bluetooth feature.
- 4 Select the **Devices** tab, and then select **New Partnership**.



- 5 Wait for your Treo 750 to search for devices and to display the device list.
- 6 Select the device you want to connect to, and then press **Next**  (right action key).
- 7 Enter a passkey between 1 and 16 digits long, and then press **Next**  (right action key).

IMPORTANT Some hands-free devices have a predefined passkey; if your hands-free device has one, you can find the passkey in the documentation for that device. Other devices provide a screen where you enter a passkey that you make up. In either case, you must use the same passkey on both your Treo 750 and your hands-free device. We recommend that you use a passkey of 16 digits, where

possible, to improve the security of your Treo 750. The longer the passkey, the more difficult it is for the passkey to be deciphered.

DID YOU KNOW? The Bluetooth icon on your Today screen indicates the status of the Bluetooth feature:

Gray = Bluetooth off.

Blue = Bluetooth on.

White = Connected to a Bluetooth device.

Headset icon = Call in progress with a Bluetooth headset or car kit.

- 8 If the passkey is not predefined, enter the same passkey on the other Bluetooth device, and then press **Finish**  (right action key).
- 9 Check the **Hands Free** box, and then press **Finish** .
- 10 Press **OK** .

You can now communicate with this device whenever it is within range and the Bluetooth feature on your Treo 750 is turned on. The range varies greatly, depending on environmental factors; the maximum is about 30 feet (10 meters).

Using a Bluetooth hands-free device

To learn how to set up and connect to Bluetooth devices, see [Connecting to a Bluetooth® hands-free device](#).

Here are tips for working with a Bluetooth hands-free device:

- To transfer a call from the handset to a Bluetooth hands-free device during a call, press **Menu**  (right action key) and select **Connect Bluetooth**. To transfer the call back to the headset, press **Menu**  (right action key) and select **Cancel Bluetooth**.
- To transfer a call from a wired headset to a Bluetooth headset or car kit that is within range and with which you've previously set up a partnership (Bluetooth headset or car kit required, sold separately), unplug the wired headset and press the button on the Bluetooth headset or car kit.
- To find out how to transfer your contacts from your Treo 750 to your car kit, go to www.palm.com/us/support/treo/treo750cingular.

DID YOU KNOW? If you're using a Bluetooth hands-free device and it is within range, your Treo 750 routes all calls to the hands-free device instead of to the earpiece on your Treo 750. Bluetooth range is up to 30 feet (10 meters) in optimum environmental conditions.

Customizing phone settings

Selecting ringtones and display notices

You can set different tones for different types of incoming phone calls and notifications. You can download MP3, MIDI, AMR, WAV, and WMA ringtones directly to your Treo 750 (see [Downloading files and images from a web page](#)). You can also download ringtones to your computer and then email them to your phone.

- 1 Press **Start**  and select **Settings**.
- 2 On the **Personal** tab, select **Sounds & Notifications** .
- 3 Select the **Notifications** tab.

- 4 Select the **Event**, and then select which type of call or notification you want to set the ringtone for:

Phone: Known Caller: An incoming call from someone in your Contacts list or Speed Dial list.



Phone: Missed call: A call you did not answer.

Phone: Roaming: A call that comes in when you're outside your home mobile network.


Phone: Unknown Caller: An incoming call from someone identified by caller ID who is not in your Contacts list or Speed Dial list.

Phone: Voice mail: A new voicemail.

- 5 Check the **Play Sound** box if you want to have a sound played when the event occurs.
- 6 If you checked the **Play Sound** box, then select the sound for the selected type of call. You can also check the **Repeat** box to have the sound repeat.
- 7 (Optional) Select the **Play** icon to preview the sound.
- 8 Check the **Display message on screen** box to have a message displayed when the event occurs.
- 9 Check the **Vibrate when...** boxes to turn the vibrate feature on/off based on the ringer switch setting.
- 10 Repeat steps 4–9 to select ringtones for other types of calls.
- 11 Press **OK** .

DID YOU KNOW? You can record, preview, delete, and send sounds on your Treo 750. See [Selecting Sounds & Notifications](#). You can also set sounds for messaging notifications and calendar reminders. See [Selecting ringtones and display notices](#).

Adjusting call and ringer volume.

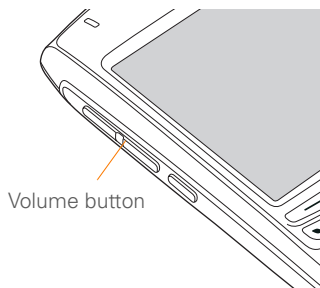

- **Call volume:** While a call is in progress, press the **Volume** button (on the side of your Treo 750) to adjust the call volume.
- **Ringer volume:** When a call is not in progress and you are not playing music or a video, press the **Volume** button to adjust ringer volume.

Assigning a caller ID ringtone

- 1 Press **Start**  and select **Contacts**.
- 2 Select the contact's name.
- 3 Press **Menu**  (right action key) and select **Edit**.

- 4 Select **Ring tone**.
- 5 Select a tone for this contact entry.
- 6 Select **OK**.

Enabling TTY

You can enable your Treo 750 for use with a TTY/TDD device. A TTY (also known as a TDD or Text Telephone) is a telecommunications device that enables people who are deaf or hard of hearing, or who have speech or language disabilities, to communicate by telephone.

Your Treo 750 is compatible with select TTY devices. You can connect a TTY/TDD machine, headset, or hands-free kit to your Treo 750 through the headset jack while in TTY/TDD mode. Please check with the manufacturer of your TTY device for connectivity information. Be sure that the TTY device supports digital wireless transmission.

BEFORE YOU BEGIN Turn on your phone to access your Phone Settings. See [Turning your phone on](#).

- 1 Press **Start**  and select **Settings**.



- 2 On the **Personal** tab, select **Phone** .
- 3 On the **Phone** tab, select **TTY/TDD**, and then select either **On** or **Off**.
- 4 Press **OK** .

NOTE When TTY/TDD is on, a TTY/TDD icon  appears at the top of the Today screen.

Adding Contacts numbers from new callers

You are prompted to add contact entries for numbers that are not already in your Contacts list.


- 1 Press **Start**  and select **Settings**.
- 2 On the **Personal** tab, select **Phone** .

- 3 On the Phone tab, check the **After calls from numbers that are not in Contacts, ask if I want to add them** box.

- 4 Press **OK** .

Blocking calls

You can block incoming or outgoing calls.

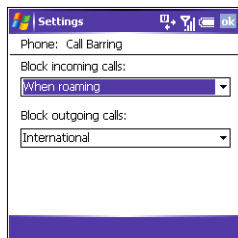


BEFORE YOU BEGIN You need to do the following:

- Make sure that call barring is supported by your service plan. Check with AT&T for more information.
 - Get a call barring password from AT&T.
 - Make sure your phone is on and that you're inside a coverage area (see Turning your phone on).
- 1 Go to your Today screen.
 - 2 Press **Menu**  (right action key), select **Preferences**, and then select **Phone Settings**.
 - 3 Select the **Services** tab, and then select **Call Barring** from the list.
 - 4 Select the **Block incoming calls** list, and then select one of the options:
 - Off:** No incoming calls are blocked.
 - When roaming:** All incoming calls are blocked when roaming.
 - All calls:** All incoming calls are blocked.
 - 5 Select the **Block outgoing calls** list, and then select one of the options:
 - Off:** No outgoing calls are blocked.
 - International:** All outgoing international calls are blocked.
 - International except to home country:** All outgoing international calls are blocked except to the country where the phone is based.
 - All calls:** All outgoing calls are blocked.
 - 6 Press **OK** .

- 7 Enter the call barring password and select **Done** (right action key).

Setting caller ID

You can turn caller ID on or off.

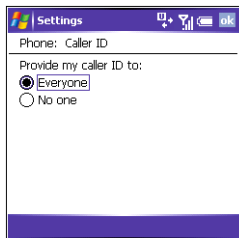


BEFORE YOU BEGIN Make sure your phone is on and that you're inside a coverage area (see [Turning your phone on](#)).

- 1 Go to your Today screen.
- 2 Press **Menu** (right action key), select **Preferences**, and then select **Phone Settings**.
- 3 Select the **Services** tab, and then select **Caller ID** from the list.
- 4 Check the appropriate box to provide your caller ID to **Everyone** or **No one**.

- 5 Press **OK** (OK button).

Setting call waiting notification

You can choose to be notified when you receive a call while you are on a call. You can choose to accept the call or not. See [Answering a second call \(call waiting\)](#).

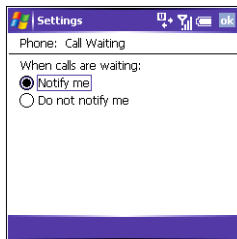

BEFORE YOU BEGIN Make sure your phone is on and that you're inside a coverage area (see [Turning your phone on](#)).

- 1 Go to your Today screen.
- 2 Press **Menu** (right action key), select **Preferences**, and then select **Phone Settings**.
- 3 Select the **Services** tab, and then select **Call Waiting** from the list.

- 4 Check the appropriate box to receive notification or not.
- 5 Press **OK** .

Manually selecting your wireless band

The wireless band setting is preset for optimum performance. Do not change this setting unless instructed to do so by an AT&T representative.



BEFORE YOU BEGIN Make sure your phone is on and that you're inside a coverage area (see [Turning your phone on](#)).

- 1 Go to your Today screen.
- 2 Press **Menu**  (right action key), select **Preferences**, and then select **Phone Settings**.

- 3 Select the **Services** tab, and then select **Band Selection** from the list.

- 4 Select the **Select network type** list, and select one of the following:

Auto: Automatically selects a network.

GSM: Connects only to GSM networks.

UMTS: Connects only to UMTS networks.

- 5 Select the **Select your GSM/UMTS Band** list, and then select one of the bands:

Auto

GSM (900+1800) + UMTS 2100

GSM (1900+850) + UMTS (1900+ 850)

- 6 Press **OK** .

Enabling fixed dialing

Fixed dialing allows you to restrict your outgoing calls and messages to selected phone numbers, included in your fixed dialing list. Once the service is activated, you can call and send messages only to the phone numbers from the list.

The list is protected by a PIN2. If you enter an incorrect PIN2 more times than allowed by AT&T, the SIM card locks. Once the SIM card locks, you need the PUK2 to unlock the SIM card. Contact AT&T for more information and the PUK2.



BEFORE YOU BEGIN You need the following:

- Make sure your phone is on and that you're inside a coverage area (see [Turning your phone on](#)).
- Get your PIN2 from AT&T

- 1 Go to your Today screen.
- 2 Press **Menu** (right action key), select **Preferences**, and then select **Phone Settings**.

- 3 Select the **Services** tab, and then select **Fixed Dialing** from the list.
- 4 Check the **Enable fixed dialing** box.
- 5 Press **Menu** (right action key) to add, delete, or edit the phone numbers in the list.
- 6 Enter your PIN2 and press **Done** (left action key).
- 7 Press **OK** (center button).

Manually selecting your network settings

The network setting is preset for optimum performance. Do not change this setting unless instructed to do so by an AT&T representative.



BEFORE YOU BEGIN Make sure your phone is on and that you're inside a coverage area (see [Turning your phone on](#)).

- 1 Go to your Today screen.
- 2 Press **Menu**  (right action key), select **Preferences**, and then select **Phone Settings**.
- 3 Select the **Network** tab.
- 4 To switch to another network, select **Find Network** and select an available network.
- 5 To change your preferred network, select **Set Networks**, check the box next to the networks you want, and then select your order of preference.
- 6 From the **Network Selection** list, select an option:
Automatic: The network connection is automatically made.
Manual: Network connections are manually made. If you are manually selecting a network, select a network from the list of available networks.
- 7 Press **OK** .

What are all those icons?

You can monitor the status of several items using icons at the top of your Today screen:



You missed an incoming call.



You have a voicemail message.



You have a new email message.



You have a new text, or multimedia message.



No SIM inserted in device or software unable to recognize SIM.



You have more than one of the conditions listed above.



Your phone is on. The bars display the signal strength. The stronger the signal, the more bars appear. If you are outside a coverage area, no bars appear.



Your phone is off.



A voice call is in progress.



TTY/TDD is turned on.



All calls are being forwarded.



Your phone is connected to a UMTS network, but you are not actively transmitting data. You can still make or receive calls.



Your phone is on and a UMTS data connection is active. You can make and receive calls and transmit data simultaneously.



Your phone is connected to a GPRS (EDGE if available) network, but you are not actively transmitting data. You can still make or receive calls.



Your phone is on and a GPRS (EDGE if available) data connection is active. You can still make or receive calls, but the data transmission is automatically interrupted during a call.



ActiveSync synchronization is in progress.



Your Treo 750 is connecting to a computer or network.



A data connection is not available or your phone is off.



Your smart device's battery is low.



Your smart device's battery is charging.



Your smart device is connected to a power outlet and the battery is fully charged.

Network
operator
name

Your phone is on. When you turn off your phone, Phone Off appears instead.



The Bluetooth® wireless technology status indicator appears in gray when this feature is off, in blue when this feature is on, and in reverse blue when your smart device is communicating with another Bluetooth device.



A call is in progress and your smart device is connected to a Bluetooth headset or car kit.



Synchronizing information

Synchronizing simply means that information that has been entered or updated in one place—your Palm® Treo™ 750 smart device, your computer, or your corporate server—is automatically updated in the other. There's no need to enter information twice. Some kinds of synchronization can happen on an automated schedule, so you don't even have to think about it.

After you get into the habit of synchronizing regularly, you'll know what a powerful tool synchronization is for transferring, updating, and backing up large amounts of information on your Treo 750.

Benefits

- Quickly enter and update information on your computer and your Treo 750
- Send photos and videos to your Treo 750 from your desktop computer
- Protect your information

In this chapter

How do I synchronize?	70
What can I synchronize?	71
Setting up your computer for synchronization	72
Synchronizing using the sync cable	77
Setting up wireless synchronization.	77
Other ways to synchronize.	82
Setting synchronization options	84

This chapter discusses using ActiveSync® desktop software and other methods to synchronize your Treo 750 and your computer.

Synchronization enables you to enter or change information on your Treo 750 or in Microsoft Office Outlook®. Your info is then automatically updated in both places; there's no need to enter the info twice. This is true whether you sync with your computer using ActiveSync desktop software (see [Setting up your computer for synchronization](#)) or wirelessly with your company's Exchange Server using Microsoft Exchange ActiveSync (see [Setting up wireless synchronization](#)).

By default, the info from the following applications is synchronized for either method of synchronization:



You can, however, customize sync settings to suit your needs and sync only some of these applications.

If you set up ActiveSync synchronization with your computer, information in the Favorites application is synchronized by default as well. You can also change settings to synchronize Word, Excel, PowerPoint, and PDF files, as well as pictures, music, videos, and other types of files (see [Changing which applications sync](#)). For synchronization of music and videos, you also must have Windows Media® Player 10 on your computer.

DID YOU KNOW? When you sync Favorites, it creates a folder in your computer's web browser called Mobile Favorites that backs up any favorites you create in the browser on your Treo 750. You can add or remove favorites directly to or from the folder.

TIP If you don't already have Windows Media Player installed on your computer, you can install it from the Windows Mobile Getting Started Disc. Insert the CD into your computer's CD drive, select **Add Programs**, and then select **Windows Media Player**.

You can set up your Treo 750 to use any combination of wireless sync, ActiveSync synchronization, and Windows Media Player sync.

How do I synchronize?

There are a number of ways to make synchronization occur. You can install ActiveSync desktop software on your computer to synchronize in one of a number of ways, or you may be able to synchronize wirelessly with an Exchange Server. You can, of course, choose to sync both with an Exchange Server and with ActiveSync desktop software to maximize your sync options.

Synchronizing with ActiveSync desktop software

BEFORE YOU BEGIN Install the software from the Windows Mobile Getting Started Disc, which came with your Treo 750. You must install this software even if you have already installed a previous version of ActiveSync desktop software.

See [Installing the desktop synchronization software](#) for instructions.

If you install ActiveSync desktop software from the Windows Mobile Getting Started Disc, you can choose to synchronize in any of the following ways:

- By connecting your Treo 750 to your computer using the sync cable; see [Synchronizing using the sync cable](#)
- Wirelessly, using the built-in Bluetooth® wireless technology on your Treo 750; see [Synchronizing over a Bluetooth connection](#)
- Wirelessly, using the infrared (IR) port on your Treo 750; see [Synchronizing over an infrared connection](#)

Synchronizing wirelessly with the server

You can set up your Treo 750 to synchronize email and other information wirelessly with Microsoft Exchange Server 2003 using Microsoft Exchange ActiveSync; see [Setting up wireless synchronization](#). If you choose this method, synchronization takes place automatically after setup; you do not need to install the software from the Windows Mobile Getting Started Disc, which came with your Treo 750.

NOTE We recommend that you install ActiveSync desktop software from the CD even if you synchronize wirelessly with the server. You need ActiveSync to synchronize pictures, videos, music files, and other info directly with your computer.

What can I synchronize?

This table lists the types of info you can synchronize and the methods to use.

Info type	Method	Where to learn more
Outlook Contacts, Calendar, Tasks	ActiveSync (sync with computer) or Exchange ActiveSync (direct sync with server)	Setting up your computer for synchronization or Setting up wireless synchronization
Outlook Email	ActiveSync or Exchange ActiveSync	Setting up your computer for synchronization or Setting up wireless synchronization
Word, Excel, PowerPoint, PDF files	ActiveSync	Setting up your computer for synchronization Changing which applications sync
Music and video files	ActiveSync and Windows Media Player 10	Setting up your computer for synchronization Changing which applications sync Transferring media files to your Treo 750

Info type	Method	Where to learn more
Pictures	ActiveSync	Setting up your computer for synchronization Changing which applications sync
Outlook Notes	ActiveSync	Setting up your computer for synchronization Changing which applications sync
Files to be transferred to an expansion card	ActiveSync	Setting up your computer for synchronization Changing which applications sync

Setting up your computer for synchronization

Why set up a connection between your Treo 750 and your computer? So you can synchronize them. Why synchronize? Here are two good reasons:

- Once you enter info on your computer, you don't need to enter it again on your Treo 750. Whether you enter or change

information on your computer using Microsoft Office Outlook or on your Treo 750, when you synchronize, you automatically update the info in both places.

- You have a backup copy of all your info. Should anything happen to your Treo 750, your info still exists on your computer.

We strongly recommend that you synchronize your Treo 750 with your computer frequently to keep your information up-to-date (and backed up) in both locations.

TIP If you want to synchronize with a personal information manager (PIM) other than Microsoft Office Outlook, you must install a third-party solution. Contact the PIM's vendor to learn if software is available for your Treo 750.

Before you can synchronize, you need to install the desktop synchronization software and connect the sync cable to your computer. Even if you have already installed a previous version of ActiveSync desktop software, you must install the software that came with your Treo 750 on the Windows Mobile Getting Started Disc.

System requirements

Your computer must meet the following minimum system requirements:

- Windows 2000 or XP (later versions may also be supported)
- 32MB of available memory (RAM)
- 170MB of free hard disk space
- CD drive
- Available USB port

Installing the desktop synchronization software

BEFORE YOU BEGIN If you are installing the software on a computer at work, make sure your company allows you to install new software. Contact your company's IT department for help.

- 1 Close any applications that are currently running on your computer, including those running in the background. Your computer needs to have all its resources available to install the software.
- 2 Insert the Windows Mobile Getting Started Disc into the CD drive on your computer.
- 3 Follow the installation instructions on your computer.

During installation, you connect your Treo 750 to your computer and sync for the first time. Be sure to watch what's happening on both your computer and your Treo 750. For more info, see [Connecting your Treo 750 to your computer](#) and [Synchronizing information](#).

DID YOU KNOW? During software installation, you can select an option to synchronize email, contacts, calendar events, and tasks directly with Microsoft Exchange Server 2003. If you choose this option, you are prompted to enter your mail server address and domain name and your Exchange Server account username and password.

TIP You can also install additional software from the Windows Mobile Getting Started Disc; see [Installing bonus software from the CD](#).

Using ActiveSync desktop software

After you install ActiveSync desktop software, synchronization happens automatically anytime you connect your Treo 750 to your computer, as described in the next section. However, you can open the ActiveSync window on your computer to do tasks such as the following:

- Install applications from your computer to your Treo 750 (see [Installing applications from your computer](#)) or to an expansion card inserted into the expansion card slot on your Treo 750 (see [Installing applications onto an expansion card](#))

- Change which applications synchronize
- Enter settings to synchronize wirelessly with Microsoft Exchange Server 2003

DID YOU KNOW? You can also change which applications synchronize (see [Changing which applications sync](#)) and enter settings to synchronize wirelessly (see [Setting up wireless synchronization](#)) in the ActiveSync app on your Treo 750. Whether you enter changes on your Treo 750 or your computer, the changes are transferred to the other location the next time you synchronize.

To open the ActiveSync window, double-click the **ActiveSync** icon  in the taskbar in the lower-right corner of your computer screen.

TIP If the ActiveSync icon does not appear in the taskbar, go to **Start**, navigate to **Programs**, and select **Microsoft ActiveSync** to open the ActiveSync window.

Desktop software installation also creates a Mobile Device folder on your computer, which you can see when you open My Computer or Windows Explorer. When

your Treo 750 is connected to your computer, opening the Mobile Device folder displays an icon representing your Treo 750. It also displays folders containing items you synchronized, such as music files, pictures, and videos.

Connecting your Treo 750 to your computer


NOTE If you're transferring info from a previous Windows Mobile® device or from a Palm OS® device, you can learn more about how to move content, such as pictures, music, and files, to your Treo 750 by going to www.palm.com/us/support/treo/treo750cingular.

- 1 Plug the AC charger into a wall outlet.
- 2 Plug the USB sync cable into an available USB port or into a powered USB hub on your computer.

TIP For best performance, plug your sync cable directly into a USB port on your computer. If your computer has USB ports on both the front and back, we suggest using the back port. If you use a USB hub, make sure it's a powered hub.

- 3 Connect the sync cable to your Treo 750 by inserting it into the two sockets to the left on the bottom of the Treo 750.
- 4 Connect the charger cable to the remaining socket on the bottom of your Treo 750.

DID YOU KNOW? The AC charger contains an indicator light that glows when the charger is connected to a power source.

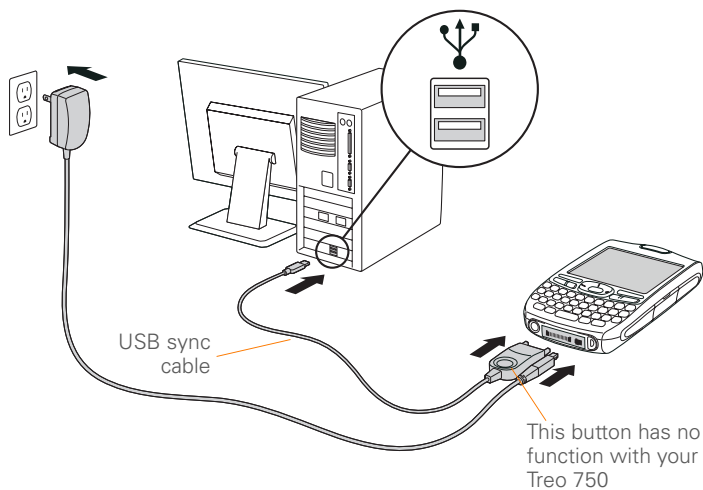

Synchronizing using the sync cable

After you install ActiveSync desktop software, synchronization takes place automatically anytime your Treo 750 is connected to your computer and info is updated in either location.

- 1 Connect your Treo 750 to your computer. You should hear the ActiveSync® tone.



This button has no function with your Treo 750

- 2 Look for the **ActiveSync** icon  at the top of your Treo 750 screen and the **ActiveSync** icon  in the taskbar on your computer.
 - If you don't see the ActiveSync icon, make sure the desktop synchronization software that came with your Treo 750 is running on your computer.
 - If you have any problems synchronizing, see [Synchronization](#) for troubleshooting suggestions.

TIP We recommend that you install the backup and restore app from the Windows Mobile Getting Started Disc. A backup and restore app preserves your data and settings if your Treo 750 is ever lost or stolen, and it protects your data during a hard reset.

Setting up wireless synchronization

Does your company use Microsoft Outlook as its email solution? Does your company also use Microsoft Exchange Server 2003

as its email server? If so, you may be able to wirelessly synchronize the email and other Outlook info on your Treo 750 and the same info stored on the Exchange Server using Microsoft Exchange ActiveSync.

When the Exchange Server is upgraded to Service Pack 2, you may be able to take advantage of the additional features of Direct Push Technology. Direct Push Technology is a two-way wireless delivery method that keeps your Outlook information always up-to-date and provides more efficient communication between the server and your Treo 750. It includes features like Global Address List, Tasks Over The Air (OTA), and IP-based push updating of Calendar, Messaging, and Email.

DID YOU KNOW? Because your desktop copy of Outlook also syncs with the server, whatever is synchronized to the server from your Treo 750 also shows up in Outlook; and whatever you enter or change in Outlook on your computer syncs to the server and then shows up on your Treo 750.


To synchronize wirelessly, you need to set up an Exchange Server Account. Work with your system administrator to gather the following info, and then follow the steps in this section to set up an account.

- Mail server address and domain name
- The username and password you use to access your corporate mail server
- Security connection: Does your server use an encrypted (SSL) connection?

TIP If you installed ActiveSync desktop software, you may have already set up your Treo 750 to synchronize wirelessly with the server. To check, press **Start**, select **Programs**, and select **ActiveSync**. Press **Menu** (right action key). If Configure Server appears instead of Add Server Source, wireless sync is already set up, and you can skip this procedure.

- 1 Press **Start**  and select **Programs**.
- 2 Select **ActiveSync** .
- 3 Press **Menu**  (right action key) and select **Add Server Source**.

- 4 Enter the server address, and then press **Next**  (right action key).

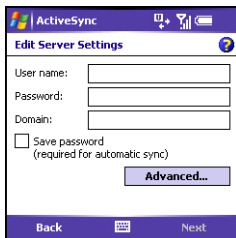

- 5 Enter the username and password you use to access your corporate mail server, and enter the Exchange Server domain. Check the box if your server uses an encrypted connection.

You can't see your password as you enter it, so be careful. Be sure Caps Lock and Option Lock are not on unless you need them. For info on how to enter characters, see [Entering lowercase and uppercase letters](#) and [Entering numbers, punctuation, and symbols](#).


TIP The Exchange Server settings are case-sensitive. Be sure to enter uppercase and lowercase letters properly.

- 6 Check the **Save password** box.

TIP Ask your system administrator if it is OK to store your corporate email password on your Treo 750 (for increased security, you may need to enter your password each time you access your email). If it is not OK, you must synchronize manually (see [Initiating a wireless sync manually](#)).

- 7 (Optional) Select **Advanced** to set the rules for fixing sync conflicts.
- 8 Press **Next**  (right action key) and check the boxes for the types of

information you want to synchronize with the Exchange Server.

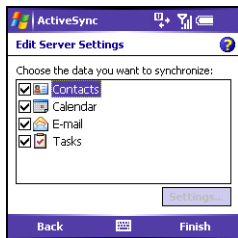

- 9 (Optional) Highlight one of the items and select **Settings** to change the synchronization settings for that type of information. Settings are not available for all items.

TIP To automatically download more of an incoming email message than the default setting, select **E-mail** in step 9 and increase the KB setting. If you don't increase this setting, you can manually download the rest of the message at your convenience.

- 10 Press **Finish** (right action key). Synchronization with your Exchange Server begins automatically. A status

bar appears onscreen, indicating sync progress.

You can set a schedule for synchronization to take place any time info is updated on either your Treo 750 or the server or at certain intervals (see [Setting the synchronization schedule](#)), or allow synchronization to take place only when you initiate it manually (see [Initiating a wireless sync manually](#)).


Setting the synchronization schedule

You can set a synchronization schedule in either of the following situations:

- **If your Microsoft Exchange Server 2003 is upgraded to Service Pack 2:** By default, wireless sync takes place any time info is updated on either your Treo 750 or the server using Direct Push Technology. To save battery life, however, you can set synchronization to take place at intervals that you specify.
- **If your Microsoft Exchange Server 2003 is not upgraded to Service Pack 2:** By default, wireless sync does not take place automatically. Set a synchronization schedule to have sync take place either any time info is

updated on your Treo 750 or the server, or at certain intervals.

- 1 Press **Start**  and select **Programs**.
- 2 Select **ActiveSync** .
- 3 Press **Menu**  (right action key) and select **Schedule**.

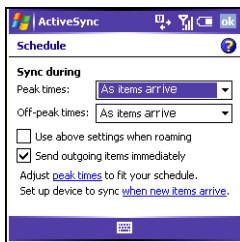

- 4 Set any of the following options:

Peak times: Sets the frequency for high-traffic time periods such as when you are at work or when email volume is high.

Off-peak times: Sets the frequency for low-traffic time periods such as late at night.

Use above settings while roaming:

Sets the frequency while you are roaming outside the AT&T network. You

should keep this box checked to ensure that wireless sync works properly.

Send outgoing items immediately:

Sets whether items are sent as soon as you select Send in the Inbox application, or whether they are held until the next synchronization.

- 5 Press **OK** .

Initiating a wireless sync manually

If you want to control exactly when a wireless sync takes place, or if it is not OK to store your corporate email password on your Treo 750, you can initiate sync manually.

- 1 To set up manual sync, follow the preceding procedure, Setting the synchronization schedule. In the Peak times and Off-peak times lists, select **Manual**.
- 2 To initiate a manual sync, press **Start**  and select **Programs**.
- 3 Select **ActiveSync** .
- 4 Press **Sync**  (left action key).

Other ways to synchronize

Synchronizing over a Bluetooth connection

You can wirelessly synchronize your computer and Treo 750 using Bluetooth wireless technology.

BEFORE YOU BEGIN Do the following:

- Make sure your computer is equipped with Bluetooth® wireless technology.
- If you did not do so during initial setup, install the ActiveSync Plug-in for Bluetooth wireless technology from the Windows Mobile Getting Started Disc.

TIP To install the plug-in for Bluetooth technology, insert the Windows Mobile Getting Started Disc into your computer's CD drive, and then select **Add Programs**. Select the plug-in option on the Add Programs screen and follow the onscreen instructions.

- 1 On your computer, right-click the **ActiveSync** icon  in the taskbar in

the lower-right corner of the screen, and select **Connection Settings**.

- 2 Check the **Allow connections for one of the following** box, and then select **Bluetooth**.
- 3 On your Treo 750, press **Start**  and select **Settings**.
- 4 Select the **Connections** tab, and then select **Bluetooth** .
- 5 Check the **Turn on Bluetooth** box to turn on the Bluetooth feature on your Treo 750.
- 6 Press **Start**  and select **Programs**.
- 7 Select **ActiveSync** .
- 8 Press **Menu**  (right action key) and select **Connect via Bluetooth**.
- 9 If this is the first time you're making a Bluetooth connection to this computer, follow the onscreen prompts to set up a Bluetooth partnership with this computer. See [Connecting to devices with Bluetooth® wireless technology](#) for more information on partnerships.
- 10 Select **Sync**.

- 11 When synchronization has finished, press **Menu**  (right action key) and select **Disconnect Bluetooth**.

Synchronizing over an infrared connection

If your computer has an IR (infrared) port, you can synchronize with your computer wirelessly using the IR port on your Treo 750.

BEFORE YOU BEGIN Make sure your computer is equipped with an IR port.

- 1 Set up your computer to receive infrared beams. See ActiveSync Help on your computer for details.
- 2 Point the IR port directly on your Treo 750 at the IR port on your computer.
- 3 On your Treo 750, press **Start**  and select **Programs**.
- 4 Select **ActiveSync** .
- 5 Press **Menu**  (right action key) and select **Connect via IR**.
- 6 Select **Sync**.

Synchronizing with multiple computers

You can set up your Treo 750 to synchronize with up to two computers as well as with Exchange Server 2003. When synchronizing with multiple computers, the items that you synchronize appear on all the computers.

For example, if you set up to sync your Treo 750 with two computers named C1 and C2, when you sync Contacts and Calendar on your Treo 750 with both computers, you get the following results:

- The contacts and calendar appointments that were on C1 are now also on C2.
- The contacts and calendar appointments that were on C2 are now also on C1.
- The contacts and calendar appointments from both computers are on your device.


NOTE Microsoft® Office Outlook® E-mail can synchronize with only one computer.

Setting synchronization options

Changing which applications sync

You must select sync options if you want to synchronize notes, pictures, and other types of files.

- 1 Press **Start**  and select **Programs**.

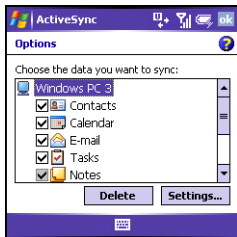

- 2 Select **ActiveSync** .
- 3 Press **Menu**  (right action key) and select **Options**.

- 4 Do any of the following:

- Check the box next to any items you want to synchronize. If you cannot check a box, you might have to uncheck a box for the same information type elsewhere in the list.
- Uncheck the box next to any items you want to stop synchronizing.
- Select an item and then select **Settings** to customize the settings for that item. Settings are not available for all items.

Stopping synchronization

If you ever need to manually stop synchronization, follow these steps:

- 1 Press **Start**  and select **Programs**.
- 2 Select **ActiveSync** .
- 3 Press **Stop**  (left action key).

TIP To stop synchronizing all items on a computer, select the computer name and then select **Delete**.



Your email

You already know how efficient email is for staying in touch. Now your Palm® Treo™ 750 smart device brings you a new level of convenience: email on the go. Enjoy the ease and speed of communicating with friends, family, and colleagues anywhere you can access the AT&T data network.

You can send photos to your friends and family, or create Microsoft Word or Excel files and send them to your colleagues. You can also receive attachments to view and edit at your convenience.

Benefits

- Receive photos, sound files, Word and Excel files, and more
- Attach and send files of almost any type
- Save messages from your computer to view at a convenient time

In this chapter

Setting up.	87
Sending and receiving messages	93
Working with email messages.	96
Sending email messages from within another application.	100

Setting up

BEFORE YOU BEGIN Do the following:

- You must have a data plan with AT&T to use email on your Treo 750. To find out if you have a plan, or to sign up if you don't have one, call Customer Service by dialing 611 from your Treo 750 or 1-866-246-4852 or dial 611 from your Treo 750, or check your most recent Cingular Wireless bill.
- If you want delivery of Outlook email using Direct Push Technology, make sure that your IT administrator has upgraded your Exchange Server 2003 to Service Pack 2.

Entering settings for an email account

You can use your Treo 750 to access email from both personal and corporate email accounts. You can easily set up personal or corporate wireless email yourself, or you can work with your company's IT administrator to obtain access to your corporate email system. The following setup applications are available for do-it-yourself setup and IT-assisted setup.

You can use one or more of these applications to access email for all of your accounts.

NOTE Once you enter settings for an account using one of the applications listed here, you view and compose messages for that account in the Inbox application on your Treo 750. The Inbox application is the home base for viewing and sending messages for all your email accounts.

Do-It-Yourself Setup Applications:

Xpress Mail, Pocket MSN, Inbox. Use one of these apps to enter settings for a personal ISP account (such as EarthLink, Comcast, or CompuServe) or web-based account (such as Gmail or Yahoo! Mail Plus), or for a corporate account that uses Microsoft Outlook® or Lotus Notes.

IT-Assisted Setup Applications:

GoodLink™ Mobile Messaging, Microsoft Exchange ActiveSync®. Use these applications to securely synchronize email with your corporate email server. Your IT administrator must have configured the server to work with these applications and must have set up an account for you on the server before you can begin setup.

Using a do-it-yourself setup application

Xpress Mail: When you set up a personal or corporate email account using Xpress Mail, email for this account is automatically pushed from the server to your Treo 750. Using Xpress Mail with a corporate account also enables wireless synchronization of calendar appointments, contacts, and files that are stored in the My Documents folder on your Treo 750, as well as wireless corporate directory lookup. In addition, you get web-based access to corporate email, calendar, and contacts from any web browser.

For corporate email only, your computer needs to be on and connected to the company network for wireless synchronization to occur. Alternately, if you need to take your main business laptop with you, you can designate another computer to remain always on and connected to the corporate network, so that you can synchronize your email.

You can enter settings for up to three email accounts in Xpress Mail. An AT&T Xpress Mail account is required; additional charges may apply. See [Setting up Xpress Mail](#).

Inbox (POP or IMAP): You can use the Inbox application to enter settings for one personal (POP or IMAP) email account. You must manually retrieve email for an account you set up using Inbox. See [Setting up an IMAP or POP email account](#).

Pocket MSN (Hotmail): Pocket MSN enables you to access your Hotmail account. You can send and receive messages while connected to the data network, and you can review and draft messages when not connected, such as while on a plane. See [Using Pocket MSN](#).

Using an IT-assisted setup application

BEFORE YOU BEGIN Do the following:

- Ask your IT administrator which wireless email solution your company supports.
- Obtain any required email setup information from your IT administrator.
- Confirm that your AT&T account includes the correct data plan to support your email solution. If you're not sure, call 611 from your Treo 750 or 1-866-246-4852 or dial 611 from your Treo 750 to speak to a customer service

representative, or check your latest AT&T Wireless bill.

GoodLink Mobile Messaging: This app provides real-time wireless push of email, calendar, contacts, tasks, and notes for Microsoft Outlook and Lotus Notes. To use GoodLink, you need the following:

- An account on your company's Good Mobile Messaging server. Contact your IT administrator for info.
- An active PDA Connect for Good data plan on your AT&T Wireless account. Contact AT&T for more info.

For setup instructions, see [Setting up Good Mobile Messaging](#).

Microsoft Exchange ActiveSync: This app provides wireless synchronization of email, contacts, calendar and tasks. If your company has Exchange 2003 and Service Pack 2 (SP2) installed, email and other info may be automatically pushed from the server to your Treo 750; otherwise, you need to initiate synchronization manually or set up a sync schedule. To use Exchange ActiveSync, the following must take place:

- For push email, your IT Exchange administrator must enable Mobile

Services on the Exchange Server. Contact your IT administrator for info.

- You must have an active PDA Connect for Microsoft Direct Push data plan on your AT&T Wireless account. Contact AT&T for more info.

For setup instructions, see [Setting up wireless synchronization](#).

TIP Use the web browser to view your free Yahoo! mail account on the web.

Setting up Xpress Mail

Before you can use Xpress Mail to work with email on your Treo 750, you need to do the following:

- Know the address of the email account you want to access through Xpress Mail on your Treo 750.
- Know the phone number of your Treo 750 (see [What's my number?](#)).
- Use your computer's web browser to go to the AT&T Xpress Mail website (<https://xpressmail.cingular.com>) and create an Xpress Mail account.

- On your computer, download, install, and set up Xpress Mail desktop software.
- On your Treo 750, install Xpress Mail software and set it up to work with your email account.

DID YOU KNOW? Xpress Mail is not an email provider. It works with a corporate or personal account to transfer messages to your Treo 750.

For complete information on setting up Xpress Mail, go to www.palm.com/mytreo750cingular.

Setting up Good Mobile Messaging

Good Mobile Messaging provides access to your corporate email and personal information management (PIM) info from your Treo 750 and offers enhanced usability features and enterprise-class security features.

Your company must have Good Mobile Messaging server software in order for you to use Good Mobile Messaging on your Treo 750.

BEFORE YOU BEGIN Do the following:

- Make sure you have a PDA Connect for GoodLink data plan on your AT&T Wireless account. If you're not sure, call customer care by dialing 611 from your Treo 750 or 866-429-7222.
 - Contact your system administrator to make sure you have been added as a user to the Good Mobile Messaging server.
 - Make sure you have received a confirmation email message sent to you after you were added to the Good server; this message includes pertinent information for setting up your account.
 - Make sure your phone is on.
- 1 Press **Start**  and select **Programs**.
 - 2 Select **Get Good** .
 - 3 When prompted, select **Save & Open**.
 - 4 Follow the onscreen instructions to download and run OTA Setup.
 - 5 On the following screen, enter your email address and the 30-digit numeric PIN contained in the confirmation email.

- 6 Follow the onscreen instructions to download, install, and connect to GoodLink.

DID YOU KNOW? After installation, the Get Good program entry is replaced by GoodLink.

Setting up an IMAP or POP email account

You can send and receive email messages using an email account that you have with an Internet service provider (ISP), an email account that you access using a VPN server connection (such as a work account), or any other IMAP or POP email account.

TIP If you have problems configuring your account, go to www.palm.com/emailsetup for more information.

BEFORE YOU BEGIN Work with your email provider or system administrator to gather the following info:

- Account type (POP3 or IMAP)
 - Mail server name for receiving mail
 - Mail server name for sending mail
 - Your username and password
- Any special security requirements
 - 1 Go to your Today screen.
 - 2 Press **E-mail**  (left action key).
 - 3 Press **Menu**  (right action key) and select **Tools > New Account**.


DID YOU KNOW? On the Accounts tab in Messaging Options, an asterisk appears next to the accounts you create.

TIP To delete an email account or to edit account settings—for example, if you need to change the name of the outgoing mail server—press **Menu** (right action key) and select **Tools > Options**. To delete an account, highlight the account you want press and hold **Center** on the 5-way, and then select **Delete**. To edit an account, select the account and change the settings you want to edit.

- 4 Enter the email address that you want to set up, and then press **Next**  (right action key).
- 5 The setup process searches an online database to obtain the settings for your account. Wait until the Status box displays Completed, and then press **Next**  (right action key). If no settings are returned, enter the settings

you obtained from your email provider, and then press **Next** (right action key).


- 6 Enter your name, username, and password.
- 7 If you want to enter your password each time you access this account, do not check the **Save password** box. If you want your password entered automatically, check this box.
- 8 Press **Next** (right action key).
- 9 Select the Account type list, and then select **POP3** or **IMAP**.

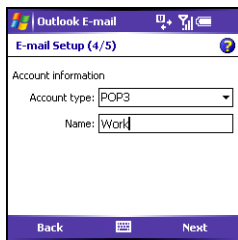

- 10 Enter a name for this account, and then press **Next** (right action key). For example, if this is your work email

account, enter “Work” or your company’s name.

- 11 Enter the name of the Incoming mail and Outgoing mail servers.

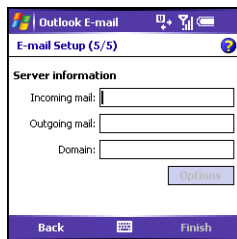

NOTE Do not enter anything in Domain. It is not needed for POP3 or IMAP accounts.

TIP If you are unable to send mail using your email provider’s or corporate mail system’s outgoing mail server, try using cvmx.com as the outgoing server name. This is AT&T’s default outgoing server.

- 12 (Optional) Select **Options** to select download settings for this account.
- 13 Press **Finish** (right action key).


Sending and receiving messages

Creating and sending an email message

- 1 Go to your Today screen.
- 2 Press **E-mail**  (left action key).

DID YOU KNOW? You can also access the Inbox application from the Start menu.

- 3 Press **Left**  to cycle through your Inbox accounts until you see the right email account name in the title bar.
- 4 Press **New**  (left action key).
- 5 Enter the recipient's email address. Here are some shortcuts:

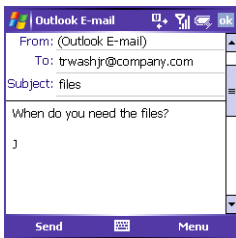

- If the recipient's name and email address are in your Contacts list, enter the first few letters of the recipient's first or last name, and then select the recipient's name.
- If the recipient's name is in an online address book, you can find the name and add it. See [Using an online address book](#).

DID YOU KNOW? When addressing a message, you can enter the contact's first and last initials separated by a space.

- 6 Select **Subject** and enter a title for the message.
- 7 Press **Down**  to go to the body of the message. Enter your message, or press **Menu**  (right action key), select **My Text**, and then select a predefined phrase you want to insert.
- 8 (Optional) Press **Menu**  (right action key) and select **Insert**. Select the type of item you want to attach, and then select the file or record a voice note.

TIP You can send an email message with a file attached from directly within other applications on your Treo 750; see [Sending email messages from within another application](#).

- 9 (Optional) Press **Menu**  (right action key) and do one or both of the following:
- Select **Spell Check**. When the spell check is complete, press **OK** .
 - Select **Message Options**. Select the **Priority** list, select a setting for the message, and then press **OK** .
- 10 Press **Send**  (right action key).

TIP To save memory on your Treo 750, turn off the option to save sent messages in the Saved folder. In the Inbox, press **Menu** (right action key) and select **Tools > Options**. Select **Message**, and then uncheck the **Keep copies of sent items in Sent folder** box.

Receiving email messages

How you receive email messages depends on the type of account you are using and how you synchronize:

- If you synchronize wirelessly with your Exchange Server using Microsoft Exchange ActiveSync, new email messages are sent to your Treo 750 when they appear on the server, according to the schedule you set up (see [Setting the synchronization schedule](#)), or when you manually initiate a sync (see [Initiating a wireless sync manually](#)).

TIP If you sync email with Microsoft Exchange Server 2003, you can synchronize messages in subfolders you create. In the Inbox, press **Menu** (right action key) and select **Tools > Manage Folders**. Folders containing subfolders display a +. Select the + to view the subfolders. Check the box to the left of any subfolder you want to sync.

- If you use ActiveSync desktop software to synchronize your Treo 750 with your computer, messages in Outlook on your computer are transferred to your Treo 750 when you connect your computer

and your Treo 750 (see [Connecting your Treo 750 to your computer](#)).

- For all other types of accounts, including Xpress Mail accounts, ISP accounts, and accounts you access using a VPN server connection (typically a work account), follow these steps to send and receive messages:
- 1 Go to your Today screen.
 - 2 Press **E-mail**  (left action key).
 - 3 Press **Left**  to cycle through your accounts until the name of the account you want to synchronize appears in the title bar.
 - 4 Press **Menu**  (right action key) and select **Send/Receive** to synchronize your Treo 750 with your email server.

Receiving attachments

- 1 Scroll to the attachment name (below the subject) to highlight it and mark it for download.
- 2 Synchronize the email account that contains the message as described in the previous sections.

- 3 Scroll to and select the attachment name (below the subject) to open the attachment.

DID YOU KNOW? You can receive and open attachments in a number of different formats, including PDF. PDF file attachments open in Pictel PDF Viewer on your Treo 750.

TIP To store attachments on an expansion card, press **Menu** (right action key) and select **Tools > Options**. Select **Storage** and then check the **Store attachments on a storage card** box.

If you are synchronizing with Outlook on your computer and want to download attachments automatically, do the following:

- 1 Press **Start**  and select **Programs**.
- 2 Select **ActiveSync** .
- 3 Press **Menu**  (right action key) and select **Options**.
- 4 Select **E-mail**, and then select **Settings**.
- 5 Check the **Include file attachments** box.
- 6 Press **OK** .

To automatically download attachments from an IMAP4 email account (typically an ISP account) or an account that you access using a VPN server connection (typically a work account), do the following:

- 1 Go to your Today screen.
- 2 Press **E-mail**  (left action key).
- 3 Close any open messages.
- 4 Press **Menu**  (right action key) and select **Tools > Options**.
- 5 On the Accounts tab, select the IMAP4 account name.
- 6 Press **Next**  (right action key) until you reach Server information, and then select **Options**.
- 7 Press **Next** twice, and then select **Get full copy of messages** and **When getting full copy, get attachments**.

DID YOU KNOW? Embedded images and objects cannot be received as attachments, unless you have an IMAP4 email account with TNEF disabled. Note that TNEF must be enabled to receive meeting requests.

Working with email messages

Adding an online address book

Many email servers, including servers running Exchange Server, can verify names with an online address book, also called a directory service or a Global Address List. After you create and enable an email account, the Inbox application checks your contacts list and then the directory service to verify names that you enter in the To, Cc, and Bcc fields.

BEFORE YOU BEGIN Do the following:

- Ask your system administrator for the name of the directory service and the server, and whether authentication is required for accessing an online address book.
- If your company is using an Exchange Server, you must first synchronize with the Exchange Server to enable the Global Address List to find a Contact.

- 1 In the message list, press **Menu**  (right action key) and select **Tools > Options**.
- 2 Select the **Address** tab.
- 3 Select the address book you want to check for email addresses, and then select **Add**.
- 4 Enter the name of the Directory service.

TIP To delete a directory service, highlight it, press and hold **Center** on the 5-way, and then select **Delete**.

- 5 Enter the server name.
- 6 If your server requires authentication, check the box, and then enter your username and password.
- 7 (Optional) Check the **Check name against this server** box to enable this directory service.
- 8 Select **OK**.

Using an online address book

You can access contact information, such as an email address or phone number, from your organization's online address book or Global Address List (GAL). To access a

GAL, make sure you are accessing an Exchange Server 2003 upgraded to Service Pack 2. This feature is useful only if you know the exact name as it appears in the directory.

DID YOU KNOW? You can use the Global Address List to find a contact. In Contacts, press **Menu** (right action key), and then select **Find Online**. When sending a meeting request, select **Attendees**, press **Menu** (right action key), and then select **Find Online**.

BEFORE YOU BEGIN Add an online address book to your Treo 750. See [Adding an online address book](#).

- 1 In a new message, tap the **To** box.
- 2 Press **Menu**  (right action key), and select **Add Recipient**.
- 3 Press **Menu**  (right action key), and select **Find Online**.
- 4 Enter the contact name as it appears in the directory and tap **Find**. You must spell the contact name correctly.

TIP When you sync with Outlook on your computer, disable your online address books to avoid errors. Press **Menu** (right action key) and select **Tools > Options**. Select **Address**, select each online address book, and then uncheck the **Check name against this server** box. Be sure to turn this option back on if you synchronize other email accounts.

Forwarding a message


- 1 Open the message you want to forward.
- 2 Press **Menu** (right action key) and select **Forward**.
- 3 Address the message and enter any text you want to add.
- 4 Press **Send** (left action key).

Adding a signature to your messages

You can use a different signature with each email account.

- 1 Press **E-mail** (left action key).
- 2 Press **Menu** (right action key) and select **Tools > Options**.
- 3 On the Accounts tab, select **Signatures**.

- 4 Select the account for which you want to create a signature.

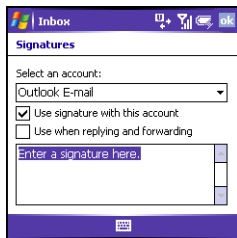


- 5 Check the box to add this signature to new messages you create with this account.
- 6 (Optional) Check the box to add this signature to messages you reply to or forward with this account.
- 7 Select the default signature text and enter the signature text you want to use.
- 8 Press **OK** (confirm icon).

Customizing your email settings

When you customize settings for an email account, the options you choose apply to that account only.

- 1 Press **E-mail**  (left action key).
- 2 Press **Left**  to cycle through your accounts until the name of the account you want appears in the title bar.

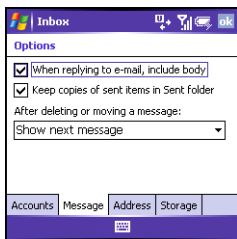

- 3 Press **Menu**  (right action key) and select **Tools > Options**.
- 4 Select the **Message** tab and set any of the following options:

When replying to e-mail, include body: Indicates whether the body of a message you received appears in your response to that message.


Keep copies of sent items in Sent folder: Indicates whether messages you send are stored in the Sent folder.

After deleting or moving a message:

Specifies what you want to see after you delete or move an email message.

- 5 Select the **Address** tab and set any of the following options:

In Contacts, get e-mail addresses from: Indicates whether you want to check Contacts in addition to any directory services for email addresses.

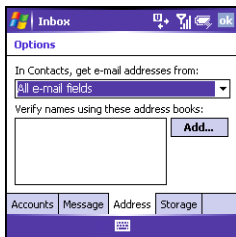

Verify names using these address


books: Indicates which directory services you want to check for email addresses.

Add: Enables you to add directory services to the list of online address books.

- 6 Select the **Storage** tab and set any of the following options:

Store attachments on storage card:

Indicates whether you want to automatically store email attachments on an expansion card.

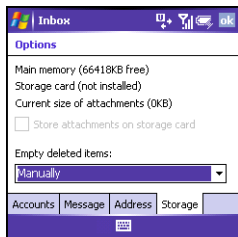

Empty deleted items: Indicates whether you want to automatically empty the Deleted folder, and when you want this to occur.

- 7 Press **OK** .

Sending email messages from within another application

You can send files such as pictures, videos, and ringtones as attachments to email messages; see [Creating and sending an email message](#) for instructions.

You can send certain files as attachments from within the application where the file is created or stored. For example, if you take a picture with the built-in camera on your Treo 750 (camera models only), you can select an option to send the picture as an attachment to an email message. This feature can be used with videos and sound files as well. For details, see the chapter on the specific application.



Your text and multimedia messages

If you need to get a short message to a friend or a co-worker fast, send a text message from your Palm® Treo™ 750 smart device to their mobile phone or email address.

If you need more than text to express yourself, use multimedia messaging to give your message extra impact by adding a photo, video, or sound file.

Benefits

- Enjoy quick communication
- Use text messaging to chat with friends
- Be as simple or as creative as you want

In this chapter

Using the Messaging application	103
Customizing the Messaging application.	111
Using Pocket MSN	115

Using the Messaging application


You can use the Messaging application to send and receive brief text messages (SMS) and multimedia messages (MMS). Before you use your Treo 750 to send or receive messages, consult AT&T for pricing and availability of text and multimedia messaging services.

Creating and sending a text message

Each text message can have up to 160 characters. You can send a message of more than 160 characters, but the message will automatically be split into several messages. (If you send a text message to an email address, the email address is deducted from the 160-character count.)

DID YOU KNOW? You can send and receive text messages even while you are on a phone call. This is easiest when using a hands-free headset or the speakerphone.

- 1 Press **Start**  and select **Messaging**.
- 2 Press **New**  (left action key).
- 3 Enter the recipient's mobile phone number or email address. Here are some shortcuts:

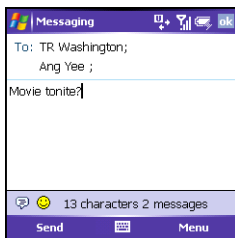

- If the recipient's name and mobile number are in your Contacts list, type the first few letters of the first or last name or simply enter the first initial, followed by a space, and then the last initial to find a name.
- Press **Center**  to view a list of recently used addresses, and select the recipient from the list. Select **Add Recipient** to add a recipient from your Contacts list.

TIP To address a message to multiple recipients, separate the addresses by pressing **Enter** or entering a semicolon (;). You can send a message to up to 20 addresses.

TIP To send a message to a different number for a contact, select the contact in the To field, and then edit the number that appears in the box directly below the contact number. You can also select a number by pressing **Center** on the 5-way, and then edit it.

- 4 Enter your message, or tap  and then select a predefined phrase you want to insert.
- 5 (Optional) Tap  and then select an emoticon to add to your message.

TIP You can also access predefined phrases and emoticons by pressing **Menu** (right action key) on the message compose screen.

TIP Some symbols can't be used in text messages. Invalid characters are automatically replaced by the Messaging application.

- 6 Press **Send**  (left action key).


Creating and sending a multimedia message

Multimedia messages consist of pictures, videos, text, and sounds presented as one or more slides. Even if your Treo 750 does not include a camera, you can still send, receive, and view pictures and videos. You can include any of the following items:

- **Ringtones**
 - MIDI
- **Sound clips**
 - AMR
 - QCELP
- **Pictures**
 - JPEG
 - GIF
 - WBMP
- **Videos**
 - 3GPP
 - 3GPP2
 - MPEG4

Outgoing multimedia messages can be up to 300KB by default, but AT&T may change the maximum message size.

- 1 Press **Start**  and select **Messaging**.
- 2 Press **Menu**  (left action key) and select **New MMS**.

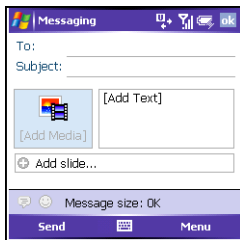

- 3 Enter the recipient's mobile phone number or email address. Here are some shortcuts:
 - If the recipient's name and mobile number are in your Contacts list, type the first few letters of the first or last name or simply enter the first initial, followed by a space, and then the last initial to find a name.
 - Press **Center**  to view a list of recently used addresses, and select the recipient from the list. Select **Add Recipient** to add a recipient from your Contacts list.

- 4 Select **Subject** and enter a title for the message.
- 5 Select  and select one of the following:

Add Picture: Enables you to insert a picture. You can take a new picture with the built-in camera (camera model only) or insert an existing picture.

Add Video: Enables you to insert a video. You can capture a new video with the built-in camera or insert an existing video clip.

Add Sound: Enables you to record a message, such as a voice caption for a picture, or insert an existing sound, such as a ringtone. You can add one sound per slide; to send more than one sound in a message, add another slide to your message.

TIP You can add both a picture and a sound clip to the same slide in a message. To add a sound to a picture, select the picture thumbnail and select **Add Sound**. To add a picture to a sound, select the sound icon thumbnail and select **Add Picture**.

- 6 (Optional) Select **Add Text** and enter a text caption or message for the slide you inserted. Tap  to insert a predefined phrase. Tap  to insert an emoticon.
- 7 (Optional) Select **Add slide** and repeat steps 5–6 to add another slide in this message.

DID YOU KNOW? If you add more than one slide to a message, you can set the length of time each slide is displayed. Press **Menu** (right action key) and then select **Slide Timing**.

- 8 (Optional) To add a vCard (contact file) to a message, press **Menu**  (left action key), select **Add Media**, and then select **Add vCard**.

TIP To preview a multimedia message as the recipient will see it, press **Menu** (right action key) and then select **Preview Message**.


- 9 Press **Send**  (left action key).

Setting message options

You can set options for individual text and multimedia messages you send.

DID YOU KNOW? You can set general preferences that apply to all incoming and outgoing messages; see [Customizing message settings](#). If you set options for an individual message, those options override your general preferences for that message only.

- 1 On the message compose screen, press **Menu** .
- 2 Select **Message Options**.
- 3 Select any of the following options

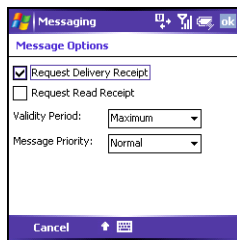

Request Delivery/Read Receipt (multimedia messages only):

Indicates whether you want to receive confirmation that the message has been delivered or has been read.

Validity Period: Indicates how long the message remains available to be sent if the recipient's phone or email address is not available when you originally send the message. For example, if a message contains information that will not be useful to the recipient after an hour, you can set the validity for one hour.

Message Priority (multimedia messages only): Indicates the priority for this message.

4 Press **OK** .


Receiving text and multimedia messages

When your phone is on and you are in a wireless coverage area, you automatically receive new text messages. For multimedia messages, you can set your Treo 750 to automatically download new messages or to notify you that messages are ready to download. You can also set your Treo 750 to notify you when a new text or multimedia message arrives.

DID YOU KNOW? Message notifications include the message text unless you have turned on privacy mode (see [Customizing message settings](#)). If privacy mode is on, the notification states only the type of incoming message.

The new message notification may include any of the following options:

- **Go To:** Opens a text message so you can view its full contents.
- **View:** Opens a multimedia message and plays the included media.
- **Download:** Downloads the full content of a multimedia message.
- **Dismiss:** Closes the notification and puts the message into your Inbox.

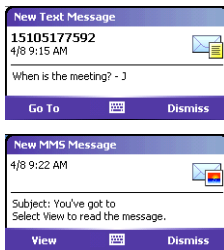

If you have multiple messages, the notification includes the number of messages and the type (text or multimedia).

Viewing/playing a message

You can open a message from a notification or from the Inbox of the Messaging application. When you open a multimedia message, playback starts automatically.

- Do one of the following to open the message:
 - Press **Start**  and select **Messaging**. From the Inbox, select the message you want to view.
 - From a notification, select **Go To** (for text messages) or **View** (for multimedia messages).

- Do any of the following:

Pause or resume playback (multimedia message only):

Select **Pause**  (left action key). To resume playback, select **Play**  (left action key).



Save the item that is playing (multimedia message only): Press **Menu**  (right action key) and select **Save**.

See a summary of the message, including sender, date, and time:

Press **Menu**  (right action key) and select **Message Details**.

Reply to the message: Press **Menu**  (right action key) and select **Reply** or **Reply All**.

NOTE If the message is a single picture with no audio, select **Reply**  (left action key) to reply to the message.

Forward the message: Press **Menu** (right action key) and select **Forward**.

Call the sender: Press **Menu** (right action key) and select **Call Sender**.

Add the sender's information to your Contacts list: Press **Menu** (right action key) and select **Add to Contacts**.

Save the message as a template for other messages: Press **Menu** (right action key) and select **Save as Template**.

DID YOU KNOW? When viewing a message containing multiple slides, you can press **Right** on the 5-way to move to the next slide, or press **Left** on the 5-way to move to the previous slide.


3 Press **OK** (center key).

Using Messaging to chat

When you exchange more than one message with a single contact, the messages you exchange with that person

are grouped into a chat session. When you select a chat session from your message list, the upper part of the screen displays all messages you've exchanged with this contact, and the lower part provides a text entry area.

1 Press **Start** (bottom-left key) and select **Messaging**.

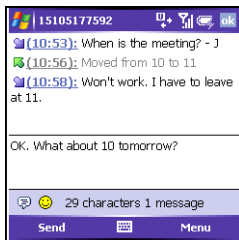

2 Do one of the following:

Start a new chat: Select a message and reply to it.

Continue an existing chat: Select a message with the **Chat** (speech bubble icon).

3 Enter your message.

4 Press **Send** (left action key).

- 5 In a received message, select  to open a media file, or click a link to download and open a new multimedia message.

TIP Only the last 50 messages in a chat session are displayed. Select **View older messages** near the top of the screen to see earlier messages.

Using links in messages

When you receive a text message that contains a telephone number, email address, or URL, you can dial the number, send an email message, or go to the web page immediately. Your Treo 750 automatically opens the appropriate application from the link.

- 1 Open a message in the Inbox or another folder.
- 2 Select the phone number, email address, or URL (appears as underlined blue text).

Message status icons

The status icons that appear next to each message in the Inbox, Outbox, and Sent folders indicate the following:



An unread text message.



An unread message with pictures or videos.



An unread message with sound.



A read text message.



A read message with pictures or videos.



A read message with sound.



A message that was delivered with delivery confirmation turned on (Sent folder only).



Multiple messages exchanged with a single recipient (chat).



An urgent message. This icon appears below the message size on the right side of the screen.

TIP Unread messages appear in bold. Messages you've read appear in plain text.

Sorting your messages

You can sort the messages in any folder by date or by sender.

- 1 Go to the Inbox or other folder you want to sort.
- 2 Press **Menu**  (right action key) and select **Sort**.
- 3 Select **By Name** or **By Date**.


Deleting a single message

- 1 Go to the Inbox or other folder containing the message you want to delete.
- 2 Highlight the message.
- 3 Press **Menu**  (right action key) and select **Delete**.
- 4 Select **Yes** to confirm the deletion.

Deleting multiple messages

- 1 Go to the Inbox or other folder containing the messages you want to delete.
- 2 Press **Menu**  (right action key) and select **Purge**.

- 3 Select the age of messages to be deleted, or select to delete all messages.

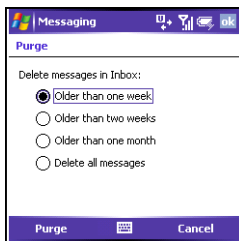


- 4 Select **Purge**  (left action key).

Customizing the Messaging application

Customizing message settings

- 1 Press **Start**  and select **Messaging**.
- 2 Press **Menu**  (right action key) and select **Options**.

- 3 On the Messages tab, set any of the following options:

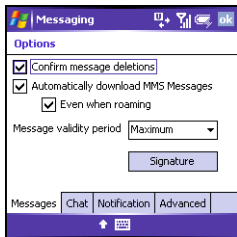

Confirm message deletions: Indicates whether you want deletion confirmation messages to appear.

Automatically download MMS messages: Indicates whether you want to automatically receive multimedia messages. Check the **Even when roaming** box to download multimedia messages both on your home network and while roaming.

NOTE You might incur additional charges if you download multimedia messages while roaming.

Message validity period: Indicates how long messages remain available to be sent if the recipient's phone or email address is not available when you originally send the message. For example, if your messages generally contain information that will not be useful to recipients after an hour, you can set the validity for one hour.

Signature: Enables you to add a signature to outgoing messages. Select the button; then, on the Signature screen, check the **Use signatures with new messages** box, enter your signature text, and press **OK** .


- 4 Press **OK** .

DID YOU KNOW? Options you select for an individual message (see [Setting message options](#)) override the general preferences you set for messages.

Customizing chat settings

- 1 Press **Start**  and select **Messaging**.
- 2 Press **Menu**  (right action key) and select **Options**.

3 Select the **Chat** tab.

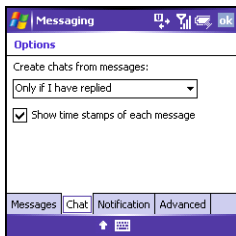

4 Select either of the following options:

Create chat from messages: Indicates the conditions under which a chat session starts.

Show time stamps of each message: Indicates whether you want chat session items to display a date and time indicator.

5 Press **OK** .

Customizing notification settings


- 1 Press **Start**  and select **Messaging**.
- 2 Press **Menu**  (right action key) and select **Options**.

3 Select the **Notification** tab.



4 Select any of the following options:

Request MMS receipts: Indicates whether you want to receive a confirmation when a multimedia message is delivered or when it is read.

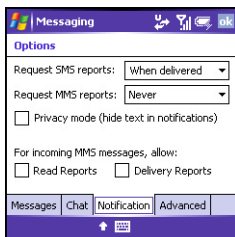

Privacy mode: Indicates whether you want only the message type displayed on a notification for a single incoming message. If the box is unchecked, the notification displays the text of the message.

Acknowledge when messages are received/read: Indicates whether you want a confirmation sent to the sender when you receive or read a multimedia message.


- 5 Press **OK** .

Customizing network settings

IMPORTANT Changing the network settings can cause the Messaging application to stop working correctly. We recommend that you keep the default network settings.

- 1 Press **Start**  and select **Messaging**.
- 2 Press **Menu**  (right action key) and select **Options**.

- 3 Select the **Advanced** tab.

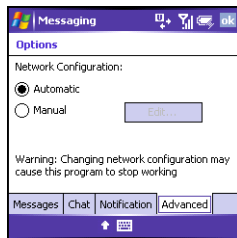

- 4 Select **Manual**, and then select **Edit**.
- 5 Edit the network settings you want to change.

TIP Select **Automatic** on the Advanced tab to restore the default settings.

- 6 Press **OK**  twice.

Using Pocket MSN

Pocket MSN provides quick access to the following:

- **MSN Hotmail:** Enables you to read, write, send, and delete email. You can also manage your Hotmail folders.
- **MSN Messenger:** Enables you to see who's online and exchange instant messages (IM). Subscribe to status updates for selected contacts so you're notified when they're online.
- **Options:** Enables you to customize your Pocket MSN experience.

DID YOU KNOW? You can add Pocket MSN to your Today screen. See [Selecting which items appear on your Today screen](#) for details.

BEFORE YOU BEGIN You must subscribe to data services from AT&T. You must also have a Passport (IM) account or a Hotmail account. If you do not have either of these accounts, do the following:


- To create a Passport (IM) account, go to www.passport.com.

- To create a Hotmail account, go to www.hotmail.com.

TIP When you set up a Pocket MSN Hotmail account, you can access that account in the Inbox application. To access your instant messages, use the MSN application or the MSN plug-in on the Today screen.

Signing in to Pocket MSN

- 1 Press **Start**  and select **Programs**.
- 2 Select **Pocket MSN**.

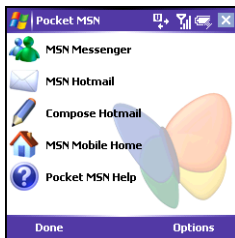

- 3 Select **MSN Mobile Home**.
- 4 Select **Sign in**.
- 5 Enter the email address and password for your Passport account or your Hotmail account.



Your connections to the web and wireless devices

You use the web for so many things: finding driving directions, getting news, buying gifts, checking web-based email. Now, with the AT&T network and the built-in web browser, you can take the web with you almost anywhere you go.

The built-in Bluetooth® wireless technology helps on your Palm® Treo™ 750 smart device you easily set up wireless connections to a number of devices, so you can enjoy the convenience of cable-free connectivity. You can also use your Treo 750 to connect your computer to the Internet and to share contacts or your favorite photos with other people.

Benefits

- Carry the web with you
- Store web pages for offline viewing
- Connect to Bluetooth headsets and car kits
- Connect your computer to the Internet through your Treo 750

In this chapter

Browsing the web	119
Connecting to devices with Bluetooth® wireless technology	125
Using your device as a wireless modem	129

Browsing the web

Internet Explorer Mobile provides quick and easy access to web pages. You can view most sites you use on your computer, including those with security and advanced features, such as JavaScript and frames.

Internet Explorer Mobile supports JavaScript, Secure Sockets Layer (SSL), and cookies, but does not support plug-ins (Flash, Shockwave, and so on) or Java applets.

DID YOU KNOW? The security certificates and 128-bit SSL strong encryption enables you to browse secure sites, such as online shopping, banking, and email. Remember, some secure sites also require a specific browser and may not work with Internet Explorer Mobile. Ask the organization for an alternate access point that is compatible with Internet Explorer Mobile.

BEFORE YOU BEGIN Do the following:

- Be sure to subscribe to data services from AT&T. This is necessary for browsing the web.

- Make sure your phone is on (see Turning your Palm® Treo™ 750 smart device on/off).

Viewing a web page

By default, Internet Explorer Mobile scales web page content to fit your Treo 750 screen so that you can view most of the information without scrolling left or right.

DID YOU KNOW? You can also start a web search from your Today screen by selecting the Web search field, entering the item you want to find, and then pressing Center on the 5-way.



- 1 Press **Start** and select **Internet Explorer**.

- Highlight the address line, enter the address of the web page you want to view, and then press **Center** . To return to a recently viewed page, select the address line list, and then select the web address.

DID YOU KNOW? If you browse to a secure web page, the Lock icon in the address line appears closed instead of open.

- Press **Menu** , select **View**, and then select one of the following:

One Column: Arranges web pages into one column that is as wide as the screen, so that you don't have to scroll horizontally.

Default: Maintains a layout similar to what you see on a desktop computer, but it makes items smaller and arranges the content so that you can see most of it without scrolling horizontally.

Desktop: Keeps the same layout and size as on a desktop computer, which requires both horizontal and vertical scrolling.

Full Screen: Hides the status and navigation areas and fills the entire screen with the web page. To exit full screen mode, press  (right action key), or tap and hold anywhere on the screen and uncheck **Full Screen**.

Show Pictures: Shows or hides pictures on web pages. Hiding pictures speeds up the time it takes to load pages.

- Here are some tips on viewing web pages and moving around in them:
 - To view the previous page, press **Back**  (left action key) or **Backspace** .
 - To refresh the page with the latest content from the Internet, press **Menu**  (right action key) and select **Refresh**.
 - To scroll through the page in One Column View or Default View, press **Up**  or **Down** . In Desktop View, press **Up** , **Down** , **Left** , or **Right**  to scroll in all directions.
 - To follow a link to another web page, press **Up**  or **Down**  to highlight the link, and then press **Center**  to

go to the selected page. You can also tap the link on the screen with your stylus.

- To send email from a web page, select the address link. You need to configure an email application on your Treo 750 before you can use this feature. See [Your email](#).
- To adjust the size of the text on web pages, press **Menu** (right action key), select **Zoom**, and then select the size you want.
- To view a web page's properties, press **Menu** (right action key) and select **Tools > Properties**.
- To view each item in a list, select the list and scroll using **Up** ▲ or **Down** ▼.
- In a list, press **Left** ◀ or **Right** ▶ to cycle between items, and press **Center** (center key) to accept the change.
- In a form, such as a browser search field, press **Center** (center key) to interact with the form, and then press **Center** (center key) to stop interacting with the form.

- 5 Press **OK** (bottom key) to close Internet Explorer Mobile.


TIP To send a link, press **Menu** and select **Tools > Send Link via E-mail**. Select the Messaging account you want to use to send the link.

Creating a favorite

Favorites let you bookmark a web page so that you can instantly access it without entering the web address.

BEFORE YOU BEGIN Create the folders where you want to store your favorites first. Once you create a favorite, you can't move it to another folder.

- 1 Go to the page you want to mark as a favorite.

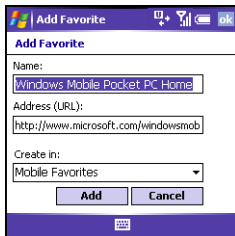

- 2 Press **Menu**  (right action key) and select **Add to Favorites**.
- 3 (Optional) Select **Name** and enter a different description.
- 4 (Optional) Select the folder where you want to create the favorite.
- 5 Select **Add**.

TIP To delete a favorite or folder, press **Menu** and select **Favorites**. Select the **Add/Delete** tab, highlight the item you want to delete, and then select **Delete**. Select **Yes** to confirm deletion, and then press **OK**.

Viewing a favorite

- 1 Press **Start**  and select Internet Explorer.
- 2 Press **Favorites**  (left action key).
- 3 Select the page you want to view in the list.

Organizing your favorites

You can create folders to organize your favorites. For example, you can store travel links in one folder, stock links in another, and business links in a third folder.

- 1 Press **Start**  and select Internet Explorer.
- 2 Press **Menu**  (right action key) and select Favorites.
- 3 Select the **Add/Delete** tab.
- 4 Select **New Folder**.
- 5 Enter a name for this folder, and then select **Add**.
- 6 Press **OK** .

Downloading files and images from a web page

You can download files that are usable on your Treo 750, such as new applications, MIDI ringtones, or pictures that are specifically tagged for download.

DID YOU KNOW? You can select the Downloads favorite to access the AT&T downloads page.

- 1 Go to the page that contains the link to the file you want to download.
- 2 Press **Left**  or **Right**  to highlight the link to the file.
- 3 Press and hold **Center** , and then select **Save As** to download a file, or

tap and hold, and then select **Save Image** to download an image.

- 4 Select **Name** and enter a new name for the file.
- 5 Select the **Folder** list, and then select the folder where you want to save the file.
- 6 Select the **Location** list, and then select where you want to store the file: **Main memory** or **Storage card**.
- 7 Press **OK** .

DID YOU KNOW? You can access specially formatted streaming content by pressing **Menu** (right action key), selecting **Favorites**, and then selecting **WindowsMedia.com**.

Copying text from a web page

You can copy text from a web page and paste it in other applications.

TIP You can copy the text from the entire web page. Tap and hold on the page, and tap **Select All Text**. Tap and hold on the page again, and tap **Copy**.

- 1 Use the stylus to highlight the text you want to copy.
- 2 Press **Menu**  (right action key) and select **Edit > Copy**.
- 3 Go to the application in which you want to paste, and then position the cursor where you want to paste the text.
- 4 Press **Menu**  (right action key) and select **Edit > Paste**.

TIP If Internet Explorer Mobile does not recognize a Treo 750 number as dialable, you can copy the phone number (as text) and paste it into the Phone Dial Pad.


Returning to recently viewed pages

The History list stores the addresses of the pages you visited recently.

- 1 Press **Menu**  (right action key) and select **History**.
- 2 (Optional) Select the **Show** list in the upper-left, and then select how you want to sort the History list.
- 3 Select the web page you want to view.

Customizing your Internet Explorer Mobile settings


- 1 Press **Menu** (right action key) and select **Tools > Options**.
- 2 On the General tab, set any of the following options:

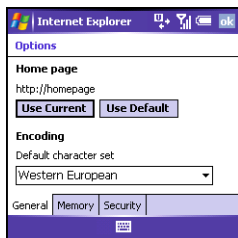

Home Page: Sets the page that appears when you open Internet Explorer Mobile. To use the page you were on when you opened the menu, select **Use Current**. To select the original home page, select **Use Default**.

Encoding: Sets the character set for the web pages you view.

- 3 Select the **Memory** tab and set any of the following options:

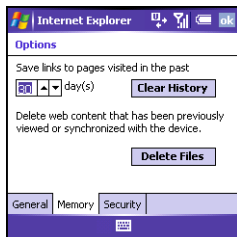

Save links to pages visited in the past: Sets how many days of activity the History list stores.

Clear History: Empties the History list.

Delete Files: Removes web files that you synchronized with your computer.

- 4 Select the **Security** tab and set any of the following options:

Allow cookies: Sets whether your Treo 750 accepts cookies (small files containing info about your identity and preferences). The page sends the file and stores it on your Treo 750.



Clear Cookies: Deletes any cookies stored on your Treo 750.

Warn when changing to a page that is not secure: Sets whether a message appears when you switch from a secure page to one that is not secure.

Warn when page content is blocked due to security settings: Sets whether a message appears when you attempt to open a page that does not meet the security standards associated with your Treo 750.

- 5 Press **OK** .

Connecting to devices with Bluetooth® wireless technology

With the built-in Bluetooth® wireless technology on your Treo 750, you can connect to a number of Bluetooth devices such as a headset or hands-free car kit, as well as to other phones, handhelds, or piconets. When you connect to another device, you create a partnership (also referred to by terms such as *trusted pair*, *trusted device*, or *pairing*) with that device. If your computer is enabled with Bluetooth wireless technology, you can also synchronize wirelessly or use your phone as a wireless modem.

You can create a list of Bluetooth devices that you trust to communicate with your Treo 750. When communicating with trusted devices, your Treo 750 skips the discovery process and creates a secure link as long as the device is within range. Bluetooth range is up to 30 feet (10 meters)


in ideal conditions. Performance and range are affected by physical obstacles, radio interference from nearby electronic equipment, and other factors.

When you configure a headset (see [Connecting to a Bluetooth® hands-free device](#)), the headset is automatically added to your trusted device list. Follow the steps in this section to add other devices to your trusted device list, such as your computer.

DID YOU KNOW? Check your battery level before establishing a Bluetooth connection. If the battery level is low, you can't make a Bluetooth connection.

Entering basic Bluetooth settings

- 1 Go to your Today screen, and then tap **Bluetooth** .

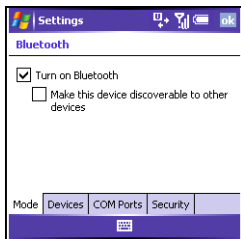

- 2 Check the **Turn on Bluetooth** box to turn on the Bluetooth feature on your Treo 750.
- 3 Check or uncheck the **Make the device discoverable to other devices** box.
- 4 When this box is checked, this enables Bluetooth devices that are not on your Trusted Device list to request a connection with your device. Your device remains accessible to other devices until you uncheck the box.

DID YOU KNOW? The Bluetooth icon on your Today screen indicates the status of the Bluetooth feature:

Gray = Bluetooth off.

Blue = Bluetooth on.

White = Connected to a Bluetooth device.

Headset = Call in progress with a Bluetooth headset or car kit.

Requesting a connection with another Bluetooth device

BEFORE YOU BEGIN To prepare your Treo 750 to be able to accept a connection from a requesting device, enter the basic Bluetooth settings as described in [Entering basic Bluetooth settings](#).

KEY TERM Partnership Two devices—for example, your Treo 750 and a hands-free device—that can connect because each device finds the same passkey on the other device. Once you form a partnership with a device, you don't need to enter a passkey to connect with that device again. Partnership is also known as paired relationship, pairing, trusted device, and trusted pair.

IMPORTANT Some hands-free devices have a predefined passkey; if so, you can find the passkey in the documentation for that device. Other devices provide a screen where you enter a passkey that you make up. In either case, you must use the same passkey on both your Treo 750 and your hands-free device. We recommend that where possible, you make up a passkey of 16 alphanumeric characters (letters and numerals only) to improve the security of your Treo 750. The longer the passkey, the more difficult it is for the passkey to be deciphered.

- 1 Go to your Today screen, and then tap Bluetooth .

- 2 Check the **Turn on Bluetooth** box to turn on the Bluetooth feature on your Treo 750.
- 3 Select the **Devices** tab, and then select **New Partnership**.



- 4 Wait for your Treo 750 to search for devices and to display the device list.

- 5 Select the device you want to connect with, and then press **Next**  (right action key).
- 6 Enter an alphanumeric passkey between 1 and 16 characters long, and then press **Next**  (right action key).
- 7 If the passkey is not built-in, enter the same passkey on the Treo 750 and the other Bluetooth device, and then press **Finish**  (right action key).
- 8 If you're connecting to a headset or hands-free car kit, check the **Hands Free** box, and then press **Finish**  (right action key).
- 9 Press **OK** .

You can now communicate with this device whenever it is within range and the Bluetooth feature on your Treo 750 is turned on. The range varies greatly depending on environmental factors; maximum is about 10 meters or 30 feet.

TIP To delete the established partnership with a device, go to the Bluetooth Settings screen and select **Devices**. Highlight the connection you want to remove, press and hold **Center** on the 5-way, and then select **Delete**. The deleted device can no longer automatically connect with your Treo 750.

Accepting a connection from another Bluetooth device

BEFORE YOU BEGIN To prepare your Treo 750 to be able to accept a connection from a requesting device, enter the basic Bluetooth settings as described in [Entering basic Bluetooth settings](#).

- 1 Go to your Today screen, and then tap **Bluetooth** .
- 2 Check the **Turn on Bluetooth** box to turn on the Bluetooth feature on your Treo 750.
- 3 If you have already set up a partnership with the transmitting device, your Treo 750 is ready to receive the info.
If you haven't set up a connection, check the **Make this device discoverable to other devices** box to

let the device find your Treo 750 and request a connection. Enter the same passkey on your Treo 750 and on the Bluetooth device.

- 4 When your Treo 750 is receiving info, a notification tells you that a transmission is in progress. To stop the transmission, press **Cancel** (left action key); to close the notification, press **Dismiss** (right action key).

Using your device as a wireless modem

Dial-up networking (DUN) is the feature that converts your Treo 750 into a modem so that you can access the Internet from your computer.

You can set up DUN in one of two ways:

- You can use ModemLink (USB).
- If your computer is enabled with Bluetooth wireless technology, you can set up your device as a wireless modem using the built-in Bluetooth technology.

Setting up Modem Link for a USB connection

- 1 Press **Start** and select **Programs**.



- 2 Select **Modem Link**.
- 3 Select the **Connection** list and select **USB**.
- 4 Press **Activate** (left action key) and follow the wizard to set up Modem Link.

Creating a DUN connection using Bluetooth technology

To configure DUN using Bluetooth technology, complete the following procedures:

- Create a partnership between your device and your computer as described

in [Requesting a connection with another Bluetooth device](#).

- [Setting up your computer for a Bluetooth DUN connection](#)
- [Accessing the Internet using a Bluetooth DUN connection](#)

Setting up your computer for a Bluetooth DUN connection

Dial-up networking must be enabled or installed on your computer. Follow the instructions from the manufacturer of your Bluetooth adapter to enable DUN. Your wireless service provider may provide customized software programs that walk you through the DUN setup process. Check with your wireless service provider to see if such a program is available.

Accessing the Internet using a Bluetooth DUN connection

The steps for accessing the Internet on your computer may vary depending on your operating system and how Bluetooth wireless technology is set up on your computer—for example, if it is built in versus if you are using a wireless Bluetooth adapter. If the following

procedure does not work with your computer, check your computer's documentation for how to set up Bluetooth technology to access the Internet using a DUN connection.

BEFORE YOU BEGIN You may need to use a virtual private network (VPN) to access corporate email. Check with your system administrator for more information.

- 1 Open the Bluetooth screen on your computer and look for the option for paired devices. Check your computer's documentation for how to open this screen and for the name of the paired devices option.
- 2 Double-click the icon or option representing your Treo 750. Your computer connects to your Treo 750 and shows that DUN services are available.
- 3 Double-click the **DUN** icon.
- 4 Enter the following in the **Dial** field: ***99#** or ***99***1#**. You do not need to enter anything in the User Name or Password field.

- 5 Click **Dial**. Once the connection is successfully established, you can browse the Internet on your computer or download your email.
- 6 You may be asked if you want to remember this dial text for this connection. We recommend that you choose to remember the dial text to avoid errors and the inconvenience of entering it for every session.
- 7 To verify that you are connected, look for a network connection icon in the taskbar at the bottom of your computer screen. To check the status of the connection, right-click the **Bluetooth network** icon.

Terminating a DUN Internet session

To terminate the DUN connection, right-click the icon or option representing your Treo 750 on your computer, and then click **Disconnect**.



Your photos, videos, and music

Do you have a wallet bulging with photos of friends, family, pets, and your most recent vacation?

Are you tired of carrying both your MP3 player and your phone?

Your Palm® Treo™ 750 smart device solves both problems. You can keep your favorite photos right on your Treo 750—videos, too. And there's no need to carry an expensive MP3 player; you can play music on your Treo 750. Simply transfer songs onto your Treo 750 or an expansion card and then listen through your stereo headphones.

Benefits

- Never be far from your favorite people, places, and songs
- No separate photo viewer, MP3, CD, or mini-disc player required
- Arrange your photos, videos, and songs

In this chapter

Camera.	135
Pictures & Videos.	140
Windows Media Player Mobile	144

Camera

Your Treo 750 comes with an easy-to-use, built-in, 1.3-megapixel camera with 2x digital zoom (camera not included with all Treo 750 models). You can use the camera to take and view pictures and videos and send them to your friends and family. To add a personal touch to your Treo 750, use your pictures as your Today screen background, and as caller ID images, or use your videos to create video ringtones.

If your Treo 750 does not have a built-in camera, the Camera and Video options do not apply to you.


Even if your Treo 750 does not have a camera, you can still receive and view pictures and videos, and send pictures and videos as attachments or multimedia messages; see [Pictures & Videos](#). You can also personalize your Treo 750 by using a picture as a background or by adding a picture to a contact; see [Adding a contact](#) for details. You can also move pictures and videos to a computer by synchronizing your Treo 750 with your computer.

Taking a picture

By default, pictures are stored in the My Pictures folder on your Treo 750. If you want to store your pictures on an expansion card, see [Customizing your Camera settings](#) to change where pictures are stored. For information on accessing your pictures on your computer, see [Viewing pictures and videos on your computer](#).

Pictures are captured and stored in 16-bit color, JPG format. Resolution settings range from 1280 x 1024 to 160 x 120 pixels; 1.3-megapixels to QQVGA (160 x 120 pixels). You can change the default setting. See [Customizing your Camera settings](#) for details.

- 1 Press **Start**  and select the **Camera**  icon.

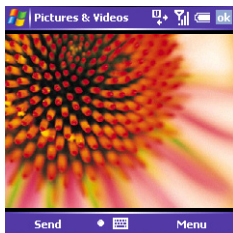

- 2 Adjust the position of your Treo 750 until you see the subject you want to photograph on the screen. Your Treo 750 has a self-portrait mirror next to the camera lens on the back of your Treo 750. Use the mirror when you're taking a picture and you want to be in the picture too.

- 3 (Optional) Adjust any of the following:

Zoom: Press **Up** ▲, to zoom in or **Down** ▼ to zoom out.

Brightness: Press **Right** ► to increase the brightness or **Left** ◀ to decrease the brightness.

Resolution: Press **Menu** (right action key) and select **Resolution** to change the image quality.

- 4 (Optional) Set a five-second timer: Press **Menu** (right action key), select **Mode**, and then select **Timer**.
- 5 Press **Center** (capture button) to capture the picture or start the timer.

- 6 Hold your Treo 750 still until the picture renders, and then do one of the following:

- Press **Camera** (left action key) to take another picture.
- Press **OK** (screen) to return to Thumbnails View.

DID YOU KNOW? After three minutes of inactivity when previewing an image, the camera goes into standby mode. Press any key or tap the screen to return to the image preview. If the camera goes to standby while the recording is paused, the recording is stopped and the video clip is saved.

Taking pictures in burst mode

Burst mode takes five pictures in quick succession, with one button press.

- 1 Press **Start** (power button) and select **Pictures & Videos**.
- 2 Press **Camera** (left action key).
- 3 Press **Menu** (right action key) and select **Mode** > **Burst**.
- 4 Press **Center** (capture button).

Recording a video

Videos can be any length, provided you have enough storage space available. By default, videos are stored in the My Pictures folder on your Treo 750. If you want to store your videos on an expansion card, see [Customizing your Camera settings](#) to change where videos are stored. For information on accessing your videos on your computer, see [Viewing pictures and videos on your computer](#).


TIP If you see a camcorder icon below the preview image, video mode is on. To turn on the still camera, press **Menu** and select **Still Mode**.

- 1 Press **Start**  and select **Pictures & Videos**.
- 2 Select **Camera** .
- 3 Press **Menu**  (right action key) and select **Video Mode**.
- 4 Adjust the position of your Treo 750 until you see the subject you want to record on the screen. Your Treo 750 has a self-portrait mirror next to the camera lens on the back of your Treo 750. Use the mirror when you're taking a picture

video and you want to be in the picture too.

- 5 (Optional) Adjust any of the following:
Brightness: Press **Right**  to increase the brightness or **Left**  to decrease the brightness.

Resolution: Press **Menu**  and select **Quality** to change the video resolution.

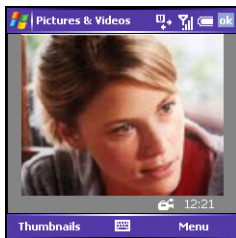

- 6 Press **Center**  to start recording.
- 7 When you're finished recording, press **Stop**  (left action key) or **Center**  to stop recording.
- 8 (Optional) To review the video in Windows Media Player Mobile, press **Thumbnails**  (left action key), highlight the video, and then press

Center . Press **OK**  to return to Thumbnail View.

TIP If you don't like a video you recorded, delete it. See [Deleting a picture or video](#) for details.

Customizing your Camera settings

- 1 Press **Start**  and select **Pictures & Videos**.
- 2 Press **Menu**  (right action key) and select **Options**.




- 3 On the General tab, set any of the following options:

Use this picture size: Sets the size of pictures you send with the Messaging application.

When rotating a picture, rotate 90 degrees: Sets the direction in which pictures rotate.


- 4 Select the **Slide Show** tab and set any of the following options:

During slide shows, optimize for viewing: Sets whether pictures are optimized for portrait or landscape format during slide shows.

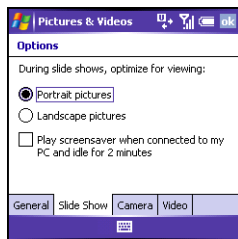

Play screensaver when connected to my PC and idle for 2 minutes: Sets whether the pictures in your My Pictures folder are used as a screensaver when your Treo 750 is connected to your computer and ActiveSync® desktop software is not running.

- 5 Select the **Camera** tab and set any of the following options:

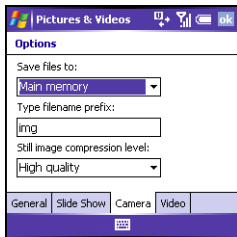


Save files to: Specifies whether pictures and videos are stored on your Treo 750 or on an expansion card.

Type filename prefix: Assigns a name to a series of pictures to be captured, such as Seattle001, Seattle002, and so on.

Still image compression level: Sets the default size for newly captured pictures.

- 6 Select the **Video** tab and set any of the following options:

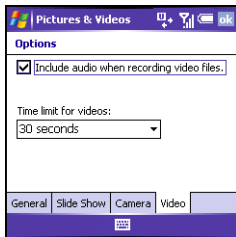

Include audio when recording video files: Turns the microphone on and off so that you can record videos with or without sound.

Time limit for videos: Limits the length of videos you record. You can also select the No limit option.

- 7 Press **OK**  to return to the Thumbnail View.

DID YOU KNOW? Videos are captured and stored in 3GP format. Video resolution settings range from 352 x 288 to 176 x 144 pixels.

Pictures & Videos

Viewing a picture

In addition to viewing the pictures you capture with the built-in camera, you can view pictures captured on many popular digital cameras or downloaded from the Internet. Your Treo 750 supports the following picture formats:

- JPG
- PNG
- BMP
- GIF

- 1 Press **Start**  and select **Pictures & Videos**.
- 2 Select the picture you want to view.
- 3 Press **OK**  to return to Thumbnail View.

Viewing a video

In addition to viewing the videos you capture with the built-in camera, you can view videos captured on many popular digital cameras streamed from websites.

Your Treo 750 supports and streams the following types of video files:

- MPEG-4
- 3GPP2
- 3GPP
- WMV, WMA, ASF
- RTSP
- SDP Streaming

- 1 Press **Start**  and select **Pictures & Videos**.
- 2 Select the video you want to view. For more info on viewing videos, see [Playing media files on your Treo 750](#).
- 3 Press **OK**  to return to Thumbnail View.

TIP To view pictures or videos in a different folder, select the **Show** list in the upper-left, and then select the album you want to view.

Viewing a slide show

- 1 Press **Start**  and select **Pictures & Videos**.
- 2 Press **Menu**  (right action key) and select **Play Slide Show**. The slide show plays automatically.

- 3 Press **Center**  to display the slide show toolbar, which you can use to **Rotate** , **Play** , **Pause** , **Reverse** , **Forward** , and **Stop**  the slide show.

Sending a picture or video

You can send a picture or video to other picture-enabled mobile Treo 750 devices or to an email address as an attachment.

You cannot send copyrighted pictures or videos that appear with a Lock icon in Thumbnail View.

- 1 Press **Start**  and select **Pictures & Videos**.
- 2 Highlight the picture or video you want to send.
- 3 Press **Menu**  (right action key) and select **Send**.
- 4 Select the email or MMS account you want to use to send the picture or video.
- 5 When the Messaging application opens, address and send the message.
(See [Creating and sending a multimedia message](#) for details.)

Creating a video ringtone

You can save a video that you record as a ringtone.

- 1 Press **Start**  and select **Pictures & Videos**.
- 2 Highlight the video you want to use as a ringtone.
- 3 Press **Menu**  (right action key) and select **Save to Contact Ring Tone**.
- 4 Select the contact to whom you want to assign the ringtone.

Organizing pictures and videos

You can move or copy pictures and videos to other folders or between your Treo 750 and an expansion card.

- 1 Press **Start**  and select **Pictures & Videos**.
- 2 Highlight the picture or video you want to move or copy.
- 3 Do one of the following:
 - To move the picture or video to another location, press **Menu**  (right action key) and select **Edit > Cut**.

- To keep the picture or video in two locations, press **Menu**  (right action key) and select **Edit > Copy**.
- 4 Select the **Show** list in the upper-left, and select the location where you want to place the picture or video you selected in step 3.
 - 5 Press **Menu**  (right action key) and select **Edit > Paste**.

You can also view a specific folder or expansion card and arrange the pictures and videos by name, date, or size.

- 1 Press **Start**  and select **Pictures & Videos**.
- 2 Select the **Show** list in the upper-left, and then select the folder you want to view.
- 3 Select the **Sort By** list in the upper-right, and then select the sort method: **Name**, **Date**, or **Size**.

Using a picture as the Today screen background

- 1 Press **Start**  and select **Pictures & Videos**.
- 2 Highlight the picture you want to use.

- 3 Press **Menu**  (right action key) and select **Set as Today Background**.
- 4 Select the **Transparency level** list and select the appropriate level. Use a higher percentage for a more transparent picture and a lower percentage for a more opaque picture.
- 5 Press **OK**  to return to Thumbnail View.

Editing a picture

For more extensive edits, just download your picture or video to your computer and edit it in your favorite graphics program. Then sync the picture or video back on your Treo 750.

- 1 Press **Start**  and select **Pictures & Videos**.
- 2 Highlight the picture you want to edit.
- 3 Press **Menu**  (right action key) and select **Edit**.
- 4 Do any of the following:
 - To rotate a picture 90 degrees counterclockwise, select **Rotate**.
 - To crop a picture, press **Menu**  (right action key) and select **Crop**. Tap

and drag the stylus to highlight the area to crop. Tap outside the box to stop cropping.

- To adjust the brightness and contrast levels of a picture, press **Menu**  (right action key) and select **AutoCorrect**.
- To undo an edit, press **Menu** and select **Undo**.
- To cancel all unsaved edits you made to the picture, select **Revert to Saved**.

Deleting a picture or video

- 1 Press **Start**  and select **Pictures & Videos**.
- 2 Highlight the picture or video you want to delete.
- 3 Press **Menu**  (right action key) and select **Delete**.
- 4 Select **Yes**.

Viewing pictures and videos on your computer

BEFORE YOU BEGIN You must install ActiveSync® desktop software from the Windows Getting Started Disc (see

Installing the desktop synchronization software) and select the option to synchronize media (see Changing which applications sync).

When you synchronize your Treo 750, your pictures and videos are copied to your desktop computer. You can view the pictures and videos, and you can also send them to friends using your desktop email application.

To find all synchronized pictures and videos, look in C:\Documents and Settings\<Username>\My Documents\Treo My Documents.

DID YOU KNOW? You can also download animated GIF files and view them in Internet Explorer Mobile.

IMPORTANT You must have QuickTime Player version 6.5 or later installed on your computer to play videos recorded by your Treo 750. You can download the videos from an expansion card or you can click the video thumbnail after synchronizing the files.

Windows Media Player Mobile

Windows Media Player Mobile can play music, audio, and video files that are stored on your Treo 750 or on an expansion card (sold separately) in any of the following file formats:

- WMA
- WMV
- MP3
- 3GP

You can listen to these music, audio, and video files through the speaker on the back of your Treo 750 or through stereo headphones.

TIP For tips on using the desktop version of Windows Media Player, go to the Help menu in Windows Media Player on your computer.

Transferring media files to your Treo 750

Use the Sync feature in the desktop version of Windows Media Player 10 to transfer digital music, audio, video, and

playlist files from your computer to an expansion card or your Treo 750. Using Sync ensures that the files are transferred correctly.

BEFORE YOU BEGIN Do the following:

- Be sure you have Windows Media Player 10 or later installed on your computer. Windows Media Player 10 must be installed on your computer before you install the ActiveSync desktop software. See [My video and music files won't sync](#).
 - To sync media files with your computer, set the Media sync option on your Treo 750. See [Setting synchronization options](#).
- 1 On your computer, open Windows Media Player 10.
 - 2 (Optional) Insert a 32MB or larger expansion card into your Treo 750.
 - 3 Connect your Treo 750 to your computer with the USB sync cable.
 - 4 When the Device Setup Wizard opens on your computer, click **Automatic**.
 - 5 Check the **Customize the playlists that will be synchronized** box.

- 6 Select the playlists you want to sync.
- 7 Click **Finish** to begin the transfer. The next time you connect your Treo 750 to your computer while the desktop version of Windows Media Player 10 is running, synchronization starts automatically. Be patient; transferring media files to an expansion card can take several minutes.

DID YOU KNOW? If you close the Windows Media Player Mobile window, your music continues to play in the background.

Playing media files on your Treo 750

- 1 Press **Start**  and select **Windows Media**.
- 2 Press **Menu**  (right action key) and select **Library**.
- 3 Select the **Library** list in the upper-left, and then select the library you want to use. If you can't find a media file on your expansion card, update the library (see [Working with libraries](#)).

TIP To play a file that is not in a library, go to the Library screen, press **Menu**, and select **Open File**.

- 4 Select the item you want to play (such as a song, album, or artist name).
- 5 Press **Play**  (left action key). See the next page for playback controls.
- 6 Press **Menu**  (right action key) and select any of the following during playback:

Library: Displays the Library screen so you can select a different song to play.

Shuffle/Repeat > Shuffle: Plays the Now Playing playlist in random order. A check appears next to this command when it is on.

TIP To repeat the current song, press **Menu** and select **Repeat Song**.

Shuffle/Repeat > Repeat: Plays the Now Playing playlist repeatedly. A check appears next to this command when it is on.

Stop: Ends playback.

Use any of the following onscreen controls during playback:

▶ or **Center**  plays the current file.

 or **Center**  pauses the current file.

 or **Left**  skips to the beginning of the current file or to the previous file.

 or **Right**  skips to the next file.

 sets the point from which playback begins. Tap and drag the slider to change the current position.

 or **Volume button** increases the volume level.

 or **Volume button** decreases the volume level.

 turns the sound on or off.

 displays a video using the full screen.

 displays a website where you can find music and videos to play.

 indicates the rating of the current file. Select the star to change the rating.

DID YOU KNOW? You can play streaming files from the web. To play a MMS (Microsoft Media Streaming) file, press **Menu** on the Library screen, and then select **Open URL**. Select **URL** and enter the website address, or select **History** and select a site you've visited before. To play a RTSP or SDP streaming file, using the Streaming Media application. Press **Start**, select **Programs**, and then select **Streaming Media**. Select **Connect** and add the URL.

Working with libraries

A library represents each of the storage locations available to Windows Media Player Mobile, so you should have two libraries: My Device and My Storage Card. Each library contains links to the media files in that location. Windows Media Player Mobile usually updates the My Device library automatically, but you must manually update the My Storage Card library.

TIP If you don't see a media file that you added, manually update the library.

- 1 Press **Start**  and select **Windows Media**.
- 2 Press **Menu**  (right action key) and select **Library**.
- 3 Press **Menu**  (right action key) and select **Update Library**.
- 4 Wait for the files to be added, and then select **Done**.

TIP To delete an item from a library: Highlight the item and then press and hold *Center* on the 5-way to open the shortcut menu. Then select **Delete** from Library. Select **Yes** to confirm the deletion.

Working with playlists

A playlist is a list of media files that play in a specific order. You can use playlists to group audio files together or video files together for convenient playback. For example, in the desktop Player, you can create a playlist of upbeat songs for when you exercise and a playlist of soothing

songs for a long flight. When you synchronize, your favorite playlists are automatically copied to your Treo 750. Your playlists appear in your libraries (in the My Playlists category).

A temporary playlist, called Now Playing, appears on the Now Playing menu. It lists the currently playing file, as well as any files that are queued up to play next. You can add to, modify, or clear the files on the Now Playing playlist.

- 1 Go to the Now Playing screen:
 - If you are on the Library screen, select the **Now Playing** category.
 - If you are on the Playback screen, select **Now Playing**.
- 2 Do any of the following:



- To move a file up or down one slot, highlight the file, and then select **Move Up**  or **Move Down** .

TIP You can also move a file in the Now Playing playlist by tapping and dragging it to a new position.

- To add a file, select **Add** , press **Menu**  (right action key), and then select **Queue Up**.
- To delete a file from the playlist, highlight the file, and then select **Remove** .
- To view more info about a file, highlight the file and select **Properties** .
- To remove all items from the Now Playing playlist, press **Menu**  (right action key) and select **Clear Now Playing**.

DID YOU KNOW? If you move files between your Treo 750 and an expansion card, be sure to update your libraries, or you won't be able to see the files in their new location.

Customizing Windows Media Player Mobile

DID YOU KNOW? You can also customize your Treo 750 so that pressing and holding the Side button on the side of your Treo 750 opens Windows Media Player Mobile. See [Reassigning buttons](#) for details.

- If necessary, go to the Playback screen by pressing **OK**  to close the current screen.
- Press **Menu**  (right action key) and select **Options**.
- On the **Playback** tab, set any of the following options:

Show time as: Sets whether the time remaining or time elapsed appears in the Playback screen.



Pause playback while using another program:

Sets whether playback continues if you switch to another application.

Resume playback after a phone call:

Sets whether playback continues after you finish a phone call.

- 4 Select the **Video** tab and set any of the following options:

Play video in full screen: Sets whether videos automatically play in full screen format.


Scale to fit window: Sets whether videos are automatically scaled to fit the Playback screen.

- 5 Select the **Network** tab and set the following options:

Protocol: Enables and disables the available protocols. You must select at least one protocol. You can also set a UDP Port.

Internet Connection Speed: Specifies the speed of your network connection, and specifies whether you want the device to detect connection speed.

- 6 Select the **Library** tab and set whether you want to see the Library or Playback screen when you open Windows Media Player Mobile.
- 7 Select the **Skins** tab and select **Previous** or **Next** to set the player's background.
- 8 Select the **Buttons** tab to change any of the available button settings:

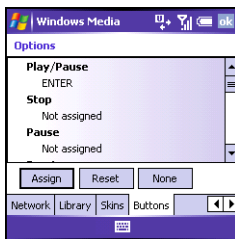

- To assign a button, highlight the item you want to set, select **Assign**, and then press the button you want to use for that item.
 - To restore an item's factory setting, highlight the item and select **Reset**.
 - To unassign an item, highlight the item and select **None**.
- 9 Press **OK** .



Your personal information organizer

Say good-bye to paper calendars and throw away those scribbled to-do lists. Your Palm® Treo™ 750 smart device is all you need to organize your personal information and keep it with you wherever you go.

You never lose your information, even if your battery is completely drained. All your personal information is backed up each time you synchronize, and your information is kept private when you use the security features available on your Treo 750. Also, you can easily share info with others electronically.

Benefits

- Track current, future, and past appointments
- Set reminders for appointments, birthdays, important tasks, and more
- Make to-do lists that get done


In this chapter

Contacts	153
Calendar	156
Tasks	162
Notes	164

Contacts

Adding a contact

- 1 Press **Start**  and select **Contacts**.

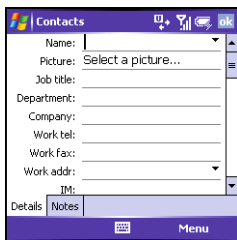

- 2 Press **New**  (left action key).
- 3 Use the 5-way navigator to move between fields as you enter information.

TIP Take some time to scroll down through all the fields in a new contact. There are fields for multiple addresses, phone numbers, email addresses, and much more.

TIP Be sure to enter mobile numbers and email addresses in the correct fields so that Inbox and Messaging can find this info when you address a message and Calendar can find your contacts when you want to invite them to meetings.

Here are some helpful tips for entering info:

- To enter complete name or address (work, home, or other) information, tap the arrow on the right side of the line and enter the information in the box that appears. When finished, tap outside the box to accept the information and close the box.
- To add a caller ID picture that displays when that person calls, select **Picture**, and then select **Camera** and take a picture (camera model only), or select an existing picture from Thumbnails view.
- To assign the entry to one or more categories, select **Categories** and

then check the categories under which you want this entry to appear.

- 4 To add a note to an entry, select the **Notes** tab.
- 5 To assign a ringtone to the entry, select **Ring tone** and select a tone.
- 6 After you enter all the information, press **OK** .

Viewing or changing contact information

- 1 In the Contacts list (viewed by name), begin entering one of the following for the contact you want to view or edit:
 - First name
 - Last name
 - First initial and last initial separated by a space
 - Phone number

DID YOU KNOW? You can find a contact by company name. Press **Menu** (right action key) and select **View By > Company**. Select a company name to see the contacts who work there.

TIP To view a particular group of contacts, press **Menu** (right action key), select **Filter**, and then select the category you want to view.

- 2 Select the entry you want to open.
- 3 Press **Menu**  (right action key) and select **Edit**.
- 4 Make changes to the entry as necessary.
- 5 Press **OK** .

Deleting a contact

- 1 In the Contacts list, highlight the contact you want to delete.
- 2 Press **Menu**  (right action key) and select **Delete Contact**.
- 3 Select **Yes**.

Deleting SIM card Contacts

If you have contacts stored on the SIM card in your Treo 750, and you then remove

the SIM card, the contacts are not deleted from your Treo. You can either delete individual SIM card contacts from your Treo 750, or delete all contacts on the Treo.

Deleting individual SIM card contacts

- 1 Go to your Today screen.
- 2 Press **Start**  and select **Contacts**.
- 3 Highlight the contact you want to delete.
- 4 Press **Menu**  (right action key) and select **Delete Contact**.

Deleting all contacts on your Treo 750

To delete all contacts on your Treo, you perform a hard reset. A hard reset erases all information on your Treo. Before you perform a hard reset, synchronize your Treo 750 with your computer. After a hard reset, synchronize again to restore the previously synchronized information.

NOTE Synchronize your Treo 750 with your computer frequently to keep your information up-to-date in both locations.

- 1 Open the expansion card slot door on the side of your Treo 750.

- 2 If the screen is off, press **Power/End**  to wake up the screen.
- 3 While pressing and holding **Power/End** , use the tip of the stylus to gently press and hold the reset button next to the expansion card slot.
- 4 Continue pressing and holding both buttons until the “Erase all data?” prompt appears.
- 5 Press **Up**  to confirm the hard reset.

Customizing Contacts

- 1 Go to the Contacts list.
- 2 Press **Menu**  (right action key) and select **Options**.
- 3 **Set any of the following options:**
 - Show alphabetical index:** Displays the alphabet at the top of the Contacts list. You can use this index to find a contact.
 - Show contact names only:** Enables you to fit more names on the Contacts list by hiding everything but the contact's name.
 - Area code:** Specifies the default area code for new contact entries.
- 4 Press **OK** .

Finding a contact in an online address book

In addition to having contacts on your device, you can also access contact information from your organization's online address book or Global Address List (GAL).

BEFORE YOU BEGIN Do the following:

- Make sure you are accessing an Exchange Server 2003 upgraded to Service Pack 2.
 - Add access to the online address book to your Treo 750. See [Adding an online address book](#).
 - After adding the online address book, you must synchronize with the Exchange Server in order for the Find Online option to appear.
- 1 Press **Start**  and select **Contacts**.
 - 2 Press **Menu**  (right action key) and select **Find Online**.

Calendar

Displaying your calendar

- 1 Press **Start**  and select **Calendar**.
- 2 Press **Menu**  (right action key) and select **View**.
- 3 Select one of the following views:

Agenda: Shows your daily schedule in list format. Upcoming appointments are bold; past appointments are dimmed.

Day: Shows your daily schedule in day-planner format.

Week: Shows your schedule for an **entire week**.

Month: Shows your schedule for a whole month.

-  A morning appointment
-  An afternoon appointment
-  Both morning and evening appointments
-  An all-day event


Year: Shows a calendar for a six-month period.

TIP Don't confuse the view name displayed above the left action key with the current view. The left action key displays the name of the next view you see when you press the key.

- 4 Use the 5-way to move to another day, week, month, or year (based on the current view).

Creating an appointment

- 1 Press **Start**  and select **Calendar**.

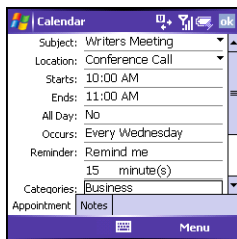


- 2 Press **Menu**  (right action key) and select **New Appointment**.
- 3 Enter a subject (description) and a location.

- 4 Select **Starts** and select the starting date and time.
- 5 Select **Ends** and select the ending date and time.
- 6 Press **OK** .

TIP To pencil in an appointment, open the appointment, select **Status**, and then select **Tentative**.

Adding an alarm reminder to an event

- 1 Create an event, and then select it.
- 2 Press **Edit**  (left action key).
- 3 Select **Reminder**, and then select **Remind Me**.
- 4 Enter the number of minutes, hours, days, or weeks before the event you would like to receive the alarm.

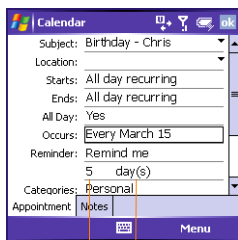

Type of time units

Number of time units


- 5 Press **OK** .

Creating an untimed event

An untimed event, such as a birthday, anniversary, or vacation, does not occur at a particular time. These events appear as banners at the top of your calendar; they don't occupy blocks of time. For example, "Submit Final Draft" in the screenshot shown here is an untimed event.

DID YOU KNOW? An untimed event can last longer than a day.

- 1 Press **Start**  and select **Calendar**.

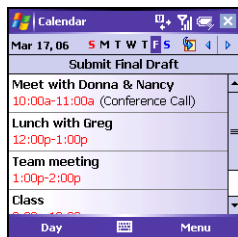

- 2 Press **Menu**  (right action key) and select **New Appointment**.
- 3 Enter a subject (description).
- 4 Select the starting and ending dates.
- 5 Select **All Day**, and then select **Yes**.
- 6 Press **OK** .

Scheduling a repeating appointment

- 1 Create an appointment or untimed event, and then select it.
- 2 Press **Edit**  (left action key).
- 3 Select **Occurs**, and then select a repeat pattern. To create a repeat pattern, select **Edit pattern** and follow the onscreen instructions.

TIP To enter a birthday or an anniversary, create an untimed event that repeats every year.

4 Press **OK** .

Sending a meeting request

You can email meeting invitations to contacts who use Microsoft Office Outlook® or Outlook Mobile.

BEFORE YOU BEGIN Create contact entries with email addresses for the people you want to invite to a meeting. You can't access contact entries without email addresses from your calendar.

- 1 Create an event, and then select it.
- 2 Press **Edit**  (left action key).
- 3 Select **Attendees**, and then select the name of the contact you want to invite. To invite other attendees, select **Add** and select the names.

DID YOU KNOW? If you are using an Exchange Server 2003 with Service Pack 2, you can use your corporate Global Address List to find contact information for an attendee. Select **Attendees**, press **Menu** (right action key), and then select **Find Online**. Enter the name of the attendee and select **Find**.

4 Press **OK** .

The next time you synchronize, the meeting request is sent to the attendees. When attendees accept your meeting request, the meeting is automatically added to their schedules. When you receive their response, your calendar is updated as well.

Marking an event as sensitive

If other people have access to your Microsoft Office Outlook calendar on your computer and you don't want them to see an appointment, you can mark that appointment as private to hide it from other Microsoft Office Outlook users.

- 1 Create an event, and then select it.
- 2 Press **Edit**  (left action key).

- 3 Select **Sensitivity**, and then select one of the following:

Private: Displays the event on your Treo 750 and on your computer. Meeting attendees or recipients see “Please treat this as Private” near the top of an open appointment. If you sync with Exchange Server, other users who can access your folders can’t see your private events; they see private events as unavailable time slots.

Personal: Displays the event on your Treo 750 and on your computer. Meeting attendees or recipients see “Please treat this as Personal” near the top of an open appointment.

Confidential: Displays the event on your Treo 750 and on your computer. Meeting attendees or recipients see “Please treat this as Confidential” near the top of an open appointment.


TIP If you don’t see an option on the screen, press **Down** on the 5-way to scroll to other options. For example, when editing an event, you don’t see the Sensitivity option until you scroll toward the bottom of the entry.

- 4 Press **OK** .

Organizing your schedule

Use categories to view various types of events.

- 1 Create an event, and then select it.

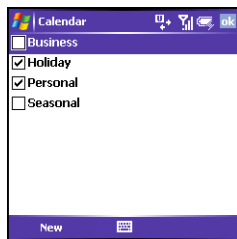

- 2 Press **Edit**  (left action key).
- 3 Select **Category**, and then check the categories that apply to this event. To add a new category, press **New**  (left action key), enter the category name, and then press **OK** .
- 4 Press **OK**  two more times.
- 5 After you assign events to categories, press **Menu**  (right action key) and select **Filter**.

TIP Wonder why you're not seeing all the events in your day? Check to make sure that the filter is set to All Appointments.


- 6 Select the type of events you want to view.

Deleting an event

- 1 Highlight the event you want to delete.
- 2 Press **Menu**  (right action key) and select **Delete Appointment**.
- 3 Select **Yes**.

Customizing Calendar

- 1 Press **Menu**  (right action key) and select **Options**.

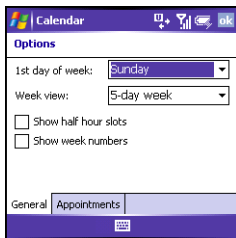

- 2 On the **General** tab, set any of the following options:


1st day of week: Specifies Sunday or Monday as the first day of the week for all Calendar views.

Week view: Specifies whether five, six, or seven days appear in Week View.

Show half hour slots: Specifies whether time slots appear in hour or half-hour increments in Day View and Week View.

Show week numbers: Specifies whether week numbers (1–52) appear in Week View.

- 3 Select the **Appointments** tab and set any of the following options:

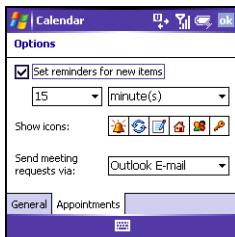

Set reminders for new items:

Specifies whether a reminder is automatically added to new events and how long before the event the reminder appears. You can override this setting for individual events.

Show icons: Specifies which icons appear next to events.

 The event has a reminder.

 The event repeats in a specified pattern.

 The event has a note attached.

 A location has been assigned to the event.

 The event is a meeting.

 The event is marked private.

TIP Not all icons appear in all Calendar views.

Send meeting requests via: Specifies the messaging method used to send meeting requests: email, MMS, or SMS.

- 4 Press **OK** .

Tasks


You can use Tasks to remind you of tasks you need to complete and to keep a record of completed tasks.

Adding a task

- 1 Press **Start**  and select **Programs**.
- 2 Select **Tasks** .
- 3 Press **New**  (left action key).

TIP You can also add a task by selecting the Tasks entry bar at the top of the task list screen.

- 4 Enter a description of the task in the Subject field.
- 5 Set any of the following:

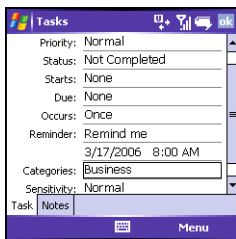

Priority: Specifies the priority level for this task. Later you can arrange your tasks based on the importance of each task.

Status: Indicates whether the task is now completed.

- **Starts:** Specifies when the task begins.
- **Due:** Specifies the due date for the task.
- **Occurs:** Indicates if the task repeats at regular intervals and how often it repeats.
- **Reminder:** Sets an alarm for this task and indicates when you want to be reminded.

- **Categories:** Assigns the task to one or more categories.


Sensitivity: Marks this task as Normal, Personal, Private, or Confidential.

Notes: Enables you to enter additional text for the task.

- 6 Press **OK** .

Checking off a task

- 1 Select the task you want to check off.

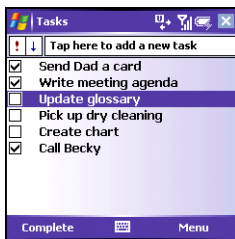

- 2 Press **Edit**  (left action key).
- 3 Select **Status** and select **Completed**.
- 4 Press **OK** .

TIP You can also mark a task complete by tapping the check box next to the task on the Tasks list.

DID YOU KNOW? Overdue tasks appear in red.

Organizing your tasks

- 1 In the Tasks list, press **Menu**  (right action key) and select **Filter**.
- 2 Select which tasks you want to view: **All Tasks, Recently Viewed, No Categories, Active Tasks, Completed Tasks**, or a specific category, such as **Business** or **Personal**.
- 3 Press **Menu**  (right action key) and select **Sort By**.
- 4 Select the sort method: **Status, Priority, Subject, Start Date**, or **Due Date**.

Deleting a task

- 1 Highlight the task you want to delete.
- 2 Press **Menu**  (right action key) and select **Delete Task**.
- 3 Select **Yes**.

Customizing Tasks

- 1 Go to the Tasks list.
- 2 Press **Menu**  (right action key) and select **Options**.
- 3 Set any of the following options:
 - Set reminders for new items:** Automatically adds a reminder to new tasks. The default reminder is set to 8:00 on the morning the task is due. You can override this setting for individual tasks.
 - Show start and due dates:** Displays task start and due dates in the Tasks list.
 - Show Tasks entry bar:** Displays the Tasks entry bar at the top of the Tasks list.
- 4 Press **OK** .


Notes

Notes are a great way to capture thoughts, questions, and meeting notes on your Palm Treo 750. You can also create a voice note or add a recording to an existing note.

BEFORE YOU BEGIN To take advantage of all the sync features available in the Notes application, install the desktop synchronization software from your Windows Mobile Getting Started Disc.

Creating a note


- 1 Press **Start**  and select **Programs**.
- 2 Select **Notes** .
- 3 Press **New**  (left action key).
- 4 Do one of the following:

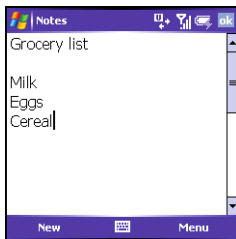

- Type the text with the keyboard.
 - Write the text with the stylus.
 - Draw a sketch with the stylus, crossing at least three ruled lines.
- 5 Press **OK** .

Creating a voice note

- 1 Press **Start**  and select **Programs**.
- 2 Select **Notes** .
- 3 To add a voice recording to an existing note, open the note to which you want to add the recording.
- 4 If the voice note controls are not visible at the bottom of the screen, press **Menu**  (right action key) and select **View Recording Toolbar**.
- 5 Tap the **Record**  icon.

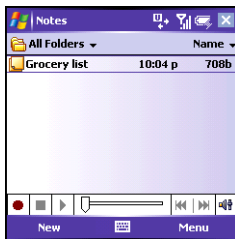

- 6 Speak into the microphone on your Treo 750, or hold it close to another sound source.
- 7 When you have finished recording, tap the **Stop**  icon. A **Recording** icon  appears in the note or note list,

depending on where you recorded the note.

- 8 Press **OK** .

DID YOU KNOW? You can add several voice notes within a single note.

TIP To play a recording, select the voice note in the Notes list or open the note containing the recording and tap the **Recording** icon. Tap the controls at the bottom of the screen to control playback and volume.

Creating a note from a template

- 1 Go to the **Notes** list.
- 2 Select the **Show** list in the upper-left, and then select **Templates**.
- 3 Open the template you want to use.
- 4 Enter the information.
- 5 Press **OK** .
- 6 Rename the note and move it to the appropriate folder. See [Organizing your notes](#) for details.

TIP To create a new template, open the note you want to save as a template. Press **Menu** (right action key) and select **Rename/Move**. Select **Name**, and then enter a name for the template. Select the **Show** list, and then select **Template**. Press **OK**.

Organizing your notes

You can rename your notes, move notes to another folder, and move notes between your Treo 750 and an expansion (storage) card.

- 1 Go to the Notes list and highlight a note you want to move.
- 2 Press **Menu**  (right action key) and select **Rename/Move**.
- 3 Select **Name**, and then enter a new name for the note.
- 4 Select **Folder**, and then select the folder in which you want to store the note.
- 5 Select **Location**, and then select **Main memory** or **Storage Card**.
- 6 Press **OK** .

TIP To create a new folder, go to the Notes list, select the **Show** list in the upper-left, and then select **Add/Delete**. Select **New**, enter a name for the folder, and then press **OK**.

Deleting a note

- 1 Go to the Notes list and highlight the note you want to delete.
- 2 Press **Menu**  (right action key) and select **Delete**.
- 3 Select **Yes**.

Customizing Notes

- 1 Go to the Notes list.
- 2 Press **Menu**  (right action key) and select **Options**.

- 3 Set any of the following options:

Default mode: Makes the default entry mode either Writing or Typing. The default is Typing; if you change it to Writing, you can write notes directly on the screen using the stylus.

Default template: Specifies the default template for new notes.

Save to: Indicates the default location where new notes are stored.

Record button action: Specifies what happens when you press the Side button to record a voice note while in another application: whether the Notes application opens or whether you stay in the current application.

- 4 Press **OK** .



Your Microsoft Office tools

Your Palm® Treo™ 750 smart device enables you to take your office with you—including your Microsoft Office files. With Microsoft Office, you can carry, create, view, and edit Microsoft Word and Excel files directly on your Treo 750. You can also view, carry, and manage PowerPoint files on your Treo 750. You can keep updated copies of the files on both your Treo 750 and your computer so that you can work on them in the most convenient location any time.

Benefits

- Manage Word, Excel, and PowerPoint files on your Treo 750
- Improve productivity by taking important docs, spreadsheets, and presentations with you

In this chapter

Synchronizing your Microsoft Office files.	171
Word Mobile	171
PowerPoint Mobile.	177
Excel Mobile.	178

Synchronizing your Microsoft Office files

You can edit files on your computer or on your Treo 750 and then synchronize your files with your computer. To synchronize Microsoft Office files with your computer, you must set the Files sync option; see [Setting synchronization options](#). The files are stored in your Files folder on your computer.

To copy a file from your computer to your Treo 750, open **My Computer** or **Windows Explorer** on your computer, copy the file into the **Mobile Device** folder, and then sync.

Word Mobile

You can create and edit documents and templates and save them as DOC, RTF, TXT, and DOT files. You can also edit Microsoft Office Word documents and templates that you create on your computer. However, keep in mind that

some of the information and formatting may be lost when you save the document on your Treo 750.

DID YOU KNOW? If you have a PDF file (.pdf), you can view the file using Picsel PDF Viewer. Press **Start**, select **Programs**, and then select **PDF Viewer**.

The following features are not supported in Word Mobile:

- Backgrounds.
- Bidirectional text.
- Document protection.
- Metafiles.
- Artistic page borders. Lined page borders are supported.
- Password-protected files. Remove password protection on your computer before opening the file on your Treo 750.
- Shapes and text boxes.
- Smart tags.

The following features are partially supported in Word Mobile:

- Picture bullets. Regular bullets are supported.
- Revision marks. Documents appear as though all revisions were accepted; if the document is saved, revision marks are lost.
- Table styles. Some or all of the formatting is lost if the document is saved.
- Underline styles. Unsupported styles are mapped to one of the four supported styles: regular, dotted, wavy, or thick/bold/wide.
- Legacy Pocket Word files. You can open PSW files, but if you edit a file, you need to save it in DOC, RTF, TXT, or DOT format.

The following features are not supported on your Treo 750, but they remain in the file so that when you open the file on your computer, they appear as expected:

- Fonts and font sizes. Original fonts are listed on your Treo 750 and are mapped to the closest font available.

- Footnotes, endnotes, headers, and footers.
- Lists. Indented lists are mapped to the closest indentation level supported by Word Mobile.
- Page breaks. Although not displayed, all page breaks, except a break placed at the end of a document, are retained in the document.

Creating a document

- 1 Press **Start**  and select **Programs**.
- 2 Select **Word Mobile** .
- 3 Press **New**  (left action key).
- 4 Enter the text of the document.
- 5 Press **OK**  to save the file. When you save a new document, it is automatically named after the first several words in the file.

Opening an existing document

- 1 Press **Start**  and select **Programs**.
- 2 Select **Word Mobile** .
- 3 In the document list, select the document you want to open.

TIP To zoom in or out, press **View**, select **Zoom**, and then select the zoom level.

Creating a document from a template

- 1 Go to the documents list.
- 2 Select the **Show** list in the upper-left, and then select **Templates**. If you don't see **Templates** in the **Show** list, select **More Folders** to access this folder.
- 3 Open the template you want to use and enter the information.
- 4 Press **OK** .
- 5 Rename the document and move it to the appropriate folder. See [Organizing your documents](#) for details.

TIP To create a new template, open the document you want to save as a template. Press **Menu** and select **Rename/Move**. Select **Name**, and then enter a name for the template. Select the **Show** list, and then select **Template**. Press **OK**.

Finding or replacing text in a document

- 1 Open the document containing the text you want to find.

- 2 Press **Menu**  (right action key) and select **Edit > Find/Replace**.
- 3 Select **Find what** and enter the text you want to find.
- 4 (Optional) Check the **Match case** box to find text that matches the capitalization in the text you entered step 3.
- 5 (Optional) Check the **Match whole words only** box to find only full words that match the text you entered in step 3.
- 6 Select **Find** to locate the first instance of the text you entered in step 3, or select **Replace** and enter the replacement text.
- 7 Select **Next** to find the next instance of the text, or select **Replace** to replace it. To replace all instances of the text, select **Replace All**.
- 8 When you see a message that the search is done, press **OK** .

Moving or copying text

- 1 Open the document containing the text you want to move or copy.
- 2 Highlight the text you want to move or copy.

- 3 Press **Menu**  (right action key) and select **Copy** to copy the text, or select **Cut** to move the text.
- 4 Open the document where you want to insert the text and position the insertion point where you want the text to appear.
- 5 Press **Menu**  (right action key) and select **Paste**.

Saving a copy of a document

NOTE If a document was previously saved on a computer, any unsupported formatting may be lost when you save the file.

- 1 Open the document you want to copy.
- 2 Press **Menu**  (right action key) and select **File > Save As**.
- 3 Select **Name** and enter a new name for the file.
- 4 Select the **Folder** list, and then select the folder where you want to save the file.
- 5 Select the **Type** list, and then select the format in which you want to save the file.

- 6 Select the **Location** list, and then select whether you want to store the file on your Treo 750 or an expansion card.
- 7 Select **Save**.

Formatting text

- 1 Open the document you want to format.
- 2 Highlight the text you want to format.
- 3 Press **Menu**  (right action key) and select **Format > Font**.
- 4 Set any of the following options for the highlighted text:

Font: Specifies the typeface.

Font color: Specifies the color.

Size: Specifies the point size.

Bold: Indicates whether the text appears normal or thick.

Italics: Indicates whether the text appears upright or slanted.

Underline: Indicates whether the text appears with an underscore.

Highlight: Indicates whether the text appears with a yellow highlight.

Strikethrough: Indicates whether the text appears with a line through it.

- 5 Press **OK**  to return to the document.

Formatting paragraphs and lists

- 1 Open the document you want to format.
- 2 Position the insertion point in the paragraph you want to format.
- 3 Press **Menu**  (right action key) and select **Format > Paragraph**.
- 4 Set any of the following options:

Alignment: Aligns the text with the left, right, or center of the paragraph.

List: Creates a bulleted or numbered list.

Indentation: Changes the paragraph margins.

- **Left:** Sets the left margin for the entire paragraph.
- **Right:** Sets the right margin for the entire paragraph.
- **Special:** Lets you indent the first line or set a hanging indent.

- **By:** Sets the size of the Special indentation.

- 5 Press **OK**  to return to the document.

TIP You can also use the Formatting toolbar to create a list and to align text. To indent text in lists, you must use the Formatting toolbar.

Checking spelling in a document

- 1 Open the document you want to check.
- 2 Press **Menu**  (right action key) and select **Tools > Spelling**. To check the spelling of specific text, highlight it before you select the Spelling command.
- 3 If an unknown or misspelled word is encountered, do one of the following:
 - Select the correct word in the list if the word is spelled incorrectly.
 - Select **Ignore** if the word is spelled correctly.
 - Select **Add** to add a new word to the spelling dictionary.

Organizing your documents

You can rename your documents, move your documents to another folder, and move your documents between your Treo 750 and an expansion (storage) card.

- 1 Go to the documents list.
- 2 Highlight a file.
- 3 Press **Menu**  (right action key) and select **Rename/Move**.
- 4 Select **Name**, and then enter a new name for the document.
- 5 Select the **Folder** list, and then select the folder you want to move the document to.
- 6 Select the **Location** list, and then select **Main memory** or **Storage card**.
- 7 Press **OK** .
- 8 Select the **Show** list in the upper-left, and then select the folder you want to view.
- 9 Select the **Sort By** list in the upper-right, and then select the sort method.

TIP To create a new folder, go to the documents list, select the **Show** list in the upper-left, and then select the **Add/Delete** tab. Select **New**, enter a name for the folder, and then press **OK**.

TIP When you go to a folder, you can easily search your documents by sorting by type.

Deleting a document

- 1 Go to the documents list.
- 2 Highlight the document you want to delete.
- 3 Press **Menu**  (right action key) and select **Delete**.
- 4 Select **Yes**.

Customizing Word Mobile

- 1 Go to the document list.
- 2 Press **Menu**  (right action key) and select **Options**.
- 3 Set any of the following options:

Default template: Sets the default template for new documents.

Save to: Sets the default location where new documents are stored.

Display in list view: Sets the types of files that appear in the documents list.

- 4 Press **OK** .

PowerPoint Mobile

With PowerPoint Mobile, you can open and view slide show presentations created on your computer. Many presentation elements such as slide transitions, animations, and URL links are also supported. Microsoft® Office PowerPoint® features not supported on your Treo 750 include the following:

- Notes written for slides
- Rearrangement or editing of slides
- Files created in PPT format earlier than Microsoft PowerPoint '97
- HTML files in HTM and MHT formats

TIP To copy a file from your computer to your Treo 750, open My Computer or Windows Explorer on your computer, copy the file into the **Mobile Device** folder, and then sync.

Playing a presentation

NOTE If a presentation is set up as a timed slide show, the slides advance automatically. Presentations pause during zooming.

- 1 Press **Start**  and select **Programs**.
- 2 Select **PowerPoint Mobile** .
- 3 In the presentation list, highlight the presentation you want to play.
- 4 Press **Center** .
- 5 Do any of the following:
 - Press **Right**  to advance to the next slide or **Left**  to view the previous slide.
 - Press **Menu**  (right action key), select **Go to Slide**, and select the slide you want to view.
 - Select **Next** or **Previous** to play animations.
 - Press **Menu**  (right action key), select **Zoom In**, and then select  to zoom in or  to zoom out. To scroll within the current slide, tap and drag the slide. To return to the slide show, select .

- Press **Menu**  (right action key) and select **End Show**.

Setting presentation playback options

- 1 Open the presentation for which you want to change the settings.
- 2 Press **Menu**  (right action key) and select **Show Options**.
- 3 On the **Orientation** tab, select the orientation you want. To select the orientation that best fits your Treo 750 screen, select **Default**.
- 4 Select the **Playback** tab, and check the **Override playback** options for all files box.
- 5 Set any of the following options:

Show without animation: Turns off builds and other animations.

Show without slide transition: Turns off transition effects between slides.

Use slide timings, if present: Enables the timings recorded with each slide in a presentation. If a presentation is set up as a timed slide show, the slides advance automatically. Presentations pause during zooming.

Loop continuously: Advances to the first slide after playing the last slide in a presentation.

- 6 Press **OK** .

TIP To turn the presentation into a continuously looping slide show, check both the **Use timings**, if present, and the **Loop continuously** boxes.

Excel Mobile

With Excel Mobile you can create and edit workbooks and templates on your Treo 750. You can also edit workbooks and templates that you create on your computer. However, keep in mind that you may lose some of the information and formatting when you save the workbook on your Treo 750.

Note the following formatting considerations:

- **Alignment:** Vertical text appears horizontal.
- **Borders:** Appear as a single line.

- **Cell patterns:** Patterns applied to cells are removed.
- **Fonts and font sizes:** The original font is listed on your Treo 750 and mapped to the closest font available. Original fonts reappear on your computer.
- **Number formats:** Microsoft® Office Excel® 97 conditional formatting is displayed in Number format.
- **Formulas and functions:** Unsupported functions are removed, and only the returned value of the function appears. Formulas containing the following are also converted to values:
 - An array or array argument, for example, =SUM({1;2;3;4})
 - External link references or an intersection range reference
 - References past row 16384 are replaced with #REF!
- **Protection settings:** Most protection features are disabled but not removed. However, password protection is removed. You must remove the password protection in Microsoft Office Excel on your computer before opening the file on your Treo 750.
- **Zoom settings:** Worksheet-specific zoom settings are not retained. The zoom setting applies to the entire workbook.
- **Worksheet names:** Names that refer to other workbooks, arrays, array formulas, or intersection ranges are removed from the name list, causing those formulas to be resolved as “#NAME?” All hidden names are not hidden.
- **AutoFilter Settings:** AutoFilters that cause rows to be hidden are supported. Use the Unhide command to display hidden rows. Other AutoFilters are removed, but you can use the AutoFilter command in Excel Mobile to perform similar functions.
- **Chart Formatting:** All charts are saved as they appear in Excel Mobile. Unsupported chart types are changed to one of these supported types: Column, Bar, Line, Pie, Scatter, and Area. Background colors, gridlines, data labels, trend lines, shadows, 3D effects, secondary axes, and logarithmic scales are turned off.

The following features aren't supported in Excel Mobile and are removed or modified when you open a workbook on your Treo 750:

- Hidden, dialog, and macro sheets
- VBA modules
- Text boxes
- Drawing objects and pictures
- Lists
- Conditional formats and controls
- Pivot table data (converted to values)

DID YOU KNOW? If you have a PDF file (.pdf), you can view the file using Picsel PDF Viewer. Press **Start**, select **Programs**, and then select **PDF Viewer**.

Creating a workbook

- 1 Press **Start**  and select **Programs**.
- 2 Select **Excel Mobile** .
- 3 Press **New**  (left action key).
- 4 Highlight a cell where you want to enter text or other info.

- 5 Enter the info in the cell, and then press **Enter** .
- 6 Repeat steps 4 and 5 to enter the remaining info.
- 7 Press **OK**  to save the file. When you save a new workbook, it is automatically named and placed in the workbook list.

Creating a workbook from a template

- 1 Go to the workbook list.
- 2 Select the **Show** list in the upper-left, and then select **Templates**.
- 3 Open the template you want to use and enter the information you want to include in the template.
- 4 Press **OK** .
- 5 Rename the workbook and move it to the appropriate folder. See [Organizing your documents](#) for details.

TIP To create a new template, open the workbook you want to save as a template. Press **Menu** and select **Rename/Move**, and then enter a name for the template. Select **Folder**, and then select **Template**. Press **OK**.

Viewing a workbook

TIP To copy a file from your computer to your Treo 750, open My Computer or Windows Explorer on your computer, copy the file into the **Mobile Device** folder, and then sync.

- 1 Press **Start**  and select **Programs**.
- 2 Select **Excel Mobile** .
- 3 In the workbook list, select the workbook you want to view.
- 4 Press **View**  (left action key), and then select any of the following:

Full Screen: Shows as much data as possible on the screen. To return to the normal view, select **Restore** in the upper-right.

Zoom: Sets the magnification level so that you can easily read the worksheet.

Sheet: Lets you switch to a different worksheet.

DID YOU KNOW? You can also switch worksheets by selecting the sheet list at the bottom of the screen.

Split: Divides the window into two scrollable areas. To move the split bar, tap and drag it. To remove the split bar, select **View > Remove Split**.

Freeze Panes: Locks rows and columns so they remain visible while you scroll. Highlight the cell at the juncture you want to lock before you select this command. To unlock the rows or columns, select **View > Unfreeze Panes**.

Toolbar: Indicates whether the toolbar appears onscreen.

Status Bar: Indicates whether the status bar appears onscreen.

Show: Indicates whether headings and scroll bars appear onscreen.

TIP To jump to a cell or region, press Menu and select **Edit > Go To**. Select **Cell reference or name** and enter the target cell info or select **Current region**. Select **OK**.

Calculating a sum

- 1 Press **View**  (left action key) and select **Toolbar**.

- 2 Highlight the cell where you want to insert the sum.
- 3 Select .
- 4 Tap and drag the stylus across the cells you want to add.
- 5 Press **Enter** .

TIP For simple calculations, use the Calculator (see [Calculator](#)).


Entering a formula

- 1 Highlight the cell where you want to enter the formula.
- 2 Enter equals sign (=) followed by any values, cell references, name references, operators, and functions.
Examples:
 - =(B4/25)+100
 - =Revenue-Expenses
- 3 Press **Enter** .

TIP To insert a symbol, place the insertion point where you want the symbol. Press **Menu** and select **Insert > Symbol**. Highlight the symbol you want to insert, and then select **Insert**.

Inserting a function

- 1 Open the workbook where you want to insert the function.

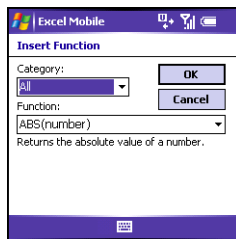

- 2 Press **Menu**  (right action key) and select **Insert > Function**.
- 3 Select the **Category** list, and then select the type of function you want to insert.
- 4 Select the **Function** list, and then select the specific function you want to insert.
- 5 Select **OK**.

Entering a sequence automatically

- 1 Highlight both the cells containing the info you want to automate and the adjacent destination cells.

- 2 Press **Menu**  (right action key) and select **Edit > Fill**.
- 3 Select the **Direction** list, and then select the direction you want to populate.
- 4 Select the **Fill type** list, and then select **Series**.
- 5 Select the **Series type** list, and then select the type of series you want. If you select **Date** or **Number**, enter a **Step value** increment.
- 6 Select **OK**.

TIP Select **Autofill** as the series type to quickly fill cells with repetitive data such as numbers or repeated text. Autofill takes the content of the first cell in the highlighted row or column and copies it down or across the rest of the selection.

Adding cells, rows, and columns

- 1 Open the workbook you want to add to.
- 2 Highlight the area where you want to insert elements.
- 3 Press **Menu**  (right action key) and select **Insert > Cells**.

- 4 Select how you want to insert the elements:

Shift cells right: Inserts a new cell. The highlighted cell and all cells on its right move one column to the right.

Shift cells down: Inserts a new cell. The highlighted cell and all cells below it move down one row.

Entire row: Inserts a new row. The entire row in which the highlighted cell is located and all rows below it move down one row.

Entire column: Inserts a new column. The entire column in which the highlighted cell is located and all columns to its right move one column to the right.

- 5 Select **OK**.

TIP To add a new worksheet, press **Menu** and select **Format > Modify Sheets**. Select **Insert**, enter a name for the worksheet, and then press **OK**. To change the order of the worksheets, highlight a worksheet you want to move, and then select **Move Up** or **Move Down**. Press **OK** to finish.

Formatting cells

- 1 Open the workbook you want to format.
- 2 Highlight the cells you want to format.
- 3 Press **Menu**  (right action key) and select **Format > Cells**.
- 4 Select any of the following:

Size: Sets the row height and column width.

Number: Sets the type of information the cells contain.

Align: Sets whether text wraps within the highlighted cells, and sets horizontal and vertical alignment position.

Font: Sets the typeface, color, size, and style attributes.

Borders: Turns borders on and off for various cell edges, and sets the border and background colors.

- 5 Press **OK** .

TIP To name the highlighted cell or range of cells, press **Menu** and select **Insert > Define Name**. Enter the name and select **Add**. Press **OK**.

Formatting rows and columns

- 1 Open the workbook you want to format.
- 2 Highlight the rows or columns you want to format.
- 3 Press **Menu**  (right action key), and then select **Format > Row or Format > Column**.
- 4 Select any of the following:

AutoFit: Adjusts the size of the highlighted rows or columns to their contents.

Hide: Hides the highlighted rows or columns.

Unhide: Displays hidden rows or columns in the highlighted area.

DID YOU KNOW? You can adjust the column and row size by tapping and dragging the right edge of the column or the bottom edge of the row. To automatically fit rows and columns to their contents, double-tap the lower edge of the row heading or the right edge of the column heading.

Renaming a worksheet

- 1 Open the workbook containing the worksheet you want to rename.

- 2 Press **Menu**  (right action key)) and select **Format > Modify Sheets**.
- 3 In the Sheets list, highlight the worksheet you want to rename.
- 4 Select **Rename**, enter a new name for the worksheet, and then press **OK** .

Sorting info in a worksheet

- 1 Highlight the cells you want to sort.
- 2 Press **Menu**  (right action key)) and select **Tools > Sort**.
- 3 Select the **Sort by** list, and then select the primary sort column.
- 4 Check or uncheck the **Ascending** box to indicate if you want to sort in ascending or descending order.
- 5 (Optional) Select the **Then by** lists, and then select second- and third-level sorting options.
- 6 Check or uncheck the **Exclude header row from** sort box to indicate whether you want to sort the header row.
- 7 Select **OK**.

Filtering info in a worksheet

- 1 Highlight the cells that contain the info you want to filter.
- 2 Press **Menu**  (right action key)) and select **Tools > AutoFilter**. A list appears at the top of each related column.
- 3 Select one of the new lists, and then select a filter. This hides all rows that do not include the selected filter.
- 4 (Optional) Do any of the following:
 - Select the other lists, and then select other filters.
 - To display all rows again, select the filter lists, and then select **All**.
 - To turn off filtering, press **Menu** and select **Tools > AutoFilter again**.

DID YOU KNOW? You can also create custom filters where you specify comparisons. Select the filter lists, and then select **Custom**.

Creating a chart

- 1 Open the workbook you want to create a chart from.
- 2 Highlight the cells you want to include in the chart.

- 3 Press **Menu**  (right action key) and select **Insert > Chart**.
- 4 Select the type of chart, and then press **Next**  (right action key).
- 5 Confirm the area you want the chart to include, and then press **Next**  (right action key).
- 6 Select the data layout, and then press **Next**  (right action key).
- 7 Check the boxes to indicate whether the first row and column represent labels.
- 8 Select whether you want the chart to appear as a separate worksheet within the current workbook, or as part of the current worksheet.
- 9 Press **Finish**  (right action key).

Formatting or changing a chart

- 1 Open the workbook that contains the chart you want to format.
- 2 Open the chart.
- 3 Press **Menu**  (right action key) and select **Format > Chart**.

- 4 Select any of the following:

Titles: Specifies the title of the chart and headings, whether a legend appears, and the placement of the legend.

Scale: Specifies the minimum and maximum scales for charts with x and y axes.

Type: Specifies the chart style. You can use this setting to convert your chart to a different format.

Series: Lets you add, modify, format, or delete related data points without affecting the info in your worksheet.

- 5 Press **OK** .

Finding or replacing info in a workbook

- 1 Open the workbook containing the info you want to find.
- 2 Press **Menu**  (right action key) and select **Edit > Find/Replace**.
- 3 Select **Find what** and enter the info you want to find.

- 4 (Optional) Check the **Match case** box to find text that matches the capitalization in any text you entered in step 3.
- 5 (Optional) Check the **Match whole words only** box to find only full words that match any text you entered in step 3.
- 6 Select **Find** to locate the first instance of the info you entered in step 3, or select **Replace** and enter the replacement info.
- 7 Select **Next** to find the next instance of the info, or select **Replace** to replace it. To replace all instances of the info, select **Replace All**.
- 8 When you see a message that Excel Mobile is done searching, press **OK** .
- 1 Go to the workbook list.
- 2 Select a file.
- 3 Press **Menu**  (right action key) and select **Rename/Move**.
- 4 Select **Name**, and then enter a new name for the workbook.
- 5 Select the **Folder** list, and then select the folder you want to move the workbook to.
- 6 Select the **Location** list, and then select **Main memory** or **Storage card**.
- 7 Press **OK** .
- 8 Select the **Show** list in the upper-left, and then select the folder you want to view.
- 9 Select the **Sort By** list in the upper-right, and then select the sort method.

Organizing your workbooks

TIP When you go to a folder, you can easily search your documents by sorting by type.

You can rename your workbooks. You can also move them to another folder or move them between your Treo 750 and an expansion (storage) card.

Deleting cells, rows, and columns

NOTE Excel Mobile adjusts formulas to reflect the new cell locations. However, a formula that refers to a deleted cell displays the #REF! error value.

- 1 Open the workbook containing the elements you want to delete.
- 2 Highlight the area you want to delete.
- 3 Press **Menu**  (right action key) and select **Edit > Delete Cells**.
- 4 Select how you want to remove the elements:

Shift cells left: Deletes the highlighted cells and moves all cells on their right one column to the left.

Shift cells up: Deletes the highlighted cells and moves all cells below them up one row.

Entire row: Deletes the entire row in which the highlighted cells are located, and moves all rows below it up one row.

Entire column: Deletes the entire column in which the highlighted cells are located, and moves all columns on their right one column to the left.

- 5 Select **OK**.

TIP To delete a workbook, go to the workbook list and highlight the workbook you want to delete. Press **Menu** and select **Delete**. Select **Yes** to confirm.

TIP To delete a worksheet, press **Menu** and select **Format > Modify Sheets**. Highlight the worksheet you want to delete, and then select **Delete**. Select **Yes**, and then press **OK** to finish.

Customizing Excel Mobile

- 1 Go to the workbook list.
- 2 Press **Menu**  (right action key) and select **Options**.
- 3 Set any of the following options:
 - Template for new workbook:** Specifies the default template for new workbooks.
 - Save new workbooks to:** Specifies where new workbooks are stored.
 - Files to display in list view:** Specifies which types of files appear in the workbook list.
- 4 Press **OK** .



Your application and info management tools

Your Palm® Treo™ 750 smart device comes equipped with a variety of tools for managing and organizing your information. Get the most out of your Treo 750: Install some of the thousands of business, education, or leisure-time applications available. After you use your Treo 750 to create or capture important business and personal information, use one of several options to share it with others. Insert expansion cards (sold separately) for a compact and limitless answer to the storage dilemma. And because there's one on your Treo 750, you never need to carry a separate calculator.

Benefits

- Locate info in any application
- Install applications, games, and other software
- Keep others up-to-date with meaningful business and personal information
- Store, carry, and exchange info
- Always have a calculator with you

In this chapter

Finding information	191
Installing applications	193
Removing applications	196
Sharing information	196
Beaming information	197
Using expansion cards	199
Calculator	203

Finding information

Quickly find who or what you're looking for by using one of these search features:

- **Lookup:** Find and dial your contacts by name or phone number. See [Dialing by contact name](#) for details.
- **Search:** Look through the text in all the applications on your Treo 750.
- **File Explorer:** Browse through the files and folders on your Treo 750 or on an expansion card.
- **Global Address List Lookup:** Look up names in your online corporate address list.

TIP For information on opening and closing apps, see [Opening and closing applications](#).


Using Search

Search for files and other items stored in the My Documents folder on your Treo 750 or on an expansion card. You can search by file name or by words located in the item. For example, you can search for words

within notes, appointments, contacts, and tasks.

DID YOU KNOW? Contacts on your SIM card do not appear in the search results list.

- 1 Press **Start**  and select **Programs**.

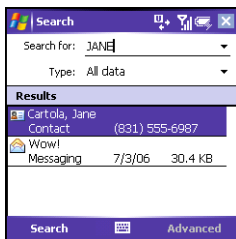

- 2 Select **Search** .

DID YOU KNOW? You can also open Search by pressing **Option + left Shift**.

- 3 Select **Search for**, and then enter the file name, word, or other info you want to find.

TIP If you've looked for an item before, select the **Search for** list, and then select the item in the list.


- 4 Select the **Type** list, and then select the kind of information you want to find.
- 5 Press **Search**  (left action key).
- 6 Use the 5-way to select and view an item from the results of the search.

Exploring files and folders

You can use File Explorer to browse the contents of folders on your Treo 750. The root folder on your Treo 750 is named My Device. My Device is similar to My Computer on your computer.

- 1 Press **Start**  and select **Programs**.
- 2 Select **File Explorer** .
- 3 Select the folder you want to explore. If the folder you want is not displayed, tap the **Show** list in the upper-left and select **My Device** to view all folders.

Show list

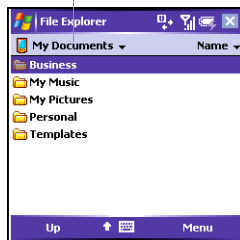

DID YOU KNOW? When the items in a folder are displayed, you can sort them by name, date, size, or type. Select the **Sort by** list in the upper-right, and then select the sort method.

TIP The storage card symbol appears next to the names of files that are stored on an expansion card.

- 4 Do any of the following:
 - To open an item, select it.
 - To quickly delete, rename, beam, or email an item, highlight the item, press and hold **Center**  to open the shortcut menu, and then select the appropriate command.

- To move a file to another folder, highlight the item, press and hold **Center**  to open the shortcut menu, and then select **Cut** or **Copy**. Open the destination folder, press and hold **Center**  to open the shortcut menu, and then select **Paste**.
- To highlight multiple items, tap and drag the stylus.

IMPORTANT Do not delete any files that you cannot identify. These files may be required for your Treo 750 to function properly.

Installing applications

Your Treo 750 comes with several built-in and ready-to-use applications. You can also install any of the additional software included on the Windows Mobile Getting Started Disc as well as other third-party applications that are compatible with Windows Mobile® 5.0 devices, such as business software, games, and more. To learn more, go to www.palm.com/mytreo750cingular.

Applications you download to your computer are likely to be in a compressed format such as ZIP. If the file is compressed, you need to use a decompression utility on your computer, such as WinZip, before you install applications on your Treo 750.

These instructions tell you how to install basic files onto your Treo 750. Some software uses an installer or wizard to guide you through the process. For details, consult the documentation that came with the software.

TIP If an application does not have a Microsoft Mobile to Market certificate, you see a message indicating that the application is untrusted. If this occurs, you can indicate whether you want to continue the installation.

Installing bonus software from the CD

The Windows Mobile Getting Started Disc includes several bonus software applications that you can install on your Treo 750. You can install these applications when you install the desktop software, or you can install them later.

- 1 Insert the Windows Mobile Getting Started Disc into the CD drive on your computer.
 - 2 Click **Add Programs**.
 - 3 Click the name of the application you want to install.
 - 4 Click **Install** (on the right side of the screen).
 - 5 (Optional) Repeat steps 3 and 4 to install additional applications.
 - 6 Synchronize your Treo 750 with your computer to install the application(s) on your Treo 750.
- Make sure that the third-party application supports 240x240 screen resolution. Some older applications have screen-size limitations.
 - If you can try a free version of the software before purchasing it, you can test it first to make sure it works properly.

NOTE If you encounter a problem with a third-party application (such as an error message), contact the application's vendor. For general troubleshooting of third-party applications, see [Third-party applications](#).

Installing third-party applications

When installing third-party applications, note the following:

- Install only apps that use Microsoft Windows Mobile 5.0 software for Pocket PC Phone Edition. The Microsoft Windows Mobile 5.0 software for Smartphone is not compatible with your Treo 750. Also, programs written for earlier versions do not support 5-way navigation or action keys and can have performance problems.

DID YOU KNOW? You can purchase a third-party application that lets you run Palm OS® applications on your Treo 750.

TIP Before purchasing a third-party application, try the free version.

Installing applications from the Internet

You can use Internet Explorer Mobile to install Windows Mobile apps in the CAB file format directly from the Internet. For files in any other format except CAB, you must first download the files to your

computer and then install them to your Treo 750 by synchronizing.

- 1 Make sure your phone is on (see [Turning your phone on](#)).
- 2 Press **Start**  and select **Internet Explorer**.
- 3 Go to the page that contains the link to the application you want to download.
- 4 Press **Left**  or **Right**  to highlight the link to the file, and then press **Center**  to start the download process.
- 5 Press **Start**  and select **Programs**.
- 6 Select **File Explorer** .
- 7 Go to the **My Documents** folder in File Explorer.
- 8 Tap the file you downloaded to start the installation program.

Installing applications from your computer

BEFORE YOU BEGIN To install an application from your computer to your Treo 750, you must first install ActiveSync® desktop software on your computer (see [Installing the desktop synchronization software](#)).

- 1 Open **My Computer** or **Windows Explorer** on your computer.
- 2 Double-click **Mobile Device** .
- 3 Copy the application file(s) into the Mobile Device folder.
- 4 Connect your Treo 750 to your computer to synchronize and install the application(s) on your Treo 750.

Installing applications onto an expansion card

BEFORE YOU BEGIN To install an application from your computer to an expansion card, you must first install ActiveSync desktop software on your computer (see [Installing the desktop synchronization software](#)).


- 1 Insert the expansion card into the expansion card slot (see [Inserting and removing expansion cards](#)).
- 2 Connect your Treo 750 to your computer.
- 3 Open **My Computer** or **Windows Explorer** on your computer.
- 4 Double-click **Mobile Device** .

- 5 Double-click **My Windows Mobile-Based Device**  to open the Mobile Device folder.
- 6 Copy the application file(s) into the Storage Card folder inside the Mobile Device folder.

Removing applications

To free up memory on your Treo 750, you can remove applications that you no longer use. You can remove only applications, patches, and extensions that you install; you cannot remove the built-in applications that reside in the ROM portion of your Treo 750.

- 1 Press **Start**  and select **Settings**.
- 2 Select the **System** tab, and then select **Remove Programs** .

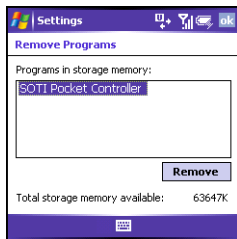

- 3 Highlight the application that you want to remove.

DID YOU KNOW? Built-in applications that cannot be deleted are not listed in the Remove Programs list.

- 4 Select **Remove**.
- 5 Select **Yes** to confirm the deletion.

Sharing information

Your Treo 750 comes equipped with a variety of options for sharing information, so that you can choose the quickest, most convenient way to send

your info or to receive info from another device.

- When you have a file open in a program such as Notes or PowerPoint Mobile, you can easily share a file by selecting the **Menu**, and then selecting **Send via E-Mail** or **Beam File**.
- In Microsoft Outlook®, you can insert a picture or attach a note or other file to an email. You can also receive pictures and attachments (see [Your email](#)).
- You can synchronize to share info between your Treo 750 and your computer or between your Treo 750 and Microsoft Exchange Server 2003 (see [Synchronizing information](#)).
- If you are near someone, you can beam files and applications between your Treo 750 and your neighbor's device using the IR port or Bluetooth® wireless technology (see [Beaming information](#)).
- You can also store files on an expansion card and share the expansion card (see [Using expansion cards](#)).


Beaming information

Your Treo 750 is equipped with an IR (infrared) port that enables you to beam information to another device with an IR port. The IR port is located on the side of your Treo 750 closest to the stylus, near the top. You can also beam using the built-in Bluetooth wireless technology on your Treo 750.

The normal range for beaming with IR is about 8 inches (20 centimeters). The maximum range for beaming with Bluetooth technology is about 30 feet (10 meters). Performance and range are affected by physical obstacles, radio interference from nearby electronic equipment, and other factors.

TIP For best results, the path between the two devices must be clear of obstacles, and both devices kept stationary. If you have difficulty beaming, shorten the distance and avoid bright sunlight.


DID YOU KNOW? The type of information you can beam depends on the type of device you are beaming to. Other Windows Mobile devices are always compatible with the Treo 750.

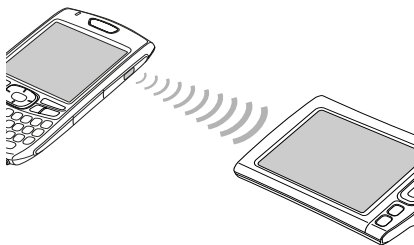

Beaming a record

- 1 Highlight the entry or file you want to beam.
- 2 Press **Menu** (right action key) and select **Beam...** (the menu item changes names based on the type of item you highlighted).

- 3 Do one of the following:

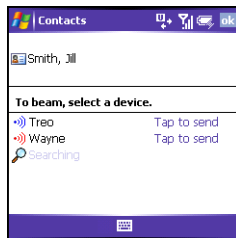

Bluetooth: When the name of the receiving device appears, select **Tap to send** to begin the transfer. A blue icon indicates a Bluetooth connection.

IR: Point the IR port on your Treo 750 directly at the IR port of the receiving device. A red icon indicates an IR connection.

- 4 Wait for Done to appear next to the name of the receiving device before you continue using your Treo 750.

Receiving beamed information

- 1 Turn on your screen.

- 2 Point the IR port on your Treo 750 directly at the IR port of the transmitting device.
- 3 When the Receiving Data message appears, select **Yes** to receive the beam.

TIP If you can't receive beamed info, press **Start** and select **Settings**. Select the **Connections** tab, and then select **Beam**. Make sure the **Receive all incoming beams** box is checked. If you still can't receive info, try a soft reset (see [Resetting your Treo 750](#)).

Using expansion cards

The expansion card slot on your Treo 750 enables you to add miniSD cards to extend the storage capacity of your Treo 750. For example, miniSD expansion cards can store the following:





- Pictures
- Games
- Videos
- eBooks
- MP3 audio files
- Applications
- Email attachments
- Databases

Expansion cards are sold separately.

TIP We recommend that you purchase preformatted expansion cards. To format a card on your own, you need to connect a card reader (sold separately) to your computer.

Inserting and removing expansion cards

- 1 Open the expansion card slot door by sliding your fingernail or another thin object into the notch.
- 2 Hold your Treo 750 with the screen facing you and hold the card with the label facing you. The notch on the card should be toward the bottom of your Treo 750.
- 3 Insert the card into the expansion card slot until you feel it lock into place and you hear the confirmation tone.
- 4 To remove an expansion card, press down and release the card.
- 5 After you feel the expansion card slot eject the card, remove the card from the slot.

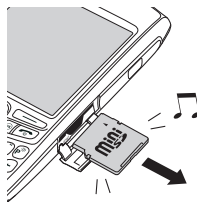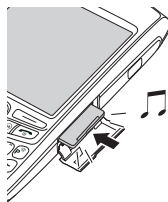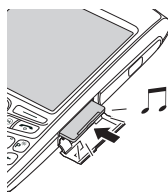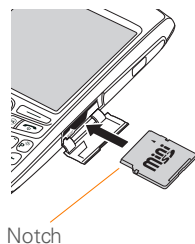

Opening applications on an expansion card


After you insert an expansion card into the expansion card slot, you can open any of

the applications stored on the expansion card.

TIP To run an application on an expansion card, your Treo 750 must have enough free space in the internal memory to run the application.

- 1 Insert the expansion card into the expansion card slot.
- 2 Press **Start**  and select **Programs**.
- 3 Select **File Explorer**.
- 4 Tap the **Show** list in the upper-left, and then select **Storage Card**.

Show list

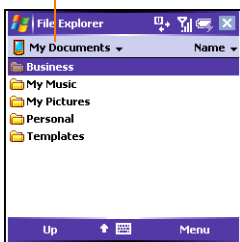

- 5 Select the application you want to open.

Saving files to an expansion card

You can save space on your Treo 750 by saving files to an expansion card. For example, when you create new Word

Mobile documents, notes, Excel Mobile workbooks, pictures, videos, and audio files, you can save them directly to an expansion card. Saving files to an expansion card also makes it easy to share those files with others. (Some applications may not support this feature.)

- 1 Insert an expansion card into the expansion card slot.
- 2 Open the application you want to save the info from.
- 3 Press **Menu**  (right action key) and select **Options**.
- 4 Select the **Save to** list, and then select **Storage Card**.

TIP If you don't see the Save to list on the Options screen, look on the other tabs (if present). If you still can't find a Save to list, the application may not support this feature.

- 5 Press **OK** .

Moving info between your Treo 750 and an expansion card

- 1 Insert an expansion card into the expansion card slot.

- 2 Open the application from which you want to move the info.
- 3 Go to the list view.
- 4 Press **Menu**  (right action key) and select **Rename/Move**.
- 5 Select the **Location** list, and then select where you want to move the info: **Storage Card** or **Main Memory**.
- 6 Press **OK** .

Copying or moving applications and files between your Treo 750 and an expansion card

- 1 Insert the expansion card into the expansion card slot.
- 2 Press **Start**  and select **Programs**.
- 3 Select **File Explorer**.
- 4 Select the file or application you want to copy or move (see [Exploring files and folders](#)).

TIP Your applications are usually located in the My Device/Program Files folder.

- 5 Press **Menu**  (right action key) and select **Edit > Copy** or **Edit > Cut**.

- 6 Go to the folder where you want to place the selected item.
- 7 Press **Menu**  (right action key) and select **Edit > Paste**.
- 8 Press **OK** .

Viewing available expansion card memory

- 1 Insert the expansion card into the expansion card slot.
- 2 Press **Start**  and select **Settings**.
- 3 Select the **System** tab, and then select **Memory** .
- 4 Select the **Storage Card** tab.
- 5 Press **OK** .

Exploring files on an expansion card

- 1 Insert the expansion card into the expansion card slot.
- 2 Press **Start**  and select **Programs**.
- 3 Select **File Explorer**.
- 4 Tap the **Show** list in the upper-left, and then select **Storage Card**.
- 5 Select the folder or files you want to view.
- 6 Press **OK** .

Renaming an expansion card


If you change the contents of an expansion card, you may at some point want to rename the card to better match its contents.

TIP Before copying information to or renaming the files or folders on an expansion card, or renaming the card itself, make sure the card is not write-protected. See the instructions that came with your card for details.

- 1 Insert the expansion card into the expansion card slot.
- 2 Press **Start**  and select **Programs**.
- 3 Select **File Explorer**.
- 4 Tap the **Show** list in the upper-left, and then select **My Device**.
- 5 Highlight the current expansion card name (Storage Card by default).
- 6 Press **Menu**  (right action key) and select **Rename**.
- 7 Enter a new name for the card.
- 8 Press **OK** .

Calculator

You can use Calculator for basic arithmetic calculations, such as addition, subtraction, multiplication, and division.

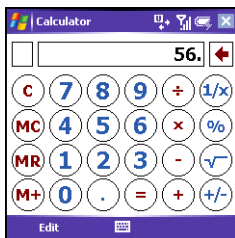

Performing calculations

- 1 Press **Start**  and select **Programs**.
- 2 Select **Calculator** .
- 3 Enter numbers and perform calculations, including the following:
 -  Clears the last digit in a multi-digit entry.
 -  Clears the current calculation or the displayed number.

-  Calculates the reciprocal of a number.
-  Calculates percentage.
-  Calculates the square root of a number.
-  Switches a number between negative and positive.

TIP You can paste numbers into Calculator as well as copy calculation results to be pasted into another app. Press **Menu** (right action key) and select **Edit**.

TIP For more advanced calculations, use Excel Mobile. See [Excel Mobile](#) for details.

Using the Calculator memory

- To store a number, select the box to the left of the entry box. An M appears in the box.

DID YOU KNOW? When you store a number in memory, it replaces the number that is currently stored.

- To add the displayed number to the number stored in memory, select .
- To display the number stored in memory, select .
- To clear the memory, select .



Your personal settings

Customizing is optional. But why not personalize your Palm® Treo™ 750 smart device to make it match your lifestyle and work even harder for you?

You can easily customize the sounds, fonts, screen colors, and more on your Treo 750. Take advantage of various levels of security. Prevent making an accidental (and expensive) phone call by locking the keyboard. Some preference settings can help extend the life of your battery. There are lots of ways to make your Treo 750 work better for you.

Benefits

- Conserve power
- Make your screen easy to read
- Secure your data


In this chapter

Today screen settings	207
System sound settings	208
Display and appearance settings	210
Application settings	212
Locking your Treo 750 and info	216
System settings	220
Connection settings	226

Today screen settings

Selecting your Today screen background

- 1 Press **Start**  and select **Settings**.

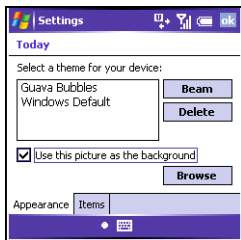


- 2 On the **Personal** tab, select **Today** .
- 3 On the **Appearance** tab, check the **Use this picture as the background** box.
- 4 Select **Browse**.
- 5 Select the picture you want to use.
- 6 Press **OK** .

TIP To change the color theme for your Treo 750, select a new theme from the **Appearance** tab in Today Settings.

Selecting which items appear on your Today screen

- 1 Press **Start**  and select **Settings**.

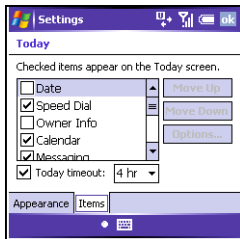

- 2 On the **Personal** tab, select **Today** .
- 3 Select the **Items** tab.
- 4 Check the boxes next to the items you want to appear on your Today screen, and uncheck any items you want to hide.
- 5 (Optional) Select **Options** (if available) to configure the settings for the current item. Press **OK**  to return to Today Settings.
- 6 Press **OK** .

DID YOU KNOW? There are lots of third-party plug-ins available for your Today screen. For clocks, calculators, MP3 players, weather guides, and much more, visit www.palm.com/mytreo750cingular.

System sound settings

When you're in a meeting, at the movies, or anywhere that silence is required, you can immediately silence all sounds on your Treo 750, including Calendar notifications and system sounds. This does not mute the speaker during phone calls.


Silencing sounds

TIP Can't get music to play out of the built-in MP3 player? Check the ringer switch. If it's set to Sound Mode Off, you won't be able to hear music.

DID YOU KNOW? Your Treo 750 includes a silent alarm that can vibrate even when the ringer switch is set to Sound Mode Off.

- 1 Slide the ringer switch to **Sound Mode Off** . The Treo 750 vibrates briefly.
- 2 To hear all sounds again, slide the ringer switch to **Sound Mode On** .

When you slide the ringer switch back to the Sound Mode On position, it restores the previous sound settings. For example, if the Treo 750 ring volume is set to the loudest setting and you slide the ringer switch to Sound Mode Off, you do not hear the Treo 750 ring. When you move the ringer switch back to Sound Mode On, the Treo 750 ring volume is still set to the loudest setting.

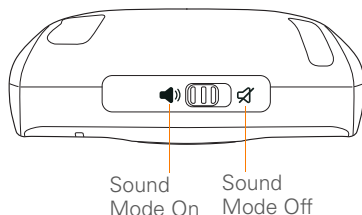


Selecting Sounds & Notifications

- 1 Press **Start**  and select **Settings**.
- 2 On the **Personal** tab, select **Sounds & Notifications** .

- 3 On the **Sounds** tab, set any of the following options:

Events: Turns sounds on/off for system warnings and error messages.

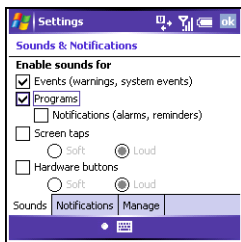

Programs: Turns sounds on/off in the applications on your Treo 750.

Notifications: Turns alarms and reminders on/off in the applications on your Treo 750.

Screen taps: Turns sounds associated with tapping the screen on/off, and sets the volume level when this sound is turned on.


Hardware buttons: Turns sounds associated with pressing buttons on/off,

and sets the volume level when this sound is turned on.

TIP To record, preview, delete, and send sounds, select the **Manage** tab. To record a sound, press **Menu** and select **New Sound**. To play a sound, select it and press **Play**. To delete a sound, highlight it and press **Backspace**. To send a sound, highlight it, press **Menu**, and select **Send Sound**.

- 4 Select the **Notifications** tab and set any of the following options:

Event: Specifies which action you want to change the settings for. The remaining options vary based on the action you select.

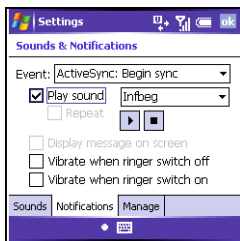

Play sound: Lets you turn the sound on/off for the selected event. To select a different sound select the list to the right of this setting, and then select a different sound. To preview the sound, select Play Sound, and then select Play.

Repeat: Indicates whether the sound plays more than once, if turned on.

Display message on screen: Indicates whether a notification message appears onscreen for the selected event.

Vibrate: Indicates whether your Treo 750 vibrates to notify you about the selected event.

- 5 Press **OK** .

Display and appearance settings

Adjusting the brightness


- 1 Press **Option** , and then press .
- 2 Press **Left**  and **Right**  to adjust the brightness.
- 3 Press **OK** .

Changing the text size and clarity

- 1 Press **Start**  and select **Settings**.
- 2 Select the **System** tab, and then select **Screen** .
- 3 Select the **Text Size** tab.
- 4 Press **Left**  and **Right**  to adjust the text size.
- 5 Select the **Clear Type** tab.
- 6 To smooth the edges of screen fonts, check the **Enable Clear Type** box.
- 7 Press **OK** .

Setting display formats

- 1 Press **Start**  and select **Settings**.

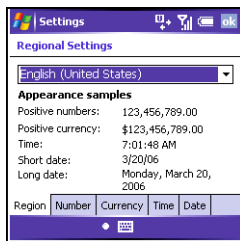

- 2 Select the **System** tab, and then select **Regional Settings** .

- 3 On the **Region** tab, select a region from the list. The region selection sets the default format settings.

- 4 (Optional) Select any of the following tabs to customize the format settings:

Number: Sets the decimal symbol and number of decimal places, the digit grouping symbol and group size, list separators, negative number sign symbol and format, leading zero display, and measurement system (metric vs. U.S.).

Currency: Sets the currency symbol and position, the decimal symbol and position, digit grouping symbol and group size, and negative number format.

Time: Sets the time style, separators, and AM and PM symbols.

Date: Sets the short date style, separators, and long date style.

- 5 Press **OK** .

Aligning the screen to correct tapping problems

Occasionally, your screen may need to be readjusted. You know your screen needs adjustment when the wrong feature is activated when you tap the screen. To fix the problem, align the screen.

- 1 Press **Start**  and select **Settings**.
- 2 Select the **System** tab, and then select **Screen** .
- 3 On the **General** tab, select **Align Screen**.
- 4 Tap the screen where indicated.
- 5 Press **OK** .

Changing the system color scheme

TIP You can also set the background for your Today screen (see [Selecting your Today screen background](#)).

- 1 Press **Start**  and select **Settings**.
- 2 On the **Personal** tab, select **Today** .
- 3 On the **Appearance** tab, select a theme in the list.
- 4 Press **OK** .

Changing screen orientation


Landscape orientations are determined by which hand you would hold the stylus in.

- 1 Press **Start**  and select **Settings**.
- 2 Select the **System** tab, and then select **Screen** .
- 3 Select the **General** tab.
- 4 Select an orientation:
 - **Portrait**
 - **Landscape (right-handed)**
 - **Landscape (left-handed)**
- 5 Press **OK** .

Application settings

Arranging the Start menu

You can change the first seven applications listed on the Start menu. You can still access the remaining applications by selecting Programs from the Start menu, and then selecting the application's icon.

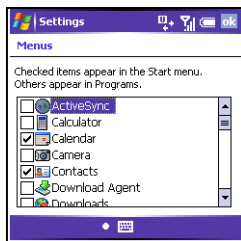

- 1 Press **Start**  and select **Settings**.
- 2 On the **Personal** tab, select **Menus** .
- 3 Check the boxes next to the applications you want to see in the Start menu.
- 4 Press **OK** .

TIP Don't forget the six icons across the top of the Start menu. They're the apps you opened most recently, and it's easy to get back to them: just use the 5-way to select one of the icons

Reassigning buttons

Buttons Settings lets you select which applications are associated with many of

the buttons and key combinations on your Treo 750.



- 1 Press **Start** and select **Settings**.
- 2 On the **Personal** tab, select **Buttons**
- 3 On the **Program Buttons** tab, highlight the button or key combination you want to change in the Buttons list. The hardware buttons are mapped to the following items:
 - **Start** = Start menu.
 - **OK** = OK/Close.
 - **Option** + **Phone/Send** = Messaging.
 - **Option** + **Start** = Calendar.
 - **Option** + **OK** = Task Manager.

- **Hold Side button** = Windows Media Player.


- 4 Select the **Assign a program** list, and then select the application you want to assign to the button or key combination you selected in step 3.

- 5 Press **OK** .

Setting up voice commands

IMPORTANT The Voice Command application is available only for English, French, and German. Spanish is not available.

Voice commands enable you to use speech to execute some commands on the Start menu and the Programs menu.

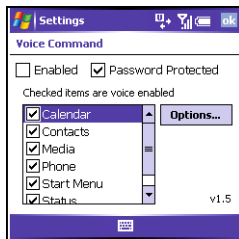

- 1 Assign the **Hold Side button** to Voice Command. See [Reassigning buttons](#) for details.
- 2 Press **Start**  and select **Settings**.
- 3 On the **Personal** tab, select **Voice Command**.
- 4 Select **Enabled**.
- 5 Select the items you want to enable. If an item is highlighted and the Options box is active, select the Options box to choose the features you want enabled for the highlighted item.

Using voice commands

DID YOU KNOW? If you have questions about the types of commands that can be used with Voice Command, you can go to the on-device Help by pressing **Start** and selecting **Help**.

The Voice Command application is available only for English, French, and German. Spanish is not available.

IMPORTANT Do not use voice commands in your car until you read the End user notice about this kind of usage; see [End user notice](#).

- 1 Set the ringer switch at the top of your Treo 750 to On.
- 2 Hold your device about nine inches (230mm) away from your mouth, and then press and release the assigned **Voice Command** button (see [Setting up voice commands](#)). A tone plays and a microphone icon appears at the top of your screen.
- 3 In a clear voice say the command. For example:
 - To access Help, say, “Help.” After Voice Command finishes speaking, a microphone icon appears at the top of your screen. Say your answer. For example, say, “General” to access general Help topics.
 - To access your Calendar, say, “Start Calendar.”
 - To access your music, say, “Start Windows Media.” After Voice Command finishes speaking, a microphone icon appears at the top of your screen. Say your answer.

TIP You can move quickly through voice commands by stopping the voice command response before it finishes. When Voice Command responds, you can press the **Voice Command** button before it completes the question. Once the microphone icon is visible, you may say your answer.


TIP To enter a suggested word, press **Down** to highlight the suggestion, and then press **Center** to accept it.

Setting input options

- 1 Press **Start**  and select **Settings**.
- 2 On the **Personal** tab, select **Input** .
- 3 Select the **Word Completion** tab and set any of the following options:

Suggest words when entering text:


Indicates whether word suggestions appear as you enter text. You can also specify how many letters you want to enter before a suggestion appears, how many suggestions you want to see, and whether a space appears after you insert a suggested word.

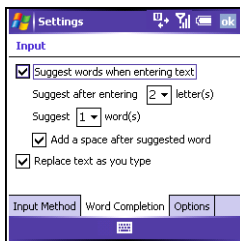

Replace text as you type: Indicates whether the text you type adds to existing text or replaces it. This is similar to the Insert function on a computer keyboard.

- 4 Select the **Options** tab and set any of the following options:

Voice recording format: Specifies the format in which you save voice notes.

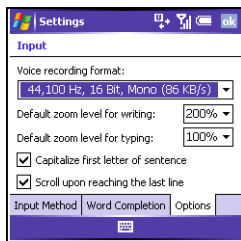

Default zoom level for writing:

Specifies the initial size of text entered from onscreen writing methods.

Default zoom level for typing:

Specifies the initial size of text entered using the keyboard.

Capitalize first letter of sentence:

Specifies whether the first letter of a sentence automatically appears in uppercase, without requiring you to press a Shift key.

Scroll upon reaching the last line:

Specifies whether the display automatically scrolls when you select the last line of visible info.

- 5 Press **OK** .

Locking your Treo 750 and info

Your Treo 750 includes several features that help you protect your Treo 750 from inadvertent use and keep your information private. The built-in security software lets you use your Treo 750 for emergency calls, such as dialing the 911 emergency number, even if it is locked.

- **Keyguard:** Manually disables all buttons and the screen's touch-sensitive feature to prevent accidental presses in your briefcase or pocket.
- **Auto-Keyguard and touchscreen lockout:** Automatically enables Keyguard after a period of inactivity and lets you disable the screen's touch-sensitive feature during an active call.
- **Phone Lock:** Requires a PIN to make and receive calls.
- **System password lock:** Requires a password to see any information on your Treo 750.

TIP To avoid accidentally pressing onscreen buttons while you're holding your Treo 750 up to your ear to speak, you can disable the screen's touch-sensitive feature during active calls. When the screen's touch-sensitive feature is disabled, you must use the 5-way navigator to access items on the screen.

Locking your keyboard (Keyguard)

By default, your keyboard locks so that you don't accidentally press buttons or activate screen items while your Treo 750 is in a pocket or bag.


- To dismiss Keyguard, press **Center** .
- To manually turn on Keyguard when your Treo 750 screen is on, press **Option**  and **Power/End** .

TIP If you're using a headset or hands-free device and your Treo 750 is in a pocket or bag, you can manually turn on Keyguard during a call to prevent accidental key presses.

Auto-Keyguard enables you configure the Keyguard feature.

- 1 Press **Start**  and select **Settings**.

- 2 On the **Personal** tab, select **Keyguard** .
- 3 Select the **Auto-Keyguard** list and then disable the auto-keyguard feature or set the period of inactivity that passes before the keyboard automatically locks.

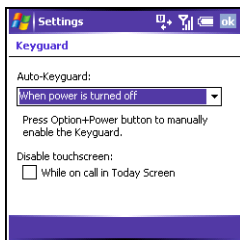

- 4 Press **OK** .

Locking your screen

- 1 Press **Start**  and select **Settings**.
- 2 On the **Personal** tab, select **Keyguard** .
- 3 Check or uncheck the **Disable touchscreen** box to determine whether the screen's touch-sensitive feature is enabled during a call.
- 4 Press **OK** .

Locking the SIM card


You can lock your SIM (Subscriber Identity Module) card to prevent unauthorized use of your mobile account. When your SIM card is locked, you must enter the PIN to power on your phone to make or receive calls, except for emergency numbers. The SIM card remains locked even if you move the card to another phone.

When your SIM card is locked, you can unlock your SIM card by trying to turn on the phone. A dial pad appears for you to enter your PIN.

BEFORE YOU BEGIN You need the following:

- Make sure your phone is on and that you're inside a coverage area (see [Turning your Palm® Treo™ 750 smart device on/off](#)).
- Get your default PIN from AT&T

- 1 Press **Start**  and select **Settings**.

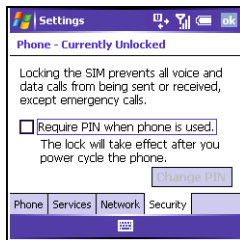

- 2 On the **Personal** tab, select **Phone** .
- 3 Select the **Security** tab.
- 4 Check the **Require PIN when phone is used** box.
- 5 Enter the PIN and press **Done**  (left action key).
- 6 Press **OK**  to finish.
- 7 Turn your phone off to activate the phone lock feature.

Your SIM card locks when you turn off your phone and turn it back on. When your SIM card is locked, you can unlock your SIM card entering your PIN.

DID YOU KNOW? You can permanently unlock your SIM card. Select **Menu, Preferences,** and then **Phone Settings.** Select the **Security** tab and uncheck the **Require PIN when phone is used** box.

NOTE You need your PIN number to edit your PIN number or remove the locking feature. If you enter an incorrect PIN more times than allowed by AT&T, the SIM card locks. Once the SIM card locks, you need the PUK (PIN Unlock Key) to unlock the SIM card. Contact AT&T for more information and the PUK.

Locking your Treo 750

To protect your personal information, you can lock the system so that you need to enter your password to access any of your information or use other features of your Treo 750.

IMPORTANT If you lock your system, you must enter the exact password to unlock it. If you enter an incorrect password, you are given another chance. Each time an incorrect password is entered, you are

given progressively longer time periods between your chances to enter the password. If you forget the password, you need to perform a hard reset to resume using your Treo 750. Performing a hard reset deletes all the entries in your Treo 750. However, you can restore all previously synchronized info the next time you sync (see [Defining speed-dial buttons](#)).


- 1 Press **Start**  and select **Settings**.
- 2 On the **Personal** tab, select **Lock** .
- 3 On the **Password** tab, check the **Prompt if device unused for** box to turn on the password feature.
- 4 Select the first list, and then select how long a period of inactivity must pass before you are prompted to enter a password to unlock the system.
- 5 Select the **Password type** list, and then select a format for your password.
- 6 Select **Password**, tap the **onscreen keyboard**  icon, and enter your password. Then tap the **onscreen keyboard icon**.

- 7 Select **Confirm**, tap the **onscreen keyboard icon** , and enter the password again. Then tap the **onscreen keyboard icon**.
- 8 (Optional) Select the **Hint** tab and enter a hint to help you recall your password.
- 9 Press **OK** .

Entering owner information

You can enter personal information that you want to associate with your Treo 750, such as your name, company name, and phone number. You can also set whether you want this information to appear when you turn on your Treo 750. If you lose your Treo 750, this feature can help the person who finds it return it to you.

- 1 Press **Start**  and select **Settings**.

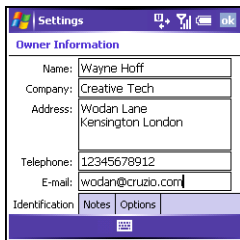

- 2 On the **Personal** tab, select **Owner Information** .
- 3 On the **Identification** tab, enter any of the contact information you want to include.
- 4 Select the **Notes** tab and then enter any additional text you want to include.
- 5 Select the **Options** tab and check the boxes to indicate which info (if any) you want to appear on the screen when you turn on your Treo 750.
- 6 Press **OK** .

TIP You can also display your Owner Information on your Today screen. See [Selecting which items appear on your Today screen](#) for details.

System settings

Setting the date and time

Clock & Alarms Settings lets you set the time zone, time, and date for your home location and a location that you visit.

To set the display format for the date and time, see [Setting display formats](#).

- 1 Press **Start**  and select **Settings**.
- 2 Select the **System** tab, and then select **Clock & Alarms** .
- 3 On the **Time** tab, select **Home**.
- 4 Select the first list, and then select the time zone for your home location.



- 5 Select the hour, and then press **Up** ▲ or **Down** ▼ to increase or decrease the hour setting. Repeat this process for the minute, seconds, and AM/PM settings.
- 6 (Optional) Select **Visiting** and set the info for a location that you visit often.
- 7 Press **OK** .

- 8 If prompted, select **Yes** to accept your changes.

Synchronizing the date, time, and time zone with the network

By default your Treo 750 synchronizes the date, time, and time zone with the AT&T network whenever your phone is on and you are inside a coverage area.


- 1 Press **Start**  and select **Settings**.
- 2 Select the **System** tab, and then select **Clock & Alarms** .
- 3 Select the **More** tab.
- 4 To disable this option, uncheck the **Enable local network time** box.
- 5 If you want to keep your Treo 750 date and time set for your selected location, uncheck the **Use network time zone** box.

Setting system alarms

System alarms let you set alarms that are not associated with a task or appointment. For example, you can use your Treo 750 as

an alarm clock when you travel, or set alarms to remind you when it's time to take medication or pick up the kids.

- 1 Press **Start**  and select **Settings**.

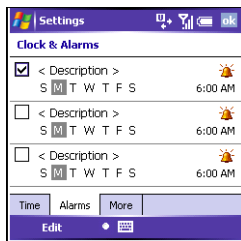

- 2 Select the **System** tab, and then select **Clock & Alarms** .
- 3 Select the **Alarms** tab.
- 4 Check a box to turn on that alarm.
- 5 Select the description next to the box you checked and enter a description for the alarm.
- 6 Select the days of the week you want the alarm to go off. You can select multiple days for each alarm.
- 7 Select the time you want the alarm to go off, and then press **OK** .

- 8 Select , check the boxes to select how you want the alarm to go off, and then press **OK** .

TIP To change the alarm sound, select the alarm sound icon, select the **Play Sound** list, and then select the alarm sound you want to use.

- 9 Press **OK**  to finish.
- 10 If prompted, select Yes to accept your changes.

Managing identity certificates

Your Treo 750 may include preinstalled certificates. Certificates are digital documents that are used to authenticate and exchange information on networks. Certificates can be issued for a user, a device, or a service.

- 1 Press **Start**  and select **Settings**.
- 2 Select the **System** tab, and then select **Certificates** .
- 3 Select any of the following:

Personal: Displays certificates that establish your identity when you log in to a secured network, such as a corporate network.

Root: Displays certificates that identify the computers, such as servers, that you connect to. These certificates help prevent unauthorized users from accessing your Treo 750 and information.

- 4 Press **OK**  to finish.

TIP To delete a certificate, tap and hold the certificate in the list, and then select **Delete** from the shortcut menu.

Enabling error reporting

Error Reporting sends info that helps diagnose application errors for devices running Windows Mobile software. When an error is detected, a text file is created. You can review the file and choose whether you want it delivered to technical support. The information is used by programming groups at Microsoft for quality control and is not used for tracking individual users or installations for any marketing purpose. The info that is collected is technical info about the state of your system when the error occurred. No documents (or any info contained in them)

are intentionally sent with the report. To ensure further security, the report is transmitted via a secure connection and is kept confidential and anonymous in a limited-access database.

DID YOU KNOW? This error reporting method meets the privacy regulations of the European Union (EU) as well as the Fair Information Practice Principles of the Federal Trade Commission. To view the Fair Information Practice Principles, visit the Federal Trade Commission website at www.ftc.gov/reports/privacy3/fairinfo.htm.

Your Treo 750 must be connected to your computer when you send the error report—provided your computer is connected to the Internet.


- 1 Press **Start**  and select **Settings**.
- 2 Select the **System** tab, and then select **Error Reporting** .
- 3 Select whether you want to enable or disable error reporting.
- 4 Press **OK**  to finish.

How much storage space do I have left?

- 1 Press and hold **OK** .
- 2 Select any of the following tabs:

Main: Displays the amount of memory assigned to your applications and info, as well as the amount of memory in use versus the available memory.

Storage Card: Displays the amount of memory available on an expansion card that is inserted in the expansion slot on your Treo 750.

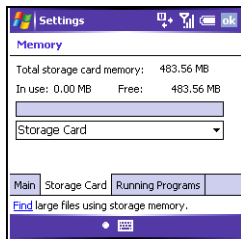

Running Programs: Lists the applications that are in use on your Treo 750. To switch to an application, highlight it and select **Activate**. To close

an application, highlight it and select **Stop**. To close all open applications, select **Stop All**.

- 3 Press **OK**  to finish.




Optimizing power settings

TIP An easy way to check the battery level is by tapping the **Battery** icon in the title bar.

- 1 Press **Start**  and select **Settings**.
- 2 Select the **System** tab, and then select **Power** .

- 3 On the **Battery** tab, view the power remaining in your battery.
- 4 Select the **Advanced** tab and set whether your Treo 750 screen turns off automatically after a specified period of inactivity. You can assign different intervals for battery power and external power.
- 5 Press **OK**  to finish.

TIP To conserve additional battery power, adjust the display backlight setting. Press **Start** and select **Settings**. Select the **System** tab, and then select **Backlight**. On the **Battery Power** tab, set whether the display backlight turns off automatically after a period of inactivity.

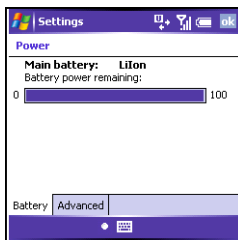

Turning wireless services on/off

- 1 From the Today screen, press **Menu**  (right action key) and select **Wireless Manager**.

TIP To change the settings for one of the displayed wireless features, select **Menu** and select the wireless feature you want to change.



- 2 Turn the wireless features on your Treo 750 on/off. Select **All** to turn all wireless features on/off.
- 3 Press **OK**  to finish.

You can also turn wireless services on and off by tapping the **signal-strength**  icon at the top of the screen, and then selecting **Wireless Manager**.

Connection settings

Managing ISP settings

Your Treo 750 is already set up to connect to the Internet using a high-speed data connection on the AT&T network. To connect to the Internet, simply start Internet Explorer Mobile.

For special situations, such as connecting to your internet service provider (ISP) or to a remote access server (RAS), you can set up another connection.

BEFORE YOU BEGIN Obtain the following information from your ISP or system administrator:

- ISP server phone number or access point
- Username
- Password

- 1 Press **Start**  and select **Settings**.
- 2 Select the **Connections** tab, and then select **Connections** .
- 3 On the **Tasks** tab, select **Manage existing connections**.

- 4 Select the **Modem** tab.
- 5 Highlight the connection you want to view or change, and then select **Edit**, or to create a new connection, select **New**.
- 6 Follow the onscreen instructions to edit or create the connection.

Connecting to a VPN (virtual private network)

If you want to use your Treo 750 to access your corporate email account or other files on your corporate server, you may need to set up a VPN. A VPN enables you to log in to your corporate server through the company's firewall (security layer).

Check with your company's system administrator to see if a VPN is required to access the corporate network. If you need a VPN, you must purchase and install a third-party VPN client to use this feature. Go to www.palm.com/mytreo750cingular for more information.

Before you begin setting up a VPN, ask your system administrator for the following information:

- Your username and password
- Your server's domain name
- Your server's TCP/IP settings
- Your server's host name or IP address

- 1 Install your third-party VPN client (see [Installing applications](#)).
- 2 Press **Start**  and select **Settings**.
- 3 Select the **Connections** tab, and then select **Connections** .
- 4 On the **Tasks** tab, select **Add a new VPN server connection**.
- 5 Follow the onscreen instructions to enter the settings provided by your corporate system administrator.

TIP To manually start a data connection on the AT&T network or another network, go to **Connections Settings**, and on the **Tasks** tab, select **Manage existing connections**. Tap and hold the connection you want to start, and then select **Connect** from the shortcut menu.

Setting up a proxy server

- 1 Press **Start**  and select **Settings**.
- 2 Select the **Connections** tab, and then select **Connections** .

- 3 On the **Tasks** tab, select **Set up my proxy server**.
- 4 Check both boxes near the top of the screen.
- 5 Select **Proxy server** and enter the proxy server name.
- 6 Press **OK** .

TIP To change settings such as the port number, proxy server type, or credentials, select **Advanced**.

Ending a data connection

If your service plan includes minutes-of-use fees for data connections, you can reduce costs by ending the data connection when you've finished browsing the web.

- 1 Use the stylus to tap the data connection icons  or  on the title bar.
- 2 Select **Disconnect** from the shortcut menu.



Common questions

Transferring info from another device

For information on transferring your info from a previous Windows Mobile® device or from a Palm OS® device to your new Palm® Treo™ 750 smart device, visit www.palm.com/us/support/treo/treo750cingular for instructions.

DID YOU KNOW? You can purchase a third-party application that lets you run Palm OS® applications on your Treo 750.

DID YOU KNOW? If you have questions about Windows Mobile, you can go to the [Microsoft Windows Mobile website](#). Search for Palm devices or Pocket PCs for information.

IMPORTANT Do not use a backup utility to transfer your info from another device to your new Treo 750. This can cause your Treo 750 to malfunction.

Reinstalling the desktop software

If you have problems synchronizing using ActiveSync® desktop software, you may need to reinstall the software.

BEFORE YOU BEGIN Make sure your computer profile includes administrator rights to install software. In large organizations, these are usually granted by the system administrator.

- 1 Shut down your computer, and then turn it on again.
- 2 On your computer, click **Start > Control Panel > Add or Remove Programs**.
- 3 Remove Microsoft ActiveSync if it is on your computer.
- 4 Quit any active applications, including virus scanners and Internet security applications.
- 5 Insert the Windows Mobile Getting Started Disc into your computer's CD drive and follow the onscreen instructions.

You must install the version of ActiveSync desktop software that came with your Treo 750 on the Windows Mobile Getting Started Disc. Other versions may not work with this Treo 750.


DID YOU KNOW? The Windows Mobile Getting Started Disc installs the software and drivers that let you synchronize with Microsoft Office Outlook®. If you want to synchronize with a different personal information manager (PIM), you must install a third-party solution. Contact the PIM's vendor to learn if software is available for your Treo 750.

Resetting your Treo 750

Performing a soft reset

Performing a soft reset is similar to restarting a computer. If your Treo 750 is not responding or you have trouble synchronizing with your computer, a soft reset may help.

- 1 Open the expansion card slot door on the side of your Treo 750.
- 2 Use the stylus tip to gently press the reset button next to the expansion card slot.

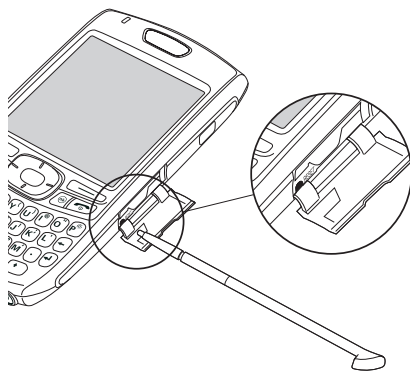

- 3 Wait for the progress bar on the Treo logo screen to fill before continuing to use your Treo 750.

TIP You can also do a soft reset by removing the battery and reinserting it.

DID YOU KNOW? If the phone or the Bluetooth® wireless technology feature was on before a reset, these automatically turn on after the reset.

contacts, and tasks, as well as programs you have added, such as third-party software on your Treo 750. Never do a hard reset without first trying a soft reset. You can restore previously synchronized information the next time you sync.

IMPORTANT Synchronize to restore your Outlook data, such as Outlook email, Calendar, Contacts, Notes, and Tasks. You can use a backup and restore solution (make sure it's an application that's approved by Palm, such as the one included on the Windows Mobile Getting Started Disc) to restore configurations and preferences such as speed-dials, SMS entries, call log information, and personal settings.

Performing a hard reset

A hard reset erases all personal information, such as appointments,

TIP Some third-party applications do not create a backup on your computer when you synchronize. If you do a hard reset, you may lose info in these applications and you need to reinstall the application on your Treo 750 after the hard reset. Please contact the developer to find out if your info is backed up during synchronization.

DID YOU KNOW? When you synchronize after a hard reset, the source folder in My Documents changes from Treo My Documents to WM_ your name.

A hard reset can tell you whether a problem stems from your Treo 750 or from an application installed on it. If you do not experience the problem after you perform a hard reset, the problem may be related to software you installed. See [Third-party applications](#) for suggestions on diagnosing third-party software issues.

- 1 Open the expansion card slot door on the side of your Treo 750.
- 2 If the screen is off, press **Power/End**  to wake up the screen.

- 3 While pressing and holding **Power/End** , use the tip of the stylus to gently press and hold the reset button next to the expansion card slot.
- 4 Continue pressing and holding both buttons until the “Erase all data?” prompt appears.
- 5 Press **Up**  to confirm the hard reset.
- 6 Wait for the progress bar on the Treo logo screen to fill before continuing to use your Treo 750.
- 7 (Optional) Synchronize to restore your previously synchronized info. If you use a backup utility, you may also need to restore a backup to recover additional info and settings.

Replacing the battery


Your Treo 750 comes with a replaceable battery. Be sure to use a replacement battery from Palm that is compatible with Palm Treo 750 models. Do not use a battery from any earlier model of Treo 750.

TIP Be sure to dispose of your old battery in an environmentally responsible and legal way. In some areas, disposal in household or business trash is prohibited. Visit www.Palm.com/environment for more information.

DID YOU KNOW? Your Treo 750 stores all your info even when you remove the battery.

- 1 Press **Power/End**  to turn off the screen.
- 2 Use one hand to press the battery door release and use the other hand to slide the battery door downward to remove it from your Treo 750.
- 3 Place a finger in the notch between the stylus and the battery, and lift the battery at a 45-degree angle.
- 4 Align the battery contacts with the phone contacts inside the battery compartment.
- 5 Insert the battery into the compartment at a 45-degree angle, pressing it into place. Slide the battery door onto the

back of the Treo 750 until it clicks into place.

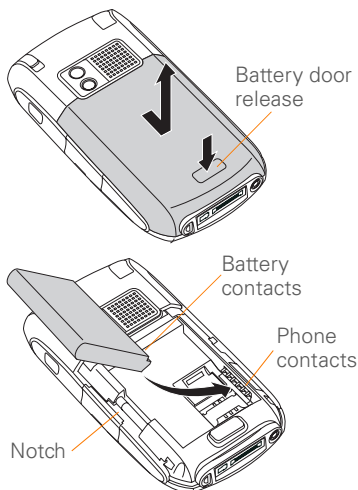

- 6 Wait for the screen to turn on.

Performance

The applications are running slower than usual

- 1 Press **Start**  and select **Settings**.
- 2 Select **System**, and then select **Memory** .
- 3 Select **Running Programs**.
- 4 Select **Stop All** to close all your open applications.
- 5 Press **OK** .

If the previous steps don't fix the problem, try doing a soft reset (see [Performing a soft reset](#)). If the problem persists, follow these steps to turn off the Voice Command setting, if it is enabled:

- 1 Press **Start**  and select **Settings**.
- 2 Select **Personal**, and then select **Voice Command** .
- 3 Uncheck the **Enabled** box.
- 4 Press **OK** .

TIP Be sure that third-party applications are compatible with Windows Mobile version 5 or later. Applications written for earlier versions can have performance problems.

Also make sure to install only apps that use Microsoft Windows Mobile 5.0 software for Pocket PC Phone Edition. If you can try a free version of the software before purchasing it, you can test it first to make sure it works properly.

My battery seems to drain quickly

If you have a push email solution (such as GoodLink™ wireless messaging) or if you have set up a schedule for wireless synchronization, check with your email provider or system administrator to make sure that the server is set up properly to work with your Treo 750. Incorrect server setup can cause excessive drain on your battery.

For more tips on conversing battery life, see [Maximizing battery life](#).

Screen

The screen appears blank

- 1 If you're on a call, when the time period specified in Backlight Settings expires, the screen dims; one minute later, the screen automatically turns off. Press any key except Power/End to wake up the screen. Pressing Power/End hangs up the call.
- 2 Look closely at the screen. If you can see a dim image, try adjusting the screen brightness (see [Adjusting the brightness](#)).
- 3 If that doesn't work, perform a soft reset (see [Performing a soft reset](#)).
- 4 If that doesn't work, connect your Treo 750 to the AC charger (see [Charging the battery](#)) and perform a soft reset again.
- 5 If that doesn't work, perform a hard reset (see [Performing a hard reset](#)).

TIP If you are using a third-party application, make sure that the application supports 240x240 screen resolution. Some older applications have screen-size limits.

The screen doesn't respond accurately to taps or activates wrong features

- 1 Make sure there is no debris trapped under the edges of the screen.
- 2 Press **Start**  and select **Settings**.
- 3 Select the **System** tab, and then select **Screen** .
- 4 On the **General** tab, select **Align Screen**.
- 5 Follow the onscreen instructions to align the screen.
- 6 Press **OK** .

TIP To find carrying cases that protect the screen and other useful accessories, visit www.palm.com/mytreo750cingular

Network connection

Signal strength is weak

- 1 If you're standing, move about 10 feet (3 meters) in any direction.
- 2 If you're in a building, move near a window. Open any metal blinds.

- 3 If you're in a building, move outdoors or to a more open area.
- 4 If you're outdoors, move away from large buildings, trees, or electrical wires.
- 5 If you're in a vehicle, move your Treo 750 so that it's level with a window.

TIP Become familiar with low coverage areas where you live, commute, work, and play, so you know when to expect signal strength issues.

My Treo 750 won't connect to the mobile network

- 1 Try the suggestions above for weak signals.
- 2 Turn off your phone and turn it on again (see [Turning your Palm® Treo™ 750 smart device on/off](#)).
- 3 Perform a soft reset (see [Performing a soft reset](#)).

My phone seems to turn off by itself

If a system error and reset occur, the phone automatically turns on if it was on before the reset. However, if your Treo 750 can't determine if your phone was on before the reset, it does not automatically

turn on the phone (see [Turning your Palm® Treo™ 750 smart device on/off](#)).

I can't tell if data services are available

The following icons appear in the title bar to indicate whether data services are available:



You are in an area that supports UMTS services.



Your phone is on and a UMTS data connection is active. You can make and receive calls and transmit data simultaneously.



Your phone is connected to a GPRS (EDGE if available) network, but you are not actively transmitting data. You can still make or receive calls.



Your phone is on and a GPRS (EDGE if available) data connection is active. Your incoming calls may not go through when you are actively transmitting data. If you make a call, the data transmission is automatically interrupted, and you must manually resume the data connection when you end the call.



Your phone is connected to a UMTS network, but you are not actively transmitting data. You can still make or receive calls.

KEY TERM UMTS (Universal Mobile Telecommunications System)

A third-generation (3G) wireless technology that is designed for high-speed data transfer with rates up to 384 Kbps.

KEY TERM EDGE (Enhanced Data Rates for GSM Evolution) A wireless technology that can provide fast data transfer and Internet access with rates up to 236.8 Kbps.

My Treo 750 won't connect to the Internet

Your Treo 750 supports GPRS or UMTS wireless data networks. To connect to the Internet, you must subscribe to data services with AT&T.

- Contact AT&T to verify that your subscription plan includes data services and that these services have been correctly activated. AT&T should also be able to tell you if there are any outages in your location.

- Press and hold **Power/End** to turn off your phone. Then press and hold the same button to turn it back on.
- Perform a soft reset (see [Performing a soft reset](#)).
- Confirm that data services are correctly configured on your Treo 750 by doing the following:
 - Press **Start** and select **Settings**.
 - Select the **Connections** tab, and then select **Connections** .
 - On the **Tasks** tab, select **Manage existing connections**.
 - If AT&T appears in the list, press **OK** . If not, contact AT&T for assistance.

I can't send or receive text or multimedia messages

- Make sure your phone is on (see [Turning your Palm® Treo™ 750 smart device on/off](#)).
- Contact AT&T to verify that your plan includes messaging services, that these services have been correctly activated, and that they are available at your location. (AT&T should be able to tell

you if messaging services have been experiencing transmission delays.)

- If possible, contact the recipient or sender of the message, and make sure the receiving device can handle the type of message you're sending.
- If a text message arrives but does not display a notification, perform a soft reset (see [Performing a soft reset](#)).

I can't make or receive calls using a hands-free device with Bluetooth® wireless technology

Verify all of the following:

- The **Turn on Bluetooth** box is checked in Bluetooth Settings.
- Your Bluetooth device is charged and turned on.
- Your Treo 750 is within range of the hands-free device. Bluetooth range is up to 30 feet (10 meters) in optimum environmental conditions, which include the absence of the following: obstacles, radio interference from nearby electronic equipment, and other factors.
- The Bluetooth Settings screen is closed.

- You are away from other devices using the 2.4 GHz radio frequency, such as cordless phones, microwaves, and Wi-Fi equipment. If this is impossible, move the phone closer to the hands-free device.
- The device specifications are compatible with your Treo 750.

I lost the connection between my Treo 750 and my Bluetooth headset

- 1 Press **Start** , and then select **Settings**.
- 2 Select the **Connections** tab, and then select **Bluetooth**.
- 3 Select **Devices** tab.
- 4 Select your headset name from the list.
- 5 In **Partnership Settings**, make sure the **Hands Free** option box is checked.
- 6 Select **Save**.
- 7 Highlight the headset name.
- 8 Press and hold **Center**  to open the shortcut menu, and then select **Set as Hands-Free**.
- 9 Test your headset by making or receiving a call.

If the headset still doesn't work, delete the existing partnership and create a new one. To delete the partnership:

- 1 Press **Start** , and then select **Settings**.
- 2 Select the **Connections** tab, and then select **Bluetooth**.
- 3 Highlight the headset device name.
- 4 Press and hold **Center**  to open the shortcut menu, and then select **Delete**.
- 5 Create a new partnership (see [Connecting to devices with Bluetooth® wireless technology](#)).

Synchronization

Synchronization enables you to back up the information on your Treo 750 onto your computer or your server. If you ever need to perform a hard reset or otherwise erase all your information on your Treo 750, you can synchronize your Treo 750 with your computer to restore the info. To make sure

you always have an up-to-date backup of your info, synchronize frequently.

You can synchronize email and other information directly with Microsoft Exchange Server 2003 with Service Pack 2 using Microsoft Exchange ActiveSync®, or you can synchronize your Treo 750 with your computer, using the ActiveSync desktop synchronization software from the Windows Mobile Getting Started Disc.

DID YOU KNOW? You can go to the Windows website for more information at www.windowsmobile.com.

DID YOU KNOW? A common cause of sync problems is the presence of protective software, such as VPNs or firewalls, on your computer or network.

ActiveSync desktop software

This section covers issues with synchronizing using ActiveSync desktop software. See [Exchange ActiveSync \(wireless synchronization\)](#) for help with direct wireless synchronization with an Exchange Server.

ActiveSync desktop software does not respond to sync attempt

As you complete the following steps, synchronize after each step. If the synchronization is successful, you do not need to complete the remaining steps.

- 1 Verify that the USB sync cable is securely connected at all points (see [Setting up your computer for synchronization](#)).
- 2 Look for the ActiveSync icon  at the top of your Treo 750 screen and the ActiveSync icon  in the taskbar on your computer to make sure ActiveSync desktop software is running on your computer. If one or both icons if not displayed, do the following:

Treo 750: Press **Start** , select **Programs**, and then select **ActiveSync**. Select **Menu**  (right action key), and then select **Connections**. Make sure the **Synchronize all PCs using this connection** box is checked, and that **USB** is selected from the list.

Computer: Click **Start**, navigate to **Programs**, and then select **Microsoft ActiveSync**.

- 3 Double-click the **ActiveSync icon**  in your taskbar. From the File menu, select **Connection Settings**. Make sure the **Allow USB connections** box is checked, and then click **Connect**.
- 4 Perform a soft reset (see [Performing a soft reset](#)).
- 5 Restart your computer and make sure ActiveSync desktop software is running.
- 6 If problems persist and you're synchronizing through a USB hub, try connecting the sync cable to a different USB port or directly to your computer's built-in USB port.
- 7 If you're already synchronizing through a built-in USB port on the front of your computer, move the sync cable to a USB on the back of your computer (if your computer has USB ports in both places).
- 8 Uninstall the desktop software that came with your Treo 750, and then insert the Windows Mobile Getting Started Disc, which came with your Treo 750, and repeat the installation process (see [Reinstalling the desktop software](#)).

- 9** Delete the existing partnership between your Treo 750 and your computer and create a new one by doing the following:
- Disconnect your Treo 750 and your computer from the sync cable.
 - Right-click the gray **ActiveSync icon**  in the taskbar in the lower-right corner of your computer screen, and then select **Open Microsoft ActiveSync**.
 - Click **File**, and then click **Delete Mobile Device**. When asked to confirm, click **Yes**.
 - Connect your Treo 750 and your computer to the sync cable.
 - When the Synchronization Setup Wizard appears, follow the steps to establish a sync relationship between your Treo 750 and your computer.
- 10** If your organization uses a firewall or a VPN connection, synchronizing with ActiveSync may not work. Go to www.microsoft.com and search for the

following topics to help with specific firewall setup situations:

- ActiveSync USB Connection Troubleshooting Guide
 - ActiveSync with Sygate Personal Firewall
 - ActiveSync with TrendMicro PC-cillin Internet Security
 - ActiveSync with Norton Personal Firewall
 - ActiveSync with Zone Alarm Security Suite
 - ActiveSync with McAfee Personal Firewall
 - ActiveSync with Windows Firewall
- 11** Verify with your computer hardware vendor that your operating system supports your internal USB controller.
- Synchronization finishes but info doesn't appear where it should**
- With the included software, your Treo 750 can synchronize with the root folders of Contacts, Calendar, Tasks, and Notes. If you want to synchronize with a global Exchange Address Book, you must copy the addresses to your

local Contacts list in Microsoft Office Outlook (right-click the addresses and select Add to Personal Address Book).

- Microsoft Office Outlook subfolders and public folders are not accessible with the included software. You may want to use a third-party solution instead.
 - If you're trying to sync offline, be sure to set your Microsoft Office Outlook Calendar, Contacts, Notes, and Tasks to be available offline.
 - If you're still having problems, try the following:
- 1 Make sure you're synchronizing with the intended desktop personal information manager (PIM). The Windows Mobile Getting Started Disc lets you synchronize with Microsoft Office Outlook for Windows. If you use a different PIM, you need to install third-party software to synchronize. For more information, consult the company that makes the PIM.
 - 2 Open ActiveSync desktop software on your computer, and make sure the necessary synchronization settings are set to synchronize the files.

- 3 Uninstall ActiveSync desktop software, reboot your computer, and then insert the Windows Mobile Getting Started Disc, which came with your Treo 750, and repeat the installation process (see [Reinstalling the desktop software](#)).

Synchronization starts but doesn't finish

Make sure that you installed the desktop software that came with your Treo 750. If you're not sure whether this software is installed, reinstall it (see [Reinstalling the desktop software](#)).

My video and music files won't sync

- 1 Make sure you have Windows Media Player 10 installed on your computer.
- 2 Reinstall your synchronization software from the Windows Mobile Getting Started Disc, which came with your Treo 750 (see [Reinstalling the desktop software](#)). Media file synchronization fails if you installed the synchronization software before you installed Windows Media Player 10.

My appointments show up in the wrong time slot after I sync

- 1 Make sure that you installed the desktop software that came with your Treo 750. If you're not sure whether this software is installed, reinstall it (see [Reinstalling the desktop software](#)).
- 2 Open Microsoft Office Outlook and correct the wrong entries.
- 3 Manually enter any information you added to your Treo 750 since the last time you synchronized.
- 4 Synchronize your phone and your computer.

You should now be able to assign time zones to your events without encountering this problem.

My scheduled sync doesn't work

By default, a scheduled sync does not work while you are roaming. This is to prevent roaming charges on your account. If roaming charges are not a concern, follow these steps to continue your sync schedule while roaming:

- 1 Press **Start**  and select **Programs**.
- 2 Select **ActiveSync** .
- 3 Press **Menu**  (right action key) and select **Schedule**.
- 4 Check the **Use above setting when roaming** box.
- 5 Press **OK** .

An alert tells me that ActiveSync encountered a problem on the server

There is a temporary problem with the server or the server may be temporarily overloaded. Try again later, and if the problem persists, contact your system administrator.

An alert tells me that there is not enough free memory to sync my info

ActiveSync ran out of storage space. Try the following:

- 1 Go to Memory Settings and close all running programs. See [Closing applications](#) for details.
- 2 If the problem persists, see [Making room on your Treo 750](#) for suggestions on other ways to free up space on your Treo 750.

An alert tells me that ActiveSync encountered a problem with [item type] [item name]

An error occurred during the sync of a single item. This error can usually be corrected only by removing the item that caused the error. If you sync again to see if the error persists, be aware that items causing this type of error are skipped and do not show up again.

My Today screen settings are not restored after a hard reset

Settings such as the background image and plug-in choices are not backed up during synchronization, so they can't be restored after a hard reset. If you use a backup utility, you may be able to restore a backup to recover your Today screen setting and other additional info.

Exchange ActiveSync (wireless synchronization)

This section covers issues with direct wireless synchronization with an Exchange Server. See [ActiveSync desktop software](#) for help with synchronizing using ActiveSync desktop software.

TIP If you are synchronizing with an Exchange Server and you're unable to change your lock settings, check with your system administrator to find out if a systemwide locking policy is in place.

An alert tells me that the server could not be reached

Your Treo 750 had to wait too long to connect to the Exchange Server. The connection may have been lost, the server may be temporarily overloaded, or the server may have encountered an internal error. Check your Exchange Server name and proxy server settings (see [Setting up wireless synchronization](#)), and try again later.

An alert tells me that my account information could not be detected

When you set up the Exchange Server sync options, the credentials page was left blank. Correct the credentials (see [Setting up wireless synchronization](#)), or set up your Treo 750 to sync only with a computer, and try to sync again.

An alert tells me the device timed out while waiting for credentials

The Exchange Server credentials screen was left open too long. Re-enter the Exchange Server credentials, and try to sync again.

Email

NOTE For troubleshooting info on Xpress Mail, go to:
<https://xpressmail.cingular.com/subscriber>

I have problems using my account

Occasionally you may experience problems using an email account after you set it up. If you followed the account setup procedure and are experiencing problems in using the account, verify that the account complies with your email provider's requirements by following these steps:

- Verify both your password and your username for your email account.
- Some email service providers require you to be on their network to use your email account. If this is the case, be

sure to use your provider's network as the connection type for the account.

- Some email service providers have other requirements specific to their service. For example, Yahoo! requires you to set up POP mail forwarding for your Yahoo! account to download email messages to your Treo 750. Check with your service provider to see if any provider-specific requirements exist.
- Service provider settings frequently change. If your email account was working but you are currently experiencing problems, check with your service provider to see if any of the account settings have changed.

I have problems sending and receiving email

Short periods of time when email is unavailable are common due to server problems or poor wireless coverage. If you have problems sending or receiving mail for an extended period of time, check with your ISP or email service provider to verify that the service is working properly.

Scheduled email synchronization is not working

If email synchronization is occurring and you turn your Treo 750 off or the connection to your email service provider is disconnected, the synchronization fails.

- Check the synchronization schedule to make sure that email sync is set to occur at the expected day and time. See [Setting the synchronization schedule](#) for details.
- Press **Start** , select **Programs**, and then select **ActiveSync** . Press **Menu**  (right action key) and select **Configure Server**. Make sure the verify password setting is on. This is required for over-the-air synchronization.

I have problems sending email

If you are able to receive email messages but cannot send them, try these steps, in turn:

- Make sure your ISP or email provider allows you to access email on a Treo 750. Some providers do not offer this option at all; other providers require an

upgrade for accessing email on a Treo 750.

- Turn on ESMTP. Many services require authenticated access, or ESMTP, to use their SMTP servers.
- Press **Start** , select **Programs**, and then select **ActiveSync** . Press **Menu**  (right action key) and select **Configure Server**. Make sure the **SSL** box is checked.
- Enter the name of a different outgoing mail server for sending mail. Many ISPs, such as cable companies, require that you have an Internet connection to their network to send email through their servers. In this case, you can almost always receive email from these accounts, but if you want to send email, you must send it through another server.

My vCard or vCal email attachment isn't forwarding correctly

Microsoft Office Outlook provides several features that work with email client software on a Windows computer. For these features to work correctly, the email

client software must be properly set up. Follow these steps to check the settings:

- 1 Click **Start** on your computer, and then select **Settings**.
- 2 Select **Control Panel**.
- 3 Select **Internet Options**, and then click the **Programs** tab.
- 4 Make sure that the email field is set to the correct email client software.
- 5 Click **OK**.
- 6 Start the email client software and make sure it is configured as the default MAPI client. Consult the documentation for your desktop email application for more information.

When I sync with my Exchange Server my info is not downloading to my Treo 750

Check with your system administrator to obtain the name of the mail server that offers you wireless access to the corporate mail system. If you cannot obtain the name of this server (some companies do not give it out, because they do not want wireless access to their servers), you cannot use Exchange ActiveSync to synchronize with

the Exchange Server. You can also check the following setting:

- 1 Press **Start**  and select **Programs**.
- 2 Select **ActiveSync** .
- 3 Press **Menu**  (right action key) and select **Configure Server**.
- 4 Make sure the **SSL** box is checked.

Web

I can't access a page

First, make sure you have Internet access: Open Internet Explorer Mobile and try to view a web page you've loaded before. To ensure that you're viewing the page directly from the Internet, press **Menu**  (right action key) and select **Refresh**. After confirming your Internet connection, try to view the page in question again. If it comes up blank, press **Menu**  (right action key) and select **Refresh**.

If you're still having trouble, the page may contain elements that are not supported by Internet Explorer Mobile, such as Flash,

Shockwave, VBScript, WML script, and other plug-ins.

Some websites use a redirector to their true home page (for example, if you enter the address <http://www.Palm.com/support> it may resolve to <http://www.Palm.com/us/support>). If Internet Explorer Mobile can't follow the redirect, try using a desktop browser to see the landing page of the redirector, and enter that address in Internet Explorer Mobile.

TIP Your Treo 750 can open your email application when you select an email address on a web page. If nothing happens when you select the link, try setting up your email application first.

An image or map is too small on my Treo 750 screen

Internet Explorer Mobile has several viewing modes: One Column, Default, Desktop, and Full Screen. Switch to Desktop to see the full-size image (see [Viewing a web page](#)).

A secure site refuses to permit a transaction

Some websites don't support certain browsers for transactions. Please contact the site's webmaster to make sure the site allows transactions using Internet Explorer Mobile.

Camera

If your Treo 750 does not have a built-in camera, the information in this section about taking pictures does not apply to you.

Here are some tips for taking good pictures with the built-in camera:

DID YOU KNOW? Pictures are 16-bit color. Resolution settings range from 1280 x 1024 to 160 x 120 pixels (1.3 megapixels to VGA). Video resolution settings range from 352 x 288 to 176 x 144 pixels. You can change the resolution setting by pressing **Menu** (right action key) and selecting **Resolution** (still images) or **Quality** (video).

- Clean the camera's lens with a soft, lint-free cloth.
- Take pictures in bright lighting conditions. Low-light images may be grainy, due to the sensitivity of the camera.
- Hold the camera as still as possible. Try supporting your picture-taking arm against your body or a stationary object (such as a wall).
- Keep the subject of the pictures still. Exposure time is longer with lower light levels, so you may see a blur.
- For best results, verify that you have the brightest light source coming from behind you, lighting the subject's face. Avoid taking indoor pictures with the subject in front of a window or light.
- Make sure the subject is at least 18 inches (0.5 meters) away from the camera to ensure good focus.

Remember that when you synchronize, your Camera images are stored in the C:\Documents and Settings\<Username>\My Documents\Treo My Documents folder on your hard drive (see [Camera](#)).

The Camera preview image looks strange

Some third-party applications overwrite the color settings on your Treo 750 with their own 8-bit color settings. This can affect the Camera Preview Mode. Delete third-party applications one by one until the preview image improves.

Third-party applications

Sometimes third-party applications can cause conflicts on your Treo 750. Third-party applications that modify wireless features may affect the performance of your Treo 750 and may require extra troubleshooting. Use caution when installing the following types of applications:

- Ringtone managers
- Caller ID applications
- Instant messaging
- Applications that modify when your phone or data connections turn on or off and how your phone behaves

If you recently installed an application and your Treo 750 seems to be stuck, try the following:

- 1 Perform a soft reset (see [Performing a soft reset](#)).
- 2 Make sure the third-party application is compatible with the Windows Mobile version 5.2 operating system on your Treo 750.
- 3 Delete the most recently installed application from your Treo 750 (see [Removing applications](#)).
- 4 If the problem persists, perform another soft reset.
- 5 If possible, synchronize or use a backup utility to back up your most recent info.
- 6 Perform a hard reset (see [Performing a hard reset](#)).
- 7 Synchronize or restore your backup to restore the info in your built-in applications.
- 8 If the problem is resolved, begin reinstalling your third-party applications one at a time.

- 9 If the problem recurs, delete the last application you installed and report the problem to its developer.

Getting more help

Contact the vendor of any third-party software if you require further assistance.

TIP Remember that not all third-party applications were written with the Treo 750 Treo 750 keyboard and 5-way navigator in mind. You may encounter strange behavior or errors in these applications if you use the keyboard and the 5-way navigator.

Making room on your Treo 750

If you store a large number of records, or install many third-party applications, the internal memory on your Treo 750 may fill up. Here are some common ways to clear space on your Treo 750:

- **Camera:** Large images or videos take up a lot of memory. Move images to an

expansion card or delete images from your Treo 750 (see [Pictures & Videos](#)).

- **Messaging:** Multimedia content and email attachments can consume excessive memory. Move multimedia content and attachments to an expansion card, or delete large files from your Treo 750 (see [Message status icons](#)). You may also want to empty the deleted items folder.
- **Internet:** If you save links to pages you've visited in Internet Explorer Mobile, you may want to clear all recent pages (see [Customizing your Internet Explorer Mobile settings](#)).
- **Third-party applications:** You can delete infrequently used applications or move them to an expansion card (see [Copying or moving applications and files between your Treo 750 and an expansion card](#)).

Also, remember that your Treo 750 includes an expansion card slot, and that you can store applications and information on expansion cards. However, you still need free memory on the Treo 750 itself to run applications from an expansion card.

Voice quality

Is the other person hearing an echo?

- Try decreasing the volume on your Treo 750 to avoid coupling or feedback on the other person's end. This applies to both the speakerphone and to the handset earpiece.
- Position the Treo 750 closer to your ear to prevent sound leaking back to the microphone. Keep your hand away from the microphone hole, which is on the lower-right side of your Treo 750.
- If you're using Speakerphone mode with your Treo 750 lying on a flat surface, try turning the Treo 750 "face down" (screen facing the surface).

Are you hearing your own voice echo?

Ask the other person to turn down their volume or to hold the Treo 750 closer to their ear.

Is your voice too quiet on the other end?

Be sure to hold the bottom of the Treo 750, or the hands-free microphone, close to your mouth.

Check the signal strength indicator. If the signal is weak, try to find an area with better coverage.

Where to learn more

For a quick introduction

- **Quick Tour:** The Quick Tour introduces you to many of your Palm® Treo™ 750 smart device's features. It is already installed on your Treo 750, and you can open it any time. Press **Start** , select **Programs**, and then select **Quick Tour** .

While using your Treo 750

- **On-device User Guide:** A copy of this guide is included on your Treo 750. The on-device guide is specially formatted for your Treo 750 screen. To view the on-device guide, press **Start**  and select **Help**.
- **Online support from Palm:** For up-to-date downloads, troubleshooting,

and support information, go to www.palm.com/us/support/treo/treo750cingular.

If you need more information

- **Books:** Many books on Windows Mobile® devices are available in local or online book retailers (look in the computers section), or visit www.palm.com/mytreo750cingular.
- **Online forums:** Consult online Treo 750 device user discussion groups to swap information and learn about topics you may find nowhere else. Visit www.palm.com/us/support/treo/treo750cingular for details.
- **Customer service from AT&T:** For questions about your mobile account or features, contact AT&T customer care at 1-866-246-4852 or dial 611 from your Treo 750.

Terms

ActiveSync®

The technology that exchanges and updates the information on your Palm® Treo™ 750 smart device with the information on your computer. To open ActiveSync on your computer, double-click the ActiveSync icon in the taskbar in the lower-right corner of your screen. If the icon does not appear, click Start, click All Programs (or navigate to the Programs group), and then select Microsoft ActiveSync. See [Installing the desktop synchronization software](#).

Alt (alternative) (Alt)

The key that you use to enter accented characters and symbols that do not appear on your keyboard. Press Alt (Alt), and then press a key on the keyboard to view the alternative characters available for that key. See [Entering other symbols and accented characters](#).

auto-off interval

The time of inactivity that passes before the screen on your Treo 750 turns off. The

wireless features on your Treo 750 are unaffected by this setting. See [Optimizing power settings](#).

beam

The process of sending or receiving an entry or application using the infrared port on your Treo 750 or using Bluetooth® wireless technology. See [Beaming information](#).

Bluetooth® wireless technology

Technology that enables devices such as smart devices, mobile phones, and computers to connect wirelessly to each other so that they can exchange information over short distances. For more info, visit www.bluetooth.com. See [Connecting to devices with Bluetooth® wireless technology](#).

desktop software

A PIM application for computers, such as Microsoft Outlook®, that helps you manage your personal information and keep it synchronized with your Treo 750. See [Installing the desktop synchronization software](#).

dialog box

A set of options and command buttons that is enclosed by a border and that enables you to carry out a specific task.

EDGE (Enhanced Data rates for GSM Evolution)

An enhanced version of GPRS that delivers data speeds that are up to three times faster than standard GPRS connections, with rates up to 236.8 Kbps. (Additional charges may apply.) See [What are all those icons?](#)

GPRS (General Packet Radio Service)

A mobile Internet connectivity technology that allows persistent data connections. (Additional charges may apply.) See [What are all those icons?](#)

infrared (IR)

A way of transmitting information using light waves. You use the IR port on your Treo 750 to transfer information between other IR devices within a short radius. See [Beaming information](#).

Lithium Ion (Li-Ion)

The rechargeable battery technology used in your Treo 750. See [Charging the battery](#).

Microsoft Exchange ActiveSync®

Technology that allows your Treo 750 to synchronize email, contacts, calendar events, and tasks wirelessly with Microsoft Exchange Server 2003. See [Setting up wireless synchronization](#).

MMS (Multimedia Messaging System)

An enhanced messaging system that enables you to send pictures, animations, and ringtones almost instantly. See [Creating and sending a multimedia message](#).

Mobile Device

The component on your Windows computer that enables you to install applications and other information on your Treo 750. To access it, open Windows Explorer or My Computer and look for the Mobile Device  entry. See [Installing applications from your computer](#).

Option

Press this key and then a second key to enter the character or to access the feature displayed above the letter on the second key. See [Entering numbers, punctuation, and symbols](#).

partnership

The connection that you make between two devices by means of Bluetooth wireless technology. The devices recognize each other because each device finds the same passkey on the other device. After you create a partnership between the devices, you no longer need to enter the passkey. Partnership is also known as paired relationship, pairing, trusted device, and trusted pair on some devices. See [Connecting to devices with Bluetooth® wireless technology](#).

Phone Off

Appearing on the Today screen, this indicates that your Treo 750 is not connected to any network, and you cannot make calls except those to emergency numbers. You can still use the organizer features, however. To turn the phone on/off, go to the Wireless Manager. See [Turning your phone on](#).

Phone/Send

The button on your Treo 750 that provides quick access to your Today screen and dials once you've entered a phone number. See [Making calls from the Today screen](#).

PIM (personal information manager)

A genre of software that includes applications such as Microsoft Outlook, Palm® Desktop software, Lotus Notes, and ACT!. PIMs generally store contacts, schedules, tasks, and memos.

PIN (personal identification number)

The password assigned to your SIM card by AT&T. Turning on the PIN lock secures your wireless account. See also PUK. See [Locking the SIM card](#).

PIN2 (personal identification number 2)

A code that protects certain network settings such as fixed dialing.

PUK (PIN unlock key)

A special extended password assigned to your SIM card. If you enter the wrong PIN more than the allowed number of times, your SIM is blocked and you must call AT&T for the PUK. See [Locking the SIM card](#).

SIM (Subscriber Identity Module) card

The smartcard, inserted into your Treo 750, that contains your mobile account information, such as your phone number and the services to which you subscribe.

Addresses and phone numbers and SMS messages can also be stored on the SIM card. See [Inserting the SIM card and battery](#).

SMS (Short Messaging Service)

The service that exchanges short text messages almost instantly between mobile devices. Your Treo 750 can send and receive text messages while you are on a call. See [Creating and sending a text message](#).

Start

The menu on your Treo 750 from which you can open all applications. See [Opening applications](#).

streaming

Technology that enables you to access media content—for example, watch video or listen to an audio program—directly from the Internet on your Treo 750 without needing to download a file to save on your Treo 750. See [Viewing a video](#).

synchronization

The process in which information that is entered or updated on your Treo 750, your computer, or a server is instantly updated

in one of the other locations either wirelessly or by means of a cable connection. See [Synchronizing information](#).

UMTS (Universal Mobile Telecommunications System)

One of the third-generation (3G) mobile phone technologies that is designed for high-speed data transfer with rates up to 384 Kbps. It uses W-CDMA as the underlying technology. See [What are all those icons?](#)

username

The name associated with your Treo 750 that distinguishes it from other Windows Mobile® devices. If you install ActiveSync® desktop software, you are asked to give your Treo 750 a username. If you only synchronize wirelessly using Microsoft Exchange ActiveSync, you do not need to give your Treo 750 a username. See [Installing the desktop synchronization software](#).

Windows Mobile

The operating system of your Treo 750 Treo 750. Your Treo 750 uses Windows Mobile® 5.2. When installing third-party applications to your Treo 750, be sure to install only

apps that use Microsoft Windows Mobile 5.0 software for Pocket PC Phone Edition. The Microsoft Windows Mobile 5.0

software for Smartphone is not compatible with your Treo 750. See [Installing third-party applications](#).

Regulatory information

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B computer peripheral, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Safety Exposure

To Radio Frequency Energy (SAR) Radio transmitting devices radiate Radio Frequency (RF) energy during its operation. RF energy can be absorbed into the human body and potentially can cause adverse health effects if excessive levels are absorbed. The unit of measurement for human exposure to RF energy is "Specific Absorption Rate" (SAR).

The Federal Communications Commission (FCC), Industrie Canada (IC), and other agencies around the world have established limits that incorporate a substantial safety margin designed to assure the safety of all persons using this equipment.

In order to certify this unit for sale in the US, Canada and Europe this unit has been tested for RF exposure compliance at a qualified test laboratory and found to comply with the regulations regarding exposure to RF Energy.

SAR was measured with the unit transmitting at its maximum certified RF power. Often, however, during normal operation the unit will transmit much less than maximum power. Transmit power is controlled automatically and, in general is reduced as you get closer to a cellular base station. This reduction in transmit power will result in a lower RF energy exposure and resulting SAR value.

FCC RF Safety Statement

In order to comply with FCC RF exposure safety guidelines, users MUST use one of the following types of bodyworn accessories.

- A Palm® brand body-worn accessory that has been tested for SAR compliance and is intended for use with this product.
- An accessory that contains NO metal (snaps, clips, etc) and provides AT LEAST 1.5 cm of separation between the users body and the unit.

Do NOT use the device in a manner such that it is in direct contact with the body (i.e. on the lap or in a breast pocket). Such use will likely exceed FCC RF safety exposure limits. See www.fcc.gov/oet/rfsafety for more information on RF exposure safety.

Responsible party

(North America)
Palm Inc.
950 W. Maude Ave.
Sunnyvale, CA 94085
USA
www.Palm.com

(Europe)
Roy Bedlow
Buckhurst Court
London Road
Wokingham, Berkshire RG40 1PA,
UK

Antenna Care/Unauthorized Modifications

Use only the supplied integral antenna. Unauthorized antenna modifications or attachments could damage the unit and may violate FCC regulations. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Potentially Unsafe Areas

Potentially explosive atmospheres: Turn off your Treo 750 when you are in any areas with a potentially explosive atmosphere, such as fueling areas (gas or petrol stations) or storage facilities for fuel or chemicals.

Declaration of Conformity

Treo 750

Palm declares that the above model of Treo 750 is compliant with the regulations below. The declaration applies to the Treo 750 and its associated accessories (power supply, headset, and USB cable) where applicable.

To view the highest reported (FCC) SAR values of the Treo™ 750, visit www.palm.com/38057

FCC OET Bulletin 65 Supplement C

Safety: EN 60950: 2000 (Jan-2000)

Radiated Emissions: EN 55022

FCC ID: O8F-KITT

IC ID: 3905A-KITT



Using TTY

A TTY (also known as TDD or text telephone) is a telecommunications device that allows people who are deaf or hard of hearing, or who have speech or language disabilities, to communicate by telephone.

Your Palm Treo 750 is compatible with select TTY devices. You can connect a TTY/TDD machine to your Treo 750 through the headset jack, but you cannot use your headset jack with a headset or hands-free kit while this mode is enabled. Please check with the manufacturer of your TTY device for connectivity information and to ensure that the TTY device supports digital wireless transmission.

To use TTY, you may need to make additional arrangements with AT&T. Please contact AT&T's customer service department for more information.

- 1 Press the Start button and select Settings.
- 2 Select Personal, and then select Phone.
- 3 Select Phone.
- 4 Select the TTY/TDD list, and then select either Default mode, VCO mode, or HCO mode.
- 5 Press OK. A keyboard icon appears at the top of your Today screen whenever TTY is enabled.

To disable TTY, repeat steps 1 and 2.

Operational Warnings

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION. Read this information before using your integrated multi-service portable radio.

For the safe and efficient operation of your radio, observe these guidelines:

Potentially Unsafe Areas/Potentially explosive atmospheres Obey all signs and instructions regarding turning off your Treo 750. In particular, turn off your Treo 750 when you are in any areas with a potentially explosive atmosphere, such as fueling areas

(gas or petrol stations, below deck on boats), storage facilities for fuel or chemicals, blasting areas and areas near electrical blasting caps, and areas where there are chemicals or particles (such as metal powders, grains, and dust) in the air.

Interference to Medical and Personal Electronic Devices Most but not all electronic equipment is shielded from RF signals and certain electronic equipment may not be shielded against the RF signals from your Treo 750.

Pacemakers The Health Industry Manufacturers Association recommends that a minimum separation of six inches (6") be maintained between a Treo 750 and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by the recommendations of Wireless Technology Research.

Persons with pacemakers should:

- ALWAYS keep the Treo 750 more than six inches from their pacemaker when the Treo 750 is turned ON.
- Not carry the Treo 750 in a breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn the Treo 750 OFF immediately if you have any reason to suspect that interference is taking place.

Audio Safety Some hearing aids may be affected by some digital Treo 750 models. You may want to consult your doctor in the event of you experience interference with your hearing aid while using your Treo 750. When using the speakerphone feature, it is recommended that you place your Treo 750 at a safe distance from your ear.

Other Medical Devices If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your Treo 750 OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Interference to Other Electronic Devices RF energy may affect improperly installed or inadequately shielded electronic operating and entertainment systems in motor vehicles. Check with the manufacturer or representative to determine if these systems are adequately shielded from external RF energy. Also check with the manufacturer of any equipment that has been added to the vehicle.

Repetitive Motion Injuries When using the keyboard or playing games on your Treo 750, you may experience discomfort in your neck, shoulders, hands, arms, or other parts of the body. To avoid any injury, such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorder, make sure to take necessary breaks from use, take longer rests (such as several hours) if discomfort or tiring begins, and see a doctor if discomfort persists.

Blackouts and Seizures Blinking lights, such as those experienced with television or playing video games, may cause some people to experience blackout or seizure, even if never experienced before. In the event a Treo 750 user should experience any disorientation, loss of awareness, convulsion, eye or muscle twitching or other involuntary movements, stop use immediately and consult a doctor. Individuals with personal or family history of such events should consult a doctor before using the device. To limit the possibility of such symptoms, wherever possible every hour take a minimum of 15 minutes, use in a well lit area, view the screen from the farthest distance and avoid exposure to blinking lights if you are tired.

Aircraft While in aircraft, follow all instructions regarding the operation of your Treo 750. Use of your Treo 750 while on board on aircraft must be done in accordance in compliance with airline instructions and regulations.

Vehicles with Air Bags Your Treo 750 should not be placed in a position that would affect the operation of air bag deployment or in a position that, should the air bag inflate, could propel the Treo 750. Air bags will inflate with great force and care should be taken to protect within a vehicle that has air bags.

Battery Your Treo 750 includes an internal lithium ion battery. Please note that use of certain data applications can result in heavy battery use and may require frequent battery charging. Any disposal of the Treo 750 must comply with laws and regulations pertaining to lithium ion batteries.

Driving Safety Tips Overview

Always obey all laws and regulations on the use of the Treo 750 in your driving area.

Safety — Your most important call. The Wireless Industry reminds you to use your Treo 750 safely when driving.

- 1 Get to know your Treo 750 and its features, such as speed-dial and redial.
- 2 When available, use a hands-free device.
- 3 Position your Treo 750 within easy reach.
- 4 Let the person you are speaking to know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.
- 5 Do not take notes or look up phone numbers while driving.
- 6 Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic.
- 7 Do not engage in stressful or emotional conversations that may divert your attention from the road.
- 8 Dial 9-1-1 to report serious emergencies -it's free from your Treo 750!
- 9 Use your Treo 750 to help others in emergencies.
- 10 Call roadside assistance or a special non-emergency wireless number when necessary.

Driving Safety Tips Details

- 1 Get to know your Treo 750 and its features such as speed-dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most Treo 750 models offer including, automatic redial and memory dial-most Treo 750 models can store up to 99 numbers in memory dial. Also, work to memorize the Treo 750 keypad so you can use the speed-dial function without taking your attention off the road.
- 2 When available, use a hands-free device. A number of hands-free Treo 750 accessories are readily available today. Whether you choose an installed mounted device for your Treo 750 or a

speaker phone accessory, take advantage of these devices if available to you.

- 3 Position your Treo 750 within easy reach. Make sure you place your Treo 750 within easy reach and where you can grab it without removing your eyes from the road. If you get an incoming call at an inconvenient time, let your voice mail answer it for you.
- 4 Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking to know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.
- 5 Do not take notes or look up phone numbers while driving. If you are reading an address book or business card while driving a car, or writing a "to do" list, then you are not watching where you are going. It's common sense. Don't get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.
- 6 Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip, or attempt to coincide your calls with times you may be stopped at a stop sign, red light or otherwise stationary. But if you need to dial while driving, follow this simple tip-dial only a few numbers, check the road and your mirrors, then continue.
- 7 Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and driving do not mix-they are distracting and even dangerous when you are behind the wheel. Make people you are talking with aware you are driving and if necessary, suspend phone conversations which have the potential to divert your attention from the road.
- 8 Use your Treo 750 to call for help. Your Treo 750 is one of the greatest tools you can own to protect yourself and your family in dangerous situations-with your Treo 750 at your side, help is only three numbers away. Dial 9-1-1 in the case of fire, traffic accident, road hazard, or medical emergencies. Remember, 9-1-1 is a free call on your Treo 750!

- 9 Use your Treo 750 to help others in emergencies. Your Treo 750 provides you a perfect opportunity to be a “good Samaritan” in your community. If you see an auto accident, crime in progress, or other serious emergency where lives are in danger, call 9-1-1, as you would want others to do for you.
- 10 Call roadside assistance or a special wireless non-emergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call to 9-1-1. But you can still use your Treo 750 to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.


NOTICE FOR CONSUMERS WITH HEARING DISABILITIES

Digital Wireless Phones to be Compatible with Hearing Aids On July 10, 2003, the Federal Communications Commission (FCC) modified the exemption for wireless phones under the Hearing Aid Compatibility Act of 1988. This means that wireless phone manufacturers and service providers must make digital wireless phones accessible to individuals who use hearing aids.

For more information, please go to the FCC's Consumer Alert on accessibility of digital wireless phones at <http://www.fcc.gov/cgb/consumerfacts/accessiblerecordings.html>.

Wireless telephones are hand-held phones with built-in antennas, often called cell, mobile, or PCS phones. These phones are popular with callers because they can be carried easily from place to place.

Wireless telephones are two-way radios. When you talk into a wireless telephone, it picks up your voice and converts the sound to radio frequency energy (or radio waves). The radio waves travel through the air until they reach a receiver at a nearby base station. The base station then sends your call through the telephone network until it reaches the person you are calling.

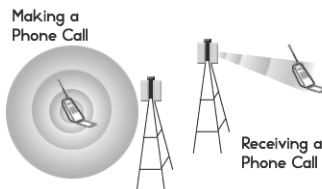

When you receive a call on your wireless telephone, the message travels through the telephone network until it reaches a base station close to your wireless phone. Then the base station sends out radio waves that are detected by a receiver in your telephone, where the signals are changed back into the sound of a voice.

The Federal Communications Commission (FCC) and the Food and Drug Administration (FDA) each regulate wireless telephones. FCC ensures that all wireless phones sold in the United States follow safety guidelines that limit radio frequency (RF) energy. FDA monitors the health effects of wireless telephones. Each agency has the authority to take action if a wireless phone produces hazardous levels of RF energy.

FDA derives its authority to regulate wireless telephones from the Radiation Control provisions of the Federal Food, Drug, and Cosmetic Act (originally enacted as the Radiation Control for Health and Safety Act of 1968). (<http://www.fda.gov/cdrh/comp/efrc.html>).

FCC derives its authority to regulate wireless telephones from the National Environmental Policy Act of 1969 (NEPA) and the Telecommunications Act of 1996 (<http://www.fcc.gov/telecom.html>). Updated 7/16/2003

Hands-Free Capability All CTIA Certified portable products provide the consumer with a toll-free number for the purchase of a compatible hands-free device. 1-800-881-7256

STATIC ELECTRICITY, ESD, AND YOUR PALM DEVICE

Electrostatic discharge (ESD) can cause damage to electronic devices if discharged into the device, so you should take steps to avoid such an occurrence.

Description of ESD Static electricity is an electrical charge caused by the buildup of excess electrons on the surface of a material. To most people, static electricity and ESD are nothing more than annoyances. For example, after walking over a carpet while scuffing your feet, building up electrons on your body, you may get a shock—the discharge event—when you touch a metal doorknob. This little shock discharges the built-up static electricity.

ESD-susceptible equipment Even a small amount of ESD can harm circuitry, so when working with electronic devices, take measures to help protect your electronic devices, including your Palm[®] device, from ESD harm. While Palm has built protections against ESD into its products, ESD unfortunately exists and, unless neutralized, could build up to levels that could harm your equipment. Any electronic device that contains an external entry point for plugging in anything from cables to docking stations is susceptible to entry of ESD. Devices that you carry with you, such as your Palm device, build up ESD in a unique way because the static electricity that may have built up on your body is automatically passed to the device. Then, when the device is connected to another device such as a docking station, a discharge event can occur.

Precautions against ESD Make sure to discharge any built-up static electricity from yourself and your electronic devices *before* touching an electronic device or connecting one device to another. The recommendation from Palm is that you take this precaution before connecting your Palm device to your computer, placing the device in a cradle, or connecting it to any other device. You can do this in many ways, including the following:

- Ground yourself when you're holding your device by simultaneously touching a metal surface that is at earth ground. For example, if your computer has a metal case and is plugged into a standard three-prong grounded outlet, touching the case should discharge the ESD on your body.
- Increase the relative humidity of your environment.
- Install ESD-specific prevention items, such as grounding mats.

Conditions that enhance ESD occurrences Conditions that can contribute to the buildup of static electricity in the environment include the following:

- Low relative humidity.
- Material type (The type of material gathering the charge. For example, synthetics are more prone to static buildup than natural fibers like cotton.)
- The rapidity with which you touch, connect, or disconnect electronic devices.

While you should always take appropriate precautions to discharge electricity, if you are in an environment where you notice ESD events, you may want to take extra precautions to protect your electronic equipment against ESD.

Precaution against hearing loss Protect your hearing. Listening to this device at full volume for a long period of time can damage your hearing.

A pleine puissance, l'écoute prolongée du baladeur peut endommager l'oreille de l'utilisateur. Consultez notre site web www.palm.com/fr pour plus d'informations.



Waste disposal Please recycle appropriately. For appropriate recycling and disposal instructions please visit: www.palm.com/environment.



Specifications

Radio	• Dual mode GSM/UMTS phone • GSM 850/900/1800/1900 quad band • UMTS 850/1900/2100 tri-band • GPRS Multi-slot Class 10, Class B • EDGE up to 59kbps per time-slot • UMTS PS data up to 384kbps DL
Phone features	• Personal speakerphone • Hands-free headset jack (2.5 mm, 3-barrel connector) • Microphone mute option • TTY compatible
Processor technology	• Samsung processor—300MHz
Expansion	• miniSD card slot
Battery	• Rechargeable Lithium Ion • 1200mAh power • Removable for replacement • 3 hours full charge time
Operating system	• Windows Mobile Edition 5.2. (Phone Edition)
Camera (not included on all Treo 750 models)	• Still image capture resolution:1280 x 1024, 1.3 megapixel • 2x digital zoom

Size	• 14.44 in. x 2.34 in. x 0.84 in. (112.9mm x 59.3mm x 21.3mm)
Weight	• 5.4 ounces (154 grams)
Connectivity	• Infrared (1.0 compliant) • Bluetooth® wireless technology (1.2 compliant)
Display	• Touch-sensitive LCD screen (includes stylus) • 65,536 colors (16-bit color) • Resolution: 240 x 240 • User-adjustable brightness
Keyboard	• Built-in QWERTY keyboard plus 5-way navigator • Backlight for low lighting conditions

Included software	• Today/Phone (includes Speed Dial and Dial Pad) • Messaging (text, multimedia, and email) • Internet Explorer Mobile (web browser) • Camera • Pictures & Videos • Windows Media Player Mobile • File Explorer • Contacts • Calendar • Tasks • Notes • Calculator • ActiveSync® • Excel Mobile • Word Mobile • PowerPoint Mobile • Voice Command • Quick Tour • Search • Terminal Services • Pictel PDF Viewer • Bluetooth Plug-in
System requirements	• Windows 2000 or XP (later versions may also be supported) • 32MB of available memory (RAM) • 170MB of free hard disk space • Available USB port
Operating and storage temperature range	• 32°F to 104°F (0°C to 40°C) • 5% to 90% RH

Index

SYMBOLS

! on battery icon 12

NUMERICS

112 calls 37, 216

1st day of week option 161

3GP files 144

3GPP files 104, 140

3GPP2 files 104, 140

5-way navigator 7, 19, 21,
250

911 calls 37, 216

A

AC charger 11

accented characters 28, 29
accessing

ActiveSync 74

alternate characters 28

applications 30, 212

calculator 203

Calendar application 156

Contacts application 153

Dial Pad 40

File Explorer 192

information 31, 223

instant messages 115

Internet Explorer 119

menu items 22, 23, 24

Messaging app 103

Notes application 165

on-device documentation
253

online address books 97

online forums 253

options in lists 24

Outlook folders 242

Palm online support 253

PDF Viewer 171

Phone Settings screen 15

Pictures & Videos

application 140

Quick Tour 253

remote files 227

speed-dial buttons 38

spreadsheet templates
180

Streaming Media

application 146

Tasks application 162

Tasks entry bar 164

the Internet 226, 237

Today screen 14, 31

web pages 119, 121, 123,
247

Wireless Manager 35

accessories 8

accounts

conference calls and 47

customer service support
for 253

missing phone numbers
and 16

preventing unauthorized
use of 216, 223

removing email 91

setting up email 91

setting up instant

messaging 115

troubleshooting 244, 245

Accounts tab 91, 96, 98

action keys 7, 22

actions 22, 209

activating items on screen 22

active call info 43

active calls. *See* phone calls

ActiveSync

defined 255

installing 70

opening 74

receiving email and 94

synchronizing with 69, 70,
74, 229, 239

- troubleshooting 229, 239–244
- ActiveSync icon 74, 77, 255
- ActiveSync Plug-in for Bluetooth 82
- Add a new VPN server connection option 227
- Add Contact prompt 45
- Add Favorite dialog box 122
- Add Media command 106
- Add Picture command 105
- Add Recipient command 103
- Add Server Source command 78
- Add Sound command 105
- Add to Contacts command 109
- Add to Favorites command 122
- Add to Personal Address Book command 242
- adding
 - a second call 46
 - applications 212
 - appointments 157, 158
 - attachments to email 93, 100, 192
 - bookmarks 121
 - bulleted or numbered lists 175
 - caller ID pictures 153
 - connections 227
 - contacts 45, 58, 153
 - document templates 173
 - expansion cards 199
 - files to playlists 148
 - folders 176
 - notes 154, 165, 166
 - online address book 96–97
 - passkeys 127, 128
 - signatures 98, 112
 - speed-dial buttons 49
 - spreadsheets 178
 - tasks 162
 - untimed events 158, 159
- address book 96, 97, 99, 156, 241
- Address List Lookup 191
- address messaging options 99
- Address tab 97, 99
- addresses
 - adding 153
 - checking for 99
 - copying 242
 - entering email 93, 99
 - entering web 32, 120
 - looking up corporate 191
 - multiple recipients and 104
 - selecting 22, 248
 - synchronizing 241
- adjusting screen brightness 210
- Advanced tab (Power Settings) 225
- advancing slides 177, 178
- After calls from numbers... option 59
- Agenda View (calendar) 156
- alarm clock 221
- alarm sounds 222
- alarms
 - adding 157, 163
 - setting 210, 221
 - turning on and off 209
- Alarms tab 222
- albums 140
- alert tones. *See* alarms; ringtones
- aligning the screen 211
- alignment settings
 - documents 175
 - spreadsheets 178
- Allow cookies check box 124

- Allow USB connections
 - check box 240
- Alt key 26, 255
- alternate characters 28, 29
- alternate characters list 28, 29
- AMR files 104
- animation 143, 177, 178
- anniversaries 159
- Answer button 41
- answering the phone 41, 46
- antenna 262
- Appearance tab 207, 211
- application icons 30, 212
- applications
 - See also* third-party applications
 - associating with buttons 212
 - battery life and 13
 - caution for hard resets and 231
 - choosing menu items in 23, 24
 - closing 30, 224
 - copying 202
 - customizing 212–216
 - deleting 196, 251
 - displaying 30, 224
 - downloading 193, 194
 - error reporting for 223
 - included with device 269
 - installing 193–194, 249, 250
 - losing information in 232
 - moving through 20, 21
 - moving to expansion cards 202
 - opening 30, 200, 212
 - phone calls and 44, 45
 - reinstalling 229, 232
 - running from expansion cards 201, 251
 - running multiple 30
 - selecting 30
 - storing 251
 - synchronizing information in 71, 84
 - troubleshooting 232, 234
 - turning sounds on or off for 209
 - viewing memory usage for 224
- Appointment tab 157
- appointments
 - adding 157
 - appearing in wrong time slots 243
 - deleting 161
 - hiding 159
 - marking as private 159
 - reminders for 157
 - scheduling repeating 158
 - viewing 156
- Appointments tab 161
- Area code option 155
- arrow icons 19
- ascending sort order 185
- ASF files 140
- Assign a program list 213
- AT&T
 - call forwarding and 48
 - conference calls and 47
 - customer support services for 253
 - TTY devices and 262
- attachments
 - adding 93, 100, 192
 - downloading 95, 96
 - embedded objects in 96
 - internal memory and 251
 - opening 95
 - storing 95, 100
 - troubleshooting 246
- Attendees option 159
- audio 41, 139, 144, 263
- auto-completion options 215

AutoCorrect command 143

Autofill option 183

AutoFilter command 185

AutoFilter settings

(spreadsheets) 179

auto-keyguard feature 216,
217

Auto-Keyguard list 217

Automatically download

MMS messages check
box 112

auto-off interval 255

available memory 224

available storage space 224

B

back view (device) 8

backgrounds 135, 142, 149,
207

backing up information 67,
229, 232

backlight (keyboard) 26, 225

backlight shut-off interval 27

Backspace key 22, 26, 28

backup and restore
application 77

backup utilities 229, 232,
244

backups, restoring 232, 244

battery

Bluetooth connections
and 126

charging 11–12

conserving power for 225

disposing of 233, 263

inserting 10

maximizing life of 13–14

purchasing 11

removing 231, 233

replacing 232–233

specifications for 267

viewing remaining power
for 225
viewing status of 64

battery door 9

battery door release 8

battery icon 12

Battery Power tab 27

battery status icons 64

Battery tab 225

Beam File command 197

Beam tab 199

Beam... command 198

beaming 14, 192, 197–199,
255

birthdays 159

blank screens 235

Block incoming calls list 59

Block outgoing calls list 59

blocking phone calls 59

Bluetooth connections

battery level and 126

battery life and 13

checking status of 55

communicating over 53

hands-free devices and
53, 54, 55

overview 125

synchronizing over 82

Bluetooth devices

beaming to 198

connecting to 53–55,
125–128

creating partnerships for
127

discovery setting for 128

phone calls and 55

receiving information over
126, 128

sending information over
126, 128

troubleshooting 238

Bluetooth icon 55, 65, 126

Bluetooth Plug-in 126, 130

Bluetooth Settings screen
126–129

Bluetooth wireless
technology 117, 197, 255

BMP files 140

Bold option 174

bookmarks 121

See also favorites

border highlight 21

borders 178

brightness, adjusting 136,
137, 210

browsing files and folders
192, 202

browsing the web. *See* web
browsing

built-in applications 196, 269

built-in camera. *See* camera

bulleted lists 175

bullets 172

Burst mode 136

button settings 149

buttons

assigning to media files
149

assigning voice
commands to 213

associating with
applications 212

creating speed-dial 49

disabling 217

editing speed-dial 51

opening menus and 22

reassigning 212–213

selecting or activating 21

showing voicemail 50

turning sounds on or off
for 209

Buttons icon 213

Buttons list 213

Buttons screen 212

Buttons tab (Options) 149

C

CAB files 194

calculations 181, 182, 203

Calculator application 203

calculator buttons 204

Calculator icon 203

calendar

adding items to 158, 159

displaying 156

removing events 161

setting alarms for 157

setting options for 161

unavailable slots on 160

Calendar application

adding contacts and 153

customizing 161–162

managing schedules with
157–161

selecting views 156

starting 156

untimed events in 158

calendar options 161–162

Calendar views 156, 161,
162

call forwarding 48

call forwarding icon 48

Call Log 40

Call Sender command 109

call waiting 46

call-barring password 59

caller ID applications 249

caller ID blocking 45

caller ID pictures 135, 153

caller IDs 60

call-waiting notifications 60

camcorder icon 137

camera

battery life and 13

capturing videos with
137–138

specifications for 267

taking pictures 135–136
troubleshooting 248

Camera icon 135

camera lens 8

- Camera Preview Mode 249
- camera settings 138–139
- Camera tab 139
- Cancel Bluetooth command 55
- Cancel Mute command 44
- capitalization 27, 216
- Capitalize first letter of sentence check box 216
- Caps Lock icon 27
- Caps Lock mode 27
- captions 105, 106
- carrying cases 8
- cascading menus 24
- case-sensitive searching 173, 187
- categories
 - contacts 153
 - events 160
 - playlists 147
 - tasks 163, 164
- cell patterns (spreadsheets) 179
- cell phones. *See* wireless phones
- certificates 119, 222
- Certificates icon 222
- Certificates screen 222
- changes, undoing 143
- changing
 - alarm sounds 222
 - color themes 207, 211
 - connections 227
 - contacts 154
 - date and time settings 220
 - email accounts 91
 - information 72, 186
 - picture or video resolution 136, 137, 248
 - PIN numbers 219
 - speed-dial buttons 51
 - text 173
 - text size 210
- character entry 29
- character sets 124
- characters
 - capitalizing 27, 216
 - entering 26, 27, 182, 215
 - phone calls and 50
 - scrolling 20
 - text messages and 103, 104
 - typing alternate 28
- charge indicator 7, 12
- charger cable 11
- charging
 - device 11, 13
 - device battery 11–12
- charging status 12
- Chart command 186
- chart options 186
- charts 179, 185, 186
- Chat icon 109
- chat sessions 109, 112
- Chat tab 113
- check boxes 21
- chronological list of calls 40
- Clear Cookies button 125
- Clear History button 124
- Clear Now Playing command 148
- Clear Type tab 210
- clearing web links 124
- Clock & Alarms icon 221
- Clock & Alarms Settings screen 220, 222
- closing
 - applications 30, 224
 - menus 24
 - notification messages 107
 - screens 21
- color settings 249
- color themes 207, 211
- command button 214, 215
- commands 22, 214
 - See also* menus; voice commands

- company lists 35
- company names 40, 154
- comparisons 185
- completed tasks 163
- compliance statement 262
- components (Treo device) 1
- compressed files 193
- computers
 - connecting to 72, 75
 - enabling dial-up
 - networking for 130
 - installing from 195
 - reinstalling desktop
 - software on 230
 - synchronizing with 72, 83, 84
 - system requirements 73
 - viewing videos and
 - pictures on 143
- Conference button 47
- conference calls 47
- confidential events 160
- Confidential option 160
- configurations
 - restoring 231
 - troubleshooting 237
- Configure Server command 247
- configuring
 - data services 237
 - mail servers 247
 - TTY devices 58
- Confirm message deletions
 - check box 112
- confirmation messages 113, 114
- Connect command 227
- Connect via Bluetooth
 - command 82
- Connect via IR command 83
- connecting
 - charger cable 11
 - device to PCs 75
 - headsets 52
 - to a headset 128
 - to Bluetooth devices
 - 53–55, 125–128
 - to hands-free car kits 53, 128
 - to mobile networks 236
 - to service providers 226
 - to the Internet 130, 226, 237
 - to TTY devices 58
 - to VPNs 227
 - to web sites 119, 129
- connection icons 228
- Connection Settings
 - command 240
- connections
 - adding 227
 - changing 227
 - displaying 227
 - ending 228
 - losing 238
 - manually starting 227
 - precautions for 266
 - removing Bluetooth 128
 - setting up 226–228
 - setting up wireless
 - 129–131
 - timing out 244
 - troubleshooting 235–239, 247
 - trusted devices and 128
- Connections icon 226
- Connections screen 226, 227, 237, 238
- Connections tab 199, 226
- connectivity specs 268
- conserving battery power 225
- contact categories 153
- contacts
 - adding 45, 58, 153

- addressing messages to 93, 99, 103, 105
- assigning ringtones to 50, 57, 141, 154
- changing 154
- displaying 154
- linking speed-dial buttons to 49
- looking up 32, 38, 156
- making calls to 38
- personalizing 57
- removing 154
- saving information for 45
- selecting communication method for 39
- sending messages to 104, 159
- viewing details list for 39
- Contacts application 153–156
- Contacts list 39, 46, 103, 109, 155
- context-sensitive menus 24
- continuous playback (slides) 178
- cookies 119
- Copy command 123, 142, 174, 202
- copying
 - addresses 242
 - applications 202
 - items in folders 193
 - phone numbers 39, 41, 123
 - pictures and videos 141
 - text 123, 173
- copyrighted items 141
- corporate mail systems 227, 247
- corporate networks 222
- corporate servers 227, 247
- coupling 251
- coverage area 14, 35, 236
- Create chat from messages option 113
- creating
 - appointments 157, 158
 - bookmarks 121
 - bulleted or numbered lists 175
 - caller ID pictures 153
 - connections 227
 - contacts 45, 58, 153
 - documents 171, 172, 173
 - email messages 93
 - folders 176
 - multimedia messages 104
 - notes 165, 166
 - online address book 96–97
 - partnerships 127
 - passkeys 127, 128
 - playlists 147
 - signatures 98, 112
 - speed-dial buttons 49
 - spreadsheets 178
 - tasks 162
 - templates 109, 173, 180
 - text messages 103
 - untimed events 158, 159
 - video ringtones 141
 - workbooks 180
- credentials 228, 245
- cropping pictures 142
- currency symbols 211
- Currency tab 211
- customer assistance 253
- Customize the playlists... check box 144
- customizing
 - applications 212–216
 - Calendar 161–162
 - camera 138–139
 - chat settings 112
 - Contacts application 155
 - dates and time 220

- email settings 98
- Excel Mobile 188
- format settings 211
- Internet Explorer Mobile 124–125
- Media Player Mobile 148
- Messaging application 111–114
- network settings 114
- Notes application 167
- phone 56–63
- system settings 220–226
- system sounds 208
- tasks 164
- Today screen 207
- voicemail system 50, 56
- Word Mobile 176
- Cut command 141, 174
- cutting. *See* deleting

D

- daily schedules 156
- data 231
 - See also* information
- data connection icons 228
- data filters 161, 185
- data formats 210
- data service icons 236

- data service providers 226, 237, 246
- data services 1, 236, 237
- data transmission speeds 1
- date format settings 211
- Date tab 211
- dates 183, 211, 220
 - See also* calendar
- Day View 156, 161
- day-planner formats 156
- decimal places 211
- decimal symbols 211
- decompression utility 193
- default document template 176
- default format settings 211
- Default mode option 167
- Default option 120
- default PINs 218
- Default template option 167
- Default zoom level options 216
- defined names (spreadsheets) 184
- delays 36, 238
- Delete Appointment command 161
- Delete Cells command 188

- Delete command 111, 176, 188
- Delete Contact command 154
- Delete Files button 124
- Delete Task command 164
- Deleted folder 100, 251
- deleting
 - applications 196, 251
 - Bluetooth connections 128
 - certificates 223
 - contacts 154
 - directory services 97
 - documents 176
 - email accounts 91
 - events 161
 - favorites 122
 - files 193, 251
 - items from libraries 147
 - items from playlists 148
 - items in folders 192
 - messages 99, 111, 112
 - notes 167
 - partnerships 128, 239
 - pictures 143
 - speed-dial buttons 51
 - tasks 164
 - text 22

- web files 124
- workbooks 188
- worksheets 188
- descending sort order 185
- Desktop option 120
- desktop software 229, 255
 - See also* applications; software
- device
 - additional information for 253
 - caution for electrostatic discharge and 266
 - caution for resetting 231
 - caution for storing 8
 - charging 11, 13
 - compatibility with third-party vendors 73
 - compatible hands-free devices for 53
 - compliance statement for 262
 - components of 1, 7–9
 - connecting to PCs 75
 - disabling touch-sensitivity for 217
 - disposing of 263
 - features described 1
 - freeing space on 196, 250
 - getting help with 229, 253
 - getting phone number for 15
 - locking 219
 - losing 77, 220
 - low lighting conditions and 26
 - management tools for 189
 - moving around on 17
 - not responding 230, 236, 250
 - personalizing 205
 - required items for 2
 - resetting 219, 230–232, 236
 - setting up 9–16
 - specifications for 267
 - system requirements for 269
 - third-party applications and 249
 - troubleshooting 253
 - turning on and off 35, 262
 - unlocking 219
 - updating information on 67, 72
 - usage guidelines for 261, 264
- device names. *See* usernames
- Device Setup Wizard 144
- devices
 - See also* Bluetooth devices; device battery life and 13
 - beaming to 197
 - compliance for 262
 - configuring TTY/TTD 58
 - discovering trusted 125, 126, 128
 - physically-impaired disabilities and 58
 - radio frequency emissions and 261, 263
 - transferring information from 229
 - troubleshooting 238
- Devices tab 127, 238
- diagnostic information 223
- Dial Lookup list 15
- Dial Pad 39, 40, 41
- dialing 14, 36–39, 40, 50
- dialog boxes 256
- dial-up networking 129, 130
- digit grouping 211
- digital cameras 140
 - See also* camera

- digital certificates 119, 222
- dimmed images 235
- Direct Push Technology 78
- directory service 96, 97, 99
- Disable touchscreen check box 217
- Disconnect Bluetooth
 - command 83
- Disconnect command 228
- discoverable setting 128
- discovering trusted devices 125, 126, 128
- discussion groups 253
- disk space 269
 - See also* memory
- Dismiss button 43
- display formats 210
- Display message on screen check box 210
- display options (web) 120
- display settings 210–212
 - See also* screen
- displaying
 - alternate characters 28
 - animated images 143
 - applications on device 30
 - appointments 156
 - calendar 156
 - contacts 39, 154
 - current connection 227
 - daily schedules 156
 - events 158, 160
 - folder contents 192
 - items in folders 176, 187
 - memory usage 224
 - multimedia messages 109
 - notifications 57, 210
 - on-device documentation 253
 - PDF files 171
 - pictures 135, 140, 143
 - power settings 224
 - Quick Tour documentation 253
 - running applications 224
 - space on expansion cards 202, 224
 - tasks 164
 - videos 135, 140, 143
 - web pages 119, 120
 - wireless settings 225
- DOC files 171
- document file types 171, 177
- documentation 2, 253
- documents
 - See also* Word Mobile application
 - creating 171, 172, 173
 - deleting 176
 - finding and replacing text in 173
 - moving or copying text in 173
 - opening 172
 - organizing 176
 - saving 171, 172, 174, 176
 - sending 85
 - setting margins for 175
 - spell-checking 175
 - supported features for 172
 - unsupported features for 171
- documents list 177
- DOT files 171
- downloading
 - applications 193, 194
 - attachments 95, 96
 - email 80, 94, 95
 - files 122
 - images 123, 143
 - multimedia messages 107, 112
 - Palm-specific information and updates 253
 - pictures 140
 - ringtones 56
 - videos 143, 144

- Downloads favorite 122
- downward-pointing arrows 24
- drained battery 13
- drawing 165
- drivers 230
- driving safety tips 264
- Drop and Answer command 47
- drop-down lists
 - accessing 24
 - exiting 25
 - highlighting in 20, 25
 - scrolling through 20
 - selecting items in 22, 25
- drop-down menus 24
- DUN connections 129–131
 - See also dial-up networking

E

- earpiece 7, 251
- eBooks 13
- echoes 251
- EDGE connections 256
- Edit command 142, 154
- Edit Server Settings screen 79
- Edit Speed Dial command 51
- editing. See changing
- electrostatic discharge 265
- email
 - adding address book for 96–97
 - adding attachments to 93, 100, 192
 - addressing 93, 99
 - creating 93
 - deleting 99, 100
 - dialing from 41
 - downloading 80, 94, 95
 - entering contacts and 153, 159
 - forwarding 98
 - getting from corporate servers 227, 247
 - getting from Exchange Servers 94
 - internal memory and 251
 - priority settings for 94
 - receiving attachments with 95
 - reply options for 99
 - requirements for 1
 - selecting addresses 22
 - sending 94, 95, 100, 121, 245
 - synchronizing 13, 94, 239, 246, 247
 - troubleshooting 245–247
- email accounts
 - changing 91
 - deleting 91
 - setting up 91
 - troubleshooting 245
 - Xpress Mail servers and 89
- email applications 248
- E-mail button 95
- email client software 246
- email message icons 110
- embedded images 96
- emergency calls 37, 216
- emojis 104
- Enable Clear Type check box 210
- Enable fixed dialing check box 62
- Enable local network time check box 221
- encoding options 124
- encryption 119
- End Show command 178
- End User License Agreement 2

- ending
 - active calls **44**
 - data connections **228**
 - playback **145**
 - wireless connections **131**
- endnotes **172**
- entering
 - alternate characters **28, 29**
 - data in spreadsheets **180, 182**
 - information **26, 27–28**
 - numbers **26, 27**
 - owner information **220**
 - passkeys **54, 127, 128**
 - passwords **79, 92, 219**
 - phone numbers **14, 37, 39, 40**
 - PINs **218**
 - text **215, 216**
 - web addresses **32, 120**
- Entire column option **188**
- Entire row option **188**
- entry fields
 - deleting text in **22**
 - highlighting in **20, 22**
 - moving to **20**
 - opening drop-down lists in **25**
 - scrolling through **20**
- Erase all data? prompt **232**
- erasing. *See* deleting
- error messages **209, 244**
- error reporting **223**
- Error Reporting icon **223**
- Error Reporting screen **223**
- errors **223, 236, 244**
- ESD (electrostatic discharge) **265**
- ESMTP option **246**
- Even when roaming check box **112**
- event categories **160**
- event icons **162**
- Event list **209**
- events
 - creating **158, 159**
 - deleting **161**
 - filtering **160**
 - hiding **159**
 - marking as sensitive **159**
 - reminders for **157**
 - selecting sounds for **210**
 - setting notification preferences for **209**
- Events check box **209**
- Excel files **169**
 - See also* Excel Mobile; spreadsheets
- Excel Mobile application
 - customizing **188**
 - display settings for **181**
 - overview **178**
 - searching in **186**
 - starting **180**
 - supported features **178**
 - unsupported features **180**
- Excel Mobile icon **180**
- Exchange ActiveSync **247, 256, 258**
- Exchange Address Book **241**
- Exchange Server credentials screen **245**
- Exchange Server sync options **80, 244**
- Exchange Servers
 - accessing **156**
 - getting email from **94**
 - setting up accounts for **78–80**
 - synchronizing with **13, 70, 83, 244**
 - troubleshooting **244, 247**
- exiting applications **30, 224**
- expanding lists in fields **25**
- expansion card slot **8, 199, 267**

- expansion cards
 - as storage medium 251
 - browsing on 202
 - displaying available space on 202, 224
 - inserting 199
 - installing apps on 195
 - moving apps to 202
 - moving information to 176, 187, 201
 - opening items on 200
 - removing 199
 - renaming 203
 - searching on 191, 192
 - storing attachments on 95, 100
 - transferring files to 144, 148, 201, 202
 - types supported 199
- extensions (phone) 50
- external power sources 225
- External Power tab 27
- Extra Digits button 43, 50
- Extra Digits text box 50
- Extract command 48

F

- factory settings 149

- factory-installed applications 196, 269
- favorites 121–122
 - See also web pages
- Favorites button 122
- Favorites command 122
- FCC Statement 261
- features 1
- Federal Trade Commission website 223
- feedback 251
- fields. See entry fields
- File Explorer 191, 192–193, 202
- File Explorer icon 192
- file names 174, 176, 191
- file types
 - displaying 177
 - documents 171
 - Media Player 144
 - multimedia 104
 - pictures 140
 - videos 140
- files
 - accessing from corporate accounts 227
 - browsing 192
 - decompressing 193
 - deleting 193, 251

- downloading 122
- moving 176, 193
- saving 201
- searching for 191, 192
- selecting multiple 193
- transferring to expansion cards 144, 148, 201, 202
- Files folder 171
- Files sync option 171
- fill series (spreadsheets) 182
- Filter command 154, 160
- Filter option 164
- filtering
 - events 160
 - information 154, 185
 - tasks 164
- filters 161, 185
- Find Online command 97, 156
- Find/Replace command 173, 186
- finding
 - contacts 32, 38, 156
 - information 186
 - text 173
- firewalls 239
- 5-way navigator 7, 19, 21, 250

fixed dialing **61**
folder names **176**
folders
 accessing Outlook **242**
 adding documents to **174**
 arranging pictures and
 videos in **142**
 browsing **192, 202**
 creating **122, 176**
 displaying contents **176,**
 187
 moving items to **176, 187,**
 193
 opening items in **192**
 organizing web favorites in
 121, 122
 sorting contents **176, 187,**
 192
 synchronizing messages
 in **94**
Font color option **174**
Font command **174**
Font option **174**
fonts **172, 174, 179, 210**
footers **172**
footnotes **172**
forgetting passwords **219**
format settings **211**
formats, losing **171**

formatting
 charts **186**
 paragraphs and lists **175**
 spreadsheets **178, 184**
 system data **210**
 text **174**
Formatting toolbar **175**
forms (web) **121**
formulas **179, 182, 187**
forums **253**
Forward command **98**
forwarding
 messages **98, 109**
 phone calls **48**
freeing memory **196, 243,**
 250
Freeze Panes option **181**
front view (device) **7**
full charge (battery) **11**
Full Screen option **120**
functions (spreadsheets)
 179, 182

G

games **13**
Get Good program **91**
getting started **2, 5, 14, 253**
GIF files **104, 140, 143**

Global Address List **96, 97,**
 156
Global Address List Lookup
 191
Glossary **255**
Go to Slide command **177**
GPRS connections **256**
graphics programs **142**

H

Hands Free check box **55,**
 128, 238
hands-free car kit **52, 55, 128**
hands-free devices
 connecting to **53**
 purchasing **265**
 setting up **52**
 tips for **56, 264**
 troubleshooting **238**
 turning Keyguard on or off
 for **217**
hanging indents **175**
hanging up phone **15, 44**
hard resets **219, 231**
hardware **1**
Hardware buttons check box
 209
headers **172**
headset button **53**

- headset jack 7
- headsets
 - configuring as trusted devices 126
 - connecting 52–53, 128
 - disabling Keyguard and 217
- hearing-impaired 58, 262, 263, 265
- heat sources 14
- help 229, 253
- Help topics 30
- hiding
 - appointments 159
 - events 159
 - images 120
 - speed-dial buttons 38
 - Tasks entry bar 164
- highlight 21
- Highlight option 174
- highlighting
 - applications 30
 - items in folders 193
 - items on screen 20, 21–22
 - menu items 23, 24
 - options in lists 20, 25
 - text 22, 174
- Hint tab 220

- hints (passwords) 220
- History command 123, 146
- History list 123, 124
- Hold button 44
- home locations 220
- Home page option 124
- Hotmail accounts 88, 115
- hypertext links. *See* links

I

- icons
 - application 30, 212
 - battery status 12
 - data connections 228
 - data services 236
 - email 110
 - events 162
 - message status 110
 - navigator 19
 - phone status 63
 - signal-strength 35, 226
- Identification tab 220
- Ignore with text message
 - command 42
- IM messaging 115
- image file types 140
- image files 104, 143, 250
- images
 - See also* pictures

- dimmed 235
- downloading 123
- hiding web page 120
- incorrect color settings
 - and 249
- receiving 96
- setting background 142, 207
- troubleshooting web page 248
- IMAP accounts 88, 91, 96
- inactivity 136, 225
- Inbox 20, 93, 94, 110
- Inbox application 87, 88, 93, 96
- Include file attachments
 - check box 95
- incorrect passwords 219
- Indentation setting 175
- indented lists 172
- indenting text 175
- indicator light 7, 12, 35
- information
 - accessing 31, 223
 - backing up 67, 229, 232
 - changing 72, 186
 - entering 26, 27–28
 - erasing all 239
 - filtering 154, 185

- losing 171, 231
 - moving 176, 187, 201
 - protecting 216–220
 - removing battery and 233
 - restoring 231, 232
 - searching for 173, 186, 191–192
 - sharing 196
 - sorting 185
 - storing 199, 250, 251
 - synchronizing 70, 71, 72, 239
 - transferring 67, 229
 - updating 67, 72
 - infrared port. *See* IR port
 - infrared transmissions 83, 256
 - Input icon 215
 - input options 26, 215
 - Input screen 215
 - inserting expansion cards 199
 - installation, troubleshooting 232, 234, 250
 - installing
 - ActiveSync 70
 - applications 193–194, 249, 250
 - bonus software 193
 - SIM smartcards 9–16
 - synchronization software 73
 - VPN clients 227
 - Windows drivers 230
 - instant messages 115
 - instant messaging applications 249
 - internal memory. *See* memory
 - Internet 130, 226, 237
 - See also* web browsing; websites
 - Internet Connection Speed option 149
 - Internet Explorer Mobile
 - browsing with 119–123
 - closing 121
 - customizing 124–125
 - installing from 194
 - scrolling in 20
 - starting 119
 - unsupported elements for 119, 247
 - IR connections 198
 - IR port 8, 83, 197, 256
 - ISP mail systems 91
 - ISP settings 226
 - ISPs (Internet Service Providers) 226, 246
 - Italics option 174
 - Items tab 207
- ## J
- JavaScript 119
 - JPEG files 104
 - JPG files 140
- ## K
- keyboard
 - accessing alternate characters on 28
 - dialing from 37
 - entering information from 27–28, 216
 - locking 217
 - pressing keys on 26
 - scrolling with 20
 - selecting menu items from 24
 - setting key combinations for 213
 - specifications for 268
 - troubleshooting 250
 - keyboard backlight 26, 225
 - keyboard icon 26
 - Keyguard 217

Keyguard icon 217
Known Caller option 56

L

language-impaired 58
leading zeros 211
left action key 22, 157
Legacy Pocket Word files 172
libraries (media) 146
Library command 145
Library list 145
Library screen 145, 149
Library tab 149
lightening bolt 12
Li-Ion battery 256
 See also battery
links
 clearing web 124
 internal memory and 251
 media files and 146
 messages and 110, 121
 selecting 21, 120
 troubleshooting 248
list separators 211
List setting 175
Listen button 43
listening to
 media files 144

voicemail messages 43
lists
 accessing 24
 creating 172, 175
 displaying alternate characters and 28
 exiting 25
 formatting 175
 highlighting in 20, 25
 navigating web page 121
 scrolling through 20
 selecting items in 22, 25
Lithium Ion battery 256
 See also battery
locating
 contacts 32, 38, 156
 information 186
location-specific information 210, 220
Lock icon 120, 141, 219
Lock screen 219
locking
 SIM smartcards 218
 spreadsheet rows and columns 181
 the keyboard 217
 the screen 217
 Treo device 219

logging in to
 corporate servers 227
 networks 222
looking up contacts 32, 38, 156
lookup feature 191
losing
 connections 238
 information 171, 231
 passwords 219
 Treo device 77, 220
low coverage areas 236
low lighting conditions 26
lowercase letters 27

M

magnet 8
magnification. *See* zoom settings
mail servers 227, 247
Main tab 224
Make the device
 discoverable check box 126
Make this device
 discoverable setting 128
Manage existing connections
 option 226, 227

- Manage Folders command 94
- Manage tab 209
- management tools 189
- manually closing applications 31
- MAPI clients 247
- maps 248
- margins 175
- Match case box 173, 187
- Match whole words only check box 173, 187
- measurement units 211
- media files
 - creating playlists for 147
 - formats for 144
 - linking to 146
 - playing 145
 - synchronizing 144
 - transferring 144, 148
 - troubleshooting 242
- media libraries 146
- Media Player 242
- Media Player Mobile 144–149
- media players 13
- Media sync option 144
- meeting requests 96, 97, 159, 162

- memory
 - available 269
 - freeing 196, 243, 250
 - low conditions for 30, 224
 - running apps and 30, 201
 - storing numbers in 204
 - viewing expansion card 202
- memory buttons 204
- memory dial 264
- Memory icon 202
- memory options (web) 124
- Memory screen 224
- Memory Settings screen 31
- Memory tab 124
- memory usage 224
- memos. *See* messages; notes
- menu items 23
- Menu key 23, 24
- menus 22–24
- Menus icon 212
- Menus screen 212
- Message Details command 108
- message list 109, 110
- Message Options command 106

- Message Options screen 106
- Message Priority list 107
- message status icons 110
- Message tab 99
- Message validity period option 112
- messages
 - See also* multimedia
 - messages; text
 - messages; voice notes
 - adding signatures to 98, 112
 - addressing 104, 105
 - automatically resending 112
 - creating email 93
 - deleting 99, 111, 112
 - dialing from 41
 - displaying notification 210
 - displaying status of 110
 - forwarding 98, 109
 - invalid characters and 104
 - listening to 43
 - receiving notifications for 107, 113, 238
 - saving 94
 - sorting 111
 - storing 251

- Messages tab 112
- Messaging application
 - See also text messages;
 - multimedia messages
 - adding contacts and 153
 - chat sessions and 109
 - customizing 111–114
 - email settings in 98
 - messaging options in 106
 - notification options in 107
 - overview 103
 - play options in 108
 - starting 103
 - status icons in 110
- messaging applications 249
- messaging services 237, 256
- microphone 7, 44, 139, 251
- microphone icon 214
- Microsoft ActiveSync. See ActiveSync
- Microsoft Exchange
 - ActiveSync. See Exchange ActiveSync
- Microsoft Office 169, 171
- Microsoft Office Excel 179
 - See also spreadsheets
- Microsoft Office Outlook.
 - See Outlook
- Microsoft Windows Mobile software 194
- Microsoft Windows Mobile website 229
- Microsoft Word documents.
 - See documents
- MIDI files 104
- miniSD cards 199
- mirror 8, 136
- Missed call option 56
- MMS files 146
- MMS messaging 103, 256
- mobile accounts. See accounts
- Mobile Device component (Windows) 256
- Mobile Device folder 74, 195
- Mobile Device icon 256
- mobile devices 198, 229
- mobile networks 235, 236
- mobile phone numbers 153
- mobile phones. See wireless phones
- Mobile to Market certificates 193
- Mobile-Based Device icon 195
- Mode tab 126
- Modem tab 227
- ModemLink application 129
- modems 129
- Modify Sheets command 185, 188
- Month View 156
- most recently dialed numbers list 40
- moving
 - documents to folders 176, 193
 - files to expansion cards 144, 148, 201, 202
 - information 176, 187, 201
 - pictures and videos 141
 - speed-dial buttons 51
 - text 173
 - workbooks 187
- moving around the screen 19–21
- moving through web pages 120
- MP3 files 144
- MP4 files 144
- MPEG files 140
- MPEG4 files 104
- MSN Hotmail 88, 115
- MSN Messenger 115
- multi-connector 7
- multi-line fields 20

multimedia features 101,
133
multimedia file types 140
multimedia files 140, 251
multimedia messages
 creating 104
 deleting 111, 112
 displaying 109
 downloading 107, 112
 forwarding 109
 internal memory and 251
 opening 108
 overview 101
 phone numbers in 41
 playing 108–109
 previewing 106
 receiving 107
 replying to 108
 requirements for 1
 saving 109
 sending 104, 106, 109
 setting options for 106
 sorting 111
 troubleshooting 237
Multimedia Messaging
 System. *See* MMS
 messaging
multiple recipients 104
music 41, 144, 145, 208

See also media files
 music files 242
 Mute command 44
 My Device folder 192
 My Device library 146
 My Documents folder 191,
 192, 232
 My Pictures folder 135, 137
 My Playlists category 147
 My Storage Card library 146
 My Text command 93
 My Text phrases 93
 My Windows Mobile-Based
 Device icon 196

N

names 32, 258
naming
 document files 174, 176
 expansion cards 203
 folders 176
 groups of pictures 139
 speed-dial buttons 49
 templates 173, 180
 workbooks 187
 worksheets 183, 184
navigating the screen 19–21
navigating web pages 120

navigator. *See* 5-way
 navigator
navigator buttons 19, 21
negative numbers 211
network protocols 149
network settings 62, 114
Network tab 63, 149
networks
 changing 63
 connecting to 63
 logging in to 222
 troubleshooting 235–239
New Account command 91
New Appointment command
 157, 158
New MMS command 105
New Partnership option 127
New Sound command 209
New Speed Dial command
 49
notes
 adding 154, 163
 creating 165, 166
 removing 167
 saving 166, 167
Notes application 164–167
Notes icon 165
Notes list 166, 167
Notes tab 154, 220

notification options 107, 113, 209

notification screens. *See* notifications

Notification tab 113

notifications

changing event 209

closing 107

displaying 57

downloading sounds for 56

enabling or disabling 210

phone calls and 60

previewing sounds for 57

receiving messages and 107, 113

receiving phone calls and 46

receiving transmissions and 129

receiving voicemail 43

setting ringtones for 56

setting system sounds for 208

silencing sounds for 208

troubleshooting 238

Notifications check box 209

Notifications tab 56, 209

Now Playing playlist 147, 148

Now Playing screen 147

number format settings 211

number pad 14

number sign symbol 211

Number tab 211

numbered lists 175

numbers

See also phone numbers

entering 26, 27

formatting 179, 183

pasting into Calculator 204

O

Off Hold button 44

Office files 171

Office Word documents. *See* documents

offline synchronization 242

Off-peak times options 81

OK button 7, 31

One Column option 120

online address book 96, 97, 99, 156

online forums 253

online support (Palm) 253

Open URL command 146

opening

ActiveSync 74

alternate characters list 28

applications 30, 200, 212

attachments 95

calculator 203

Dial Pad 40

documents 172

email applications 248

File Explorer 192

items in folders 192

menus 22, 24

multimedia messages 108

on-device documentation 253

Outlook folders 242

Phone Settings screen 15

PicSel PDF Viewer 171

Quick Tour 253

templates 180

text messages 108

Today screen 14, 31

web pages 119, 121, 123

Wireless Manager 35

operating system (device) 234, 258, 267

operating systems (PCs) 73

operational warnings 262

Option key 20, 26, 27, 256

- Option Lock icon 27
- Option Lock mode 27
- options
 - displaying 160
 - highlighting 20, 21, 25
 - selecting 24, 25
- Options screen (ActiveSync) 84
- Options screen (Internet Explorer) 124
- Options screen (messaging) 99, 111
- Options tab 207, 215, 220
- organizer features 36, 151
- orientation (screen) 212
- orientation (slides) 178
- orientation options 212
- Orientation tab 178
- outages 237
- Outbox 110
- Outlook
 - accessing folders for 242
 - copying addresses to 242
 - downloading messages from 94, 95
 - email client software and 246
 - entering information with 72

- installing drivers for 230
 - synchronizing with 78, 98
- Outlook E-mail screen 91, 93
- overdue tasks 164
- Override playback options 178
- owner information 220
- Owner Information icon 220
- Owner Information screen 220

P

- page breaks 172
- paired devices 130
- paired relationships. *See* partnerships
- pairing. *See* partnerships
- Palm (online support) 253
- Palm applications 194
- Palm devices 75, 229
- Paragraph command 175
- paragraph formatting 175
- partial battery icon 12
- partnerships 127, 239, 257
- passkeys 54, 127, 128
- Password tab 219
- Password type list 219
- passwords
 - call-blocking and 59
- corporate email accounts
 - and 79
 - entering 79, 92, 219
 - forgetting or losing 219
 - locking device and 216, 219
 - saving 92
 - spreadsheets and 179
- Paste command 142, 174
- patches 196
- patterns in workbooks 179
- Pause playback option 108, 149
- PCS phones. *See* wireless phones
- PCs. *See* personal computers
- PDF files 171, 180
- PDF Viewer 171
- Peak times options 81
- performance 234, 249
- Personal Address Book 242
- personal computers
 - connecting to 72, 75
 - enabling dial-up networking for 130
 - installing from 195
 - reinstalling desktop software on 230

- ul style="list-style-type: none;">
- synchronizing with 72, 83, 84
- system requirements 73
- viewing videos and pictures on 143
- personal events 160
- personal identification
 - numbers (PINs) 62, 218, 257
- personal information 219, 220, 255
- personal information managers 242, 257
 - See also* PIM applications
- Personal option 160
- Personal tab 56
- personalizing your device 205
- phone
 - See also* phone calls; phone numbers; device
 - adjusting volume 15, 57
 - advanced features 43–49
 - answering 41, 46
 - customizing 56–63
 - dialing 14, 36–39, 40, 50
 - disabling touch-sensitive feature for 217
 - hanging up 15, 44
 - network settings for 62
 - ringtones for 56, 57
 - running applications and 44, 45
 - selecting wireless band for 61
 - silencing ringer 42
 - specifications for 267
 - waking up screen for 44
- phone calls
 - See also* phone; phone numbers
 - adding a second 46
 - blocking 59
 - ending 15, 44
 - forwarding 48
 - hands-free devices and 52, 55, 56
 - making 14, 36, 40, 43, 109
 - placing on hold 44
 - receiving 41, 43
 - receiving notifications for 60
 - restricting 61
 - sending to voicemail 41
 - setting up conference 47
 - troubleshooting 238, 251
- Phone dialog box 41
- phone headset 52–53
 - See also* headsets
- Phone icon 218
- phone lock feature 216
- phone numbers
 - See also* phone; phone calls
 - assigning to speed-dial buttons 49
 - copying 39, 41, 123
 - entering 14, 37, 39, 40
 - entering extra digits with 50
 - locating device 15
 - missing from Phone Settings screen 16
 - redialing most recent 40
 - saving 45
 - selecting 22
- Phone Off message 35, 257
- Phone Settings screen 15, 16, 58, 59, 218
- phone status icons 63
- Phone tab 58, 59
- Phone/Send button 7, 15, 37, 257
- Phone/Send icon 37
- phone-off icon 13, 35
- photo albums 140

- photos. *See* pictures
- pick lists
 - accessing 24
 - exiting 25
 - highlighting in 20, 25
 - scrolling through 20
 - selecting items in 22, 25
- PicSel PDF Viewer 171
- picture files 104, 143
- picture formats 140
- Picture Speed Dial button 50
- picture speed-dial buttons 38, 49
- pictures
 - adding as backgrounds 142, 207
 - adding as screensaver 138
 - adding sounds to 105
 - adding to messages 105
 - adjusting resolution of 136, 143
 - creating caller ID 153
 - default resolution settings for 248
 - deleting 143
 - downloading 140
 - editing 142
 - hiding on web pages 120
 - naming groups of 139
 - previewing 136, 249
 - receiving 135
 - saving 139
 - sending 141
 - setting default size 139
 - storing 250
 - synchronizing 143
 - taking 135–136, 248
 - viewing 135, 140, 143
- Pictures & Videos application 138, 140–143
- PIM applications 255, 257
- PIMs 230, 242, 257
- PIN unlock key 257
- PINs 62, 218, 257
- Play button 145
- Play Slide Show command 140
- Play Sound box 57
- Play sound check box 210
- Play Sound list 222
- playback icons 50
- playback options 148, 178
- Playback screen 148, 149
- Playback tab 148, 178
- playing
 - media files 145
 - multimedia messages 108–109
 - presentations 177, 178
 - sounds 139
 - voice notes 166
 - voicemail messages 43
- playlists 144, 147
- plug-ins 119, 208
- Pocket MSN 88, 115
- POP accounts 88, 91
- pop-up menus 24
- port numbers 228
- portable radio. *See* radio
- ports. *See* IR port; USB ports
- Power icon 224
- Power screen 224
- Power/End button 7, 35
- PowerPoint files 169
- PowerPoint Mobile
 - application 177–178
- PowerPoint Mobile icon 177
- precautions 266
- preferences 112, 205, 231
 - See also* customizing
- preinstalled applications 196, 269
- presentations 177, 178
 - See also* PowerPoint Mobile
- Preview Message command 106

Preview Mode (camera) 249
previewing
 multimedia messages 106
 pictures 136, 249
 sounds 57, 210
 videos 137
priority levels 107, 163
Priority list 94
privacy mode 107, 114
private events 160
Private option 160
processor 267
Program Buttons tab 213
Program Files folder 202
Programs check box 209
Programs screen 30
programs. *See* applications;
 software
Prompt if device unused for
 check box 219
Properties command 121
protected spreadsheets 179
protecting
 information 216–220
 the touchscreen 235
 Treo device 216
proxy servers 227
PSW files 172
PUK (PIN unlock key) 257

punctuation marks 27, 29
Purge command 111
Purge screen 111
push technology 78

Q

QCELP files 104
Quality command 137
Quick Keys 38, 50
Quick Tour 253
Quick Tour icon 253
QuickTime Player 143
quitting applications 30, 224

R

radio 262, 267
radio frequency emissions
 261, 263
RAS connections 226
reassigning buttons 212–213
Receive all incoming beams
 check box 199
receiving
 attachments 95
 beamed information 198
 email 94, 95, 245
 meeting requests 96
 multimedia messages
 104, 107, 112

 pictures 135
 text messages 103, 107,
 238
 videos 135
Receiving Data message 199
recently-viewed web pages
 123
rechargeable battery. *See*
 battery
recipients, sending to
 multiple 104
Record button action option
 167
recording
 sounds 209
 videos 137–138
 voice notes 215
Recording icon 165
recording toolbar 165
records (data) 198
recurring appointments. *See*
 repeating appointments
redialing phone numbers 40
redirector (websites) 248
Refresh command 120
refreshing web pages 120,
 247
Region tab 211
regional settings 210, 220

- Regional Settings icon 210
- Regional Settings screen 210
- reinstalling software or applications 229, 232
- Reminder option 157
- reminders
 - adding 157, 163
 - events and 162
 - system alarms and 221
 - tasks and 164
 - turning on and off 209
- remote access servers 226
- remote files 227
- Remove Programs icon 196
- Remove Programs list 196
- Remove Programs screen 196
- Remove Split command 181
- removing
 - applications 196, 251
 - battery 231, 233
 - battery door 9
 - Bluetooth connections 128
 - certificates 223
 - contacts 154
 - directory services 97
 - documents 176
 - email accounts 91
 - events 161
 - expansion cards 199
 - favorites 122
 - files 193, 251
 - items from folders 192
 - items from libraries 147
 - items from playlists 148
 - messages 99, 111, 112
 - notes 167
 - partnerships 128, 239
 - pictures 143
 - speed-dial buttons 51
 - tasks 164
 - text 22
 - web files 124
 - workbooks 188
 - worksheets 188
- Rename command 203
- Rename/Move command 173, 176, 187, 202
- renaming
 - documents 176
 - expansion cards 203
 - items in folders 192
 - workbooks 187
 - worksheets 184
- Repeat check box 210
- Repeat command 145
- repeat patterns 158
- repeating appointments 158
- repeating current song 145
- repeating sounds 210
- repeating tasks 163
- Replace All button 173, 187
- Replace button 173, 187
- Replace text as you type
 - check box 215
- replacing
 - information 186
 - text 173
 - the battery 232–233
- Request Delivery/Read Receipt check box 106
- Require PIN when phone is used check box 218
- reset button 8, 230
- resets 219, 230–232, 236
 - caution for 231
- resizing text 121
- resolution (camera) 248
- resolution (screen) 235, 268
- Resolution command 136, 248
- restarting Treo device. *See* resets
- restoring
 - backups 232, 244
 - information 231, 232

- preferences and system settings 231
- sound settings 208
- Resume playback option 108, 149
- retrieving voicemail 43
- Return key 26
- reverse type 22
- Revert to Saved command 143
- revision marks 172
- RF emissions 261, 263
- RF Safety Statement 261
- right action key 22
- right-click menus. *See* shortcut menus
- ringer switch 9, 208
- ringer volume 57
- ringer, silencing 42
- ringtone files 104
- ringtone managers 249
- ringtones
 - assigning to contacts 50, 57, 141, 154
 - creating video 141
 - downloading 56
 - previewing 57
 - selecting 56
- roaming 81, 243

- Roaming option 56
- rotating pictures 138, 142
- RTF files 171
- RTSP files 140, 146
- running multiple applications 30
- Running Programs tab 31, 224

S

- Safety Statement (FCC) 261
- Save As command 122, 174
- Save Image command 123
- Save links... option 124
- Save password check box 79, 92
- Save to Contact Ring Tone command 141
- Save to Contacts command 46
- Save to list 201
- Save to option 167
- Save to Template command 109
- Saved folder 94
- saving
 - documents 171, 172, 174, 176
 - email messages 94

- files 201
- multimedia items 108
- multimedia messages 109
- notes 166, 167, 215
- passwords 92
- phone numbers 45
- pictures and videos 139
- text messages 109
- workbooks 178, 180, 188
- Schedule command 81
- Schedule screen 81
- scheduled syncs 243, 246
- schedules
 - adding items to 157, 158, 159, 162
 - managing 157–161
 - organizing events for 160
 - removing events 161
 - removing tasks 164
 - sorting tasks on 164
 - unavailable time on 160
 - viewing daily 156
- scheduling synchronization 80–81
- screen
 - activating items on 22
 - activating wrong features 235
 - adjusting brightness 210

- ul style="list-style-type: none;">
- adjusting display 210–212
- aligning 211
- arranging web pages on 120
- battery life and 14
- caring for 8
- changing color themes for 207, 211
- changing orientation 212
- disabling touch-sensitivity for 216
- locking 217
- moving around on 19–21
- protecting 235
- scrolling in 20–21, 216
- selecting items on 22
- setting backgrounds for 142, 207
- setting delays for 36
- specifications for 268
- troubleshooting 211, 235
- turning on or off 35, 36, 225, 255
- waking up 36, 44
- screen fonts 210
- Screen icon 210, 211
- screen resolution 235, 268
- Screen taps check box 209
- Screen view 211
- screens, returning to previous 21
- screensavers 138
- scroll arrows 20, 21
- scroll bar 21
- Scroll upon reaching the last line check box 216
- scrolling
 - device screen 20–21, 216
 - slides 177
 - spreadsheets 181
 - web pages 120
- SD expansion cards 199
- SDP files 146
- SDP Streaming files 140
- Search button 192
- Search dialog box 191
- Search for list 191, 192
- Search icon 191
- search results list 191, 192
- searching
 - contacts list 38
 - documents 173
 - spreadsheets 186
 - web pages 119
- searching for files 191, 192
- searching for information 173, 186, 191–192
- searching for signal 14
- secure websites 248
- security 127, 216–220, 223
- security certificates 119, 222
- security options (web) 125
- security software 216
- Security tab 124, 218
- Select All Text command 123
- selecting
 - applications 30
 - items in folders 193
 - items in lists 25
 - items on screen 21, 22
 - menu items 23, 24
 - options in lists 22, 24, 25
 - speed-dial entries 32
 - tabs 20
 - web links 21, 120
- self-portrait mirror 8, 136
- Send Link via E-mail command 121
- Send meeting requests via option 162
- Send outgoing items... check box 81
- Send Sound command 209
- Send via E-Mail command 197
- Send/Receive command 95

- ul style="list-style-type: none;">
- sending
 - copyrighted items 141
 - email 94, 95, 100, 121, 245
 - meeting requests 97, 159, 162
 - multimedia messages
 - 104, 106, 109
 - pictures 141
 - sounds 209
 - text messages 42, 103
 - videos 141
- sensitivity options 160, 163
- Sent folder 99, 110
- servers, troubleshooting
 - 243, 244, 247
 - See also* Exchange Servers
- service contracts 1
- service providers 226, 237, 246
- Services tab 48, 59, 60, 62
- Set as Hands-Free command 238
- Set as Today Background command 142
- Set reminders for new items
 - option 162, 164
- Set up my proxy server
 - option 228
- setting alarm clock 222
- settings. *See* options
- shaded lightning bolt 12
- sharing information 196
- sheet list 181
- Shift cells options 188
- Shift key 26, 27
- Short Messaging Service.
 - See* SMS messaging
- shortcut menus 24
- shortcuts 22
- Show alphabetical index
 - option 155
- Show contact names only
 - option 155
- Show half hour slots option
 - 161
- Show icons option 162
- Show list 140, 201
- Show Options command 178
- Show Pictures option 120
- Show start and due dates
 - option 164
- Show Tasks entry bar option
 - 164
- Show time stamps of each
 - message option 113
- Show week numbers option
 - 161
- Shuffle command 145
- side button 7
- signal, searching for 14
- signal strength 63, 235, 252
- signal-strength icon 35, 226
- Signature box 112
- signatures 98, 112
- Signatures screen 98, 112
- silencing system sounds 9, 208
- silencing the ringer 42
- silent alarm 208, 210
- SIM smartcards 9, 11, 218, 257
- Size option 174
- sketching 165
- Skins tab 149
- Slide Show tab 138
- slide show toolbar 141
- slide shows 138, 140, 177, 178
- slide timing option 178
- slider 21
- slides 105, 106, 109

smartcard. *See* SIM
smartcards

SMS messaging 103, 258

SMTP servers 246

soft resets 230

software
See also applications
caution for hard resets and 231
compatibility with
Windows Mobile 234
included with device 2, 269
installing 73, 193
purchasing 234
reinstalling 229, 232

songs. *See* music

Sort By command 164

Sort by list 185, 192

Sort command 111, 185

sort options 164

sort order 185

sorting
folder items 176, 187, 192
History list items 123
information 185
messages 111
pictures and videos 142
tasks 164

sound clips 104

Sound Mode buttons 208

sound settings 208

sounds
adding to pictures 105
changing alarm 222
customizing 208
playing 139
previewing 57, 210
recording 209
selecting event 210
sending 209
setting ringtone 56
setting system 208
silencing 9, 208
turning off event 210

Sounds & Notifications
screen 56

Sounds & Notifications
Settings icon 208

Sounds & Notifications
Settings screen 208, 209

Sounds tab 209

Space key 26

speaker 8, 144

speakerphone 44, 251, 263

Speakerphone command 44

special characters 29

special characters. *See*
alternate characters;
symbols

special occasions 158

specifications 267

speech-impaired services 58

Speed Dial Options
command 51

speed-dial buttons 37, 49–51

Spell Check command 94

spell-checking 94, 175

Spelling command 175

split bar 181

spreadsheet templates 178, 180, 188

spreadsheets
See also Excel Mobile;
workbooks;
worksheets
accessing 169
adding charts to 185, 186
calculations in 181–182
changing order of
worksheets 183
creating 178
defining filters for 185
deleting elements in 187
display options for 181
entering data in 180, 182

- formatting 178, 184
- insertion options for 183
- scrolling 181
- searching 186
- sending 85
- sorting in 185
- unsupported features for 180
- SSL (Secure Sockets Layer) 119
- standby mode 136
- Start button 7, 30
- Start menu 30, 212, 258
- starting
 - data connections 227
 - Excel Mobile 180
 - Internet Explorer Mobile 119
 - Media Player Mobile 145, 148
 - PowerPoint Mobile 177
 - Word Mobile 172
- static electricity 265
- status icons 63, 110
- stereo headphones 144
- Still image compression level list 139
- Still Mode command 137
- Stop command 145
- stopping playback 145
- stopping synchronization 84
- Storage Card folder 196, 202
- storage card symbol 192
- Storage Card tab 202, 224
- storage cards. *See* expansion cards
- storage space 224, 243
- Storage tab 100
- storage temperatures 269
- storing
 - applications 251
 - attachments 95, 100
 - device 8
 - document files 174
 - information 199, 250, 251
 - passwords 79
 - pictures 250
 - workbooks 187
- streaming 123, 258
- Streaming Media application 146
- Strikethrough option 175
- stylus 9
- submenus 24
- Suggest words when entering text check box 215
- support 253
- Swap button 47, 48
- Symbol command 182
- symbols 28, 29, 50, 182
- Sync button 81
- sync cable 73, 75, 77
- sync conflicts 79
- sync schedules 243, 246
- synchronization
 - backing up information and 232
 - battery life and 13
 - benefits of 67
 - defaults for 69
 - defined 258
 - hard resets and 231, 232
 - overview 69
 - preparing for 73
 - scheduling 80–81
 - setting options for 84
 - setting up 78, 82, 83
 - stopping 84
 - troubleshooting 230, 239–245, 247
- synchronization software 71, 73, 241
- synchronizing
 - addresses 241
 - dates and time 221

- email 13, 94, 239, 246, 247
- information 70, 71, 72, 239
- manually 81
- media files 144
- multimedia files 143
- Office files 171
- offline 242
- over Bluetooth
 - connections 82
- over IR ports 83
- playlists 145
- through USB hubs 240
- wirelessly 70, 77, 82, 83, 244
- with multiple computers 83
- with sync cable 77
- with third-party applications 73, 232
- system alarms 221
- system dates and time 220
- system errors 236
- system locks 216, 219
- system requirements 73, 269
- system settings 220–226, 231

- system sounds 9, 208
- system warnings 209

T

- tables in documents 172
- tabs 20
- taking pictures 135–136, 248
- tapping 19, 22, 211
- tapping sounds 209
- task categories 163, 164
- Task tab 163
- tasks
 - adding notes to 163
 - completing 163
 - creating 162
 - customizing 164
 - deleting 164
 - displaying 164
 - filtering 164
 - filtering and sorting 164
 - marking as sensitive 163
 - setting due dates for 163
 - setting reminders for 163, 164
- Tasks application 162–164
- Tasks entry bar 162, 164
- Tasks icon 162
- Tasks list 164

- Tasks tab (Connections) 226, 227, 228
- TDD devices 58, 262
- technical support 253
- telecommunications devices
 - for impaired. *See* TTY devices
- temperature range 269
- templates
 - documents 173, 176
 - multimedia messages 109
 - notes 166, 167
 - spreadsheets 178, 180, 188
 - text messages 109
- Templates folder 173, 180
- tentative appointments 157
- text
 - aligning 175
 - changing 173
 - copying 123
 - deleting 22
 - entering 26, 27, 215, 216
 - finding and replacing 173, 215
 - formatting 174
 - highlighting 22, 174
 - moving or copying 173
 - resizing 121, 210

- selecting 22
 - spell-checking 94, 175
 - word-processing features
 - for 172
- text captions 106
- text fields
 - moving to 20
 - opening drop-down lists in 25
 - removing text in 22
 - scrolling through 20
- text files 223
- text messages
 - creating 103
 - deleting 111, 112
 - forwarding 109
 - links in 110
 - opening 108
 - overview 101
 - phone calls and 44
 - phone numbers in 41
 - receiving 107, 238
 - replying to 108
 - saving 109
 - sending 42, 103
 - setting options for 106
 - sorting 111
 - troubleshooting 237
- Text Size tab 210
- Text Speed Dial button 50
- text speed-dial buttons 38, 49
- text telephone devices. *See* TTY devices
- themes 207, 211
- third-party applications
 - accessing Outlook folders and 242
 - caution for hard resets and 231
 - compatibility with 193
 - deleting 251
 - getting help with 250
 - installing 194, 249, 250
 - navigator and 19, 250
 - previewing pictures and 249
 - reinstalling 229, 232
 - screen resolution and 235
 - synchronizing with 73, 232
 - troubleshooting 194, 234, 249–250
- third-party vendors 73
- Thumbnail View 136, 138
- Thumbnails button 137
- TIF files 140
- time format settings 211
- time system settings 220
- Time tab 211, 221
- time units 158
- time zones 220, 243
- Timer 136
- tips 1
- Today icon 207
- Today screen
 - accessing 14, 31
 - accessing Dial Pad from 40
 - color themes for 211
 - components of 32
 - customizing 142, 207
 - dialing from 36, 37, 39, 40
 - overview 31
 - recovering settings for 244
 - retrieving voicemail from 43
- Today Settings screen 207
- top view (device) 9
- touchscreen. *See* screen
- touchscreen lockout 216, 217
- touch-sensitive feature 216
- transactions 248
- transferring
 - applications 202

- files 144, 148, 201, 202
- information 67, 229
- transition effects (slides) 178
- transmission delays 238
- Transparency level list 142
- troubleshooting 229, 253
- Trusted Device list 126
- trusted devices 125, 126, 128
 - See also partnerships
- trusted pairs. See partnerships
- TTY devices 58, 262
- TTY/TDD options 58, 262
- Turn on Bluetooth check box 54, 126
- turning on or off
 - alarms 209, 222
 - caller IDs 60
 - Caps Lock 27
 - device 35, 262
 - event sounds 210
 - keyboard backlight 26
 - Keyguard 217
 - Option Lock 27
 - reminders 209
 - ringer switch 208
 - screen 35, 36, 225
 - wireless services 13

- TXT files 171
- Typing mode 167

U

- UMTS services 258
- unauthorized users 216, 223
- unavailable time slots 160
- Underline option 174
- underlining text 172, 174
- Undo command 143
- Unfreeze Panes option 181
- Unknown Caller option 56
- unlocking
 - device 219
 - SIM smartcards 218
 - spreadsheet rows and columns 181
- unread messages 110
- unretrieved voicemail 42
- unsafe areas 262
- untimed events 158, 159
- Update Library command 147
- updating information 67, 72
- upgrades 229
- uppercase letters 27, 216
- urgent message icon 110
- URLs 146, 177
 - See also web links

- USB connections 129
- USB controllers 241
- USB hubs 240
- USB ports 75, 240
- USB sync cable 75
- Use above settings while roaming check box 81
- Use network time zone check box 221
- user discussion groups 253
- User Guide 253
- usernames 258

V

- Validity Period list 107
- vCal attachments 246
- vCard attachments 106, 246
- Vibrate when... check boxes 57, 210
- vibrating alarm 208, 210
- video albums 140
- video file types 140
- video files 104, 143, 242
- Video Mode command 137
- video options 149
- video ringtones 135, 141
- Video tab 139, 149
- videos
 - adding sounds 139

- adding to messages 105
 - changing resolution 137
 - defaults for 139
 - downloading 143, 144
 - limiting length 139
 - previewing 137
 - receiving 135
 - recording 137–138
 - saving 139
 - sending 141
 - setting resolution for 248
 - synchronizing 143
 - viewing 135, 140, 143
 - View By command 154
 - View command 120, 156
 - View Recording Toolbar
 - command 165
 - viewing
 - alternate characters 28
 - animated images 143
 - applications on device 30
 - appointments 156
 - calendar 156
 - contacts 39, 154
 - current connection 227
 - daily schedules 156
 - events 158, 160
 - folder contents 192
 - items in folders 176, 187
 - memory usage 224
 - multimedia messages 109
 - notifications 57, 210
 - on-device documentation 253
 - PDF files 171
 - pictures 135, 140, 143
 - power settings 224
 - Quick Tour documentation 253
 - running applications 224
 - space on expansion cards 202, 224
 - tasks 164
 - videos 135, 140, 143
 - web pages 119, 120
 - wireless settings 225
 - virtual private networks. *See* VPN connections
 - voice captions 105
 - Voice Command button 214, 215
 - Voice Command icon 234
 - Voice Command screen 214
 - Voice Command settings 214, 234
 - voice commands 14, 215
 - Voice mail option 56
 - voice notes 165, 215
 - Voice recording format list 215
 - voice recording formats 215
 - voicemail
 - customizing 50, 56
 - receiving notifications for 43
 - retrieving messages 43
 - sending calls to 41, 46
 - setting up 42
 - voicemail buttons 50
 - Voicemail icon 42
 - voicemail systems 42
 - volume
 - phone 15, 57
 - ringer 57
 - tapping sounds 209
 - Volume button 7, 15, 57
 - VPN clients 227, 239
 - VPN connections 91, 96, 227
 - VPN software 227
- W**
- waking up screen 36, 44
 - wallpaper 135
 - warnings 209, 262
 - warranty 2
 - WBMP files 104
 - weak signals 235, 252

web addresses 32, 120, 248

See also web links

web browser. *See* Internet Explorer Mobile

web browsing
memory consumption and 251
requirements for 1
secure sites and 119, 120, 248

troubleshooting 247

web files 124

web links

clearing 124
internal memory and 251
messages and 110, 121
Palm online support 253
selecting 21, 120
troubleshooting 248

web pages

accessing 119, 121, 123, 247
arranging on screen 120
clearing links to 251
copying from 123
dialing from 41, 123
display options for 120
downloading items from 122, 195

hiding images on 120

moving through 120
playing media files from 146

refreshing 120, 247
resizing text on 121
returning to recently viewed 123
scrolling 120
searching 119
security settings for 125
selecting addresses on 248

sending email from 121
setting as home 124
viewing 119, 120

Web search field 119

websites

See also web browsing
accessing 117
compatibility with 119
connecting to 119, 129
ending connections to 228
redirectors and 248
searching over 119
submitting transactions and 248

week numbers 161

Week View 156, 161

Week view option 161

Windows Media Player 123

Windows Mobile devices 198, 229

Windows Mobile Getting Started Disc 2, 193

Windows Mobile operating system 234, 258

Windows Mobile software 194

wireless band setting 61
wireless connections 117, 125, 129–131

wireless coverage 14, 35
wireless features 13, 117, 226, 249

Wireless Manager 13, 35, 225

Wireless Manager command 13, 35

wireless modems 129

wireless phones 265

wireless services 13, 225

wireless synchronization 70, 77, 82, 83, 244

WMA files 140, 144

WMV files 140, 144

Word application 169

See also documents

Word Completion tab 215

word matching 173, 187

Word Mobile application 20,
171–177

Word Mobile icon 172

word-processing features
172

workbook list 188

workbooks

See also Excel Mobile
application;
spreadsheets

creating 180

deleting 188

displaying 181

moving around in 181

naming 187

organizing 187

replacing information in
186

saving 178, 180, 188

searching 186

setting default template
for 188

worksheet names 179

worksheets

See also spreadsheets;
workbooks

adding 183

adjusting column and row
size for 184

deleting 188

entering defined names in
184

entering formulas in 182,
187

entering functions in 182

filtering data in 185

formatting options for 184

inserting cells, rows, and
columns 183

moving between 181

naming 183

removing cells, rows, and
columns 187

renaming 184

Writing mode 167

X

Xpress Mail 89–90

troubleshooting 245

Xpress Mail website 89

Y

Year View 156

Z

ZIP files 193

zoom buttons (camera) 136

Zoom command 121, 173

zoom icons (presentations)
177

Zoom In command 177

zoom options 136

zoom settings 179, 181, 216