

TABLE OF CONTENTS

YOUR PHONE 3

Front View Features	3
Side by Side View	4
SIM Card	5
Battery	9
Replacing the Back Cover	11
Memory Card	12
Power	14
Lock Screen	14
Sign in to your phone	15
Using your phone	16
Messaging	18
Customizing your phone	20
Connections	26
Camera and Video	28
Your Navigator Deluxe	31
Kid's Corner	32
Back up your stuff	33

Tips + Tricks

36

NOTES

37

YOUR PHONE

FRONT VIEW FEATURES




1. FRONT FACING CAMERA
2. BACK KEY
3. HOME KEY
4. BING™ SEARCH
5. EARPIECE
6. FLASH
7. HEADSET JACK
8. CAMERA LENS



YOUR PHONE

SIDE BY SIDE VIEW

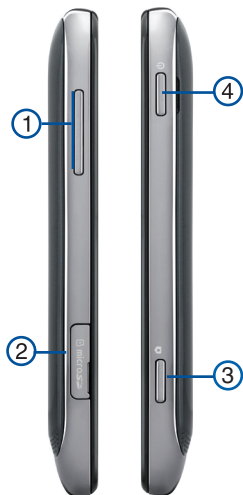

1. VOLUME KEY
2. MEMORY CARD SLOT
3. CAMERA KEY
4. POWER/LOCK KEY

SIM CARD

This device uses a micro SIM. The new micro SIM (Subscriber Identity Module) card identifies your phone to the wireless network. You cannot make or receive calls or browse the Internet without a properly installed micro SIM card. Other larger SIM cards will not function or fit within this slot.

Insert the SIM card

1. Hold the device firmly and locate the cover release latch.



2. Place your fingernail in the opening and firmly “pop” the cover off the device (like a soda can).



3. With the battery removed, carefully slide the SIM card into the SIM card slot (as shown).



NOTE: This device requires a SIM card. Please insert the SIM card included in the package prior to turning on the device. This SIM card will only work with this device. Once the SIM card has been inserted, do not remove!

If your SIM card is ever separated from the device or damaged, your device will not function. If you experience any issues with your device, contact Customer Service at 888-944-9400 (or dialing 611 on Your U.S. Cellular® handset) or visit your nearest U.S. Cellular retail location.

SIM Card Limited Warranty

Subject to the exclusions contained below, United States Cellular Corporation ("U.S. Cellular®") warrants to the original purchaser ("You" or "Your") of the handset with which the SIM card was provided that the SIM card will be free from defects in material and workmanship for a period of one (1) year from the date You purchased the handset (the "Warranty Period"). This warranty is not transferable. Should a defect appear during the Warranty Period, U.S. Cellular will send a replacement SIM card to Your address within the United States without charge provided that you request the replacement SIM card during or within thirty (30) days following the Warranty Period by calling U.S. Cellular Customer Service at 888-944-9400 (or dialing 611 on your U.S. Cellular handset) or by visiting a U.S. Cellular retail store.

REPLACEMENT OF THE SIM CARD AS PROVIDED HEREIN IS YOUR EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY, AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED INCLUDING, WITHOUT LIMITATION, ANY WARRANTIES OF TITLE, FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, NON-INFRINGEMENT OR ARISING FROM COURSE OF DEALING OR USAGE OF TRADE. NEITHER U.S. CELLULAR NOR ANY OF ITS AFFILIATES OR RETAILERS SHALL BE LIABLE TO YOU FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, ECONOMIC, EXEMPLARY, PUNITIVE OR CONSEQUENTIAL DAMAGES (INCLUDING, WITHOUT LIMITATION, LOSS OF DATA, LOSS OF REVENUE OR PROFITS, DAMAGE TO PROPERTY OR LOSS OF USE). IN NO EVENT SHALL U.S. CELLULAR'S, ITS AFFILIATES' OR RETAILERS' LIABILITY TO YOU OR ANY THIRD PARTY WITH RESPECT TO THE SIM CARD EXCEED THE COST OF REPLACING THE SIM CARD.

THIS LIMITED WARRANTY SHALL BE CONSTRUED UNDER THE LAWS OF THE STATE OF ILLINOIS, EXCLUDING ITS CONFLICTS OF LAW PROVISIONS. SOME STATES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, OR THE DISCLAIMER OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS AND DISCLAIMERS MAY NOT APPLY TO YOU.

No agent, employee, dealer, retailer, representative or reseller is authorized to modify or extend the terms of this Limited Warranty.

BATTERY

Your phone is shipped with the battery partially charged. Please charge it fully before using it for the first time.

Install the Battery

1. Insert the battery, making sure the connectors align (1).
2. Gently press down to secure the battery (2).



Charge the battery

1. Connect the USB cable to the charging head.
2. Insert the USB cable into the device's Charger/Accessory jack.



3. If using a wall charger, plug the charging head into a standard AC power outlet. If using a computer, remove the charging head and plug the USB cable into computer's USB port.

REPLACING THE BACK COVER

- Align the bottom tabs, press the edges of the cover until the cover snaps into place.



MEMORY CARD

Your phone **does not** come with a microSD memory card. However, you can purchase one separately and use it to store your multimedia files.

NOTE: This phone supports up to a 64GB microSD memory card.

WARNING: Applications, personal settings and other stored data may be lost or may not function properly if the memory card is removed.

Installing the optional microSD Card

1. Locate the microSD™ card slot on the side of the phone.
2. Place the card with the gold strips facing down.
3. Carefully slide the optional microSD card into the card slot (as shown) until it “clicks” into place.

* microSD card sold separately.



POWER

Turn the phone on

- ▶ Press and hold  (Power/Lock) until the phone switches on. It searches for your network and after finding it, you can make or receive calls.

Turn the phone off

- ▶ To power off, press and hold  (Power/Lock) until the lock screen displays the message slide down to power off. Touch the screen and swipe downward

LOCK SCREEN

1. To lock the display, press  (Power/Lock).
2. To unlock the display, press  (Power/Lock) then swipe your finger up the display.

SIGN IN TO YOUR PHONE

You need to sign in with a Microsoft account to do all kinds of things on your phone. Use it to:

- Download apps, music, and games from the Windows Phone Store.
- Create backups of your phone settings to guard against mishaps.
- Play Xbox games.
- Use Find My Phone to ring, lock, or erase your phone, or find it on a map.
- Get your Facebook, Twitter, and LinkedIn feeds on your People Hub.
- Automatically upload your photos and videos to SkyDrive.
- Listen to music using an Xbox Music Pass*.

NOTE: A Microsoft account is the email address and password you use to sign in to Hotmail, Xbox, Windows, Messenger, SkyDrive, and more.

If you're not sure whether you already have one, or if you have more than one and need to choose between them, go to www.windowsphone.com to learn more.

*Xbox Music Pass is a monthly music subscription service. Some Windows Phone Store content may not be available via Xbox Music Pass and may vary over time.

USING YOUR PHONE

Making a Call

1. From the Start screen, tap  →  and use the on-screen keypad to enter the number you want to dial.
2. Touch call to make the call.

Receiving a Call

- At the incoming call screen, tap  to answer the call or  to send the call to your voicemail.

Create new contacts

It's easy to quickly create a contact from a phone number. Just tap the number in your call history, then tap **Save** . Or, to start from scratch, tap **Add**  in the People Hub contact list.

If you save a contact to your Microsoft account, it'll be synced to the cloud automatically. That way, your contacts are backed up if you lose your phone, and you can see them from anywhere you sign in to Hotmail or www.outlook.com.

Editing an Existing Contact

When editing an existing contact, you can touch a field and change or delete the information, or you can add additional fields to the contact's list of information.

1. From the Start screen, tap **People** .
2. Swipe to the **all** list, then touch the contact that you want to edit → tap **edit**  at the bottom of the screen.
3. Tap the fields that you want to edit and then use the keyboard to make any changes.
4. Tap **save**  to save the edited information.

MESSAGING

Sending a message

1. From the Start screen, tap **Messaging**  → **New** .
2. Tap the **To** field or  to the right of the **To** field to enter a recipient.
3. Tap the **type a text message** box and use the on-screen keyboard to type your message.
4. If desired, touch **attach**  to add a picture, video, your current location, a voice note, or a contact to the message.

To remove an attachment, touch and hold the attachment, then tap remove from the pop-up menu.

5. Review your message and tap **send** .

Setting Up Your Email

1. From the Start screen, touch **Email** .
2. Tap an email provider such as Outlook, Hotmail, Yahoo! Mail, or Google.
3. Provide the required information and tap **sign in**.

NOTE: For some email accounts, such as Outlook, entering your email address and password may not be enough information. You may need to enter additional information.

CUSTOMIZING YOUR PHONE

Ringtones and sounds

You can assign ringtones to people and choose sounds for alerts. Pick just the right tunes, jingles, rings, or songs to suit your tastes.

To change a ringtone for a contact:

1. From the Start screen, swipe left to view the Applications screen.
2. Tap **People** → **All**.
3. Tap the contact you want to change, then tap **Edit** .
4. Tap the **Ringtone** box.
5. Tap the ringtone you want to use.

To change any other ringtone or alert:

1. From the Start screen, swipe left to view the Applications screen.
2. Tap **Settings**  → **ringtones + sounds**.
3. Tap the type of ringtone or alert you want to change, then choose the sound you want to use.

Creating your own ringtone

You can also create your own ringtones. For information, go to www.windowsphone.com.

Make it yours

Pin just about anything you want to your Start screen: apps, songs, map locations, favourite websites, OneNote notes, photo albums, and a lot more.

When you pin a contact to Start, you'll get their Facebook, Twitter, and LinkedIn updates right from that Tile, plus see when they've called or sent you any messages. And it's like speed dial: calling them—or texting them or emailing them—is just a tap away.

- To add a tile, touch and hold the application you want to add → Tap pin to start.
- To move, just tap and hold it, then arrange it however you'd like.
- To resize a tile, touch and hold the Tile you want to resize → tap where the  appears to resize.

Choose your color

Choose a theme color and it'll show up all around your phone: on Start, in your App list, in Messaging, and more. You can also make your background either white or black.

1. From the Start screen, swipe left to view the Applications screen.
2. Tap **Settings**  → **Theme + Background** or **Accent color** to choose your look.

See what's new, at a glance

You don't even have to unlock your phone to get a picture of what's happening in your day. And you get to choose what you want to see, including:

- Phone calls and voicemails
- Text messages
- Email messages
- Upcoming calendar appointments
- Game notifications
- Notifications from some of the apps you get in the Store

You can also pick the image that greets you when you turn on your phone. Pick one you like best, or show an image from Bing. If you're playing music, we can also show you a picture of the artist.

To choose what you'd like to see on your lock screen:

1. From the Start screen, swipe left to view the Applications screen.
2. Tap **Settings**  → **Lock screen**.

Rooms and Groups

Rooms and Groups are a great way to stay in touch with the people who matter most to you. With Rooms, you send a text message inviting family and friends to join, and when they accept, you'll be able to chat with the whole room and privately share a calendar, photos, and notes with them.

With Groups, you just add some contacts, and then you can see updates from Facebook and Twitter, new messages, and missed calls, just from those folks, all in one place. Plus, you can send them group texts and emails. No need to invite them—a Group is just for you!

Your phone comes with a “Best friends” group and a “Family Room” to get you started—you'll see their Tiles when you go to People and tap Together.

Tap one to set it up.

To create a new Room or Group:

1. From the Start screen, swipe left to view the Applications screen.
2. Tap **People** → **Together** → **Add** .
3. Tap either Room or Group and follow the instructions.

CONNECTIONS

Bluetooth

1. From the Start screen, tap **Settings**  → **Bluetooth**.
2. If necessary, touch and drag the slider to the right to turn Bluetooth On.
A list of available Bluetooth devices will display.
3. From the list, tap the device you want to pair with your phone and follow the prompts to connect.

Internet Explorer

Your phone is equipped with Internet Explorer—your access to the mobile web. This section explains how to navigate and introduces you to the basic features.

- From the Start screen, tap **Internet Explorer** . Just type whatever you're looking for in the search box, then tap **Go** .

Search and do with Bing

No matter where you are on the phone, you can always search with Bing by pressing the **Search** button .

Just type whatever you're looking for in the search box, then tap **Go** . Bing will show you not only the web results, but also local results (including maps, ratings, and directions) and images.

Plus, there are even more ways to search than with words.

- Tap **Local Scout**  to see places to eat, drink, shop, and visit nearby.
- Tap **Bing Music**  to identify songs and get them at the Windows Phone Store.
- Tap **Bing Vision**  to scan barcodes, QR Codes, Microsoft Tags, books, magazines, and more to get more information or translations.

And you can always tap **Speech**  to say what you're looking for and spare your fingers the typing.

CAMERA AND VIDEO

There are piles of apps to make the photos you take on your phone look vintage, fancy, panoramic, silly, or just black and white. With Lenses, you don't have to dig to find your camera apps—you can get to them right from the Camera by tapping Apps. Here are a few more tips for your inner shutterbug.

Did you know you can:

- Press and hold   to bring up the Camera from anywhere.
- Add pictures to your Favorites album to create a slideshow in your Photos Tile.
- Press   halfway to focus the Camera.
- Tag faces in the photos you share. Look for Who's this? and then type the person's name.

Taking a Picture

1. Press the **Camera** key  .
2. Using the phone's main display screen as a viewfinder, adjust the image by aiming the camera at the subject.
NOTE: When taking a photo in direct sunlight or in bright conditions, shadows may appear on the photo.
3. Before you take a photo, pinch the screen to zoom out or stretch the screen to zoom in. You can magnify the picture up to 400 percent.
4. Tap  to turn the flash On. Tap  to turn the flash Off. To use the automatic flash, tap .
5. To take a picture of yourself, tap the Front Facing **Camera** icon  to enable or disable the Front Facing Camera.
6. If desired, before taking the photo, you can tap **Options**  to access various photo and video settings.
7. Press the **Camera** key   until the shutter sounds.

Recording a Video

1. Press the **Camera** key  from anywhere.
2. Tap the **Camera** or **Camcorder Mode** icon  to switch to Camcorder mode .
3. To shoot a video of yourself, tap the **Front Facing Camera** icon  to enable or disable the Front Facing Camera.
4. Tap  to turn on the camcorder's light while recording. Tap  to turn the light off.
5. Using the phone's main display screen as a viewfinder, adjust the image by aiming the camcorder at the subject.
6. Press the **Camera** key  to begin shooting video.
7. Press the **Camera** key  to stop the recording and save the video file to your Pictures folder.

YOUR NAVIGATOR DELUXE

With Your Navigator Deluxe, get all of the features of an advanced car navigation system on your mobile phone with voice turn-by-turn navigation enabled by GPS. Search for any destination including gas stations, ATMs, restaurants, and more. Get detailed maps of any location.

1. In order to use Your Navigator Deluxe, you must first turn on your phones location and GPS settings.

TIP: To turn on Location, tap **Settings** → **location**. Slide the slider to the right to turn location mode on.

2. From the Start screen select the Your Navigator Deluxe application.

From the Your Navigator Deluxe Home screen you can select:

- **“Drive To”** for turn by turn direction to an address, airport, contacts addresses and more
- **“Places”** to search for nearby businesses, the cheapest gas prices and more
- **“Maps & Traffic”** to see where you currently are located on a map and what traffic is in the area

KID'S CORNER

Kid's Corner gives you a way to share apps, videos, games, and music with your child without worrying that they might accidentally buy something, delete something important, or send email to your boss.

To set it up, tap Kid's Corner and follow the instructions. Once it's set up, your child gets to Kid's Corner by swiping left from your lock screen. There's a whole separate Start screen, where kids can choose the theme, arrange their own Tiles, and play anything you've shared with them. To leave Kid's Corner, press the phone's Power button.

BACK UP YOUR STUFF

When you sign in with your Microsoft account on your Windows Phone, you can turn on the service that lets you automatically save things to an online service known as the cloud. When you set up backups on your phone, you can:

- Automatically upload your photos and videos to SkyDrive so you can see them from anywhere you can access the web.
- Sync your SMS and MMS messages to Hotmail so you have a backup, just in case.
- Create backups of your phone's settings, including the list of apps you've installed, your theme color, Internet Explorer favorites, accounts, and more.

You can fine-tune your backup options in **Settings**



→ **Backup.**

For example, you can automatically upload your photos and videos at a high resolution, or manually back up your settings any time you choose.

Move things between your phone and your computer

It's easy to get your photos, videos, music, documents, and more from your computer to your phone (and vice versa).

If you have a Windows 8 PC:

- Plug your phone into your computer with the cable, and the Windows Phone app will install automatically.

If you have a Windows 7 PC:

- Plug your phone into your computer with the cable. A link will appear to install the Windows Phone app.

If you have a Mac:

- Get the Windows Phone app from the Mac App Store.

To learn more about finding the right app, go to www.windowsphone.com.

Get apps, Find a lost phone, and more

When you go to www.windowsphone.com and click **My Phone**, you can find and get apps and games at the Windows Phone Store on the web and then easily add them to your phone. You can also set up Find My Phone, where you can ring, lock, erase, or find your phone on a map, all for free.

Explore more at www.windowsphone.com.

TIPS + TRICKS

Here are a few more tips to help you turn pro on your Windows Phone:

- The real secret to using a Windows Phone? Tap and hold to discover more options. Open menus, rearrange Tiles, place your cursor exactly where you want it, find more characters, punctuation, and accents on the keyboard, and much more.
- Use Speech from anywhere. Just press and hold the Start button, and follow the instructions to get started. Or tap Speech from Messaging or Search and talk away.
- Make your phone's battery last longer. Go to **Settings**  **→ Battery saver**, where you'll also find a handy charge-left estimate.

NOTES

[illegible]