

TABLE OF CONTENTS

YOUR PHONE 3

Front View Features	3
Keypad Features	4
Additional Phone Features	5
Battery Installation/Removal	6
Charging Your Battery	12
Turning Your Phone On or Off	13

PHONE FUNCTIONS 14

Locking/Unlocking Your Wireless Device	14
Setting Up Voicemail	15
Calling Features	16
Sound Settings	19
Display Settings	22
Contacts	23
Messaging	25
Bluetooth	27
Web Browsing	30

easyedge	31
Your Navigation	33
Camera & Camcorder	34

NOTES	36
--------------	-----------

YOUR PHONE

FRONT VIEW FEATURES



 
- | | |
|---------------------|----------------------|
| 1. HEADSET JACK | 6. CENTER SELECT KEY |
| 2. EARPIECE | 7. BACK KEY |
| 3. SEND KEY | 8. END/POWER KEY |
| 4. SPEAKERPHONE KEY | 9. SOFT KEYS |
| 5. MICROPHONE | |

KEYPAD FEATURES

- | | |
|---------------------------------------|------------------|
| 1. SHIFT KEY | 6. CALENDAR KEY |
| 2. FN (FUNCTION) KEY | 7. MESSAGE KEY |
| 3. LOCK/SYM KEY | 8. ENTER KEY |
| 4. VIBRATION MODE KEY | 9. BACKSPACE KEY |
| 5. SPACEBAR/
VOICE COMMANDS
KEY | |



ADDITIONAL PHONE FEATURES

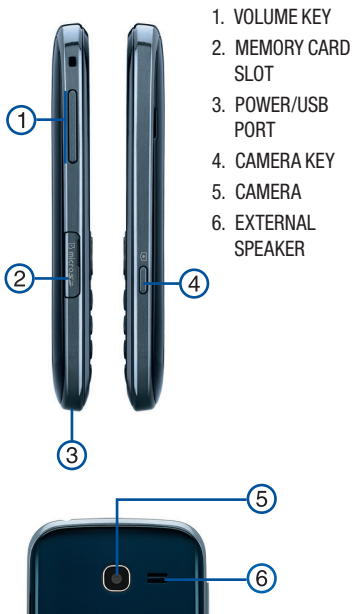

BATTERY INSTALLATION/REMOVAL


Your phone is powered by a rechargeable, standard Li-Ion battery. A charger is included with the phone, for charging the battery.

NOTE: Although the battery comes partially charged, you must fully charge this battery before using your phone for the first. A fully discharged battery requires up to 4 hours of charge time.


WARNING: Use only Samsung-approved charging devices and batteries. Only Samsung accessories are designed to maximize battery life. Using other accessories may invalidate your warranty and may cause damage.

Installing the Battery

1. Hold the device firmly and locate the cover release latch.
2. Place your fingernail in the opening and firmly “pop” the cover off the device (1).

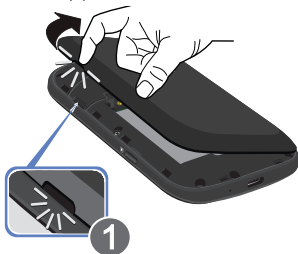

 3. Insert the top end of the battery into the phone housing (2), aligning the gold contacts on the battery with those in the battery compartment (3).

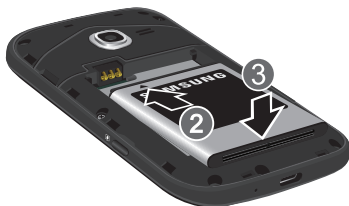


4. Push down on the bottom of the battery down until it snaps into place.

5. Replace the battery cover by sliding it back into place and snapping the edges securely at all four corners.



Removing the Battery

1. Hold the device firmly and locate the cover release latch.
2. Place your fingernail in the opening and firmly “pop” the cover off the device (1).

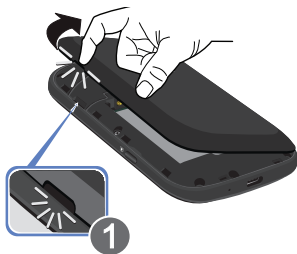

3. Place your finger into the battery removal slot (2) and lift the battery out of the compartment.



4. Replace the battery cover by sliding it back into place and snapping the edges securely at all four corners.



CHARGING YOUR BATTERY


Your phone comes with a travel adapter to rapidly charge your phone from any 100/240V AC outlet.

NOTE: Although the battery comes partially charged, you must fully charge this battery before using your phone for the first.

1. Plug the charging head into a standard AC power outlet.



2. Insert the cable into the charging port at the base of the phone.
3. Once complete, unplug the charging head from the power outlet and remove the travel adapter from the phone.

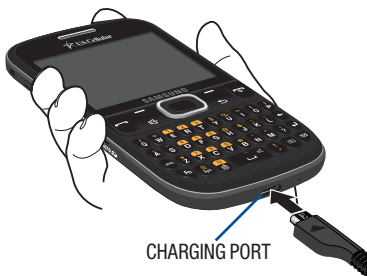

TURNING YOUR PHONE ON OR OFF

- Press and hold  (End/Power) until the phone turns on or off.

PHONE FUNCTIONS

LOCKING/UNLOCKING YOUR WIRELESS DEVICE

1. Press the  (**End/Power**) to wake the display.
2. Press  (**Right softkey**) →  (**Spacebar**) to unlock the display.

To lock the display:

- From the Home screen press  (**Lock/Sym**) to lock the display.

SETTING UP VOICEMAIL

Voicemail allows callers to leave voice messages, which can be retrieved any time.

NOTE: Once your Voicemail account has been properly set up, you can use the **Voicemail** folder (under the **Messaging** menu) to view details for your current voicemail messages.

1. From the Home screen, press and hold  or dial your own mobile number to dial Voicemail.
2. Follow the prompts in the new user tutorial to setup your mail box.

Listening to Your Voicemail

1. From the Home screen, press and hold  or dial your own mobile number to dial Voicemail. After connection, you will hear your voice greeting.
2. When prompted, enter your password.

CALLING FEATURES

Making a Call

1. From the Home screen, press the digits of the telephone or speed dial number to call using the keypad and press  (**Send**).

IMPORTANT: Remember to include necessary long distance codes.

Ending a Call

- ▶ Press  (End/Power) to end a call.

Answering a Call

- ▶ Press  (**Send**) to answer an incoming call.

Call Waiting

This feature allows you to receive new inbound calls while in an active call.

1. Press  (**Send**) to place the current call on hold and answer the new call.
2. Press  (**Send**) again to return to the first call.

Making a Three-way Call

Three-way calling is similar to a conference call with a total of three people (including yourself). Make a call to two numbers and connect them together on your phone using three-way call.

1. From the Home screen, enter the number for the first caller on your dialpad, then press  (**Send**).
2. Enter the second party's phone number and press  (**Send**).
3. Once the second party answers, press  (**Send**) to connect all three parties.

Using the Speakerphone

- During a call, press and hold  (**Speakerphone**) to switch between the receiver and the speakerphone.

SOUND SETTINGS

The following information describes how to adjust the volume levels on your phone and assign a new ringtone.

Adjusting the Volume

1. Press the  (**End/Power**) to wake the display.
2. Press  (**Right softkey**) →  (**Spacebar**) to unlock the display.
3. From the Home screen, press the  (**Volume key**) up or down .

Activating/Deactivating Vibrate Mode

1. Press the Volume key down until **Vibrate Only** appears in the display.
2. Press the Volume key up to resume Normal mode.
– OR –
► From the Home screen, press and hold  to activate or deactivate vibration mode.

Assigning Ringtones

1. From the Home screen, press  (**MENU**) → **Settings** → **Sounds** → **Settings** → **Call Sounds** → **Call Ringtone**.
2. Highlight a ringtone and press  (**Left softkey**) to play the selected ringtone. Press again to stop playback.
3. Press  (**SET**) to set the highlighted ringtone as your new call sound.

DISPLAY SETTINGS

Changing the Wallpaper

1. From the Home screen, press 
(MENU) → **Settings** → **Display**
Settings → **Wallpaper**.
 - Home Screen
 - Lock Screen
2. Highlight a preloaded wallpaper and press  (**SET**).

CONTACTS

Creating a contact

- From the Home screen, press  (MENU) →  (Contacts) → **New Contact** → enter your information and press  (SAVE) to save.

Deleting a contact

1. From the Home screen, press  (MENU) →  (Contacts) → **Contact List**.
2. Highlight the contact you want to delete and press  (Options) → **Erase**.

My Contacts Backup

My Contacts Backup automatically protects the contact information stored in your mobile phone and allows you to easily transfer mobile contacts to a new phone. All backup functions occur wirelessly, so you never need to plug your phone in to your computer. Best of all, My Contacts Backup is FREE* for all U.S. Cellular subscribers.

*easyedgeSM pay-as-you-go users who incur data access charges for My Contacts Backup while roaming should dial 611 for a bill credit.

1. From the Home screen, press  (MENU) →  (easyedge) →  (My Contacts Backup).
2. After the application is launched →  (Next) →  (Yes) to accept the Terms and Conditions to proceed to the set up screen.

3. Enter your pin →  (OK) →  (OK).

NOTE: By default, the pin will be the 0000. You can change your pin later via the **Set Up** → **Change Pin**.

4. Back up contacts stored on the device to My Contacts Backup server by pressing  (Yes) →  (OK).

MESSAGING

Accessing Messaging

- ▶ From the Home screen, press  (MENU) →  (Messaging).
– OR –
- ▶ In standby mode, press  (Message key).

Create and Send a Message

1. From the Home screen, press  (MENU) →  (Messaging) → **New Message**.
2. Manually enter the destination address(es). Press  (**Add**) to select available recipients from either **From Contacts**, **Recent Calls**, **Favorites** or **Groups**.

NOTE: When manually entering a contact, if the contact is stored in your Contact List, you will see a list of partially matched names in the drop down box.

3. Scroll to the **Text field** and enter your message.

To Add a Multimedia type

4. Press  (**Options**) → **Attach** → Select an attachment type.
5. Press  (**SEND**) to send your completed message.

BLUETOOTH

Bluetooth® is a short-range wireless communications technology capable of exchanging information over a distance of about 30 feet without requiring a physical connection.

Turn Bluetooth On or Off

- ▶ From the Home screen, press  (MENU) → **Tools** → **Bluetooth**
Menu →  (**Turn On** or **Turn Off**).

Adding a New Device

1. From the Home screen, press  (MENU) → **Tools** → **Bluetooth Menu** →  (Turn On).
2. Highlight **Add New Device** and press  (OK).

NOTE: If prompted with “Turn bluetooth on?”, select **Yes**.

3. Place the new external Bluetooth device in discovery mode.
4. On your phone, press  (OK). Your phone begins searching for discoverable and visible devices, then display them on your screen.

5. Select the device you want to pair with your phone. The phone then attempts to automatically pair with the selected device.
 - If automatic pairing fails, you are prompted to enter the passkey or PIN for the selected device.
(For other wireless handsets, choose a passkey or PIN and enter the same one on both devices. For more information on headsets and handsfree units, refer to the user manual for the other device.)
 - Except for other wireless handsets, you are then prompted to confirm whether you want to connect your phone with the other device.
6. At the popup highlight **Yes** and press  (**OK**).

WEB BROWSING

Launching and Exiting the Web Browser

- ▶ From the Home screen, press  (MENU) →  (Browser).

To exit browser:

- ▶ Press  (End/Power) to exit.

EASYEDGE

With **easyedge**SM, you can download full featured applications over the air including games, personalized ring tones, pictures, and more.

NOTE: **easyedge**SM from U.S. Cellular is only available on approved phones and requires an **easyedge**SM data plan. Visit www.uscellular.com/easyedge or call U.S. Cellular customer service (by dialing 611 on your phone) and ask about **easyedge**SM.

Launching and Exiting **easyedge**

- ▶ From the Home screen, press  (MENU) →  (**easyedge**).

To exit **easyedgeSM:**

- ▶ Press  (**End/Power**), at the popup highlight **Yes** and press  (**OK**) to exit.

Applications

Whether you're looking for the hottest ringtone, the latest game, or an awesome GPS navigation tool, you'll find it.

1. From the Home screen, press  (MENU) →  (easyedge) →  (easyedgeSM).
2. Select a category and follow the prompts to download and install a application on your device.

Downloading Mobile Email

1. From the Home screen, press  (MENU) →  (easyedge) →  (easyedgeSM).
2. Select **Catalog** → **My Data Apps** or **My Data Apps Plus** → **Free Mobile Email**.
3. Follow the prompts to download and install the application on your device.

YOUR NAVIGATION

With Your Navigator, get all of the features of an advanced car navigation system on your mobile phone with voice turn-by-turn navigation enabled by GPS. Search for destinations including gas stations, ATMs, restaurants, and more. Get detailed maps of any location.

Launching Your Navigator

1. From the Home screen, press  (MENU) →  (easyedge) →  (Your Navigator).
2. From the Your Navigator Deluxe Home screen you can select:
 - “Drive To” for turn by turn direction to an address, airport, contacts addresses and more
 - “Places” to search for nearby businesses, the cheapest gas prices and more
 - “Maps & Traffic” to see where you currently are located on a map and what traffic is in the area

CAMERA & CAMCORDER

Use your phone's built-in Camera to take pictures and record video.

Camera

1. From the Home screen, press and hold the  (**Camera**) on the right side of the phone.

NOTE: You can also activate the camera by pressing  (MENU) → Multimedia → Camera.

2. Using the display as a viewfinder, point the camera lens at your subject.
3. Press  to capture the image.
4. Press  (**Left softkey**) to save the picture.

Camcorder

1. From the Home screen, press and hold the  (**Camera**) on the right side of the phone.
2. Press  (**Options**) → highlight **Camcorder** and press  (**OK**).

NOTE: You can also activate the camcorder by pressing  (**MENU**) → **Multimedia** → **Camcorder**.

3. Using the display as a viewfinder, compose your recording by aiming the lens at the subject.
Press  to start recording.
Press again  to stop recording.
4. Press  (**Save**) to save the recording.

NOTES
