

Samsung GALAXY Note® II

available at T-Mobile®

P O R T A B L E Q U A D - B A N D
M O B I L E P H O N E

User Manual

**Please read this manual before operating your
phone and keep it for future reference.**



Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating there to (the "Phone System"), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

Open Source Software

Some software components of this product, including but not limited to 'PowerTOP' and 'e2fsprogs', incorporate source code covered under GNU General Public License (GPL), GNU Lesser General Public License (LGPL), OpenSSL License, BSD License and other open source licenses. To obtain the source code covered under the open source licenses, please visit:

<http://opensource.samsung.com>.

Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING

THERE TO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

SAMSUNG IS NOT LIABLE FOR PERFORMANCE ISSUES OR INCOMPATIBILITIES CAUSED BY YOUR EDITING OF REGISTRY SETTINGS, OR YOUR MODIFICATION OF OPERATING SYSTEM SOFTWARE.

USING CUSTOM OPERATING SYSTEM SOFTWARE MAY CAUSE YOUR DEVICE AND APPLICATIONS TO WORK IMPROPERLY.

SAFE™ is marked for a Samsung device which has been tested against Samsung's own internal criteria for interoperability with certain third party security-related solutions for MDM and VPN. The testing includes field testing with local network connection and menu tree testing which tests functionality of the solutions in conjunction with the Samsung device.

During the testing, the device is tested with the security solutions to see if the solutions work with the device as described by the third party security solution providers. For more information about Samsung's SAFE™ program, please refer to www.samsung.com/us/safe.

Disclaimer of Warranties: TO THE FULL EXTENT PERMITTED BY LAW SAMSUNG ELECTRONICS CO., LTD., SAMSUNG TELECOMMUNICATIONS AMERICA, LLC, AND THEIR AFFILIATES (COLLECTIVELY REFERRED TO HEREIN AS THE "SAMSUNG ENTITIES") EXPRESSLY DISCLAIM ANY AND ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, INTEROPERABILITY OR NON-INFRINGEMENT, WITH RESPECT TO INFORMATION TECHNOLOGY SECURITY PROTECTION, SAFE™ DEVICES AND APPLICATIONS TESTED WITH SAFE™ DEVICES. IN NO EVENT SHALL THE SAMSUNG ENTITIES BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES OF ANY KIND WHATSOEVER WITH RESPECT TO INFORMATION TECHNOLOGY SECURITY PROTECTION, SAFE™ DEVICES OR APPLICATIONS TESTED WITH SAFE™ DEVICES. In addition, information technology security protection will be affected by features or functionality associated with, among other things the e-mail platform, master data management, and virtual private

network solutions selected by the software provider, solution provider or user. Choice of an e-mail, master data management, and virtual private network solution is at the sole discretion of the software provider, solution provider or user and any associated effect on information technology security protection is solely the responsibility of the software provider, solution provider or user. For complete statement of limited warranty, please refer to www.samsung.com/us/safe, available on the web and where Samsung smartphone and Galaxy Tab™ devices are sold.

Samsung Telecommunications America (STA), LLC

Headquarters:

1301 E. Lookout Drive
Richardson, TX 75082

Customer Care Center:

1000 Klein Rd.
Plano, TX 75074
Toll Free Tel: 1.888.987.HELP (4357)

Internet Address:

<http://www.samsung.com>

©2012 Samsung Telecommunications America, LLC. Samsung is a registered trademark of Samsung Electronics Co., Ltd.

Do you have questions about your Samsung Mobile Device?

For 24 hour information and assistance, we offer a new FAQ/ARS System (Automated Response System) at:

www.samsung.com/us/support

Nuance[®], VSuite[™], T9[®] Text Input, and the Nuance logo are trademarks or registered trademarks of Nuance Communications, Inc., or its affiliates in the United States and/or other countries.

ACCESS[®] and NetFront[™] are trademarks or registered trademarks of ACCESS Co., Ltd. in Japan and other countries.

The Bluetooth[®] word mark, figure mark (stylized “B Design”), and combination mark (Bluetooth word mark and “B Design”) are registered trademarks and are wholly owned by the Bluetooth SIG.

microSD[™] and the microSD logo are Trademarks of the SD Card Association.

Openwave[®] is a registered Trademark of Openwave, Inc.

Google, the Google logo, Android, the Android logo, Google Play, Gmail, Google Mail, Google Maps, Google Music, Google Talk, Picasa, YouTube and other marks are trademarks of Google Inc.

Wi-Fi is a registered trademark of the Wireless Fidelity Alliance, Inc.

Swype and the Swype logos are trademarks of Swype, Inc. © 2010 Swype, Inc. All rights reserved.

 DivX[®], DivX Certified[®] and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.

DivX Certified[®] to play DivX[®] video up to HD 720p, including premium content.

ABOUT DIVX VIDEO: DivX[®] is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified[®] device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified[®] device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu (tap **Apps** >

Settings > About device > Legal information > License settings > DivX® VOD > Register). Go to vod.divx.com for more information on how to complete your registration.

Dynamic Noise Suppression from Audience

Your phone is equipped with an advanced voice processing chip that delivers clear mobile calls by suppressing background noise, intermittent sounds (like a siren or nearby conversation), and echoes, allowing you to hear and be heard nearly anywhere.

How Does It Work?

Based on the intelligence of the human hearing system, the technology:

- Captures, evaluates and distinguishes all the sound signals surrounding your phone, and the person you're speaking with.
- Then isolates the primary voice in conversation and filters out the background noise - so the person you're calling hears only your voice, without disturbing background noise.
- Dynamically equalizes and adjusts voice volume to optimize your calling experience, so you can hear clearly and don't need to speak louder to overcome surrounding noise.

The noise suppression technology is built-in and already enabled in your new mobile phone. So it's ready to provide unsurpassed voice clarity with every call.

Table of Contents

Section 1: Getting Started 7

Understanding this User Manual	7
Battery Cover	8
Battery	12
Extending Your Battery Life	15
Initial Device Configuration	16
Switching the Device On or Off	18
Restarting the Device	19
Locking and Unlocking the Device	19
Creating a New Google Account	19
Signing into Your Google Account	20
Retrieving your Google Account Password ...	20
Confirming the Default Image and Video Storage Location	21
Creating a Samsung Account	21
Voice Mail	23
Visual Voicemail	24
Task Manager	25
Google Now	26

Section 2: Understanding Your Device27

Features of Your Device	27
Front View	29
Back View	31
Side Views	31
Device Display	32
Status Bar	33
Function Keys	40
Home Screen	41
Applications	44
Screen Navigation	55
S Pen	58
Using Gestures	63
Menu Navigation	65
Customizing the Screens	67

Section 3: Memory Card76

Using the SD Card	76
SD card Overview	76

Section 4: Call Functions and

Contacts List80

Displaying Your Phone Number	80
Making a Call	80
Ending a Call	81
Making Emergency Calls	82
Dialing Options	83
Answering a Call	84
Managing Reject Calls	85
International Calls	86
Pause Dialing	87
Wait Dialing	87
Redialing the Last Number	88
Speed Dialing	88
Wi-Fi Calling	90
In Call Options	93
Using S Voice	99
Logs Tab	100

Section 5: Entering Text104

Text Input Methods	104
Selecting the Text Input Method	104
Entering Text Using Swype	105
Using the Samsung Keyboard	110

Using Predictive Text	115
Using the Google Voice Typing	117

Section 6: Contacts119

Accounts	119
Contacts List	119
Finding a Contact	123
Contact List Options	126
Contact Menu Options	127
Contact Entry Options	128
Joining Contact Information	128
Sending a Namecard	131
Copying Contact Information	132
Synchronizing Contacts	133
Display Options	134
Adding more Contacts via Accounts and Sync	135
Additional Contact Options	137
Groups	138
The Favorites Tab	140

Section 7: Messages141

Types of Messages	141
Creating and Sending Messages	142

Message Options	143
Viewing Newly Received Messages	146
Deleting Messages	148
Message Search	149
Messaging Settings	149
Assigning Messages as Spam	153
Accessing your Spam Folder	154
Text Templates	154
Using Email	155
Microsoft Exchange Email (Outlook)	159
Using Google Mail	165
Google Talk	167
ChatON	167
Google +	169
Messenger	170

Section 8: Multimedia 171

Assigning the Default Storage Location	171
Using the Camera	172
Camera Options	173
Sharing Pictures	179
Using the Camcorder	188
Photo Editor	194

The Gallery	195
Using the Video Player	196
Media Hub	199
Play Movies & TV	202
Play Music	202
Music Player	208
Using Playlists	210
Creating a Playlist	211
Transferring Music Files	212
Removing Music Files	212
Music Hub	212
AllShare Play	214
AllShare Cast Hub	219
T-Mobile TV	225
YouTube	225

Section 9: Applications and Development226

Applications	226
AllShare Play	226
Amazon	228
Calculator	228
Calendar	228

Camera	231
ChatON	231
Clock	232
Contacts	235
Downloads	235
Dropbox	235
Email	237
Flipboard	238
Gallery	238
Game Hub	238
Gmail	238
Google	239
Google +	239
Group Cast	239
Help	240
Internet	240
Kies air	241
Latitude	241
Local	244
Maps	244
Media Hub	247
Messaging	247

Messenger	247
Mobile HotSpot	247
Music Hub	248
Music Player	248
My Files	248
Navigation	249
Need for Speed Most Wanted	251
Paper Artist	251
Phone	252
Play Books	252
Play Magazines	252
Play Movies & TV	253
Play Music	253
Play Store	253
Downloading a New Google Application	254
Launching an Installed Google Application	255
Polaris Office 4.0	256
S Note	257
S Suggest	258
S Voice	258
Samsung Apps	259
Settings	259

T-Mobile My Account	260
T-Mobile Name ID	260
T-Mobile TV	260
TecTiles	261
Talk	263
Task Manager	264
Video Player	264
Visual Voicemail	264
Voice Recorder	265
Voice Search	266
VPN Client	266
YouTube	266
Zynga Games	268
Section 10: Connections	269
Internet	269
Bluetooth	277
Enable Downloading for Web Applications ..	281
PC Connections	282
Kies Air	284
Wi-Fi	285
USB Tethering	288
Mobile HotSpot	289

Section 11: Changing Your Settings	292
Accessing Settings	292
Wi-Fi Settings	292
Bluetooth settings	297
Data Usage	298
More Settings	300
Call Settings	309
Home Screen Mode	317
Blocking Mode	317
Sound Settings	318
Display Settings	320
SD Card & Device Storage	322
Power Saving Mode	323
Battery Usage	323
Applications Manager	324
Location Services	327
Lock Screen	328
Security	335
One-handed Operation	337
Language and Input Settings	338
Cloud	344
Back up and Reset	345

Add Account	347
Motion Settings	348
S Pen Settings	350
Accessory	350
Date and Time	351
Accessibility Settings	351
Developer Options	353
About Device	355
Software Update	356

Section 12: Health and Safety

Information358

Exposure to Radio Frequency (RF) Signals ...	358
Specific Absorption Rate (SAR) Certification Information	363
FCC Part 15 Information to User	364
Commercial Mobile Alerting System (CMAS) .	365
Smart Practices While Driving	365
Battery Use and Safety	366
Samsung Mobile Products and Recycling ...	368
UL Certified Travel Charger	369
Display / Touch-Screen	370
GPS & AGPS	370

Emergency Calls	371
Care and Maintenance	372
Responsible Listening	373
Operating Environment	375
FCC Hearing Aid Compatibility (HAC) R egulations for Wireless Devices	377
Restricting Children's Access to Your Mobile Device	379
FCC Notice and Cautions	379
Other Important Safety Information	380

Section 13: Warranty Information382

Standard Limited Warranty	382
End User License Agreement for Software ...	387

Index393

Section 1: Getting Started

This section explains how to get started with your phone by installing and charging the battery, installing the micro SIM card and optional memory card, and setting up your voice mail.

Before using your device for the first time, you'll need to install and charge the battery and install the micro SIM card.

The micro SIM card is loaded with your subscription details, such as your PIN, available optional services, and many other features. If desired, you can also install an SD card to store media for use with your device.

Understanding this User Manual

The sections of this manual generally follow the features of your phone. A robust index for features begins on page 393.

Also included is important safety information that you should know before using your phone. This information is available near the back of the guide, beginning on page 358.

This manual provides navigation instructions according to the default display settings. If you select other settings, navigation may be different.

Unless otherwise specified, all instructions in this manual assume you are starting from the Home screen and using the available keys.

Note: Instructions in this manual are based on default settings, and may vary from your device, depending on the software version on your device, and any changes to the device's Settings.

Unless stated otherwise, instructions in this User Manual start with the device unlocked, at the Home screen.

All screen images in this manual are simulated. Actual displays may vary, depending on the software version of your device and any changes to the device's Settings.

Special Text

Throughout this manual, you'll find text that is set apart from the rest. These are intended to point out important information, share quick methods for activating features, to define terms, and more. The definitions for these methods are as follows:

- **Notes:** Presents alternative options for the current feature, menu, or sub-menu.
- **Tips:** Provides quick or innovative methods, or useful shortcuts.
- **Important:** Points out important information about the current feature that could affect performance.
- **Warning:** Brings to your attention important information to prevent loss of data or functionality, or even prevent damage to your phone.

Text Conventions

This manual provides condensed information about how to use your phone. To make this possible, the following text conventions are used to represent often-used steps:

- Arrows are used to represent the sequence of selecting successive options in longer, or repetitive, procedures.

Example: From the Home screen, press  (Menu) → Settings → Bluetooth.

Battery Cover


The battery, micro SIM card and SD card are installed under the battery cover.

Important! Before removing or replacing the battery cover, make sure the device is switched off. To turn the device off, hold down the  key until the power-off image displays, then tap **Power off**.

Caution! Do not bend or twist the back cover excessively during installation or removal. Doing so may damage the cover.

To remove the battery cover:

1. Hold the device firmly and locate the cover release latch (1).
2. Place your fingernail in the opening (2) and firmly “pop” the cover off (3) the device (similar to a soda can).

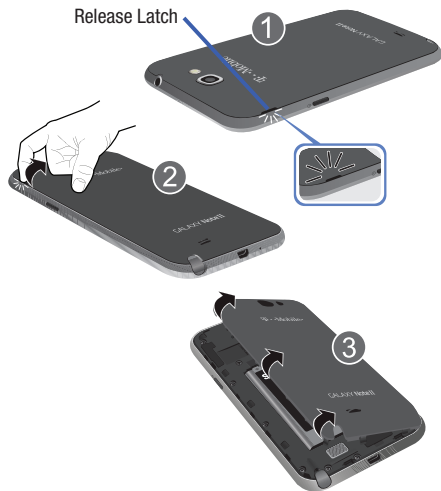

To replace the battery cover:

- Position the battery cover over the battery compartment and press down around the rim of the device until you hear clicks and the cover is secure.

SIM Card Overview

Important! Before removing or replacing the battery cover, make sure the device is switched off. To turn the device off, hold down the  key until the power-off image displays, then tap **Power off**.

The micro SIM card is loaded with your subscription details such as your telephone number, PIN, available optional services, and many other features.

Important! The micro SIM card and its information can be easily damaged by scratching or bending, so be careful when handling, inserting, or removing the card. Keep all SIM cards out of reach of small children.

Some features on your device (such as Wi-Fi Calling) can be unlocked by using the new micro SIM card.

To use this new micro SIM card, call or contact T-Mobile customer service for more information.

This card contains the necessary information for identifying and authenticating the user to the IMS (IP Multimedia Subsystem).

Installing and Removing the SIM card

This device uses a different type of SIM card called a “micro SIM”. Other larger SIM cards will not function or fit within this slot.

To install the SIM card:

1. Carefully slide the micro SIM card into the SIM card socket until it clicks into place.



2. Make sure that the card's gold contacts face into the phone and that the upper-left angled corner of the card is positioned as shown.

To remove the micro SIM card:

1. Remove the battery cover.
2. Carefully place your fingernail into the end of the micro SIM slot and push the card slightly out.
3. Carefully slide the card out of the micro SIM card socket.

Note: If the card is not inserted correctly, the device will not detect it and no service will be available. If this happens, turn off the device, remove the card, and reinstall the card in the correct orientation.

Installing the microSD Memory Card

Your device supports an optional (external) microSD™ memory cards for storage of media such as music, pictures, video and other files. The SD card is designed for use with this mobile device and other devices.

Note: microSD memory cards include capacities of up to 2GB. microSDHC™ memory card types can range from 4GB to up to 32GB. microSDXC™ memory card types can include capacities greater than 32GB.

Note: This device supports a memory card of up to a 64GB.

1. Remove the battery cover.
2. Locate the microSD card slot on the inside of the device.
3. Orient the card with the gold strips facing down.
4. Carefully slide the microSD card into the card socket until it clicks into place. For more information on how to use the SD card see *“Using the SD Card”* on page 76

Important! Be sure to align the gold contact pins on the card with the device's contacts.



Removing the microSD Memory Card

1. Remove the battery cover.
2. Firmly press the card into the slot and release it. The card should pop partially out of the slot.
3. Remove the card from the slot.
4. Replace the battery cover.

Battery

Before using your device for the first time, install the battery and charge it fully.

Important! Before removing or replacing the battery cover, make sure the device is switched off. To turn the device off, hold down the  key until the power-off image displays, then tap **Power off**.

Installing the Battery

1. Slide the battery into the compartment (1) so that the tabs on the end align with the slots at the bottom of the phone, making sure the connectors align.
2. Gently press down to secure the battery (2).

Removing the Battery


- Grip the battery at the top end (3) and lift it up and out of the battery compartment (4).



Charging the Battery

Your device is powered by a rechargeable Li-ion battery. A wall charger, which is used for charging the battery, is included with your device. Use only approved batteries and chargers. Ask your local Samsung dealer for further details.

Before using your device for the first time, you must fully charge the battery. A discharged battery recharges fully in approximately 4 hours.

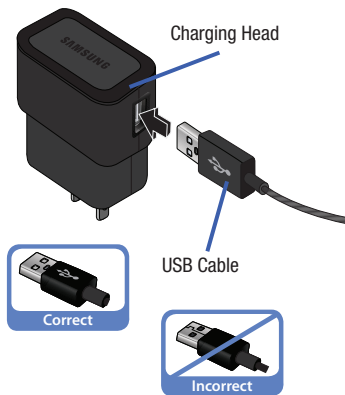

Note: Verify that the battery is installed prior to connecting the wall charger. If both the wall charger is connected and the battery is not installed, the handset will power cycle continuously and prevent proper operation. Failure to unplug the wall charger before you remove the battery, can cause the device to become damaged.

Important! It is recommended you fully charge the battery before using your device for the first time.

1. Connect the USB cable to the charging head.
2. Locate the Charger/Accessory jack.
3. Insert the USB cable into the device's Charger/Accessory jack.
4. Plug the charging head into a standard AC power outlet. The device turns on with the screen locked and indicates both its charge state and percent of charge.

Warning! While the device is charging, if the touch screen does not function due to an unstable power supply unplug the USB power adapter from the power outlet or unplug the USB cable from the device.



Note: This illustration displays both the **correct** and **incorrect** orientation for connecting the charger. If the charger is incorrectly connected, damage to the accessory port will occur therefore voiding the phone's warranty.

5. When charging is finished, first unplug the charger's power plug from the AC wall outlet, then disconnect the charger's connector from the phone.

Important! If your handset has a touch screen display, please note that a touch screen responds best to a light touch from the pad of your finger or a non-metallic stylus. Using excessive force or a metallic object when pressing on the touch screen may damage the tempered glass surface and void the warranty. For more information, refer to *"Standard Limited Warranty"* on page 382.

Low Battery Indicator

When the battery level is low and only a few minutes of talk time remain (~15% charge), a warning tone sounds and the “Battery low” message repeats at regular intervals on the display. In this condition, your device conserves its remaining battery power, by dimming the backlight.

When the battery level becomes too low, the device automatically turns off.

The on-screen battery charge is represented (by default) as a colored battery icon. You can also choose to display a percentage value. Having a percentage value on-screen can provide a better idea of the remaining charge on the battery.

- Press  →  and then tap **Settings** → **Display** → **Display battery percentage**.

For more information, refer to “*Display Settings*” on page 320.

Extending Your Battery Life

Active applications, light levels, Bluetooth usage, and GPS functionality all act to drain your battery. The following is a list of helpful tips that can help conserve your battery power:

- Reduce your backlight on time.
- Turn Bluetooth off when not in use.
- Turn Wi-Fi off when not in use.
- Deactivate the GPS when not needed. Most applications using this function will periodically query the GPS satellites for your current location; each query drains your battery.
- Do not wait until your battery is completely depleted before charging your device. Repeating this process of a complete discharge and recharge can over time reduce the storage capacity of any battery.
- Turn off Automatic application sync.
- Use the Power Savings Widget to deactivate hardware functions such as Wi-Fi, Bluetooth, GPS, Synchronization, or LCD brightness setting.
- Check the Battery use screen to review what features or functions have been consuming your battery resources.

- Check the Running Services and close any unnecessary applications.
- Use the Task Manager feature to end/shutdown background applications that are still running. These minimized applications can, over time, cause your device to “slow down”.
- Turn off any streaming services after use (see Running Services).
- Animated wallpapers use processing power, memory, and more power. Change your Live Wallpaper to a non-animated Wallpaper gallery or Gallery image.

Initial Device Configuration

1. Tap **Accessibility** if you are visually impaired or have difficulty hearing. This action allows you to alter the accessibility settings for better use.
2. Select a language from the associated field. **English** is the default language.
3. Tap **Next**.

Note: You may be prompted with a notification that your activation is completed.

4. If prompted, connect to an active Wi-Fi network. For more information, refer to “*Connecting to a Wi-Fi Network*” on page 286.
5. If you have previously created a Samsung account, tap **Sign in**.
– or –
If this is your first time, tap **Create new account**.
– or –
Tap **Skip** to continue and setup the account later. For more information, refer to “*Creating a Samsung Account*” on page 21.
6. At the Got Google? screen, tap either **Yes** to sign into your existing Google account, or **No** to create your new Google account.
 - If you select **No**, you can either create a new account or choose **Not now** to continue the setup process without an account.
 - If prompted, read the Google Terms of Service agreement and tap **OK**.

7. If prompted after sign in to **Set up credit card** and enable purchases, enter your credit card information and click **Save**.

– or –

Click **Not now** to continue without entering this information.

8. When prompted, select/deselect the desired Google location services and tap  (**Next**).

Note: Enabling Google location services can drain battery power.

9. When prompted, select your Backup and Restore settings by placing a checkmark alongside the associated field and tap  (**Next**).

10. If prompted, enter a **First** and **Last** name then tap  (**Close**) to close the on-screen keyboard and  (**Next**). This will help to identify this as your device.

11. Read and agree to the Dropbox account setup information and tap either **Create a new Dropbox account** or **I already have an account** and follow the on-screen instructions.

– or –

Tap **No thanks**.

Note: Once you decline the initial Dropbox setup offer, you will not be prompted again. For more information, refer to “*Dropbox*” on page 235.

12. If prompted with an Optional setting, tap **Enable easy mode setup?** and follow the on-screen instructions to configure your Home screen mode. For more information, refer to “*Adjusting the Home Screen Mode*” on page 69.

13. Tap **Finish** to complete your configuration process.

14. Read the on-screen System Manager Application information.

Note: This software collects only diagnostic data from your device so that T-Mobile technicians can better troubleshoot issues with your device.

15. Select either **More Info..** (to read additional information) or **Close** to close the message screen.
-

Important! Selecting **Close** only closes the current description screen and does not disable data collection. To disable data collection, go to **Settings → Back up and reset → Collect diagnostics** and turn off the **Allow Diagnostics** feature. For more information, refer to “*Collect Diagnostics*” on page 346.

16. Go through the on-screen tutorial.

Switching the Device On or Off

Once the device has been configured, you will not be prompted with setup screens again.

1. Press and hold  (Power/End) until the device switches on.

The device searches for your network and after finding it, you can make or receive calls.

Note: The display language is preset to English at the factory. To change the language, use the Language menu. For more information, refer to “*Language and Input Settings*” on page 338.

2. Press and hold  (Power/End) until the Device options screen appears.
3. Tap **Power off** ().

Restarting the Device

1. Press and hold  (Power/End) until the Device options screen appears.
2. Tap **Restart** ().

Locking and Unlocking the Device

By default, the device screen locks when the backlight turns off.

- Place your finger on the screen and swipe the glass in any of the directions shown unlock the device.

Note: You can choose to configure lock settings to prevent unauthorized use of your device. For more information, refer to “Security” on page 335.



Creating a New Google Account

You should create a Google™ Account when you first use your device in order to fully utilize the functionality. This account provides access to several device features such as Gmail, Google Maps, Google Talk, and the Play Store™ applications. Before you are able to access Google applications, you must enter your account information. These applications sync between your device and your online Google account.

To create a new Google Account from your device:

1. From the Home screen, tap  (**Play Store**).
2. Read the introduction and tap **New** to begin.
3. Follow the on-screen instructions to create a Google Account.
– or –

If this is not the first time you are starting the device, tap  →  (**Gmail**).

Note: If you already have a Google account, you only need to sign in.

To create a new Google Account from the Web:

1. From a computer, launch a Web browser and navigate to www.google.com.
2. On the main page, click **Sign-in** → **Create an account for free**.
3. Follow the on-screen prompts to create your free account.
4. Look for an email from Google in the email box you provided, and respond to the email to confirm and activate your new account.

Signing into Your Google Account

1. Launch an application that requires a Google account (such as Play Store or Gmail).
2. Click **Existing**.
3. Tap the **Email** and **Password** fields and enter your information.
4. Tap  (**Sign in**). Your device communicates with the Google servers to confirm your information.
5. If prompted, create a new Gmail username by entering a prefix for your **@gmail.com** email address.

Retrieving your Google Account Password

A Google account password is required for Google applications. If you misplace or forget your Google Account password, follow these instructions to retrieve it:

1. From your computer, use an Internet browser and navigate to <http://google.com/accounts>.
2. Click on the **Can't access your account?** link.
3. Follow the on-screen password recovery procedure.

Confirming the Default Image and Video Storage Location

Although the device is configured to store new pictures and videos to the Memory card, it is a very good idea to confirm this location before using your device.

Important! Too many users can overlook this storage destination until something goes wrong. It is recommended that you verify this location or change it before initiating the use of the camera or camcorder features.

1. From the Home screen, tap  (**Camera**).
2. From the viewfinder screen, tap  (**Settings**) and scroll down to the **Storage** entry.
3. Tap this entry and select the desired default storage location for newly taken pictures or videos. Choose from: **Phone** or **Memory card**.

Note: It is recommended that you set the option to **Memory card**.

4. Press  to return to the Home screen.

Creating a Samsung Account

Just as important as setting up and activating a Google account to help provide access to Maps, Latitude, Play Store, etc.. An active Samsung account is required to begin accessing applications such as Chat On and AllShare Play.

Note: The Samsung account application will manage your access to the previously mentioned applications, and there is no longer a need to remember different passwords for each application.

1. Tap  and tap any of the above mentioned applications (such as AllShare Play).
– or –
Press  →  and then tap **Settings** → **Add account** → **Samsung account**.
2. If you have previously created a Samsung account, tap **Sign in**.
– or –
If this is your first time, tap **Create new account**.
3. Tap **Terms and conditions** and **Privacy policy** to read the legal disclaimers and related information.

4. If you agree to the terms, place a green check mark in the **I accept all the terms above** field and tap **Agree**.
 5. Enter your the required information and tap **Sign up**.
-

Note: You may be prompted to confirm your credentials via email.

6. Verify your account via email by accessing the email address provided during setup and following the steps outlined to complete your registration.

– or –

If you have already setup your email account on the device, tap **Go to Mailbox** and follow the on-screen instructions.

– or –

If you have already verified your email address, tap **Activate account**.

Note: Confirm the Samsung account icon no longer appears in the Notifications area at the top of the screen.

7. Confirm the Samsung account icon no longer appears in the Notifications area at the top of the screen.
-

Note: Without confirming your email address and following the documented procedures, related applications will not function properly since it is Samsung account that is managing their username and password access.

Voice Mail

Setting Up Your Voice Mail

Your device automatically transfers all unanswered calls to voicemail, even if your device is in use or turned off. As soon as your battery is charged and the micro SIM card inserted, activate your voicemail account.

Important! Always use a password to protect against unauthorized access.

For new users, follow the instructions below to set up voice mail:

Note: Voicemail setup may be different depending on your network.

1. From the Home screen, tap  and then touch and hold the  key until the device dials voicemail. You may be prompted to enter a password.
2. Follow the tutorial to create a password, a greeting, and a display name.

Accessing Your Voice Mail

You can access your Voice Mail by either pressing and holding  on the keypad, or by using the phone's Application icon, then tapping the Voice Mail application. To access Voice Mail using the menu:

1. From the Home screen, tap  and then touch and hold  until the device dials voicemail.

Note: Touching and holding  will launch Visual voicemail if it is already active on your device.

2. When connected, follow the voice prompts from the voicemail center.

Accessing Your Voice Mail From Another Phone

1. Dial your wireless phone number.
2. When you hear your voicemail greeting, press the asterisk key on the phone you are using.
3. Enter your passcode.

Visual Voicemail

Visual Voicemail enables users to view a list of people who left a voicemail message, and listen to the any message they want without being limited to chronological order.

1. From the Home screen, tap  (Apps) →  (Visual Voicemail).
2. Read the on-screen information and tap **Next**.
3. Read the on-screen information and tap **Done**. A list of the voicemail messages displays.

Note: You must subscribe to Visual Voicemail service to use this feature. Charges may apply. Please contact your service provider for further details.

4. Tap an on-screen voicemail message to play it back.

To check Visual Voicemail messages:

1. From the Home screen, tap  (Apps) →  (Visual Voicemail).
2. Tap the voicemail message you want to play.
3. Tap  (Play).

To delete Visual Voicemail messages:

1. From the Home screen, tap  (Apps) →  (Visual Voicemail).
2. Tap the voicemail message you want to delete.
3. Tap  (Delete) → OK.

Task Manager

Your device can run applications simultaneously, with some applications running in the background.

Sometimes your device might seem to slow down over time, and the biggest reason for this are background applications. These are applications that were not properly closed or shutdown and are still active but minimized. The Task Manager not only lets you see which of these applications are still active in the background but also easily lets you choose which applications are left running and which are closed.

Note: The larger the number of applications running on your phone, the larger the energy drain on your battery.

Task Manager Overview

- Press and hold  (Home) and then tap  (Task manager). This screen contains the following tabs:
 - **Active applications** display those currently active applications running on your phone.

- **Downloaded** displays any installed packages or applications from the Play Store that are taking up memory space. Tap **Uninstall** to remove them from your phone.
- **RAM**, which displays the amount of current RAM (Random Access Memory) currently being used and allow you to **Clear Memory**.
- **Storage** displays a visual graph indicating the available and used space within the System storage, USB storage, and external SD card.
- **Help** provides additional battery saving techniques.

Shutting Down an Currently Active Application

1. Press and hold  (Home) and then tap  (Task manager).
2. From the **Active applications** tab, tap **End** to close selected applications.
— or —
Tap **End all** to close all background running applications.

Google Now

Google Now[®] recognizes a users' repeated actions performed on the device (including access of common locations, repeated calendar appointments, search queries, etc.). This information is then used to display more relevant information to the user in the form of "cards". These scrollable on-screen cards are displayed when the Google Now application is launched.

These cards are not manually added.

The service uses your GPS, Google Search, and usage information to generate these cards automatically.

To initially set up Google Now:

1. Press and hold  (Home) and then tap  (Google Now).
2. Follow the on-screen instructions to review the available information.
3. When prompted, agree to launch the application. Some initial on-screen "cards" are shown. A default is the Weather card that provides updated weather information in your area.

To configure the Google Now settings:

1. Press and hold  (Home) and then tap  (Google Now).
2. Press  and select **Settings**.
3. Access each desired Settings page and configure it as desired.

When these condition are met, new card information will begin to appear in the Google Now list of cards.

Section 2: Understanding Your Device

This section outlines key features of your device. It also describes the device's keys, screen and the icons that display when the device is in use.

Features of Your Device

Your device is lightweight, easy-to-use and offers many significant features. The following list outlines a few of the features included in your device.

- Touch screen with virtual (on-screen) QWERTY keyboard
- High Speed Packet Access Plus (HSPA+) delivering data speeds faster than the current 3G network technology.
- 5.5" HD Super AMOLED® screen (1280x720)
- 1.6 gigahertz quad-core processor
- mDNle (Samsung's exclusive image & video enhancement engine)
- Android 4.1, Jelly Bean Platform
- 16GB Memory with 2GB RAM
- 3100mAh battery provides increased battery capacity and enhanced low power consumption
- Natural and intuitive S Pen and AirView technology
- S Note sharing via S Beam
- TecTile™ compliant
- Support for Gestures (Screen Shot, Quick pause, Quick Rotate, Tap to Top of List, Missed Event Alert, and Camera Quick Access)
- Wi-Fi® Capability
- USB Tethering-capable
- Over 600,000 Apps available to download from the Google Play™ Store
- AllShare® Play to share your media content across DLNA certified device. AllShare Cloud connectivity enabled via the use of an external Web storage service
- AllShare® Group Cast screen sharing
- Compliant with AllShare Cast Hub® (Wi-Fi display receiver with support for full HD [1080p])
- 8 Megapixel Camera and Camcorder with autofocus and digital zoom
- 1.9 Megapixel Front Facing camera for Video Chat
- S-Beam and Android Beam file transfer technology


- Share Shot camera sharing-capable via multi-connect Wi-Fi Direct connection
- Bluetooth enabled
- NFC-compatible
- Full Integration of Google Mobile™ Services (Gmail, YouTube, Google Maps, Google Voice Search)
- Multiple Messaging Options: Text/Picture/Video Messaging and Google Talk™
- Corporate and Personal Email
- VPN Client
- Music Player with multitasking features
- Pre-loaded e-reader applications such as: Play Books™ and Play Magazines™
- Assisted GPS (Google Navigation)
- Webkit-based browser
- Expandable memory slot - supports up to 64GB microSD card
- Mobile HotSpot Capability
- USB Tethering-capable
- T-Mobile® TV
- Video Chat via Google Talk
- Google Play™ Music
- Compatibility with a new micro SIM card
- Wi-Fi Calling via the use of a micro SIM card
- Access to thousands of Movies and TV Shows with the Samsung Media Hub
- HD Video Player 1080p
 - Codec: MPEG4, H.264, H.263, VC-1, WMV7/8, VP8, MP43
 - Format: 3GP (MP4), WMV (ASF), AVI, and DivX
- Video Player support for PIP (Picture in Picture) viewing
- DivX Certified® to play DivX® video up to HD 720p, including premium content
- Kies Air to wirelessly sync your PC with your phone via a Wi-Fi® connection

Front View

The following illustrations show the main elements of your device. The following list correlates to the illustrations.

1. **Headset jack** allows you to connect a hands-free headset so you can listen to music.
2. **Indicator light** illuminates with a series of distinct colors and flashing patterns to indicate different notifications and statuses. Events include Charging, Low battery, and Missed event:
 - Powering on - **blue** blinks/animates
 - Battery Charging - **red** remains on
 - Battery Fully Charged - **green** remains on.
 - Low Battery or Charging Error - **red** blinks/animates
 - Missed Notification (Call or Messaging) - **blue** blinks/animates

For more information, refer to *“LED Indicator”* on page 322.

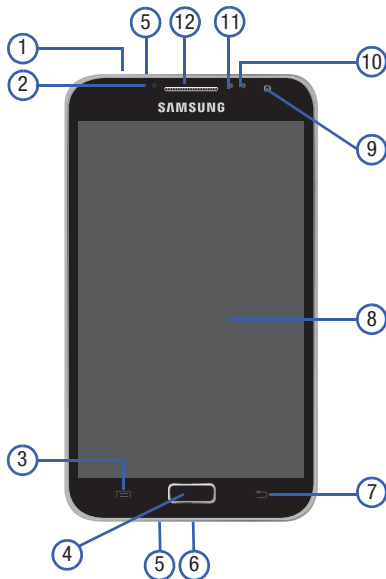


3. **Menu key** displays a list of options available for the current screen. From the Home screen it displays Add apps and widgets, Create folder, Set wallpaper, Edit page, Search, and Settings options.
4. **Home key** displays the Home screen when pressed. Press and hold to display your recent apps, Task manager, Google Search, and Remove all option. Double-press to activate S Voice.
5. **Microphone** is used during phone calls and allows other callers to hear you clearly when you are speaking to them. There are two microphones on the device:
 - Bottom microphone: used during handset mode.
 - Top microphone: used while an active call is in the speakerphone mode and assists in noise cancellation (2 microphone solution).
6. **USB Power/Accessory connector** allows you to connect a power cable or optional accessories such as a USB/data cable.
7. **Back key** redisplay the previous screen or clears entries.
8. **Display** shows all the information needed to operate your phone, such as the connection status, received signal strength, phone battery level, and time.
9. **Front Facing Camera** allows you to take pictures while facing the screen and allows you to video conference.
10. **Proximity Sensor** detects how close an object is to the surface of the screen. This is typically used to detect when your face is pressed up against the screen, such as during a phone call.
 - While talking on the phone, the sensor detects talk activity and locks the keypad to prevent accidental key presses.
11. **Light Sensor** lets you use the ambient light level to adjust the screen brightness/contrast. This sensor decreases screen brightness in dim light.
 - In a bright light condition (outdoors), the sensors cause the device to increase the brightness and contrast for better viewing.
 - In dim light conditions, the device increases the screen brightness to compensate.
12. **Receiver** allows you to hear the other caller and the different ring tones or sounds offered by your device.

Back View

The following illustration shows the external elements:


1. **External speaker** allows you to hear ringers, music, and other sounds offered by your phone.
2. **micro SIM Card Slot** (internal) Installation location for SIM card.

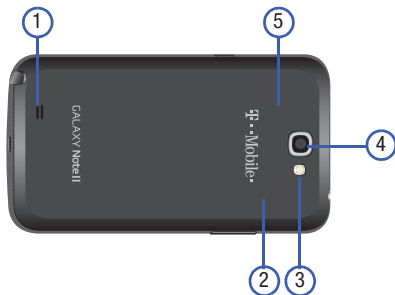

3. **Flash** is used to take photos in low-light conditions.
4. **Camera lens** is used to take photos.
5. **microSD Card Slot** (internal) allows you use a microSD card to expand the memory of your device.

Side Views

The following illustration shows the side elements of your device:

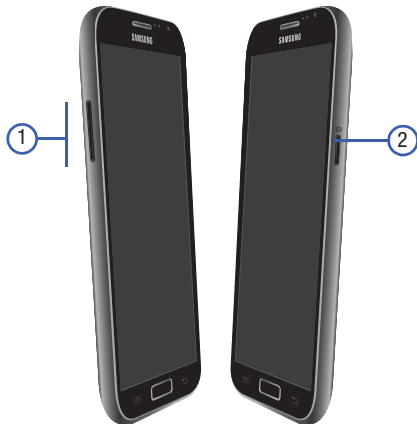

1. **Volume key** allows you to adjust the ringer volume in standby mode (with the phone open) or adjust the voice volume during a call. When receiving an incoming call:
 - Pressing the volume key down mutes the ring tone.

2. **Power/End key**  ① ends a call or switches the phone off and on. Press and hold for two seconds to turn toggle the Silent mode or Airplane mode states, turn the device on or off, or Restart.

Device Display

Your display provides information about the device's status, and is the interface to manage features. The display indicates your connection status, signal strength, battery status and time. Icons display at the top of the device when an incoming call or message is received and also alerts you at a specified time when an alarm was set. The screen also displays notifications, and Application (or shortcut) bar with five primary shortcuts: Phone, Messaging, S Note, Internet, and Apps.



Display settings

In this menu, you can change various settings for the wallpaper, cube, brightness or backlight.

- From the Home screen, tap  (Apps) →  (Settings) → Display. For more information, refer to “Display Settings” on page 320.

Status Bar

The Status Bar shows information about the connection status, signal strength, phone battery level, and time, and displays notifications about incoming messages, calls and other actions.

This list identifies the icons you see on your device’s display screen:

Indicator Icons

This list identifies the symbols you’ll see on your device’s display and Indicator area:

Note: Some Notification icons can be hidden manually by toggling the status of the Notification panel function. For more information, refer to “Accessing Additional Screen Functions” on page 40.



Displays your current signal strength. The greater the number of bars, the stronger the signal.



Indicates that the Airplane Mode is active. You cannot send or receive any calls or access online information.



Indicates there is no signal available.



Displays when there is no SIM card in the phone.



Displays when there is a system error or alert.



Displays when a call is in progress. Icon is displayed in the Status bar area.



Displays when a call is on hold. Icon is displayed in the Status bar area.



Displays when an active call is routed through a Bluetooth headset. Icon is displayed in the Status bar area.



Displays when you have missed an incoming call.



Displays when your device is set to automatically reject calls from your Reject list or all calls.



Displays when the speakerphone is on. Icon is displayed in the Status bar area.



Displays when the microphone is muted. Icon is displayed in the Status bar area.



Displays when Call forwarding is set to Always forward. Displayed in the Status bar when the current call is minimized. For more information, refer to “*Configuring Additional Voice Call Settings*” on page 314.



Displays your current battery charge level. Icon shown is fully charged.



Displays when the current battery is 100 percent charged and the Display battery percentage option is enabled within the **Settings** → **Display** menu.



Displays your battery is currently charging.



Displays your current battery charge level is low (Charge: ~28% - 15%).



Displays your current battery charge level is very low (Charge: ~15% - 5%).



Shows your current battery only has up to 4% power remaining and will soon shutdown. (Charge: ~4% - 1%).



Displays when connected to the EDGE network.



Displays when your phone is communicating with the EDGE network.



Displays when connected to the 3G network. 3G indicator is only seen when roaming.



Displays when your phone is communicating with the 3G network. 3G indicator is only seen when roaming.



Displays when connected to the HSPA+ network.



Displays when your phone is communicating with the HSPA+ network.



Displays when the phone has detected an active USB connection and is in a USB Debugging mode.



Displays when there is a new text message.



Displays when an outgoing text message has failed to be delivered.



Displays when an incoming text message content has failed to be downloaded.



Displays when there is a new voicemail message.



Displays when there is a new visual voicemail message.



Displays in the notifications window when there is a new Email message.



Displays in the notifications window when there is a new Gmail message.



Displays when a new Google+ notification has been received.



Displays when the user is prompted to set up a new Dropbox account.



Displays when the T-Mobile Name ID application did not recognize a recent number and would like to know whether you wish to Not add, or add as a New or Existing number.



Displays when the time and date for a Calendar Event has arrived.

For more information, refer to “*Creating a Calendar Event*” on page 229.



Displays when an alarm is set.

For more information, refer to “*Setting an Alarm*” on page 232.



Displays when the device is in Silent mode. All sounds except media and alarms are silenced, and Silent mode is set to **Vibrate**. For more information, refer to “*Silent mode via Device Options Screen*” on page 318.



Displays when the device is in Silent mode. All sounds are silenced, and Silent mode is set to **Mute**.



Displays when data synchronization and application sync is active and synchronization is in progress for Gmail, Calendar, and Contacts.



Displays when the Blocking mode feature is active. For more information, refer to “*Blocking Mode*” on page 317.



Displays when Bluetooth technology is active and enabled.



Displays when Bluetooth technology is active and there is an available open and visible bluetooth device.



Displays when the Bluetooth technology is active and communicating with an external device.



Displays when the an outbound file transfer is in progress.



Displays when a file or application download is in progress.



Displays when a file is being uploaded or sync'd between your device and an external Web storage location.



Displays when the uploaded or transferred file was successfully delivered.



Displays when the Share shot option is enabled from within the Camera Shooting mode menu and images and being shared via Wi-Fi Direct. For more information, refer to “*Camera Options*” on page 173.



Displays when a screen capture has been taken and stored in the clipboard. For more information, refer to “*Using Gestures*” on page 63.



Displays when your device is connected being used to control streaming media and is connected to a Digital Living Network Alliance (DLNA) certified device using the AllShare Play application.



Displays when your device is currently sharing/streaming media to paired device using the AllShare Play application.



Displays when AllShare Cast Hub is active, connected to your device, and communicating. For more information, refer to “*AllShare Cast Hub*” on page 219.



Displays when updates are available for download.



Displays when a Play Store download has completed.



Displays when Wi-Fi is connected, active, and communicating with a Wireless Access Point (WAP).



Displays when Wi-Fi is active and there is an available open wireless network.



Displays when Wi-Fi Direct is active and configured for a direct connection to another compatible device in the same direct communication mode.



Displays when Wi-Fi Direct is communicating with another compatible device.



Displays when the USB Tethering mode is active and communicating. For more information, refer to “*USB Tethering*” on page 288.



Displays when Wi-Fi is being used as a Mobile HotSpot and the feature is both active and communicating. For more information, refer to “*Mobile HotSpot*” on page 289.



Displays when a share shot has been established with other users via a Wi-Fi Direct connection.



Displays when a Kies Air is active and communicating. For more information, refer to “*Kies Air*” on page 284.



Displays when the Wi-Fi calling feature is active. Minutes used while connected to the Wi-Fi network count against available rate plan minutes. For more information, refer to “*Wi-Fi Calling*” on page 90.



Displays when the Wi-Fi calling feature is active and you are using it with within your current active call.



Displays when there is an error in the use or 911 registration of the Wi-Fi Calling feature.



Displays when you are currently in Emergency calling mode. You must exit this mode to resume normal calling function.



Displays in the notifications window when action is required within the Samsung account application.



Displays in the notifications window when there are too many on-screen notification icons to display. Tap to show more notifications.



Tap to select a text input method.



Displays in the notifications window when a song is currently playing within the Music Player.



Displays in the notifications window when a song is currently playing within the Play Music application.



Displays when your device's GPS is on and communicating.



Displays when the external SD card (internal microSD) has been disconnected (unmounted) from the device and is now ready for either removal or formatting.



Displays when the External SD card is being prepared for mounting to the device. This is required for communication with the External SD card.



Displays when the microSD card has been improperly removed or unexpectedly.



Displays when Power saving mode is enabled.



Displays when the Power saving alert notification has been activated. You are then prompted to view your current battery level.





Displays when TTY device has been inserted.

For more details on configuring your device's settings, see *"Changing Your Settings"* on page 292.

Notification Screen

The Notification area indicates new message events (data sync status, new messages, calendar events, call status, etc). You can expand this area to display the Notification screen that provides more detailed information about the current on-screen notification icons.

1. Touch the Status bar to reveal the Notifications tab, and then drag the tab to the bottom of the screen to open the Notifications screen (1).
2. Tap a notification entry to open the associated application (2).

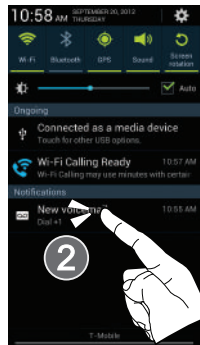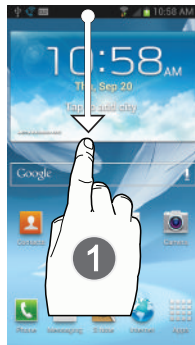


Clearing Notifications

1. In a single motion, touch and drag the Status bar down to the bottom of the screen to open the Notifications screen.
2. Tap **Clear**. The notifications are cleared from the panel.

Accessing Additional Screen Functions

In addition to notifications, this screen also provides quick and ready access to separate device functions. These can be quickly activated or deactivated by toggling them on or off.

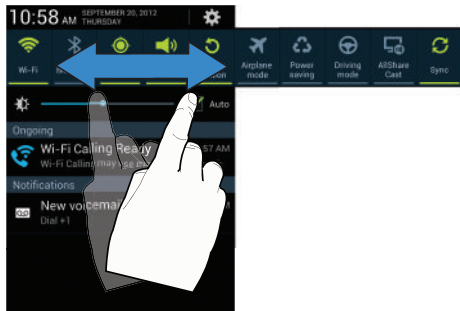

The following functions can either be activated (green) or deactivated (gray): **Wi-Fi**, **Bluetooth**, **GPS**, **Sound/Vibrate/Mute**, **Screen rotation**, **Airplane mode**, **Power saving**, **Driving mode**, **AllShare Cast**, or **Sync**.

Additionally, you can manual adjust the screen Brightness slider or enable the **Auto** brightness feature.

Function Keys

Your device comes equipped with three main function keys that can be used on any screen: **Home**, **Menu**, and **Back**.

Home Key

The **Home** key () takes you back to your Home screen (#3 - by default).

- Press and hold to launch the Recent apps/Task manager/Google Search screen. For more information, refer to “*Accessing Recently-Used Applications*” on page 67.

Menu Key

The **Menu** key () activates an available menu function for the current screen or application.

Back Key

The **Back** key () returns you to the previously active screen. If the on-screen keyboard is currently open, this key closes the keyboard.

Home Screen

The Home screen is the starting point for using the applications on your device. There are initially seven available panels, each populated with default shortcuts or applications. You can customize each of these panels.



- **Notification area** displays those icons associated with end-user notifications such as: email messages, calls (missed, call in progress), new voicemail, upcoming event, USB connection, Emails, and Text/MMS messages.
 - These notifications appear at the top-left of the screen (within the Status bar area) and display important user information.
 - This information can be accessed by swiping down from the Status bar (page 39).
- **Status area** displays those icons associated with the status of the device such as communication, coverage, Bluetooth, 4G/3G, Wi-Fi communication, battery levels, GPS, etc.
- **Home Screen** is a customizable screen that provides information about notifications and device status, and allows access to application Widgets.
- **Extended Home Screens** extend beyond the current visible screen width to provide more space for adding icons, widgets, and other customization features.
 - There are six available extended screens (panels) each of which may be populated with its own shortcuts or widgets. These screens share the use of the five Primary Shortcuts.
 - The eighth available screen is called the S Pen screen that provides access to features enhanced by using the S Pen.

- The current screen is indicated at the bottom by a white square. Up to seven (8) total screens are available.

Note: Both the status bar and primary shortcuts are visible across all screens.

- **Google search** is an on-screen Internet search engine powered by Google™. Tap to access either the Voice Actions feature or Google Now™.
 - Tap  (**Voice Actions**) to launch these functions from within this Google widget.
- **Widgets** are self-contained on-screen applications (not shortcuts). These can be placed onto any of the available screens (Home or extended).

- **Shortcuts** are icons that launch available device applications such as Camera, YouTube, Contacts, Phone, Email, Play Store, etc. These function the same as shortcuts on your computer.
 - Although some may already be found on the Extended Home screens, the majority can also be found within the Applications screens.
 - The Application screens can be accessed by tapping  (**Apps**) from the Primary shortcuts area.
 - Shortcuts can be removed from a screen and added back any number of times.
- **Primary Shortcuts:** are four shortcuts present throughout all of the available screens and can be used to both navigate within the device or launch any of the following functions:
 - **Phone** () launches the phone-related screen functions (Keypad, Logs, Favorites, and Contacts).
 - **Messaging** () launches the Messaging menu (create new messages or open an existing message string).
 - **S Note** () launches the S Note application.
 - **Internet** () launches the built-in Web browser.

– **Apps** toggles functionality between the Home and Application screens.

- Tap  (**Apps**) to access the Application screens loaded with every available local application.
- While in the Applications screens, tap  (**Back**) to easily return to the Home screen.

Note: When you are on the S Pen screen, the primary shortcuts can change based on your usage. As an application is used more frequently, that application shortcuts then gets placed at the bottom of the screen in the primary shortcut area.

As you transition from screen to screen, a screen indicator (located at the bottom) displays the currently active panel.

Home Screen Menu Settings

When on the Home screen, press  to access the following menu options:

- **Add apps and widgets** allows you to quickly access the Widget tab where you can then drag a selected widget to an available area on a selected screen. For more information, refer to “*Adding and Removing Widgets*” on page 73.
- **Create folder** allows you to create on-screen folders to help organize files of application shortcuts.
- **Set wallpaper** allows you to assign the current wallpaper for the Home screen, Lock screen, or Home screen and lock screens. Choose from Gallery, Live wallpapers, or Wallpapers.
- **Edit page** allows you to add or remove extended screens from your device. You can have up to six extended screens (one Home screen and six Extended screens).
- **Search** displays the Google Search box that you can use to search for a key term online.
- **Settings** provides quick access to the device's settings menu.
 - The Settings menu can also be accessed by pressing  and then tapping  → **Settings**.

Applications

The Application menu provides quick access to the most frequently used applications. Applications display on each of the three panels on the Applications screens.

Important! Once you log into your Google account. All previously downloaded apps should now be populated within the Application screens.

Application Screen Menu Settings

When on the Apps screen, the following menu options are available:

1. Press  and then tap  (Apps).
2. Press  and then select from the following options:
 - **Play Store:** provides quick access to the Play Store (page 253).
 - **Edit:** allows you to organize your current applications by moving them around the screen, edit or delete existing App folders.
 - **Create folder:** allows you to create an application folder where you can better organize and group desired apps.

- **Uninstall:** allows you to uninstall a user-downloaded application. Only those applications that are not default to the device can be downloaded. Tap  to remove the selected app.
 - **Downloaded applications:** allows you to filter the view of apps to only those applications that you have downloaded.
 - **View type:** allows you to customize the way the Apps menu listing is shown (page 71).
 - **Share apps:** allows you to share information about selected applications with external users (page 69).
 - **Hide applications:** allows you to specify which current applications are hidden from view in this menu. Once you have selected the apps, tap **Done**.
 - **Show hidden applications:** allows you to specify which previously hidden applications are can be made visible again for viewing in this menu. Once you have selected the apps, tap **Done**.
3. Press  to return to the Home screen.

The following table contains a description of each application available via both the Primary shortcuts area and via the Applications screens. If the application is already described in another section of this user manual, then a cross reference to that particular section is provided. For information on navigating through the Applications icons, see *“Navigating Through the Application Menus”* on page 66.



AllShare Play

Allows you to share your on-device media content with other external devices using DLNA (Digital Living Network Alliance) and built-in AllShare Play™ technology.

For more information, refer to *“AllShare Play”* on page 226.



Amazon

Provides access to Amazon.com via a built-in mobile application.

For more information, refer to *“Amazon”* on page 228.



Calculator

Found within the Utility application, this launches the on-screen calculator application. The calculator provides the basic arithmetic functions; addition, subtraction, multiplication, and division. You can also use this as a scientific calculator.

For more information, refer to *“Calculator”* on page 228.



Calendar

Launches a calendar application that syncs to your Facebook™, Google™, or Microsoft Exchange work calendars.

For more information, refer to *“Calendar”* on page 228.



Camera

Launches the built-in 8.0 megapixel camera application from where you can take a picture with either the front or rear facing cameras.

Note: A micro SD card is no longer needed to take pictures or shoot video due to built-in storage.

Note: The default storage location is your phone. It is recommended that you store your pictures and videos on a microSD card. If something were to occur to the device, your files are still protected.

In addition to taking photos, the built-in camera also doubles as a camcorder that also allows you to record, view, and send high definition videos.

For more information, refer to *“Using the Camera”* on page 172. For more information, refer to *“Using the Camcorder”* on page 188.



ChatON

Provides a global mobile communication service where you can chat with more than 2 buddies via a group chat. Share things such as pictures, videos, animation messages (Scribbles), audio, Contacts, Calendar entries, and Location information.

For more information, refer to *“ChatON”* on page 167.



Clock

Allows you to set an alarm, configure and view the World clock, use a stopwatch, set a timer, or Desk clock. The applications display in a tabular format and quickly accessed with the touch of a finger.

For more information, refer to *“Clock”* on page 232.



Contacts

The default storage location for saving phone numbers to your Contacts List is your phone's built-in memory.

For more information, refer to *“Contacts List”* on page 119.



Downloads

Provides quick access to tabs containing a list of your current downloaded files (Internet and Other).

For more information, refer to “*Downloads*” on page 235.



Dropbox

Provides access to your desktop files directly from your device.

For more information, refer to “*Dropbox*” on page 235.



Email

Provides access to both your Outlook (Exchange Server-based) work email and Internet email accounts (such as Gmail and Yahoo! Mail).

For more information, refer to “*Using Email*” on page 155.



Flipboard

This application creates a personalized digital magazine out of everything being shared with you. Access news stories, personal feeds and other related material.

For more information, refer to “*Flipboard*” on page 238.



Gallery

Displays a Gallery of camera images and video stored in the microSD card.

For more information, refer to “*The Gallery*” on page 195.



Game Hub

Provides a premium one-stop service center that let's you play, connect and share games on compatible Samsung Android devices.

For more information, refer to “*Game Hub*” on page 238.



Gmail

Provides access to your Gmail account. Google Mail (Gmail) is a web-based email service. Gmail is configured when you first set up your phone.

For more information, refer to “*Using Google Mail*” on page 165.



Google

Provides an on-screen Internet search engine powered by Google™.

For more information, refer to “*Google*” on page 239.



Google +

This application makes messaging and sharing with your friends a lot easier. You can set up Circles of friends, visit the Stream to get updates from your Circles, use Messenger for fast messaging with everyone in your Circles, or use Instant Upload to automatically upload videos and photos to your own private album on Google+.

For more information, refer to “*Google +*” on page 169.



Group Cast

This application lets you share documents, photos or music in real-time with other connected friends.

For more information, refer to “*Group Cast*” on page 239.



Help

The Help app provides additional in-device information on Learning the basics, Changing important settings, Use Key applications, and Help settings.

For more information, refer to “*Help*” on page 240.



Internet

Open the browser to start surfing the web. The browser is fully optimized and comes with advanced functionality to enhance the Internet browsing feature on your device.

For more information, refer to “*Internet*” on page 269.



Kies air

Allows you to sync your Windows PC wirelessly with your phone (as long as both are on the same Wi-Fi network). You can now have real-time access of your phone through your PC to view call logs, videos, photos, bookmarks, IMs, and even send SMS messages directly from your home computer.

For more information, refer to “*Kies Air*” on page 284.



Latitude

Lets you see your friends’ locations and share yours with them. The application also lets you see your friends’ locations on a map or in a list. It also lets you send instant messages and emails, make phone calls, and get directions to your friends’ locations.

For more information, refer to “*Latitude*” on page 241.



Local

Displays company locations as markers on Google Maps. When viewing an area you can quickly locate a business or person, find out more information about the business, see coupons, public responses, and more.

For more information, refer to “*Local*” on page 244.



Maps

Launches a Web-based dynamic map that helps you find local businesses, locate friends, view maps and get driving directions.

For more information, refer to “*Maps*” on page 244.



Media Hub

Provides you with a one stop shop for the hottest movie and TV content. You can now rent or purchase your favorite content and then watch it from the convenience of anywhere.

For more information, refer to “*Media Hub*” on page 199.



Messaging

Provides access to text and multimedia messaging (SMS and MMS).

For more information, refer to *“Creating and Sending Messages”* on page 142.



Messenger

Allows you to bring groups of friends together into a simple group conversation. When you get a new conversation in Messenger, Google+ sends an update to your phone.

For more information, refer to *“Messenger”* on page 170.



Mobile HotSpot

Provides access to the Tethering and portable HotSpot menu where you can use either the USB tethering or portable hotspot functionality.

For more information, refer to *“Mobile HotSpot”* on page 289.



Music Hub

Allows you to purchase and download songs.

For more information, refer to *“Music Hub”* on page 212.



Music Player

Launches the built-in Music player that allows you to play music files that you have stored on your microSD card. You can also create playlists.

For more information, refer to *“Music Player”* on page 208.



My Files

Lets you view supported image files and text files on both your internal storage and microSD card. Organize and store data, images, and more in your own personal file folders. Files are stored to either the internal storage or memory card in separate (user defined) folders.

For more information, refer to *“MyFiles”* on page 248.



Navigation

Launches a Web-based navigation application.

Caution! Traffic data is not real-time and directions may be wrong, dangerous, prohibited, or involve ferries.

For more information, refer to “*Navigation*” on page 249.



Need for Speed Most Wanted

Provides access to a built-in game.

For more information, refer to “*Need for Speed Most Wanted*” on page 251.



Paper Artist

Provides access to an in-device graphics program.

For more information, refer to “*Paper Artist*” on page 251.



Phone

Provides the ability to make or answering calls, access the Contacts list, which is used to store contact information.

For more information, refer to “*Call Functions and Contacts List*” on page 80.



Play Books

Provides access to read over 3 million ebooks on the go.

For more information, refer to “*Play Books*” on page 252.



Play Magazines

With Google Play Magazines, you can subscribe to your favorite magazines and have them available to read on your phone at any time or any place.

For more information, refer to “*Play Magazines*” on page 252.



Play Movies & TV

Rent movies and TV shows on Google Play™ and watch instantly using the Google Play Movies app. For more information, refer to *“Play Movies & TV”* on page 202.



Play Music

Launches the built-in Google Music Player that allows you to play music files that you have both downloaded from Google Music and stored on your microSD card.

For more information, refer to *“Play Music”* on page 202.



Play Store

Formerly known as the “Android Market”, it provides access to downloadable applications, games, music, and movies. The Play Store also allows you to provide feedback and comments about an application, or flag an application that might be incompatible with your phone.

For more information, refer to *“Play Store”* on page 253.



Polaris Office 4.0

This application is a Microsoft Office compatible office suite. This application provides a central place for managing your documents online or offline.

For more information, refer to *“Polaris Office 4.0”* on page 256.



S Note

Use S Note to create notes with productivity tools that turn handwriting into typed text and correct drawn shapes, lines, and formulas to make them perfect.

For more information, refer to *“S Note”* on page 257.



S Suggest

Provides on-screen recommendations for applications that are specifically supported and made for use on your device.

For more information, refer to *“S Suggest”* on page 258.



S Voice

Launches your phone's built-in voice recognition system that allows you to initiate several common tasks without having to touch the device. Features include: Call, Text, Navigate, Play music, Memo, and Driving mode.

For more information, refer to “*Using S Voice*” on page 99.



Samsung Apps

Allows you to easily download an abundance of applications to your device. This includes games, news, reference, social networking, navigation, and more.

For more information, refer to “*Samsung Apps*” on page 259.



Settings

Accesses the device's built-in Settings menu.

For more information, refer to “*Changing Your Settings*” on page 292.



T-Mobile My Account

This application provides you online access to account information such as your current activity, billing information, service plans, downloads, and other information.

For more information, refer to “*T-Mobile My Account*” on page 260.



T-Mobile Name ID

Allows you to modify the on-screen Caller ID information.



T-Mobile TV

Allows you to watch live mobile TV on your device. This application is a subscription service.

For more information, refer to “*T-Mobile TV*” on page 260.



Talk

Launches a Web-based Google Talk application that lets you chat and video conference with family and friends over the Internet for free.

For more information, refer to “*Google Talk*” on page 167.



Video Player

Launches your device's built-in video application that plays video files stored on your microSD card.

For more information, refer to *"Using the Video Player"* on page 196.



Visual Voicemail

Visual Voicemail enables users to view a list of people who left a voicemail message, and listen to the any message they want without being limited to chronological order.

For more information, refer to *"Visual Voicemail"* on page 24.



Voice Recorder

Found within the Utility application, allows you to record an audio file up to one minute long and then immediately send it as a message.

For more information, refer to *"Voice Recorder"* on page 265.



Voice Search

Launches the Google Now application that is used for voice to text Internet searching.

For more information, refer to *"Voice Search"* on page 266.



VPN Client

This is a full-featured VPN Client that provides support for the latest IPSec VPN standards and provides interoperability with support for all major VPN Gateways.

For more information, refer to *"VPN Client"* on page 266.



YouTube

Launches the YouTube webpage via the browser.

For more information, refer to *"YouTube"* on page 266.



Zynga Games

Launches the Zynga portal from where you can connect via Facebook and play with your friends.

For more information, refer to *"Zynga Games"* on page 268.

Important! For help closing any or all current applications, use the Task manager. For more information, refer to “Task Manager” on page 264.

Screen Navigation

Using the touch screen display and the keys, you can navigate the features of your device and enter characters. The following conventions are used in this manual to describe the navigation action in the procedures.

Navigating Through the Screens


The following terms describe the most common hardware and on-screen actions.

- **Press and hold:** Pressing relates to use of the hardware keys and buttons to select or activate an item. For example: press the Navigation key to scroll through a menu. Some buttons and keys require you to press and hold them to activate a feature, for example, you press the Lock key to lock and unlock the phone.


Press and hold



Tap

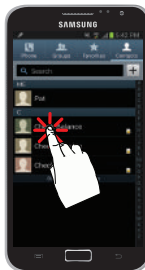


Touch and hold

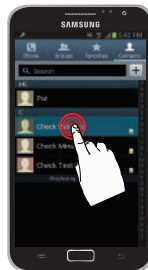

- **Tap:** Use a brief touch to select items on the display or to enter text on the virtual QWERTY keyboard. For example: touch an Application icon to open the application. A light touch works best.
- **Touch and hold:** Touch and hold an icon or key to open the available options, or to access a pop-up menu. For example: press and hold from the Home screen to access a menu of customization options.

- **Flick:** Move your finger in lighter, quicker strokes than swiping. This finger gesture is always used in a vertical motion, such as when flicking through contacts or a message list.
- **Swipe or slide:** Quickly drag your finger vertically or horizontally across the screen. This allows you to move the area of focus or to scroll through a list. For example: slide your finger left or right on the Home screen to scroll among the seven panels.
- **Drag:** Press and hold your finger with some pressure before you start to move it. Do not release your finger until you have reached the target position.
- **Rotate:** Automatically change the screen orientation from portrait to landscape by turning the device sideways. For example: rotate to landscape orientation when entering text, to provide a larger keyboard, or when viewing web content to minimize scrolling.

Flick

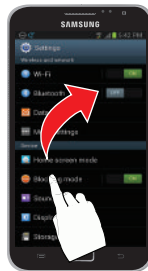

Swipe or slide
and Drag



Rotate



- **Pinch:** “Pinch” the screen using your thumb and forefinger to zoom out when viewing a picture or a Web page. (Move fingers inward to zoom out.)
- **Spread:** “Spread” the screen using your thumb and forefinger to zoom in when viewing a picture or a Web page. (Move fingers outward to zoom in.)



Pinch (Zoom Out)



Spread (Zoom In)

Note: These screens can be re-arranged in any desired order. For more information, refer to “*Customizing the Screens*” on page 67.

- **Motion Navigation and Activation:** The device comes equipped with the ability to assign specific functions to certain device actions that are detected by both the accelerometer and gyroscope.

Note: Motion must be enabled for this feature to be active. For more information, refer to “*Motion Settings*” on page 348.

S Pen

The S Pen™ is a stylus that assists you in performing different functions. By using the Pen button, you can minimize having to switch between touch and pen input.

Air View is a new S Pen technology that allows you to hover over the touch screen ($\leq 2\text{mm}$) and still interact with the display.



1. **Pen button:** by pressing the Pen button, you can add functionality to the S Pen.
2. **Stylus tip:** the tip of the S Pen is used for tapping the screen.

For more information, refer to “S Pen Settings” on page 350.

Rich S Pen Functionality

- **Air View:** Hover S Pen over the screen to preview information.
- **Effectively express yourself:** Write/Draw directly into an email, or the calendar, annotate Word, Excel, PowerPoint, and PDF documents, capture your ideas in S Note, write a note on the back of the picture.
- **Quick Command:** Launch Quick Command to activate frequently used applications or actions. Press the S Pen button and then drag the S Pen up the screen to display the Quick Command window.
- **Easy Clip:** Instantly outline and crop anything on the screen and freely edit or share with others.




Removing the S Pen from your Phone

The S Pen is stored within your device to make it easier to keep track of.

To remove the S Pen:

1. Use your fingernail or a sharp object to pop the end of the S Pen out of the device (1).

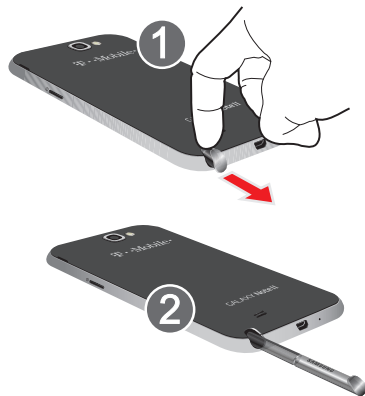

2. Pull the S Pen out from the device (2).


Using the S Pen

There are several different available functions.

Back Button Function

To move to a previous screen:

1. Grasp the pen and press the **Pen button**.
2. In a single motion, press the S Pen button and the drag the screen as shown. The previous screen is displayed.

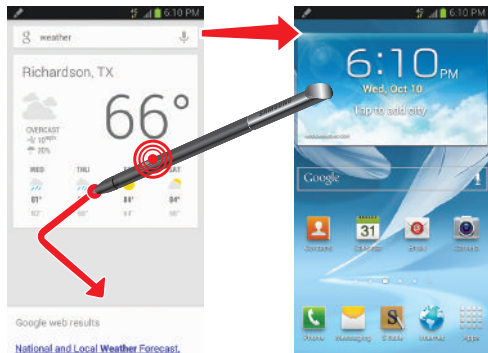

Screen Shots Using S Pen

To take a screen capture using the pen:

Note: These steps allow you to take a capture of the entire screen contents.

1. Grasp the pen and press the **Pen button**.
2. Pressing the S Pen button then touch and hold the screen for 2 seconds takes a screen shot.

Using Easy Clip

Instantly outline and crop images displayed on the screen in any shape to share or paste with Easy Clip. Once desired image is selected, users can freely edit the cropped content, or personalize with their own handwriting.


To take a selective screen capture:

Note: These steps allow you to capture selected areas of a screen based on a freehand area drawn on-screen.

1. Grasp the pen.
2. In a single motion, press and hold the **Pen button** then quickly draw a freeform enclosed shape on the screen to select the area you want to capture.

Note: The shape you draw must be completed by ending over the same point at which you started. This creates a closed shape.

3. After a second, confirm the newly captured image appears on-screen.

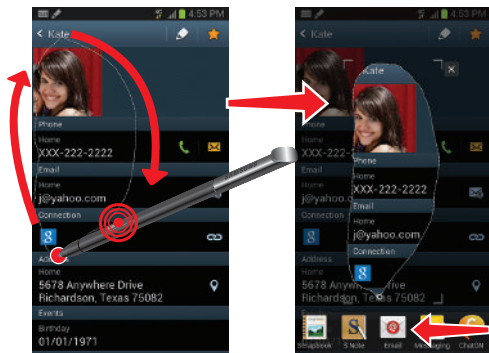

Note: Additional options are available by scrolling left across the bottom of the screen

4. Tap a destination for the newly captured image from the bottom of the screen. Tap one of the following options: Scrapbook (creates a scrapbook folder in your S Note application), S Note, Email, Messaging, or ChatON, Bluetooth, Dropbox, Flipboard, Gmail, Google+, Group Cast, Paper Artist, Picasa.


Note: If you take no action, after approximately 5 seconds, the image is automatically stored in the clipboard.

Important! These images are saved files are saved in the
My Files → All files → sdcar0 → Pictures → Screenshots.

Menu Button Function

To display the menu from any screen:

1. Grasp the pen and press the **Pen button**.
2. In a single motion, press the S Pen button, then touch and drag the pen as shown to display the menu.

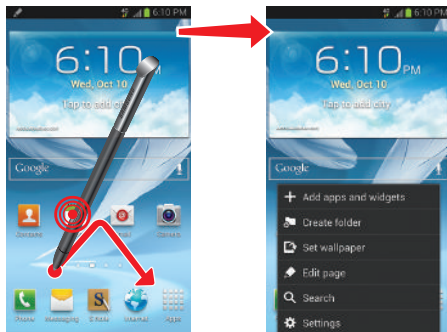


Launch S Note Lite

S Note Lite is an application that you can launch from any screen to take quick notes or jot down ideas.

To launch S Note from any screen:


1. Grasp the pen and press the **Pen button**.
2. Quickly double tap the screen to display the S Note Lite app.

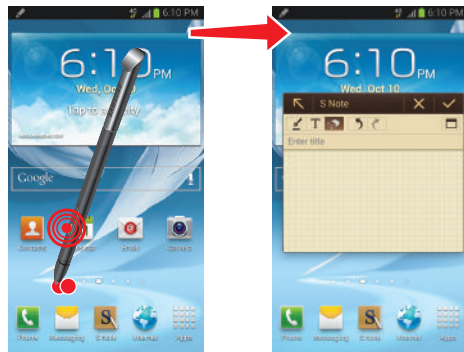

Write on any Screen after Capture

To take a screen capture of any screen:

1. Grasp the pen and press the **Pen button**.
2. Pressing the S Pen button then touch and hold the screen for 2 seconds takes a screen shot.
3. With the screen capture shown, use the pen to draw or write on the screen. Select the checkmark to store files in the **My Files → All files → sdcar0 → Pictures → Screenshots IMG_edited** folder.

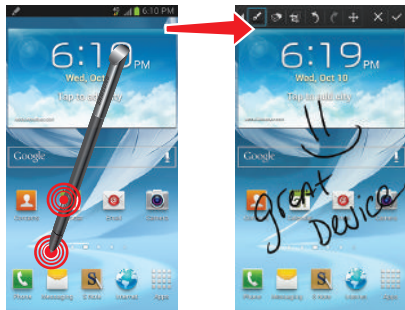

For information on using your S Pen with the S Memo application, see “S Pen Settings” on page 350.

Using Gestures

By activating the various gesture features within the Motion menu (page 348), you can access a variety of time saving functions.

To activate motion:

1. Press  →  and then tap **Settings → Motion**.
2. In a single motion touch and slide the **Motion** slider to the right to turn it on .
3. Tap the desired on-screen motion option. The feature is active when a green checkmark appears in the adjacent field.

The following is a description some of the most commonly used gestures:

- **Quick glance:** Once enabled, allows you to check key device information at a glance by just reaching towards your device. Refer to the Advanced settings information to set which gestures can be quickly glanced.
- **Direct call:** Once enabled, the device will dial the currently displayed on-screen Contact entry as soon as you place the device to your ear.


- **Smart alert:** Once enabled, pickup the device to be alerted and notified of you have missed any calls or messages.
- **Double tap to top:** Once enabled, double tap the top of the device to be taken to the top of the current on-screen list.
- **Tilt to zoom:** Once enabled, you must be on a screen where content can be zoomed. In a single motion, touch and hold two points on the display then tilt the device back and forth to zoom in or out. Access the Advanced settings to change its sensitivity setting.
- **Pan to move icon:** Once enabled, touch and hold a desired application shortcut icon or widget on the screen. Once it detaches, move the device left or right to migrate it to a new location. Access the Advanced settings to change its sensitivity setting.
- **Pan to browse images** Once enabled, touch and hold a desired on-screen image to pan around it. Move the device left or right to pan vertically or up and down to pan horizontally around the large on-screen image. Access the Advanced settings to change its sensitivity setting.
- **Shake to update:** Once enabled, shake your device to rescan for Bluetooth devices, rescan for Wi-Fi devices, Refresh a Web page, etc..
- **Turn over to mute/pause:** Once enabled, mute incoming calls and any playing sounds by turning the device display down on a surface. This is the opposite of the Pickup to be Notified Gesture.
- **Advanced settings:** provides access to advanced gesture settings such as:
 - **Quick glance:** allows you to set which features are displayed at a glance when a user reaches for the device. Choose from: Missed call, New message, Battery, Current music, or Status bar.
 - **Gyroscope calibration:** Allows you to properly calibrate your device for use with motion gestures.
 - **Sensitivity settings:** When any of the following features are enabled, you can then adjust their sensitivity. Choose from: Tilt to zoom, Pan to move icon, and Pan to browse images.

Note: Sensitivity settings are only accessible if the gesture is currently active.

In addition to these motions, the device is capable of several Hand motions (gestures):

- **Palm swipe to capture:** Once enabled, you can capture any on-screen information swiping across the screen. In a single motion, press the side of your hand on the screen and swipe from left to right. The image is then copied to the clipboard.

Palm Swipe to Screen Capture

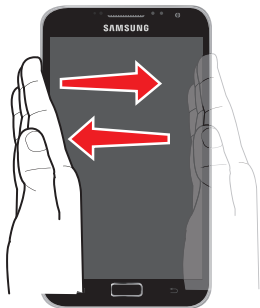

- **Palm touch to mute/pause:** Once enabled, you can pause any on-screen video or mute any current sound by simply covering the screen with your hand. Once you remove your hand from the screen, the device goes back to normal by either continuing to play the current video or unmuting the current sound.

Gyroscope Calibration

Calibrate your device by using the built-in gyroscope.

1. Press  →  and then tap **Settings** → **Motion**.
2. Verify the feature is on.
3. Tap **Advanced settings** → **Gyroscope calibration**.
4. Place the device on a level surface and tap **Calibrate**.

The phone adjusts the level of the accelerometer.

During the calibration process a green circle appears on-screen and the center circle adjusts to the center position.

Menu Navigation

You can tailor the device's range of functions to fit your needs using both menus and applications. Menus, sub-menus, and features are accessed by scrolling through the available on-screen menus. Your device defaults with seven screens.

Navigating Through the Application Menus


There are three default Application Menu screens available. As you add more applications from the Play Store, more screens are created to house these new apps.

1. Press  and then tap  (**Apps**). The first Application Menu screen displays.
 - To close the Applications screen, press  (**Home**).
2. Sweep the screen to access the other menus.
3. Tap any of the on-screen icons to launch the associated application.

Using Sub-Menus

Sub-menus are available from within most screen and applications.

1. Press . A sub-menu displays at the bottom of the screen.
2. Tap an available on-screen option.

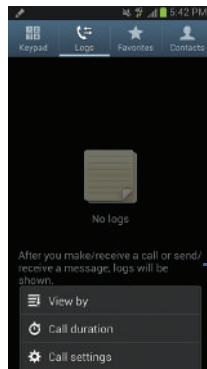


Sub-Menu items

Using Context Menus

Context menus (also called pop-up menus) contain options that apply to a specific item on the screen. They function similarly to menu options that appear when you right click your mouse on your desktop computer.

- Touch and hold an item on-screen to open its context menu.

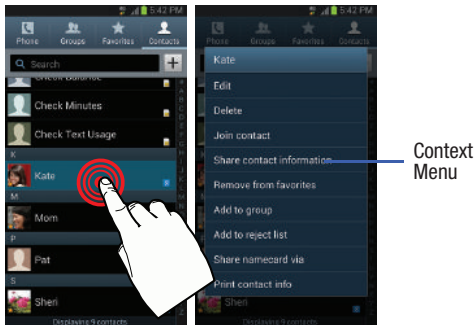

Accessing Recently-Used Applications

1. Press and hold  to open the recently-used applications window.

Note: This recent applications screen also provides access to the **Task manager** ().

2. A pop-up displays the six most recently used applications.
3. Tap an icon to open the recent application.

Customizing the Screens

You can customize the Home screens (panels) to display the Widgets, Shortcuts, Folders, or Wallpapers. For example, one screen could contain the Music Player shortcut and other forms of media, while another screen might contain communication apps such as Gmail.

You can customize your Home screen by doing the following:

- Adding, Deleting, and Rearranging screens
- Assigning a New Home screen
- Adjusting the Home Screen Mode
- Sharing Application Information
- Managing Shortcuts
- Adding and Removing Primary Shortcuts
- Creating an Application Folder
- Adding a New page to the Application Menu
- Adding and Removing Widgets
- Changing the Background (Wallpapers)

Adding and Deleting Screens

Your phone comes with seven screens. You can delete these screens and then add them back later.

Note: These screens can be deleted and re-arranged.

Important! Your phone can only contain at most seven screens and at least one screen.

To delete a screen:

1. From the Home screen press  and then tap **Edit page**.
2. Touch and hold, then drag the undesired screen down to the **Remove** tab ().
3. Press  to return to the main Home screen.

To add a screen:

1. From the Home screen press  and then tap **Edit page**.
2. Tap  (**Add screen**).
The newly added screen appears as the last page.
3. Press  to return to the main Home screen.



Rearranging the Screens

1. Press  →  and then tap **Edit page**.
2. Touch and hold a screen and then drag it into its new location. Upper-left is screen position #1 and bottom-right is screen last screen.

Assigning a New Home Screen

1. Press  →  and then tap **Edit page**.
2. Tap  (**Home screen**). The new Home screen then indicates this icon in the upper-right.

Adjusting the Home Screen Mode

This application allows you to change the Home screen mode and choose between Basic mode and Easy mode.

- **Basic mode:** displays screens, shortcuts, and widgets in their standard view (as seen on most Android devices).
- **Easy mode:** makes navigation easier by increasing the size of most application shortcuts, providing an entire page with large Contact entries, and creating other easy to access and view widgets. This mode is intended for first-time smartphone users.

1. Press  →  and then tap **Settings** →  (**Home screen mode**).
2. Tap the pull-down Dropbox and select one of the following options:
 - **Basic mode:** provides conventional layout for the apps and widgets on your home screens.
 - **Easy mode:** provides easier user experience for first-time smartphone users on the home screens.
3. Tap **Apply** and give your device a few seconds to update the device with the new look and feel.

Sharing an App

The device's Applications menu now comes with a feature that allows you to share information about your selected applications with external users.

1. Press  and then tap  (**Apps**).
2. Press  and then tap **Share apps**.
3. Place a check mark alongside those applications you wish to share information about and tap **Done**.

Note: Shared applications consist of those that have previously been downloaded from the Play Store.


4. Select a sharing method. Choose from: Bluetooth, ChatON, Dropbox, Email, Flipboard, Gmail, Google+, Messaging, S Note, and Wi-Fi Direct.
5. The recipient will be notified about the receipt of the new information.

Managing Shortcuts

Note: To move a shortcut from one screen to another, you must carefully touch and hold the shortcut and slowly drag it to the edge of the screen. As the shortcut turns light blue, you can begin to move it to the adjacent screen. If this does not work, delete it from its current screen. Activate the new screen and then add the selected shortcut.

To add a shortcut from the Applications screen:

1. Press  to go to the Home screen.
2. Select a screen location for your new shortcut by scrolling across your available screens until you reach the desired one.
3. Tap **Apps** () to reveal all your current available applications. By default, applications are displayed as an Alphabetical grid.
4. Scroll across the screens and locate your desired application.
5. Touch and hold the on-screen icon. The new shortcut then appears to hover over the current screen.
6. While still holding the on-screen icon, position it on the current screen. Once complete, release the screen to lock the shortcut into its new position.

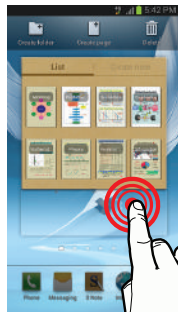

To add a shortcut via the Add to Home screen:

1. Press  to go to the Home screen.
2. Navigate to a screen with an empty area.
3. Touch and hold an empty area of the screen.
4. From the **Home screen** window tap **Apps and widgets**.
5. Scroll across the pages and tap a selection.

To delete a shortcut:

1. Press  to go to the Home screen.
2. Touch and hold the desired shortcut. This unlocks it from its location on the current screen.
3. Drag the shortcut over the **Remove** tab () and release it.

Adding and Removing Primary Shortcuts

Note: You can change any of your primary shortcuts with the exception of the **Apps** shortcut.

To remove a primary shortcut:

1. Press  to go to the Home screen.
2. Touch and hold the primary shortcut you want to replace, then drag it to an empty space on any available screen. The primary shortcuts are now updated to show an empty slot.

To insert a new primary shortcut:

1. Press  and then tap  (**Apps**).
2. Locate your desired application, then touch and hold the on-screen icon to position it on a desired screen. For more information, refer to “Managing Shortcuts” on page 70.
3. Locate the screen with the desired shortcut you want to add as the new primary shortcut.
4. Touch and hold the shortcut until it detaches from the screen.
5. In a single motion, touch and hold the new shortcut, then drag it to the empty space in the row of primary shortcuts. The new primary shortcut will now appear on both the Home and Extended screens.

Creating Application Folders

You can create application folders to hold similar applications if you wish.

1. Press  and then tap  (**Apps**).
2. Tap the **Apps** tab at the top of the screen if it is not already selected.
3. Press  and then tap **Create folder**.
4. Enter name for the new folder and tap **OK**. The new empty folder is located alphabetically in the Apps area.
5. Press  and then tap **Edit** and tap the empty folder.
6. Tap  (**Add apps to folder**), scroll across the available Apps page and place checkmarks on those apps you wish to add to these grouped folder.
7. Tap **Done** to complete the process. The contained apps appear on top of the folder.
8. Tap **Save**.
– or –
1. Press  and then tap  (**Apps**).
2. Press  and then tap **Edit**.

3. Touch and hold the first application that you would like to move to a folder.
4. Drag the shortcut over  (**Create folder**).
5. A folder is displayed in alphabetical order on the Apps page with the application icon displayed on top of it.
6. Repeat steps 5 - 7 to add additional apps to the folder.
7. Drag the desired application shortcut over  (**Apps Info**). to view information on the application.
8. Tap **Save**.

Adding a New Page to the Application Menu

You can add a new page to your application menu by following these steps:

1. Press  and then tap  (**Apps**).
2. Tap the **Apps** tab at the top of the screen if it is not already selected.
3. In a single motion, touch and drag the first application (that you would like to move to a new page) towards the top of the screen.
4. Drag the shortcut over  (**Create new page**).
5. The app will appear on a new page.

Adding and Removing Widgets

Widgets are self-contained applications that can be placed on any screen. Unlike shortcuts, widgets appear as applications.

To add a Widget:

1. Press  and then tap  (**Apps**) → **Widgets** tab.
2. Scroll across the Widget pages and locate a desired Widget.
3. Touch and hold an available Widget until it detaches from the screen.
4. While still holding the Widget, scroll left or right across the available screens and let go of the Widget to place it on your current screen.

To remove a Widget:

1. Touch and hold a Widget until it unlocks from the current screen.
2. Drag the widget over the **Remove** tab () and release it.
 - As you place the Widget into the Trash, both items turn red.
 - This action doesn't delete the Widget, it just removes it from the current screen.

To place a widget onto a different screen:

1. Touch and hold the widget until it becomes transparent.
2. Slowly drag it past the edge of the screen until the adjacent page appears highlighted and it then snaps onto the new page.
3. Drag the widget to its desired position on the new screen.
4. Repeat these steps to continue moving it to other screens.

Managing Wallpapers

Wallpapers consist of either Gallery images (user taken), Live wallpapers (animated backgrounds), or Wallpaper gallery (default phone wallpapers).

Note: Selecting animated Live wallpapers will require additional battery power.

To change the current Home screen wallpaper:

1. Navigate to any screen.
– or –
Press  to go to the Home screen.
2. Touch and hold an empty area of the screen.
3. From the **Home screen** window tap **Set wallpaper** → **Home screen**.
4. Select a Wallpaper type:
 - Tap **Gallery** to select from a user image stored in the camera image Gallery. Crop the image, and tap **Done**.
 - Tap **Live wallpapers** to select from a list of animated backgrounds, once done tap **Set wallpaper**.
 - Tap **Wallpapers**, scroll through the images, tap a wallpaper image, then tap **Set wallpaper**.

Note: Wallpapers supports the following image types: JPEG, PNG, GIF, BMP, and WBMP.

To change Wallpapers from Settings Menu:

1. Press  →  and then tap **Settings → Display → Wallpaper**.

– or –

Touch and hold an empty area of the screen and select **Set wallpaper**.

2. Choose from **Home screen**, **Lock screen**, or **Home and lock screens**.

Note: The **Home and lock screens** is an additional option that allows you to change both screens at the same time.

3. Select a wallpaper type (**Gallery**, **Live wallpaper**, or **Wallpapers**).
4. Choose an image and tap **Done** or **Set wallpaper**.

To change the current Lock screen wallpaper:

1. Navigate to any screen, touch and hold an empty area of the screen, and tap **Set wallpaper for → Lock screen**.

– or –

Press  →  and then tap **Settings → Display → Wallpaper → Lock screen**.

2. Select a Wallpaper type:
 - Tap **Gallery** to select from a user image stored in the camera image Gallery. Crop the image, and tap **Done**.
 - Tap **Wallpaper**, scroll through the images, tap a wallpaper image, then tap **Set wallpaper**.

Section 3: Memory Card

Your device lets you use a microSD card (also referred to as a memory card) to expand available memory space. This secure digital card enables you to exchange images, music, and data between SD-compatible devices. This section addresses the features and options of your device's SD functionality. The device has a USB SD card mode.

- microSD card storage: up to 2GB in size
- SDHC card storage: up to 32GB in size
- SDXC card storage: greater than 32GB in size

Using the SD Card

There are several methods for using the SD card:

1. Connecting to your PC to store files (such as music, videos, or other types of files and media).
2. To activate the camera, video, music player, and other dependant media or applications.

Important! Your device can support memory cards of up to 64GB capacity.

SD card Overview

After mounting an SD card in the device you can use your computer to access and manage the SD card.

Important! If access to the external SD card is not available, download and install the USB drivers.

microSD Icon Indicators

The following icons show your microSD card connection status at a glance:



- the card can now safely be removed.



- the card is being prepared for use and for mounting.



- the card has been improperly removed.

Important! DO NOT remove a microSD card while the device is accessing or transferring files. Doing so will result in loss or damage of data. Make sure your battery is fully charged before using the microSD card. Your data may become damaged or lost if the battery runs out while you are using the microSD card.

Mounting the SD Card

To store photos, music, videos, and other applications. You must mount (install) the SD card prior to use. Mounting the SD card establishes a USB connection with your computer.

1. Press  →  and then tap **Settings** → **Storage**.
2. Tap **Mount SD card**.

Communicating with the SD card

1. Insert the SD card into the external, SD card slot (For more information, refer to “*Installing the microSD Memory Card*” on page 11.)
2. Verify the card is properly mounted.

Note: Your device is configured to be used as a storage/media device by default. If it does not respond properly, you will need to verify the Debugging mode is not enabled.

3. Configure the device for USB storage mode connection by verifying Debugging mode is not enabled:
 - Press  →  and then tap **Settings** → **Developer options**.
 - Remove a check mark from the **USB debugging** field, if present.
 - For more information, refer to “*USB Debugging*” on page 354.
4. Connect the USB cable to the phone and connect the cable to the computer.

5. Confirm the new mounted drive appears as a new drive on your computer. As soon as the connection is established a drive letter is assigned to the phone's storage device.
6. To disconnect the new drive, simply remove the USB cable from your device.

Unmounting the SD card

Unmounting the SD card prevents corruption and damage to the SD card while removing it from the slot.

1. Press  →  and then tap **Settings** → **Storage**.
2. Tap **Unmount SD card** → **OK**.
3. After the “SD card will be unmounted” message displays and the **Mount SD card** now appears in the menu list, remove the SD card. For more information, refer to “*Removing the microSD Memory Card*” on page 11.

SD card Memory Status

To view the memory allocation for your external SD card:

- Press  →  and then tap **Settings** → **Storage**. The available memory displays under both the Total space and SD card headings.

Erasing Files from the SD card

To erase files from the SD card using the device:

1. Ensure the SD card is mounted. For more information, refer to “*Unmounting the SD card*” on page 78.
2. Press  →  and then tap **Settings** → **Storage** → **Mount SD card**.
3. Tap **Format SD card** → **Format SD card** → **Delete all** to format the SD card. The SD card formats and erases all the data stored on it.

Factory Data Reset

From this menu you can reset your phone and sound settings to the factory default settings.

1. Press  →  and then tap **Settings → Back up and reset**.
2. Tap **Factory data reset**. This action erases all data from your device except current system software and bundled applications, or SD card files such as music or photos.

Note: This feature provides an option to format the internal USB storage, not the microSD card.

3. Tap **Reset device → Delete all**.

Section 4: Call Functions and Contacts List

This section describes features and functionality associated with making or answering calls, and the Contacts list, which is used to store contact information.

Displaying Your Phone Number

- Press  →  and then tap **Settings** → **About device** → **Status**. Your phone number displays in the **My phone number** field.

Note: The device's **Settings** menu can also be activated by pressing  and then tapping  (**Apps**) →  (**Settings**).

Making a Call

You can store phone numbers that are regularly used to the SIM card or to the device's memory. These entries are referred to as the **Contacts list**.


1. Press  and then tap  (**Phone**).
 2. Enter the phone number and then tap .
- If you make a mistake while dialing, tap  to clear the last digit. Touch and hold  to clear the entire sequence.

Note: When you activate the **Auto redial** option in the **Call settings** → **Additional settings** menu, the device automatically redials up to 10 times when the person does not answer the call or is already on the phone, provided your call is not sent to voicemail.

Note: If your screen goes black during your interaction with the device (Launching Keypad, etc.), you might be accidentally swiping over the front sensors.

Quick Dialing a Number from the Contacts List

1. From the Home screen, tap  (Contacts).
2. Locate a contact from the list.
3. In a single motion, touch and drag your finger over the number by going to the right. This action places a call to the recipient.

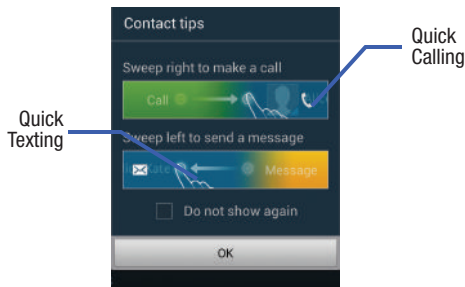

Running a Call in the Background

If you exit the current call screen and return to the Home screen, you are visually notified that you are still on an active call by the green phone icon within the Status bar.

This is the best way to stay on your current call and do something else (multi-task) such as access the Contacts list, view a recent email, locate a picture, etc..



Ending a Call

- Briefly tap  key to end the call.

Note: To redial a recent number, tap  at the end of the call or locate the number from the Logs list, tap the entry and tap **Call**.

Ending a Call from the Status Bar

1. From an active call, you can launch a separate application or return to the Home screen. The current call is kept active in the background.
2. Tap the Status bar to reveal the Notifications tab, and then drag the tab to the bottom of the screen to open the Notifications panel (1).
3. Tap **End** (End) to end the currently active call (2).



Making Emergency Calls

If you do not have a SIM card installed the first time you turn on the phone, the **Insert SIM card to make calls** message displays and an animated tutorial shows you how to install the SIM card.

Without a SIM card, you can only make an emergency call with the phone; normal cell phone service is not available.

Making an Emergency Call Without a SIM card installed

1. Tap **Emergency call** from the on-screen display to make an emergency call.
2. Enter 9-1-1 and tap . Complete your call. During this type of call, you will have access to the Speaker mode, Keypad, and End Call features.

Note: Selecting Location consent may drain battery power. For more information, refer to “Power Saving Mode” on page 323.

3. Tap  to exit this calling mode.

Making an Emergency Call With a SIM card installed

The Emergency calling mode makes redialing an emergency number a 1-tap process. Before you can resume normal calling operations, you should first exit this mode.

1. Swipe the Lock screen to unlock the device.
2. Press  and then tap .
3. Enter the emergency number (ex: 911) and then tap .
4. Complete your call. During this type of call, you will have access to the Speaker mode, Keypad, and End Call features.
 - After completing your emergency call,  appears in the Notification area until you exit the Emergency calling mode.

Note: This mode can drain your battery power more rapidly than a normal calling mode.

5. At the Emergency Callback screen:

- Tap  to callback 911 with a single tap.
- Touch and slide  to return to the Home screen while still remaining in the Emergency calling mode. This allows you to access other applications while staying in this mode.
- Touch and slide  to exit the Emergency calling mode.

Dialing Options

When you enter numbers on the Keypad, you will see three on-screen options.

From the keypad screen, use one of the following options:

- **Voice Mail** () to access your Voice Mail service.
- **Call** () to call the entered number.
- **Delete** () to delete digits from the current number.

To view additional dialing options:

- Tap :
 - **Send message** to send the current caller a text message while still maintaining the current call active.
 - **Add to Contacts** to add the current number to either a new or existing Contacts entry.
 - **Speed dial setting** to access the Speed Dialing menu where you can assign a speed dial location to a current Contacts entry.
 - **Add 2-sec pause** to insert a two-second pause to enter a 2-second delay within a number string (the phone continues dialing after 2 seconds without any additional keys being pressed).

Tip: You can create pauses longer than three seconds by entering multiple 2-sec pauses.

- **Add wait** to insert a hard pause within the number string (the phone waits for your input). A wait requires that any consecutive numbers be manually sent by tapping **Yes**.

- **One-handed operation On/Off** to enable or disable the resize and reposition the keypad/dialer for either left (Off) or right handed operation (On).
- **Call settings** to provide you access to the Call settings screen.

Answering a Call


When somebody calls you, the phone rings and displays the incoming call image. The caller's phone number, picture, or name if stored in Contacts List, displays.

- At the incoming call screen:
 - Touch and slide  to answer the call.
 - Touch and slide  to reject the call.
 - Touch and drag the **Reject call with message** tab upward and tap a predefined rejection message or tap **Create new message** to create a new custom outgoing response.

Pressing the Volume down button mutes the ringer.

If the incoming call is from a number stored in your Contacts, the entry's name is displayed. You may also see the caller's phone number, if available.

Touch and slide in any direction to answer the call

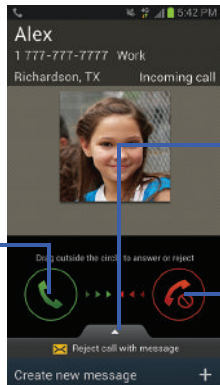

Touch and drag upward to reject with a message

Touch and slide in any direction to reject the call

Managing Reject Calls

This feature allows you to categorize both known and unknown callers as rejected contacts. These Contacts are then added to your Rejection list which can be managed for individual entries from within the Contacts list or as a whole from the Call rejection screen.

1. From the Home screen, tap .
2. Press  and then tap **Call settings** → **Call rejection**.
3. In a single motion touch and slide the **Auto reject mode** slider to the right to turn it on  **ON**. The slider color indicates the activation status of the Auto reject mode.
 - **OFF**: disables the automatic rejection feature. You must then manually reject incoming phone calls.
4. Tap the **Auto reject mode** field to configure your automatic rejection settings. Rejected calls are routed automatically to your voicemail. Choose from:
 - **All numbers**: enables the features for all known and unknown numbers, including those contacts that are not assigned to the rejection list.
 - **Auto reject numbers**: automatically rejects all entries assigned to the Reject list/Blacklist.

Adding numbers to the rejection list

Entries can be added to the list via either the Contacts menu or via the Auto reject list menu. The Contacts menu option assigns all numbers for an individual as rejected. The Auto reject list allows to assign individual numbers.

To assign multiple numbers as rejected via Contacts:

1. From the Home screen, tap  (**Contacts**).
2. Locate an entry and tap it to open the Contact Overview Screen (page 128).
3. Press  and then tap **Add to reject list**. All phone numbers associated with this entry are then added to the reject list.

To assign single number as rejected via Auto reject list:

1. From the Home screen, tap .
2. Press  and then tap **Call settings → Call rejection → Auto reject list**.
3. Tap  (**Create new rejection entry**) and either enter the phone number or select a Contact from your Logs or Contacts list.
4. Tap **Save** to complete the assignment.

International Calls

1. From the Home screen, tap  and then touch and hold  until the device shows “+” on-screen.
2. Use the on-screen keypad to enter the country code, area code, and phone number.
3. If you make a mistake, tap  once to delete a single digit.
– or –
Touch and hold  to delete all digits.
4. Tap .

Pause Dialing

You can dial or save phone numbers with pauses for use with automated systems, such as voicemail or financial phone numbers.

- **2 Second Pause** automatically sends the next set of numbers after a two-second pause. This is indicated in the number string as a comma (,).

1. From the Home screen, tap  and use the on-screen keypad to enter the phone number.
2. Press  and then tap **Add 2-sec pause**. This feature adds an automatic two-second pause.
3. Use the keypad to enter the additional numbers that will be dialed automatically after the second pause.

Tip: You can create pauses longer than three seconds by entering multiple 2-sec pauses.

4. Tap .

Wait Dialing

Inserting a Wait into your dialing sequence means that the phone waits until it hears a dial tone before proceeding with the next sequence of numbers.

- **Wait** sends the next set of numbers only after tapping . This is indicated in the number string as a semicolon (;).

Note: Do not add multiple Waits (;) to a number string as this will continue to prompt you after each sequence.

1. From the Home screen, tap  and use the on-screen keypad to enter the phone number.
2. Press  and then tap **Add wait**. This feature causes the phone to require your acceptance before sending the next set of entered digits.
3. Tap .
4. Once prompted to **Send the following tones?**, tap  to dial the remaining digits.

Redialing the Last Number

The device stores the numbers of the calls you've dialed, received, or missed if the caller is identified.

To recall any of these numbers:

1. From the Home screen, tap .
2. Tap  (**Logs** tab) to display the list of recent calls.
3. Tap the name/number and tap .

Speed Dialing

Once you have stored phone numbers from your **Contacts** List, you can set up to 99 speed dial entries (2-100) and then dial them easily whenever you want, simply by touching the associated numeric key.

Note: Speed dial location #1 must be reserved for Voicemail use.

Setting Up Speed Dial Entries

Important! Speed dial location #1 is reserved for Voicemail. No other number can be assigned to this slot.

1. From the Home screen, tap .
2. Press  and then tap **Speed dial setting**. The **Speed dial setting** screen displays a virtual list of locations with the numbers 2 through 100.
3. Tap an unassigned number slot. The **Select contact** screen displays.
4. Tap a contact and select a number to assign it to the speed dial location. The selected contact number/image is displayed in the speed dial number box.

Changing a Speed Dial Entry Order

1. From the Home screen, tap .
2. Press  and then tap **Speed dial setting**.

Important! The number 1 is reserved for Voicemail and another number cannot be assigned to this slot.

3. Press  and then tap **Change order**.
4. Tap the current entry then tap the new target speed dial location.

Note: Tapping 2 existing speed dial locations causes the entries to switch positions.

5. Tap **Done** to save the entry in the new location, exit the Change order screen, and return to the previous screen.

Removing a Speed Dial Entry

1. From the Home screen, tap .
2. Press  and then tap **Speed dial setting**.
3. Touch and hold a existing on-screen speed dial location and select **Remove** from the context menu.
— or —
Press  and then tap **Remove**. Tap an entry or select  (**Remove entry**) → **Done**.
4. Press  to return to the previous screen.

Making a Call Using Speed Dial

You can assign a short cut number to a phone number in the Contacts List for speed dialing.

1. From the Home screen, tap .
2. Touch and hold a previously created speed dial location (numbers 2-100, or 1 if you are dialing voice mail) until the number begins to dial.
3. If you are not certain of the speed dial location, tap  →  → **Speed dial setting** and tap a speed dial number to view the assigned phone number.

Wi-Fi Calling

Wi-Fi Calling is a free feature for T-Mobile customers using this device with the new ISIM card. Wi-Fi Calling is an excellent solution for coverage issues in and around the home or wherever cellular coverage is limited. Minutes used while connected to the Wi-Fi network count against available rate plan minutes.

The benefits of Wi-Fi Calling include the following:

- Wi-Fi Calling provides a coverage option to improve upon your current in-home coverage experience
- Wi-Fi Calling works anywhere there is a Wi-Fi signal available

Important! A new micro SIM card must be installed within the device prior to using this feature. Wi-Fi must first be active and communicating prior to launching Wi-Fi Calling.

Note: This feature is active by default. If you are in an active Wi-Fi call and go out of range of your Wi-Fi, the call will be dropped.

Activating Wi-Fi

1. Press  →  and then tap **Settings**.
2. Locate the **Wi-Fi** field and in a single motion touch and slide  to the right to turn it on . The slider color indicates the activation status.
3. Select a Wi-Fi network from the list of available networks. Follow the on-screen instructions to complete connection.



Wi-Fi Connected

Displays when Wi-Fi is connected, active, and communicating with a Wireless Access Point (WAP).



Wi-Fi Communication Issue

Displays when Wi-Fi is active and there is an available open wireless network.

Note: To avoid international data roaming fees when using Wi-Fi calling when outside the United States, the Data Roaming feature on your device must be turned off.

Note: With certain rate plans, minutes used while connected to the Wi-Fi network count against available rate plan minutes.

Important! If you are not using a new ISIM card, you will receive an **Error: ER05 Invalid SIM** message. You must be using a new ISIM card to use this feature.

Activating Wi-Fi Calling

1. Ensure that the **Wi-Fi connected** icon displays on the status bar.
 - If prompted with an on-screen “Did you know your phone can make calls over Wi-Fi” popup, tap **Learn** and follow the remaining on-screen instructions. Tap **Next** → and tap **Done**.
2. Press  →  and then tap **Settings** → **More settings** → **Wi-Fi Calling**. The feature is active when there is a green check mark in the field.

3. If  (**Missing 911 Address**) displays in the Status Bar, follow these steps to provide 911 an address for emergency situations:
 - Log into my.t-mobile.com.
 - Click on **Profile** and edit the **Edit customer information**.
 - Enter your emergency location information and complete the online registration.
4. Press  →  and then tap **Settings** → **More settings** → **Wi-Fi Calling Settings**.
5. Tap **Connection Preferences** and select a preference for use by the Wi-Fi Calling feature:
 - **Wi-Fi Preferred:** Wi-Fi network is preferred over cellular network when making calls. Calling requires you to stay in the Wi-Fi range.
 - **Wi-Fi Only:** Wi-Fi network is required for making calls. Calling requires you to stay in the Wi-Fi range.
 - **Cellular Preferred:** The cellular network is preferred over a Wi-Fi network when making calls.

6. Tap **OK** to save the setting.
7. Press  →  and then tap **Settings** → **More settings**.
8. Tap **Wi-Fi Calling** to toggle off the feature, then tap it again to reactivate the feature and re-register your device with the T-Mobile Network.
9. Confirm  (**Wi-Fi Calling Ready**) displays in the Status Bar.

Launching Wi-Fi Calling

Note: Verify you are currently connected to a Wireless Access Point.

1. Ensure that the **Wi-Fi connected** icon displays on the status bar.
2. Confirm  (**Wi-Fi Calling Ready**) displays in the Status Bar.

When	Action	Then
	Displays on the screen status bar.	You are connected to the T-Mobile network and can make Wi-Fi calls.
	Displays on the screen status bar.	The Wi-Fi calling feature is active and in use within an active call.
	Does not display on the screen status bar.	You are charged normal calling rate minutes. For more information, refer to “Activating Wi-Fi Calling” on page 91.
	Displays on the screen status bar.	There is an error in the use or 911 registration of the Wi-Fi Calling feature.

3. Use the phone Dialer, Logs, or Contacts list to make a call.
4. Go to the dialer and make a call. Make sure  (**Wi-Fi Calling in use**) appears during the call.

Adjusting Noise Reduction

During a call it may be necessary to adjust the noise reduction feature. Activating this feature can improve the quality of your conversation by reducing ambient noise.

1. Press  and then tap **Noise reduction off** to toggle the status and activate the feature.
2. Press  and then tap **Noise reduction on** to toggle the status and deactivate the feature.

Adjusting the Call Sound Setting

During a call it may be necessary to adjust the sound equalizer for the current call.

1. Press  and then tap **My call sound**.
2. Select an available option.
Choose from: Off, Soft sound, Clear sound, Optimized for left ear, or optimized for right ear.

Placing a Call on Hold

You can place the current call on hold whenever you want. If your network supports this service, you can also make another call while a call is in progress.

To place a call on hold:

1. Tap  **Hold** (**Hold**) to place the current call on hold.
2. Tap  **Unhold** (**Unhold**) to activate the call that is on hold.

To make a new call while a call is in progress:

1. Enter the new phone number that you wish to dial or look it up in Call history.
2. Tap **Add call** to dial the second call.
3. Dial the new phone number and tap .

To switch between the two calls:

- Tap **Swap**.
The previous In call number turns gray and displays On hold. The new active call displays a green background behind the number.

Turning the Speakerphone on and off

While on a call, you can use your Speakerphone by following these steps:

1. Tap  (**Speaker off**) to toggle the speakerphone on.
2. Tap  (**Speaker on**) to toggle the speakerphone off.

Tip: When the speaker is turned **On**, the color of the speaker is green. When the speaker is turned **Off**, the color of the speaker is gray.

Muting a Call

1. Tap  (**Mute off**) to turn mute on so the other caller cannot hear you speaking.
2. Tap  (**Mute on**) to turn mute off and resume your conversation.

Switching to Bluetooth Headset

1. Pair the target Bluetooth headset prior to your call.
2. While on a call, switch to the Bluetooth headset instead of speaker by tapping  (**Headset off**).
3. At the prompt, tap **Turn on** to enable Bluetooth if it is not already activated.
4. While on a call, switch back to the device speaker by tapping  (**Headset on**).

More In-call Options

During a call you can save the current caller's information to the Contacts list, or create a Memo.

Viewing the Contacts List

During a call you can look up a number in the Contacts list.

1. Press  and then tap **Contacts**.
2. Browse the Contacts list for the information you need.
3. Press  to return to the active call.

Creating an S Note During a Call

During a call it may be necessary to record information (a Note).

1. Press  and then tap **S Note**.
2. Use either your S Pen or on-screen keyboard to enter the content and then tap  (**Save**).
 - If desired, press  to close the popup note and return to your active call.

Multi-Party calls

Making a Multi-Party Call

A multi-party call is a network service that multiple people to participate in a multi-party or conference call.

For further details about subscribing to this service, contact T-Mobile customer service.

Setting up a Multi-Party Call


1. From the Home screen, tap .
2. Dial the number for the first participant and tap .
3. Tap **Add call**, enter the second phone number and tap . The first caller is placed on hold.
4. Wait for the second caller to answer the incoming call and tap **Merge**. The two calls are now joined into a multi-party call and display in the order in which they were called.

Important! Multiple callers can be joined to a single multi-party line. Additional callers participate in a new Multiparty session and are held in conjunction with the previous multiparty call. You can swap or place each multi-party call on hold.


Having a Private Conversation With One Participant

When you have two participants in a multi-party session, it might be necessary to place one of those participants on hold so that a private conversation can be held with a single caller. While you are in a multi-party call:

1. Tap **Manage**.
2. Tap  adjacent to the participants you would like to split from the current multi-line call. The list displays the callers in the order they were dialed.

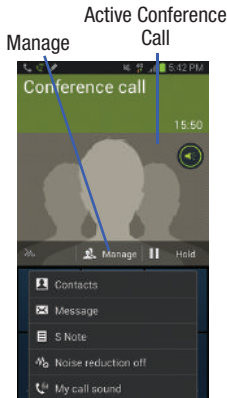

Note: The Manage conference call option is not available for multi-party calls created while using the Wi-Fi Calling feature. You must be on the cellular network to use the manage feature.

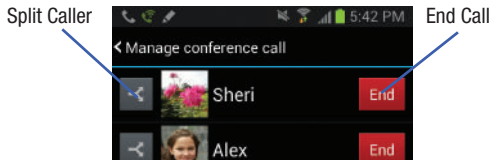

3. Tap the participant to which you want to speak privately.
You can now talk privately to that person while the other participants can continue to converse with each other. If there is only one other participant, that person is placed on hold.
4. To return to the multi-party call, tap the **Merge** icon. All of the multi-party call participants can now hear each other.

Dropping One Participant

1. Tap **Manage** →  to the right of the number to drop.
The participant is disconnected and you can continue the call with the other participant.
2. Tap  to end your conversation with the remaining caller.

Call Waiting

You can answer an incoming call while you have a call in progress, if this service is supported by the network and you have previously set the Call waiting option to **Activate**.

You are notified of an incoming call by a call waiting tone. For more information, refer to “*Configuring Additional Voice Call Settings*” on page 314.

To answer a new call while you have a call in progress:

1. In a single motion, touch and slide  in any direction to answer the new incoming call.
2. Tap an option from the Accept call after menu:
 - **Putting xxx on hold** to place the previous caller on hold while you answer the new incoming call.
 - **Ending call with xxx** to end the previous call and answer the new call.

Note: The new caller appears at the top of the list. The previous caller is placed on hold and appears at the bottom of the list.

3. Tap **Swap** to switch between the two calls. This places the new caller on hold and activates the previous call.

Important! The currently active call is displayed with a green background.

4. Tap **Swap** again to switch back.

Using S Voice

This is a voice recognition application used to activate a wide variety of functions on your device. This is a natural language recognition application.

This goes beyond the Google Search Voice Actions feature that simply recognizes Google commands and search terms. You can ask it questions (Is it raining in Dallas?) or give it commands (Show my where to find cheap gas).

1. From the Home screen, tap  (Apps) →  (S Voice).
2. Read the on-screen disclaimer information and tap **Confirm** to continue.
3. Review the Terms of service and tap **Agree** to continue.
4. Navigate through the following on-screen tutorial screens by reading the information and tapping **Next**, or tap **Skip** to continue without reading the information.
5. Wake up the application by repeating the phrase **Hi Galaxy**.

Note: The wake-up command/phrase can be changed from “Hi Galaxy” to anything else. For more information, refer to “*Samsung Unlock Options*” on page 332.

6. Tap  (**Speak**) if the device does not hear you or to give it a command.

Example 1:

- I want to find the best pizza online.
- Tap  and say “Find me the best Pizza”. This launches an Internet search.

Example 2:

- I want to find the nearest gas station.
- Tap  and say “Find me the nearest gas station”. This launches the Map application and indicates where these are in relation to your current position.

Logs Tab

The Logs tab is a list of the phone numbers (or Contacts entries) for calls you placed, accepted, or missed. The Logs tab makes redialing a number fast and easy. It is continually updated as your device automatically adds new numbers to the beginning of the list and removes the oldest entries from the bottom of the list.

The Notification area of the Home screen (upper-left) displays phone notifications, status, or alerts such as:



Displays when a call is in progress.



Displays when a call was missed.

Accessing the Logs Tab

1. From the Home screen, tap  →  (Logs tab).
2. Tap an entry to view available options.

Note: The Logs tab only records calls that occur while the phone is turned on. If a call is received while it is turned off, it will not be included in your calling history.

Each entry contains the phone number (if it is available) and Contacts entry name (if the number is in your Contacts).



Indicates all outgoing calls made from your device.



Indicates any received calls that were answered.



Indicates a missed call.



Indicates any received calls that were rejected.



Indicates auto rejected calls.

Accessing Call log from The Notifications Area

1. Locate  from the Notifications area of the Status bar.
2. Tap the Status bar to reveal the Notifications tab, and then drag the tab to the bottom of the screen to open the Notifications panel (1).
3. Tap the Missed call entry to open the Logs screen (2).



This list provides easy access to redial an entry, or you can also choose to access two types of history entry lists depending on how they are touched.

Call logs - Caller Overview

- Tap a contact entry name or number to reveal the **Call options** screen:
 - **Create contact** to save the number if it is not already in your Contacts.
 - **View contact** to view the Contact details for the current entry.
 - **Update existing** to update an existing Contacts entry with the current number.
 - **Call** allows you to redial the entry by name or number.
 - **Send message** allows you to create a new text message to the selected entry.
 - **Time** provides the time and date of the call and its duration.
 - **Copy to dialing screen** press  to past the current number to your dialer and then edit the selected number before you place your next outbound call.
 - **Delete** press  to delete the Contacts entry.
 - **Send number** press  to send the current Contacts entry information to an external recipient.

- **Add to reject list** press  to add the current phone number to an automatic rejection list. Similar to a block list, the selected caller will be blocked from making an incoming calls to your phone.
- Touch and hold an entry to display the entry-specific context menu:
 - **Call [Number]** to redial the current phone number.
 - **Send message** allows you to create a new text message to the selected entry.
 - **Copy to dialing screen** to make alterations to the current phone number prior to redial.
 - **Add to Contacts** to save the number if it is not already in your Contacts.
 - **View contact** to view the information for the currently stored Contacts entry.
 - **Send number** to send the current Contacts entry information to an external recipient.
 - **Add to reject list** to add the current phone number to an automatic rejection list. Similar to a block list, the selected caller will be blocked from making an incoming calls to your phone.
 - **Delete** to delete the entry from the Logs list.

Altering Numbers from the Logs List

If you need to make a call from the Logs screen and you need to alter the number prior to dialing, you can add the appropriate prefix by prepending the number.

1. From the Home screen, tap  → .
2. Touch and hold an entry to access the entry-specific context menu.
3. Tap **Copy to dialing screen**.
4. Edit the number using the on-screen keypad or delete digits by pressing  to erase the numbers.
5. Tap  once the number has been changed.

Erasing the Call logs List

You can delete either an individual call log entry or all current entries from the Logs list.

To clear a single entry from the list:

1. From the Home screen, tap  → .
2. Touch and hold an entry and select **Delete** → **OK**.

To clear all entries from the list:

1. From the Home screen, tap  → .
2. Press  and then tap **Delete**.
3. Tap **Select all**.
4. Tap **Delete** to continue with the erasure.
— or —

Tap **Cancel** to stop the current process.

Call Duration

1. From the Home screen, tap  → .
2. Press  and then tap **Call duration**.
3. The following times are displayed for Voice and Data:
 - **Last call**: shows the length of time for the last call.
 - **Dialed calls**: shows the total length of time for all calls made.

- **Received calls**: shows the total length of time for all calls received.
- **All calls**: shows the total length of time for all calls made and received.

You may reset these times to zero by pressing  then tapping **Reset**.

Viewing Missed Calls from Lock Screen

When you are unable to answer a call for any reason and your screen is locked, the number of missed calls are displayed on the Lock screen immediately after a call is missed.

1. Press  (Power) to reactivate the screen.
2. Touch and drag the button (with the number of missed calls on it) anywhere on the screen. The Logs tab is then displayed.



Section 5: Entering Text

This section describes how to select the desired text input method when entering characters into your phone. This section also describes the predictive text entry system that reduces the amount of key strokes associated with entering text.

Your device comes equipped with an orientation detector that can tell if the phone is being held in an upright (Portrait) or sideways (Landscape) orientation. This is useful when entering text.

Your phone also provides several on-screen keypad text entry options to make the task of text entry that much easier.

Text Input Methods

There are three text input methods available:

- **Google voice typing:** provides a voice to text interface.
- **Samsung keyboard** (default): an on-screen QWERTY keyboard that can be used in both portrait and landscape orientation.
- **Swype:** a new way to enter text on touch screens. Instead of tapping each key, use your finger to trace over each letter of a word.

The on-screen QWERTY keypad works the same in both portrait and landscape mode.

Selecting the Text Input Method

The Text Input Method can be assigned from within one of two locations:

Settings Menu:

- Press  →  and then tap **Settings** → **Language and input** → **Default** and select an input method.

Text Input field:

1. From a screen where you can enter text, in a single motion, touch and drag the Status bar down to the bottom of the screen to open the Notifications screen.
2. Tap  (**Choose input method**) and select an available input method.

Entering Text Using Swype

Swype™ is the default text input method that allows you to enter a word by sliding your finger or stylus from letter to letter, lifting your finger between words. Swype uses error correcting algorithms and a language model to predict the next word. Swype also includes a touch predictive text system.

The on-screen keyboard options are different between the Android keyboard and Swype on-screen input methods.

Important! If after enabling Swype you are prompted to Contribute usage data, read the on-screen disclaimer and tap either **Accept** or **Cancel**.

Enabling and Configuring Swype

If you configure another text input method (Samsung keyboard) you must re-enable Swype before using the Swype keyboard.

When Swype is enabled there can also be normal keyboard functionality.

1. Press  →  and then tap **Settings** → **Language and input**.
2. Tap **Default** → **Swype**.

Swype Settings

To configure Swype settings:

1. Press  →  and then tap **Settings** → **Language and input** →  (adjacent to the **Swype** field).
2. Tap **How to Swype** to view an on-screen manual for Swype.
3. Tap **Preferences** to alter these settings:
 - **Vibrate on keypress**: activates a vibration sensation as you enter text using the keypad.
 - **Sound on keypresses**: turns on sounds generated by the Swype application.
 - **Show helpful tips**: turns on a flashing indicator for quick help.
 - **Auto-spacing**: automatically inserts a space between words. When you finish a word, just lift your finger or stylus and start the next word.
 - **Auto-capitalization**: automatically capitalizes the first letter of a sentence.
 - **Show complete trace**: once enabled, sets whether or not to display the complete Swype path.

- **Pop-up on keypress:** once enabled, displays a character above an on-screen key while typing.
- **Next word prediction:** once enabled, predicts the next word in your text string based on your current text entries.

Note: If incorrect words are being entered as you type, disabled this feature.

- **Reset Swype's dictionary:** once enabled, deletes any words you have added to Swype's dictionary.
 - **Version:** displays the software version information.
4. Tap **Language Options** to activate and select the current text input language. Default language is US English.
 5. Tap **Swype Connect** to activate social media personalization and configure data settings.
 - **Facebook:** allows you to log into your current Facebook account from where contact names are added to your Swype's personal dictionary for later use when you enter names into text fields. Helps recognize familiar names.
 - **Twitter:** allows you to sign into your existing Twitter account from where names and words are added to your personal dictionary. Helps recognize familiar names and words.


- **Gmail:** allows you to sign in to your existing Gmail account from where existing contact information is added to your personal dictionary. Helps recognize familiar names.
- **Contribute usage data:** when enabled, allows the Nuance[®] application to collect usage data for better word predictions.
- **Cellular data:** when enabled, activates cellular data usage by the Swype application so it can receive program updates, language downloads, and other related features via your existing data connection.

6. Tap **Personal dictionary** to access and manage your personal dictionary.
7. Tap **Updates** to update the application if new software is available.

Swype Text Entry Tips

You can access the SwypeTips application and watch a video or tutorial on using Swype. You can also use the following Swype text entry tips.

- Create a squiggle (like an S shape) to create a double letter (such as **pp** in apple).
- Touch and hold a key to view the punctuation menu then make a selection.
- Move your finger or stylus over the apostrophe to enter contractions.
- Double-touch on the word you want to change to correct a misspelled word, then touch the delete key to erase one character. Touch and hold the delete key to erase an entire word.

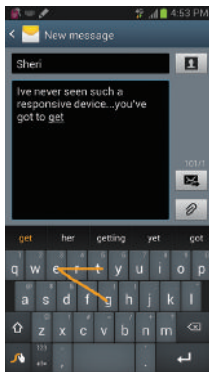


Selecting a Text Input Mode in Swype

1. From a screen where you can enter text, tap the text input field to reveal the on-screen keyboard.
2. With Swype as your text entry method, select one of the following text mode options:
 - **ABC**  to use Swype with alphanumeric characters from the on-screen keyboard.
 - **SYM** (Symbol)  to enter numbers and symbols from the on-screen keyboard.

Note: After typing an initial uppercase character, the  key changes to  and all letters that follow are in lower case.

Swype Keyboard Overview

- **Recipients:** a field where you can enter the recipients of the current message. You can choose from **Contacts**, **Call log**, **Groups**, or **Favorites**.
- **Text Input field:** a field where text, number, or other characters can be entered.
- **CAPS/ALT key:** When in 123ABC mode, this key changes the capitalization of the subsequent entered characters. When in SYM mode, this key can show additional symbol characters.
- **SWYPE settings:** Touch and hold this button to access the Swype settings screen.
- **Text Input mode:** There are two available modes: **123ABC** and **SYM**.
 - 123ABC mode contains alphanumeric characters and a few common punctuation marks. Text mode button indicates **SYM**.
 - SYM mode contains only symbols and numbers. Text mode button indicates **123ABC**.

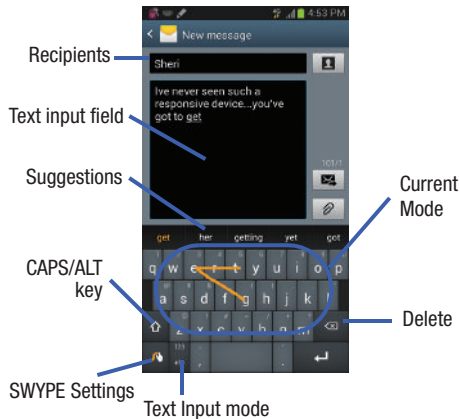

Using 123ABC Mode in SWYPE

In **123ABC** mode, you can enter only letters and a few common punctuation marks from the on-screen keyboard.

The text mode key shows .

1. From a screen where you can enter text, tap the text input field to reveal the on-screen keyboard.
2. Tap  to configure the keyboard for 123ABC mode (showing letters and numbers on the on-screen keys). Once in this mode, the text input type shows .

Note: After typing an initial uppercase character, the  key changes to  and all letters that follow are in lower case.

3. Swipe your finger continuously over the letters to form a word.
 - If you make a mistake, tap  to erase a single character. Touch and hold  to erase an entire word.
4. Tap  (**Send**) to deliver the message.



All lowercase

Displays when the next character is entered in lowercase. Pressing this while in 123SYM mode, reveals additional numeric-symbols keys.



Initial Uppercase

Displays when the first character of each word is entered as uppercase but all subsequent characters are lowercase.



All Uppercase

Displays when all characters will be entered as uppercase characters.

By default, the first letter of an entry is capitalized and the following letters are lower case. After a word is entered and you lift your finger, the cursor automatically adds a space after the word.

Note: If multiple word choices exist for your Swype entry, an on-screen popup appears to provide additional word choices.

Entering Numbers and Symbols in SWYPE

By using the on-screen keyboard in portrait mode, some symbols are not available (such as Emoticons or Smileys). In SYM mode using Swype, you can only enter symbols and numbers from the on-screen keyboard.

Once in SYM mode, the text mode key shows .

1. From a screen where you can enter text, tap the text input field to reveal the on-screen keyboard.
2. Tap  to configure the keyboard for SYM mode. Once in this mode, the text input type shows .
3. Tap the on-screen key for the number or symbol you want to enter.
4. Tap  to select from additional symbols.

For example:

- To enter ®: tap  →  and select the ® key.

Using the Samsung Keyboard

This QWERTY keyboard can be used to enter text in either a Portrait or landscape orientation. The only difference between the two orientations are the sizes of the keys.

From a screen where you enter text, rotate your phone counterclockwise to a landscape orientation. The on-screen QWERTY keyboard displays.

The Samsung Keyboard


This device has a built-in, QWERTY keypad (portrait mode) or keyboard (landscape mode). Using the QWERTY keypad/keyboard, you can type letter, numbers, punctuation, and other characters.

To use the Samsung keyboard you must first configure the settings to default to the Samsung keyboard.

1. Press  →  and then tap **Settings** → **Language and input** → **Default** → **Samsung keyboard**.
– or –

From a screen where you can enter text, in a single motion, touch and drag the Status bar down to the bottom of the screen, then select  (Choose input method) → **Samsung keyboard**.

2. The virtual keyboard is then assigned to the Samsung keyboard configuration for all subsequent text input.

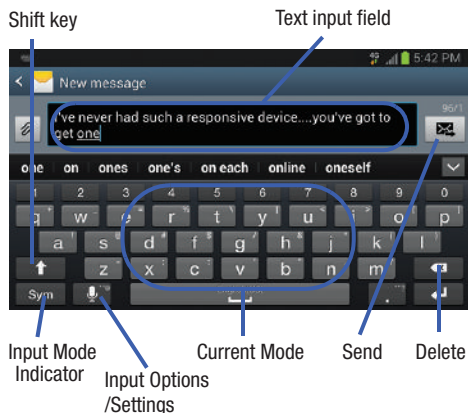

Entering Text using Different Input Options

Although the default text input method with the Samsung keyboard is to use the on-screen keys you have other options.

Note: To access settings, touch and hold the **Input Methods** button , then tap  (**Settings**) to select it from the available options.

1. From within an active message, tap the text input field to reveal the on-screen keyboard.
2. Tap  (**Input Methods**) to use the default Voice typing input method to convert your spoken words to on-screen text.

– or –

Touch and hold  to select from other input methods such as:

- **Handwriting** to launch an on-screen handwriting area that can be used to convert on-screen patterns (text) to text.
- **Clipboard** to launch the device's clipboard area from where you can select a current clipboard item to place in your current message.

- **Settings** to access the Samsung keyboard settings menu.

Changing the Text Input Mode in Keyboard

1. From a screen where you can enter text, tap the text input field to reveal the on-screen keyboard.
2. With Samsung keyboard as your text entry method, select one of the following text mode options:
 - **Abc**  : to use alphabetic characters from the on-screen keyboard. In this mode, the text mode button displays **Sym**.
 - **Symbol/Numeric**  : to enter numbers by pressing the numbers selecting them on the on-screen keyboard. In this mode, the text mode button displays **ABC**.
There are up to 3 available pages of numeric symbols available by tapping **1/3**.

Note: After typing an initial uppercase character, tap  to toggle capitalization.



All lowercase

Displays when the next character is entered in lowercase.



Initial Uppercase

Displays when the first character of each word is entered as uppercase but all subsequent characters are lowercase.



All Uppercase

Displays when all characters will be entered as uppercase characters.

By default, the first letter of a new entry is capitalized and the following letters are lowercased. After a character is entered, the cursor automatically advances to the next space.

Using ABC Mode in Samsung Keyboard

1. From a screen where you can enter text, tap the text input field to reveal the on-screen keyboard.
2. Tap  to configure the keyboard for ABC mode. Once in this mode, the text input type shows .

Note: After typing an initial uppercase character, the  key changes to  and all letters that follow are in lower case.

3. Enter your text using the on-screen keyboard.
 - If you make a mistake, tap  to erase a single character.
 - Touch and hold  to erase an entire word.
4. Tap  (Send) to deliver the message.

Using Symbol/Numeric Mode

Use the Symbol/Numeric Mode to add numbers, symbols, or emoticons. While in this mode, the text mode key displays .

1. From a screen where you can enter text, tap the text input field to reveal the on-screen keyboard. Rotate the phone counterclockwise to a landscape orientation, if desired.
2. Tap  to configure the keyboard for Symbol mode. Once in this mode, the text input type shows .
3. Tap a number, symbol, or emoticon character.
4. Tap  to return to ABC mode.


To enter symbols:

1. Tap  to configure the keyboard for Symbol mode.
 2. Tap the appropriate symbol key.
 - or –
- Tap  button to cycle through additional pages.
- The first number on this key indicates which page (1, 2, or 3) of additional characters is active.

Using the Handwriting Mode

The device also provides you with the ability to use your S Pen to hand write on the screen and have it converted into text just as easily as the voice to text feature.

-  tap to enable the Handwriting to Text mode
 -  tap to enable the Keyboard mode
1. Remove your S Pen from its location at the bottom of the device.
 2. From within an active message, tap the text input field to reveal the on-screen keyboard.
 3. Touch and hold  (**Input Methods**) then select  to enable the Handwriting mode.
 4. Touch the screen within the handwriting area and begin to write either single letters or entire words.
 5. Stop after each word and allow at least 1 second for the device to both recognize the characters and know you are done writing.

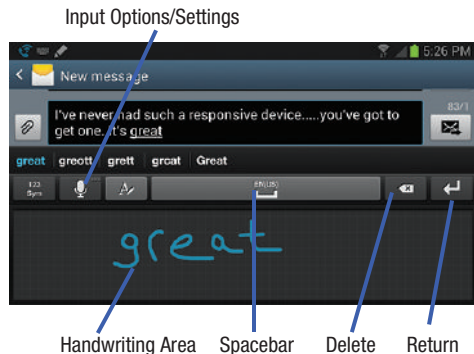

6. Tap the spacebar to add a space and proceed writing your next set of characters.
7. In a single motion, touch and hold  (**Input Methods**) and then select  (**Activate Keyboard Mode**) to return to the keyboard mode.

Using Predictive Text

The predictive text system provides next-letter prediction and regional error correction.

Note: Only available when ABC mode is selected. Predictive text advanced settings are available only if the Predictive function is enabled.

1. Press  →  and then tap **Settings** → **Language and input** →  (adjacent to the **Samsung keyboard** field).

– or –

From within an active text entry screen, touch and hold  (**Input Methods**) and select  (**Settings**) to reveal the **Samsung keyboard settings** screen.

2. Set any of the following options:
 - **Portrait keyboard types** allows you to choose a keyboard configuration (Qwerty Keypad [default] or 3x4 keyboard).
 - **Input languages** sets the input language. Tap a language from the available list. The keyboard is updated to the selected language.

- **Predictive text** enables predictive text entry mode. This must be enabled to gain access to the advanced settings. Touch and hold to access the advanced settings
- **Swiftkey flow** like using Swipe, allows you to enter text by sliding your fingers across the on-screen keyboard. This feature is optimized for use with the on-screen QWERTY keyboard.
- **Pen detection** enables the handwriting pad whenever the S Pen is detected on the screen.
- **One-handed operation** sets the on-screen keyboard to reposition and resize for use by either a single left or right hand operation.
- **Handwriting** allows you to configure the handwriting settings such as: Input languages, Recognition type, Recognition time, Pen thickness, Pen color, Gesture guide, Tutorial, and About.
- **Advanced** provides access to additional settings such as:
 - **Auto capitalization** automatically capitalizes the first letter of the first word in each sentence (standard English style).
 - **Auto-punctuate** automatically inserts a full stop in a sentence by tapping the space bar twice when using the on-screen QWERTY keyboard.

- **Character preview** provides an automatic preview of the current character selection within the text string. This is helpful when multiple characters are available within one key.
- **Key-tap vibration** enables vibration feedback when you tap an on-screen key.
- **Key-tap sound** enables auditory feedback when you tap an on-screen key.
- **Tutorial** launches a brief on-screen tutorial covering the main concepts related to the Samsung keyboard.
- **Reset settings** resets the keyboard settings back to their original configuration.

Using Predictive Text

The predictive text system provides next-letter prediction and regional error correction, which compensates for users pressing the wrong keys on QWERTY keyboards.

1. Press  →  and then tap **Settings** → **Language and input** →  (adjacent to the **Samsung keyboard** field).

— or —

From within an active text entry screen, touch and hold  (**Input Methods**) →  to reveal the **Samsung keyboard settings** screen.

2. In a single motion touch and slide the **Predictive text** slider to the right to turn it on  **ON**.
3. Tap the **Predictive text** field and configure any of the following advanced options:
 - **Personalized data** activate this feature to use the personal language data that you have entered and selected to make your text entry prediction results better. By enabling this feature you can choose from the following personalization features:

- **Learn from Facebook:** allows you to log into your current Facebook account from where style and contact names are added to your personal dictionary for later use when you enter names into text fields. Helps recognize familiar names.
 - **Learn from Gmail:** allows you to sign in to your existing Gmail account from where your style and existing contact information is added to your personal dictionary. Helps recognize familiar names.
 - **Learn from Twitter:** allows you to sign into your existing Twitter account from where your style and names and words are added to your personal dictionary. Helps recognize familiar names and words.
 - **Clear remote data:** deletes your anonymous data stored on the personalization server.
 - **Clear personalized data:** removes all personalized data entered by the user.
 - **Privacy:** allows you to review the current privacy policy.
4. Press  to return to the previous screen.

Using the Google Voice Typing

This feature uses Google voice recognition to convert your spoken words into on-screen text.

You can use your voice to enter text using the Google Voice typing feature.

1. From within an active text entry screen, touch the top of the screen and drag it down to display your notification panel.
2. Tap  (**Choose input method**) → **Google voice typing**.
3. At the Listening prompt  (**Speak now**), speak clearly and distinctly into the microphone. The text is displayed in the message as you are speaking.
4. Tap  (**Done**) when you are finished.
– or –
Tap  (**Resume**) to resume recognition.

Note: The feature works best when you break your message down into smaller segments.

Configure Google Voice Typing

1. Press  →  and then tap **Settings** → **Language and input**.

– or –

From a screen where you can enter text, in a single motion, touch and drag the Status bar down to the bottom of the screen, then select  (**Choose input method**) → **Set up input methods**.

2. Tap  (adjacent to the **Google voice typing** field).
3. Select a language by tapping **Choose input languages** area.
4. Remove the check mark from the **Automatic** field. This allows you to select additional languages.
5. Select the desired languages.
6. Activate **Block offensive words** to block recognition of known offensive words or language. (A green check mark indicates the feature is active).
7. Tap **Download offline speech recognition** to enable speech recognition via locally stored files so that even if you are not connected to a network you can still use the service.

Section 6: Contacts

This section explains how to use and manage your Contacts List. You can save phone numbers to your phone's memory.

Accounts

From the Accounts menu you decide if you want applications to synchronize, send, and receive data at any given time, or if you want the applications to synchronize automatically. After determining how you want the accounts to synchronize, indicate which account to synchronize with your Contacts list.

1. Sign in to your Google account.
2. Press  →  and then tap **Settings** and then navigate to the **Accounts** area.
– or –

From the Home screen, tap  (**Apps**) →  (**Settings**) and then navigate to the **Accounts** area.

Note: The Accounts area lists those accounts that have been added to the device and provides an **Add account** button to quickly and easily add new ones.

Contacts List

Creating a Contact

The default storage location for saving phone numbers to your Contacts List is your device's built-in memory.

If existing Google and Corporate email accounts have been synchronized to your phone, these will be made available to your device during the creation of new entries. These new Contacts entries can be assigned or saved to synced accounts such as Phone, SIM, Google, or Corporate.

Your device automatically sorts the Contacts entries alphabetically. You can create either a **Phone, SIM, Google, Microsoft Exchange ActiveSync**, or **Samsung account** contact.

Note: Before you can save a contact to the Phone, Contact settings must be set to **Save new contacts to Phone**.

Important! The Google and Microsoft Exchange ActiveSync account types are only visible after creating an email account of those types on your phone.

- **Phone** contacts are stored locally on the device.

Note: If the phone is ever reset to its factory default parameters, contacts stored on the phone can be lost.

- **SIM** contacts are stored within the micro SIM Card.

Note: SIM contacts only store the Name and Phone number for an entry.

- **Google** contacts are shared with your existing Google account and can also be imported to your phone after you have created a Google Mail account.
- **Samsung Account** contacts are shared with your existing Samsung account.
- **Microsoft Exchange ActiveSync** (also known as Work or Outlook) contacts are those contacts that are intended to be shared with either an Exchange Server or from within Microsoft® Outlook®.
- **Add new account** lets you create a new account type. Choose from Samsung account, Microsoft Exchange ActiveSync, or Google.

Note: When storing an entry into your micro SIM card, note that only the Name, and Number are saved. To save additional information for a particular contact, such as notes, email, dates, etc., it is important to save that Contact into your phone's onboard memory.

1. From the Home screen, tap  (**Contacts**).
2. Tap  to create a contact.

Note: You can also add a new contact by entering a number from the keypad and pressing  and then tap **Add to Contacts** → **Create contact**. Continue with step 3.

3. Tap a destination type (**Phone**, **SIM**, **Google**, **Microsoft Exchange ActiveSync**, or **Samsung Account**) (depending on where you want to save the new contact information).
4. Tap the **Name** field and enter a name for this contact using the displayed keypad.
 - Tap  to access additional name entries such as: Name prefix, First name, Middle name, Last name, and Name suffix.

5. Tap the image icon and select a photo for this contact.
Selections are: **Image**, **Take picture**, or **S Note**.

Note: The label entries below can change and are dependant on the selected destination type (ex: the Other and Custom might not appear with an Exchange ActiveSync account destination type).

6. Tap the label button (to the left of the **Phone** field) and scroll through the list to select a category such as **Mobile**, **Work**, **Home**, **Main**, **Work Fax**, **Home Fax**, **Pager**, **Car**, **Company Main**, **MMS**, **Radio**, **Assistant**, **Other**, **Callback**, or **Custom**.
7. Tap a phone number field and enter a phone number.
 - Tap  on the QWERTY keyboard to remove a previously entered phone number.
 - Tap  to enter an additional phone number
 - Tap  to remove a previously entered phone number.

8. Enter additional information such as: **Email**, **Address**, **Events**, **Groups**, **Ringtone**, **Vibration pattern** or tap **Add another field** to input additional category information.

- **Add another field** contains the following options: Phonetic name, Organization, IM, Notes, Nickname, Website, Internet call, or Relationship.
- Use your finger to slide the page up or down to see additional fields and categories.

9. Tap **Save** to complete and store the new entry.
– or –
Tap **Cancel** to delete the current entry.

To save a Number from your Keypad:

1. From the Home screen, tap  (**Phone**).
2. Enter a phone number using the on-screen dialpad.
3. Tap **Add to Contacts** → **Create contact** or select the Contact entry from the on-screen list.

– or –

Press  and then tap **Add to Contacts** → **Create contact** or select the Contact entry from the on-screen list.

- If you're updating an existing contact, tap the entry from the list and proceed to step 5.
4. Tap a destination type (**Phone**, **SIM**, **Google**, **Microsoft Exchange ActiveSync**, or **Samsung Account**) (depending on where you want to save the new contact information).
 5. Tap the **Name** field and enter a name for this contact using the displayed keypad.
 - Tap  to access additional name entries such as: Name prefix, First name, Middle name, Last name, and Name suffix.
 6. Tap the image icon and select a photo for this contact. Selections are: **Image**, **Take picture**, or **S Note**.
-

Note: The label entries below can change and are dependant on the selected destination type (ex: the Other and Custom might not appear with an Exchange ActiveSync account destination type).

7. Tap the label button (to the left of the **Phone** field) and scroll through the list to select a category such as **Mobile**, **Work**, **Home**, **Main**, **Work Fax**, **Home Fax**, **Pager**, **Car**, **Company Main**, **MMS**, **Radio**, **Assistant**, **Other**, **Callback**, or **Custom**.
 8. Enter additional fields as desired.
 9. Tap **Save** to complete and store the new entry.
– or –
Tap **Cancel** to delete the current entry.
-

Note: For further details about how to enter characters, see “*Text Input Methods*” on page 104.

Finding a Contact

You can store phone numbers and their corresponding names onto either your SIM card, your phone's built-in memory, or an external location (such as Google, Exchange, or T-Mobile Backup). They are all physically separate but are used as a single entity, called Contacts.


Depending on the storage size of the particular SIM card, the maximum number of phone numbers the card can store may differ.

1. From the Home screen, tap  (**Contacts**).
2. Swipe up or down until you see the contact displayed.
– or –

Tap the **Search** field and begin entering the entry's name. Matching entries are then displayed. This process filters through all of your current account Contact entries to only show you the matching entries.


– or –

In a single motion, touch and hold the letter tab area (on the right) until on-screen letters appear, then scroll through the list. You are then taken to that section of the Contacts list. Touch the contact entry.

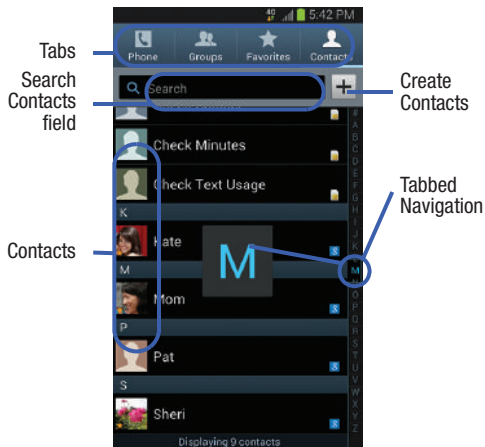

Editing Contact Information


1. From the Home screen, tap .
2. Tap a contact name from the list and tap  (Edit).
– or –
Press  and tap **Edit**.
– or –
Touch and hold a Contacts entry from the main Contacts list and then tap **Edit**.

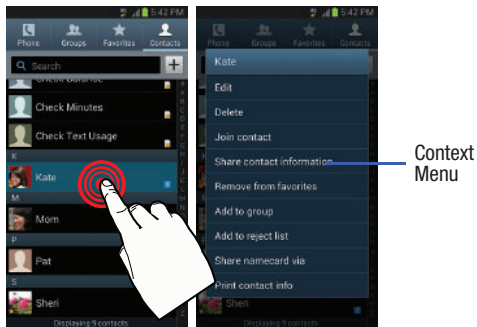

3. Edit the contact information then:
 - Tap **Save** to complete and store the new entry or
 - Tap **Cancel** to delete the current entry.

Adding a Number to an Existing Contact

1. From the Home screen, tap .
2. Touch and hold an entry and select **Edit** to reveal the Contact entry's details screen.
3. Tap a phone number field and enter a phone number.
 - Tap  on the QWERTY keyboard to remove a previously entered phone number.
 - Tap  to enter an additional phone number
 - Tap  to remove a previously entered phone number.

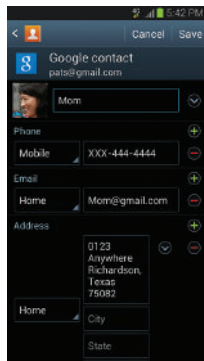

Contact Details Screen

4. Enter additional information such as: **Email, Address, Events, Groups, Ringtone, Vibration pattern** or tap **Add another field** to input additional category information.
 - **Add another field** contains the following options: Phonetic name, Organization, IM, Notes, Nickname, Website, Internet call, or Relationship.
 - Use your finger to slide the page up or down to see additional fields and categories.
5. Tap **Save** to complete and store the new entry.
 - or –
 - Tap **Cancel** to delete the current entry.

Adding a Pause or Wait to an Existing Contact

1. From the Home screen, tap  and use the on-screen keypad to enter a new phone number.
2. Press  and then tap **Add 2-sec pause**. This feature adds an automatic two-second pause.
 - or –
 - Press  and then tap **Add wait**. This feature causes the phone to require your acceptance before sending the next set of entered digits.
3. Tap **Add to Contacts → Update existing**.

4. Scroll through the available list of existing entries and select the desired target.

Note: This new phone number is then added as a new number to the selected entry.

5. Tap the label button (to the left of the new phone number) and scroll through the list to select a category type.
6. Tap **Save** to store and update the entry.

Deleting Contacts

Important! Once Contacts list entries are deleted, they cannot be recovered.

1. From the Home screen, tap .
2. Touch and hold a contact name from the list and select **Delete → OK**.

Contact List Options

1. From the Home screen, tap .

2. Press . The following options display:

- **Delete:** allows you to delete 1 or more of your contacts.
- **Import/Export:** imports or exports contacts to or from the USB storage location, SIM card or SD card, you can also send namecards via methods such as Bluetooth, ChatON, Dropbox, Email, Gmail, Messaging, or Wi-Fi Direct.
- **Merge with Samsung account:** allows you to merge all of your current Contact entries with your active Samsung account. If several of your contacts are from other external sources, this allows you to “back them up” or copy them to your Samsung account. Tap **OK** to continue or **Cancel** to exit.
- **Merge with Google:** allows you to merge all of your current Contact entries with your active Google/Gmail account. If several of your contacts are from other sources such as Corporate email, Internet email, Facebook, etc., this allows you to “back them up” or copy them to your Gmail account. Tap **OK** to continue or **Cancel** to exit.
- **Accounts:** allows you to add and manage mobile accounts on Samsung account, ChatON, Dropbox, Email, Facebook, Google, LDAP, or Microsoft Exchange ActiveSync. This option also allows you to manually synchronize all of your current contacts with their respective accounts.
- **Speed dial setting:** allows you to set up speed-dialing.
- **Send email:** allows you to send an email using your Google account.
- **Send message:** allows you to send a text or picture message.
- **Contacts to display:** allows you to choose All contacts, Phone, display contacts stored to your SIM card, Gmail, or only display contacts that are part of a customized list.
- **Settings:** allows you to configure where you save new contacts to, or view your service numbers, or send contact information. Options include: Only contacts with phones, List by, Display contacts by, Service numbers, and Contact sharing settings.

Contact Menu Options

1. From the Home screen, tap .
2. Touch and hold an entry to reveal the context menu.

The following options display:

- **Edit:** allows you to edit the currently selected Contacts entry.
- **Delete:** allows you to delete the currently selected Contacts entry.
- **Join contact:** allows you to link the current contact to another current contact. Similar to a “see also” feature. If you can’t remember a contact’s information, linking entries can help you find the person you are looking for.
- **Share contact information:** allows you to send the current entry info via text message.
- **Add to Favorites:** allows you to copy the current Contacts entry to the list within the Favorites tab.
- **Remove from favorites:** allows you to remove the current Contacts entry from the Favorites tab.
- **Add to group:** allows you to add the current Contacts entry to an existing group.


- **Add to reject list/ Remove from reject list:** allows you to add or remove the current Contacts entry to a list of automatically rejected incoming phone numbers.

Note: If an entry does not have a phone number, the reject list option will not appear.

- **Share namecard via:** allows you to send the current Contact entry’s information to an external recipient via either **Bluetooth**, **ChatON**, **Dropbox**, **Email** (Exchange or Internet), **Gmail**, **Messaging**, or **Wi-Fi Direct**.
- **Print contact info:** allows you to print selected information on a compatible Samsung printer.

Contact Entry Options

1. From the Home screen, tap .
2. Tap an entry to reveal the **Contact entry's Overview Screen**. This screen contains Name, contact numbers, email, and linked contact information.
3. Press  to reveal the context menu specific to this entry.
4. Tap an available option.

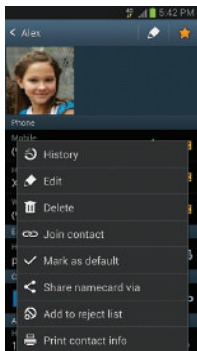

Contact Overview Screen

Joining Contact Information

Most people now maintain multiple email accounts, social networking logins, and other similar account information. For example, a Facebook account login name might differ from a corporate email account login because they are maintained separately and for different groups of people.

This device can synchronize with multiple accounts. When you synchronize your phone with those accounts, each account creates a separate contact entry in the Contacts list.

If one of your contacts (Amy Smith) has a regular email account that you maintain in Gmail, but also has a Facebook account under her maiden and married name, as well as a Video! chat account, when you merge those accounts into your Contacts list you can join all of her entries and view the information in one record.

Joining contact information makes sending messages easy. You can select any account email address or information all from one screen, versus searching multiple, individual screens to locate the desired account information.

Next time you synchronize your phone with your accounts, any updates contacts make to email account names, email addresses, etc. automatically update in your contacts list.

1. From the Home screen, tap .
2. Tap a contact name (the name you want to link to another entry) to reveal the **Contact entry's Overview Screen**.

Note: Typically this is the same contact with a different name or account information.

3. Press  and then tap **Join contact**.
4. Tap the second contact entry (the entry in which to link). The second contact is now linked with the first and the account information is merged into one screen.

Note: The information is still maintained in both entries, but displays in one record for easier viewing when you link the contacts.

Important! It is the first contact image that is displayed for both, and the first contact's name that is used. For example: If Amy (original entry) is joined with Julie (second entry). Julie seems to disappear and only Amy remains. Tap the Amy entry (showing the Amy image) to view both.

5. Tap the main linked contact to view the contact information you linked. The contacts and information displays with an icon next to the contact name to indicate what type of account information is contained in the entry.

Unjoining a Contact

1. From the Home screen, tap .
2. Tap a contact name (the account name from which you want to unjoin an entry). This reveals the details for entry.

Note: Typically this is the same contact with a different name or account information.

3. Tap the **Connection** area.
– or –
Press  and then tap **Separate contact**.
4. Tap  next to the entry you want to unjoin and select **OK**. The contacts are “unjoined” or separated and no longer display in the merged record screen. Both contacts now go back to being separately displayed.

Marking a Contact as Default

When you use applications such as the Voice Dialer or other messaging type applications, the application needs to know which information is primary (default) in a contact entry list. For example, when you say “Call John Smith”, if you have three phone records for John Smith, the Voice dialer is looking for the “default” number or entry.

The **Mark as default** option marks one entry in a contact record to use as the default. This comes in handy when you have multiple entries for the same person.

1. From the Home screen, tap .
2. Tap a Contact entry.
3. Press  and then tap **Mark as default**. The Mark as default screen displays radio buttons next to the contact name, phone number, or other contact information.
4. Tap the radio button next to the entry information you want to be the primary information (such as name, phone number, or email) and select **Done**.

Note: If there are multiple phone numbers assigned to an entry, assigning one as the default will automatically dial that number when the contact is selected for dialing.

Sending a Namecard

A Namecard contains contact information, and can be sent to recipients as a Virtual Business Card (V-card) attachment using Bluetooth, Google Mail, or as a message.

1. From the Home screen, tap .
2. Tap a Contact entry.
3. Press  and then tap **Share namecard via** and select a delivery method: **Bluetooth**, **ChatON**, **Dropbox**, **Email** (Exchange or Internet), **Gmail**, **Messaging**, or **Wi-Fi Direct**.

The Namecard attaches to the selected message type and is delivered when you send the message.

Note: Email appears as an option only after an Internet or Exchange email account has been created.

Sending All Current Namecards

Rather than selecting once Contact entry at a time, you can send all of your current entries at once.

1. From the Home screen, tap .
2. Press  and then tap **Import/Export** → **Share namecard via**.
3. Tap **Select all** to place a check mark alongside all currently displayed Contact entries.
4. Tap **Done** and select a delivery method:
 - **Bluetooth** to transmit the contacts to another bluetooth-compatible device.
 - **ChatON** to send the contacts to selected buddies.
 - **Dropbox** to upload the entries to your remote Dropbox web storage location.

Note: The Web storage Upload feature requires that you are logged into your Samsung account prior to upload.

- **Email** to attach the contact cards to a new outgoing email (Exchange or Internet).
- **Gmail** to attach the contact cards to a new outgoing Internet-based email.

- **Messaging** to attach the contact cards to a new outgoing text message.
- **Wi-Fi Direct** to transmit the entries to another Wi-Fi Direct enabled device.

Sending a namecard using Bluetooth

You must create a Contact prior to sending a namecard to a recipient. For more information, refer to “*Creating a Contact*” on page 119.

1. From the Home screen, tap .
2. Touch and hold the entry to reveal the on-screen context menu.
3. Tap **Share namecard via → Bluetooth**.

Important! You must activate Bluetooth to use this feature.

4. Tap the Bluetooth device in which to send this name card. Bluetooth forwards the namecard to the recipient.

Copying Contact Information

Copying Contact Information to the SIM Card

The default storage location for saving phone numbers to your Contacts list is your phone’s built-in memory. This procedure allows you to copy numbers saved to the phone’s memory, onto the SIM card.

1. From the Home screen, tap .
2. From the Contacts List, press  and then tap **Import/Export → Export to SIM card**.
3. Tap **Select all** to choose all current phone contact entries.

– or –

Select a specific entry by touching an entry. A check mark indicates a selection.

4. Tap **Done**. The name and phone number for the selected contact is then copied to the SIM.

Copying Contact Information to the microSD Card

This procedure allows you to copy entry information saved on the phone's memory, onto the SIM card.

Note: These must be contacts stored on the phone. External entries (Google, Exchange, etc...) can not be transferred in this manner.

1. From the Home screen, tap .
2. From the Contacts List, press  and then tap **Import/Export → Export to SD card**.
3. Tap **OK** to choose all current phone contact entries.

Synchronizing Contacts

Syncing data from your managed accounts allows you to add and manage a new or existing contact from your online or remote accounts to your phone. Prior to syncing, you must first have an active Google or Microsoft Exchange account with current Contact entries, and be signed into your account via the phone.

With syncing, any Contacts entries (with phone numbers, email addresses, pictures, etc.) are updated and synced with your device.

1. Press  →  and then tap **Settings** and then navigate to the **Accounts** area.
2. Select the email account containing the contacts you wish to synchronize.
3. Tap  within the adjacent account field to reveal the account's synchronization settings screen.
4. To synchronize only Contacts, toggle the active state of the **Sync Contacts** field. A green checkmark indicates the feature is enabled.

Note: The process of updating your Contacts tab can take several minutes. If after 10-20 minutes, your list has not been updated, repeat step 2-3.

5. Your **Contacts** tab then reflects any updated Contact information.

Note: Syncing of contacts requires you are logged into your Gmail and Corporate accounts via the device.

Display Options

The Display options menu allows you to allows you to choose which contacts to display. You can also choose to display only contacts that have phone numbers.

Note: Once a display filter has been selected, only those Contact entries are shown until the **All contacts** option is re-selected.

1. From the Home screen, tap .

2. Press  and then tap **Contacts to display**. Select any of the following to filter according to the selection:
 - **All contacts** allows you to display all available Contacts.
 - **Phone** lists those Contacts currently found only on your Phone.
 - **SIM** lists those Contacts currently found only on your SIM card.
 - **Google** lists those Contacts currently found within the Google account.
 - **Samsung account** lists those Contacts currently found and sync'd within the Samsung account.
 - **Microsoft Exchange ActiveSync** lists those Contacts currently found within the Exchange account.
 - **Customized list** allows you to enable which account categories are displayed. For example, on Google contacts, you can filter which Contact categories are shown (Friends, Family, etc..)

Adding more Contacts via Accounts and Sync

When you synchronize applications such as Facebook, Twitter, a corporate email account, or Google, using the Accounts and sync option synchronizes the data from the selected account type with your Contacts list.

1. Press  →  and then tap **Settings** and then navigate to the **Accounts** area.
2. Tap **Add account**.
3. Determine which type of account information you want to synchronize with your Contact list. Selections are: **Samsung account, ChatON, Dropbox, Email, Facebook, Google, LDAP, or Microsoft Exchange ActiveSync**.
4. Tap an account type to add.
5. Follow the prompts. The selected account type synchronizes with your Contacts list.
6. After synchronizing accounts you may want to link contact information. For more information, refer to “*Joining Contact Information*” on page 128.

To add Facebook content to your Contacts list:

You can now add your Facebook contact information, such as pictures, email, and phone numbers directly to your Contacts list. All of their current contact information is then migrated over to your device. If a Contacts entry already exists with a slightly different name, separate entries are created and can later be linked (joined) together into a single entry.

Important! This process not only synchronizes your contact information but also your status, events, and more.

1. Press  →  and then tap **Settings** and then navigate to the **Accounts** area.
2. Tap **Add account** → **Facebook**.
3. You are prompted to download the Facebook application from the Play Store.
 - Tap **Install** → **Accept & download** to complete the process.
 - Tap **Open** to launch the application.
4. Log into your Facebook account:
 - Enter your account's access **Email** and **Password** information and tap **Log in**.

5. If prompted, configure any requested optional permissions and tap **Log in**.
6. Tap those contact settings you wish to synchronize (all are enabled by default). A green check mark indicates the feature is enabled.
 - Choose from: **Sync interval settings**, **Sync Calendar**, or **Sync Gallery**.
7. Tap **Done** to complete the login and sync process.
8. If prompted, select a Contacts Sync option. Choose from: Sync all, Sync with existing contacts, or Don't sync. Tap **Done** to complete the process.
9. Return to the Accounts and sync screen and resync this new Social Network account.

To resync Social Network Contacts:

1. Press  →  and then tap **Settings** and then navigate to the **Accounts** area.
2. Tap **Facebook** →  within the adjacent SNS account field to reveal the account's synchronization settings screen.
3. Choose the parameters to sync (ex: Sync Calendar, Sync Contacts, or Sync Gallery) and tap **Sync now**.

Note: From the Facebook sync page you can also tap **Sync all** to resync all parameters.

Additional Contact Options

Sending an Email to a Contact

Note: Contacts must contain an email account and address before you can use the Send email feature.

1. From the Home screen, tap .
2. Press  and then tap **Send email**. Contacts that contain an email address display.
3. Tap the contact(s) to which you want to send an email. A check mark displays next to the selection.

Note: The select contact must have an email as part of their details screen.

4. Tap **Done**.
5. Select an email account type.
6. Compose the email and tap **Send**.

Export/Import

For more information, refer to “*Copying Contact Information*” on page 132.

Contact List Settings

From this menu you can determine the default storage location for Contacts, display your device's primary number, and view service numbers listed in your Contact list.

1. From the Home screen, tap .
2. Press  and then tap **Settings**. Configure any of the following options:
 - **Only contacts with phones** allows you to display only those contacts containing phone numbers.
 - **List by** defines how the current list of Contacts are sorted: **First name** or **Last name**.
 - **Display contacts by** defines how the current list of Contacts are listed: **First name** (ex: Steve Smith) or **Last name first** (Smith, Steve).
 - **Service numbers** lists the currently available service numbers.
 - **Contact sharing settings** allows you configure how your Contacts entries are sent: individually or as a single file containing all available entries.
Tap **Settings** to select a share setting.

- **Send all namecards** allows you to set your Contact sharing option to all so that your entire Contacts entries are sent as a group and not as multiple single files. If all your entries are selected only a single file is sent.

Note: Your destination device must support this feature or no entries will be received by the external device.

- **Send individual namecards** allows you to set your default to send individual contacts one at a time. Even if you select all your entries, each is sent individually.

Groups

This feature allows you to add a new or existing contact to a call group. This group can be one of the already present groups (Family, Friends, or Work) or a user-created group.

Creating a New Caller Group

1. From the Home screen, tap  →  (Groups tab).
2. Press  and then tap **Create**.
3. Tap the **Group name** field and use the on-screen keypad to enter a new group name. For more information, refer to “*Text Input Methods*” on page 104.
4. Tap **Group ringtone** and select a ringtone for the group. Selections are: **Default**, **Ringtones**, or **Go to My files**.
5. Tap **Vibration pattern** and select a unique vibration pattern to be associated with this group.
6. Tap **Save** to store the newly created group.

Note: Some externally maintained group types (such as Google) can only be managed or updated remotely online vs via the device. These external types will not allow editing or deleting members locally via the phone.

Adding an Existing Entry to a Current Caller Group

1. From the Home screen, tap  → .
2. Tap a group entry →  (**Add group member**).
3. From the available list of contacts, tap the contact(s) you want to add. A check mark displays next to contact entry.
4. Tap **Done**. The selected contacts are added to the group.

Removing an Entry From a Caller Group

1. From the Home screen, tap  → .
2. Tap a group entry.
3. Press  and then tap **Remove member**.
4. Tap all of the contacts you want to remove from this group. A checkmark displays next to contact entry.
5. Tap **Done**. The contacts are removed from the group.

Editing a Caller Group

To edit a Group entry, there must be at least one member as part of the selected group.

1. From the Home screen, tap  → .
2. Touch and hold a group entry then select **Edit group**.
3. Make modifications to the **Group name**, **Group ringtone**, **Vibration pattern** fields, or **Add member**. For more information, refer to “*Creating a New Caller Group*” on page 138.
4. Tap **Save**.

Deleting a Caller Group

1. From the Home screen, tap  → .
2. Press  and then tap **Delete groups**.
3. Select either **Select all** or tap the desired group.
4. Tap **Delete**.
5. Select either the **Group only** or **Group and group members**.
6. Tap **OK**.

Sending a Message to a Group

1. From the Home screen, tap  →  .
2. Tap an existing group, and press  and then tap **Send message**.
– or –
Touch and hold a group entry and select **Send message**.
3. Select the recipients of the new message (indicated by a green checkmark). If an entry contains multiple phone numbers, each must be selected individually.
4. Tap **Done**.
5. Type your message, and tap  (**Send**).

The Favorites Tab

The Favorites tab is a list of the phone numbers that have been designated as favorite contacts. For more information, refer to “*Logs Tab*” on page 100.

1. From the Home screen, tap .
2. Tap  (**Favorites** tab).

Adding a contact to your favorites list:

1. From within the Favorites tab, press  and select **Add to Favorites**.
2. Place a check mark alongside those current Contacts entries you wish to assign as favorites.
3. Tap **Done** to complete the process.

Section 7: Messages

This section describes how to send or receive different types of messages. It also explains the features and functionality associated with messaging.

Types of Messages

Your phone provides the following message types:

- Text Messages
- Multimedia (Picture, Video, and Audio) Messages
- Email and Gmail Messages
- Google Talk
- Google+
- Messenger
- ChatON

The Short Message Service (SMS) lets you send and receive text messages to and from other mobile phones or email addresses. To use this feature, you may need to subscribe to your service provider's message service.

The Multimedia Messaging Service (MMS) lets you send and receive multimedia messages (such as picture, video, and audio messages) to and from other mobile phones or email addresses. To use this feature, you may need to subscribe to your service provider's multimedia message service.

Important! During the creation of a text message, adding an image, sound file, or video clip automatically changes it from a text message (SMS) to a multimedia message (MMS).

Message Icons on the Status Bar

Messaging icons are displayed on the Status Bar at the top of the display when new messages are received. For more information, refer to “*Status Bar*” on page 33.

Note: The Messaging application can also be accessed by pressing  and then tapping  (Apps) >  (Messaging).

Creating and Sending Messages

1. From the Home screen, tap  (Messaging) →  (Compose).
2. Tap the **Enter recipient** field to manually enter a recipient.
– or –
Tap  to select from one of the following:
 - **Groups:** to select a recipient from the Group list.
 - **Favorites:** to select a recipient from the Favorites list.
 - **Contacts:** to select a recipient from your Contacts list (valid entries must have a wireless phone number or email address).
 - **Logs:** to select a recipient from a list of recently sent messages.
3. If adding a recipient from either Logs, Contacts, or Group, tap the contact to place a checkmark then tap **Done**. The contact displays in the recipient field.


Note: Delete any unnecessary members by tapping their name/number in the recipient area and selecting **Delete**.

4. Add more recipients by tapping either the **Enter recipient** field or  and selecting recipients.
5. Tap the **Enter message** field and use the on-screen keypad to enter a message. For more information, refer to “Text Input Methods” on page 104.
6. Review your message and tap  (**Send**).
7. If you have more than one recipient, the same text message is sent to all recipients in the Enter Recipients field.

Note: If you exit a message before you send it, it will be automatically saved as a draft.

Quick Messaging a Number from the Contacts List

1. From the Home screen, tap  (Contacts).
2. Locate an entry from the Contacts list.
3. In a single motion, touch and drag your finger over the number by going to the left. This action addresses a new text message to the selected recipient.

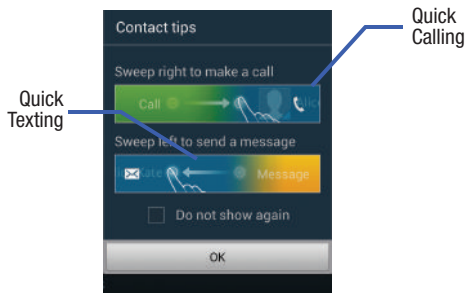

Message Options

Options before composing a message

1. From the Home screen, tap  (Messaging).
2. Before composing a message, press  from the main Messaging screen to display additional messaging options:
 - **Search:** allows you to search through all of your messages for a certain word or string of words. Use the on-screen keypad to enter a word or phrase in which to search, then tap . For more information, refer to *"Message Search"* on page 149.
 - **Delete threads:** allows you to delete any message thread. Select the messages to delete and a green checkmark will appear next to the message. Tap Delete. For more information, refer to *"Deleting a single message thread"* on page 148.
 - **Draft messages:** displays the draft messages folder and its contents.
 - **Scheduled messages:** displays the scheduled messages folder and its contents.

- **Locked messages:** displays the locked messages folder and its contents.
 - **Spam messages:** displays the spam messages folder and its contents.
 - **Text templates:** displays your available text message reply templates. For more information, refer to “*Text Templates*” on page 154.
 - **Settings:** allows you to access Messaging settings. For more information, refer to “*Messaging Settings*” on page 149.
3. Touch and hold an on-screen message and select an option:
- **Add to Contacts:** allows you to add the sender to either a new or existing Contacts entry.
 - **View contact:** allows you to view the current entry information for the sender.
 - **Delete thread:** deletes the entire message and its bubbles. For more information, refer to “*Deleting Messages*” on page 148.
 - **Register number as spam:** allows you to tag a number as spam so that these messages can be directly delivered to your spam folder.

Options while composing a message

1. From the Home screen, tap  (Messaging).
2. From within an open message, press  to display additional messaging options:
 - **Call:** places an outgoing call to the sender.
 - **Insert smiley:** allows you to add insert smiley icons images (emoticons).
 - **Preview** (only in MMS): allows you to add preview the MMS message prior to delivery.
 - **Add text:** allows you to add text items from sources such as: S Memo, Calendar, Location, Contacts, and Text templates.
 - **Add to Contacts:** allows you to add the sender to either a new or existing Contacts entry.
 - **View contact:** reveals the current Contact's overview screen.
 - **Add slide:** converts an SMS message into an MMS (Multimedia) message and allows you to attach an existing slideshow.
 - **Remove slide:** allows you to remove a previously attached slideshow.
 - **Add subject:** allows you to enter a subject.

- **Add recipients:** allows you to enter additional recipients to the message.
- **Scheduled Message:** allows you to assign the current message for scheduled delivery at a designated time.
- **Duration (5 sec)** (only in MMS): allows you to change the duration of the image slideshow.
- **Layout (bottom)** (only in MMS): allows you to change the layout.
- **Delete messages:** allows you to erase either select specific message bubbles or all current messages bubbles.
- **Register number as spam:** allows you to tag a number as spam so that these messages can be directly delivered to your spam folder.
- **Discard:** closes the current open message.

Adding attachments to a message

To add an attachment to your message, tap  (Attach) and select one of the following options:

- **Images:** allows you to tap an existing image from your Pictures list to add it to your message.

- **Take picture:** allows you to temporarily exit the message, take a photo with phone's camera, and then add it to your message by tapping **Save**.
- **Video:** allows you to choose an existing video from the Videos list, then add it to your message.
- **Capture video:** allows you to temporarily exit the message, record a video clip using the phone's camera, and then add it to your message by tapping **Save**.
- **Audio:** allows you to choose an existing audio file from the Audio list, then add it to your message by tapping the circle to the right of the audio so that it turns green, then tapping **Done**.
- **Record audio:** allows you to temporarily exit the message and record an audio clip using the phone's microphone. It is then automatically attached to the message.
- **S Note:** allows you to add an S Note that you have created.
- **Calendar:** allows you to add an event from your calendar.
- **Location:** allows you to attach a thumbnail of a map showing your location.
- **Contacts:** allows you to tap on an existing Address Book entry, then add it to your message by tapping **Done**.

Adding Additional Text

You can copy text such as names, phone numbers, and events from your Contacts, Calendar, or a Memo.

1. While composing a message, press  → **Add text**.
2. At the Add text screen, select one of the following:
 - **S Note**: allows you to insert text from an existing S Note.
 - **Calendar**: allows you to add the name, date, and time of a calendar event to your message.
 - **Location**: allows you to add an address and the link to the location on Google Maps.
 - **Contacts**: allows you to add the name and phone number of any of your contacts to your message.
 - **Text templates**: allows you to add pre-defined phrases and sentences. For more information, refer to “*Text Templates*” on page 154.

The information is added to your message.

Viewing Newly Received Messages

When you receive a message, your phone notifies you by displaying  within the Notification area at the top left of your Home screen.

To read a message:

1. Open the Notification Bar and select the message. For more information, refer to “*Notification Screen*” on page 39.

– or –

From the Home screen, tap  then tap the new message to view its contents. The selected message displays on the screen.

2. Tap  to play a multimedia message.
 - To pause playback of the multimedia message, tap .
3. In a single motion, touch and drag up or down the page to scroll through the message (if additional pages were added).


Message Threads

Sent and received text and picture messages are grouped into message threads. Threaded messages allow you to see all the messages exchanged (similar to a chat program) and displays a contact on the screen.

Message threads are listed in the order in which they were received, with the latest message displayed at the top.

To reply to a text message:

1. From the Home screen, tap .
2. While the message is open, tap the **Enter message** field and then type your reply message.

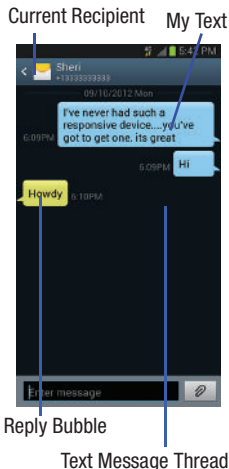

3. Compose your reply.

Your texts are colored Blue and your caller's replies are Yellow.

4. Tap  (**Send**) to deliver your reply.
– or –

Press  and then select one of the available message options (page 143).

To access message thread options:

- From the main Messaging screen, touch and hold the message to display the following options:
 - **View contact:** displays the Contact's Overview page.
 - **Add to contact:** begins the process of adding the new number to your Contacts list.
 - **Delete thread:** deletes the currently selected message thread.
 - **Register Number as Spam:** adds the current sender to a spam list. Any new texts from this sender are automatically blocked.

To access additional Bubble options:

- Touch and hold the message bubble within an active message conversation to display the following options:
 - **Delete message:** deletes the currently selected message bubble from the thread.
 - **Copy message text:** copies the currently selected message bubble from the thread.
 - **Lock/Unlock message:** locks or unlocks the currently selected message bubble from being accidentally deleted.
 - **Forward:** allows you to forward the currently selected message bubble to an external recipient.
 - **Copy to SIM:** copies the currently selected message bubble as a single text message within the SIM card.
 - **View message details:** displays details for the currently selected message bubble.

Deleting Messages

Deleting a single message thread

1. From the Home screen, tap .
2. Touch and hold a message from the Messages list, then select **Delete thread**.
3. At the prompt, tap **OK** to delete or **Cancel** to exit.

Deleting multiple message threads

1. From the Home screen, tap .
2. Press  and then tap **Delete threads**.
3. Tap each message thread you want to delete. A checkmark displays beside each selected message.
4. Tap **Delete**.
5. At the prompt, tap **OK** to delete or **Cancel** to end the process.

Deleting a single message bubble

1. From the Home screen, tap .
2. Open a message to reveal the message string.
3. Touch and hold a message bubble, then select **Delete message**.
4. At the prompt, tap **OK** to delete or **Cancel** to exit.

Deleting multiple message bubbles

1. From the Home screen, tap .
2. Open a message to reveal the message string.
3. Press  and then tap **Delete messages**.
4. Place a check mark on the individual bubbles targeted for deletion or choose **Select all**.
5. Tap **Delete** to erase or **Cancel** to exit.

Message Search

You can search through your messages by using the Message Search feature.

1. From the Home screen, tap .
2. Press  and then tap **Search**.
3. Use the on-screen keypad to enter a word or phrase in which to search, then tap .
4. All messages that contain the entered search string display.

Messaging Settings

To configure the settings for text messages, multimedia messages, Voice mails, and Push messages.

1. From the Home screen, tap .
2. Press  and then tap **Settings**.

The following Messaging settings are available:

Display

- **Bubble style:** allows you to choose from several bubble styles for your messages. Bubbles are the rounded boxes that surround each message.
- **Background style:** allows you to choose from several background styles for your messages.

- **Split view:** when in Landscape mode, allows you to view both the message list and the contents of the currently selected message.
- **Use the volume key:** allows you to change the text size by using the up or down volume keys.

General settings

- **Delete old messages:** deletes old messages when the limit is reached, rather than overwriting them.
- **Text message limit:** allows you to set a limit on how many text messages are allowed in one conversation.
- **Multimedia message limit:** allows you to set a limit on how many multimedia messages are allowed in one conversation.

Text message (SMS) settings

- **Delivery reports:** when this option is activated, the network informs you whether or not your message was delivered.
- **Manage SIM card messages:** allows you to manage the messages stored on the SIM card.
- **Message center:** allows you to enter the number of your message center where your messages reside while the system is attempting to deliver them.

- **Input mode:** allows you to set the input mode for your text messages. Choose from: GSM Alphabet, Unicode, or Automatic.

Multimedia message (MMS) settings

- **Delivery reports:** when this option is activated, the network informs you whether or not your message was delivered.
- **Read reports:** when this option is activated, your phone receives a request for a read reply along with your message to the recipient.
- **Auto-retrieve:** allows the message system to automatically retrieve messages.
- **Roaming auto-retrieve:** allows the message system to automatically retrieve while roaming.
- **Creation mode:** allows you to select the creation mode: Free, Restricted, or Warning.
 - **Restricted:** you can only create and submit messages with content belonging to the Core MM Content Domain.
 - **Warning:** the phone will warn you via pop up messages that you are creating a multimedia message which does not fit the Core MM Content Domain.
 - **Free:** you may add any content to the message.

- **MMS alert:** alerts you when the messaging modes changes from an SMS (text) to MMS (multimedia) mode.

Push message settings

- **Push messages:** allows you to receive push messages from the network.
- **Service loading:** allows you to set the type of service loading notification. Choose from: Always, Prompt, or Never.

Notification settings

- **Notifications:** allows you to see message notifications on your status bar.
- **Select ringtone:** allows you to set the ringtone for your message notifications.
- **Vibrate:** allows you to configure the vibration mode associated with message alerts. Choose from: Always, Only in silent mode, or Never.
- **Message alert repetition:** allows you to set the interval for new message alerts. Choose from: Once, Every 2 minutes, or Every 10 minutes.
- **Preview message:** when enabled, allows you to view a brief preview of new message text on the Status bar.

Emergency alerts settings

- **Emergency alerts:** allows you to configure emergency alert settings. You can enable/disable those alert categories you wish to receive. Choose from: Imminent extreme alert, Imminent severe alert, and AMBER alerts.

Note: The Presidential alerts can not be disabled.

- **Emergency notification preview:** allows you to play a sample emergency alert tone. Tap **Stop** to cancel the playback.

Signature settings

- **Add signature:** when enabled, this feature allows you to create a signature at the end of your outgoing text messages.
- **Signature text:** allows you to enter a desired signature for your message.

Spam message settings

- **Spam settings:** when enabled, allows you to configure available spam settings such as:
- **Register number as spam:** allows you to manually enter and assign a phone number as being sent from a spam source.
- **Register phrase as spam:** allows you to assign a specific text phrase as belonging to a spam message. Ex: Dear friend.

- **Block unknown senders:** when active, automatically blocks incoming messages from unknown sources or blocked numbers.

Emergency Alert Configuration

This device is designed to receive wireless emergency alerts from the Commercial Mobile Alerting System (CMAS); which may also be known as the Personal Localized Alerting Network (PLAN). If your wireless provider has chosen to participate in CMAS/PLAN, alerts are available while in the provider's coverage area. If you travel outside your provider's coverage area, wireless emergency alerts may not be available. For more information, please contact your wireless provider.

Emergency Alerts allows customers to receive geographically-targeted messages. Alert messages are provided by the US Department of Homeland Security and will alert customers of imminent threats to their safety within their area. There is no charge for receiving an Emergency Alert message.

There are three types of Emergency Alerts:

- Alerts issued by the President
- Alerts involving imminent threats to safety of life
- AMBER Alerts (missing child alert)

Customers may choose not to receive Extreme Alerts, Severe Alerts, and AMBER Alerts.

Important! Alerts issued by the President can not be disabled.

To disable Extreme, Severe, and AMBER Alerts:

1. From the Home screen, tap .
2. Press  and then tap **Settings**.
3. Scroll to the bottom and select **Emergency alerts**. All alerts are enabled by default (checkmark showing).
4. Tap on an alert option to disable the alert and remove the checkmark.

Assigning Messages as Spam

You can now assign either a phone number as spam or use a key term or phrase. Any message assigned as spam is automatically placed with your Spam messages folder.

To assign a phone number from Messages list as spam:

1. From the Home screen, tap .
2. Touch and hold a message from a phone number.
3. Select **Register number as spam** and tap **OK**.

To assign a phone number manually as spam:

1. From the Home screen, tap .
2. Press  and then tap **Settings**.
3. Locate and activate the **Spam settings** option.
 - **Spam settings**: when enabled, allows you to configure available spam settings such as:
4. Tap **Register number as spam** →  (**Add new**).
 - **Register number as spam**: allows you to manually enter and assign a phone number as being sent from a spam source.

5. Tap the **Number** field to manually enter phone number.
– or –

Tap  to select from either your existing Logs or Contacts.

Tap **Match criteria** and select a parameter that must match for the spam action to take effect. Choose from: Same as, Starts with (ex: 800 or 888), Ends with, or includes.

6. Tap **Save**.

To register text phrases as spam:

Some incoming messages might not be associated with a phone number but rather an email address. In these cases, the only way to block those messages, would be assign a key used term or phrase to activate the Spam block. Ex: “Dear friend”, “Stock Alert”, or “Act Now”.

1. From the Home screen, tap .
2. Press  and then tap **Settings**.
3. Locate and activate the **Spam settings** option.
4. Tap **Register phrase as spam** →  (**Add new**).
 - **Register phrase as spam**: allows you to assign a specific text phrase as belonging to a spam message. Ex: Dear friend.

5. Enter a term or word into the field.

Note: The term is case sensitive. Ex: “Act Now” is not the same as “act now”.

6. Tap **Save**.

To register unknown numbers as spam:

Some incoming messages might not be associated with either a phone number or email address. These incoming messages contain no information as their info is blocked by the sender.

1. From the Home screen, tap .
2. Press  and then tap **Settings**.
3. Locate and activate the **Spam settings** option.
4. Tap **Block unknown senders**. A green checkmark indicates the feature is active.
 - **Block unknown senders:** when active, automatically blocks incoming messages from unknown sources or blocked numbers.

If an incoming message is designated in coming from an unknown sender, it is automatically assigned as spam and is now located in your Spam folder.

Accessing your Spam Folder

Any message assigned as spam is automatically placed with your Spam messages folder.

1. From the Home screen, tap .
2. Press  and then tap **Spam messages**.

Text Templates

This screen displays your available text message reply templates. This is a readily accessible list of both default and user-defined text snippets that can be used to quickly reply to incoming messages.

1. From the Home screen, tap .
2. From the Messaging list, press  and then tap **Text templates**.
3. Tap a message to immediately insert it into your current message conversation.

To create your own text template:

1. From the Home screen, tap .
2. From the Messaging list, press  and then tap **Text templates**.
3. Tap  (**Create text template**).
4. Enter a new text string and tap **Save**.

Using Email

Email (or Internet Email) enables you to review and create email using several email services. You can also receive text message alerts when you receive an important email. Your phone's Email application lets you access and manage multiple email accounts simultaneously in one convenient location.

There are currently three main types of email accounts on your phone: Gmail, Internet-based email (Gmail, Yahoo, etc..), and Microsoft Exchange (Corporate email or Outlook®).


To send and receive email messages through an ISP (Internet Service Provider) account, or if you wish to use your device to access your corporate email through a VPN (Virtual Private Network), you will first need to set up an IMAP or POP account.

- **IMAP** (Internet Message Access Protocol) - This protocol is frequently used in large networks and commercial settings. IMAP4 is the current standard.
- **POP3** (Post Office Protocol) - This protocol is supported by most ISPs (Internet service providers) and common among consumer applications. POP3 is the current standard.

- **Microsoft Exchange ActiveSync** - This protocol is frequently used with a large corporate email server system and provides access to email, contact, and calendar synchronization.

Creating an Internet Email Account

1. From the Home screen, tap  (**Apps**) →  (**Email**).
2. If you already have other email account setup:
 - Open an existing email account, press  and then tap **Settings** →  (**Add new account**).

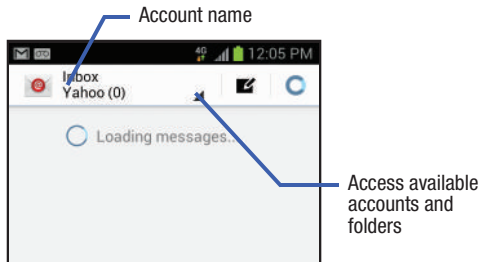

— or —

Enter your **Email address** and **Password** information.
Email address: your Internet email address.

- **Password:** typically your network access password (case-sensitive).
3. Tap **Show password** to display the password as you enter it in the associated field.
 - Tap **Manual setup** to configure your connection settings manually (POP3 or IMAP). Follow the on-screen prompts and enter the information specific to your email provider.
 4. Tap **Next**.
 5. At the Account options screen, select the frequency which the device should check for new email on the server and tap **Next**.
 - Tap the **Notify me when email arrives** field to receive new email notifications.
 - Tap the **Automatically download attachments when connected to Wi-Fi** field to assist with faster access to large email attachments when using Wi-Fi.

6. At the **Set up email** screen, name the account and enter a screen name to identify yourself on this account.
 - The unique account name is used to differentiate this account from other email accounts accessed by your device.
7. Tap **Done** to store the new account.

Messages for this account display on the Inbox tab. You can also view Personal information for this account, Receipts (if you setup the account to return receipts), Travel information, and more (if available).

Opening an Email

1. From the Home screen, tap  →  (**Email**).
2. Tap the account name field (upper-left) to open the complete email account list page.
 - Selecting **Combined view** allows you to view all the emails for your current accounts, managed by the application, to be listed on a single screen.
3. Select an email account and tap an email message.

Refreshing Email messages

1. From the Home screen, tap  →  (Email).
2. Select an email account.
 - If you are already in an email account, tap the account name field (upper-left) to open the complete email account list page.
 - Select an available email account.
3. Tap  (Refresh).

Composing Email

1. From the Home screen, tap  →  (Email).
2. Tap the account name field (upper-right) to open the complete email account list page.
3. Tap **Inbox** →  (**Compose**).
4. Enter the recipient's email address in the **To** field.
 - If you are sending the email message to several recipients, separate the email addresses with a comma. You can add as many message recipients as you want.
5. Press  and then tap **Add Cc/Bcc** to add additional carbon copy recipients.
 - Use the **Cc** field to carbon copy additional recipients.
 - Use the **Bcc** field to blind copy additional recipients.
6. Tap the **Subject** field and enter the email subject.
7. Tap the email text field and compose your email message.
 - To add an attachment (such as image, video, audio, etc.), tap  **Attach** (from the top of the screen) and make a category selection.
 - Tap the file you wish to attach.
 - Tap  to delete the attached file.

Note: If you attach an image to your email, you have the option to resize it prior to delivery. Choose from: Original, Large (70%), Medium (30%), or Small (10%). Once chosen, tap **OK**.

8. Once complete, tap  (**Send**).

Configuring Email Settings

1. From the Home screen, tap  →  (**Email**).
2. Select an account.
3. Press  and then tap **Settings** → **<Account>**.
4. Alter any of the following settings:
 - **Account name:** displays your uniquely created account display name.
 - **Your name:** displays the name used in the From field of your outgoing email messages.
 - **Signature:** Lets you attach a customized signature to the bottom of all outgoing emails.
 - In a single motion touch and slide the **Signature** slider to the right to turn it on .
 - Tap the **Signature** field, change the current text, and tap **Done** to save the new signature.

- **Default account:** Assign this account as the default email account used for outgoing messages.
- **Always Cc/Bcc myself:** allows you to include your own email address in either the CC, Bcc, or None fields. Lets you always receive a copy of outgoing emails.
- **Forward with attachment:** Lets you include attachments when forwarding an email.
- **Recent messages:** adjusts the number of on-screen messages shown in the current category list at any one time.
- **Show images:** allows you to view embedded images located within the body of the currently displayed email.
- **Security options:** allows you to configure email security settings. Choose from: Encrypt all outgoing email, Sign all outgoing email, Create keys, Private keys, Public keys, and Set default key.
- **Sync Email:** enables automatic email synching between your device and the remote server.

- **Auto download attachments:** allows the device to automatically download email attachments when an active Wi-Fi connection is detected. This process speeds up the process of downloading an emails attachments for offline review by not using a 3G or 4G network connection.
- **Size to retrieve emails:** configures the incoming email size allowed to pass through to your phone automatically without user interaction. Emails with attachments larger than configured will have to be retrieved manually.
- **Auto resend times:** enables the device to resend an outgoing email a specified number of times if delivery fails.
- **Sync schedule:** allows you to control the email sync schedule on both Peak and Off-Peak times.
- **Email notifications:** Activates the email notification icon to appear within the Notifications area of the status bar when a new email (Gmail, etc..) is received.
- **Select ringtone:** Plays a selected ringtone when a new email message is received.
- **Vibrate:** Activates a vibration when a new email message is received.

- **Incoming settings:** Lets you specify incoming email settings, such as User name, Password, IMAP server, Security type, Port, and IMAP path prefix.
- **Outgoing settings:** Lets you specify outgoing email settings, such as SMTP server, Security type, Port, Require sign-in, User name, or Password.

Note: Some the above options may not be displayed when using some Internet account types.

Microsoft Exchange Email (Outlook)

Your phone also provides access to your company's Outlook Exchange server. If your company uses either Microsoft Exchange Server 2003 or 2007, you can use this email application to wirelessly synchronize your email, Contacts, and Calendar information directly with your company's Exchange server.

Setting Up a Microsoft Exchange Email account

1. From the Home screen, tap  →  (Email).
2. If you already have other email account setup:
 - Open an existing email account, press  and then tap **Settings** →  (Add new account).– or –

Enter your **Email address** and **Password** information.

Email address: your Outlook work email address.

- **Password:** typically your network access password (case-sensitive).

3. Tap **Send email from this account by default**, to make this your default email account for outbound emails.
4. Tap **Show password** to display the password as you enter it in the associated field.

Note: If selected, the **Manual setup** button changes to read **Microsoft Exchange ActiveSync**. If activated, skip to step 6.

5. Tap **Next**. Consult your Network or IT Administrator for further details and support.

6. Tap **Microsoft Exchange ActiveSync** (from the add new email account screen).

Note: If prompted with an on-screen notification that the connection that the “Setup could not finish”, tap **Edit details** to continue with a manual update of necessary information.

7. When prompted to provide additional detailed information within the Exchange server settings screen, enter an updated **Domain**, and confirm your **user name** and **Password** information.

Important! Remember to manually place the cursor in the correct spot and enter a Domain name before the “[Domain]\[user name]” entry. Most servers only provide a username.

8. Update or re-enter your **Exchange server** information within the appropriate field. This field can often be populated with incorrect or out of date information provided by your server.

- **Exchange Server:** your exchange server remote email address. Typically starts with **mail.XXX.com**. Obtain this information from your company network administrator.

Important! Do not accept the default entry as this is a guess based on returned information.

- If your network requires SSL encryption, tap the **Use secure connection (SSL)** field to place a check mark in the box and activate this additional level. Most often, this option should be enabled.
- If your network requires that you accept SSL certificates, tap the **Accept all SSL certificates** field to place a check mark in the box and activate this additional level. Most often, this option is not required. Confirm this information with your IT Administrator.

Important! If your Exchange server requires this feature, leaving this field unchecked can prevent connection.

9. Consult your IT Administrator if it is necessary to enable the **Use client certification** option.

10. With the new server information entered, tap **Next**.

11. Read the on-screen **Activation** disclaimer and, when prompted, tap **OK**. The device then verifies your incoming server settings.

12. If prompted, read the **Remote security administration** information and tap **OK** to accept the service and continue.

13. Adjust the various on-screen configuration fields and tap **Next**. It may take a few seconds for the next screen to load.

- Enabling the **Automatically download attachments when connected to Wi-Fi** option decreases the wait time to access large email attachments when an available Wi-Fi connection is available.

14. If prompted, read the **Activate device administrator?** screen and tap **Activate** to complete the email setup process.

Note: This process can take a few minutes. If the previous setup screen re-appears, **ignore it and do not alter any fields** during this process.

15. Identify your new work email account with a unique name (Ex: Work), then tap **Done**.

Opening an Exchange Email

1. From the Home screen, tap  →  (Email).
2. Tap the account name field (upper-left) to open the complete email account list page.
3. Select an exchange email account and tap an email message.

Refreshing Exchange Email

1. From the Home screen, tap  →  (Email).
2. Select an email account.
 - If you are already in an email account, tap the account name field (upper-left) to open the complete email account list page.
 - Select an available email account.
3. Tap  (Refresh).

Composing Exchange Email

- For more information, refer to “Composing Email” on page 157.

Deleting an Exchange Email Message

- Touch and hold an email (from your inbox list) and select **Delete** from the on-screen context menu.
– or –

With the email message displayed, tap  (Delete).

Configuring Microsoft Exchange Email Settings

1. Press  →  and then tap **Settings** and then navigate to the **Accounts** area.
2. Tap the Microsoft Exchange account and **Settings** → **<Exchange email account>**.
– or –

From the current Email inbox listing, press  and then tap **Settings** → **<Exchange email account>** and specify the email settings you wish to synchronize:

- **Account name** displays the name used by the device to track the account.

- **Signature:** Lets you attach a customized signature to the bottom of all outgoing emails.
 - In a single motion touch and slide to the right to turn it on .
 - Tap the **Signature** field, change the current text, and tap **Done** to save the new signature.
- **Default account:** Assign this account as the default email account used for outgoing messages.
- **Always Cc/Bcc myself** allows you to include your own email address in either the CC, Bcc, or None fields. Lets you always receive a copy of outgoing emails.
- **Forward with attachment:** Lets you include attachments when forwarding an email.
- **Show images:** allows you to view embedded images located within the body of the currently displayed email.
- **Auto download attachments:** allows the device to automatically download email attachments when an active Wi-Fi connection is detected. This process speeds up the process of downloading an emails attachments for offline review by not using a 3G or 4G network connection.

- **Period to sync Email** to assign the sync range for your incoming and outgoing email messages between your phone and your external exchange server. How many days worth of email messages should the phone and server synchronize. Choose from: **Automatic, All, 1 day, 3 days, 1 week, 2 weeks, or 1 month.**
- **Empty server trash:** allows you to delete your email account's trash bin remotely.
- **Sync schedule** allows you to configure your email sync schedule.
- **Folder sync settings** allows you to configure the sync settings for various folders such as Inbox, Drafts, Outbox, etc..
- **Out of office settings** allows you to both activate/deactivate your email's out of office settings, and configure both the start/end dates and your outgoing message.
- **Size to retrieve emails** configures the incoming email size allowed to pass through to your phone automatically without user interaction. Emails with attachments larger than configured will have to be retrieved manually.

- **Period to sync Calendar** assigns a period for your phone to sync calendar events. Choose from: **2 weeks**, **1 month**, **3 months**, **6 months**, or **All calendar**.
- **Security options:** allows you to enable several security options such as: Encryption, Encryption algorithm, Sign, Sign algorithms, Email certificates, and Security policy list. These security policies could restrict some functions from corporate servers.
 - **Security policy list:** lists the current email's security policy. These policies could restrict some functions from corporate servers.
- **In case of sync conflict** allows you to assign the master source on emails. If there is a conflict with the current email sync you can assign the server as the main source for all emails (**Server has priority**) or assign the phone to be the main source and update the server accordingly (**Device has priority**).
- **Auto resend times** enables the device to resend an outgoing email a specified number of times if delivery fails. The default is set to No limits.

- **Email notifications** enables the phone to display a status bar icon when new email messages have been received.
- **Select ringtone** assigns an audible ringtone when a new or upcoming event is pending.
- **Vibrate** assigns a vibration when a new or upcoming event is pending.
- **Exchange server settings** provides access to the Domain\user name, Password, and Exchange server settings.
- **Sync Email** synchronizes emails between your device and the remote exchange server.
- **Sync Contacts** synchronizes the contacts between your device and the remote exchange server.
- **Sync Calendar** synchronizes your exchange calendar entries between your device and the remote exchange server.
- **Sync Task** synchronizes your exchange tasks entries between your device and the remote exchange server.

3. Press  to return to the previous page.

Using Google Mail

Google Mail (Gmail) is Google's web-based email. When you first setup the phone, Gmail is configured. Depending on the synchronization settings, Gmail is automatically synchronized with your Gmail account.

Signing into Google Mail

1. From the Home screen, tap  →  (Gmail).

Note: You must sign in to your Gmail account in order to access features such as Google Mail and Play Store.

2. Tap **New** if you do not have a Google account.
— or —

Tap **Existing** if you have a Google account.
The Inbox loads conversations and email.

Opening Gmail

1. From the Home screen, tap  →  (Gmail).
2. Tap an existing email message.

Refreshing Gmail Mail

- From within the Gmail message list, tap  (**Refresh**) at the bottom of the screen to refresh the screen, send and receive new emails, and synchronize your email with the Gmail account.

Other Gmail Options

1. From the main Gmail screen, tap  (**Labels**) at the bottom of the screen to set up and manage Labels for your Gmail messages.
2. From the main Gmail screen, tap  (**Search**) at the bottom of the screen to search through your Gmail messages.

Composing a Gmail Message

1. From the Home screen, tap  →  (Gmail).
2. From the Gmail Inbox, tap  (**Compose**) at the bottom of the screen to create a new message.
3. Enter the recipients Email address in the **To** field.

Tip: Separate multiple recipient email addresses with a comma.

4. Press  and select **Add Cc/Bcc** to add a carbon or blind copy.
5. Enter the subject of this message in the **Subject** field.
6. Tap the **Compose email** field and begin composing your message.
7. Once complete tap  (**Send**).

Viewing a Gmail Message

1. From the Gmail Inbox, tap a message to view the following options located at the bottom of the screen:
 - **Archive**  : archives the selected Email.
 - **Delete**  : deletes the currently selected Email.
 - **Labels**  : assigns a label to the current Email.
 - **Mark as Unread**  : tags the current message as unread and returns you to the Google Mail Inbox.
 - **Newer**: swiping to the right displays newer Emails.
 - **Older**: swiping to the left displays older Emails.
2. Press  to select one of the following additional options:
 - **Mark important/Mark not important**: assigns the current email an important or not important status.

- **Mute**: mutes the conversation.
- **Report spam**: reports the Email message as spam.
- **Settings**: allows you to configure the General, or Notification settings.
- **Help**: launches the browser and displays Google Mobile Help information.
- **Send feedback**: sends feedback to Google.

Creating an Additional Gmail Account

1. From the Home screen, tap  →  (**Gmail**).
2. Press  and then tap **Settings** → **ADD ACCOUNT** and follow the same steps as referenced in the previous section. For more information, refer to “*Signing into Google Mail*” on page 165.

Google Talk

Google Talk™ is a free Windows and web-based application for instant messaging offered by Google. Conversation logs are automatically saved to a Chats area in your Gmail account. This allows you to search a chat log and store them in your Gmail accounts.

Note: Before using this application, you must first have an active Gmail account available and be currently logged in.

1. From the Home screen, tap  →  (Talk).

Note: If you are not already logged into Google, refer to the instructions for signing in on page 165.

2. Begin using Google Talk.

Note: The Network confirms your login and processes. This could take up to 5 minutes to complete.

ChatON

Provides a global mobile communication service where you can chat with more than 2 buddies via a group chat. Share things such as pictures, videos, animation messages (Scribbles), audio, Contacts, Calendar entries, and Location information.

Important! The Samsung account manages the access information (username/password) to several applications, such as AllShare Play, ChatON, and Media Hub.

For more information, visit: <https://web.samsungchaton.com>.

Registering with the Service

1. Confirm you have already logged in to your Samsung account.

Note: There should be no  (Samsung account icon) in the Notifications area of the screen.

2. From the Home screen, tap  (Apps) →  (ChatON).
3. Read the on-screen notification about data charges and tap **OK**.
4. Select either the **Terms and conditions** or **Privacy policy** and read the on-screen information. Tap **Accept** to continue.
5. Select a country code, enter your current phone number to register with the service, and tap **Done**.
6. Choose to receive the verification code via either **SMS** (text message) or **Voice** (answering machine call) to your device.

Note: If you opt to receive the verification code via SMS, this information is sent directly to your device. Once received and opened, the **Verification** field is automatically filled in.

7. Enter your real name and tap  (**OK**).

Adding Your First Chat On Buddy

1. From the Home screen, tap  (Apps) →  (ChatON).
2. Tap **Add buddy** and choose a search method.
 - **Address**  : to search by Country code and phone number.
 - **Search by Samsung Account ID**  : to search by using a known samsung account ID.
3. Select a country code if it differs from yours.
4. Enter the information and tap  (**Search**). Once the recipient is matched, their entry appears in the **Results** area.
5. Tap  (**Add buddy**) and confirm your new buddy appears in the Buddies tab.

Note: For more information, press  (Settings) and tap **General → Help**.

Using ChatON for Chatting

1. From the Home screen, tap  (Apps) →  (ChatON).
2. Tap the Buddies tab and select a buddy to initiate your chat.
3. Enter your message using the on-screen text entry method.
4. Tap  (Send).

To reply to a ChatON message:

1. While the chat session is active, tap the **Enter message** field and then type your reply message.
2. Compose your reply.
Your texts are colored Blue and your buddy's messages are white.
3. Tap  (Send) to deliver your reply.

Deleting a single message bubble

1. From the Home screen, tap  (Apps) →  (ChatON).
2. Launch a chat session to reveal the message string.
3. Touch and hold a message bubble, then select **Delete**.

Google +

Google+ makes messaging and sharing with your friends a lot easier. You can set up Circles of friends, visit the Stream to get updates from your Circles, use Messenger for fast messaging with everyone in your Circles, or use Instant Upload to automatically upload videos and photos to your own private album on Google+.

1. Sign on to your Google account. For more information, refer to “*Creating a New Google Account*” on page 19.
2. From the Home screen, tap  (Apps) →  (Google+).
3. Select the account you want to use to sign in to Google+.
– or –
Tap **Add account** to create another account.

4. Follow the on-screen instructions to use Google+.
5. Visit www.google.com/mobile/+/ for more information.

Messenger

Messenger allows you to bring groups of friends together into a simple group conversation. When you get a new conversation in Messenger, Google+ sends an update to your device.

1. Sign on to your Google account. For more information, refer to “*Creating a New Google Account*” on page 19.
2. From the Home screen, tap  (Apps) →  (Messenger).

– or –

From the Google+ application, select **Messenger**.

3. Select the account you want to use to sign in to Google+.
– or –
Tap **Add account** to create another account.
4. When prompted, configure the Sync contacts parameter (Sync contacts or Don't sync) and tap **Continue**.

5. When prompted, configure the Instant Upload parameters as desired and tap **DONE**.
6. Follow any on-screen setup instructions.
7. At the **Messenger** screen, tap  to start a new message.
8. In the upper text field, enter a name, email address, or circle.
9. In the bottom message field, enter a message then tap  (**Send**).

From the **Messenger** screen, tap **Learn more** for more detailed information.

Section 8: Multimedia

This section explains how to use the multimedia features of your device, including the Camera/Camcorder, Music Player, AllShare Play, and how to manage your photos, images and sounds.

You can take photographs and shoot video by using the built-in camera functionality. Your camera produces photos in JPEG format.

Important! Do not take photos of people without their permission.
Do not take photos in places where cameras are not allowed.
Do not take photos in places where you may interfere with another person's privacy.

Note: An SD card is no longer needed to take pictures or shoot video since there is already built-in storage.

Assigning the Default Storage Location

Important! Too many users can overlook this storage location until something goes wrong. It is recommended that you verify this location or change it before initiating the use of the camera or camcorder features.

1. From the Home screen, tap  (Apps) →  (Camera).
 2. From the viewfinder screen, tap  (Settings) and scroll down to the **Storage** entry.
 3. Tap this entry and select the desired default storage location for newly taken pictures or videos. Choose from: **Phone** or **Memory card**.
-

Note: It is recommended that you insert an external microSD card and then set the option to **Memory card**.

4. Press  to return to the Home screen.

Using the Camera

Taking Photos

Taking pictures with your device's built-in camera is as simple as choosing a subject, pointing the camera, then pressing the camera key.

Note: When taking a photo in direct sunlight or in bright conditions, shadows may appear on the photo.


1. From the Home screen, tap  (**Camera**).
2. Using the device's main display screen as a viewfinder, adjust the image by aiming the camera at the subject.

Note: Use either the Up and Down volume keys or spread/pinch the screen to zoom in or out. For more information, refer to *“Navigating Through the Screens”* on page 55.

3. If desired, before taking the photo, use the left area of the screen to access various camera options and settings.
4. You can also tap the screen to move the focus to a desired area of interest.

5. Press  (**Camera**) until the shutter sounds. (The picture is automatically stored within your designated storage location (page 171). If no microSD is installed, all pictures are stored on the Phone.) For more information, refer to *“Camera Options”* on page 173.

Note: Touch and hold  to take a burst shot. These are saved using a Fine image quality.

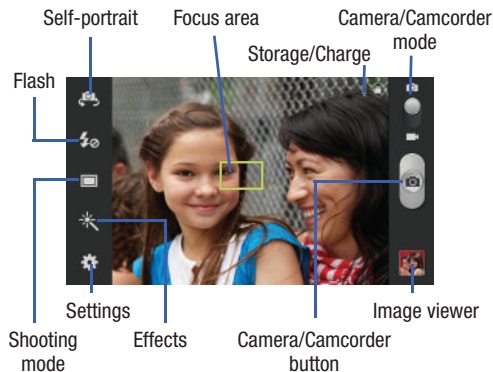

Camera Options

Options are represented by icons across both sides of the screen.

The following shortcuts are available for the camera:



Focus area: displays the area of the image used as the main focus area.

If the image is too close, the square will turn red.



Self portrait: allows you to set the front camera so you can take pictures of yourself.



Flash: allows you to set the flash options to Off, On, or Auto flash.



Shooting mode: allows you to set the shooting mode to one of the following:

- **Single shot:** takes a single photo and view it before returning to the shooting mode.
- **Best photo:** takes a series of photographs simultaneously, then allows you to cycle through the available thumbnails and choose the best photo to keep. Tap **Done** to select the photo.



Shooting mode (continued):

- **Best face:** takes a series of photographs simultaneously, then allows you to cycle through the available thumbnails and choose the best photo showing the subject's best face. Tag subject from the image, tap a desired image, and select **Save** to store the photo.
- **Face detection:** adjusts the camera focus based on face detection technology.
- **Panorama:** takes a landscape photo by taking an initial photo and then adding additional images to itself. The guide box lets you view the area where the second part of the panoramic picture should fall within.
- **Share shot:** uses Wi-Fi Direct to share your pictures quickly with your friends. For more information, refer to “*Enabling Share Shot*” on page 180.
- **HDR:** takes pictures in HDR (High Dynamic Range) mode to increase image detail.



Shooting mode (continued):

- **Buddy photo share:** uses face recognition from pictures in your contacts to send your friends or family pictures of themselves.
- **Beauty:** adjusts the contrast to smooth facial features.
- **Smile shot:** the camera focuses on the face of your subject. Once the camera detects the person's smile, it takes the picture.
- **Low light:** adjusts the aperture and light settings to take better images in low light conditions.



Effects: allows you to change the color tone or apply special effects to the photo. Options include: No effect, Cold vintage, Warm vintage, Posterize, Solarize, Green point, Blue point, Red-yellow point, Washed out, Cartoonify, Black and white, Sepia, and Negative.



Share shot - Share with: tap to display the current participants sharing images with you via an active Wi-Fi Direct Share shot session.



Share shot - Shooting mode: lists the current shooting modes available from with the Share Shot mode.



Settings:

Edit shortcuts: allows you to set shortcut icons for the settings that you use the most.

Burstshot: allows several photographs to be captured in quick succession by touching and holding the Camera button.

Self-portrait: allows you to set the front camera so you can take pictures of yourself or video chat.

Flash: allows you to set the flash options to Off, On, or Auto flash.

Shooting mode: allows you to set the shooting mode. For more information, see Shooting mode description.

Effects: allows you to change the color tone or apply special effects to the photo. Options include: No effect, Cold vintage, Warm vintage, Posterize, Solarize, Green point, Blue point, Red-yellow point, Washed out, Cartoonify, Black and white, Sepia, and Negative.



Settings (continued):

Scene mode: allows you to set the Scene to help take the best pictures possible. Options include None, Portrait, Landscape, Sports, Party/Indoor, Beach/Snow, Sunset, Dawn, Autumn Color, Text, and Candlelight. Helpful tips are shown for each scene mode at the bottom of the display screen.

Exposure value: allows you to adjust the brightness level by moving the slider.

Focus mode: allows you to set this option to Auto focus or Macro. Use Auto focus for all other focal situations.

Timer: allows you to set a timer for how long to wait before taking a picture. Options include: Off, 2 sec, 5 sec, and 10 sec.

Resolution: allows you to set the image size to either: 8M (3264x2448), W6M (3264x1836), 3.2M (2048x1536), W2.4M (2048x1152), W0.9M (1280x720), or 0.3M (640x480).



Settings (continued):

White balance: allows you to set this option to one of the following choices: Auto, Daylight, Cloudy, Incandescent, or Fluorescent.

ISO: ISO determines how sensitive the light meter is on your digital camera. Choose from Auto, 100, 200, 400, or 800. Use a lower ISO number to make your camera less sensitive to light, a higher ISO number to take photos with less light, or Auto to let the camera automatically adjust the ISO for each of your shots.

Metering: allows you to set how the camera measures or meters the light source: Matrix, Center-weighted, or Spot.

Outdoor visibility: activates/deactivates a screen brightness setting that allows you to better view the screen when outdoors.

Auto contrast: provides a clear image even under backlight circumstances where intensity of illumination can vary excessively.

Guidelines: allows you to turn the guidelines On or Off.



Settings (continued):

Auto share shot: allows you to make share shot an automatic action.

Anti-Shake: compensates for camera movement.

GPS tag: allows you to turn GPS On or Off (also known as Geo-tagging). The location of where the picture is taken is attached to the picture.

Shutter sound: allows you to set the Shutter sound to On or Off.

Contextual filename: (requires GPS tagging) allows you to adjust the filename based on contextual information such as your current GPS location.

Take photos using voice: allows you to use your voice to take a new photo vs tapping the Camera button. activate the camera function then uses commands such as “Capture”, “Shoot”, “Smile”, or “Cheese” to take the new photo.

Save as flipped: allows you to automatically save a new images as a mirror image “flipped” of the original.



Settings (continued):

Image quality: allows you to set the image quality to: Superfine, Fine, or Normal.

Storage: allows you to configure the default storage location for images or videos as either Phone or Memory card (if inserted).

Reset: allows you to reset all camera or camcorder settings to the default values.



Image viewer: allows you to access the Image viewer and the various viewing options for a selected picture. The last picture you took, will be displayed as a thumbnail in the Image viewer icon.



Camera button: takes a photo when pressed in Camera mode.



Camera Mode: allows you to take a photo in various modes. Once you change the mode, the corresponding indicator appears at the top left of the display. Slide the button up for Camera, or down for Camcorder.



Storage location/Charge Status: indicates the current storage location (Phone or Memory card) and the charge state of the device.

Pictures and Videos Image Viewer Options

After you take a photo or record a video, you can access various options.

Photo viewing options

1. Tap a thumbnail to view the picture.

Note: If no control icons are displayed on the screen in addition to the picture, tap anywhere on the screen to display them.

Note: It may be necessary to turn the orientation of the device to see the on-screen menu options listed below.

2. The following options are available at the top of the screen:

- **Camera** : allows you to access the camera/camcorder functions.
 - **Share via** : allows you to share the picture via Bluetooth, ChatON, Dropbox, Email, Flipboard, Gmail, Google+, Group Cast, Messaging, Picassa, S Note, or Wi-Fi Direct.
 - **Delete** : allows you to delete the current picture.
3. Press  for additional options such as:
 - **Favorites:** allows you to assign the current image as a favorite.
 - **Slideshow:** allows you to see your photos in a slideshow.
 - **Face tag:** allows you to activate/deactivate face recognition for use with external social media applications.
 - **Tag buddy:** allows you to assign tags to a subject in an image. These tags are selected by the user on the Tag buddy menu that appears once the feature is selected. Choose from: Weather, Location, Person, or Date.

Note: The Tag buddy - Date information is displayed only when other tags are shown.

- **Draw on image:** allows you to add an image file that can be written upon. Tap **Done** to complete the note.
- **Copy to clipboard** allows you to copy one or more pictures to a different folder.
- **Rotate left:** allows you to rotate the view of the current image in a counterclockwise direction.
- **Rotate right:** allows you to rotate the view of the current image in a clockwise direction.
- **Crop:** provides an on-screen box that allows you to crop the current picture. Tap **Save** to update the image with the new dimensions or tap **Discard** to ignore any changes.
- **Advanced edit:** launches the Photo Editor application or Paper Artist. The Photo Editor application can be downloaded from the Play Store. For more information, refer to “*Photo Editor*” on page 194.
- **Set as:** allows you to assign the current image as a Contact photo, Home screen, Lock screen, or Home and lock screens.

- **Buddy photo share:** allows you to share the current image with active ChatON buddies.
- **Print:** allows you to print the current image on a compatible Samsung printer.
- **Rename:** allows you to rename the current file.
- **Scan for nearby devices:** scans for nearby DLNA-compliant devices that can receive or display the current image.
- **Details:** files details such as Title, Time, Width, Height, Orientation, File Size, and Path.
- **Edit weather tag:** allows you to edit or assign a new weather tag that is then saved to the current file.

Video viewing options

Note: If no control icons are displayed on the screen in addition to the picture, tap anywhere on the screen to display them.

1. Tap a video to select it.
2. Tap  to play the video.
3. Press  for additional options.

Sharing Pictures

Pictures are the best way of remembering the moment, but an even better treat is to share them with others.

Two new features allow you to either instantly share a series of pictures as they are taken or quickly share a picture without using email or messaging.

- **Share Shot** is a great way to instantly share a series of pictures among a group of users. The best example for this feature is having multiple users instantly sharing each others pictures at a company or family gathering. As each person takes a separate picture with their own device, they are all pooled together and instantly appear in each user's Gallery.

No more "Email your pictures to me later". Each person walks out of the event with all the pictures taken by everyone.

This method of image transfer requires that both devices have Wi-Fi Direct active and be paired prior to use.

Note: You can only share a shot with other external users who also have their Wi-Fi Direct feature active.

- **S Beam Transfer** uses the NFC (near Field Communication) feature found on your device to transmit large files directly to another compatible device by **direct touch**.

This method of image transfer requires NFC and S Beam to be enabled prior to use.

For more information, refer to *"Using S Beam to Share Pictures"* on page 182.

Enabling Share Shot

Share shot is a Wi-Fi Direct group sharing feature where multiple users can Wi-Fi connect their devices and then all share each others pictures in real-time. This is really useful in group events (ex: family gathering or company party) where you don't want to have to email everyone later and make sure you all can share your pics at a later date.

For more information, refer to “*Wi-Fi Direct Setup and Settings*” on page 295.

The general process is:

- Enable Wi-Fi Direct communication
- Pair your device with other users
- Enable Share shot

To enable Wi-Fi Direct:

1. Press  →  and then tap **Settings**.
2. In a single motion touch and slide the **Wi-Fi** slider to the right to turn it on  **ON**. The slider color indicates the activation status.
3. Tap **Wi-Fi Direct**.

4. Tap **Scan** and select the single device name to begin the connection process to another Wi-Fi Direct compatible device.

– or –

Tap **Multi-connect** → **Scan** and select all the device names to begin the connection process to these Wi-Fi Direct compatible devices.

Note: The target device must also have Wi-Fi Direct service active and running before it can be detected by your device.

5. Tap **Done**. The direct connection is then established. Confirm  appears in the Status bar.
6. When prompted to complete the connection, the recipient should tap **OK**. Your status field now reads “Connected” and your connected device is listed within the Wi-Fi Direct devices listing.
7. Each partner (including yourself) must then tap **Accept** to consent to the new Wi-Fi Direct pairing.

To enable Share shot on Camera:

1. From the Home screen, tap  (**Camera**) →  (**Shooting Mode**) → **Share shot**.
2. If you are prompted to activate your Wi-Fi Direct connection, tap **OK** and follow the activation procedures for Wi-Fi Direct.

To configure your Share Shot options:

1. Confirm the Share Shot viewfinder is active (see below).
2. Confirm the Wi-Fi is actively sharing icon () appears at the top of the viewfinder window.
3. Tap  (**Share profiles with**) to display list of current participants.
 - Stop sharing images with select participants by tapping their entry and removing the green check mark.
4. Tap  (**Shooting modes**) to display list of currently available shooting modes from within Share Shot.
5. Tap  (**Settings**) to disable share shot while maintaining a Wi-Fi Direct connection.

To take share shot images:

1. Press  (**Camera**) until the shutter sounds.
2. From the Home screen, tap  (**Apps**) →  (**Gallery**) to locate your newly shot images located in their default ShareShot storage location.
 - External users will be able to locate their images in either a downloaded or **RECV** (received) folder.
3. Confirm  (**Share shot images delivered/received**) appears in the Notifications area of the screen.


Using S Beam to Share Pictures

This feature (when activated via NFC) allows you to beam large files directly to another compatible device that is in direct contact. These files can be larger, such as Videos, HD pictures, and other large files. You can beam images and videos from your gallery, music files from your music player, and more.

1. Press  →  and then tap **Settings** → **More settings**.
2. If not already active, in a single motion touch and slide the **NFC** slider to the right to turn it on .
3. Tap **S Beam** and make sure the feature is turned on.
4. If not already active, in a single motion touch and slide the **S Beam** slider to the right to turn it on .
5. On the source device (containing the desired image or video), tap  (**Apps**) →  (**Gallery**).
6. Locate and tap the selected image to open it in the preview window.

Important! Neither device must be in Lock mode or displaying the Lock screen. They must both be active and unlocked. It is recommended that the target device be on the Home screen.

Place device atop each other

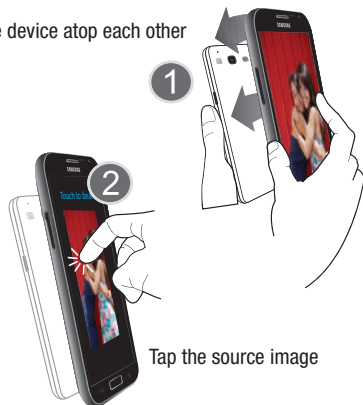

7. Place the two active NFC-enabled devices back to back to begin (1).

Note: If the **Touch to beam** screen does not appear on the source device:

- Pull them apart
 - Verify the image is visible in the preview window on the source device (providing the file)
 - Place them together again
-

8. From the **Touch to beam** screen, tap the reduced image preview to begin the transfer (2).
9. When prompted, separate the two devices. After a few seconds (depending on file size) the recipient will then see the transferred file displayed on their screen.

To share multiple pictures via S Beam:

1. On the source device (containing the desired image or video), tap  (**Apps**) →  (**Gallery**).
2. Locate the selected folder.
3. Touch and hold the first image and place a checkmark on it and all desired images.
4. Place the two active NFC-enabled devices back to back to begin.
5. From the **Touch to beam** screen, tap the reduced image preview to begin the transfer (2).
6. When prompted, separate the two devices.

Camera Gallery Options

The Gallery is where you can access the Gallery of stored camera images.

1. From the Home screen, tap  (Apps) →  (Gallery).
2. Select a folder location (ex: **Camera**) and tap an image to open it.
 - or –Touch and hold an image to place a box around the file and select multiple files.
 - or –Tap the upper-right camera to begin taking pictures that are placed in this folder.
 - or –
3. The following options are available at the top of the screen:
 - **Camera**  : allows you to access the camera/camcorder functions.

- **Share via**  : allows you to share the picture via Bluetooth, ChatON, Dropbox, Email, Flipboard, Gmail, Google+, Group Cast, Messaging, Picassa, S Note, or Wi-Fi Direct.
 - **Delete**  : allows you to delete the current picture.
4. Press  for additional options such as:
 - **Favorites**: allows you to assign the current image as a favorite.
 - **Slideshow**: allows you to see your files in a slideshow.
 - **Face tag**: allows you to activate/deactivate face recognition for use with external social media applications.
 - **Tag buddy**: allows you to assign tags to a subject in an image. These tags are selected by the user on the Tag buddy menu that appears once the feature is selected. Choose from: Weather, Location, Person, or Date.

Note: The Tag buddy - Date information is displayed only when other tags are shown.

- **Draw on image**: allows you to add an image file that can be written upon. Tap **Done** to complete the note.
- **Copy to clipboard** allows you to copy one or more pictures to a different folder.

- **Rotate left:** allows you to rotate the view of the current image in a counterclockwise direction.
- **Rotate right:** allows you to rotate the view of the current image in a clockwise direction.
- **Crop:** provides an on-screen box that allows you to crop the current picture. Tap **Save** to update the image with the new dimensions or tap **Discard** to ignore any changes.
- **Advanced edit:** launches the Photo Editor application or Paper Artist. The Photo Editor application can be downloaded from the Play Store. For more information, refer to “*Photo Editor*” on page 194.
- **Set as:** allows you to assign the current image as a Contact photo, Home screen, Lock screen, or Home and lock screens.
- **Buddy photo share:** allows you to share the current image with active ChatON buddies.
- **Print:** allows you to print the current image on a compatible Samsung printer.
- **Rename:** allows you to rename the current file.
- **Scan for nearby devices:** scans for nearby DLNA-compliant devices that can receive or display the current image.

- **Details:** files details such as Title, Time, Width, Height, Orientation, File Size, and Path.
- **Edit weather tag:** allows you to edit or assign a new weather tag that is then saved to the current file.

Screen Sharing an Image via Group Cast

Important! Verify all of your recipients are connected to the same Wi-Fi.

1. From the Home screen, tap  (Apps) →  (Gallery).
2. Tap  →  (Group Cast).
3. Enter a security PIN and tap **Done**. This process makes sure only desired recipients can view your shared image.
4. Re-enter your PIN and tap **Done**.

5. Recipients must launch AllShare Play on their devices. Your device then waits for other connected recipients on the same Wi-Fi network to accept the connection and enter the PIN on their screens.

– or –

Tap **Start Group Cast anyway** to continue the process while your users connect.

6. Other users will have to activate their Group Cast functionality and then select the current Group and enter the correct PIN code.

You can now interact and draw with the on-screen image, users will instantaneously see the same gestures and also be able to interact.

Note: The newly altered image (with markups and comments) can not be saved, but you can take a screen shot of the current image and save it to your Clipboard. For more information, refer to *“Using Gestures”* on page 63.

Sharing a Gallery Image to a Target Device

Important! Make sure all communicating devices are connected to the same Wi-Fi.

1. Launch AllShare on the target device (such as an Internet TV, Samsung Tablet, etc..).
2. From the Home screen, tap  (Apps) →  (Gallery).

Note: You must be signed in to your Samsung Account before you can use this feature.

3. Open a selected image.
4. Tap  (**Stream to connected devices**) and select an available target device to begin streaming.
5. On a target device (ex: Internet TV) select the on-screen **Allow** button to continue.

Note: At this stage your device is requesting access to share media with the external source.


6. Confirm  (**AllShare Controller enabled**) appears in the Notification area at the top of the device to indicate you are using your device as the media source.

Taking a Screen Shot

Also known as a screen capture, this feature allows you to mimic the print screen function on most computers.

1. Press  →  and then tap **Settings** → **Motion**.

2. In a single motion touch and slide the **Motion** slider to the right to turn it on .

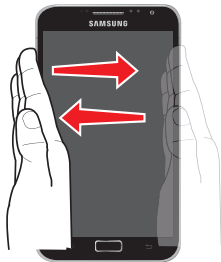

3. Tap the desired on-screen motion option.
4. Although enabled by default, enable the **Palm swipe to capture** field by placing a check mark in the adjacent field.
5. With the current screen showing the desired image, in a single motion, place the side of your palm along the one side of the device and then slowly swipe it in the opposite direction over the screen.

Assigning an Image as a Contact Photo

1. From the Home screen, tap  (**Apps**) → .
2. Select a folder location and tap a file to open it.
3. With the image displayed, press  and then tap **Set as** → **Contact photo**.
4. Tap a contact to make a selection.
5. Use the on-screen crop the image by dragging it around or out from its corners.
6. Tap **Done** to store the new image.

Assigning an Image as a Wallpaper

1. From the Home screen, tap  (Apps) →  (Gallery).
2. Select a folder location and tap a file to open it.
3. With the image displayed, press  and then tap **Set as**.
4. Select one of the two options:
 - **Home screen** assigns the current image to the home screen background. This image is spread across all available screens.
 - **Lock screen** assigns the selected image to the background for the lock screen.
 - **Home and lock screens** assigns the current image to both the Home screen and Lock screens.
5. Touch and drag the crop box anywhere on the picture. Touch and drag the sides of the crop box to zoom in or out to create a cropped area.
6. Tap **Done** to assign the wallpaper image.
– or –
Tap **Cancel** to stop without updating the wallpaper image.

Editing a Photo

You can edit your photos using the optional Photo editor application on your device. For more information, refer to “*Photo Editor*” on page 194.

Using the Camcorder

In addition to taking photos, the camera also doubles as a camcorder that also allows you to record, view, and send high definition videos.

Note: To ensure the Camcorder can record the video, use an SDHC memory card.

Shooting Video

Tip: When shooting video in direct sunlight or in bright conditions, it is recommended that you provide your subject with sufficient light by having the light source behind you.

1. From the Home screen, tap  (Apps) →  (Camera) to activate the camera mode.
2. Tap and slide the Camera mode button down to **Camcorder Mode**.
3. Using the device's main display screen as a viewfinder, adjust the image by aiming the camcorder at the subject.

Note: Use either the Up and Down volume keys or spread/pinch the screen to zoom in or out. For more information, refer to “*Navigating Through the Screens*” on page 55.

4. Tap the Video key () to begin shooting video. The red light will blink while recording.

5. Tap anywhere on the screen to re-focus the camera on that object. The camcorder auto-focuses on the new target area.
6. Tap the screen then select  to turn on auto focus. This will automatically focus the video based on the object at the middle of the screen.
7. To capture an image from the video while recording, tap . This feature is not available while the anti-shake feature is activated.
8. Tap the  (**Stop**) to stop the recording and save the video file to your Camera folder.
9. Once the file has been saved, tap the image viewer, then tap  (**Play**) to playback your video for review.
10. Press  to return to the viewer.

Camcorder Options

You can change options using your keypad in capture mode. The following short cuts are available:



Self portrait: allows you to activate the front facing camera so you can take videos of yourself or video chat.



Flash: allows you to set the flash options to Off or On. When you set the flash to On, it stays on continually while you are taking a video.



Recording mode: allows you to set the recording mode to: Normal, which is limited only by available space on the destination location, Normal, Limit for MMS (which is limited by MMS size restrictions), Slow motion (adds a slow motion effect to your video), or Fast motion (adds a fast motion playback effect to your current video).



Effects: allows you to change the color tone or apply special effects to the video. Options include: No effect, Cold vintage, Warm vintage, Posterize, Solarize, Green point, Blue point, Red-yellow point, Washed out, Cartoonify, Black and white, Sepia, or Negative.



Settings:

Edit shortcuts: allows you to set shortcut icons for the settings that you use the most.

Self-recording: allows you to set the front camera so you can take videos of yourself or video chat.

Flash: allows you to set the flash options to Off or On. When you set the flash to On, it stays on continually while you are taking a video.

Recording mode: allows you to set the recording mode to:

- **Normal:** is limited only by available space on the destination location.
- **Limit for MMS:** is limited by MMS size restrictions.
- **Slow motion:** applies a slow motion video effect.
- **Fast motion:** applies a fast motion video effect.



Settings (continued):

Effects: allows you to change the color tone or apply special effects to the video. Options include: No effect, Cold vintage, Warm vintage, Posterize, Solarize, Green point, Blue point, Red-yellow point, Washed out, Cartoonify, Black and white, Sepia, or Negative.

Exposure value: allows you to adjust the brightness level by moving the slider.

Timer: allows you to set a timer for how long to wait before taking a video. Options include: Off, 2 sec, 5 sec, and 10 sec.

Resolution: allows you to set the image size to either: 1920x1080, 1280x720, 720x480, 640x480, or 320x240.

White balance: allows you to set this option to one of the following choices: Auto, Daylight, Cloudy, Incandescent, or Fluorescent.

Outdoor visibility: activates/deactivates a screen brightness setting that allows you to better view the screen when outdoors.



Settings (continued):

Guidelines: allows you to turn the guidelines On or Off.

Anti-Shake: reduces image blur due to the movement of the subject of the video or hand movement.

GPS tag: allows you to turn GPS On or Off (also known as Geo-tagging). The location of where the video is shot is attached to the file.

Contextual filename: (requires GPS tagging) allows you to adjust the filename based on contextual information such as your current GPS location.

Save as flipped: allows you to automatically save a new video as a mirror image “flipped” of the original.

Video quality: allows you to set the image quality to: Superfine, Fine, or Normal.

Storage: allows you to configure the default storage location for images or videos as either Phone or Memory card (if inserted).

Reset: allows you to reset all camera or camcorder settings to the default values.



Image viewer: allows you to access the Image viewer and the various viewing options for a selected video. Image viewer options are described in the following section. The last video you took, will be displayed as a thumbnail in the Image viewer icon.



Camcorder button: shoots or stops video recording when pressed in Camcorder mode.



Live Shooting: takes a photo during a video recording session in Camcorder mode.

Note: This feature is not functional when the Anti-Shake feature is activated.



Camcorder Mode: allows you to shoot video. Slide the button up for Camera mode or down for Camcorder mode.



Storage location/Charge Status: indicates the current storage location (Phone or Card) and the charge state of the device.

Accessing Videos

When you shoot a video, the file is saved in the Camera folder. You can view your videos immediately or view them anytime in the Camera folder.

1. From the Home screen, tap  (**Apps**) →  (**Gallery**).
 2. Select a folder location and before tapping any files, select an on-screen function such as Camera, Slideshow, or New Album.
 - **New Album:** allows you to create a new album for image and video files.
- or —

3. Select a folder location and tap a video icon to begin video playback.

— or —

Touch and hold the video icon from the main Gallery to select the video (indicated by a checkmark) and display the following video menu context options:

- **Share via** : allows you to share the video via Bluetooth, ChatON, Dropbox, Email, Gmail, Google+, Messaging, Picassa, S Note, Wi-Fi Direct, or YouTube.
 - **Delete** : allows you to delete the current video. Choose either OK or Cancel.
4. From within the Gallery, place a checkmark on the video and press  for additional options such as:
 - **Slideshow:** allows you to see your files in a slideshow.
 - **Move:** allows you to move the currently selected file to another folder location.
 - **Copy** allows you to copy one or more files to a different folder.
 - **Rename:** allows you to rename the current file.
 - **Details:** files details such as Title, Time, Width, Height, Orientation, File Size, and Path.

Photo Editor

Note: The Photo Editor is not load loaded on your device and must be downloaded via the Samsung Apps.

The application provides basic editing functions for pictures that you take on your phone. Along with basic image tuning like brightness, contrast, and color it also provides a wide variety of effects used for editing the picture.

Installing the application from Samsung Apps

1. From the Home screen, tap  (Apps) →  (Gallery).
 2. Select a folder location and tap a file to open it.
 3. With the image displayed, press  and then tap **Advanced edit → Photo Editor**.
 4. Tap **Download** and follow the on-screen instructions to begin the download process.
 5. If prompted, accept the Samsung Apps agreement.
 6. Tap the **Get** to continue.
7. Log into Samsung account by either tapping **Create new account** or **Sign in** using your existing Samsung account information. Follow the on-screen log in screens.
 8. When prompted, tap **Accept and download** to initiate the download process.

The Gallery

The Gallery is where you view photos and play back videos. For photos, you can also perform basic editing tasks, view a slideshow, set photos as wallpaper or caller image, and share as a picture message.

Note: If the device displays a memory full message when accessing the Gallery, access **My Files** and remove some of the media files from the folders, and then open the Gallery.

Opening the Gallery

- From the Home screen, tap  (Apps) →  (Gallery). For more information, refer to “*Camera Gallery Options*” on page 184.
-

Note: If you stored your files in folders (directories) on the storage card, Gallery displays these folders as separate albums. The top left album contains all the pictures in the storage card.

Viewing a Video within the Gallery

1. From the Home screen, tap  (Apps) →  (Gallery).
2. Locate your folder and video.
3. Tap  (Play) to playback your video.

For more information on using the Picture-in-Picture feature for video playback, see “*Using Picture-In-Picture*” on page 196.

Using the Video Player

The Video Player application plays video files stored on the SD card. This device is able to playback DivX videos.

1. From the Home screen, tap  (Apps) →  (Video Player). A list of available videos displays in the Video list.
2. Tap a video file to begin viewing.

Sharing Videos

1. From the Home screen, tap  (Apps) →  (Video Player). After a few seconds, each on-screen video begins to cycle through a preview of the first five seconds of the clip.
2. Press  and then tap **Share via**.
3. Select either individual videos or tap **Select all**.
4. Click **Done** to complete the process or **Cancel** to quit.
5. Select a sharing option. Choose from: Bluetooth, ChatON, Dropbox, Email, Gmail, Google+, Messaging, Picassa, S Note, Wi-Fi Direct, or YouTube.


Using Picture-In-Picture

This feature can be used during playback of supported video types via either the Gallery, Play Videos, or Video player.

Note: Some applications might not allow this video to remain active in the foreground (ex: Camera/Camcorder screen).

This feature allows you to continue to view your video as a background operation while you multi-task and do other things, such as surf the Internet, access your Contacts list, look for a picture, etc..

1. From the Home screen, tap  (Apps).
2. Tap the desired video playback application.
3. Tap the desired video to begin playback.

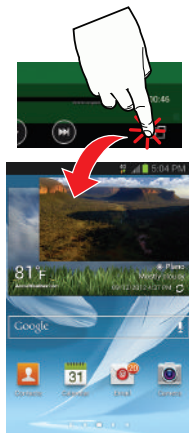

Note: The Picture-In-Picture feature only works when using the Video player application. Other video players (ex: YouTube), do not support this feature.

4. As playback is initiated, locate and tap  (**Picture-in-Picture**) from the bottom-right of the playback screen. Your current video is then sent to foreground of any new page and most application screens.
5. The video disappears from the screen once it ends.

DivX Overview

This device is able to playback DivX videos. DivX Certified® to play DivX® video up to HD 720p, including premium content. If you try to play DivX VOD content not authorized for your device, the message “Authorization Error” will be displayed and your content will not play. Learn more at www.divx.com/vod.

Your device must first be registered to playback protected or purchased DivX content. DRM-free or unprotected content does not required DivX VOD registration.

Locating Your VOD Registration Number

1. Press  →  and then tap **Settings** → **About device** → **Legal information** → **License settings** → **DivX® VOD** > **Register**.
2. Write down your Registration code.
3. Tap **OK**.

Register Your DivX Device for VOD Playback of Purchased Movies

To play purchased DivX movies on your device, you will first need to complete a one-time registration using both your device and your computer.

1. Write down the DivX registration code that appears on-screen. Copy this 8 or 10-digit number down.
2. Verify you have the latest DivX software running on your computer. Download the free player (for your computer) from www.divx.com.
3. Open the DivX Player on your computer and from within the **VOD** menu, select **Register a DivX Certified Device**.

4. You are prompted to log in or create a DivX account if your account information has not already been saved in DivX Player.
5. Follow the instructions in DivX Player to enter the registration code from step 2 and create a device nickname (ex: “Pat or Pat’s Device”).
6. Select a location on your computer to download the DivX registration video with the same title as your device nickname (ex: Pat.divx).
7. Follow the on-screen instructions to download the file and initiate the transfer process. You will need to place this video file onto your device and play it back.



8. Connect your device to the computer via USB and transfer this video. For more information, refer to “Communicating with the SD card” on page 77.
9. From the **Registration** screen (Transfer), click Transfer Video now and select the location of the microSD card or **USB** (the device) as the target destination for the registration video (created in step 6) and click **Start**.
– or –
Locate the created file, copy and paste it into the new drive letter corresponding to your device’s storage location.
10. From the Home screen, tap  (Apps) →  (My Files).
11. Locate your registration DivX video file and tap the file to play it. Once you play the registration file on your device, your registration is complete.
12. Return to the DivX VOD Manager screen (from within your computer’s DivX Player) and confirm both your computer and your new device appears in the list of registered DivX devices.

Important! There is no special registration or configuration necessary to playback DRM-free DivX movies. Registration of your device is only required for playback of protected DivX material.

Media Hub

Samsung Media Hub is your one stop for the hottest movie and TV content. With hundreds of titles available, entertaining your family on the go was never easier. You can rent or purchase your favorite content and watch from any location. Featuring the stunning viewing quality Samsung is known for, Samsung Media Hub is your gateway to mobile video like you've never experienced it before.

You must have the Samsung Account application installed and registered prior to using Media Hub.

Note: Media Hub usage is based on service availability.

Important! You must be using an active Wi-Fi/4G connection to preview and download a media file. The internal memory acts as a storage location for your downloaded rental or purchase.

Important! The Samsung account manages the access information (username/password) to several applications, such as AllShare Play, Chat On, and Media Hub.

Creating a New Media Hub Account

Before you can rent or buy media, you must first create an account. Enter the required information.

1. Confirm you have already logged in to your Samsung account. There should be no  icon in the Notifications area of the screen.
2. From the Home screen, tap  (Apps) →  (Media Hub).
3. Read the **Terms and Conditions** screen and tap the **I agree to the Terms and Conditions** check box.
4. Tap **Accept** to continue or **Decline** to exit. The Media Hub screen displays.
5. Press  and then tap **My Profile**.

Note: Your Media Hub account is managed by the Samsung account application. This application manages your user profile information.

6. If not already signed in, use the keypad to enter the required information, then tap **Create new account**. Follow the on-screen instructions to complete your registration for a new Samsung account.

Using Media Hub

1. From the Home screen, tap  (Apps) →  (Media Hub).
2. At the Media Hub screen, **What's New** is displayed with recently added media that you can rent or purchase.
3. The following tabs are displayed at the top of the screen:
 - **Home:** displays the Media Hub main screen.
 - **Movies:** displays movies that are available for rent or purchase. Scroll through the top navigation bar and select a movie category. The movies of that type will be displayed below.

- **TV Shows:** displays TV shows that are available for purchase. Scroll through the top navigation bar and select a TV category. The TV shows of that type will be displayed below.
 - **My Media:** allows you to view all of the media that you have purchased or rented. Tap a media entry to view it.
4. Scroll through the media listings and tap on an item you would like to purchase or rent.
 5. Tap tap **Buy** or **Rent**.
 6. Choose a payment method and then follow the on-screen instructions. The media stores to the **My Media** folder.

Media Hub Notices

- Any media item (Media Content) may be rented or purchased after you create an account in Media Hub.
- Media Content that is downloaded may be viewed concurrently on up to five (5) devices with Media Hub that are also registered to the same account.
- You may choose to remove a device from your account no more than once every 90 days.

- You may remove Media Content from a device as many times as you'd like. You will have the ability to re-download the Media Content at a later point in time subject to content re-download availability and studio permissions.
- You MUST be in network coverage to license Media Content you have acquired through the Service.
- You can use 3G, 4G, or Wi-Fi connectivity in order to download Media Content.
- Unlike purchased Media Content, rented Media Content will be viewable on only 1 device in your account.
- Media Content is downloaded and saved to internal memory. No SD Card included out of box.
- Your Media Content may pause/stop or not download in networks where there is a weak signal.
- You may begin watching downloaded Media Content as soon as a) license acquisition has occurred and b) sufficient amount of the Media Content has been buffered.
- You must finish watching rented Media Content within 24 consecutive hours of start of playback.
 - Stopping, pausing or restarting rented Media Content does not extend the available viewing time.
- In no event will rented Media Content be available for a period of more than thirty (30) days (or shorter on a title-by-title basis) after the Media Content has been rented (e.g., if you begin viewing rented Media Content on the 29th day after the rental transaction, but do not finish viewing the entire title, that rented Media Content may not be available for the entire twenty-four (24) consecutive hour period if such period would extend the viewable time beyond the thirty (30) day rental window).
- You cannot play any media content downloaded from Media Hub through any output on your mobile phone, including All Share.

Play Movies & TV

This application allows you to connect to the Play Store, download a movie and then watch it instantly.

Choose from thousands of movies, including new releases and HD titles in the Play Store and stream them instantly on your Android device.

Movies, previously rented via the Play Store are automatically added to your My Movies library across your devices.

Learn more about Google Play Movies at:

<http://play.google.com/about/movies>.

1. From the Home screen, tap  (Apps) →  (Play Movies & TV).
2. Log on to your Google account if you have not already done so. A list of videos sorted on the SD card displays in the Video list.
3. Following the on-screen instructions for renting and viewing movies.
4. Tap the **MOVIES** tab to view movies you have rented.
5. Tap the **TV SHOWS** tab to view shows you have rented.
6. Tap the **PERSONAL VIDEOS** tab to view movies you have on your device or memory card.

For more information on using the Picture-in-Picture feature for video playback, see “Using Picture-In-Picture” on page 196.

Play Music

Also known as Google Music, allows you to browse, shop, and playback songs purchased from the Play Store. The music you choose is automatically stored in your Google Music library and instantly ready to play or download.

- Access the new music tab from within your Play Store application.

The Music application contains a music player that plays music and other audio files that you copy from your computer.

1. From the Home screen, tap  (Apps) →  (Play Music).

The Music app searches both your online library and your device's internal storage for music and playlists; this can take from a few seconds to several minutes, depending on the amount of new music added since you last opened the application. It then displays a carousel view of your new and recent music, organized by album.

2. If prompted, follow the on-screen instructions to link your current account to Google Play Music.
3. Tap an on-screen account to add it or select **Add account** to use a new account.
4. At the free songs screen, select either **Get free songs** or **Skip**.
 - Get free songs are downloaded via either the Internet or Play Store.
 - Follow the on-screen download and installation instructions.
5. Swipe left or right to browse through your new and available music. Music, albums, and artists are grouped into categories.
6. Tap an on-screen album to open it and begin playback.
7. Return to the Library screen from most other screens in the Music application by tapping the Music application icon  (**Music notification icon**) at the top-left of the Application bar.

Changing Library View

You can change the way you view the contents of your library.

1. From the Home screen, tap  (**Apps**) →  (**Play Music**).
2. While in a selection or screen, tap  (near the top-left of the Application bar) or the tab name to back up to the main Music App menu.
3. Available tabs include: **PLAYLISTS**, **RECENT**, **ARTISTS**, **ALBUMS**, **SONGS**, or **GENRES**.

Note: The contents of your library display in a scrolling grid or list view, depending on the view.

Searching for Music in Your Library

1. From the Home screen, tap  (Apps) →  (Play Music).
2. Tap  (Search) to search through your available songs.
3. Type the name of an artist, album, song, or playlist. Matching songs are displayed in a list below the search box.
4. Tap a matching song to play it, tap a matching album, artist or playlist to view a list of its' songs.

Changing Music Settings

1. From the Home screen, tap  (Apps) →  (Play Music).
2. Press  and then make a selection.
 - **Shuffle all:** Play all songs in a random order.
 - **Settings:** Provides access to the Play Music settings.
 - **Help:** Displays application help information.

Listening to Music

You can listen to music by using your device's built-in speakers, through a wired headset, or through a wireless Bluetooth stereo headset.

Press the volume keys on the side of the device to activate on-screen volume control, then touch and drag on the scale to set volume.


Playing Music

1. From the Home screen, tap  (Apps) →  (Play Music).
2. Tap a song in your library to listen to it.

– or –

While viewing a list of songs, tap  (Options) next to a song and tap **Play**.

– or –

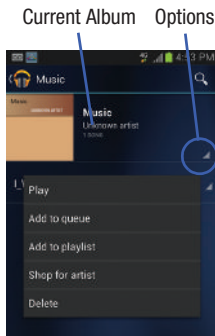

While viewing a list of albums, artists, playlists, or genres, tap  (Options) adjacent to the label and tap **Play**.

The **Now playing** screen opens and the song you touched or the first song in the album or playlist starts to play. The tracks in the current list play in order until you reach the end of the list (unless you choose a repeat option). Otherwise, playback stops only if you stop it, even when you switch applications.

Note: If you navigate away from the **Now playing** screen in the Music application, the Now Playing bar appears at the bottom of the screen.

Displaying the Now Playing Screen

If you navigate away from the **Now playing** screen, to return to the **Now playing** screen from other Music screens:

- Tap the name of the current song in the Now Playing bar.

– or –

In a single motion, touch and drag  (**Music notification icon**) down from the Status bar and tap the song title from the Notifications area. You can also pause and resume playback and skip to the next song in the panel. For more information, refer to “Notification Screen” on page 39.

Tab Options

There are various options available from the various tabs:

1. From the Home screen, tap  (**Apps**) →  (**Play Music**).
2. Select one of the following tabs and tap  to access an available option.
 - **PLAYLISTS:** Play, Add to queue, Rename, or Delete.
 - **RECENT:** to display the most recently played songs and albums

- **ARTISTS:** Play, Add to queue, Add to playlist, More by artist, or Shop for artist.
- **ALBUMS:** Play, Add to queue, Add to playlist, More by artist, or Shop for artist.
- **SONGS:** Play, Add to queue, Add to playlist, Shop for artist, or Delete.
- **GENRES:** Play, Add to queue, Add to playlist, More by artist, or Shop for artist.

Options While Playing a Song

When you play a song, the **Now playing** screen displays. There are various options and controls available while a song is playing:

1. From the Home screen, tap  (Apps) →  (Play Music).
2. Tap an album or song.
3. From the Now playing screen, press  (Menu) to display the following options:
 - **Equalizer:** applies selected equalizer features such as: FX booster, Bass boost, and 3D effect.
 - **Clear queue:** clears the current queue.
 - **Save queue:** stores the current queue.

- **Settings:** Allows you to view and assign various music settings, and view different application-specific information.

4. Tap  → **Add to playlist** to add the song to a playlist.
– or –
Tap  →  → **Add to playlist** to add the song to a playlist.

The **Now playing** screen contains several buttons that you can tap to control the playback of songs, albums, and playlists:



Tap to go back to the previous song. Touch and hold to scan backward through the current song.



Tap to resume playback.



Tap to pause playback.



Tap to advance to the next song. Touch and hold to scan forward through the current song.



When Shuffle mode is enabled via **Show Options**, songs play in random order. When disabled (as shown), songs play in the order they appear in List view. Also visible when  is tapped.



When Shuffle mode is enabled via **Show Options**, songs play in random order. When enabled, songs play in random order. Also visible when  is tapped.



Tap to repeat the current song, repeat all songs, or disable repeat mode.



Also visible when  is tapped.



Creating a Playlist

1. From the Home screen, tap  (**Apps**) →  (**Play Music**).
2. Tap an album or song list and play a song.
3. Tap  →  adjacent to the song name and select **Add to playlist**.
4. Tap **New playlist** → **Playlist name** field to enter a name for the playlist.
5. Tap **OK** to save the new playlist.

Adding Songs to Playlists

1. From the Home screen, tap  (**Apps**) →  (**Play Music**).
2. Tap an album or song list and play a song.
3. Tap  →  adjacent to the song name and select **Add to playlist**.
4. Select the desired target playlist.

Playing a Playlist

1. From the Home screen, tap  (Apps) →  (Play Music).
2. Select the **PLAYLISTS** tab.
3. Tap  next to a playlist title and tap **Play**.

Deleting a Playlist

1. From the Home screen, tap  (Apps) →  (Play Music).
2. Display the **PLAYLISTS** library view.
3. Tap  next to a playlist title and tap **Delete**.

Music Player

The Music Player is an application that can play music files. The music player supports files with extensions AAC, AAC+, eAAC+, MP3, WMA, 3GP, MP4, and M4A. Launching the Music Player allows you to navigate through your music library, play songs, and create playlists (music files bigger than 300 KB are displayed).

Playing Music

1. From the Home screen, tap  (Apps) →  (Music Player).
2. Tap a library category tab to select the music category: **All**, **Playlists**, **Albums**, **Artists**, **Music square**, or **Folders**.
3. Scroll through the list and tap an entry to begin playback.

Note: The 5.1 channel sound effect works when earphones or sound is connected through the headset jack only.

4. Use any of the following Music Player controls:



Pause the song.



Start the song after pausing.



Press and hold to rewind the song. Tap to go to previous song.



Press and hold to fast-forward the song. Tap to go to next song.



Volume control.



Plays the entire song list once.



Replays the current list when the list ends.



Repeats the currently playing song.



shuffles the current list of songs randomly.



songs play in order and are not shuffled.



provides access to the Music square.



lists the current playlist songs



displays the current song in the player window



provides access to the Equalizer

Making a Song a Phone Ringtone

1. From the Home screen, tap  (Apps) →  (Music Player).
2. Tap the **All** tab.
3. Touch and hold a song from the list to reveal the on-screen context menu.
4. Tap **Set as** → **Phone ringtone**.

Music Player Options

The Music Player Settings menu allows you to set preferences for the music player such as whether you want the music to play in the background, sound effects, and how the music menu displays.

- With the Music player application displayed and playing a song, press  and select one of the following options:
 - **Add to quick list:** adds the current music file to the Quick list.
 - **Via Bluetooth:** scans for devices and pairs with a Bluetooth headset.
 - **Share via:** allows you to share your music by using Bluetooth, Dropbox, Email, Gmail, Group Cast, Messaging, or Wi-Fi Direct.

- **Add to playlist:** allows you to add the current music file to a selected playlist.
- **Details:** allows you to view media info such as Artist, Title, Album, Track length, Genre, Track number, Format, Size, and Location.
- **Set as:** allows you to set the current song as a Phone ringtone, Caller ringtone, or Alarm tone.
- **Scan for nearby devices:** allows you to look for DLNA - compliant devices used to control streaming media.
- **Settings:** allows you to change your music player settings.
- **End:** closes the application.

Music Player Settings

The Music Player Settings menu allows you to set preferences for the music player such as whether you want the music to play in the background, sound effects, and how the music menu displays.

1. From the Home screen, tap  (Apps) →  (Music Player).
2. Press  → Settings.
3. Select one of the following settings:

- **SoundAlive:** set a type of equalization such as Normal, Pop, Rock, Jazz, Dance, Classic, etc.
- **Play speed:** set the play speed anywhere between 0.5X and 2.0X using the slider.
- **Music menu:** this menu allows you to select which categories you want to display. Choices are: Albums, Artists, Genres, Music square, Folders, Composers, Years, Most played, Recently played, or Recently added. Tap each item that you want to display in the Music menu.
- **Lyrics:** when activated, the lyrics of the song are displayed if available.
- **Music auto off:** when activated, music will automatically turn off after a set interval.

Using Playlists

Playlists are used to assign music files into groups for playback. These Playlists can be created using the Music player on this device, or using a third-party application (such as Windows Media Player) and downloading those files to an SD card inserted into the device.

Creating a Playlist

1. From the Home screen, tap  (Apps) →  (Music Player).
2. Tap the **Playlists** tab.
3. Press  and then tap **Create playlist**.
4. Backspace over the default playlist title and type a new name for this playlist, then tap **OK**.

Adding Music to a Playlist

1. From the Home screen, tap  (Apps) →  (Music Player).
2. Tap the **Playlists** tab.
3. Tap the playlist name in which to add music.
4. Press  and then tap **Add**.
– or –
Tap  (**Add music**). This option is available within user-created playlists.

Note: If a playlist is empty, add a song by touching a holding a song name from the main screen to open the context menu. Select **Add to playlist** and choose the playlist.

5. Tap a music file, or tap **Select all** to add all the music tracks to this playlist then tap **Done**.

Removing Music from a Playlist

1. From the Home screen, tap  (Apps) →  (Music Player).
2. Tap the **Playlists** tab.
3. Tap the playlist name in which to delete music.
4. Touch and hold a song to reveal the on-screen context menu.
5. Tap **Remove**.

Editing a Playlist

Besides adding and removing music files in a playlist, you can also share, delete, or rename the playlist.

Note: Only those playlist you have created can be edited. Default playlists can not be renamed.

1. From the Home screen, tap  (Apps) →  (Music Player).
2. Tap the **Playlists** tab.

3. Touch and hold a playlist entry to reveal the on-screen context menu.
4. Tap **Edit title**.
5. Enter a new name for this playlist and tap **OK**.

Transferring Music Files

Music files can be downloaded to the phone using one of two methods:

1. Downloaded to the device from the Play Store.
Music files are directly stored on your phone.
2. Downloaded to the phone via a direct USB connection.
Music files are stored into a Music folder on the SD card.

For more information, refer to “Communicating with the SD card” on page 77.

Removing Music Files

1. From the Home screen, tap  (Apps) →  (Music Player).
2. Tap the **All** tab.
3. Touch and hold a song entry to reveal the on-screen context menu.
4. Tap **Delete** → **OK**. The music file(s) is deleted.

Music Hub

Samsung Music Hub makes your device a personal music manager. It lets you access, buy, and download millions of music tracks. Access top albums, top tracks, featured albums, and new releases as well as search for tracks, albums and artist. Enjoy music samples before you download them from your device.

Note: You must logged into your Samsung account before accessing some of the Music Hub options.

1. From the Home screen, tap  (Apps) →  (Music Hub).
2. Read the Disclaimer and tap **Continue** to proceed or  (Back) to exit.
3. Read the 30-day trial offer and choose either **Start** or **Not now, go to store**. Follow the on-screen instructions.
4. Choose from any of the following options: My Music, Store, Radio, Recommended, Search, Tagged, Recent, Purchases, Account, or Settings.

Note: You have to be signed in to use some options.
To sign in without your Samsung account, tap **Sign in**
and use the keyboard to enter your **Email address** and
Music Hub Password.
Tap **Create account** to set up a new account.

5. Tap  (**Search**) and use the keyboard to enter a key word or phrase to search for tracks, albums, or artists.
Tap  on the keyboard to search Music Hub.
Select an item to play a sample, add an item to your basket, or add an item to your album.

Making a Purchase

You can use Music Hub to buy albums or individual tracks.
You can also build your own album from various tracks.

1. From the Home screen, tap  (**Apps**) →  (**Music Hub**) → **Store**.
2. Select a genre, then choose from: Songs, Albums, or Artists.
3. To the right of the entry, tap  (**Preview**) hear a 30 second preview of the current selection.
— or —
4. To the right of the entry, tap  (**Options**) to choose from: Add to queue, Buy song, View album, View artist, or Find similar music.
5. Tap **Buy song** and follow the on-screen instructions to complete your purchase.

AllShare Play

This application wirelessly synchronizes your Samsung device with your TV, streams content and even keeps tabs on who calls or sends text messages with real-time, on-screen monitoring. Samsung's AllShare makes staying connected easy.

Allows users to share their in-device media content with other external devices using DLNA certified™ (Digital Living Network Alliance) Devices. These external devices must also be DLNA-compliant. Wi-Fi capability can be provided to TVs via a digital multimedia streamer.

Important! You must first connect both of your communicating devices to the same Wi-Fi and be using an active/registered Samsung account prior to using this application.

For more information, refer to *“Wi-Fi settings”* on page 292.

For more information, refer to *“Creating a Samsung Account”* on page 21.

Note: For more information on defining the various AllShare features definitions on page 226.

Important! The Samsung account manages the access information (username/password) to several applications, such as AllShare Play, Chat On, and Media Hub.

1. Confirm you have already logged in to your Samsung account. There should be no  icon in the Notifications area of the screen.
 2. From the Home screen, tap  (Apps) →  (AllShare Play).
 3. If prompted, read the on-screen message about network charges and tap **OK** to continue and return to the main AllShare Play screen.
-

Note: If the main screen still shows a Sign in box, close the application and restart it.

4. Tap **Start** and follow the on-screen prompts.

The application contains two separate streaming media options:

- **Registered storage:** allows you to receive and playback media stored externally (server, laptop, etc.) directly on your device by allowing you to add a Web storage service for streaming content.
- **Registered devices** allows you to stream/share selected multimedia content from your device to DLNA compliant device connected to the same Wireless Access Point.

Configuring AllShare Settings

The AllShare Play™ application must first be configured prior to its initial use. You must setup parameters such as connected Wi-Fi, Items to share, source server address, and external device acceptance rights.

1. From the Home screen, tap  (Apps) →  (AllShare Play).
2. Press  and then tap **Settings** and configure the following settings as desired:
 - **Registered storage:** allows you to add a Web storage location. Without a storage service/location added, you will not be able to use AllShare Play.

- **Registered devices:** defaults to your phone. This provides a list of currently registered devices.
- **Setting up web services:** allows you to set up external Web services by signing in to external sites such as Facebook, Twitter, YouTube, etc..
- **Auto upload photos from mobile:** allows you to setup automatic upload of images from your device to those storage locations specified within the Web storage list.
- **Video quality settings:** allows you to setup the video quality for streamed video content.
- **Lock AllShare Play:** allows you to restrict access to AllShare Play by requiring a user enter the currently active and associated Samsung account password. Tap **Locking AllShare Play** to activate/deactivate the feature.
- **Language:** allows you select a display language.
- **About:** displays application information.
- **Contact Us:** allows you to contact the AllShare team via a new email from an available email account.

Setting Up Web Storage

SugarSync is a Web storage service that allows you to use storage space to store your files and share them on the “Cloud”.

Note: If you are using another Web storage service, log into that service first before using AllShare Play.

1. From the Home screen, tap  (Apps) →  (AllShare Play).

Note: When adding storage, an N Drive is added.

2. From the main screen, select  (Add storage) and then tap on the media that you would like to share.
 - A file with  in the upper-left indicates it is stored remotely on a Web storage location. Selecting this media causes your device to access the file currently stored on your services' servers.
3. If this is your first time to use the service, set up a new account by tapping **Sign up** → **SugarSync Sign Up**.

Note: If you already have a current Sugar Sync account, tap **Sign in**.

4. Enter in your Email address and your password.
5. Agree to the terms of service and tap **Sign up** or **Go** on your on-screen keyboard.

Important! After you enter your passwords, do not press  to hide the keyboard. This action erases the password fields.

6. You can choose to download the SugarSync app or tap **Skip** to continue.
7. Once the process is successfully completed, the Web storage icon or name appears in the Web storage area of the main screen.

Sharing files via Web Storage

Files can be uploaded to a Web storage location, such as SugerSync by either login into the service and sharing a folder on your computer with the storage location or sharing files, images, and videos from your device.

To upload an image on your device to Web storage:

1. From the Home screen, tap  (Apps) →  (Gallery).
2. Select a folder location (ex: **Camera**) and open an image by tapping it once. This opens the image in the preview window.

Note: To select multiple images, touch and hold an image to place a colored border around the selected images.

3. Select the remote storage location (ex: Dropbox).
4. Select the target folder location and select **Upload**. The device then confirms the available storage locations and begin the process of uploading the selected images.

To upload a video on your device to Web storage:

1. From the Home screen, tap  (Apps) →  (Gallery).
2. Select a folder location (ex: **Camera**) and touch and hold a video to place a colored border around the selected file.
3. Tap  → **Dropbox** from the top of the Gallery screen. The device then confirms the available storage locations and begin the process of uploading the selected video.

Sharing Media via AllShare Play to a Target Device

Important! Make sure all communicating devices are connected to the same Wi-Fi.

1. Launch AllShare on the target device (such as an Internet TV, Samsung Tablet, etc..).
2. From the Home screen, tap  (Apps) →  (AllShare Play).

Note: You must be signed in to your Samsung Account before you can use this feature.

3. Tap your device name from the **Devices** list.
4. Tap an available category tab (Pictures, Music, Movies, Files, or Info) and select a file.
 - Touch and hold to select multiple files.
 - A file with  in the upper-left indicates it is stored remotely on a Web storage location. Selecting this media causes your device to access the file currently stored on your services' servers.

5. Tap an available on-screen file, image, or video to place a green check mark alongside it.
6. Tap  (**Stream to connected devices**) and select an available target device to begin streaming.
7. On a target device (ex: Internet TV) select the on-screen **Allow** button to continue.

Note: At this stage your device is requesting access to share media with the external source.

8. Confirm  (**AllShare Controller enabled**) appears in the Notification area at the top of the device to indicate you are using your device as the media source.

AllShare Play Screen Sharing via Group Cast

Important! Verify all of your recipients are connected to the same Wi-Fi.

1. From the Home screen, tap  (Apps) →  (Gallery).
2. Tap  →  (Group Cast)
3. Enter a security PIN and tap **Done**. This process makes sure only desired recipients can view your shared image.
4. Re-enter you PIN and tap **Done**. The device then waits for other connected recipients to accept the connection and enter the PIN on their screens.
— or —

Tap **Start Group Cast anyway** to continue the process while your users connect.

5. Other users will have to activate their Group Cast functionality and then select the current Group and enter the correct PIN code.

You can now interact and draw with the on-screen image, users will instantaneously see the same gestures and also be able to interact.

Note: The newly altered image (with markups and comments) can not be saved, but you can take a screen shot of the current image and save it to your Clipboard.
For more information, refer to “*Using Gestures*” on page 63.

AllShare Cast Hub

This hardware allows you to enjoy what’s currently on your device directly on your TV.

Important! Accessory sold separately.


Note: There is no need to be connected to a Wi-Fi network or to be logged into your Samsung Account to use this feature.

AllShare Cast Hub establishes a Wi-Fi Direct connection between the device and the hub.

Connecting AllShare Cast Hub

To connect your AllShare Cast Hub hardware:

AllShare Cast (with Hub accessory) This feature functions with an external AllShareCast Hub to fully mirror what is currently displayed on your device to the external TV.

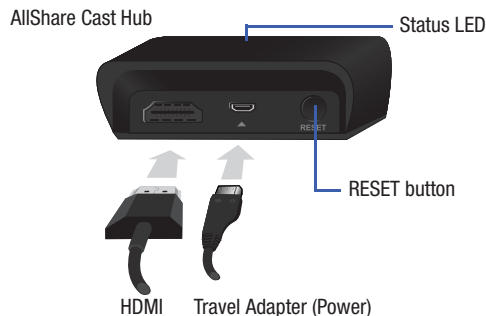

1. Connect the AllShare Cast hub to a power source via the USB Travel Adapter.

Note: The status LED begins to blink solid red to indicate it has begun the start up process.

LED Color/Patterns	Description
Red - Solid	Indicates the AllShare Cast Hub is booting or processing.
Red - Blinking	Indicates the AllShare Cast Hub is in standby mode (ready for connection).
Blue - Solid	Indicates the AllShare Cast Hub is ready to be connected with a new device.

2. Connect your TV to the AllShare Cast Hub via an HDMI cable (A-to-A cable) as shown above.
3. Change the source input on your TV to match the input port used by the incoming HDMI cable.

Note: The television screen should now display an on-screen tutorial showing you how to configure your device's AllShare Cast Hub and device settings.

To activate AllShare Cast on your device:

1. Press  →  and then tap **Settings** → **More settings** → **AllShare Cast**.
2. If not already on, touch and slide the **AllShare Cast** slider to the right to turn it on  **ON**. The slider color indicates the activation status.

Pairing AllShare Cast Hub

To pair your device and Hub for the 1st time:

1. Locate the AllShare Hub (dongle) name displayed at the bottom of the TV (showing the tutorial).
Ex: Name: **Dongle - XXXXXX**.
2. Access your device's **AllShare Cast** screen and locate the same hub/dongle name in the list.
 - Tap **Scan** if your AllShare Cast Hub (dongle) does not appear in the list.
3. Verify your AllShare Cast Hub is on (blinking red LED) and the on-screen tutorial is displaying on the connected TV.
4. Verify the previous  (**Wi-Fi Direct Active**) is displayed.

Note: The AllShare Cast Hub communicates with your paired device via a Wi-Fi Direct connection.

5. For a first time connection:
 - Press the **RESET** button (located at the rear of the hub) once and only for a second until the LED turns solid **BLUE**.
 - Quickly tap the hub name entry on your device's AllShare Cast screen.
6. Verify  (**AllShare Cast Hub Communicating**) appears at the top of the device's screen.
7. Confirm the connection by making sure both your TV and device show the same image/screen and  (**Wi-Fi Direct Communicating**) now displays on the device.

Important! The AllShare Cast Hub is a 1-to-1 connection. If a previous device was paired to the Hub and is still connected to the AllShare Cast Hub, you can not pair a new device until the first connection is stopped.

To disconnect your device from the hub:

1. Access your device's **AllShare Cast** screen and locate the current connection.
2. Tap the entry and select **End connection**.

To reconnect your device again to an existing hub:

1. Locate the AllShare Hub (dongle) name displayed at the bottom of the TV (showing the tutorial).

Ex: Name: **Dongle - XXXXXX**.

Important! Verify the LED is not a solid blue. This indicates there is another device currently connected.

2. Access your device's **AllShare Cast** screen and tap the same hub/dongle name in the list.
3. Confirm the connection by making sure both your TV and device show the same image/screen.

AllShare Cast Hub - Troubleshooting Connections

- If this is the first time you are connecting your device to a hub and the connection fails:
 - Press the **RESET** button for 1 second until it turns solid **BLUE**.
 - Quickly tap the dongle name from within your device's AllShare cast screen.

Note: This process is similar to initially pairing a Bluetooth device.

- If you have already successfully paired another device and you are trying to connect another device:
 - Only one device can be paired and in use at a time with the hub.
 - From the previously connected device's AllShare Cast screen, tap the connection and select **End connection**.
 - If you can't find the previous device:
 - Press and hold the **RESET** button (on the back of the hub), for about FOUR seconds until the LED begins to blink **RED**.
 - Access your new device's AllShare Cast screen and rescan for the existing hub/dongle.

- Press the **RESET** button on the hub for ONE second until the LED turns **BLUE**.
- Tap the entry from your device's AllShare Cast screen and confirm connection.

Important! The AllShare Cast Hub is a 1-to-1 connection. If a previous device was paired to the Hub and is still connected to the AllShare Cast Hub, you can not pair a new device until the first connection is stopped.

- I have a new device and the hub is connected but it doesn't show up in my list:
 - Force the hub to disconnect from any previously paired devices:
 - Press and hold the **RESET** button (on the back of the hub), for about FOUR seconds until the LED begins to blink **RED**.
 - Access your new device's AllShare Cast screen and rescan for the existing hub/dongle.
 - Press the **RESET** button on the hub for ONE second until the LED turns **BLUE**.

- Tap the entry from your device's AllShare Cast screen and confirm connection.

AllShare Cast Hub - Streaming Videos

The hub supports streaming of purchased media content that contains DRM (Digital Rights Management).

Note: You can control the volume level of your playback file being shown on your TV by using your device's Volume buttons. For additional volume, use your TV's volume controls.

To stream video content to your Tv via AllShare Cast Hub:

1. Connect your AllShare Cast Hub to your TV. For more information, refer to “*Connecting AllShare Cast Hub*” on page 220.
2. Verify your TV is set to the same source as your hub and that you can see the on-screen connection and configuration tutorials.
3. On your device, press  →  and then tap **Settings → More settings → AllShare Cast**.

4. In a single motion touch and slide the **AllShare Cast** slider to the right to turn it on  **ON**. A list of available hubs will appear on the screen.
5. Press the **RESET** button on the back of the hub once (LED turns blue) and tap the dongle entry from your device's list.
– or –
If reconnecting, verify the hub's LED is blinking red and then tap the dongle entry from your device's list.
6. Verify  (**AllShare Cast Hub Communicating**) appears at the top of the device's screen.
7. Verify the previous  (**Wi-Fi Direct On**) now displays  (**Wi-Fi Direct Communicating**).
8. To playback a user-created video:
 - From the Home screen, tap  (**Apps**) →  (**Gallery**).
 - Locate your video and tap it to begin playback. Your TV now shows the video

9. To playback a DRM purchased video:
 - From the Home screen, tap  (**Apps**) →  (**Gallery**). Locate your video and tap it to begin playback.
 - From the Home screen, tap  (**Apps**) →  (**Play Movies & TV**). Locate your purchased video and tap it to begin playback.
 - From the Home screen, tap  (**Apps**) →  (**Video Player**). Locate your video and tap it to begin playback.

T-Mobile TV

T-Mobile TV is an application that allows you to get live TV and Video on Demand.

1. From the Home screen, tap  (**Apps**) →  (**T-Mobile TV**). The T-Mobile Terms and Conditions page displays.

Note: A data plan is required to use this feature. Charges may apply. Please contact your service provider for further details.

2. Tap **Accept** if you accept the Terms and Conditions.
– or –
Tap **Exit** to close the application.

Note: T-Mobile TV must be initialized over a cellular network before it can be used. During this initial registration process, any Wi-Fi connections must be disabled.

3. Tap **Disable Wi-Fi** if you currently have an active Wi-Fi connection.

4. Tap **Start Trial** to begin a free 30-day trial of the service.
– or –

Tap **Continue** to keep viewing the free content or **Purchase Options** to buy the paid features.

5. Tap any of the following categories to begin viewing: **Home**, **Now Playing/Up Next**, **On Demand**, **My Media**, **More Info**, and **Browse**.

YouTube

YouTube is a video sharing website on which users can upload and share videos, and view them in MPEG-4 format.

1. From the Home screen, tap  (**Apps**) →  (**YouTube**).
2. When the screen loads you can begin searching and viewing posted videos.
3. Press  → **Settings** → **General** → **High quality on mobile** if you prefer high quality output.

Section 9: Applications and Development

This section contains a description of each application that is available in the Applications Menu, its function, and how to navigate through that particular application. If the application is already described in another section of this user manual, then a cross reference to that particular section is provided.

Tip: To open applications quickly, add the icons of frequently-used applications to one of the Home screens. For more information, refer to “*Customizing the Screens*” on page 67.

You can also add an application icon as a Primary Shortcut that will display on all Home screens. If you add an application as a primary shortcut, the application icon will not be displayed in the Applications menu. For more information, refer to “*Adding and Removing Primary Shortcuts*” on page 71.

Applications

The Applications list provides quick access to all the available applications on the phone.

AllShare Play

This application wirelessly synchronizes your Samsung mobile phone with your TV, streams content and even keeps tabs on who calls or sends text messages with real-time, on-screen monitoring. Samsung’s AllShare makes staying connected easy.

Allows users to share their in-device media content with other external devices using DLNA certified™ (Digital Living Network Alliance) Devices. These external devices must also be DLNA-compliant. Wi-Fi capability can be provided to TVs via a digital multimedia streamer.

AllShare Definitions:

AllShare	This uses the traditional DLNA technology for sharing multimedia (photos, videos, or music) to your Samsung Smart TV and other DLNA devices.
-----------------	--

AllShare Play

This new feature builds on the previous AllShare feature. It includes features such as Web storage integration and social networking integration. This is a Web service that requires using a Samsung account.

Group Cast

A subset feature of AllShare Play, this allows you to mirror photos and multimedia presentations with other members of your current Wi-Fi group. Users must be on the same Wi-Fi and provide an access code to join the group.

AllShare Cast (with Hub accessory)

This feature functions with an external Wi-Fi AllShareCast Hub connected to a TV. It allows you to fully mirror what is currently displayed on your device to the external TV.

Important! You must first connect both of your communicating devices to the same Wi-Fi and be using an active/registered Samsung account prior to using this application.

For more information, refer to “*Wi-Fi settings*” on page 292.

For more information, refer to “*Creating a Samsung Account*” on page 21.

Important! The Samsung account manages the access information (username/password) to several applications, such as AllShare Play.

1. From the Home screen, tap  (Apps) →  (AllShare Play).
2. If prompted, read the on-screen message about network charges and tap **Yes** to continue and return to the main AllShare Play screen.

Note: If the main screen still shows a Sign in box, close the application and restart it.

3. Tap **Start** and follow the on-screen prompts.

For more information, refer to “AllShare Play” on page 214.

Amazon

This mobile application provides a user with access to the online Amazon website.

1. From the Home screen, tap  (**Applications**) →  (**Amazon**).
2. Log in to the site and follow the on-screen instructions.

Calculator

Using this feature allows you to use your device as a calculator. The calculator provides the basic arithmetic functions; addition, subtraction, multiplication, and division. You can also use this as a scientific calculator.

1. From the Home screen, tap  (**Apps**) →  (**Calculator**).
2. Enter the first number using the numeric keys.
3. Enter the operation for your calculation by tapping the **Plus**, **Minus**, **Multiplication**, or **Division** key.
4. Enter the next number.
5. To view the result, tap the **= (equals)** key.
6. Repeat steps 1 to 4 as many times as required.

Note: Place the screen in Landscape mode to reveal additional scientific functions.

Calendar

With this feature, you can consult the calendar by day, week, or month, create events, and set an alarm to act as a reminder. Google Calendar is built into the phone and synchronizes both new and existing entries between your phone and your online Google account.

Important! You should previously add an account (Facebook, Microsoft Exchange ActiveSync, or Google) prior to using the Calendar.

1. From the Home screen, tap  (**Apps**) →  **31** (**Calendar**). Tap  (**Show More**) to display these tabs:
 - **Year:** displays the Year view.
 - **Month:** displays the Month view.
 - **Week:** displays the Week view.
 - **Day:** displays the Day view.
 - **List:** displays the events in a List view.

- **Task:** allows you to search for tasks.
2. Tap  (**Create event**) to create a new Calendar event.

— or —

Tap **Today** to display the current date indicated by a blue box, then press  and select one of the following options:

- **Go to:** displays a specific date.
- **Delete:** allows you to delete All events, All events before today, or an individual event.
- **Search:** allows you to search within your current events.
- **Sync:** synchronizes your current calendar events with your available accounts (such as Gmail, Microsoft Exchange ActiveSync, etc..).
- **Settings:** displays a list of configurable settings.

Creating a Calendar Event

1. From the Home screen, tap  (**Apps**) →  (**Calendar**).
2. Tap  to access the various calendar tabs.
3. Within the Year, Month, Week, and Day tabs, tap  (**Create event**).

Writing On a Calendar

1. From the Home screen, tap  (**Apps**) →  (**Calendar**).
2. Tap  (**Markup Calendar**) to access the calendar's handwriting functions. Here you markup on the on-screen calendar, erase markups, go forward/back in your actions history, add a new event, or go back to normal function.
3. Make your marks on the calendar.
4. Tap  (**Return to Calendar**) to return to the normal calendar function.

Calendar Settings

Using the Calendar settings you can select the day with which you want the calendar to begin. You also select how you want to view the calendar, by Month, Week, or Day or determine how to manage events, notifications, sounds, and defaults reminders.

1. From the Home screen, tap  (Apps) →  .
2. Press  → **Settings**.
3. Tap **Month view styles** and select a style: **Calendar view + list** or **Calendar view + pop-up**.
4. Tap **Week view** and select a style: **Timeline** or **Analog**.
5. Tap **First day of week** and select either **Local default**, **Saturday**, **Sunday** or **Monday**.
6. Tap **Hide declined events** to activate this option. A check mark indicates selection.
7. Tap **Lock time zone** (to lock event time based on your current user-selected time zone). Select a time zone from within the **Select time zone** field.
8. Tap **Show week number** to display the week numbers along the side of the week entries.

9. Tap **Calendars** and select the type of general synchronization settings you want. A check mark indicates selection.
10. Tap **Handwriting settings** and configure handwriting-related calendar settings such as: First day of week and Show week number.
11. Tap **Set alerts & notifications** to adjust the event notification method. Choose from: **Alert**, **Status bar notification**, and **Off**.
12. Tap **Select ringtone** to assign a ringtone to a calendar event notification.
13. Tap **Vibration** to set the Event notification tone to vibrate.
14. Tap **Default reminder time** to assign a default time frame for event reminders.
15. Tap **Notifications while screen is off** to display notifications on the full screen while it is turned off.
16. Tap **Quick responses** to edit your default quick responses for outbound emails. These are default responses similar to those used by text templates.

17. Tap **Swipe with two fingers** to change the way events are displayed when swiped.

Camera

Use your 8.0 megapixel camera feature to produce photos in a JPEG format. The Camcorder shoots High Definition video in an MP4 format.

Note: A microSD card is no longer necessary before you take pictures or shoot video.
It is recommended that you confirm your default storage location for images and videos.

- From the Home screen, tap  (Apps) →  (Camera).

For more information, refer to “Using the Camera” on page 172.

ChatON

Provides a global mobile communication service where you can chat with more than 2 buddies via a group chat. In this service you can send pictures, videos, animation messages (Scribbles), audio, Contacts, Calendar entries, and Location information. Create special animated messages for your friends using handwritten messages, text, photos, background images and music.

1. From the Home screen, tap  (Apps) →  (ChatON).
2. Log in to the service and follow the on-screen instructions.

For more information, visit: <https://web.samsungchaton.com>.

For more information, refer to “ChatON” on page 167.

Clock

Here you can set an Alarm, configure and view the World clock, use a Stopwatch, set a Timer, or use a Desk Clock. The applications display in a tabular format and quickly accessed with the touch of a finger.

Setting an Alarm

1. From the Home screen, tap  (Apps) →  (Clock).
2. From the **Alarm** tab, tap  (Create alarm).
3. Use the arrow symbols to enter adjust the hour, and minutes, then tap **AM** or **PM** (toggles depending on which was last selected).
4. Tap the **Alarm repeat** field and touch the number of times you want this alarm to repeat. Selections are: day blocks or **Repeat weekly**. Selected day blocks turn blue when active.
5. Tap the **Alarm type** field and select one of the following: **Melody**, **Vibration**, **Vibration and melody**, or **Briefing**.
6. Tap **More** to configure additional alarm settings such as volume slider, Alarm tone, Location alarm, Snooze, Smart alarm, and assign a name.

To configure additional alarm settings:

1. Tap **More** to access additional alarm settings.
2. Slide the slider bar left or right in the **Alarm volume** field to decrease or increase the alarm volume. A sample of the volume level plays.
3. Tap the **Alarm tone** field and either select an available tone or select **Add** to use locate a sound to use as an alarm ringtone. Tap **OK** to activate the ringtone.
4. Move the **Location alarm** slider to the On position to then use a map location to activate the alarm event. Activating this feature causes the alarm to only be activated if you are at the specified location.
 - Tap a location on the map or enter a location into the available field.
 - Tap **Done** to store the new location.
5. Move the **Snooze** slider to the right to activate the feature. Tap the field to assign a **Interval** time (3 minutes, 5 minutes, 10 minutes, 15 minutes, or 30 minutes) and **Repeat** (1 time, 2 times, 3 times, 5 times, and 10 times).

- **Interval** indicates the length of time the alarm will remain silent between alarm notifications (snooze time).
 - **Repeat** indicates the numbers of snooze sessions that are assigned to this alarm. How many times will the snooze silence the alarm.
6. Move the **Smart alarm** slider to the right to activate this feature which slowly increases screen brightness and the volume of nature tones to simulate dawn breaking. Tap the field to assign a interval time (3 min, 5 min, 10 min, 15 min, or 30 min) and nature tone (Fairy fountain, Birdsong by the lake, Sparkling mist, The secret forest, Serenity, or Gentle spring rain).
- **Interval** category describes the length of time the alarm will remain silent between alarm notifications (snooze time).
 - **Tone** category provides one of several nature sounds that are used as the alarm tone.
7. Tap the **Name** field and enter a name for this Alarm.
8. Tap **Save** to store the new alarm event.

Turning Off an Alarm

- To stop an alarm when it sounds, touch and slide  to any direction.

Setting the Snooze Feature

- To activate the Snooze feature after an alarm sounds, touch and slide  to any direction. Snooze must first be set in the alarm settings.

Note: Pressing the volume key all the way down also snoozes the alarm.

Deleting an Existing Alarm

1. From the Home screen, tap  (Apps) →  (Clock).
2. Touch and hold an on-screen alarm event.
3. Tap **Delete**.

Using the World Clock

This feature allows you to find out what time it is another part of world.

1. From the Home screen, tap  (Apps) →  (Clock).
2. Tap the **World Clock** tab.
3. Tap **Add city** then scroll and select the desired city, or tap in the search field to locate a city.

To assign DST settings:

1. Locate a desired city from the World Clock list.
2. Touch and hold a city and select **DST settings**.
3. Select a DST setting (Automatic, Off, or 1 hour).
If Daylight Savings Time is selected, a sun symbol appears next to the World Clock city listing.

Using the Stopwatch

This feature allows you to capture elapsed time while letting the stopwatch keep running.

1. From the Home screen, tap  (Apps) →  (Clock) → **Stopwatch** tab.
2. Tap **Start** to start the stopwatch counter.
3. Tap **Lap** to begin the lap time counter.
4. Tap **Stop** to stop the counter.
5. Tap **Restart** to restart the lap counter. You can have multiple lap times.
6. Tap **Reset** to reset the counter.

Setting a Timer

1. From the Home screen, tap  (Apps) →  (Clock) → **Timer** tab.
2. Tap the **Hours**, **Minutes**, or **Seconds** field and use the on-screen keypad to enter the hour, minute, or seconds. The timer plays an alarm at the end of the countdown.
3. Tap **Start** to start the timer.
4. Tap **Stop** to stop the timer or **Reset** to reset the timer and start over.

5. Tap **Restart** to resume the timer counter.

Configuring a Desk Clock

This feature lets you activate an on-screen clock that can be viewed when the device is docked.

- From the Home screen, tap  (Apps) →  (Clock) → **Desk clock** tab.

Contacts

The default storage location for saving phone numbers to your Contacts List is your phone's built-in memory.

- From the Home screen, tap  (Apps) →  (Contacts).

For more information, refer to “*Contacts List*” on page 119.

Downloads

Provides quick access to tabs containing a list of your current downloaded files (Internet and Other).

1. From the Home screen, tap  (Apps) →  (Downloads).
2. Tap an available file category tab (**Internet downloads** or **Other downloads**) and select the desired file.

Dropbox

Works to provide access to your desktop files directly from your device. This applications allows you to bring your files with you when you're on the go, edit files in your Dropbox from your device, upload photos and videos to Dropbox, and share your selected files freely with family and friends.

The in-device application works in conjunction with a partner program placed on a target computer using an active Internet connection.

Dropbox creates a folder that automatically synchronizes its contents across all of your connected devices on your account. Update a file to your Dropbox on your computer, and its automatically updated to the same folder on your other devices.

Download the Desktop application

1. Use your computer's browser to navigate to:
<http://www.dropbox.com/>.
2. Follow the on-screen setup and installation instructions on your target computer containing the desired files.

Important! The computer application must be installed on the computer containing the desired files. This computer must have an active Internet connection.

Note: It might be necessary to configure your router's firewall settings to allow this application to gain access to the Internet.

Accessing Dropbox on your Device

1. From the Home screen, tap  (Apps) →  (Dropbox) → **Start**.
2. Tap **I'm already a Dropbox user**, enter your current account credentials, and tap **Log in**.
– or –

Tap **I'm new to Dropbox** and follow the on-screen instructions to register for a new account.

3. Follow the on-screen instructions.
4. Initially, you will need to configure your **Camera Upload** parameters. Choose from Wi-Fi only or Wi-Fi or data plan.
 - Tap **Turn on** after making your selection.

Caution! Enabling this feature can incur data charges (depending on your plan) if the Wi-Fi or data plan is selected.

5. Tap  (**Access Dropbox**) at the top of the application window to access the files and folders you are currently sharing from your computer.
6. Tap an item to open it.

7. Touch and hold an on-screen item to choose from additional options:
- **Share** via applications such as: Copy link, Bluetooth, ChatON, Email, Flipboard, Gmail, Google+, Messaging, S Note, or Wi-Fi Direct.
 - **Favorite** to tag an image as a favorite.
 - **Delete** to erase the current file.
 - **Rename** to rename the current file.
 - **Export** to transfer the current file to another location via: Save to SD card, Bluetooth, ChatON, Email, Facebook, Flipboard, Gmail, Google+, Group Cast, Messaging, Paper Artist, Picasa, S Note, Wi-Fi Direct, or Gallery.
8. Tap  (**Up a Directory Level**) at the top of the application window to navigate up a single level with every tap.
9. Tap  (**Tag as Favorite**) at the top of the application window to assign favorite files.
10. Tap  (**Search**) at the top of the application window to search for files located in your Dropbox account.

Manually uploading a Picture to Dropbox

1. From the Home screen, tap  (**Apps**) →  (**Camera**).
2. After the image is taken, tap the Image Viewer box at the bottom right. This previews the current image.
3. Tap the image to reveal the image options at the top of the screen.
4. Tap  →  (**Dropbox**) select a folder location and tap **Upload**.

Note: If your share folder is located on your computer, you will momentarily receive an on-screen popup notifying you that a new image was uploaded to your shared Dropbox folder.

Email

Email enables you to review and create email using most email services. The device alerts you when you receive an email message.

- From the Home screen, tap  (**Apps**) →  (**Email**).

For more information, refer to “Using Email” on page 155.

Flipboard

This application creates a personalized digital magazine out of everything being shared with you. Access news stories, personal feeds and other related material. Flip through your Facebook newsfeed, tweets from your Twitter account, photos from friends and much more.

1. From the Home screen, tap  (Apps) →  (Flipboard).
2. Tap **Get started**, select some on-screen categories and tap **Done** to create a new profile.
– or –
Tap **Sign In** to log into your previously created profile.
3. Follow the on-screen instructions.

Gallery

The Gallery is where you view photos and play back videos. For photos, you can also perform basic editing tasks, view a slideshow, set photos as wallpaper or caller image, and share as a picture message.

- From the Home screen, tap  (Apps) →  (Gallery).

For more information, refer to “*The Gallery*” on page 195.

Game Hub

Provides a premium one-stop service center that let's you play, connect and share games on compatible Samsung Android devices. Game Hub comes pre-packaged with some of the most popular social and premium HD games that have been specially customized to play on your device.

1. From the Home screen, tap  (Apps) →  (Game Hub).
2. Read the on-screen disclaimer and tap **Confirm**.
3. Follow the on-screen instructions and navigate to your favorite games and services.

Gmail

Google Mail (Gmail) is a web-based email service. Gmail is configured when you first set up your phone. Depending on your synchronization settings, Gmail can automatically synchronize with your Gmail account on the web.

- From the Home screen, tap  (Apps) →  (Gmail).

For more information, refer to “*Using Google Mail*” on page 165.

Google

Use Google Search to search the Web.

- From the Home screen, tap  (Apps) →  (Google) and enter the search text.
– or –

Tap  on the Google Search bar and say the search information.

Google +

Google+ makes messaging and sharing with your friends a lot easier.

1. Sign on to your Google account. For more information, refer to “*Creating a New Google Account*” on page 19.
2. From the Home screen, tap  (Apps) →  (Google+).

For more information, refer to “*Google +*” on page 169.

Group Cast

This application lets you share documents, photos or music in real-time with other connected friends.

Important! To share a Group Cast, all users must be connected to the same Wi-Fi access point.

1. From the Home screen, tap  (Apps) →  (Group Cast).
2. Read the various on-screen information and tap **Next** to continue.
3. Follow the on-screen tutorials.

To share a picture with other Group Cast users:

1. From the Home screen, tap  (Apps) →  (Group Cast).
2. Tap the available Wi-Fi indicated at the top and verify you are connected to an active Wi-Fi. This must be the same Wi-Fi being used by your external recipients.
3. Tap **Share Picture** and then select a image by placing a green checkmark on it and tapping **Done**.
4. Enter a PIN code and tap **Done** (to secure you session). Pass this PIN along to all your recipients.

5. Your recipients must then:

- Launch the Group Cast feature on their device.
- Tap the active Group Cast session (shown at the bottom of the application screen).
- Your recipients must enter the PIN code you created for the session.

You can now interact and draw with the on-screen image, users will instantaneously see the same gestures and also be able to interact.

Help

Provides access to built-in Help information.

1. From the Home screen, tap  (Apps) →  (Help).
2. Select an on-screen topics and follow the built-in navigations.

Internet

Open the browser to start surfing the web. The browser is fully optimized and comes with advanced functionality to enhance the Internet browsing feature on your phone.

- From the Home screen, tap  (Apps) →  (Internet).

For more information, refer to “Internet” on page 269.

Kies air

Kies air allows you to sync your Windows PC wirelessly with your phone provided they are both on the same Wi-Fi network. You can view and share call logs, videos, photos, music, bookmarks, ringtones, and even send SMS messages from your PC.

- From the Home screen, tap  (Apps) →  (Kies air).

For more information, refer to “Kies Air” on page 284.

Latitude

Google Latitude allows you and your friends share locations and status messages with each other. It also lets you send instant messages and emails, make phone calls, and get directions to your friends’ locations.

Important! You must sign in to your Google account, enable Wi-Fi, and enable the Location feature before you can use this application. For more information, refer to “Wi-Fi settings” on page 292.

Note: Although you do not have to enable location services in order to use Latitude, it is recommended for best accuracy.

1. From the Home screen, tap  (Apps) →  (Latitude) →  →  (Latitude) to display your Latitude friends.

Important! For best results, it is recommended that you enable all of your location services. For more information, refer to “Location Services” on page 327.

2. Tap **You have not enabled Location reporting on this device** to navigate to the Location settings menu where you can enable the Latitude location services.
3. Tap **Sharing currently disabled** to be taken to the Location settings menu where you can enable Location sharing.
4. Tap **MAP VIEW** to return to the main application.

Sharing your Location with Friends

1. From the map view, if not already displaying the Latitude icon at the top right, tap the bottom-right arrow from  →  (**Latitude**) to display your Latitude friends. At first, only your name is displayed.
2. From the bottom of the Latitude map screen, tap **FRIENDS LIST** →  (**Add friends**).
– or –
Tap  (**Add friends**).
3. Tap **Select from Contacts** or **Add via email address**.
4. Tap a contact or enter an email address, then tap **Add friends**.

5. Tap **Yes** at the **Send sharing requests** prompt.

Your friend will receive an email or text message with your location marked on a map. They will also receive instructions on how to view your location from the web or use Latitude on their phone or tablet provided it is available. Once they acknowledge your request, their location will display on your device. They can share their location from their computer, phone, or tablet. For more information, go to <http://www.google.com/latitude>.

6. To view the map, tap **MAP VIEW**.

Latitude Options

- From the Latitude MAP VIEW ( is shown in the upper-left) display, select either:
 - **FRIENDS LIST:** allows you to access and edit your current Friends list.
- or –
- From the Latitude map, press  and select one of the following:
 - **Clear Map:** allows you to remove all markings and layers from the map.

- **Make available offline:** allows you to use the application even while offline.
- **Search:** allows you to search for a place of interest.
- **Directions:** displays navigation directions to a location from a starting point.
- **Layers:** allows you to switch map views:
 - **Traffic:** (available only in selected areas) Real-time traffic conditions are displayed over roads as color-coded lines. Each color represents how fast the traffic is moving.
 - **Satellite:** Maps uses the same satellite data as Google Earth. Satellite images are not real-time. Google Earth acquires the best imagery available, most of which is approximately one to three years old.
 - **Terrain:** combines a topographical view of the area's terrain with the current map location.
 - **Transit Lines:** displays the overlapping transit lines on your map.
 - **Latitude:** allows you to see your friend's locations and share your location with them.
 - **My Maps:** displays a list of your preferred maps.
 - **Bicycling:** displays the overlapping cycling trails on your map.
- **Wikipedia:** displays any Wikipedia markers and info on your map.
- **Settings:** allows you to select the following additional options:
 - **Display:** allows you to enable/disable the Zoom Buttons, Scale Bar, and configure Bubble actions.
 - **Offline and cache:** allows you to set options to pre-fetch map tiles when not using Wi-Fi and to clear the cache that holds the map tiles. Choose from: Automatic caching and Clear all map titles.
 - **Location settings:** lets you access and configure the location settings.
 - **Labs:** this is a testing ground for experimental features that aren't ready for primetime. They may change, break or disappear at any time. Click on a Lab to enable or disable it.
 - **What's New:** provides access to the Play Store from where you can update the application manually.
 - **About:** displays general information about Google maps such as Version, Platform, Locale, Total data sent, Total data received, Free memory, etc.
 - **Feedback:** allows you to provide application feedback.

- **Terms, Privacy & Notices:** displays the Terms and Conditions, Privacy Policy, or Legal Notices information. Select the desired information from the pop-up menu.

- **Help:** provides help information.

Local

Local (formerly known as Google Places) displays company logos on a layer of Google Maps. When viewing an area you can quickly locate a business or person, find out more information about the business, see coupons, public responses, and more.

1. From the Home screen, tap  (Apps) →  (Local).
2. Tap  (Search) and then use the **Search Maps** field to manually enter a desired place or choose from among the various categories. Matches are filtered by those closest to your current location.
3. Locate and tap one of the listed places (Restaurants, Cafes, Bars, Attractions, [user added searches], RECOMMENDATIONS, or IN THIS AREA a list of places within this category displays.
4. Tap the Maps icon to launch the related maps feature.

5. Press  and then tap **Add a search**. The functions adds additional search shortcuts to the places screen.

Maps

Google Maps allow you to track your current location, view real-time traffic issues, and view detailed destination directions. There is also a search tool included to help you locate places of interest or a specific address. You can view locations on a vector or aerial map, or you can view locations at the street level.

Important! Before using Google Maps you must have an active data (3G/4G) or Wi-Fi connection. The Maps application does not cover every country or city.

- From the Home screen, tap  (Apps) →  (Maps).

Important! For best results, it is recommended that you enable all of your location services. For more information, refer to “*Location Services*” on page 327.

Enabling a Location source

Before you use Google Maps and find your location or search for places of interest, you must enable a location source. To enable the location source you must enable the wireless network, or enable the GPS satellites.

Important! The more location determining functions are enabled, the more accurate the determination will be of your position.

1. Press  →  and then tap **Settings** → **Location services**.
2. Tap **Use wireless networks** allows apps to use data from sources such as Wi-Fi and mobile networks to provide a better approximation of your current location.
3. Tap **Use GPS satellites** to enable the GPS satellite.
4. Tap **Location and Google search** to allow Google to use your location data to improve your search results and other services.

Tip: Enabling this feature allows you to locate places of interest at the street-level. However, this also requires a clear view of the sky and uses more battery power.

Opening Maps

1. From the Home screen, tap  (**Apps**) →  (**Maps**).
2. Tap the upper-right My location button to find your location on the map with a blinking blue dot.
3. Locate the bottom row of the buttons to access additional options:
 - **Search:** allows you to search for a place of interest.
 - **Directions:** displays navigation directions to a location from a starting point.
 - **Local:** provides access to the places menu where you can quickly locate a business or person, find out more information about a business, see coupons, public responses, and more (Local). Locate and tap one of the listed places (Restaurants, Cafes, Bars, Attractions, or select from available categories such as Entertainment, ATMs, Gas stations, Hotels, Post office, or Taxi.)

- **Layers:** allows you to switch map views:
 - **Traffic:** (available only in selected areas) Real-time traffic conditions are displayed over roads as color-coded lines. Each color represents how fast the traffic is moving.
 - **Satellite:** Maps uses the same satellite data as Google Earth. Satellite images are not real-time. Google Earth acquires the best imagery available, most of which is approximately one to three years old.
 - **Terrain:** combines a topographical view of the area's terrain with the current map location.
 - **Transit Lines:** displays the overlapping transit lines on your map.
 - **Latitude:** allows you to see your friend's locations and share your location with them.
 - **My Maps:** displays a list of your preferred maps.
 - **Bicycling:** displays the overlapping cycling trails on your map.
 - **Wikipedia:** displays any Wikipedia markers and info on your map.

4. Press and select one of the following options:

- **Clear Map:** allows you to remove all markings and layers from the map.

- **Make available offline:** allows you to use the application even while offline.
- **Settings:** allows you to select the following additional options:
 - **Display:** allows you to enable/disable the Zoom Buttons, Scale Bar, and configure Bubble actions.
 - **Offline and cache:** allows you to set options to pre-fetch map tiles when not using Wi-Fi and to clear the cache that holds the map tiles. Choose from: Automatic caching and Clear all map titles.
 - **Location settings:** lets you access and configure the location settings.
 - **Labs:** this is a testing ground for experimental features that aren't ready for primetime. They may change, break or disappear at any time. Click on a Lab to enable or disable it.
 - **What's New:** provides access to the Play Store from where you can update the application manually.
 - **About:** displays general information about Google maps such as Version, Platform, Locale, Total data sent, Total data received, Free memory, etc.
 - **Feedback:** allows you to provide application feedback.

- **Terms, Privacy & Notices:** displays the Terms and Conditions, Privacy Policy, or Legal Notices information. Select the desired information from the pop-up menu.

- **Help:** provides help information.

Media Hub

- From the Home screen, tap  (Apps) →  (Media Hub).

For more information, refer to “Media Hub” on page 199.

Messaging

This application allows you to use the Short Message Service (SMS) to send and receive short text messages to and from other mobile phones.

You can also use the Multi Media Service (MMS) to create multimedia messages to send and receive from other mobile phones.

- From the Home screen, tap  (Apps) →  (Messaging).

For more information, refer to “Messages” on page 141.

Messenger

Messenger allows you to bring groups of friends together into a simple group conversation. When you get a new conversation in Messenger, Google+ sends an update to your phone.

1. Sign on to your Google account. For more information, refer to “Creating a New Google Account” on page 19.
2. From the Home screen, tap  (Apps) →  (Messenger).
– or –

From the Google+ application, select **Messenger**.

For more information, refer to “Messenger” on page 170.

Mobile HotSpot

Provides access to the Tethering and portable HotSpot menu where you can use either the USB tethering or Mobile HotSpot functionality.

1. From the Home screen, tap  (Applications) →  (Mobile HotSpot).
2. Activate the desired connection method.

For more information see either “USB Tethering” on page 288 or “Mobile HotSpot” on page 289.

Music Hub

Samsung Music Hub makes your device a personal music manager and lets you access, buy, and download millions of music tracks.

- From the Home screen, tap  (Apps) →  (Music Hub).

For more information, refer to “*Music Hub*” on page 212.

Music Player

This application allows you to play music files that you have stored on your microSD card. You can also create playlists.

- From the Home screen, tap  (Apps) →  (Music Player).

For more information, refer to “*Music Player*” on page 208.

My Files

This application allows you to manage your sounds, images, videos, bluetooth files, Android files, and other memory card data in one convenient location. This application allows you to launch a file if the associated application is already on your phone (ex: MP4).

- From the Home screen, tap  (Applications) →  (My Files).

Note: Navigation in this viewer works on a hierarchy structure with folders, subfolders, etc.

Note: The application lets you view supported image files and text files on both your internal storage and microSD card.

Opening and Navigating within Files

DCIM is the default location for pictures or video taken by the device. These files are actually stored in the DCIM folder location.

1. From the Home screen, tap  (**Applications**) →  (**My Files**).
2. Tap **All files** and select a folder, then scroll down or up until you locate your selected file.
 - **Home tab**  allows you to back up to the root directory.
 - **Up tab**  allows you to back up into a higher directory.
 - Press  and then tap **View by** to change the way the files are displayed on-screen. Choose from: **List**, **List and details**, or **Thumbnail**.
 - Press  for these additional options: **Create folder**, **Search**, **View by**, **Sort by**, **Settings**, and **Select all**.
 - Select a file or folder and from the top right area of the application, tap  (**Menu**) to access additional functions such as: Move, Copy, Rename, or Details.
3. Once you have located your file, tap the file name to launch the associated application.

Navigation

Google Maps Navigation (Beta) is an internet-connected turn-by-turn, GPS navigation system with voice guidance.

Caution! Traffic data is not real-time and directions may be wrong, dangerous, prohibited, or involve ferries.

Important! To receive better GPS signals, avoid using your device in the following conditions:

- inside a building or between buildings
 - in a tunnel or underground passage
 - in poor weather
 - around high-voltage or electromagnetic fields
 - in a vehicle with tinted windows
-

1. From the Home screen, tap  (**Apps**) →  (**Navigation**).
2. Read the on-screen disclaimer regarding the current release status of the Navigation app and tap **Accept**.

Enabling GPS Location

1. Press  →  and then tap **Settings** → **Location services**.
2. Tap **Use wireless networks** allows apps to use data from sources such as Wi-Fi and mobile networks to provide a better approximation of your current location.
3. Tap **Location and Google search** to allow Google to use your location data to improve your search results and other services.

Navigation options

1. From the Home screen, tap  (**Apps**) →  (**Navigation**). The navigation application can be configured from the main screen.
2. If prompted, read the on-screen disclaimer and tap **Accept**.
3. Choose from the following on-screen options:
 - **Driving/Walking**  : tap to configure the method of travel. Selection of Walking would negate the need to track traffic jams and obstructions.
 - **Speak destination**: allows you to use the voice recognition feature to search for matching locations in your area.

- **Type destination**: allows you to manually enter a destination address (via the on-screen keypad).
- **Go Home**: allows you to return to a designated “Home” location.
 - When prompted initially to setup a home address, enter the location into the **Enter an address** field and tap Save.
- **Map**: enables the on-screen real-time map functionality.

Navigation Map options

Once on the map screen, you can access the following features:

- **Destination**: returns you to the previous Navigation options screen.
- **Search by voice**: Speak your destination instead of typing.
- **Layers**: allows you to switch map views:
 - **Traffic view**: (available only in selected areas) Real-time traffic conditions are displayed over roads as color-coded lines. Each color represents how fast the traffic is moving.
 - **Satellite**: Maps uses the same satellite data as Google Earth. Satellite images are not real-time. Google Earth acquires the best imagery available, most of which is approximately one to three years old.

- **Parking:** displays parking information relative to your current location.
- **Gas stations:** displays gas station location relative to your current location.
- **ATMs & banks:** displays ATM and Bank locations relative to your current location.
- **Restaurants:** displays restaurant and eatery locations relative to your current location.

While on the map screen, press  to access additional options:

- **Set destination:** returns you to the navigation options screen where you can access a destination by either Speaking, Typing, or selecting from a Contacts entry or Starred Place.
- **Search:** manually search for a destination address, place, name of business, or even a type of business.
- **Layers:** allows you to switch map views. See previous description.
- **Settings:** provides access to both Power settings (Screen dimming) and Information (Terms, privacy & notices).
- **Exit navigation:** terminates the application.

- **Help:** requires selecting either the Internet or Popup Browser option to review online help.

Need for Speed Most Wanted

This application provides access to a built-in game.

1. From the Home screen, tap  (Apps) →  (Need for Speed Most Wanted).
2. Follow the on-screen instructions.

Paper Artist

This graphic application provides a user with the ability to start from either an empty canvas or by importing a picture from your Gallery or as a new image.

1. From the Home screen, tap  (Apps) →  (Paper Artist).
2. Follow the on-screen instructions.

Phone

This application provides the ability to make or answering calls, access the Contacts list, which is used to store contact information.

- From the Home screen, tap  (Phone).

For more information, refer to “*Call Functions and Contacts List*” on page 80.

Play Books

Formerly known as Google Books, this application allows you to read over 3 million ebooks on the go.

Build your ebooks library in the cloud with Play Books: jump right into a bestseller or select from nearly 3 million free ebooks. Personalize the reader to your liking, pick up reading where you left off on your phone or computer, and settle down with a great book on your Android phone!

1. From the Home screen, tap  (Apps) →  (Play Books).
2. If prompted, tap **Turn sync on**. This synchronizes your books you have previously selected between your Books account and your device.

3. Tap  to begin searching for both free and paid ebooks.
4. Follow the on-screen prompts to download the ebook to your device.

Play Magazines

With Google Play Magazines, you can subscribe to your favorite magazines and have them available to read on your phone at any time or any place.

1. From the Home screen, tap  (Apps) →  (Play Magazines).
2. Log on to your Google account if you have not already done so. For more information, refer to “*Signing into Your Google Account*” on page 20.
3. At the Welcome! display, tap the shop icon  to browse the full catalog.
4. Read the Google Play Terms of Service and tap **Accept**.
5. Sweep the screen to the left or right to view Categories, Featured, Top Selling, and New Arrivals.
6. Tap a magazine to see more information and subscribe.

7. Follow the on-screen instructions to subscribe to a magazine.

Play Movies & TV

This application allows you to connect to the Play Store, download a movie and then watch it instantly.

Learn more about Google Play Movies at:

<http://play.google.com/about/movies>.

- From the Home screen, tap  (Apps) →  (Play Movies & TV). A list of videos sorted on the SD card displays in the Video list.

For more information, refer to “*Play Movies & TV*” on page 202.

Play Music

Also known as Google Music, allows you to browse, shop, and playback songs purchased from the Play Store. The music you choose is automatically stored in your Google Music library and instantly ready to play or download.

- From the Home screen, tap  (Apps) →  (Play Music).

For more information, refer to “*Play Music*” on page 202.

Play Store

Formerly known as the “Android Market”, this application provides access to downloadable applications and games to install on your phone. The Play Store also allows you to provide feedback and comments about an application, or flag an application that might be incompatible with your phone.

Before using the Play Store, you must have a Google Account.

Accessing the Play Store

1. From the Home screen, tap  (Apps) →  (Play Store).
2. If not already logged in with your Google account, tap **Next**.
– or –
Tap **Existing** and enter your Google account information.
3. Tap **Accept** to agree to the Play Store terms of service.

Downloading a New Google Application

To download a new application, you will need to use your Google account to sign in to the Play Store. The home page provides several ways to find applications. The home page features applications and includes a list of item applications by category, a list of games, a link to search, and a link to My apps.

1. From the Home screen, tap  (Apps) →  (Play Store).
2. Browse through the categories, find an application you're interested in, and tap the name.

3. Read the application descriptions.

Important! If the selected application requires access to data or control of a function on your device, the Play Store displays the information the application will access.

Tap **OK** if you agree to the conditions of the application. Once you tap **OK** on this screen you are responsible for using this application on the device and the amount of data it uses. Use this feature with caution.

4. Tap **Install** → **Accept & download**.

Note: Use caution with applications which request access to any personal data, functions, or significant amounts of data usage times.

5. If prompted, follow the on-screen instructions to pay for the application.
6. Check the progress of the current download by opening the Notifications panel. The content download icon  appears in the notification area of the status bar.

7. On the main Play Store screen, press  and then tap **My Apps**, tap an installed application in the list, and then tap **Open**.
-

Tip: The newly downloaded applications display in the applications list and are shown in alphabetical order if the View Type is set to Alphabetical grid or Alphabetical list, or at the end of the list if View type is set to Customizable grid.

Note: A data plan is required to use this feature. Charges may apply. Please contact your service provider for further details.

Launching an Installed Google Application

1. From the Home screen, tap  (**Apps**).
2. Tap the newly installed application. This application is typically located on the last Applications page.

Unknown sources

This feature can be used for Android application development. The feature allows developers to install non-Play Store applications.

- Press  →  and then tap **Settings** → **Security** → **Unknown sources**.

Unknown sources displays a check mark to indicate it is active.

Note: If Unknown sources is disabled, those applications without a certificate will not be allowed to download to your device.

Manage applications

This feature allows you to manage and remove installed applications. You can also view the amount of memory or resources used as well as the remaining memory and resources for each of the applications on your device and clear the data, cache, or defaults.

- Press  →  and then tap **Settings** → **Applications manager**.

Clearing application cache and data

1. Press  →  and then tap **Settings** → **Applications manager**.
2. Tap an application in which to clear the cache or data.
3. Tap **Force stop**, **Uninstall**, **Clear data**, **Clear cache**, or **Clear defaults**.

Uninstalling third-party applications

You can uninstall any application you downloaded and installed from the Play Store.

1. Press  →  and then tap **Settings** → **Applications manager** → **All**.
2. Tap the third-party application, and from the **Application info** screen, tap **Uninstall**.

Polaris Office 4.0

Polaris Office Mobile for Android is a Microsoft Office compatible office suite. This application provides a central place for managing your documents online or offline.

The application can also open Adobe PDF (Portable Document Format) files.

1. From the Home screen, tap  (**Applications**) →  (**Polaris Office 4.0**).
2. From the Registration screen, tap **Skip** to begin using the application without registration.

– or –

Enter your email address and tap **Register** to use the currently indicated email address for registration purposes.

3. On its initial launch, navigate the application to begin use:

- **New:** creates a new office document.
- **Recent documents:** provides a scrollable list of recently accessed documents.
- **Browser:** allows you to search on your device and SD card for compatible documents.
- **Clouds:** provides access to documents stored on your configured Cloud storage location.
- **Form type:** allows you to quickly access your documents based on file type. Each type is separated into several available tabs located at the bottom of the screen, such as: Word, Excel, PowerPoint, Other, and PDF.
- **Favorites:** allows you to list only those documents tagged as Favorite.

S Note

Use this application to create notes with productivity tools that turn handwriting into typed text and correct drawn shapes, lines, and formulas to make them perfect.

1. From the Home screen, tap  (Apps) →



2. Tap **OK** to remove the Learn about application pop-up.

Tip: Tap **Menu** → **Tutorial** from the main S Note screen to learn more about the application.

S Suggest

Provides on-screen recommendations for applications that are specifically supported and made for use on your device.

Note: Access to this feature requires that you already be logged in to your Samsung account application. For more information, refer to “*Creating a Samsung Account*” on page 21.

1. From the Home screen, tap  (Apps) →  (S Suggest).
2. Read the terms and conditions.
3. Place a checkmark in the **Agree** field then tap **Agree**.
4. Select an application from one of the available categories (Picks, Categories, Games, Friends, and Info).
5. Follow the on-screen download and installation instructions.

S Voice

Launches your phone's built-in voice recognition system that allows you to initiate several common tasks without having to touch the phone. Features include: Call, Text, Navigate, Play music, Memo, and Driving mode.

- From the Home screen, tap  (Apps) →  (S Voice).

For more information, refer to “*Using S Voice*” on page 99.

Samsung Apps

Allows you to easily download an abundance of applications to your device. This includes games, news, reference, social networking, navigation, and more. Samsung Apps makes your Smartphone smarter.

Note: Access to this feature requires that you already be logged in to your Samsung account application. For more information, refer to “*Creating a Samsung Account*” on page 21.

1. From the Home screen, tap  (Apps) →  (Samsung Apps).
2. If prompted, read the on-screen disclaimer and agree to the information.
3. Follow the on-screen instructions.

Settings

This icon navigates to the sound and phone settings for your phone. It includes such settings as: display, security, memory, and any extra settings associated with your phone.

- From the Home screen, tap  (Apps) →  (Settings).

– or –

Press  →  and then tap **Settings**.

For more information, refer to “*Changing Your Settings*” on page 292.

T-Mobile My Account

This application provides you online access to account information such as your current activity, billing information, service plans, downloads, and other information.

Note: Wi-Fi connection must be disabled prior to use, this application requires use of a T-Mobile network connection.

1. From the Home screen, tap  (Apps) →  (T-Mobile My Account).
2. If prompted, follow the on-screen information for what's new in the app.

Note: Some features may require you to log into your account.

3. The application screen provides several available options:
 - **Account Info** provides access to account-specific features such as: Notifications.
 - **Device Support** provides details about your current billing summary.

- **Notifications** provides about both your current plan, other available plans and other related services.
- **MobileLife Family Organizer** provides links to other T-Mobile related information.

T-Mobile Name ID

Allows you to modify the on-screen Caller ID information. Name ID identifies unknown callers by Name, City, and State.

1. From the Home screen, tap  (Apps) →  (T-Mobile Name ID).
2. Choose an on-screen option.

T-Mobile TV

T-Mobile TV is an application that allows you to get live TV and Video on Demand.

- From the Home screen, tap  (Apps) →  (T-Mobile TV).

For more information, refer to “T-Mobile TV” on page 225.

TecTiles

This application works with TecTiles to automatically change settings, launch selected applications, or many other useful features.

Note: TecTiles are sold separately.

Important! Although not installed by default, once you swipe your first TecTile, you are taken to the Play Store where you can begin installation of the app.

You can scan a TecTile by turning on your device, enabling NFC, and then tapping the back of your device to the TecTile. For more information, refer to *“Near Field Communication”* on page 306.

Important! The NFC feature must be enabled prior to using TecTiles.

Turning on the NFC feature:

- From the Home screen, tap  (Apps) → Settings → More settings → NFC.

Installing the TecTile application:

1. Tap the back of the device to a TecTile to automatically be directed to the Play Store’s TecTile application and select **Download**. If you do not already have it, follow the on-screen instructions to download it from the Play Store.
– or –
Navigate to the Play Store, search for and install the **TecTile** application.
2. Verify the TecTile app () appears within the Applications screen.



Programming your TecTile

1. Ensure NFC feature is on and the TecTile app is loaded to your device.
2. Launch the TecTile application ().
3. Read the on-screen information and tap **OK**.
4. Select the TecTile type and the action. Choose from:
 - **Settings & Apps:** creates a TecTile that will change device settings or launch an application. Choose from Change Phone Settings, Launch an App, Join a Wi-Fi Network, or Show a Message.
 - **Phone & Text:** creates a TecTile that will either call or text a designated recipient. The outgoing text message can also be pre-programmed into the TecTile. Choose from Make a Call, Send a Text Message, Share a Contact, or Start a Google Talk Conversation.
 - **Location & Web:** creates a TecTile that shares either a Web page or address, or checks you in on a social network application. Choose from Show an Address or Location, Foursquare Check In, Facebook Check In, or Open a Web Page.

- **Social:** creates a TecTile that updates your social network. Choose from Update Facebook Status, Facebook Like, Tweet a Status, Follow a Twitter User, Connect on LinkedIn.
5. Follow the on-screen programming instructions.
 6. Once you have configured and programmed your TecTile action, hold the device over your TecTile to upload the new programming information.
 7. Place the TecTile in a convenient location.

Note: TecTiles do not work on metal surfaces.

For more information, visit us at: www.samsung.com/us/tectile.

To program your TecTile to send a text message:

1. From the Home screen, tap  (**Apps**) →  (**TecTile**).
2. Select **Phone & Text** → **Send Text Message**.
3. Fill in the **Recipient's Number** and **Recipient's Name** fields with your contact information.
 - This is used as the To address for the new outgoing text message that is sent when a user swipes their device over the TecTile.

4. Enter a text message into the **Message Content** field.
 - For example, if you wanted your child to send you a text message when they get home, the TecTile would be programmed to send you a new text message to your cell number with the message string “ I’m Home”.
5. Tap **Next**.
6. Place the device over the TecTile to program the action into the TecTile.
7. Confirm the TecTile is functioning properly and place it on its new location.

To program your TecTile to join you to a Wi-Fi network:

1. From the Home screen, tap  (**Apps**) →  (**TecTile**).
2. Select **Settings & Apps → Join a WiFi Network**.
3. Tap  (**Connect to Wi-Fi**) to locate and connect to an available Wi-Fi.
— or —
Enter the SSID information (name of the Wi-Fi).
4. Select the Network security and enter your password.
5. Tap **Next**.

6. Place the device over the TecTile to program the action into the TecTile.
7. Confirm the TecTile is functioning properly and place it on its new location.

Talk

You can instant message with Google Talk. Google Talk allows you to communicate with other people who are also connected with Google Talk on the phone or on the web.

- From the Home screen, tap  (**Apps**) →  (**Talk**).

For more information, refer to “*Google Talk*” on page 167.

Task Manager

Sometimes your phone might seem to slow down over time, and the biggest reason for this are background applications. These are applications that were not properly closed or shutdown and are still active but minimized. The Task Manager not only lets you see which of these applications are still active in the background but also easily lets you choose which applications are left running and which are closed.

Shutting Down Applications

1. Press and hold  (Home) and then tap  (Task manager). This screen contains the following tabs:
 - **Active applications** display those currently active applications running on your phone.
 - **Downloaded** displays any installed packages or applications from the Play Store that are taking up memory space. Tap **Uninstall** to remove them from your phone.
 - **RAM**, displays the amount of current RAM (Random Access Memory) currently being used and allow you to **Clear memory**.
 - **Storage** displays a visual graph indicating the available and used space within the **System storage** location or **SD card** location.

- **Help** provides additional battery saving techniques.

2. From the **Active applications** tab, tap **End** to close selected applications or tap **End all** to close all background running applications.

Video Player

The Video player application plays video files stored on your microSD card.

- From the Home screen, tap  (Applications) →  (Video Player).

For more information, refer to “Using the Video Player” on page 196.

Visual Voicemail

Visual Voicemail enables users to view a list of people who left a voicemail message, and listen to the any message they want without being limited to chronological order.

- From the Home screen, tap  (Applications) →  (Visual Voicemail).

For more information, refer to “Visual Voicemail” on page 24.

Voice Recorder

The Voice Recorder allows you to record an audio file up to one minute long and then immediately send it as a message.

1. From the Home screen, tap  (Apps) →  (Voice Recorder).
2. Tap  (**Record**) to record an audio file.
3. Tap  (**Stop**) to stop recording. The file automatically saves to the Voice list.
4. From the Recorded files page, press  and then select one of the following:
 - **Share via** and select a method in which to share this audio file. Selections are: Bluetooth, Dropbox, Email, Gmail, Group Cast, Messaging, or Wi-Fi Direct. Refer to each specific section, depending on the method you selected to send this voice recording.
 - **Delete**: allows you to delete 1 or more voice recordings. Tap the recordings to delete and tap **Delete**.

• **Settings**: the following settings are available:

- **Storage**: allows you to choose where your recordings will be saved. Select between Phone or memory card.
 - **Recording quality**: allows you to set the recording quality to High or Normal.
 - **Limit for MMS**: allows you to select On or Off. If you Limit for MMS by selecting On, you will be assured that the recording can be sent in a message.
 - **Contextual filename**: assigns a filename based on additional tag information such as GPS location. Tap **On** to activate the feature.
 - **Default name**: allows you to choose the name prefix for your recordings. For example, if your Default name is Voice, your recordings would be named Voice 001, Voice 002, Voice 003, etc.
- **End**: to close the application.

– or –

Find a pre-recorded file, then touch and hold it to get these added options: Share via, Delete, Rename, Set as, or Details.

Voice Search

Launches the Google Now application that is used for voice to text Internet searching.

1. From the Home screen, tap  (Apps) →  (Voice Search).
2. When prompted, speak into the built-in microphone.
3. Use the on-screen options to find a matching search term.

VPN Client

This is a full-featured VPN Client that provides support for the latest IPSec VPN standards and provides interoperability with support for all major VPN Gateways.

1. From the Home screen, tap  (Apps) →  (VPN Client).
2. Follow the on-screen instructions to configure the VPN Client.

YouTube

YouTube is a video sharing website on which users can upload and share videos, and view them in MPEG-4 format.

1. From the Home screen, tap  (Apps) →  (YouTube).
2. When the screen loads you can begin searching and viewing posted videos.

To configure YouTube Settings:

- Press  and then tap **Settings** and configure the following parameters:
 - **General**
 - **High quality on mobile**, when enabled, allows you to start all videos in high quality mode while you are connected to a mobile network.
 - **Caption font size** allows you to set the font size used by on-screen captions. Choose from: Small, Medium, Large, or Huge.
 - **Uploads** specifies network preferences for uploads.
 - **Search**
 - **Clear search history** allows you to clear previous YouTube searches from showing up in the YouTube search box.
 - **SafeSearch filtering** allows you to configure block settings for videos containing restricted content. This option blocks these videos from appearing within your search results. Choose from: Don't filter, Moderate, or Strict blocking.
 - **Preloading**
 - **Preload subscriptions** allows you to preload (or go get videos while on Wi-Fi and charging) your subscription videos.

- **Preload watch later** allows you to enable the preload function on selected videos so you can watch them later. Read the data usage information and tap **OK** to accept the terms.

Note: Preloading YouTube videos will use some of your device's storage space and may result in additional charges if your Wi-Fi plan is not unlimited.

- **About**
 - **Help** provides answers to most YouTube questions.
 - **Feedback** allows you to provide user feedback to YouTube.
 - **Google Mobile Terms of Service**
 - **YouTube Terms of Service**
 - **Google Mobile Privacy Policy**
 - **YouTube Privacy Policy**
 - **Open source licenses**
 - **App version** displays the software version for the current YouTube application.

To watch a high quality video:

- Press  and then tap **Settings → General → High quality on mobile**.

Zynga Games

This application launches the Zynga portal from where you can connect via Facebook and play with your friends.

1. From the Home screen, tap  (Apps) →  (Zynga Games).
2. Tap the **Connect with Facebook** and follow the on-screen instructions to log into your Facebook account and find your friends.
3. Follow the remaining on-screen instructions.

Section 10: Connections

Your device is equipped with features that allow you to quickly connect to the web.

Internet

Your device is equipped with a Google browser to navigate the mobile web. This section explains how to navigate the browser and use the basic features.

Accessing the Internet

To access the Browser:

- From the Home screen, tap  (Apps) →  (Internet).

Note: You must disable your Wi-Fi connection if you wish to view the web2go® home page (<http://ml.t-mobile.com>).

Navigating with the Browser

1. Tap an entry to select an item.
2. Sweep the screen with your finger in an up or down motion to scroll through a website.
3. To return to a previous page, tap .
4. To move forward to a web page, tap .

Browser Options

1. From the top of the browser screen, select one of the available options:
 - **Navigation:** use the forward and back buttons to navigate through your browsing activity.
 - **Refresh:** reloads the current page.
 - **Windows:** displays a list of the windows you have open.
 - **Bookmarks:** provides access to the Bookmarks screen.— or —

From the current page, press  to access the following options:

 - **Home:** takes you to the currently assigned Home page.

- **New window:** launches a new browser window. By default, this screen shows the web2go home page.
- **Add bookmark:** allows you to add a URL to your bookmark list.
- **Add shortcut to home screen:** creates a shortcut to the web2go Home page and then places it on an open area on an available extended screen.
- **Share page:** allows you to share the page using Bluetooth, ChatON, Dropbox, Email, Facebook, Flipboard, Gmail, Google+, Messaging, S Note, or Wi-Fi Direct.
- **Find on page:** allows you to search in the current page.
- **Desktop view:** allows you to assign the browser to display the current page in the desktop view (to closely mimic the display as it would appear on a Desktop computer).
- **Save for offline reading:** allows you to store the current page in memory so that it can be read later even if you loose your Internet connection.
- **Brightness:** allows you to assign a brightness level specifically for the browser window. This is independent of the brightness assigned within the device's Settings menu.
- **Downloads:** displays the download history.
- **Print:** provides print access on compatible Samsung printers.

- **Settings:** allows you to change the way you view your web pages by changing these options. For more information, refer to “*Browser Settings*” on page 274.

Entering a URL

You can access a website quickly by entering the URL. Websites are optimized for viewing on your phone.

To enter a URL and go to a particular website:

- From the homepage tap the **URL** field at the top of the screen, enter the URL and tap .

Note: This is not the same application as the Google Search Widget. The web2go screen can not be accessed via a Wi-Fi connection.

Search the Internet

To perform an Internet search using keywords:

1. From within the Google search application, tap the **Google** search field, enter the keyword(s) to search using the on-screen keypad.
2. Tap  from the list of search results that are displayed.
3. Tap a link to view the website.

Adding and Deleting Windows

You can have up to eight Internet windows open at one time.

To add a new window:

1. From your browser window, tap  (Windows) →  (New window).
2. A new browser window displays.

Note: The number of currently open windows is displayed at the bottom of the Windows screen.

3. Scroll across the screen to view the currently active windows and tap an entry to launch the selected Internet window.

To delete an existing window:

1. From your browser window, tap  (Windows).
2. Scroll across the available windows and locate your target window.
3. Tap  next to the listing to delete the window.

Going Incognito

The incognito feature allows you to view Internet sites outside of the normal browsing. Pages viewed in this incognito window won't appear within your browser history or search history, and no traces (such as cookies) are left on your device.

Note: Any downloaded files will be preserved and will stay on your device after you exit the incognito mode.

To add a new incognito window:

1. From your browser window, tap  (Windows) →  (Incognito).
2. A new browser window displays.

Note: The incognito icon appears in the upper-left of the new browser window while you are in this mode.

To exit from the incognito window:

1. From your browser window, tap  (Windows).
2. Scroll across the available windows and locate the incognito window.
3. Tap  next to the incognito listing to delete this window.

Using Bookmarks

While navigating a website, you can bookmark a site to quickly and easily access it at a future time. The URLs (website addresses) of the bookmarked sites display in the Bookmarks page. From the Bookmarks page you can also view your Most visited websites and view your History.

1. From the webpage, tap  (Bookmarks).
The **Bookmarks** page displays. Additional pages include **History** and **Saved pages**.
2. Press  to display the following options:
 - **List/Thumbnail view:** Select **Thumbnail view** (default) to view a thumbnail of the webpage with the name listed, or select **List view** to view a list of the bookmarks with Name and URL listed.
 - **Create folder:** Creates a new folder in which to store new bookmarks.

- **Change order:** Rearranges the current bookmarks.
 - **Move to folder:** Selected bookmarks are moved to a selected folder.
 - **Delete:** Erases selected bookmarks.
3. Tap a bookmark to view the webpage, or touch and hold a bookmark for the following options:
 - **Open:** Opens the webpage of the selected bookmark.
 - **Open in new window:** Opens the webpage in a new window.
 - **Edit bookmark:** Allows you to edit the name or URL of the bookmark. For more information, refer to “*Editing Bookmarks*” on page 273.
 - **Add shortcut to home screen:** Adds a shortcut to the bookmarked webpage to your phone's Home screen.
 - **Share link:** Allows you to share a URL address via Bluetooth, ChatON, Dropbox, Email, Facebook, Flipboard, Gmail, Google+, Messaging, S Note, or Wi-Fi Direct.
 - **Copy link URL:** Allows you to copy the URL address to use in a message.
 - **Delete bookmark:** Allows you to delete a bookmark. For more information, refer to “*Deleting Bookmarks*” on page 273.
 - **Set as homepage:** Sets the bookmark to your new homepage.

Adding Bookmarks

1. From the webpage, tap  → **Add bookmark**.
2. Use the on-screen keypad to enter the name of the bookmark and the URL.
3. Assign a folder location. **Home** is the default.
4. Tap **Save**. The new save page now appears on the Bookmarks page.

Editing Bookmarks

1. From the Bookmarks page, touch and hold the bookmark you want to edit.
2. Tap **Edit bookmark**.
3. Use the on-screen keypad to edit the name of the bookmark or the URL.
4. Tap **Save** or **Cancel** to exit the operation.

Deleting Bookmarks

1. From the Bookmarks page, touch and hold the bookmark you want to delete.
2. Tap **Delete bookmark**.
3. At the confirmation window, tap **OK**.

Emptying the Cookies

A cookie is a small file placed on your phone by a website during navigation. In addition to containing some site-specific information, a cookie can also contain some personal information (such as a username and password) which might pose a security risk if not properly managed. You can clear these cookies from your device at any time.

1. From an active Web page, press  and then tap **Settings** → **Privacy and security** → **Clear all cookie data**.
2. Tap **OK** to delete the cookies or tap **Cancel** to exit.

Using Web History

The History list displays a list of the most recently viewed websites. These entries can be used to return to previously unmarked web pages.

1. From the webpage, tap  → **History** tab.
2. Select a visited range category. Choose from: Today, Yesterday, or Most visited.
3. Tap an entry to display the webpage.

– or –

Press  and then tap **Clear history** to delete the current History list.

Using Most Visited

The Most visited list provides you with a list of the most visited and bookmarked websites. These entries are used to return to previously unmarked web pages.

1. From the webpage, tap  → **History** → **Most visited** tab.

A list of your most frequently visited webpages displays. The most frequently visited web pages display at the top of the list.

2. Tap any entry to display the selected webpage.

Browser Settings

To configure browser settings:

1. From the Home screen, tap  (Apps) →  (Internet).
2. Press  and then tap **Settings**.
3. Choose an option from the following categories:

General:

- **Set home page:** Sets the current home page for the Web browser.
- **Form auto-fill:** Allows you to fill in Web forms with a single tap.
- **Auto-fill text:** Allows you to set the text used for the Web form auto-fill feature.

Privacy and security:

- **Clear cache:** Deletes all currently cached data. Tap **OK** to complete the process.
- **Clear history:** Clears the browser navigation history. Tap **OK** to complete the process.
- **Show security warnings:** Notifies you if there is a security issue with the current website. Remove the check mark to disable this function.

- **Accept cookies:** Allows sites, that require cookies, to save and read cookies from your device.
- **Clear all cookie data:** Deletes all current browser cookie files.
- **Remember form data:** Allows the device to store data from any previously filled out forms. Remove the check mark to disable this function.
- **Clear form data:** Deletes any stored data from previously filled out forms. Tap **OK** to complete the process.
- **Enable location:** Allows websites to request access to your location.
- **Clear location access:** Clears location access for all websites. Tap **OK** to complete the process.
- **Remember passwords:** Stores usernames and passwords for visited sites. Remove the check mark to disable this function.
- **Clear passwords:** Deletes any previously stored usernames or passwords. Tap **OK** to complete the process.
- **Enable notifications:** Enables notifications for all websites. Select either: Always on, On demand (user driven), or Off.
- **Clear notifications:** Clears Web notification access for all websites. Tap **OK** to complete the process.

Accessibility:

- **Force zoom:** Allows you to override a website's zoom setting and forces a zoom view.
- **Text size:** Allows you to manually adjust the size of the on-screen text size (Scale text up and down), Zoom amount on double tap, and minimum font size via the use of an on-screen slider.
- **Inverted rendering:** Allows you to adjust the way a Web page is displayed to make it easier to view or read. Enabling this feature causes a page to rendered in reverse - Black becomes white and vice versa. On-screen white text is displayed as white text on a black background.
- **Contrast:** Allows you to adjust the on-screen contrast.

Note: The Contrast feature is disabled until the Inverted rendering function is active.

Advanced:

- **Select search engine:** Allows you to choose a default search engine for your phone. Choose from: **Google**, **Yahoo!**, or **Bing**.
- **Open in background:** New pages are launched in a separate page and displayed behind the current one. Remove the check mark to disable this function.
- **Enable JavaScript:** Enables javascript for the current Web page. Without this feature, some pages may not display properly. Remove the check mark to disable this function.
- **Allow multiple tabs per app:** Allows you to use multiple navigation tabs per application.
- **Enable plug-ins:** Allows the download of plug-ins such as Adobe Flash.
- **Default storage:** Sets the default storage to Memory card.
- **Website settings:** View advanced settings for individual websites.
- **Default zoom:** Adjusts the zoom feature. Set to Far, Medium, or Close.
- **Open pages in overview:** Displays an overview of recently viewed web pages.

- **Auto-fit pages:** Allows web pages to be resized to fit as much of the screen as possible.
- **Block pop-ups:** Prevents popup advertisement or windows from appearing on-screen. Remove the check mark to disable this function.
- **Text encoding:** Adjusts the current text encoding.
- **Reset to default:** Clears all browser data and resets all settings to default.

Bandwidth Management:

- **Preload search results:** Allows the browser to preload high confidence search results in the background. If the device can accurately guess your in progress search, it will preempt you by beginning to load the matching Web page before you complete the search request.
- **Page preloading:** Allows the browser to preload pages in the background.
- **Load images:** Allows web page images to load along with the other text components of a loaded website.

Labs:

- **Quick controls:** Allows you to enable on-screen quick controls via the use of Swype thumb actions.
- **Full screen:** Allows Web pages to be resized to fit as much of the screen as possible.

Bluetooth

About Bluetooth

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car kits, and Bluetooth-enabled handhelds, computers, printers, and wireless devices. The Bluetooth communication range is usually up to approximately 30 feet.

Turning Bluetooth On and Off

To turn Bluetooth on:

1. Press  →  and then tap **Settings**.
2. In a single motion touch and slide the **Bluetooth** slider  to the right to turn it on .

The slider color indicates the activation status. When active,  displays in the Status area.

To turn Bluetooth off:

1. Press  →  and then tap **Settings**.
2. In a single motion touch and slide the **Bluetooth** slider to the left to turn it off .

Bluetooth Status Indicators

The following icons show your Bluetooth connection status at a glance:



Displays when Bluetooth is active.



Displays when Bluetooth is connected (paired) and communicating.



Displays when Bluetooth technology is active and there is an available open and visible bluetooth device.

Bluetooth Settings

The Bluetooth settings menu allows you to set up many of the characteristics of your device's Bluetooth service, including:

- Entering or changing the name your device uses for Bluetooth communication and description
- Setting your device's visibility (or "discoverability") for other Bluetooth devices
- Displaying your device's Bluetooth address

To access the Bluetooth Settings menu:

1. Press  →  and then tap **Settings** → **Bluetooth**.
2. Verify Bluetooth is active (indicated by  **ON**).
3. Press  and tap the **Rename device**, **Visible time-out**, and **Received files** fields to set the options.

To change your Bluetooth name:

1. Verify Bluetooth is active.
2. From the Bluetooth settings page, tap **Rename device**.
3. Enter a new name.
4. Tap **OK** to complete the rename process.

To set visibility:

1. Verify your Bluetooth is active.
2. From the top of the Bluetooth settings page, toggle the state of the visibility check mark. Activating this feature enabled your device visible allows other devices to pair and communicate.

Note: Your device visibility is based on the time set within the Visible time-out field (2 Minutes, 5 Minutes, 1 Hour, or Never timeout). Press  (**Menu**) → **Visible time-out**. This value appears as a countdown within this **Visible time-out** field.

To scan for Bluetooth devices:

1. Verify Bluetooth is active.
2. From the bottom of the Bluetooth settings page, tap **Scan** to search for visible external Bluetooth-compatible devices such as headsets, devices, printers, and computers.

To review your Bluetooth received files:

1. Verify Bluetooth is active.
2. From the Bluetooth settings page, press  and then tap **Received files**.

Pairing Bluetooth Devices

The Bluetooth pairing process allows you to establish trusted connections between your device and another Bluetooth device. When you pair devices, they share a passkey, allowing for fast, secure connections while bypassing the discovery and authentication process.

Note: Pairing between two Bluetooth devices is a one-time process. Once pairing is established the devices continue to recognize their partnership and exchange information without entering a passcode.

To pair your device with another Bluetooth device:

1. Verify Bluetooth is active.
2. From the Bluetooth settings page, tap the **Visibility** field (shown by the device name).

Your device must be visible to successfully pair with an external device. This is shown by a green check mark.

3. Tap **Scan**. Your device displays a list of discovered in-range Bluetooth devices.
4. Tap a device from the list to initiate pairing.
5. Enter the passkey or PIN code, if needed, and tap **OK**.
6. The external device must accept the connection and enter your device's PIN code.

Once successfully paired to an external device,  displays in the Status area.

Note: Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth-compatible devices.

Important! If callers can not hear you during a call while using a paired Bluetooth headset (with built-in microphone), verify the **Call audio** option is enabled within the entry's Bluetooth Settings page.

Configuring Bluetooth Device Settings

Some connected Bluetooth devices are capable of more than just functioning as a headphone, but also have built in microphones for picking up voice. Although both functions are detected by the device and activated, there might be times when you need to change or update these settings for Phone and Media Audio:

- I can hear the other person but they can't hear me...
- I want to use my Bluetooth device only as a headphone

1. Verify Bluetooth is active.
2. From the Bluetooth settings page, tap  (**Settings**).
3. Toggle the **Call audio** field to activate/de-activate the Bluetooth device's on-board microphone.
4. Toggle the **Media audio** field to activate/de-activate the Bluetooth device's headset functions.

Note: If callers can not hear you during a call while using a paired Bluetooth headset (with built-in microphone), verify the **Call audio** option is enabled within the entry's Bluetooth Settings page.

Disconnecting a Paired Bluetooth Device

Disconnecting a paired device breaks the connection between the device and your phone, but retains the knowledge of the pairing. At a later point when you wish to reconnect the device, there is no need to setup the connection information again.

1. Verify your Bluetooth is active.
2. From the Bluetooth settings page, tap the previously paired device (from the bottom of the page).
3. Tap **OK** to confirm disconnection.

Note: Disconnections are manually done but often occur automatically if the paired device goes out of range of your phone or it is powered off.

Deleting a Paired Bluetooth Device

Deleting a device from your list removes its “connection record” and upon reconnection would require that you re-enter all the previous pairing information.

1. Verify Bluetooth is active.
2. From the Bluetooth settings page, tap  (**Settings**)
→ **Unpair** to delete the paired device.

Sending Contacts via Bluetooth

Depending on your paired devices' settings and capabilities, you may be able to send pictures, Contact information, or other items using a Bluetooth connection.

Note: Prior to using this feature, Bluetooth must first be enabled on both your phone and the external device, and the recipient's device must be visible.

1. Verify your Bluetooth is active and your phone is visible.
2. From the Home screen, tap  (**Contacts**).
3. Touch and hold the entry from the list to display the on-screen context menu.
4. Tap **Share namecard via** → **Bluetooth** and select a paired external Bluetooth device.

Note: The external Bluetooth device must be visible and communicating for the pairing to be successful.

5. A Bluetooth share notification displays in your notifications list.

Enable Downloading for Web Applications

Important! Before you can download a web application you must insert an SD into the phone and enable the **Unknown sources** feature (enables downloading). For more information, refer to *"Installing the microSD Memory Card"* on page 11. Also, see *"Mounting the SD Card"* on page 77.

1. Press  →  and then tap **Settings** → **Security** → **Unknown sources** check box.
2. Tap **OK** to allow install of non-Play Store applications. Tap again to remove the check mark and disable the installation of non-Play Store applications.

Warning! Not all web applications are safe to download. In order to protect your phone and data, use the Play Store to install web applications. For more information, refer to *"Downloading a New Google Application"* on page 254.

PC Connections

You can connect your device to a PC using an optional PC data cable using various USB connection modes.

Media storage: allows you to use the onboard storage capacity of both the device and optional microSD to store and upload files. This feature allows your computer to detect the device as a removable storage drive.

Kies air: allows you to sync your Windows PC wirelessly with your phone provided they are both on the same Wi-Fi network.

Kies: allows you to manage music, movies and photos. You can also backup precious contacts and calendars, download apps and podcasts and automatically upgrade device firmware. Kies conveniently syncs your life across all your devices.

Note: To sync your device to your computer it is highly recommended that you install Samsung Kies which is available at <http://www.samsung.com/kies> (for Windows/Mac).

Note: If you are a Windows XP user, ensure that you have Windows XP Service Pack 3 or higher installed on your computer. Also, ensure that you have Samsung Kies 2.0 or Windows Media Player 10 or higher installed on your computer.

Connecting as a Storage Device

You can connect your device to a PC as a removable disk and access the file directory. If you insert a memory card in the device, you can also access the files directory from the memory card by using the device as a memory card reader.

Note: The file directory of the memory card displays as a removable disk, separate from the internal memory.

1. Connect the USB cable to the device and connect the cable to the computer. After a few seconds, a pop-up window displays on the PC when connected.
2. Open the folder to view files.
3. Copy files from the PC to the memory card.

Prior to using Kies air for Phone Update

Before using Kies air to upgrade your device, it is recommended that you backup your personal data prior to use.

To export a Contact list to your microSD card:

1. From the Home screen, tap  (Contacts).
2. Press  and then tap **Import/Export**.
3. Tap **Export to SD card** → **OK**. For more information, refer to “Export/Import” on page 137.

Verify your images and videos are on your microSD card:

1. From the Home screen, tap  (Apps) →  (Gallery).
2. Verify the Gallery contains all of your pictures and videos.
3. Remove the back cover and remove the internal microSD card prior to initiating a Kies air update.

Enabling USB Debugging

USB debugging must be enabled before being able to use the Development feature.

1. Press  →  and then tap **Settings** → **Developer options**.
2. In a single motion touch and slide the **Developer options** slider to the right to turn it on .
3. Tap the **USB debugging** field to verify the feature is active before connecting your USB cable.
4. Using an optional PC data cable, connect the multifunction jack on your device to a PC.

Kies Air

Kies Air allows you to sync your Windows PC wirelessly with your phone provided they are both on the same Wi-Fi network. You can view and share call logs, videos, photos, music, bookmarks, ringtones, and even send SMS messages from your PC.

Tip: Before beginning, it is recommended that you update the Java application running on your machine.

Note: If prompted, follow the on-screen instructions to update your Kies Air application via the Play Store.

1. Sign onto the same Wi-Fi network from your phone and from your PC.
2. From the Home screen, tap  (Apps) →  (Kies air).
3. From the Kies air homescreen, tap **Start**.
4. If prompted, select a network. Choose from either **Wi-Fi** or **Portable Wi-Fi hotspot**.
5. Write down the on-screen URL address.

Important! Both your phone and your computer must be connected to the same Wireless Access Point (WAP).

6. From your computer, enter the URL in your Web browser.
7. If prompted, an Access Request prompt is displayed on your device. Tap **Allow** to permit connection between the computer and device.
8. On your computer, you may be prompted to run a Java plugin for a TransferManagerApplet. Click **Run**.
9. Tap the **Remember for today** checkbox if you will be using Kies air with the same PC later.
10. From your PC, a security warning may be displayed asking if you want to run this application. Click **Run** to continue.
11. On your PC, the Kies air screen is displayed. On your phone, the  icon appears at the top of your screen.
12. Follow the on-screen instructions to view and share information between your phone and PC.

13. Click a link from the left navigation pane to access one of several device file categories such as:

- [Device Name] - provides an overview of all the main categories.
- Photos/Videos/Music
- Ringtones
- Bookmarks
- Messages/Call Log/Contacts
- File Explorer
- Language settings

14. To exit the Kies air application, tap **Stop** on your device, then close out the Web browser on your computer.

Wi-Fi

About Wi-Fi

Wi-Fi (short for "wireless fidelity") is a term used for certain types of Wireless Local Area Networks (WLAN). Wi-Fi communication requires access to an existing and accessible Wireless Access Point (WAP). These WAPs can either be Open (unsecured) as within most Hot Spots, or Secured (requiring knowledge of the Router name and password).

Note: After you complete a connection to an active Wi-Fi network, the Wi-Fi Calling feature will automatically be enabled.

Note: For additional information on WPS Connections, refer to *"WPS Push Button" on page 294* and *"WPS PIN Entry" on page 295*.

Activating Wi-Fi

By default, your device's Wi-Fi feature is turned off (deactivated). Activating Wi-Fi allows your device to discover and connect to compatible in-range WAPs (Wireless Access Points).

1. Press  →  and then tap **Settings**.
2. In a single motion touch and slide the **Wi-Fi** slider to the right to turn it on . The slider color indicates the activation status. The device scans for available in-range wireless networks and displays them under Wi-Fi networks on the same screen.

Connecting to a Wi-Fi Network

1. Press  →  and then tap **Settings** → **Wi-Fi**. The network names and security settings (Open network or Secured with WEP) of detected Wi-Fi networks display in the Wi-Fi networks section.
2. Tap the network you wish to connect to.

Note: When you select an open network you are automatically connected.

3. Enter a wireless password (if necessary).

4. Tap **Connect**.

Wi-Fi Status Indicators

The following icons indicate the Wi-Fi connection status:



Displays when Wi-Fi is connected, active, and communicating with a Wireless Access Point (WAP).



Displays when Wi-Fi is active and there is an available open wireless network.



Displays when Wi-Fi Direct is active and configured for a direct connection to another compatible device in the same direct communication mode.



Displays when Wi-Fi Direct is active and communicating



Displays when Wi-Fi is being used as a Mobile HotSpot feature is active and communicating.

For more information, refer to “*Wi-Fi Direct Setup and Settings*” on page 295.

Manually Add a New Network Connection

1. From the Wi-Fi network screen, tap **Add Wi-Fi network**.
2. Enter the Network SSID (the name of your Wireless Access Point).
3. Tap the **Security** field and select a security option. This must match the current security setting on your target WAP.
4. Enter your WAP's password if the WAP is secure.
5. Tap **Save** to store the new information and connect to the target WAP.

Note: No prompt to enter the WAP key displays if this is the second time to connect to a previously accessed or secured wireless network. The WAP key is required when the device is reset using factory default settings.

Deactivating Wi-Fi

1. Press  →  and then tap **Settings**.
2. In a single motion touch and slide the **Wi-Fi** slider to the left to turn it off .
— or —
Activate and Deactivate Wi-Fi from the Notification bar.

Note: Use of wireless data connections such as Wi-Fi and Bluetooth can reduce battery life and use times.

Manually Scan for a Wi-Fi Network

1. Press  →  and then tap **Settings** → **Wi-Fi**.
2. In a single motion touch and slide the **Wi-Fi** slider to the right to turn it on .
3. Tap **Scan**.

Wi-Fi Advanced Settings

The Wi-Fi settings - Advanced menu allows you to set up many of the device's Wi-Fi services, including:

- Setting the Wi-Fi sleep policy
- Viewing the device's MAC Address
- Configuring use of either a DHCP or Static IP

To access the Wi-Fi Advanced Settings menu:

1. Press  →  and then tap **Settings** → **Wi-Fi**.
2. Press  and then tap **Advanced**.

USB Tethering

This option allows you to share your device's mobile data connection via a direct USB connection between your device and a single computer. The Mobile HotSpot connectivity is a wireless version of this same functionality and allows you to provide Internet connectivity to multiple devices.

Note: You can not mount your device's microSD card to your computer while using the USB tethering feature. If additional software or USB drivers are required, navigate to: <http://www.samsung.com/us/support/downloads>.

To connect using USB Tethering:

1. From the Home screen, tap  (**Apps**) →  (**Mobile HotSpot**).
– or –
Press  →  and then tap **Settings** → **More settings** → **Tethering and Mobile HotSpot**.
2. Plug in the USB cable between your computer and your device.
3. Tap **USB tethering** from the Tethering menu. This places a green check mark next to the entry and activates the feature. A Tethering or HotSpot active notification briefly appears on the screen. Look for the Tethering active icon  in the Status bar area of the screen.
4. Read the on-screen notification regarding data use and tap **OK**.

To disconnect tethering:

1. From the Home screen, tap  (Apps) →  (Mobile HotSpot).
2. Tap **USB tethering** from the Tethering menu to remove the check mark and deactivate the feature.
3. Remove the USB cable from the device.

Mobile HotSpot

This feature allows you to turn your device into a Wi-Fi hotspot. The feature works best when used in conjunction with HSPA+ (4G) data services (although 3G service can also be used).

The Mobile HotSpot connectivity is a wireless version of this same functionality and allows you to provide Internet connectivity to multiple devices.

Important! The Mobile HotSpot service cannot be active when device is connected to Wi-Fi. Please disconnect your Wi-Fi connection prior to active this service.

Note: You must have a tethering plan on your account in order to use the Mobile HotSpot. You cannot use data on the device while using Mobile HotSpot.

To activate the Mobile HotSpot service:

1. From the Home screen, tap  (Apps) →  (Mobile HotSpot).

– or –

Press  →  and then tap **Settings** → **More settings** → **Tethering and Mobile HotSpot**.

2. In a single motion touch and slide the **Mobile HotSpot** slider to the right to turn it on .
3. Read the on-screen notification regarding data use and tap **OK**.
4. Tap the **Mobile HotSpot** field to access the main application.
5. Tap **Configure** and create a new Network SSID name and then write it down.
6. Verify the **Security** field is set to **WPA2 PSK**.
7. Enter a new password then write it down.

8. Tap **Save** to store the new settings.
9. Confirm the Mobile HoSpot active icon  appears at the top of the screen.

Note: By default, the connection is not secured.

Note: Using your Mobile HotSpot drains your device's battery much faster. The best way to keep using the device as a HotSpot is by connecting to a Charger.

To connect to the HotSpot:

1. Enable Wi-Fi (wireless) functionality on your target device (laptop, media device, etc.).
2. Scan for Wi-Fi networks from the external device and select your device's Mobile HotSpot name from the network list.
 - The SSID name for your device's hotspot is determined by what you entered into the **Network SSID** field.
 - You can change the name by tapping **Configure → Network SSID** and changing the entry.
3. Select this HotSpot and follow your on-screen instructions to complete the connection.

4. Launch your Web browser to confirm you have an Internet connection.

To change the Portable HotSpot password:

1. From the Home screen, tap  (Apps) → (Mobile HotSpot).

2. Tap **Mobile HotSpot → Configure**.
3. Tap the **Security** field and select **WPA2 PSK**.
4. With security enabled, delete the previous password and enter a new one into the **Password** field.

Important! The more complex the password, the harder it will be for intruders to break your security. It is recommended that you not use names, birthdays, or other personal information.

5. Tap **Save** to store the new settings.

To manage connected devices:

This feature allows you to provide MAC filtering on your device. This is similar to a “VIP list” where only device on the list are allowed access.

1. From the Home screen, tap  (Apps) →  (Mobile HotSpot).
2. Tap **Mobile HotSpot → Allowed devices**.
3. Tap  (Add new device) to add devices to the allowed for connection list.
4. Enter the Device name and Mac address.
5. Tap **OK** to save the new device.

Section 11: Changing Your Settings

This section explains the sound and phone settings for your device. It includes such settings as: display, security, memory, and any extra settings associated with your device.

Accessing Settings

- From the Home screen, tap  (Apps) →  (Settings).
— or —

From the Home screen, press  and then tap **Settings**. The Settings screen displays.

Wi-Fi Settings

This section describes the Wi-Fi settings. For more information, refer to “*Wi-Fi*” on page 285.

Activating Wi-Fi

1. From the Home screen, press  and then tap **Settings**.
2. In a single motion touch and slide the **Wi-Fi** slider to the right to turn it on . The device scans for available in-range wireless networks and displays them under Wi-Fi networks on the same screen.

Wi-Fi settings

Once set up for Wi-Fi connectivity, your device automatically uses Wi-Fi, when available, for all your mobile services.

1. From the Home screen, press  and then tap **Settings → Wi-Fi**.
2. Press  and then tap **Advanced**. Configure the settings as desired.

The available Wi-Fi connections are displayed with a security state displayed below them.

Network Notification

By default, when Wi-Fi is on, you receive notifications in the Status bar anytime your phone detects an available Wi-Fi network. You can deactivate this feature if you do not want to receive notifications.

1. From the Home screen, press  and then tap **Settings → Wi-Fi**.
2. Press  and then tap **Advanced**.
3. Tap **Network notification**. A check mark displayed next to the feature indicates Network notification is active.
4. Tap **Network notification** again to remove the check mark and deactivate this feature.

Wi-Fi During Sleep

By default, when your device enter a sleep mode, your Wi-Fi connection stays on all the time. If the feature is Never enabled during sleep that current data usage is taken over by your SIM and its network connection.

1. From the Home screen, press  and then tap **Settings → Wi-Fi**.
2. Press  and then tap **Advanced → Keep Wi-Fi on during sleep**.

3. Select an available option:

- **Always:** maintains your current active Wi-Fi connection even during sleep.
- **Only when plugged in:** maintains the active Wi-Fi connection only when the device detects it is connected to a power supply. This reduced the drain on your device's battery.
- **Never (increase data usage):** shuts off the current Wi-Fi connection during sleep and diverts any current data usage to the cellular network connection.

Check for Internet Service

Allows you to check for Wi-Fi Internet access once connected to a WAP (Wireless Access Point).

1. From the Home screen, press  and then tap **Settings → Wi-Fi**.
2. Press  and then tap **Advanced**.
3. Tap the **Check for Internet service** field to activate the feature. A green checkmark indicates the feature is active.

Finding your Wi-Fi Address Information

1. From the Home screen, press  and then tap **Settings → Wi-Fi**.
2. Press  and then tap **Advanced**.
3. Locate the MAC Address and IP Address information at the bottom of the screen.
 - **MAC address:** view your device's MAC address, required when connecting to some secured networks (not configurable).
 - **IP address:** view your device's IP address.

Manually Adding a Wi-Fi Network

1. From the Home screen, press  and then tap **Settings → Wi-Fi → Add Wi-Fi network**.
2. Enter the Network SSID (the name of your Wireless Access Point).
3. Tap the **Security** field and select a security option. This must match the current security setting on your target WAP (Wireless Access Point).
4. Enter your WAP's password if the WAP is secure.
5. Tap **Save** to store the new information and connect to the target WAP.

Note: An SSID is a unique key which identifies a wireless LAN. Its purpose is to stop other wireless equipment from accessing your LAN — whether accidentally or intentionally. To communicate, wireless devices must be configured with the same SSID.

WPS Push Button

The WPS (Wi-Fi Protected Setup) feature (sometimes associated with a physical or on-screen button on most WAPs) allows you to pair your device and WAP without the need for entering a passcode. This process is similar to Wi-Fi Direct pairing.

In this case, once the WPS feature is active on your WAP, your device can then detect it and then immediately pair to it.

Note: WPS-capable routers appear in the Wi-Fi list of available devices with the term (**WPS available**) below their name.

To pair your device using WPS:

1. Follow the WPS activation instructions specific to your Wireless Access Point.
2. From the Home screen, press  and then tap **Settings → Wi-Fi**.
3. Press  then tap **Wi-Fi push button**.
4. Once the connection is complete, confirm the external router now appears in the Wi-Fi list as connected.

WPS PIN Entry

If a WPS Push Button does not work, there is an alternative WPS connection method where you would use a device generated PIN number to establish the connection. This number is then entered into your WAP's WPS client PIN field to complete the connection.

To pair your device using WPS PIN:

1. From the Home screen, press  and then tap **Settings → Wi-Fi**.
2. Press  then tap **WPS PIN entry**.
3. Write down the generated PIN number and enter it into your Wi-Fi Router's client PIN field.

4. Once the connection is complete, confirm the external router now appears in the Wi-Fi list as connected.

Wi-Fi Direct Setup and Settings

You can configure your device to connect directly with other Wi-Fi capable devices. This is an easy way to transfer data between devices. These devices must be enabled for Wi-Fi direct communication. This connection is direct and not via a HotSpot or WAP.



Displays when Wi-Fi Direct is active and configured for a direct connection to another compatible device in the same direct communication mode.



Displays when Wi-Fi Direct is active and communicating

Note: Activating this feature will disconnect your current Wi-Fi network connection.

To activate your connection:

1. From the Home screen, press  and then tap **Settings**.
2. In a single motion touch and slide the **Wi-Fi** slider to the right to turn it on . The slider color indicates the activation status.
3. Tap **Wi-Fi Direct**.
4. Tap **Scan** and select the single device name to begin the connection process to another Wi-Fi Direct compatible device.
– or –
Tap **Multi-connect** → **Scan** and select all the device names to begin the connection process to these Wi-Fi Direct compatible devices.

Note: The target device must also have Wi-Fi Direct service active and running before it can be detected by your device.

5. Tap **Done**. The direct connection is then established. Confirm  appears in the Status bar.

6. When prompted to complete the connection, the recipient should tap **OK**. Your status field now reads “Connected” and your connected device is listed within the Wi-Fi Direct devices listing.

To give your Wi-Fi Direct connection a unique name:

It can be difficult to pair to external devices if all you have is a generic name (ex: Android 12345). It is recommended you provide your connection with a unique name.

1. From the Home screen, press  and then tap **Settings** → **Wi-Fi** → **Wi-Fi Direct**.
2. Press  and then tap **Rename device**.
3. Edit the current name and tap **OK** to save the new identification.

Bluetooth settings

In this menu you can activate Bluetooth, view or assign a device name, activate your phone so other Bluetooth devices can discover it, or scan for other, available Bluetooth devices with which to pair. For more information, refer to “Bluetooth” on page 277.

Turning Bluetooth On and Off

To turn Bluetooth on:

1. From the Home screen, press  and then tap **Settings**.
 2. In a single motion touch and slide the **Bluetooth** slider to the right to turn it on .
- The slider color indicates the activation status. When active,  displays in the Status area.

To turn Bluetooth off:

1. From the Home screen, press  and then tap **Settings**.
2. In a single motion touch and slide the **Bluetooth** slider to the left to turn it off .

Note: Bluetooth must be enabled prior to use.

Activating the Device Name

1. From the Home screen, press  and then tap **Settings** → **Bluetooth**.
2. Verify Bluetooth is active (indicated by ).
3. Press  and tap the **Rename device**. The assigned device name displays.
4. Tap  to erase the current device name and enter a new name for this device using the keyboard.
5. Tap **OK** to confirm your setting.

Activating Visibility

1. From the Home screen, press  and then tap **Settings → Bluetooth**.
2. Verify your Bluetooth is active.
3. From the top of the Bluetooth settings page, toggle the state of the visibility check mark. Activating this feature enabled your device visible allows other devices to pair and communicate.

Scanning for Devices

This option allows you to scan for active Bluetooth devices so you can pair with them.

1. From the Home screen, press  and then tap **Settings → Bluetooth**.
2. From the bottom of the Bluetooth settings page, tap **Scan** to search for visible external Bluetooth-compatible devices such as headsets, devices, printers, and computers.

3. Enter a PIN to pair with the device, if one is required, and tap **OK**.

Data Usage

Monitor and manage your device's data usage capabilities.

Features include activation/deactivation or network data usage, set mobile data usage for a set period of time, and view application data usage.

- From the Home screen, press  and then tap **Settings → Data usage**.

To activate/deactivate Mobile data usage:

1. From the Home screen, press  and then tap **Settings → Data usage**.
2. Tap the **Mobile data** field to activate the feature. A green checkmark indicates the feature is active.
3. Tap the **Mobile data** field again to deactivate the feature.

Important! Some Bluetooth devices are secured and require a PIN number to confirm and pair with them.

To set a mobile data limit:

1. From the Home screen, press  and then tap **Settings → Data usage**.
2. Place a check mark in the **Set mobile data limit** field.
3. Read the on-screen disclaimer info and tap **OK**.
4. Touch and drag the far right ends of the Red or Orange horizontal lines to manually adjust both the Warning and Maximum data limits.
5. Touch and drag the bottom grey vertical lines to adjust the time frames.
6. Tap the **Data usage cycle** button and select either the current cycle or define your own by selecting **Change cycle**.
7. Tap **Upgrade data service** to explore upgrade options available for your rate plan.
8. Press  and then select from the available on-screen options:
 - **Data roaming** allows you to connect to your service provider's partner networks and access data services when you are out of your service providers area of coverage. For more information, refer to *"Data Roaming"* on page 301.
 - **Restrict background data** prevents background data usage. This can help prevent over usage of your data minutes.
 - **Auto sync data** allows the device to automatically sync information and updates with your various services.
 - **Show Wi-Fi usage** activates an additional Wi-Fi tab that shows you your Wi-Fi data usage.
 - **Mobile hotspots** allows you to select available Wi-Fi networks that can service as mobile hotspots. Place a checkmark on those entries you wish to use.

More Settings

This tab displays additional wireless and network information.

- From the Home screen, press  and then tap **Settings → More settings**.

Using Airplane mode

This mode allows you to use many of your device's features, such as Camera, Games, and more, when you are in an airplane or in any other area where making or receiving calls or data is prohibited.

Important! When your device is in Airplane mode, it cannot send or receive any calls or access online information or applications.

1. From the Home screen, press  and then tap **Settings → More settings**.
2. Tap **Airplane mode**. A check mark displayed next to the feature indicates Airplane mode is active.
The Airplane mode icon  is displayed at the top of your screen.

Mobile networks

Before you use applications such as Google Maps and find your location or search for places of interest, you must enable the Mobile networks options.

- From the Home screen, press  and then tap **Settings → More settings → Mobile networks**.

The following options display:

Use mobile data

Allows you to activate mobile data usage on your device.

- From the Home screen, press  and then tap **Settings → More settings → Mobile networks → Mobile data**.

Data Roaming

Data roaming allows you to connect to your service provider's partner networks and access data services when you are out of your service providers area of coverage.

1. From the Home screen, press  and then tap **Settings → More settings → Mobile networks**.
2. Tap **Data roaming** to connect to data services while roaming outside your network.
— or —

Tap **Data roaming** again to remove the green check mark and deactivate the feature.

Access Point Names

To access a wireless access point:

- From the Home screen, press  and then tap **Settings → More settings → Mobile networks → Access Point Names**. A list of the Access point names display. The active access point displays a bright green, filled circle to the right of the name.

Network mode

You can configure your phone to either manually detect and use either a 2G (GSM) or 3G (WCDMA) data network connection.

- From the Home screen, press  and then tap **Settings → More settings → Mobile networks → Network mode**.

Using the 4G Network

To confirm you are always using the fastest possible connection, the phone has an automatic detection method where it finds both the fastest and most stable connection/communication method. This phone is capable of using either 4G/3G services for this connection.

Note: WCDMA is only available on the 4G network.

1. From the Home screen, press  and then tap **Settings → More settings → Mobile networks → Network mode**.
2. Tap **GSM/WCDMA (Auto mode)**. A check mark displays next to this option to indicate that it is active. This is the default mode for this phone.

Using the 2G (EDGE) Network

If you are not using applications that require the 3G network speed (any application that accesses the network or uses a browser), using the 2G network saves battery life.

1. From the Home screen, press  and then tap **Settings → More settings → Mobile networks → Network mode**.
2. Tap **GSM only**. A check mark displays next to this option to indicate that it is active.

Note: Connecting to 2G networks slows the data transfer speed and time.

Using the 3G Network

If you are using applications that require the 3G network speed, follow these instructions to connect to the 3G network.

1. From the Home screen, press  and then tap **Settings → More settings → Mobile networks → Network mode**.
2. Tap **WCDMA only**. A check mark displays next to this option to indicate that it is active.

Network Operators

Using this feature you can view the current network connection. You can also scan and select a network operator manually, or set the network selection to Automatic.

1. From the Home screen, press  and then tap **Settings → More settings → Mobile networks**.
2. Tap **Network operators**. The current network connection displays at the bottom of the list.

Important! You must deactivate data service prior to searching for an available network.

3. Tap **Search now** to manually search for a network.
4. Tap **Select automatically** to automatically select a network connection.

Note: Connecting to 2G networks slows the data transfer speed and time.

Default Setup Options

Your phone default is set to Automatic (to automatically search for an available network. You can set this option to Manual to select a network each time you connect.

1. From the Home screen, press  and then tap **Settings → More settings → Mobile networks → Network operators**.
2. Tap **Default setup**.
3. Tap **Manual** to locate and connect to a network manually.
— or —

Tap **Automatic** to allow the device to automatically select a network.

Mobile HotSpot

This option allows you to share your phone's mobile data connection via a direct USB connection between your phone and computer. A wireless version of this same functionality would be the Mobile AP feature.

Note: You can not mount your device's microSD card to your computer while using the USB tethering feature. If additional software or USB drivers are required, navigate to: <http://www.samsung.com/us/support/downloads>.

- From the Home screen, press  and then tap **Settings → More settings → Tethering and Mobile HotSpot**.

For more information, refer to “USB Tethering” on page 288.

For more information, refer to “Mobile HotSpot” on page 289.

VPN

The VPN settings menu allows you to set up and manage Virtual Private Networks (VPNs).

Note: Before using VPN, you must first set up a screen unlock PIN or password. For more information, refer to “*Security*” on page 335.

Adding a VPN

Before you add a VPN you must determine which VPN protocol to use: PPTP, L2TP/IPSec PSK, L2TP/IPSec RSA, IPSec Xauth PSK, IPSec Xauth RSA, IPSec Hybrid RSA.

Important! Before you can use a VPN you must establish and configure one.

1. From the Home screen, press  and then tap **Settings → More settings → VPN**.
2. If prompted, read the screen lock information and follow the on-screen steps to setup an unlock PIN or password.
3. Tap **Add VPN network**.

4. In the form that appears, fill in the information provided by your network administrator.
5. Tap **Save**.

Note: Similar setup process can be used for all available VPN types.

Connecting to a VPN

1. From the Home screen, press  and then tap **Settings → More settings → VPN**.
2. Tap the VPN entry you want to connect to.
3. Enter any requested credentials into the pop-up that opens.
4. Tap **Connect**.

Edit a VPN

1. From the Home screen, press  and then tap **Settings → More settings → VPN**.
2. Touch and hold the VPN that you want to edit.
3. In the pop-up that opens, select **Edit network**.
4. Make the desired VPN setting changes.
5. Tap **Save**.

Delete a VPN

1. From the Home screen, press  and then tap **Settings → More settings → VPN**.
2. Touch and hold the VPN that you want to delete.
3. Tap **Delete network** within the pop-up that opens up.

Wi-Fi Calling

You can configure your device to make and receive calls over an active Wi-Fi connection. Wi-Fi Calling is an excellent solution for coverage issues in and around the home or wherever cellular coverage is limited. Minutes used while connected to the Wi-Fi network count against available rate plan minutes.

For more information, refer to “*Wi-Fi Calling*” on page 90.

1. Ensure that the **Wi-Fi connected** icon  displays on the status bar.
2. From the Home screen, press  and then tap **Settings → More settings**.
3. Tap the **Wi-Fi Calling** field and place a green check mark in the adjacent field. This check mark indicates the feature is active.

Wi-Fi Calling Settings

Important! A new ISIM card must be installed within the device prior to using this feature. Wi-Fi must first be active and communicating prior to launching Wi-Fi Calling.

1. From the Home screen, press  and then tap **Settings → More settings → Wi-Fi Calling Settings**.
2. Tap **Connection Preferences** and select a preference for use of the Wi-Fi Calling feature:
 - **Wi-Fi Preferred:** Wi-Fi network is preferred over cellular network when making calls. Calling requires you to stay in the Wi-Fi range.
 - **Wi-Fi Only:** Wi-Fi network is required for making calls. Calling requires you to stay in the Wi-Fi range.
 - **Cellular Preferred:** The cellular network is preferred over a Wi-Fi network when making calls.
3. Tap **OK** to save the setting.
4. Tap **Help** from the main Wi-Fi Calling Settings page to navigate through either an on-screen tutorial or review the top 10 Wi-Fi Calling questions.

Near Field Communication

This feature is used to read and exchange tags. When used in conjunction with S Beam, your device can be used to beam application content when NFC-capable devices are touched. For more information, refer to “*TecTiles*” on page 261.

1. From the Home screen, press  and then tap **Settings → More settings**.
2. Tap the **NFC** field. A check mark displayed next to the feature indicating it is enabled.

S Beam

This feature (when activated via NFC) allows you to beam large files directly to another compatible device that is in direct contact. These files can be larger, such as Videos, HD pictures, and other large files. You can beam images and videos from your gallery, music files from your music player, and more.

1. From the Home screen, press  and then tap **Settings → More settings**.
2. Verify the NFC feature is active.
3. Tap **S Beam** and make sure the feature is turned on.
4. If not already active, in a single motion touch and slide the **S Beam** slider to the right to turn it on .
5. Complete the transfer process between the two NFC-enabled devices by placing them back to back.

This feature can come in very handy to quickly share pictures between users with compatible S Beam devices. For more information, refer to *“Using S Beam to Share Pictures”* on page 182.

Nearby devices

This option allows you to share your media files with nearby devices using DLNA and connected to the same Wi-Fi.

1. Connect to a Wi-Fi network. For more information, refer to *“Connecting to a Wi-Fi Network”* on page 286.
2. From the Home screen, press  and then tap **Settings → More settings → Nearby devices**.
3. Tap the **File sharing** field to turn File sharing ON. A green checkmark indicates the feature is active. Once active,  (**Nearby devices**) appears at the top of the screen.
4. At the Nearby devices prompt, tap **OK**.
5. Tap **Shared contents**, then check the media you would like to share. Tap **OK**.
6. Tap **Device name**, then use the on-screen keyboard to change the name shown to others. Tap **Save**.
7. Tap **Access devices list**, then what devices are allowed access. Choose from Allow all or Only allowed devices. The allowed devices are configured in the following Allowed devices list.

8. Tap **Allowed devices list**, then select the connected devices you would like to allow.
9. Tap **Not-allowed devices list**, then select the connected devices you would like to not allow.
10. Tap **Download to**, then select the destination of any downloaded (shared) content. Choose from USB storage (phone) or SD card.
11. Tap **Upload from other devices**, then select the actions you'll take when you upload content from other devices. Choose from either Always accept, Always ask, or Always reject.

AllShare Cast

With AllShare Cast, you can wirelessly share your device's screen with another device such as a TV.

1. From the Home screen, press  and then tap **Settings → More settings → AllShare Cast**.
2. In a single motion touch and slide the **AllShare Cast** slider to the right to turn it on  **ON**. The slider color indicates the activation status.

For more information, refer to “*AllShare Cast Hub*” on page 219.

Note: This feature allows a connection between your device and the optional AllShare Cast Hub, via a shared Wi-Fi connection. The AllShare Cast Hub then allows the communicating TV to mirror what is being shown on the device's display.

Kies via Wi-Fi

1. From the Home screen, press  and then tap **Settings → More settings**.
2. Tap **Kies via Wi-Fi → OK**.
3. Select a network connection and follow the on-screen connection process.

Refer to the Kies Air process information for more information. For more information, refer to “*Kies Air*” on page 284.

Call Settings

To access the Call settings menu:

1. From the Home screen, tap  (Phone).
2. Press  and then tap **Call settings**.

Configuring General Call Settings

Configure the general call settings using this option.

1. From the Home screen, tap  (Phone).
2. Press  and then tap **Call settings**.
3. Tap one of the following options:
 - **Call rejection:** allows you to manage your rejection mode and rejection list.
 - **Auto reject mode:** sets the phone to automatically reject incoming calls or messages.
 - **Auto reject list:** provides access to current rejection entries and numbers.
 - **Set reject messages:** allows you to manage both existing rejection messages and create new ones.
 - **Ringtone and keypad tones:** assigns a device ringtone, device vibration and Incoming call setting, as well as Keytones used when the keypad is pressed.

- **Call alert:** allows you to assign call alert tones and activate call alerts and vibration.
 - **Call vibrations:** vibrates the phone when the called party answers.
 - **Call status tones:** assigns sounds settings during the call. Choose from: Call connect tone, Minute minder, and Call end tone.
 - **Alerts on call:** selects whether alarm and message notification is turned off during a call.
- **Call answering/ending:** allows you to manage the settings for answering and ending calls.
 - **Answering key** allows you to press a key to answer the phone.
 - **The Power key ends calls** allows you to press the power key to end the current call.
- **Auto screen off during calls:** allows you to force the screen to turn off during an active call.
- **Accessory settings for call:** allows you to assign headset settings during incoming calls.
 - **Automatic answering** configures the device to automatically answer and incoming call when a headset is detected.

- **Automatic answering timer** configures the time delay before the device automatically accepts the incoming call.
- **Outgoing call conditions** configures the connected Bluetooth device to make outbound calls within one of two settings: Even when device locked or Only when device unlocked.
- **My call sound:** allows you to personalize the sounds you hear during a call with and without earphones.
 - Tap **My call sound settings** and select **Personalize call sound**.
 - Follow the detailed on-screen instructions.
- **Use extra vol. for calls:** activating this feature places an extra volume button on your currently active call screen.
- **Increase volume in pocket:** increases the ringtone volume when the device is in a pocket or a bag. Uses the proximity sensor to detect its location.
- **Call forwarding:** configures call forwarding options.

Important! If the Wi-Fi Calling feature is active, Call forwarding is greyed-out and inaccessible.

- **Additional settings:** allows you to configure additional call settings. For more information, refer to “*Configuring Additional Voice Call Settings*” on page 314.
- **Voicemail service:** allows you to assign the service.
- **Voicemail settings:** displays the settings for the voicemail.
- **Ringtone:** assigns your device's ringtone.
- **Vibrate:** configures the vibrate settings. Choose from Always, Only in silent mode, or Never.
- **TTY mode:** allows you to configure the TTY settings. For more information, refer to “*TTY Mode*” on page 314.

Call rejection

1. From the Home screen, tap  (Phone).
2. Press  and then tap **Call settings** → **Call rejections**.
3. Activate the feature by moving the **Auto reject mode** slider to the right.
4. Tap **Auto reject mode** and tap one of the following options:
 - **All numbers:** to reject all calls.
 - **Auto reject numbers:** to reject all calls in your Reject list.
5. Tap **Auto reject list**.

6. Tap  to manually add numbers to the Reject list.
7. Tap **Unknown** to create a checkmark and automatically reject all calls that are not in your Contacts list.

Set reject messages

1. From the Home screen, tap  (Phone).
2. Press  and then tap **Call settings** → **Set reject messages**.

3. Tap  to manually add a reject message.
– or –

Tap one of the pre-written messages to be displayed when you want the call to be rejected. You can edit the message if desired.

4. Tap **Save** to save the reject message.

Ringtones and keypad tones

1. From the Home screen, tap  (Phone).
2. Press  and then tap **Call settings** → **Ringtones and keypad tones**.
3. Tap **Device ringtone**, select a ringtone, and tap **OK**.
4. Tap **Device vibration**, select a vibration type, and tap **OK**.
5. Tap **Incoming call vibration** to create a checkmark if you want your phone to vibrate when a call is incoming.
6. Tap **Keytones** to create a checkmark if you want tones to play when the keypad is pressed.

Call alert

1. From the Home screen, tap  (Phone).
2. Press  and then tap **Call settings** → **Call alert**.
3. Tap **Call vibrations** to enable your phone to vibrate when the called party answers the phone.
4. Tap **Call status tones** to set the sound settings during a call then tap **OK**.
5. Tap **Alerts on call** to turn off alarm and message notifications during a call.

Call answering/ending

1. From the Home screen, tap  (Phone).
2. Press  and then tap **Call settings** → **Call settings** → **Call answering/ending**.
3. Select any of the following options:
 - **Answering key:** Tap this option to be able to accept incoming calls by pressing the Home key.
 - **The power key ends calls:** This option will allow you to end a call by pressing the power key without turning off the screen.

Auto screen off during calls

This option turns on the proximity sensor during calls so that your phone will know to turn the screen off to save power.

1. From the Home screen, tap  (Phone).
2. Press  and then tap **Call settings** → **Auto screen off during calls** to create a checkmark and enable the feature.

Accessory settings for call

1. From the Home screen, tap  (Phone).
2. Press  and then tap **Call settings** → **Accessory settings for call**.
3. The following options are available:
 - **Automatic answering:** configures the device to automatically answer and incoming call when a headset is detected.
 - **Automatic answering timer:** configures the time delay before the device automatically accepts the incoming call.
 - **Outgoing call conditions:** allows you to make calls even when the device is locked.

My call sound

This option allows you to personalize the sounds you hear during a call with and without earphones.

1. From the Home screen, tap  (Phone).
2. Press  and then tap **Call settings** → **Call settings** → **My call sound**.
3. Tap **My call sound settings**.
4. Tap **Personalize call sound** and follow the detailed on-screen instructions.

Use extra vol. for calls

This option allows you to see an extra volume button on the screen during calls.

1. From the Home screen, tap  (Phone).
2. Press  and then tap **Call settings** → **Use extra vol. for calls** to create a checkmark and enable the feature.

Increase volume in pocket

This option increases the ringtone volume when the device is in a pocket or a bag. It uses the proximity sensor to detect its location.

1. From the Home screen, tap  (Phone).
2. Press  and then tap **Call settings** → **Increase volume in pocket** to create a checkmark and enable the feature.

Configuring Call Forwarding

1. From the Home screen, tap  (Phone).
2. Press  and then tap **Call settings** → **Call forwarding** → **Voice call**.
3. Tap an available option:
 - **Always forward:** incoming calls are re-routed to a secondary number that you specify.
 - **Forward when busy:** forwards all your calls to voicemail when your phone is busy.
 - **Forward when unanswered:** automatically forwards to your voicemail number when the phone is not answered, and otherwise allows you to enter a voicemail number.
 - **Forward when unreachable:** automatically forwards to your voicemail number when the phone is not in service, or is turned off.

TTY Mode

A TTY (also known as a TDD or Text Telephone) is a telecommunications device that allows people who are deaf, hard of hearing, or who have speech or language disabilities, to communicate by telephone.

Your phone is compatible with select TTY devices. Please check with the manufacturer of your TTY device to ensure that it is compatible with digital cell phones.

Your phone and TTY device will connect via a special cable that plugs into your phone's headset jack. If this cable was not provided with your TTY device, contact your TTY device manufacturer to purchase the connector cable.

1. From the Home screen, tap  (Phone).
2. Press  and then tap **Call settings** → **TTY mode**.
3. Tap **TTY Full**, **TTY HCO**, or **TTY VCO** to activate the feature, or **TTY Off** to deactivate the feature. Off is the default setting.

Configuring Additional Voice Call Settings

1. From the Home screen, tap  (Phone).
2. Press  and then tap **Call settings** → **Additional settings**.
3. Tap one of the following options:
 - **Caller ID**: chooses whether your number is displayed when someone answers your outgoing call. Choose from: Network default, Hide number, or Show number.
 - **Call barring**: blocks specific types of calls (All outgoing calls, International calls, etc..).
 - **Call waiting**: notifies you of an incoming call while you are on another call.
 - **Auto redial**: automatically redial the dialed number if it is unable to connect or the call is cut off.
 - **Noise reduction**: suppresses background noise on your side of the conversation during an active call.
 - **Fixed Dialing Numbers**: manages fixed dialing numbers.
 - **Auto area code**: allows you to automatically prepend a specific area code to all outbound calls. For more information, refer to *"Using Auto Area Code"* on page 315.

Using Auto Area Code

This feature prepends an area code to all outbound calls. When enabled, the designated prefix is always added before your dialed numbers.

Ex: If you were using 999 as your area code, 555-5555 would be dialed as 999 - 555-5555.

1. From the Home screen, tap  (Phone).
2. Press  and then tap **Call settings** → **Additional settings**.
3. Tap **Auto area code**, enter a new prefix, and then tap **OK**.
4. In a single motion, drag the slider to the right to turn it on.

Fixed Dialing Numbers

Fixed Dial Number (FDN), allows you to restrict outgoing calls to a limited set of phone numbers.

Enabling FDN

1. From the Home screen, tap  (Phone).
2. Press  and then tap **Call settings** → **Additional settings** → **Fixed Dialing Numbers**.
3. Tap **Enable FDN**.
4. At the prompt, enter your PIN2 code and tap **OK**.

Important! Not all SIM cards use a PIN2 code. If your SIM card does not, this menu does not display.

The PIN2 code is provided by your carrier. Entering an incorrect PIN2 code could cause the phone to lock. Contact customer service for assistance.

Changing the PIN2 Code

1. From the Home screen, tap  (Phone).
2. Press  and then tap **Call settings** → **Additional settings** → **Fixed Dialing Numbers**.
3. Tap **Change PIN2**.
4. At the prompt, enter your old PIN2 code.
5. At the prompt, enter a new PIN2 code.
6. Confirm your PIN2 code.

Important! Not all SIM cards use a PIN2 code. If your SIM card does not, this menu does not display. The PIN2 code is provided by your carrier. Entering the PIN2 incorrectly three times will cause the device to lock. Contact customer service for assistance.

Managing the FDN List

When this feature is enabled, you can make calls only to phone numbers stored in the FDN list on the SIM card.

1. From the Home screen, tap  (Phone).
2. Press  and then tap **Call settings** → **Additional settings** → **Fixed Dialing Numbers**.
3. Tap **Enable FDN**.
4. At the prompt, enter your PIN2 code and tap **OK**. FDN is enabled.
5. Tap **FDN list** then press  and then tap **Add contact** or edit the contacts that were stored.

Important! Not all SIM cards use a PIN2 code. If your SIM card does not, this menu does not display. The PIN2 code is provided by your carrier. Entering the PIN2 incorrectly three times will cause the device to lock. Contact customer service for assistance.

Voicemail

You can view your voicemail number from this menu.

1. From the Home screen, tap  (**Phone**).
2. Press  and then tap **Call settings** → **Voicemail service**.
3. Tap **Voicemail**.
4. If an additional voicemail service is in use (other than carrier), tap **Voice settings** to now view your selected voicemail number and information.

Home Screen Mode

This application allows you to set your display to the conventional layout of **Basic mode** or provide an easier user experience for the first-time smartphone users using **Easy mode**.

1. From the Home screen, press  and then tap **Settings** →  (**Home screen mode**).

2. Tap the pull-down Dropbox and select one of the following options:
 - **Basic mode**: provides conventional layout for the apps and widgets on your home screens.
 - **Easy mode**: provides easier user experience for first-time smartphone users on the home screens.
3. Tap **Apply** and give your device a few seconds to update the device with the new look and feel.

Blocking Mode

When Blocking mode is enabled, notifications for selected features will be disabled. You will only receive notifications of incoming calls from people on your allowed list.

1. From the Home screen, press  and then tap **Settings**.
2. In a single motion touch and slide the **Blocking mode** slider to the right to turn it on . Confirm the Blocking mode active icon  appears in the Status bar.

3. Place a green checkmark adjacent to those features you would like to enable. Choose from: Disable incoming calls, Disable notifications, Disable alarm and timer, Disable LED indicator.
4. Configure a timeframe for these features to be active. Remove the checkmark from the **Always** field to configure the **From** and **To** time fields.
5. Tap **Allowed contacts** to assign those contacts that are exempted from these rules. Choose from None, All contacts, Favorites, or Custom.

Sound Settings

From this menu you can control the sounds on the phone as well as configure the display settings.

- From the Home screen, press  and then tap **Settings → Sound**.

The following options display:

Silent mode via Device Options Screen

Silent mode is convenient when you wish to stop the phone from making noise, in a theater for example. In Silent Mode the speaker is muted and the phone only vibrates to notify you of incoming calls, or other functions that normally have a defined tone or sound as an alert.

1. From the Home screen, press and hold the **Lock** key until **Device options** displays.
2. Tap either **Mute**, **Vibrate**, or **Sound** from the Device Options screen to activate or deactivate these features (the current mode displays).

Adjusting the Volume Settings

The Volume menu now provides access to various volume settings within one on-screen popup menu.

1. From the Home screen, press  and then tap **Settings → Sound → Volume**.
2. Touch and drag the on-screen slider to assign the volume settings for any of the following volume levels.
 - **Music, video, games, and other media**, **Ringtone**, **Notifications** or **System**.
3. Tap **OK** to assign the volume levels.

Vibration intensity

Vibration intensity allows you to select how intense the vibration is for different options.

1. From the Home screen, press  and then tap **Settings → Sound → Vibration intensity**.
2. Touch and drag the slider to adjust the Vibration intensity for **Incoming call**, **Notification**, and **Haptic feedback**.
3. Tap **OK** to assign the vibration levels.

Setup the Voice Call Ringtone

This option allows you to set the ringtone.

1. From the Home screen, press  and then tap **Settings → Sound**.
2. Tap **Device ringtone**.
3. Tap a ringtone from the available list. The ringtone briefly plays when selected.
4. Tap **OK** to assign a ringer.

Setup the Device Vibration

This option allows you to set your device to vibrate and ring.

1. From the Home screen, press  and then tap **Settings → Sound**.
2. Tap **Device vibration**.
3. Select a vibration pattern and tap **OK**.

Setting a Default Notification Ringtone

This option allows you to set the ringtone that will sound for notifications and alarms.

1. From the Home screen, press  and then tap **Settings → Sound → Default notifications**.
2. Tap one of the ringtones and tap **OK**.

Setting up Sound and Vibration

This option allows you to adjust the sound and vibration functions.

1. From the Home screen, press  and then tap **Settings → Sound**.
2. Tap the **Sound and vibration** field to activate the feature.

Audible System Tone Settings

These options are used when you use the dialing pad, make a screen selection, lock your screen, or tap the screen. Each time you press a key or make a selection the selected tone sounds.

1. From the Home screen, press  and then tap **Settings → Sound**.
2. Tap **Keytones** to activate a tone when you use on-screen keys. A check mark displayed next to these features indicates active status.
3. Tap **Touch sounds** to activate a tone when you touch the screen. A check mark displayed next to this feature indicates active status.
4. Tap **Screen lock sound** to activate a tone when you use the Lock screen. A check mark displayed next to this feature indicates active status.
5. Tap **Haptic feedback** to activate the a vibration when you press soft keys on certain screens. A check mark displayed next to the feature indicates this feature is active.

Display Settings

In this menu, you can change various settings for the display such as the font, orientation, pop-up notifications, puzzle lock feature, animation, brightness, screen timeout, and power saving mode.

Adjusting the Screen Display

1. From the Home screen, press  and then tap **Settings → Display**.
2. Configure the following screen display settings:
 - **Wallpaper**: allows you to set the Wallpaper for your Home screen, Lock screen, or both.
 - **LED indicator**: allows you to turn on your LED lights for charging, low battery, incoming notifications, and voice recording. The light will turn on by default unless you turn them off.
 - **Page buddy**: allows context related pages to be created on the Home screen. You can select S Pen page, Earphones page, Docking page, and Roaming page. Tap Page buddy help for more information.
 - **Screen mode**: allows you to select from several different color modes.

- **Brightness:** adjusts the on-screen brightness level. For more information, refer to “*Adjusting Screen Brightness*” on page 321.
- **Auto-rotate screen:** allows you to switch the display orientation automatically when you rotate the phone.
- **Screen timeout:** adjusts the delay time before the screen automatically turns off. Selections are: 15 seconds, 30 seconds, 1 minute, 2 minutes, 5 minutes, and 10 minutes.
- **Smart rotation:** disables the auto screen rotation by checking the orientation of your face and the device.
- **Smart stay:** tap this option to disable the screen timeout if your device detects that your face is watching the screen.
- **Font style:** sets the fonts used on the LCD display. Selections are: **Default font**, **Choco cooky**, **Helvetica S**, **Rosemary**, or **Get fonts online**. Tap **Get fonts online** to download additional fonts.
- **Font size:** allows you to select which size of font is displayed.
- **Touch key light duration:** allows you to adjust the delay before the Touch key light automatically turns off.

- **Display battery percentage:** to activate/deactivate the display of battery charge percentage atop the battery icon at the top of the screen.
- **Auto adjust screen tone:** adjusts the phone’s LCD brightness level to automatically adjust and conserve battery power.

Adjusting Screen Brightness

This feature configures the LCD Brightness levels.

1. From the Home screen, press  and then tap **Settings → Display → Brightness**.
2. Tap **Automatic brightness** to allow the phone to self-adjust and tap **OK**.
— or —

Touch and slide the on-screen slider to adjust the level and tap **OK**.

Assigning a Wallpaper

The Wallpaper settings option allows you to set the Wallpaper for your Home screen, Lock screen, or both.

1. From the Home screen, press  and then tap **Settings → Display → Wallpaper**.
2. Select an available option to change its current wallpaper.

For more information, refer to “Managing Wallpapers” on page 74.

LED Indicator

This option allows you to turn on your LED lights for charging, missed events, and incoming notifications. The light will turn on by default unless you turn them off.

1. From the Home screen, press  and then tap **Settings → Display → LED indicator**.
2. Tap the following LED indicator options to turn them on or off:
 - **Charging:** LED lights up when the device is connected to the charger.
 - **Low battery:** LED lights up when the battery level is low.

- **Notifications:** LED lights up when you have missed calls, messages, or application events.
- **Voice recording:** LED lights up when you are recording voice. The LED only lights up when the screen is off.

SD Card & Device Storage

From this menu you can view the memory allocation for the memory card as well as mount or unmount the SD card.

For more information about mounting or unmounting the SD card, see “Using the SD Card” on page 76.

To view the memory allocation for your external SD card:

- From the Home screen, press  and then tap **Settings → Storage**. The available memory displays under the Total space and SD card headings.

Power Saving Mode

This feature allows you both automatically set the phone to use a power saving mode and configure additional power saving options manually, all in an effort to conserve battery power.

1. From the Home screen, press  and then tap **Settings → Power saving**.
2. In a single motion touch and slide the slider to the right to turn it on .
3. Tap the following options to create a check mark and conserve power:
 - **CPU power saving**: allows you to limit the maximum performance of the CPU.
 - **Screen power saving**: allows you to lower the screen power level.
 - **Background color**: allows you to change the background color on email and internet to save power.
 - **Turn off haptic feedback**: allows you to turn off vibration when you tap or touch the screen.
4. Tap **Learn about power saving** to learn about various ways to conserve battery power.

5. When the power gets low, confirm  appears at the top of the screen. This indicates the power saving mode is active.

Battery Usage

This option allows you to view a list of those components using battery power. The amount of time the battery was used also displays. Battery usage displays in percentages per application.

1. From the Home screen, press  and then tap **Settings → Battery**. The battery level displays in percentage.
2. From the upper-right tap  (**Refresh**) to update the list.
— or —
Tap an entry to view more detailed information.

Note: Other applications may be running that affect battery use.

Applications Manager

This device can be used for Android development. You can write applications in the SDK and install them on this device, then run the applications using the hardware, system, and network. This feature allows you to configure the device for development.

Warning! Because the device can be configured with system software not provided by or supported by Google or any other company, end-users operate these devices at their own risk.

This menu allows you to manage installed applications. You can view and control currently running services, or use the device for application development.

You can also view the amount of memory or resources used as well as the remaining memory and resources for each of the applications on your phone and clear the data, cache, or defaults.

- From the Home screen, press  and then tap **Settings → Applications manager → All**.

Clearing Application Cache and Data

Important! You must have downloaded applications installed to use this feature.

1. From the Home screen, press  and then tap **Settings → Applications manager**.
2. Tap an application in which to clear the cache or data.
3. Tap **Force stop**, **Uninstall**, **Clear data**, **Clear cache**, or **Clear defaults**.

Uninstalling Third-party Applications

Important! You must have downloaded applications installed to use this feature.

1. From the Home screen, press  and then tap **Settings → Applications manager**.
2. Tap the **DOWNLOADED** tab and select your desired application.
3. Tap **Uninstall** (from within the top area of the Application info page).
4. At the prompt, tap **OK** to uninstall the application.

5. Select a reason for uninstalling the application, then tap **OK**.

Memory Usage

See how memory is being used by Downloaded or Running applications.

1. From the Home screen, press  and then tap **Settings → Applications manager**.
2. Tap **DOWNLOADED**, **RUNNING**, or **ALL** to display memory usage for that category of applications.

The graph at the bottom of the Downloaded tab shows used and free device memory. The graph at the bottom of the Running tab shows used and free RAM.

Downloaded

Displays apps you have downloaded onto your device.

1. From the Home screen, press  and then tap **Settings → Applications manager**.
2. Tap the **DOWNLOADED** tab to view a list of all the downloaded applications on your device.
3. To switch the order of the lists displayed in the Downloaded tabs, press  and select **Sort by size** or **Sort by name**.

4. Tap an application to view and update information about the application, including memory usage, default settings, and permissions.

Running Services

The Running services option allows you to view and control currently running services such as Backup, Google Talk, SNS (messaging), Swype, and more.

1. From the Home screen, press  and then tap **Settings → Applications manager**.
2. Tap the **RUNNING** tab to view all currently active and running applications. This tab also shows the total RAM being used by these currently active applications.
3. Tap a process and select **Stop** to end the process and stop it from running. When you stop the process the service or application will no longer run until you start the process or application again.
4. Tap **Report** to submit feedback to the application's developer.
5. Enter your text and tap **Send** to deliver the feedback.

Important! Stopping a process might have undesirable consequences on the application.

Storage Used

This option allows you to view a list (on the current tab) of current applications as sorted by size.

1. From the Home screen, press  and then tap **Settings → Applications manager**.
2. Tap the **ALL** tab to display all available applications.
3. Press  and then tap **Sort by size** to change the current list to show items based on the amount of storage they occupy.

Reset App Preferences

This feature provides you with the ability to reset all preferences for the following features: Disabled apps, Disabled app notifications, Default applications for actions, and Background data restrictions.

1. From the Home screen, press  and then tap **Settings → Applications manager**.
2. Tap the **ALL** tab to display all available applications.
3. Press  and then tap **Reset app preferences → Reset apps**.

Important! As an example, if you assigned your browser to always launch YouTube links and want that changed, you must reset the default actions.

Location Services

The Location services allows you to configure the device's location services.

Important! The more location determining functions are enabled, the more accurate the determination will be of your position.

Using Wireless Networks

Before you use applications such as Google Maps and find your location or search for places of interest, you must enable the Use wireless networks option.

1. From the Home screen, press  and then tap **Settings → Location services**.
2. Tap **Use wireless networks** allows apps to use data from sources such as Wi-Fi and mobile networks to provide a better approximation of your current location.

Enabling the GPS Satellites

1. From the Home screen, press  and then tap **Settings → Location services**.
2. Tap **Use GPS satellites** to enable the GPS satellite.

Enabling the Location and Google Search

1. From the Home screen, press  and then tap **Settings → Location services**.
2. Tap **Location and Google search** to enable the GPS satellite.

Tip: When using Google Maps you can turn on **Location and Google search**. Enabling this feature allows you to locate places of interest at the street-level. However, this also requires a clear view of the sky and uses more battery power.

Lock Screen

This menu contains features that allows you to configure the device's lock screen parameters.

Screen Unlock Pattern Overview

To secure data and limit phone access, set the phone to require a screen unlock pattern each time you turn on the device, or every time the phone wakes up from sleep mode (when the screen automatically turns off).

The Screen lock menu allows to choose from a variety of locking features such as: **Swipe**, **Motion**, **Face unlock**, **Face and voice**, **Pattern**, **PIN**, **Password**, and **None**.

Using Swipe

This feature is the least secure locking method and only requires that a user swipe the screen to unlock the device.

1. From the Home screen, press  and then tap **Settings → Lock screen**.
2. Tap **Screen lock → Swipe**.

Using a Motion to Unlock

This feature allows you to lock or unlock your device by simply tilting it and moving it either forwards or backwards.

1. From the Home screen, press  and then tap **Settings → Lock screen**.
2. Tap **Screen lock → Motion → OK**.

To unlock a device with motion:

1. Verify the device is on and on the Lock screen.
2. In a single motion, use your thumb to touch and hold the Lock screen, then quickly tilt the device towards you.

Note: If you forget, these instructions appear at the bottom of the Lock screen.

Using Face Unlock

This feature used facial recognition to unlock your phone. This feature is less secure than PIN, Pattern, and Password locks and can be bypassed by someone else who looks similar to you.

1. From the Home screen, press  and then tap **Settings → Lock screen**.
2. Tap **Screen lock → Face unlock**.
3. Read the on-screen notification and tap **Next**.
4. From the About Face Unlock screen, tap **Set it up**.
5. Follow the on-screen instructions.

Using Face and Voice Unlock

This feature used facial recognition to unlock your phone. This feature is less secure than PIN, Pattern, and Password locks and can be bypassed by someone else who looks similar to you.

1. From the Home screen, press  and then tap **Settings → Lock screen**.
2. Tap **Screen lock → Face and voice**.
3. Read the on-screen notification and tap **Next**.
4. From the About Face Unlock screen, tap **Set it up**.

5. Follow the on-screen instructions.
6. Once prompted to speak and unlock command, tap  and repeat the phrase four times.
7. Once complete, tap **Done**.

Setting an Unlock Pattern

Creating a screen unlock pattern increases security on the phone. When you enable the User visible pattern field, you will draw an unlock pattern on the screen whenever you want to unlock the device's buttons or touch screen. When you activate the User tactile feedback field, you feel vibration as feedback while drawing the pattern.

The feature is now paired with a backup PIN code that acts as a backup to the pattern lock. If you forget your pattern, you can regain access to the device by entering a PIN code.

Note: Make sure the Require Pattern field is activated.

1. From the Home screen, press  and then tap **Settings → Lock screen**.
2. Tap **Screen lock → Pattern**.
3. Read the instructions then tap **Next**.

4. Review the on-screen animation procedure for drawing a pattern and tap **Next** when you are ready to draw a pattern.
5. Draw your pattern by touching your first on-screen point. Then, **without removing your finger from the screen, drag your finger over adjacent points until the gray trace line overlaps each point** and they are highlighted with a green circle.
6. When you have connected at least four dots in a vertical, horizontal or diagonal direction, lift your finger from the screen and tap **Continue**.
7. Confirm the new pattern by redrawing it and then tapping **Confirm**. The Unlock pattern is set.
8. Enter the backup PIN code and tap **Continue**.

Important! If you forget your pattern, you can enter your backup PIN number to unlock your device.

9. Reenter the PIN to reconfirm the previous entry and tap **OK**.

Changing the Screen Lock Pattern

This feature allows you to change the previously stored unlock pattern and update it if necessary. This process is similar to changing your password from time to time.

1. From the Home screen, press  and then tap **Settings → Lock screen**.
2. Tap **Screen lock**.
3. Retrace your current pattern on the screen.
4. Tap **Pattern** and repeat steps 3 - 7 from the previous section.

Deleting the Screen Lock Pattern

1. From the Home screen, press  and then tap **Settings → Lock screen**.
2. Tap **Screen lock**.
3. Retrace your current pattern on the screen.
4. Tap **None**.

What If I Forget my Pattern?

If you forget your device's lock pattern, you can unlock your device or reset it using your Google™ Account credentials. When you enter the wrong unlock pattern too many times, you should see an option at the bottom of the screen that says **Forgot pattern?** Follow these steps to use either your PIN or email address.

Important! You can only enter an incorrect lock pattern 5 times before the device is locked.

Important! If you are unsuccessful in retrieving your lock pattern or unlocking your device, please contact T-Mobile for assistance.

To unlock your device with a PIN code:

1. Tap **Forgot pattern?** (located at the bottom of the screen).
2. Scroll down and tap the **Type PIN code** field and use the on-screen keypad to enter the backup PIN code you setup when you created your lock pattern.
3. Tap **OK**.

4. If you have forgotten your current pattern, tap **Pattern** from the Screen unlock settings menu and follow the procedures outlined in *"Setting an Unlock Pattern"* on page 329 to create a new pattern.

To unlock your device using your Google account:

1. Tap **Forgot pattern?** (located at the bottom of the screen).
2. Tap the **Username (email)** and **Password** fields, use the on-screen keyboard to enter your Google Account credentials, and tap **Sign in** to complete the login process.
3. If you have forgotten your Google Account credentials, visit the Google website to recover them. If you still cannot get your Google Account credentials, contact your wireless carrier for additional options.

PIN Lock and Unlock

1. From the Home screen, press  and then tap **Settings → Lock screen**.
2. Tap **Screen lock → PIN**.
3. Enter a PIN number using the numeric keypad and touch **Continue** to confirm the password.
4. Confirm the PIN by re-entering it and tap **OK** to confirm. Your phone now requires you to enter this PIN number in order to unlock the phone.

Password Lock and Unlock

1. From the Home screen, press  and then tap **Settings → Lock screen**.
2. Tap **Screen lock**.
3. Tap **Password**.
4. Enter a password using the keypad and tap **Continue** to confirm the password.
5. Confirm the password by re-entering it and tap **OK** to confirm.

Samsung Unlock Options

Activate or deactivates various Unlock screen functions.

1. From the Home screen, press  and then tap **Settings → Lock screen**.

Important! When the **Popup Note on lock screen** option is enabled, the device displays a on-screen Popup Note when the lock screen appears. This option only appears when a screen lock option is active.

2. Tap **Lock screen options** and choose from one of the following preferences.

Note: These options vary depending on the selected Lock settings.

- **Shortcuts** sets shortcuts to appear at the bottom of the Lock screen. For more information, refer to “*Customizing Your Lock Screen Shortcuts*” on page 333.
- **Information ticker** sets the news and stock information ticker to appear across the bottom of the Lock screen.

- **Clock** allows you to display the digital clock while the Lock screen is active. Enabled by default.
- **Dual clock** displays a set of dual digital clock on the Lock screen while you are traveling. Tap the entry to set your home city. This time zone then becomes the time used by one of these on-screen clocks.
- **Weather** displays the current area weather on the Lock screen. Tap and set both the temperature units (F or C) and a refresh time.
- **Ripple effect** activates/deactivates the ripple effect on the lock screen when you tap it.
- **Ink effect** activates/deactivates the ink effect on the lock screen. If a live wallpaper is set on the lock screen, the ink effect is automatically disabled.
- **Help text** shows help information on the Lock screen.
- **Camera quick access** provides you with quick access to the camera function from the Lock screen. When active, in a single motion,
- **Wake up in lock screen** requires that you say a command to wake-up S Voice.

- **Set wake-up command** designates your S Voice wake-up commands. Tap Wake-up S Voice and follow the on-screen prompts to create a new verbal command.

Customizing Your Lock Screen Shortcuts

Your device also provides up to 4 application shortcuts that can be used to quickly access an application right from the lock screen.

Important! To use these shortcuts, your Screen Lock feature can only be set to either Swipe or None.

To open a shortcut from the lock screen:

- In a single motion, swipe your finger over the on-screen icon and towards the top of your device. Your device will unlock and you will be taken immediately to the application.

To edit these Lock screen shortcuts:

1. From the Home screen, press  and then tap **Settings → Lock screen → Lock screen options**.
2. In a single motion touch and slide the **Shortcuts** slider to the right to turn it on  **ON**.
3. Tap the **Shortcuts** field to activate the menu.
4. Tap a shortcut icon you wish to replace.
5. From the select application menu, tap a replacement application.
6. Press  to return to the previous screen.

Lock Automatically

This option allows you to define the amount of time that must pass before the device can automatically lock on its own.

Note: This option only appears when a screen lock option is active.

Lock instantly with Power Key

When enabled, the screen is automatically locked after pressing the Power/Lock key.

Note: This option only appears when a screen lock option is active.

Owner Information

This option allows you to show user-defined information on the Lock screen.

1. From the Home screen, press  and then tap **Settings → Lock screen → Owner information**.
2. Tap the **Show owner info on lock screen** checkbox to create a checkmark if you want your owner information displayed.
3. Enter text that you would like displayed on your Lock screen.
4. Tap **OK** to save the new text and return to the previous screen.

Security

The Security settings allow you to determine the security level for your device.

Encrypt Device

When enabled, this feature requires a numeric PIN or password to decrypt your phone each time you power it on or encrypt the data on your SD card each time it is connected:

1. From the Home screen, press  and then tap **Settings → Security**.
2. Tap **Encrypt device**. For more information, read the displayed help screen.
3. Tap **Encrypt external SD card** to enable the encryption on SD card data that requires a password be entered each time the microSD card is connected.

Tip: Make sure your battery is charged more than 80 percent. Encryption may take an hour or more.

Setting up SIM Card Lock

Prevent another user from using your SIM card to make unauthorized calls or from accessing information stored on your SIM card by protecting the information using a PIN code.

When enabled, your phone will ask for a PIN number each time you use the phone. Using this option you can also change your SIM PIN number.

1. From the Home screen, press  and then tap **Settings → Security**.
2. Tap **Set up SIM card lock**.
3. Tap **Lock SIM card**, enter your SIM PIN code, then tap **OK**.

Note: You must activate Lock SIM card before you can change your SIM PIN code.

To change an existing SIM Card PIN:

1. Tap **Change SIM PIN**.
2. Enter the old SIM PIN code and tap **OK**.
3. Enter the new SIM PIN code and tap **OK**.
4. Re-type the new SIM PIN code and tap **OK**.

Password Settings

When you create a phone password you can also configure the phone to display the password as you type it instead of using an asterisk (*).

1. From the Home screen, press  and then tap **Settings → Security**.
2. Tap **Make passwords visible** to activate this feature.

Device Administration

Activating this feature allows Google to administrate your phone in a way similar to IT security settings on a corporate PC. This would be beneficial in the case that your phone was lost or stolen. The phone could be “deactivated” or “restricted” (through administration) from a remote location.

1. From the Home screen, press  and then tap **Settings → Security**.
2. Tap **Device administrators** to begin configuring this setting.
3. Select an administrator device and follow the prompts.

Unknown Sources

Before you can download a web application you must enable the Unknown sources feature (enables downloading). Developers can use this option to install non-Play Store applications.

1. From the Home screen, press  and then tap **Settings → Security**.
2. Tap **Unknown sources** to active this feature.

Note: If you are notified that you can not download a Play Store application because it comes from an “Unknown source”, enabling this option corrects this issue.

Credential Storage

This option allows certain applications to access secure certificates and other credentials. Certificates and credentials can be installed to the SD card and password protected.

1. From the Home screen, press  and then tap **Settings → Security and lock screen**.
2. Tap **Trusted credentials** to display only trusted CA certificates. A check mark displayed next to the feature indicates secure credentials.
3. Tap **Install from device storage** to install encrypted certificates from the USB Storage location.
4. Tap **Clear credentials** to clear the device (SD card or phone memory) of all certificate contents and reset the credentials password.

One-handed Operation

The one-handed operation settings help you to use your phone keypads easily with only one hand.

1. From the Home screen, press  and then tap **Settings → One-handed operation**.
2. The following options are available:
 - **Keypad & in-call buttons**: allows you to adjust the position of the dialing keypad and in-call buttons to the left or the right to make it easier to use with one hand.
 - **Samsung keyboard**: allows you to adjust the position of the Samsung keyboard to the left or the right to make it easier to use with one hand.
 - **Calculator**: allows you to adjust the position of the calculator keypad to the left or the right to make it easier to use with one hand.
 - **Unlock pattern**: allows you to adjust the scale of the unlock pattern for use with one hand.
 - **Learn about on-handed operation**: provides more information about using one-handed operation.

Language and Input Settings

This setting allows you to configure the language in which to display the menus. You can also set on-screen keyboard options.

- From the Home screen, press  and then tap **Settings → Language and input**.

Language Settings

To set the language that the menus display on the phone:

1. From the Home screen, press  and then tap **Settings → Language and input → Language**.
2. Select a language and region from the list.

Select Input Method

1. From the Home screen, press  and then tap **Settings → Language and input → Default**.
2. Select an input method.
– or –
Tap **Set up input methods** to alter/modify the available input methods.

Configure Google Voice Typing

1. From the Home screen, press  and then tap **Settings → Language and input**.

– or –

From a screen where you can enter text, in a single motion, touch and drag the Status bar down to the bottom of the screen, then select  (**Choose input method**) → **Set up input methods**.

2. Tap  (adjacent to the **Google voice typing** field).
3. Select a language by tapping **Choose input languages** area.
4. Remove the check mark from the **Automatic** field. This allows you to select additional languages.
5. Select the desired languages.
6. Activate **Block offensive words** to block recognition of known offensive words or language. (A green check mark indicates the feature is active).
7. Tap **Download offline speech recognition** to enable speech recognition via locally stored files so that even if you are not connected to a network you can still use the service.

Samsung Keyboard Settings

1. From the Home screen, press  and then tap **Settings** → **Language and input** →  (adjacent to the **Samsung keyboard** field).

– or –

From within an active text entry screen, touch and hold



(**Input Methods**) and select  (**Settings**) to

reveal the **Samsung keyboard settings** screen.

2. Set any of the following options:
 - **Portrait keyboard types** allows you to choose a keyboard configuration (Qwerty Keypad [default] or 3x4 keyboard).
 - **Input languages** sets the input language. Tap a language from the available list. The keyboard is updated to the selected language.
 - **Predictive text** enables predictive text entry mode. This must be enabled to gain access to the advanced settings. Touch and hold to access the advanced settings
 - **Swiftkey flow** like using Swipe, allows you to enter text by sliding your fingers across the on-screen keyboard. This feature is optimized for use with the on-screen QERTY keyboard.

- **Pen detection** enables the handwriting pad whenever the S Pen is detected on the screen.
- **One-handed operation** sets the on-screen keyboard to reposition and resize for use by either a single left or right hand operation.
- **Handwriting** allows you to configure the handwriting settings such as: allows you to configure the handwriting settings such as: Input languages, Recognition type, Recognition time, Pen thickness, Pen color, Gesture guide, Tutorial, and About.
- **Advanced** provides access to additional settings such as:
 - **Auto capitalization** automatically capitalizes the first letter of the first word in each sentence (standard English style).
 - **Auto-punctuate** automatically inserts a full stop in a sentence by tapping the space bar twice when using the on-screen QWERTY keyboard.
 - **Character preview** provides an automatic preview of the current character selection within the text string. This is helpful when multiple characters are available within one key.
 - **Key-tap vibration** enables vibration feedback when you tap an on-screen key.

- **Key-tap sound** enables auditory feedback when you tap an on-screen key.
- **Tutorial** launches a brief on-screen tutorial covering the main concepts related to the Samsung keyboard.
- **Reset settings** resets the keyboard settings back to their original configuration.

Predictive Text - Advanced Settings

The predictive text system provides next-letter prediction and regional error correction, which compensates for users pressing the wrong keys on QWERTY keyboards.

1. From the Home screen, press  and then tap **Settings** → **Language and input** →  (adjacent to the **Samsung keyboard** field).

— or —

From within an active text entry screen, touch and hold  (**Input Methods**) →  to reveal the **Samsung keyboard settings** screen.

2. In a single motion touch and slide the **Predictive text** slider to the right to turn it on  **ON**.
3. Tap the **Predictive text** field and configure any of the following advanced options:

- **Personalized data** activate this feature to use the personal language data that you have entered and selected to make your text entry prediction results better. By enabling this feature you can choose from the following personalization features:
- **Learn from Facebook**: allows you to log into your current Facebook account from where style and contact names are added to your personal dictionary for later use when you enter names into text fields. Helps recognize familiar names.
- **Learn from Gmail**: allows you to sign in to your existing Gmail account from where your style and existing contact information is added to your personal dictionary. Helps recognize familiar names.
- **Learn from Twitter**: allows you to sign into your existing Twitter account from where your style and names and words are added to your personal dictionary. Helps recognize familiar names and words.
- **Clear remote data**: deletes your anonymous data stored on the personalization server.
- **Clear personalized data**: removes all personalized data entered by the user.
- **Privacy**: allows you to review the current privacy policy.

4. Press  to return to the previous screen.

Swype Settings

To configure Swype settings:

1. Press  →  and then tap **Settings** → **Language and input** →  (adjacent to the **Swype** field).
2. Tap **How to Swype** to view an on-screen manual for Swype.
3. Tap **Preferences** to alter these settings:
 - **Vibrate on keypress:** activates a vibration sensation as you enter text using the keypad.
 - **Sound on keypresses:** turns on sounds generated by the Swype application.
 - **Show helpful tips:** turns on a flashing indicator for quick help.
 - **Auto-spacing:** automatically inserts a space between words. When you finish a word, just lift your finger or stylus and start the next word.
 - **Auto-capitalization:** automatically capitalizes the first letter of a sentence.
 - **Show complete trace:** once enabled, sets whether or not to display the complete Swype path.

- **Pop-up on keypress:** once enabled, displays a character above an on-screen key while typing.
- **Next word prediction:** once enabled, predicts the next word in your text string based on your current text entries.

Note: If incorrect words are being entered as you type, disabled this feature.

- **Reset Swype's dictionary:** once enabled, deletes any words you have added to Swype's dictionary.
 - **Version:** displays the software version information.
4. Tap **Language Options** to activate and select the current text input language. Default language is US English.
 5. Tap **Swype Connect** to activate social media personalization and configure data settings.
 - **Facebook:** allows you to log into your current Facebook account from where contact names are added to your Swype's personal dictionary for later use when you enter names into text fields. Helps recognize familiar names.
 - **Twitter:** allows you to sign into your existing Twitter account from where names and words are added to your personal dictionary. Helps recognize familiar names and words.

- **Gmail:** allows you to sign in to your existing Gmail account from where existing contact information is added to your personal dictionary. Helps recognize familiar names.
 - **Contribute usage data:** when enabled, allows the Nuance® application to collect usage data for better word predictions.
 - **Cellular data:** when enabled, activates cellular data usage by the Swype application so it can receive program updates, language downloads, and other related features via your existing data connection.
6. Tap **Personal dictionary** to access and manage your personal dictionary.
 7. Tap **Updates** to update the application if new software is available.

Note: Another method for entering text is via a speech to text recognition system. For more information, refer to *“Using the Google Voice Typing”* on page 117.

Configuring Voice Input Recognition

This feature allows the device to correctly recognize verbal input.

1. From the Home screen, press  and then tap **Settings → Language and input**.
2. Tap **Voice search** to configure the following:
 - **Language:** Choose a language for your voice input.
 - **Speech output:** Sets whether you will use speech output always or only when using hands-free.
 - **Block offensive words:** Enable or disable blocking of recognized offensive words from the results of your voice-input Google searches.
 - **Hotword detection:** Enable to being able to launch voice search by saying the word “Google”.
 - **Download offline speech recognition:** Enables voice input while offline.
3. Press  to return to the previous screen.

Configuring Text-to-speech

This feature allows the device to provide a verbal readout of on-screen data such as messages and incoming caller information. This action is called TTS (Text To Speech).

1. From the Home screen, press  and then tap **Settings → Language and input → Text-to-speech output**.
2. Select a current Preferred TTS engine from the list of available options. Select **Google Text-to-speech Engine** or **Samsung TTS**. The default is Google Text-to-speech.
3. Tap  next to the preferred TTS engine configure the following settings:
 - **Language:** allows you to set the language for spoken text.
 - **Settings for Google Text-to-speech Engine:** allows you to view Open Source Licenses.
 - **Install voice data:** allows you to install voice data for speech synthesis.
 - **Settings for Samsung TTS:** allows you to configure the settings for the Samsung TTS system if the option is enabled.
4. Configure the General options to alter the settings associated with this feature:

- **Speech rate:** adjusts the rate at which on-screen text is spoken by the device. Choose from: **Very slow**, **Slow**, **Normal**, **Fast**, and **Very fast**.
- **Listen to an example:** plays a short example of what the text-to-speech feature sounds like on your device when activated.
- **Driving mode:** incoming calls and new notifications are automatically ready out loud. In a single motion touch and slide  to the right to turn it on.
 - Once active, tap the Driving mode field to reveal the associated settings.
 - Select those applications that will use TTS while driving mode is activated. Choose from: Incoming call, Message, New emails, New voicemail, Alarm, Schedule, or Unlock screen.

Configuring the Mouse-TrackPad

This feature allows you to configure the pointer speed for the mouse/trackpad.

1. From the Home screen, press  and then tap **Settings → Language and input → Pointer speed**.
2. Adjust the slider and tap **OK**.

Cloud

This feature allows you to use your external cloud storage solution to both synchronize your device to your Samsung account and then backup that local content to the cloud.

Your device comes with a built-in Cloud storage solution known as Dropbox.

Important! This feature requires an active Wi-Fi connection prior to use.

1. Log into your Samsung account and verify it is active. For more information, refer to *“Creating a Samsung Account”* on page 21.
2. Log into your external cloud storage solution. In our case we are using a Dropbox account. For more information, refer to *“Accessing Dropbox on your Device”* on page 236.
3. From the Home screen, press  and then tap **Settings → Cloud**.
4. Confirm your Samsung account appears at the top of the screen.

5. Tap **Sync settings**, select which device parameters will be synched, and tap **Sync now**. Choose from: Sync Calendar, Sync Contacts, Sync Internet, and Sync S Note.
6. Tap **Device backup** and restore and configure your Backup and restore option.
 - **Auto backup**: configures automatic data backup to your cloud storage location.
 - **Backup options**: allows you to select what data is backed up from your device to the cloud. Choose from: Logs, Messages (SMS), Messages (MMS), and Wallpaper. Tap **OK** to complete the selection.
 - **Back up now**: manually loads up the currently selected categories and backs up the data to your cloud storage location. Tap **Back up** to begin the manual backup process.
 - **Restore**: allows you to retrieve your previously backed up data from your Samsung account and then download it to your device.

Back up and Reset

Location settings, backup configurations, or reset the phone to erase all personal data.

- From the Home screen, press  and then tap **Settings → Back up and reset**.

Mobile Backup and Restore

The device can be configured to back up your current settings, application data and settings.

1. From the Home screen, press  and then tap **Settings → Back up and reset**.
2. Tap **Back up my data** to create a backup of your current phone settings and applications.
3. Tap **Backup account** to assign the account being backed up.
4. Tap **Automatic restore** to assist in the re-installation of a previously installed application (including preferences and data).
5. Tap **Factory data reset** to reset your device and sound settings to the factory default settings. For more information, refer to “*Factory Data Reset*” on page 346.

6. Tap **Collect diagnostics** to collect diagnostic data for troubleshooting use. For more information, refer to “*Collect Diagnostics*” on page 346.

Prior to doing a Factory Reset

Before initiating a factory reset, it is recommended that you backup your personal data prior to use.

To export a Contact list to your microSD card:

1. From the Home screen, tap  (**Contacts**).
2. Press  and then tap **Import/Export**.
3. Tap **Export to SD card → OK**. For more information, refer to “*Export/Import*” on page 137.

Verify your images and videos are on your microSD card:

1. From the Home screen, tap  (**Applications**) →  (**Gallery**).
2. Verify the Gallery contains all of your pictures and videos.
3. Remove both the back cover and remove the internal microSD card prior to initiating the process.

Factory Data Reset

From this menu you can reset your device and sound settings to the factory default settings.

1. From the Home screen, press  and then tap **Settings → Back up and reset → Factory data reset**.
2. Read the on-screen reset information.
3. Tap **Reset device**.
4. If necessary, enter your password and tap **Delete all**.
The device resets to the factory default settings automatically and when finished displays the Home screen.

Collect Diagnostics

This feature only collects diagnostic data for troubleshooting use.

1. From the Home screen, press  and then tap **Settings → Back up and reset → Collect diagnostics**.
2. Read the on-screen System Manager Application information.

Note: This software collects only diagnostic data from your device so that T-Mobile technicians can better troubleshoot issues with your device.

3. Choose to enable or disable the feature by placing a check mark in the **Allow Diagnostics** field.
4. Select either **More Info..** (to read additional information) or **Close** to close the message screen.

Important! Selecting **Close** only closes the current description screen and does not disable data collection. To disable data collection, go to **Settings → Back up and reset → Collect diagnostics** and turn off the **Allow Diagnostics** feature.

Add Account

This menu allows you to set up, manage, and synchronize accounts, including your Google and email accounts.

Adding an Account

1. From the Home screen, press  and then tap **Settings** and then navigate to the **Accounts** area.
2. Tap **Add account** and select one of the account types.
3. Use the keyboard and follow the prompts to enter your credentials and set up the account.

A green circle will appear next to the account type once you have created an account. Your email account will also be displayed in the **Accounts** section of the main Settings menu.

Removing an Account

Important! Removing an account also deletes all of its messages, contacts, and other data from the device.

1. From the Home screen, press  and then tap **Settings** and then navigate to the **Accounts** area.
2. Tap the account name.
3. From the Accounts area of the screen, tap the account entry.
4. Tap **Remove account**, then tap **Remove account** at the prompt to remove the account and delete all its messages, contacts, and other data.

Synchronizing Accounts

Select the items you want to synchronize on your account such as Books, Calendar, Contacts, and more.

1. From the Home screen, press  and then tap **Settings** and then navigate to the **Accounts** area.
2. Tap the account name.
3. Tap the account name.
4. Tap **Sync now** to synchronize your account or tap **Sync all** to synchronize all your accounts. Tap **Cancel sync** to stop the synchronization.
5. Tap **Settings** to access your account settings.

Motion Settings

This feature allows you to assign specific functions to certain phone actions that are detected by both the accelerometer and gyroscope.

To activate motion:

1. From the Home screen, press  and then tap **Settings → Motion**.
2. In a single motion touch and slide the **Motion** slider to the right to turn it on .

Note: If Motion is not enabled, all motion services are greyed-out and disabled.

To activate different motion functions:

- Tap the **Motion activation** field and activate the desired on-screen motion option.
 - **Quick glance:** Once enabled, allows you to check key device information at a glance by just reaching towards your device.
 - **Direct call:** Once enabled, the device will dial the currently displayed on-screen Contact entry as soon as you place the device to your ear.
 - **Smart alert:** Once enabled, pickup the device to be alerted and notified of you have missed any calls or messages.
 - **Double tap to top:** Once enabled, double tap the top of the device to be taken to the top of the current on-screen list.
 - **Tilt to zoom:** Once enabled, you must be on a screen where content can be zoomed. In a single motion, touch and hold two points on the display then tilt the device back and forth to zoom in or out. Access the Advanced settings to change its sensitivity setting.

- **Pan to move icon:** Once enabled, touch and hold a desired application shortcut icon or widget on the screen. Once it detaches, move the device left or right to migrate it to a new location. Access the Advanced settings to change its sensitivity setting.
- **Pan to browse images:** Once enabled, touch and hold a desired on-screen image to pan around it. Move the device left or right to pan vertically or up and down to pan horizontally around the large on-screen image. Access the Advanced settings to change its sensitivity setting.
- **Shake to update:** Once enabled, shake your device to rescan for Bluetooth devices, rescan for Wi-Fi devices, Refresh a Web page, etc.
- **Turn over to mute/pause:** Once enabled, mute incoming calls and any playing sounds by turning the device over display down on a surface. This is the opposite of the pickup to be notified gesture.
- **Palm swipe to capture:** Once enabled, you can capture any on-screen information swiping across the screen. In a single motion, press the side of your hand on the screen and swipe from left to right. The image is then copied to the clipboard.

- **Palm touch to mute/pause:** Once enabled, you can pause any on-screen video or mute any current sound by simply covering the screen with your hand. Once you remove your hand from the screen, the device goes back to normal by either continuing to play the current video or unmuting the current sound.

To adjust gesture sensitivity:

1. From the Home screen, press  and then tap **Settings → Motion → Advanced settings**.
2. Tap an available field to access the sensitivity settings for the currently active gesture. Choose from:
 - **Quick glance:** allows you to set which features are displayed at a glance when a user reaches for the device. Choose from: Missed call, New message, Battery, Current music, or Status bar.
 - **Gyroscope calibration:** Allows you to properly calibrate your device for use with motion gestures.
 - **Sensitivity settings:** When any of the following features are enabled, you can then adjust their sensitivity. Choose from: Tilt to zoom, Pan to move icon, and Pan to browse images.

Note: Sensitivity settings are only accessible if the gesture is currently active.

S Pen Settings

This menu allows you to customize settings for the S Pen.

1. From the Home screen, press  and then tap **Settings → S Pen**.
2. The following options are available:
 - **Dominant hand:** allows you to set your phone to Left handed or Right handed.
 - **Pen attach/detach sound:** allows you to select a sound to be played whenever the pen is attached or detached.
 - **Open Popup Note:** automatically opens Quick Note whenever the pen is detached.
 - **Battery saving:** disables the pen detection feature while the pen is attached to save battery power.
 - **S Pen keeper:** allows to enable a a sound alert and on-screen notification when you walk around with the device without the pen inserted in its slot.
 - **Air view:** When the S pen tip is near the screen for a while, the S pen hovering feature will be provided.

- **Sound and haptic feedback:** activates S Pen sounds and feedback functionality.
- **Quick Command settings:** allows you to create pen gestures to open selected apps or perform tasks.
- **S Pen help:** provides additional information about S Pen.

Accessory

This menu allows you to assign external speakers when the device is docked.

1. From the Home screen, press  and then tap **Settings → Accessory**.
2. Tap **Dock sound** to play sounds when inserting or removing the device from the dock.
3. Tap **Audio output mode** to use the external dock speakers when the device is docked.
4. Tap **Desk home screen display** to display the desk home screen when the device is docked.
5. Tap **Audio output** to set your Audio output to Stereo or Surround.

Date and Time

This menu allows you to change the current time and date displayed.

1. From the Home screen, press  and then tap **Settings → Date and time**.
2. Tap **Automatic data and time** to allow the network set the date and time.

Important! Deactivate **Automatic data and time** to manually set the rest of the options.

3. Tap **Set date** and use the plus or minus icons to set the **Month**, **Day**, and **Year** then tap **Set**.
4. Tap **Set time** and use the plus or minus icons, set **Hour**, and **Minute**. Tap **PM** or **AM**, then tap **Set**.
5. Tap **Automatic time zone** to allow the network set the time zone information automatically.
6. Tap **Select time zone**, then tap a time zone.
7. Tap **Use 24-hour format**. If this is not selected the device automatically uses a 12-hour format.
8. Tap **Select date format** and select the date format type.

Accessibility Settings

This service lets you enable and disable downloaded accessibility applications that aid in navigating your Android device, such as TalkBack (uses synthesized speech to describe the results of actions), KickBack (provides haptic feedback for actions), and SoundBack (plays sounds for various actions). Also lets you enable use of the power key to end calls.

1. From the Home screen, press  and then tap **Settings → Accessibility**.

Note: Initially, it might be necessary to download accessibility applications from the Play Store.

2. Select the **Auto-rotate screen** field to activate this feature which automatically rotates an available screen.
3. Tap **Screen timeout** to timeout the accessibility feature after a defined amount of time.
4. Tap **Lock automatically** to lock the screen automatically after a selected amount of time.

5. Select the **Speak passwords** field to activate this feature which reads out password information.
6. Select the **Answering/ending calls** field to activate this feature which uses either Any key to answer incoming calls or the  to end any current calls.
7. Tap **Accessibility shortcut** to allow the accessibility shortcut under the device options to be used by pressing and holding the power key.

Note: The Lock automatically function is only available if your device is already using the screen lock feature.

8. Tap **TalkBack** to activate the feature.

Note: TalkBack, when installed and enabled, speaks feedback to help blind and low-vision users.

Important! TalkBack can collect all of the text you enter, except passwords, including personal data and credit card numbers. It may also log your user interface interactions with the device.

9. Tap the **Font Size** field to change the size of the fonts used on the device within menus, options, etc..
Choose from: Tiny, Small, Normal, Large, or Huge.
10. Tap the **Negative colors** field to reverse the display of on-screen colors from White text on a Black background to Black text on a White background.
11. Tap the **Text-to-speech output** field to adjust your text-to-speech settings.
12. Tap **Enhance web accessibility** if want to allow apps to install scripts from Google that make their Web content more accessible. Tap **Allow**.
13. Tap the **Sound balance** field and use the slider to set the Left and Right balance when using a stereo device.
14. Tap the **Mono audio** field to enable stereo audio to be compressed into a single mono audio stream for use with a single earbud/earphone.
15. Tap the **Turn off all sounds** field to mute every sound made by the device during taps, selections, notifications, etc..
16. Tap the **Tap and hold delay** field to select a time interval for this action. Choose from: Short, Medium, or Long.

Developer Options

Use the Developer options to set options for application development.

Important! These features are used for development purposes only.

1. From the Home screen, press  and then tap **Settings → Developer options**.
2. The following options are available:
 - **Desktop backup password:** Allows you to protect your desktop with a backup password ID.
 - **Stay away:** with the Stay away option enabled, your screen will never sleep while you are charging the device.
 - **Protect SD card:** Requires apps to ask your permission before accessing data on your SD card.
 - **USB debugging:** Allows debugging when the device is attached to a PC by a USB cable.
 - **Allow mock locations:** Used by developers when developing location-based applications.
 - **Select app to be debugged:** Allows developers to select a specific app to debug.

- **Wait for debugger:** Specified apps must have debugger attached before executing.
- **Show touches:** Displays touch interactions on the screen.
- **Show pointer location:** Highlights the data that was touched on the screen.
- **Show layout boundaries:** Displays clip bounds, margins, etc.
- **Show GPU view updates:** Flashes views inside windows when drawn with GPU.
- **Show screen updates:** Forces areas of the screen to flash as it is updated.
- **Window animation scale:** Configure the scale for animation (ranges from off to 10x).
- **Transition animation scale:** Configure the scale for transitioning when using animation (ranges from off to 10x).
- **Animator duration scale:** Configure the scale for duration when using animation (ranges from off to 10x).
- **Disable hardware overlays:** Assigns the work of rendering to the GPU.
- **Force GPU rendering:** Uses a 2D acceleration in applications.
- **Strict mode:** Makes the screen flash when applications perform long operations on the main thread.

- **Show CPU usage:** Screen highlights the current CPU usage.
- **GPU rendering profile:** Allows you to set the adb shell to measure rendering.
- **Enable traces:** Enables/disables on-screen tracing based on an available parameter.
- **Do not keep activities:** Destroys every activity as soon as the application is closed.
- **Limit background processes:** Sets the number of processes that can run in the background.
- **Show all ANRs:** Displays a prompt when applications running in the background are not responding.

USB Debugging

When enabled, allows debugging when the device is attached to a PC by a USB cable.

1. From the Home screen, press  and then tap **Settings → Developer options**.
2. Verify the **Developer options** are active.
3. Tap **USB debugging** to enable or disable the setting. When enabled, a check mark appears in the check box.

Allowing Mock Locations

Note: This feature is used for development purposes only.

If you are a developer who is testing a GPS applications using this device, you can tell the device that the phone is at different GPS locations. In other words, the phone is allowed to “mock” the coordinates.

1. From the Home screen, press  and then tap **Settings → Developer options**.
2. Verify the **Developer options** are active.
3. Tap **Allow mock locations** to enable or disable the setting. When enabled, a check mark appears in the check box.

Desktop Backup Password

Protect the desktop with a backup password ID.

1. From the Home screen, press  and then tap **Settings → Developer options**.
2. Verify the **Developer options** are active.
3. Tap **Desktop backup password**.

4. In the Settings screen, enter the current full backup password, the new password for full backups, then enter the new password again.
5. Tap **Set backup password** to save the password change.

Application Options

1. From the Home screen, press  and then tap **Settings → Developer options**.
2. Verify the **Developer options** are active.
3. Tap **Do not keep activities** to destroy every activity as soon as the application is closed.
4. Tap **Limit background processes** to set the number of processes that can run in the background. Options are: Standard limit, No background processes, and 1 to 4 processes at most.
5. Tap **Show all ANRs** to display a prompt when applications running in the background are not responding.

About Device

This menu contains legal information, system tutorial information, and other phone information such as the model number, firmware version, baseband version, kernel version, and software build number.

To access phone information:

- From the Home screen, press  and then tap **Settings → About device**. The following information displays:
 - **Software update**: allows you to connect to the network and upload any new phone software directly to your device. The device automatically updates with the latest available software when you access this option.
 - **Status**: displays the Battery status, the level of the battery (percentage), the Network connection, Signal Strength, Mobile network type, Service State, Roaming status, Mobile network state, My phone number, ERI version, IMEI number, IMEI, IP address, Wi-Fi MAC address, Bluetooth address, Serial number, Up time, and Device status.

- **Legal information:** This option displays information about Open source licenses, Google legal information, as well as License settings. This information clearly provides copyright and distribution legal information and facts as well as Google Terms of Service, Terms of Service for Android-powered Phones, and much more pertinent information as a reference. Read the information and terms, then press  to return to the Settings menu.

Tip: To find your device's DivX[®] registration code and information about registering your device to play DivX protected video, tap **License settings** → **DivX[®] VOD**.

- **Model number:** displays the device's model number.
- **Android version:** displays the firmware version loaded on this device.
- **Baseband version:** displays the baseband version loaded on this device.
- **Kernel version:** displays the kernel version loaded on this device.
- **Build number:** displays the software, build number.

Note: Firmware, baseband, kernel and build numbers are usually used for updates to the handset or support. For additional information please contact your T-Mobile service representative.

Software Update

The Software Update feature enables you to use your device to connect to the network and upload any new software directly to your device. The device automatically updates with the latest available software when you access this option.

The following icons show your Bluetooth connection status at a glance:



Displays when the Software updated feature is active.



Displays when the Software update feature is in progress.

To update your device:

1. From the Home screen, press  and then tap **Settings → About device → Software update**.
2. Read the Software update information screen.
3. Select an available option:

Note: You configure the device's software update parameters.

- **OK:** Tap this option to connect to the remote server, detect if there is an available update, then begin the download over your existing data connection.
 - Software updates can include bug fixes, enhancements to services, to the device or currently installed software.
- **Wi-Fi settings:** Enable this option to only download available updates via an active Wi-Fi connection. If disabled, the device will begin available downloads via its' T-Mobile connection.
- **Cancel:** Tap this option to cancel the operation.

Section 12: Health and Safety Information

This section outlines the safety precautions associated with using your phone. The terms “mobile device” or “cell phone” are used in this section to refer to your phone. **Read this information before using your mobile device.**

Exposure to Radio Frequency (RF) Signals

The U.S. Food and Drug Administration (FDA) has published information for consumers relating to Radio Frequency (RF) exposure from wireless phones. The FDA publication includes the following information:

Do cell phones pose a health hazard?

Many people are concerned that cell phone radiation will cause cancer or other serious health hazards. The weight of scientific evidence has not linked cell phones with any health problems.

Cell phones emit low levels of Radio Frequency (RF) energy. Over the past 15 years, scientists have conducted hundreds of studies looking at the biological effects of the radio frequency energy emitted by cell phones. While some researchers have reported biological changes associated

with RF energy, these studies have failed to be replicated. The majority of studies published have failed to show an association between exposure to radio frequency from a cell phone and health problems.

The low levels of RF cell phones emit while in use are in the microwave frequency range. They also emit RF at substantially reduced time intervals when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects.

The biological effects of radio frequency energy should not be confused with the effects from other types of electromagnetic energy.

Very high levels of electromagnetic energy, such as is found in X-rays and gamma rays, can ionize biological tissues. Ionization is a process where electrons are stripped away from their normal locations in atoms and molecules. It can permanently damage biological tissues including DNA, the genetic material.

The energy levels associated with radio frequency energy, including both radio waves and microwaves, are not great enough to cause ionization of atoms and molecules. Therefore, RF energy is a type of non-ionizing radiation. Other types of non-ionizing radiation include visible light, infrared radiation (heat), and other forms of electromagnetic radiation with relatively low frequencies.

While RF energy does not ionize particles, large amounts can increase body temperatures and cause tissue damage. Two areas of the body, the eyes and the testes, are particularly vulnerable to RF heating because there is relatively little blood flow in them to carry away excess heat.

Research Results to Date: Is there a connection between RF and certain health problems?

The results of most studies conducted to date say no. In addition, attempts to replicate and confirm the few studies that have shown a connection have failed.

The scientific community at large therefore believes that the weight of scientific evidence does not show an association between exposure to Radio Frequency (RF) from cell phones and adverse health outcomes. Still the scientific community has supported additional research to address gaps in knowledge. Some of these studies are described below.

Interphone Study

Interphone is a large international study designed to determine whether cell phones increase the risk of head and neck cancer. A report published in the International Journal of Epidemiology (June, 2010) compared cell phone usage for more than 5,000 people with brain tumors (glioma and meningioma) and a similar number of healthy controls.

Results of this study did NOT show that cell phones caused brain cancer. In this study, most people had no increased risk of brain cancer from using cell phones. For people with the heaviest use of cell phones (an average of more than ½ hour per day, every day, for over 10 years) the study suggested a slight increase in brain cancer. However, the authors determined that biases and errors prevented any conclusions being drawn from this data. Additional information about Interphone can be found at

http://www.iarc.fr/en/media-centre/pr/2010/pdfs/pr200_E.pdf.

Interphone is the largest cell phone study to date, but it did not answer all questions about cell phone safety. Additional research is being conducted around the world, and the FDA continues to monitor developments in this field.

International Cohort Study on Mobile Phone Users (COSMOS)

The COSMOS study aims to conduct long-term health monitoring of a large group of people to determine if there are any health issues linked to long-term exposure to radio frequency energy from cell phone use. The COSMOS study will follow approximately 300,000 adult cell phone users in Europe for 20 to 30 years. Additional information about the COSMOS study can be found at

<http://www.ukcosmos.org/index.html>.

Risk of Brain Cancer from Exposure to Radio Frequency Fields in Childhood and Adolescence (MOBI-KIDS)

MOBI-KIDS is an international study investigating the relationship between exposure to radio frequency energy from communication technologies including cell phones and brain cancer in young people. This is an international multi-center study involving 14 European and non-European countries. Additional information about MOBI-KIDS can be found at

http://www.creal.cat/programes-recerca/en_projectes-creal/view.php?ID=39.

Surveillance, Epidemiology, and End Results (SEER) Program of the National Cancer Institute

The National Cancer Institute (NCI) actively follows cancer statistics in the United States to detect any change in rates of new cases for brain cancer. If cell phones play a role in risk for brain cancer, rates should go up, because heavy cell phone use has been common for quite some time in the U.S. Between 1987 and 2005, the overall age-adjusted incidence of brain cancer did not increase. Additional information about SEER can be found at

<http://seer.cancer.gov/>.

Cell Phone Industry Actions

Although the existing scientific data do not justify FDA regulatory actions, the FDA has urged the cell phone industry to take a number of steps, including the following:

- Support-needed research on possible biological effects of RF for the type of signal emitted by cell phones;
- Design cell phones in a way that minimizes any RF exposure to the user; and
- Cooperate in providing users of cell phones with the current information on cell phone use and human health concerns.

The FDA also is working with voluntary standard-setting bodies such as the Institute of Electrical and Electronics Engineers (IEEE), the International Commission on Non-Ionizing Radiation Protection (ICNIRP), and others to assure that safety standards continue to adequately protect the public.

Reducing Exposure: Hands-Free Kits and Other Accessories

Steps to Reduce Exposure to Radio Frequency Energy

If there is a risk from being exposed to radio frequency energy (RF) from cell phones - and at this point we do not know that there is - it is probably very small. But, if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your RF exposure.

- Reduce the amount of time spent using your cell phone;
- Use speaker mode or a headset to place more distance between your head and the cell phone.

Hands-Free Kits

Hands-free kits may include audio or Bluetooth® headsets and various types of body-worn accessories such as belt-clips and holsters. Combinations of these can be used to reduce RF energy absorption from cell phones.

Headsets can substantially reduce exposure because the phone is held away from the head in the user's hand or in approved body-worn accessories. Cell phones marketed in the U.S. are required to meet RF exposure compliance requirements when used against the head and against the body.

Because there are no known risks from exposure to RF emissions from cell phones, there is no reason to believe that hands-free kits reduce risks. Hands-free kits can be used for convenience and comfort. They are also required by law in many states if you want to use your phone while driving.

Cell Phone Accessories that Claim to Shield the Head from RF Radiation

Because there are no known risks from exposure to RF emissions from cell phones, there is no reason to believe that accessories which claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone cases, while others involve nothing more than a metallic accessory attached to the phone.

Studies have shown that these products generally do not work as advertised. Unlike “hands-free” kits, these so-called “shields” may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption.

Children and Cell Phones

The scientific evidence does not show a danger to any users of cell phones from RF exposure, including children and teenagers. The steps adults can take to reduce RF exposure apply to children and teenagers as well.

- Reduce the amount of time spent on the cell phone;
- Use speaker mode or a headset to place more distance between the head and the cell phone.

Some groups sponsored by other national governments have advised that children be discouraged from using cell phones at all. For example, The Stewart Report from the United Kingdom made such a recommendation in December 2000. In this report, a group of independent experts noted that no evidence exists that using a cell phone causes brain tumors or other ill effects. Their recommendation to limit cell phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

Additional information on the safety of RF exposures from various sources can be obtained from the following organizations (updated 10/1/2010):

- FCC RF Safety Program:
<http://www.fcc.gov/oet/rfsafety/>.
- Environmental Protection Agency (EPA):
<http://www.epa.gov/radtown/wireless-tech.html>.
- Occupational Safety and Health Administration (OSHA):
<http://www.osha.gov/SLTC/radiofrequencyradiation/>.
(Note: This web address is case sensitive.)
- National Institute for Occupational Safety and Health (NIOSH):
<http://www.cdc.gov/niosh/>.
- World Health Organization (WHO):
<http://www.who.int/peh-emf/en/>.
- International Commission on Non-Ionizing Radiation Protection:
<http://www.icnirp.de>.
- Health Protection Agency:
<http://www.hpa.org.uk/Topics/Radiation/>.

- US Food and Drug Administration:
[http://www.fda.gov/Radiation-EmittingProducts/
RadiationEmittingProductsandProcedures/
HomeBusinessandEntertainment/CellPhones/default.htm](http://www.fda.gov/Radiation-EmittingProducts/RadiationEmittingProductsandProcedures/HomeBusinessandEntertainment/CellPhones/default.htm).

Specific Absorption Rate (SAR) Certification Information

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the exposure limits for Radio Frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government.

These FCC RF exposure limits are derived from the recommendations of two expert organizations: the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The RF exposure limit set by the FCC for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR is a measure of the rate of absorption of RF energy by the human body

expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg).

The FCC SAR limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands.

Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum reported value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output of the phone.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the SAR limit established by the FCC. Tests for each model phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC. For body-worn operation, this phone has been tested and meets

FCC RF exposure guidelines when used with an accessory that contains no metal and that positions the mobile device a minimum of 1.0 cm from the body.

Use of other accessories may not ensure compliance with FCC RF exposure guidelines. The FCC has granted an Equipment Authorization for this mobile phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. The maximum SAR values for this model phone as reported to the FCC is:

- Head: 0.45 W/kg.
- Body-worn: 1.16 W/kg.

SAR information on this and other model phones can be accessed online on the FCC's website through <http://transition.fcc.gov/oet/rfsafety/sar.html>. To find information that pertains to a particular model phone, this site uses the phone FCC ID number which is usually printed somewhere on the case of the phone. Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone. Additional

SAR information can also be obtained at <http://www.fcc.gov/encyclopedia/specific-absorption-rate-sar-cellular-telephones>.

FCC Part 15 Information to User

Pursuant to part 15.21 of the FCC Rules, you are cautioned that changes or modifications not expressly approved by Samsung could void your authority to operate the device.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Commercial Mobile Alerting System (CMAS)

This device is designed to receive wireless emergency alerts from the Commercial Mobile Alerting System ("CMAS"; which may also be known as the Personal Localized Alerting Network ("PLAN")). If your wireless provider has chosen to participate in CMAS/PLAN, alerts are available while in the provider's coverage area. If you travel outside your provider's coverage area, wireless emergency alerts may not be available. For more information, please contact your wireless provider.

Smart Practices While Driving

On the Road - Off the Phone

The primary responsibility of every driver is the safe operation of his or her vehicle.

Responsible drivers understand that no secondary task should be performed while driving whether it be eating, drinking, talking to passengers, or talking on a mobile phone - unless the driver has assessed the driving conditions and is confident that the secondary task will not interfere with their primary responsibility. **Do not engage in any activity while driving a moving vehicle which may cause you to take your eyes off the road or become so absorbed in the activity that your ability to concentrate on the act of driving becomes impaired.** Samsung is committed to promoting responsible driving and giving drivers the tools they need to understand and address distractions.

Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas. For example, only hands-free use may be permitted in certain areas.

Before answering calls, consider your circumstances. Let the call go to voicemail when driving conditions require.

Remember, driving comes first, not the call!

If you consider a call necessary and appropriate, follow these tips:

- Use a hands-free device;
- Secure your phone within easy reach;
- Place calls when you are not moving;
- Plan calls when your car will be stationary;
- Do not engage in stressful or emotional conversations;
- Let the person with whom you are speaking know that you are driving and will suspend the call if necessary;
- Do not take notes or look up phone numbers while driving;

Notice regarding legal restrictions on mounting this device in an automobile:

Laws in some states may prohibit mounting this device on or near the windshield of an automobile. In other states, the law may permit mounting this device only in specific locations in the automobile. Be sure to consult the state and local laws or ordinances where you drive before mounting this device in an automobile. Failure to comply with these restrictions could result in fines, penalties, or other damages.

Never mount this device in a manner that will obstruct the driver's clear view of the street and traffic.

Never use wireless data services such as text messaging, Web browsing, or e-mail while operating a vehicle.

Never watch videos, such as a movie or clip, or play video games while operating a vehicle.

For more information, go to <http://www.ctia.org>.

Battery Use and Safety

Important! Handle and store batteries properly to avoid injury or damage. Most battery issues arise from improper handling of batteries and, particularly, from the continued use of damaged batteries.

- **Do not disassemble, crush, puncture, shred, or otherwise attempt to change the form of your battery.** Do not put a high degree of pressure on the battery. This can cause leakage or an internal short-circuit, resulting in overheating.

- **Do not let the phone or battery come in contact with liquids.** Liquids can get into the phone's circuits, leading to corrosion. Even when the phone appears to be dry and appears to operate normally, the circuitry could slowly corrode and pose a safety hazard. If the phone and/or battery get wet, have them checked by your service provider or contact Samsung, even if they appear to be working properly.
- **Do not place your battery in or near a heat source.** Excessive heating can damage the phone or the battery and could cause the phone or the battery to explode. Do not dry a wet or damp battery with an appliance or heat source such as a microwave oven, hair dryer, iron, or radiator. Avoid leaving your phone in your car in high temperatures.
- **Do not dispose of the phone or the battery in a fire.** The phone or the battery may explode when overheated.
- **Do not handle a damaged or leaking battery.** Do not let leaking battery fluid come in contact with your eyes, skin or clothing. For safe disposal options, contact your nearest Samsung-authorized service center.

- **Avoid dropping the cell phone.** Dropping the phone or the battery, especially on a hard surface, can potentially cause damage to the phone and battery. If you suspect damage to the phone or battery, take it to a service center for inspection.
- **Never use any charger or battery that is damaged in any way.**
- **Do not allow the battery to touch metal objects.** Accidental short-circuiting can occur when a metallic object (coin, key, jewelry, clip, or pen) causes a direct connection between the + and - terminals of the battery (metal strips on the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.

Important! Use only Samsung-approved batteries, and recharge your battery only with Samsung-approved chargers which are specifically designed for your phone.

WARNING!

Use of a non-Samsung-approved battery or charger may present a risk of fire, explosion, leakage, or other hazard. Samsung's warranty does not cover damage to the phone caused by non-Samsung-approved batteries and/or chargers.

- **Do not use incompatible cell phone batteries and chargers.**

Some websites and second-hand dealers not associated with reputable manufacturers and carriers, might be selling incompatible or even counterfeit batteries and chargers.

Consumers should purchase manufacturer or carrier-recommended products and accessories. If unsure about whether a replacement battery or charger is compatible, contact the manufacturer of the battery or charger.

- **Misuse or use of incompatible phones, batteries, and charging devices could result in damage to the equipment and a possible risk of fire, explosion, or leakage, leading to serious injuries, damages to your phone, or other serious hazard.**

Samsung Mobile Products and Recycling

Samsung cares for the environment and encourages its customers to recycle Samsung mobile devices and genuine Samsung accessories.

Proper disposal of your mobile device and its battery is not only important for safety, it benefits the environment. Batteries must be recycled or disposed of properly.

Recycling programs for your mobile device, batteries, and accessories may not be available in your area.

We've made it easy for you to recycle your old Samsung mobile device by working with respected take-back companies in every state in the country.

Drop It Off

You can drop off your Samsung-branded mobile device and batteries for recycling at one of our numerous Samsung Recycling Direct (SM) locations. A list of these locations may be found at:

http://pages.samsung.com/us/recyclingdirect/usactivities_environment_samsungrecyclingdirect_locations.jsp

Samsung-branded devices and batteries will be accepted at these locations for no fee.

Consumers may also recycle their used mobile device or batteries at many retail or carrier-provided locations where mobile devices and batteries are sold. Additional information regarding specific locations may be found at: <http://www.epa.gov/epawaste/partnerships/plugin/cellphone/index.htm> or at <http://www.call2recycle.org/>.

Mail It In

The Samsung Mobile Take-Back Program will provide Samsung customers with a free recycling mailing label. Just go to http://www.samsung.com/us/aboutsamsung/citizenship/usactivities_environment_samsungrecyclingdirect.html?INT=STA_recycle_your_phone_page and follow the instructions to print out a free pre-paid postage label and then send your old mobile device or battery to the address listed, via U.S. Mail, for recycling.

Dispose of unwanted electronics through an approved recycler.

To find the nearest recycling location, go to our website:

www.samsung.com/recyclingdirect

Or call, (877) 278-0799.

Follow local regulations regarding disposal of mobile devices and batteries

Dispose of your mobile device and batteries in accordance with local regulations. In some areas, the disposal of these items in household or business trash may be prohibited. Help us protect the environment - recycle!

Warning! Never dispose of batteries in a fire because they may explode.

UL Certified Travel Charger

The Travel Charger for this phone has met applicable UL safety requirements. Please adhere to the following safety instructions per UL guidelines:

FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE.

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS.

DANGER - TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.

FOR CONNECTION TO A SUPPLY NOT IN NORTH AMERICA, USE AN ATTACHMENT PLUG ADAPTOR OF THE PROPER CONFIGURATION FOR THE POWER OUTLET.

THIS POWER UNIT IS INTENDED TO BE CORRECTLY ORIENTED IN A VERTICAL OR HORIZONTAL OR FLOOR MOUNT POSITION.

Display / Touch-Screen

Please note the following information when using your mobile device:

WARNING REGARDING DISPLAY

The display on your mobile device is made of glass or acrylic and could break if your mobile device is dropped or if it receives significant impact. Do not use if screen is broken or cracked as this could cause injury to you.

WARRANTY DISCLAIMER: PROPER USE OF A TOUCH-SCREEN MOBILE DEVICE

If your mobile device has a touch-screen display, please note that a touch-screen responds best to a light touch from the pad of your finger or a non-metallic stylus. Using excessive force or a metallic object when pressing on the touch-screen may damage the tempered glass surface and void the warranty. For more information, please refer to the “Standard Limited Warranty”.

GPS & AGPS

Certain Samsung mobile devices can use a Global Positioning System (GPS) signal for location-based applications. A GPS uses satellites controlled by the U.S. Government that are subject to changes implemented in accordance with the Department of Defense policy and the 2008 Federal Radio navigation Plan (FRP). Changes may affect the performance of location-based technology on your mobile device.

Certain Samsung mobile devices can also use an Assisted Global Positioning System (AGPS), which obtains information from the cellular network to improve GPS performance. AGPS uses your wireless service provider's network and therefore

airtime, data charges, and/or additional charges may apply in accordance with your service plan. Contact your wireless service provider for details.

Your Location

Location-based information includes information that can be used to determine the approximate location of a mobile device. Mobile devices which are connected to a wireless network transmit location-based information. Additionally, if you use applications that require location-based information (e.g. driving directions), such applications transmit location-based information. The location-based information may be shared with third-parties, including your wireless service provider, applications providers, Samsung, and other third-parties providing services.

Use of AGPS in Emergency Calls

When you make an emergency call, the cellular network may activate AGPS technology in your mobile device to tell the emergency responders your approximate location.

AGPS has limitations and **might not work in your area.**

Therefore:

- Always tell the emergency responder your location to the best of your ability; and

- Remain on the mobile device for as long as the emergency responder instructs you.

Navigation

Maps, directions, and other navigation-data, including data relating to your current location, may contain inaccurate or incomplete data, and circumstances can and do change over time. In some areas, complete information may not be available. **Therefore, you should always visually confirm that the navigational instructions are consistent with what you see before following them. All users should pay attention to road conditions, closures, traffic, and all other factors that may impact safe driving or walking. Always obey posted road signs.**

Emergency Calls

This mobile device, like any wireless mobile device, operates using radio signals, wireless and landline networks, as well as user-programmed functions, which cannot guarantee connection in all conditions, areas, or circumstances.

Therefore, you should never rely solely on any wireless mobile device for essential communications (medical emergencies, for example). Before traveling in remote or underdeveloped areas, plan an alternate method of contacting emergency services personnel. Remember, to

make or receive any calls, the mobile device must be switched on and in a service area with adequate signal strength.

Emergency calls may not be possible on all wireless mobile device networks or when certain network services and/or mobile device features are in use. Check with local service providers.

To make an emergency call:

1. If the mobile device is not on, switch it on.
2. From the Home screen, tap .
3. Key in the emergency number for your present location (for example, 911 or other official emergency number).
Emergency numbers vary by location.
4. Tap .

If certain features are in use (call blocking, for example), you may first need to deactivate those features before you can make an emergency call. Consult your User Manual and your local cellular service provider. When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your mobile device

may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.

Care and Maintenance

Your mobile device is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years:

Keep your Samsung Mobile Device away from:

Liquids of any kind

Keep the mobile device dry. Precipitation, humidity, and liquids contain minerals that will corrode electronic circuits. If the mobile device does get wet, do not accelerate drying with the use of an oven, microwave, or dryer, because this may damage the mobile device and could cause a fire or explosion.

Do not use the mobile device with a wet hand. Doing so may cause an electric shock to you or damage to the mobile device.

Extreme heat or cold

Avoid temperatures below 0°C / 32°F or above 45°C / 113°F.

Microwaves

Do not try to dry your mobile device in a microwave oven. Doing so may cause a fire or explosion.

Dust and dirt

Do not expose your mobile device to dust, dirt, or sand.

Cleaning solutions

Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the mobile device. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.

Shock or vibration

Do not drop, knock, or shake the mobile device. Rough handling can break internal circuit boards.

Paint

Do not paint the mobile device. Paint can clog the device's moving parts or ventilation openings and prevent proper operation.

Responsible Listening

Caution! Avoid potential hearing loss.

Damage to hearing occurs when a person is exposed to loud sounds over time. The risk of hearing loss increases as sound is played louder and for longer durations. Prolonged exposure to loud sounds (including music) is the most common cause of preventable hearing loss. Some scientific research suggests that using portable audio devices, such as portable music players and cell phones, at high volume settings for long durations may lead to permanent noise-induced hearing loss.

This includes the use of headphones (including headsets, earbuds, and Bluetooth® or other wireless devices). Exposure to very loud sound has also been associated in some studies with tinnitus (a ringing in the ear), hypersensitivity to sound, and distorted hearing. Individual susceptibility to noise-induced hearing loss and potential hearing problem varies. Additionally, the amount of sound produced by a portable audio device varies depending on the nature of the sound, the device settings, and the headphones

that are used. As a result, there is no single volume setting that is appropriate for everyone or for every combination of sound, settings, and equipment.

You should follow some common sense recommendations when using any portable audio device:

- Always turn the volume down before plugging the earphones into an audio source.
- Set the volume in a quiet environment and select the lowest volume at which you can hear adequately.
- Be aware that you can adapt to higher volume settings over time, not realizing that the higher volume may be harmful to your hearing.
- When using headphones, turn the volume down if you cannot hear the people speaking near you or if the person sitting next to you can hear what you are listening to.
- Do not turn the volume up to block out noisy surroundings. If you choose to listen to your portable device in a noisy environment, use noise-cancelling headphones to block out background environmental noise. By blocking background environment noise, noise cancelling headphones should allow you to hear the music at lower volumes than when using earbuds.

- Limit the amount of time you listen. As the volume increases, less time is required before your hearing could be affected.
- Avoid using headphones after exposure to extremely loud noises, such as rock concerts, that might cause temporary hearing loss. Temporary hearing loss might cause unsafe volumes to sound normal.
- Do not listen at any volume that causes you discomfort. If you experience ringing in your ears, hear muffled speech, or experience any temporary hearing difficulty after listening to your portable audio device, discontinue use and consult your doctor.

You can obtain additional information on this subject from the following sources:

American Academy of Audiology

11730 Plaza American Drive, Suite 300
Reston, VA 20190

Voice: (800) 222-2336

Email: info@audiology.org

Internet:

<http://www.audiology.org/Pages/default.aspx>

**National Institute on Deafness and Other
Communication Disorders**

National Institutes of Health
31 Center Drive, MSC 2320
Bethesda, MD 20892-2320
Email: nidcdinfo@nih.gov

Internet:
<http://www.nidcd.nih.gov/>

**National Institute for Occupational Safety
and Health (NIOSH)**

395 E Street, S.W., Suite 9200
Patriots Plaza Building
Washington, DC 20201
Voice: 1-800-35-NIOSH
(1-800-356-4674)
1-800-CDC-INFO (1-800-232-4636)
Outside the U.S. 513-533-8328

Email: cdcinfo@cdc.gov

Internet:
[http://www.cdc.gov/niosh/topics/noise/
default.html](http://www.cdc.gov/niosh/topics/noise/default.html)

1-888-232-6348 TTY

Operating Environment

Remember to follow any special regulations in force in any area, and always switch your mobile device off whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the mobile device or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

Using Your Mobile Device Near Other Electronic Devices

Most modern electronic equipment is shielded from Radio Frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless mobile device. Consult the manufacturer to discuss alternatives.

Implantable Medical Devices

A minimum separation of six (6) inches should be maintained between a handheld wireless mobile device and an implantable medical device, such as a pacemaker or implantable cardioverter defibrillator, to avoid potential interference with the device.

Persons who have such devices:

- Should ALWAYS keep the mobile device more than six (6) inches from their implantable medical device when the mobile device is turned ON;
- Should not carry the mobile device in a breast pocket;
- Should use the ear opposite the implantable medical device to minimize the potential for interference;
- Should turn the mobile device OFF immediately if there is any reason to suspect that interference is taking place;
- Should read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your wireless mobile device with an implantable medical device, consult your health care provider.

For more information see: <http://www.fcc.gov/oet/rfsafety/rf-faqs.html#>.

Other Medical Devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch your mobile device off in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle before using your mobile device in a motor vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Switch your mobile device off in any facility where posted notices require you to do so.

Potentially Explosive Environments

Switch your mobile device off when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion

or fire resulting in bodily injury or even death. Users are advised to switch the mobile device off while at a refueling point (service station).

Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust, or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

When your Device is Wet

Do not turn on your device if it is wet. If your device is already on, turn it off and remove the battery immediately (if the device will not turn off or you cannot remove the battery, leave it as-is). Then, dry the device with a towel and take it to a service center.

FCC Hearing Aid Compatibility (HAC) Regulations for Wireless Devices

The U.S. Federal Communications Commission (FCC) has established requirements for digital wireless mobile devices to be compatible with hearing aids and other assistive hearing devices.

When individuals employing some assistive hearing devices (hearing aids and cochlear implants) use wireless mobile devices, they may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and mobile devices also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless mobile devices to assist hearing device users find mobile devices that may be compatible with their hearing devices. Not all mobile devices have been rated. Mobile devices that are rated have the rating on their box or a label located on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not

be able to use a rated mobile device successfully. Trying out the mobile device with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Wireless mobile devices rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than mobile devices that are not labeled. M4 is the better/higher of the two ratings. M-ratings refer to enabling acoustic coupling with hearing aids that do not operate in telecoil mode.

T-Ratings: Mobile devices rated T3 or T4 meet FCC requirements and are likely to generate less interference to hearing devices than mobile devices that are not labeled. T4 is the better/higher of the two ratings. T-ratings refer to enabling inductive coupling with hearing aids operating in telecoil mode.


Hearing devices may also be rated. Your hearing aid manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise.

Under the current industry standard, American National Standards Institute (ANSI) C63.19, the hearing aid and wireless mobile device rating values are added together to indicate how usable they are together. For example, if a

hearing aid meets the M2 level rating and the wireless mobile device meets the M3 level rating, the sum of the two values equals M5.

Under the standard, this should provide the hearing aid user with normal use while using the hearing aid with the particular wireless mobile device. A sum of 6 or more would indicate excellent performance.

However, these are not guarantees that all users will be satisfied. T ratings work similarly.

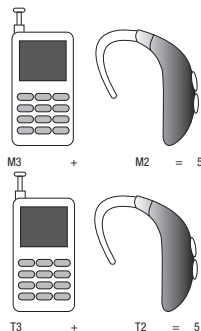

The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

HAC for Newer Technologies

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids.

It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.

Restricting Children's Access to Your Mobile Device

Your mobile device is not a toy. Do not allow children to play with it because they could hurt themselves and others, damage the mobile device, or make calls that increase your mobile device bill.

Keep the mobile device and all its parts and accessories out of the reach of small children.

FCC Notice and Cautions

FCC Notice

The mobile device may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the mobile device if such interference cannot be eliminated. Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association.

Cautions

Any changes or modifications to your mobile device not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment. Only use approved batteries, antennas, and chargers. The use of any unauthorized accessories may be dangerous and void the mobile device warranty if said accessories cause damage or a defect to the mobile device.

Although your mobile device is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending, or sitting on it.

Other Important Safety Information

- Only qualified personnel should service the mobile device or install the mobile device in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Ensure that any mobile devices or related equipment installed in your vehicle are securely mounted.
- Check regularly that all wireless mobile device equipment in your vehicle is mounted and operating properly.
- When using a headset in dry environments, static electricity can build up in the headset and cause a small quick static electrical shock. To minimize the risk of electrostatic discharge from the headset avoid using the headset in extremely dry environments or touch a grounded unpainted metal object to discharge static electricity before inserting the headset.
- Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the mobile device, its parts, or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including installed or portable wireless equipment near or in the area over the air bag or in the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.
- Switch your mobile device off before boarding an aircraft. The use of wireless mobile devices in aircraft is illegal and may be dangerous to the aircraft's operation. Check with appropriate authorities before using any function of a mobile device while on an aircraft.
- Failure to observe these instructions may lead to the suspension or denial of cell phone services to the offender, or legal action, or both.
- While using your device, leave some lights on in the room and do not hold the screen too close to your eyes.
- Seizures or blackouts can occur when you are exposed to flashing lights while watching videos or playing games for extended periods. If you feel any discomfort, stop using the device immediately.

- Reduce risk of repetitive motion injuries. When you repetitively perform actions, such as pressing keys, drawing characters on a touch screen with your fingers, or playing games, you may experience occasional discomfort in your hands, neck, shoulders, or other parts of your body. When using your device for extended periods, hold the device with a relaxed grip, press the keys lightly, and take frequent breaks. If you continue to have discomfort during or after such use, stop use and see a physician.
- If your device has a camera flash or light, do not use the flash or light close to the eyes of people or pets. [122011]

Section 13: Warranty Information

Standard Limited Warranty

What is covered and for how long?

SAMSUNG TELECOMMUNICATIONS AMERICA, LLC (“SAMSUNG”) warrants that SAMSUNG’s handsets and accessories (“Products”) are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase by the first consumer purchaser and continuing for the following specified period of time after that date:

Phone	1 Year
Batteries	1 Year
Case/Pouch/Holster	90 Days
Other Phone Accessories	1 Year

What is not covered?

This Limited Warranty is conditioned upon proper use of the Product.

This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abnormal use, abnormal conditions, improper storage, exposure to liquid, moisture, dampness, sand or dirt, neglect, or unusual physical, electrical or electromechanical stress; (b) scratches, dents and cosmetic damage, unless caused by SAMSUNG; (c) defects or damage resulting from excessive force or use of a metallic object when pressing on a touch screen; (d) equipment that has the serial number or the enhancement data code removed, defaced, damaged, altered or made illegible; (e) ordinary wear and tear; (f) defects or damage resulting from the use of Product in conjunction or connection with accessories, products, or ancillary/peripheral equipment not furnished or approved by SAMSUNG; (g) defects or damage resulting from improper testing, operation, maintenance, installation, service, or adjustment not furnished or approved by SAMSUNG; (h) defects or damage resulting from external causes such as collision with an object, fire, flooding, dirt, windstorm, lightning, earthquake, exposure to weather conditions, theft, blown fuse, or improper use of any electrical source; (i) defects or damage resulting from cellular signal reception

or transmission, or viruses or other software problems introduced into the Product; or (j) Product used or purchased outside the United States. This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery; (ii) any of the seals on the battery are broken or show evidence of tampering; or (iii) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

What are SAMSUNG's obligations?

During the applicable warranty period, provided the Product is returned in accordance with the terms of this Limited Warranty, SAMSUNG will repair or replace the Product, at SAMSUNG's sole option, without charge. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any Product, or may replace the Product with a rebuilt, reconditioned or new Product.

Repaired/replaced cases, pouches and holsters will be warranted for a period of ninety (90) days. All other repaired/replaced Products will be warranted for a period equal to the

remainder of the original Limited Warranty on the original Product or for ninety (90) days, whichever is longer. All replaced Products, parts, components, boards and equipment shall become the property of SAMSUNG. Except to any extent expressly allowed by applicable law, transfer or assignment of this Limited Warranty is prohibited.

What must you do to obtain warranty service?

To obtain service under this Limited Warranty, you must return the Product to an authorized phone service facility in an adequate container for shipping, accompanied by the sales receipt or comparable proof of sale showing the original date of purchase, the serial number of the Product and the seller's name and address.

To obtain assistance on where to deliver the Product, please call SAMSUNG Customer Care at 1-888-987-4357. If SAMSUNG determines that any Product is not covered by this Limited Warranty, you must pay all parts, shipping, and labor charges for the repair or return of such Product.

You should keep a separate backup copy of any contents of the Product before delivering the Product to SAMSUNG for warranty service, as some or all of the contents may be deleted or reformatted during the course of warranty service.

What are the limits on SAMSUNG's liability?

THIS LIMITED WARRANTY SETS OUT THE FULL EXTENT OF SAMSUNG'S RESPONSIBILITIES, AND THE EXCLUSIVE REMEDY REGARDING THE PRODUCTS.

ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SAMSUNG BE LIABLE FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR FOR, WITHOUT LIMITATION, COMMERCIAL LOSS OF ANY SORT; LOSS OF USE, TIME, DATA, REPUTATION, OPPORTUNITY, GOODWILL, PROFITS OR SAVINGS; INCONVENIENCE; INCIDENTAL, SPECIAL, CONSEQUENTIAL OR PUNITIVE DAMAGES; OR DAMAGES ARISING FROM THE USE OR INABILITY TO USE THE PRODUCT. SOME STATES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, OR THE DISCLAIMER OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS AND DISCLAIMERS MAY NOT APPLY TO YOU.

SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE

OR SUITABILITY OF ANY THIRD-PARTY SOFTWARE OR EQUIPMENT USED IN CONJUNCTION WITH THE PRODUCT, OR THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR OTHERWISE. RESPONSIBILITY FOR THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT RESTS SOLELY WITH THE USER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT.

Nothing in the Product instructions or information shall be construed to create an express warranty of any kind with respect to the Products. No agent, employee, dealer, representative or reseller is authorized to modify or extend this Limited Warranty or to make binding representations or claims, whether in advertising, presentations or otherwise, on behalf of SAMSUNG regarding the Products or this Limited Warranty.

This Limited Warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

What is the procedure for resolving disputes?

ALL DISPUTES WITH SAMSUNG ARISING IN ANY WAY FROM THIS LIMITED WARRANTY OR THE SALE, CONDITION OR PERFORMANCE OF THE PRODUCTS SHALL BE RESOLVED EXCLUSIVELY THROUGH FINAL AND BINDING ARBITRATION, AND NOT BY A COURT OR JURY.

Any such dispute shall not be combined or consolidated with a dispute involving any other person's or entity's Product or claim, and specifically, without limitation of the foregoing, shall not under any circumstances proceed as part of a class action. The arbitration shall be conducted before a single arbitrator, whose award may not exceed, in form or amount, the relief allowed by the applicable law. The arbitration shall be conducted according to the American Arbitration Association (AAA) Commercial Arbitration Rules applicable to consumer disputes. This arbitration provision is entered pursuant to the Federal Arbitration Act. The laws of the State of Texas, without reference to its choice of laws principles, shall govern the interpretation of the Limited Warranty and all disputes that are subject to this arbitration provision. The arbitrator shall decide all issues of interpretation and application of this arbitration provision and the Limited Warranty.

For any arbitration in which your total damage claims, exclusive of attorney fees and expert witness fees, are \$5,000.00 or less ("Small Claim"), the arbitrator may, if you prevail, award your reasonable attorney fees, expert witness fees and costs as part of any award, but may not grant SAMSUNG its attorney fees, expert witness fees or costs unless it is determined that the claim was brought in bad faith. In a Small Claim case, you shall be required to pay no more than half of the total administrative, facility and arbitrator fees, or \$50.00 of such fees, whichever is less, and SAMSUNG shall pay the remainder of such fees. Administrative, facility and arbitrator fees for arbitrations in which your total damage claims, exclusive of attorney fees and expert witness fees, exceed \$5,000.00 ("Large Claim") shall be determined according to AAA rules. In a Large Claim case, the arbitrator may grant to the prevailing party, or apportion among the parties, reasonable attorney fees, expert witness fees and costs. Judgment may be entered on the arbitrator's award in any court of competent jurisdiction. This arbitration provision also applies to claims against SAMSUNG's employees, representatives and affiliates if any such claim arises from the Product's sale, condition or performance.

You may opt out of this dispute resolution procedure by providing notice to SAMSUNG no later than 30 calendar days from the date of the first consumer purchaser's purchase of the Product. To opt out, you must send notice by e-mail to optout@sta.samsung.com, with the subject line: "Arbitration Opt Out." You must include in the opt out e-mail (a) your name and address; (b) the date on which the Product was purchased; (c) the Product model name or model number; and (d) the IMEI or MEID or Serial Number, as applicable, if you have it (the IMEI or MEID or Serial Number can be found (i) on the Product box; (ii) on the Product information screen, which can be found under "Settings;" (iii) on a label on the back of the Product beneath the battery, if the battery is removable; and (iv) on the outside of the Product if the battery is not removable). Alternatively, you may opt out by calling 1-888-987-4357 no later than 30 calendar days from the date of the first consumer purchaser's purchase of the Product and providing the same information. These are the only two forms of notice that will be effective to opt out of this dispute resolution procedure. Opting out of this dispute resolution procedure will not affect the coverage of the Limited Warranty in any way, and you will continue to enjoy the benefits of the Limited Warranty.

Severability

If any portion of this Limited Warranty is held to be illegal or unenforceable, such partial illegality or unenforceability shall not affect the enforceability of the remainder of the Limited Warranty.

Precautions for Transfer and Disposal

If data stored on this device is deleted or reformatted using the standard methods, the data only appears to be removed on a superficial level, and it may be possible for someone to retrieve and reuse the data by means of special software.

To avoid unintended information leaks and other problems of this sort, it is recommended that the device be returned to Samsung's Customer Care Center for an Extended File System (EFS) Clear which will eliminate all user memory and return all settings to default settings. Please contact the **Samsung Customer Care Center** for details.

Important! Please provide warranty information (proof of purchase) to Samsung's Customer Care Center in order to provide this service at no charge. If the warranty has expired on the device, charges may apply.

Samsung Telecommunications America, LLC
1301 E. Lookout Drive
Richardson, Texas 75082

Phone: 1-800-SAMSUNG
Phone: 1-888-987-HELP (4357)

©2012 Samsung Telecommunications America, LLC. All rights reserved.

No reproduction in whole or in part allowed without prior written approval. Specifications and availability subject to change without notice. [111611]

End User License Agreement for Software

IMPORTANT. READ CAREFULLY: This End User License Agreement (“EULA”) is a legal agreement between you (either an individual or a single entity) and Samsung Electronics Co., Ltd. for software owned by Samsung Electronics Co., Ltd. and its affiliated companies and its third party suppliers and licensors that accompanies this EULA, which includes computer software and may include associated media, printed materials, “online” or electronic documentation (“Software”).

BY CLICKING THE “I ACCEPT” BUTTON (OR IF YOU BYPASS OR OTHERWISE DISABLE THE “I ACCEPT”, AND STILL INSTALL, COPY, DOWNLOAD, ACCESS OR OTHERWISE USE THE SOFTWARE), YOU AGREE TO BE BOUND BY THE TERMS OF THIS EULA. IF YOU DO NOT ACCEPT THE TERMS IN THIS EULA, YOU MUST CLICK THE “DECLINE” BUTTON, AND DISCONTINUE USE OF THE SOFTWARE.

1. GRANT OF LICENSE. Samsung grants you the following rights provided that you comply with all terms and conditions of this EULA: You may install, use, access, display and run one copy of the Software on the local hard disk(s) or other permanent storage media of one computer and use the Software on a single computer or a mobile device at a time, and you may not make the Software available over a network where it could be used by multiple computers at the same time. You may make one copy of the Software in machine-readable form for backup purposes only; provided that the backup copy must include all copyright or other proprietary notices contained on the original.

2. RESERVATION OF RIGHTS AND OWNERSHIP. Samsung reserves all rights not expressly granted to you in this EULA. The Software is protected by copyright and other intellectual

property laws and treaties. Samsung or its suppliers own the title, copyright and other intellectual property rights in the Software. The Software is licensed, not sold.

3. LIMITATIONS ON END USER RIGHTS. You may not reverse engineer, decompile, disassemble, or otherwise attempt to discover the source code or algorithms of, the Software (except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation), or modify, or disable any features of, the Software, or create derivative works based on the Software. You may not rent, lease, lend, sublicense or provide commercial hosting services with the Software.

4. CONSENT TO USE OF DATA. You agree that Samsung and its affiliates may collect and use technical information gathered as part of the product support services related to the Software provided to you, if any, related to the Software. Samsung may use this information solely to improve its products or to provide customized services or technologies to you and will not disclose this information in a form that personally identifies you.

5. UPGRADES. This EULA applies to updates, supplements and add-on components (if any) of the Software that Samsung may provide to you or make available to you after

the date you obtain your initial copy of the Software, unless we provide other terms along with such upgrade. To use Software identified as an upgrade, you must first be licensed for the Software identified by Samsung as eligible for the upgrade. After upgrading, you may no longer use the Software that formed the basis for your upgrade eligibility.

6. SOFTWARE TRANSFER. You may not transfer this EULA or the rights to the Software granted herein to any third party unless it is in connection with the sale of the mobile device which the Software accompanied. In such event, the transfer must include all of the Software (including all component parts, the media and printed materials, any upgrades, this EULA) and you may not retain any copies of the Software. The transfer may not be an indirect transfer, such as a consignment. Prior to the transfer, the end user receiving the Software must agree to all the EULA terms.

7. EXPORT RESTRICTIONS. You acknowledge that the Software is subject to export restrictions of various countries. You agree to comply with all applicable international and national laws that apply to the Software, including the U.S. Export Administration Regulations, as well as end user, end use, and destination restrictions issued by U.S. and other governments.

8. **TERMINATION.** This EULA is effective until terminated. Your rights under this License will terminate automatically without notice from Samsung if you fail to comply with any of the terms and conditions of this EULA. Upon termination of this EULA, you must cease all use of the Software and destroy all copies, full or partial, of the Software.

9. **THIRD-PARTY APPLICATIONS.** Certain third-party applications may be included with, or downloaded to this mobile device. SAMSUNG makes no representations whatsoever about any of these applications. Since SAMSUNG has no control over such applications, Purchaser acknowledges and agrees that SAMSUNG is not responsible for the availability of such applications and is not responsible or liable for any content, advertising, products, services, or other materials on or available from such applications. Purchaser expressly acknowledges and agrees that use of third-party applications is at Purchaser's sole risk and that the entire risk of unsatisfactory quality, performance, accuracy and effort is with Purchaser. It is up to Purchaser to take precautions to ensure that whatever Purchaser selects to use is free of such items as viruses, worms, Trojan horses, and other items of a destructive nature. References on this mobile device to any names, marks, products, or services of any third-parties are provided solely as a convenience to

Purchaser, and do not constitute or imply an endorsement, sponsorship, or recommendation of, or affiliation with the third-party or its products and services. Purchaser agrees that SAMSUNG shall not be responsible or liable, directly or indirectly, for any damage or loss caused or alleged to be caused by, or in connection with, use of or reliance on any such third-party content, products, or services available on or through any such application. Purchaser acknowledges and agrees that your use of any third-party application is governed by such third-party application provider's Terms of Use, License Agreement, Privacy Policy, or other such agreement and that any information or personal data you provide, whether knowingly or unknowingly, to such thirdparty application provider, will be subject to such third-party application provider's privacy policy, if such a policy exists. SAMSUNG DISCLAIMS ANY RESPONSIBILITY FOR ANY DISCLOSURE OF INFORMATION OR ANY OTHER PRACTICES OF ANY THIRD-PARTY APPLICATION PROVIDER.

10. **Disclaimer of Warranty Regarding Third-Party Applications.** SAMSUNG DOES NOT WARRANT OR MAKE ANY REPRESENTATIONS REGARDING THE AVAILABILITY, USE, TIMELINESS, SECURITY, VALIDITY, ACCURACY, OR RELIABILITY OF, OR THE RESULTS OF THE USE OF, OR OTHERWISE RESPECTING, THE CONTENT OF ANY THIRD-

PARTY APPLICATION WHETHER SUCH THIRD-PARTY APPLICATION IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG, IS DOWNLOADED, OR OTHERWISE OBTAINED. USE OF ANY THIRD-PARTY APPLICATION IS DONE AT PURCHASER'S OWN DISCRETION AND RISK AND PURCHASER IS SOLELY RESPONSIBLE FOR ANY DAMAGE TO YOUR MOBILE DEVICE OR LOSS OF DATA THAT RESULTS FROM THE DOWNLOADING OR USE OF SUCH THIRD-PARTY APPLICATIONS. SAMSUNG EXPRESSLY DISCLAIMS ANY WARRANTY REGARDING WHETHER PURCHASER'S PERSONAL INFORMATION IS CAPTURED BY ANY THIRD-PARTY APPLICATION PROVIDER OR THE USE TO WHICH SUCH PERSONAL INFORMATION MAY BE PUT BY SUCH THIRD-PARTY APPLICATION PROVIDER. ANY THIRD-PARTY APPLICATIONS PROVIDED WITH THIS MOBILE DEVICE ARE PROVIDED "AS IS" AND ON AN "AS AVAILABLE" BASIS, WITHOUT WARRANTIES OF ANY KIND FROM SAMSUNG, EITHER EXPRESS OR IMPLIED. TO THE FULLEST EXTENT POSSIBLE PURSUANT TO APPLICABLE LAW, SAMSUNG DISCLAIMS ALL WARRANTIES EXPRESS, IMPLIED, OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, SATISFACTORY QUALITY OR WORKMANLIKE EFFORT, FITNESS FOR A PARTICULAR PURPOSE, RELIABILITY OR AVAILABILITY,

ACCURACY, LACK OF VIRUSES, QUIET ENJOYMENT, NON-INFRINGEMENT OF THIRD PARTY RIGHTS OR OTHER VIOLATION OF RIGHTS. SAMSUNG DOES NOT WARRANT AGAINST INTERFERENCE WITH YOUR ENJOYMENT OF THE THIRD-PARTY APPLICATION, THAT THE FUNCTIONS CONTAINED IN THE THIRD-PARTY APPLICATION WILL MEET PURCHASER'S REQUIREMENTS, THAT THE OPERATION OF THE THIRD-PARTY APPLICATION WILL BE UNINTERRUPTED OR ERROR-FREE, OR THAT DEFECTS IN THE THIRD-PARTY APPLICATION WILL BE CORRECTED. PURCHASER ASSUMES THE ENTIRE COST OF ALL NECESSARY SERVICING, REPAIR, OR CORRECTION. SOME JURISDICTIONS DO NOT ALLOW EXCLUSIONS OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. NO ADVICE OR INFORMATION, WHETHER ORAL OR WRITTEN, OBTAINED BY PURCHASER FROM SAMSUNG SHALL BE DEEMED TO ALTER THIS DISCLAIMER OF WARRANTY REGARDING THIRD-PARTY APPLICATIONS, OR TO CREATE ANY WARRANTY.

11. Limitation of Liability. SAMSUNG WILL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND ARISING OUT OF OR RELATING TO THE USE OR THE INABILITY TO USE ANY THIRD-PARTY APPLICATION, ITS CONTENT OR FUNCTIONALITY, INCLUDING BUT NOT LIMITED TO DAMAGES CAUSED BY OR

RELATED TO ERRORS, OMISSIONS, INTERRUPTIONS, DEFECTS, DELAY IN OPERATION OR TRANSMISSION, COMPUTER VIRUS, FAILURE TO CONNECT, NETWORK CHARGES, AND ALL OTHER DIRECT, INDIRECT, SPECIAL, INCIDENTAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES EVEN IF SAMSUNG HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. NOTWITHSTANDING THE FOREGOING, SAMSUNG'S TOTAL LIABILITY TO PURCHASER FOR ALL LOSSES, DAMAGES, CAUSES OF ACTION, INCLUDING BUT NOT LIMITED TO THOSE BASED ON CONTRACT, TORT, OR OTHERWISE, ARISING OUT OF PURCHASER'S USE OF THIRD-PARTY APPLICATIONS ON THIS MOBILE DEVICE, OR ANY OTHER PROVISION OF THIS EULA, SHALL NOT EXCEED THE AMOUNT PURCHASER PAID SPECIFICALLY FOR ANY SUCH THIRD-PARTY APPLICATION THAT WAS INCLUDED WITH THIS MOBILE DEVICE. THE FOREGOING LIMITATIONS, EXCLUSIONS, AND DISCLAIMERS (INCLUDING SECTIONS 9, 10, AND 11) SHALL APPLY TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, EVEN IF ANY REMEDY FAILS ITS ESSENTIAL PURPOSE.

12. U.S. Government End Users Restricted Rights. The Software is licensed only with "restricted rights" and as "commercial items" consisting of "commercial software" and "commercial software documentation" with only those rights as are granted to all other end users pursuant to the terms and conditions herein. All Software and Products provided to the United States Government pursuant to solicitations issued on or after December 1, 1995 is provided with the commercial rights and restrictions described elsewhere herein. All Software and Products provided to the United States Government pursuant to solicitations issued prior to December 1, 1995 are provided with RESTRICTED RIGHTS as provided for in FAR, 48 CFR 52.227-14 (JUNE 1987) or DFAR, 48 CFR 252.227-7013 (OCT 1988), as applicable.

13. APPLICABLE LAW. This EULA is governed by the laws of TEXAS, without regard to conflicts of laws principles. This EULA shall not be governed by the UN Convention on Contracts for the International Sale of Goods, the application of which is expressly excluded. If a dispute, controversy or difference is not amicably settled, it shall be finally resolved by arbitration in Seoul, Korea in accordance with the

Arbitration Rules of the Korean Commercial Arbitration Board. The award of arbitration shall be final and binding upon the parties.

14. ENTIRE AGREEMENT; SEVERABILITY. This EULA is the entire agreement between you and Samsung relating to the Software and supersedes all prior or contemporaneous oral or written communications, proposals and representations with respect to the Software or any other subject matter covered by this EULA. If any provision of this EULA is held to be void, invalid, unenforceable or illegal, the other provisions shall continue in full force and effect.

Index

Numerics

2 Sec Pause

Adding 84

2G Network

Using 302

3G Network 302

Using 302

4G 289

4G Network 301

Using 301

A

ABC 107

Accessing

Recently-used applications 67

Voice mail 23

Accessory 350

Audio Output 350

Dock Sound 350

Screen Display 350

Accounts and Sync

Adding Contacts 135

Add 2 Sec Pause 87, 125

Add to Favorites 140

Adjusting

Call volume 93

Adobe PDF 256

Advanced Edit

Gallery 178, 185

Air 58

Air View 58, 350

Airplane

Mode 40

Airplane Mode 300

Alarm

Deleting an Existing Alarm 233

Setting a New Alarm 232

Turning Off 233

Alerts

Presidential 151

Alerts on Call 309

Allow Diagnostics 18, 346

Allowing Mock Locations 354

AllShare

Definitions 226

AllShare Cast 40

On 221, 224, 308

AllShare Cast Hub 37

1st Time Pairing 221

Activation on Device 221

Connecting 220

Disconnecting Your Device 222

Dongle 221

Pairing 221

Pairing Your Devices 221

Re-pairing a Device 222

Set Up Hardware 220

Streaming Videos 223

Troubleshooting 222

AllShare Play

Configuring Settings 215

Group Cast 219

Sharing Files 217

Sharing Media 218

- Uploading Images to Web 217
- Uploading Video to Web 217
- Web Storage Setup 216
- AllShareCast Hub** 227
- AMBER Alerts**
 - Disable 152
- AMBER alerts** 151
- Emergency alerts**
 - Message Settings 151
- Answering a call** 84
- Answering Key** 309
- Any Key**
 - Answering 352
- Application cache and data**
 - Clearing 256
- Application Menus**
 - Navigating through 66
- Applications** 44
 - Adding a New Page 73
 - Adding Apps Folders 72
 - AllShare Play 45
 - Amazon 45
 - Calculator 45, 228
 - Calendar 45
 - Camera 46, 231
 - ChatON 46
 - Clock 46
 - Contacts 46
 - Creating Folders 72
 - Downloads 47
 - Dropbox 47
 - Email 47, 237
 - Flipboard 47
 - Gallery 47
 - Game Hub 47
 - Google 48
 - Google Mail 48, 238
 - Google Maps 49, 244
 - Google+ 48
 - Group Cast 48
 - Help 48
 - Hide 44
 - Internet 48, 240
 - Kies Air 49
 - Latitude 49
 - Local 49
 - Media Hub 49
 - Messaging 50
 - messaging 247
 - Messenger 50
 - Mobile HotSpot 50
 - Music Hub 50
 - Music Player 50
 - My Files 50
 - Navigation 51
 - Need for Speed Most Wanted 51
 - Paper Artist 51
 - Phone 51
 - Play Books 51
 - Play Magazines 51
 - Play Movies & TV 52
 - Play Musc 52
 - Play Store 52
 - Polaris Office 4.0 52
 - S Note 52
 - S Suggest 52
 - S Voice 53
 - Samsung Apps 53
 - Settings 53
 - Sharing with Others 69
 - Show Hidden 44
 - Shutting Down 25

- Storage Used 326
- T-Mobile My Account 53
- T-Mobile Name ID 53
- T-Mobile TV 53
- Using the Camcorder 188
- Using the Camera 172
- Video Player 54, 264
- Visual Voicemail 54
- Voice Recorder 54, 265
- Voice Search 54
- VPN Client 54
- YouTube 54, 266
- Zynga 54

Applications and Development 226

Applications settings

- allow mock locations 353

Apps

- Adding 43
- Close 264
- Reset Preferences 326

Apps Screen

- Customizing 44

Area Code

- Auto Assign 314

Audio

- Output Mode 350

Auto Redial 314

Auto Reject

- Configuration 85

Auto Reject List 309

Auto Reject Mode 309

Automatic Answering 309

Automatic Restore 345

B

Back up

- My Account 345
- My Data 345

Back up and Restore 345

Basic Mode 69, 317

Battery

- Charging 13
- Display Percentage 15, 321
- Extending Life 15
- Installing 12
- Low Battery Indicator 15
- Removal 12
- Wall Charger 13

Battery Cover

- Removal 8
- Replace 9

Battery Life

- Extending 15

Battery Usage 323

Battery Use & Safety 366

Bigger Font

- Setting 352

Bing

- Set Search Engine 276

Blacklist

- Adding 127

Blocking Mode 317

- On 317

Bluetooth 297

- About 277
- Change Name 278
- Configure Device Settings 280
- Deleting a Paired Device 280
- Device Name 297
- Disconnecting a Paired Device 280
- Media Audio 280

- Microhone Function 280
- Off 277, 297
- On 277, 297
- Outgoing Headset Condition 310, 312
- Paring Devices 279
- Review Downloaded Files 279
- Scan for Devices 278
- Scanning for other Devices 298
- Sending Contact Information 281
- Sending Contacts Via 281
- Sending Namecard 132
- Set Visibility 278
- Settings 278
- Status indicators 277
- Switching to Headset during call 95
- Turning on and off 277, 297
- Visibility 298
- Visible Time-Out 278
- Brightness**
 - Auto 40
- Browser**
 - Adding bookmarks 273

- Deleting bookmarks 273
- Easier to Read Pages 275
- Emptying cookies 273
- Entering a URL 270
- Inverted Display 275
- Navigation 269
- Options 269
- Quick Controls 277
- Resetting Default Actions 326
- Search Engine 276
- Settings 274

Bubble

- Options 148

C

Calculator

- Scientific Functions 228

Calendar

- Creating an event 229
- Settings 230
- Sync 229
- Writing On 229

Calibration 349

Call

- Settings 84, 85

Call Alert 309

- Call Vibrations 309

Call Answering/Ending 309

Call Barring 314

Call Duration 103

- Resetting Times 103

Call Forwarding 310

- Configuring 313

Call Functions 80

- Answering 84
- Background Calling 81
- Ending 81
- Ending a Call 81
- Ending via Status Bar 82
- Making a Multi-Party Call 96
- Pause Dialing 87
- Redialing the last number 88
- Wait dialing 87

Call Functions

- Vibrate 310

Call Rejection 85, 309

Call Settings 309

- Additional Settings 314
- General 309

- Noise Reduction 314
- Call Sound**
 - Setting 94
- Call Status Tones** 309
- Call Vibrations** 309
- Call Volume**
 - Adjusting 93
 - Extra Volume 93, 310
- Call Waiting** 98, 314
- Caller ID** 314
- Caller Ringtone**
 - Set As 210
- Calling**
 - Using Wi-Fi 90
- Calls**
 - Auto Reject 309
 - Making a 80
 - Multi-party 96
 - Muting 95
- Camcorder** 188
 - Accessing the Video Folder 193
 - Options 190
 - Shooting Video 189

- Camera** 171
 - Camera Options 173
 - Default Storage Location 176
 - Enabling Share Shot 180
 - Lock Screen Shortcut 333
 - Taking Pictures 172
- Cameracorder**
 - Taking Pictures During Video 192
- Care and Maintenance** 372
- Charging battery** 13
- ChatON** 167
 - Adding a Buddy 168
 - Adding New Buddy 168
 - Buddy photo share 178, 185
 - Chatting On 169
 - Deleting Bubble 169
 - Register Service 168
- Children and Cell Phones** 362
- Clearing**
 - Application cache and data 256
- Clock** 333
- Closing Apps** 264
- Cloud** 344

- CMAS** 151, 152
- Collect Diagnostics** 345
- Commercial Mobile Alerting System (CMAS)** 365
- Configuration**
 - Initial 16
- Connections**
 - Accessing the Internet 269
- Contact**
 - Copying to microSD Card 133
 - Copying to SIM Card 132
 - Creating a New 119
 - Joining 128
 - New From Keypad 121
 - Photo 187
- Contact Entry**
 - Options 128
- Contact List**
 - Options 126
- Contact Menus**
 - Options 127
- Contacts**
 - Adding a Number to Existing 124
 - Adding a Pause or Wait 125

- Adding Your Facebook Friends
 - 135
- Additional Options 137
- Deleting 125
- Display Options 134, 137
- Displaying Contacts by Name 137
- Export List to microSD 283, 345
- First Name 137
- Groups 138
- Last Name First 137
- Merge with Google 126
- Merge with Samsung Account
 - 126
- Reject List 127
- Sending All 131
- Setting Default Location 126
- Settings 137
- Share Namecard Via 127
- Sharing Settings 137
- Sharing/Sending 131
- Contacts List** 80
- Context Menus** 124, 127
 - Navigation 67
 - Using 67

398

- Cookies**
 - Emptying 273
- Copy to Dialing Screen** 102
- Copying Contact** 132
- CPU Usage**
 - Display 354
- Create Folder**
 - Group Apps 44
- Creating a Playlist** 211
- Creating and sending**
 - Messages 142
- Customizing**
 - Home screens 67

D

- Data**
 - Auto Sync Data 299
 - Restrict Background Data 299
- Data Limit**
 - Setting 299
- Data Roaming** 301
 - Activate/Deactivate 299, 301
- Data Usage**
 - Cycle 299
 - Limiting 299

- Date**
 - Selecting Format 351
- Date and Time** 351
- Default Notifications**
 - Settings 319
- Default Storage**
 - Assigning 171
 - Camcorder 21, 171, 192
 - Camera 21, 171
 - Camera Storage 176
- Deleting**
 - Multiple Messages 148
 - Single Bubble 148, 149
 - Single Message 148
- Deleting a contact** 125
- Desk Clock** 232
 - Configuring 235
- Desktop Backup Password** 354
- Developer Options**
 - On 283
- Device**
 - Reset 346
- Device Options**
 - Screen 318

Display

- Icons 33
- Settings 33
- Status Bar 33
- Using Negative Colors 352

Display / Touch-Screen 370

Displaying your phone number 80

DivX

- Locating VOD Number 197
- Overview 197
- Registering Your DivX Device 197
- Registration Code 356

Do cell phones pose a health hazard?

358

Dock

- Sound 350

Dongle

- AllShare Cast Hub 221

Downloading

- New application 254

Downloads 235

- Internet Downloads 235
- Other Downloads 235

Draft Messages 143

Driving Mode 40

Dropbox

- Uploading Picture 237

E

Easy Clip 60

Easy Mode 69, 317

EDGE Network 302

Edit Page 68

Email 155

- Changing Signature 158, 163
- Composing 157
- Configuring Settings 158
- Creating an Internet Account 155
- Internet Email 155
- Opening 156
- Refreshing Messages 157
- Sending 137
- Wi-Fi Download of Attachments 159, 163

Emergency Alerts 151

Emergency

- Alert Preview 151
- Alerts 151

Emergency Alert

- Configuration 152

Emergency Alerts

- AMBER 151
- Imminent Extreme 151
- Severe 151

Emergency Calls 371

- Making 82
- With SIM 83
- Without SIM 82

Emoticons 144

Ending

- A call 81

Entering Text 104

- Using SWYPE 105

Erasing files from

- Memory card 78

Exchange Email 159

- Account Setup 160
- Composing 162
- Configuring Settings 162
- Deleting Message 162
- Opening 162
- Refreshing Messages 162

Exposure to Radio Frequency (RF)

Signals 358

Extreme Alert

Disable 152

F

Face Unlock 329

Facebook

Personalize 117, 340

Swpe Connect 106, 341

Sync Calendar 136

Sync Gallery 136

Zynga 268

Facial Recognition 329

Factory Data Reset 346

Prior To 345

Factory data reset 79

Fast Motion

Video 190

Favorites Tab 140

FCC Hearing Aid Compatibility (HAC)

Regulations for Wireless Devices 377

FCC Notice and Cautions 379

Fixed Dialing Numbers 315

Flipboard 238

Folder

Create 43

Font

Size 321

Style 321

Font Size

Caption 267

Changing 352

Minimum Setting 275

Forgot Pattern? 331

G

Gallery

Advanced Edit 178, 185

Folder Options 184

Opening 195

Picture-In-Picture 196

Game Hub 238

Games

Volume 318

Gestures

Advanced Settings 64, 349

Browse Image 64

Overview 63

Quick Glance 63

Screen Capture 65

Sensitivity Settings 64, 349

Shake to Update 64

Tilt to Zoom 64

Getting Started 7

Battery 12

Battery Cover 8

Locking/Unlocking the Device 19

microSD card 11

SIM Card 9

Switching Device On/Off 18

Voice Mail 23

Gmail 165, 238

Composing a Message 165

Creating an Additional Account

166

Opening 165

Other Options 165

Personalize 117, 340

Personalize Swype 106, 342

Refreshing 165

Signing In 165

Viewing 166

Google

- Create New Account 20
- Merge Contacts 126
- Retrieving Password 20
- Set Search Engine 276
- Signing into Your Account 20
- Voice Typing 104

Google Books 252

Google Mail

- see also Gmail 165

Google Maps

- Enabling a location source 245
- Opening a map 245

Google Music 202, 253

Google Now 26, 266

- Adjust Settings 26

Google Places

- See also Local 244

Google Talk 53, 263

Google Voice Typing

- Configuring 118, 338

GPS

- Tagging Images 176, 192

GPS & AGPS 370

GPS Tag 176, 192

GPU

- Force Rendering 353

Group Cast 219, 239, 265

- AllShare Play 237
- Sharing an Image 185
- Sharing Pictures 239

Groups

- Adding an Member to an Existing Group 139
- Creating a new caller group 138
- Deleting 139
- Deleting a Caller Group 139
- Editing a Caller Group 139
- Removing an Entry 139
- Settings 139

GSM 301

Gyroscope

- Calibration 64, 65, 349

H

Handwriting 111

- Settings 115, 339

Handwriting Mode 114

Haptic Feedback

- Turn On/Off 323
- Vibrate 320
- Vibration Setting 319

HDR 173

Headset

- In call Settings 309

Health and Safety Information 358

Help

- In-Device 240

Hidden Applications

- Show 44

Hold

- Placing a Call on Hold 94

Home 41

Home City

- Setting 333

Home Key 40

Home Screen

- Assigning a New 69
- Changing Wallpaper 74
- Menu Settings 43
- Overview 41

Home Screen Mode 317

Adjusting 69

Home screens

Customizing 67

Homepage

Setting New 272

HSPA+ 289

I

Icons

Description 33

Indicator 33

Status 33

Images

Assigning as a Contact icon 187

Assigning as wallpaper 188

Transferring 283, 345

Verifying 283, 345

Importing and Exporting

To micro SIM card 137

In Call

Options 93

In call

Options 95

Incognito 271

Create Window 271

Exit Window 272

Incoming Call

Vibration Setting 319

Indicator icons 33

Information Ticker 332

Ink 333

Ink Effect

Lock Screen 333

International Call 86

International Calls

Making 86

Internet

Set New Homepage 272

Internet 269

Brightness Setting 270

Browser Navigation 269

Clear Cookies 275

Search 270

Set Home Page 274

Internet Downloads 235

Internet Email 155

IP Address 355

J

Joining

Contact information 128

K

Kies Air

Before Using 283

L

Language

Select 338

LDAP 126

Live Shooting 192

Live Wallpaper

Selecting 75

Local 244

Location

Settings 243, 246

Location Alarm 232

Location and Google Search 245, 250

Location and Google Services 327

Lock Pattern

- Changing 330
- Deleting 330
- If I Forgot My Pattern 331
- PIN 330
- Setting 329

Lock Screen 328

- Camera Quick Access 333
- Changing Wallpaper 75
- Clock 333
- Customizing Shortcuts 333
- Dual Clock 333
- Ink Effect 333
- Options 332, 334
- Popup Note 332
- Ripple Effect 333
- Say Wake-Up Command 333
- Shortcuts 332
- Showing Owner Info 334
- Ticker 332
- Using Shortcuts 333
- Viewing Missed Calls 103
- Weather 333

Logs 100

- Accessing 100
- Accessing from Notifications 101
- Altering Numbers 102
- Erasing 103

Low battery indicator 15

M

Making

- Emergency Calls 82
- International Calls 86
- New call 80

Managing Applications

- Clearing Application Cache 324
- Uninstalling Third-party Applications 324

Market

- see Play Store 253

Marking contact

- As a default 130

Media Hub 199, 247

- Creating a New Account 199
- Using 200

Memory card

- Erasing files from the 78

Merge Calls 96

Merge with Google 126

Message

- Options 143
- Read 146
- Register a Number as Spam 147
- Reply 147, 169
- Thread Options 147
- Threads 147

Message Search 149

Message threads 147

Messaging

- Adding a Signature 151
- Adding Attachments 145
- Additional Text 146
- Block Unknown Senders 152, 154
- Cloud Backup 344
- Composing Options 144
- Creating and sending 142
- Creating and Sending Text Messages 142
- Deleting a message 148
- Draft 143

- Google Mail 165
- Icons on the Status Bar 141
- Insert Smiley 144
- Locked 144
- Menu Options 143
- Options 143
- Scheduled Messages 143
- Settings 149
- Signing into Google Mail 165
- Spam 144
- Split View 150
- Text Templates 154
- Types of Messages 141
- Viewing new 146
- micro SIM Card** 10
 - Changing Existing PIN 335
 - Importing and Exporting 137
 - Insertion 10
 - Lock 335
 - Removal 10
 - Setting Up Lock 335
- microSD Card**
 - Insertion 11
 - Removal 11

- Microsoft Exchange** 120, 155
- Missed Call**
 - Viewing from Lock Screen 103
- Mobile Data**
 - Activate/Deactivate 298
 - Set Data Limit 299
 - Usage 300
- Mobile HotSpot** 289
 - Activating 289
 - Allowed Devices 291
 - Changing Password 290
 - Connecting 290
 - MAC Filtering 291
- Mobile HotSpots**
 - Detect and Connect 299
- Mobile Networks** 300
 - Data Roaming 301
 - Mobile Data 300
- Mobile Web** 269
 - Entering Text in the Mobile Web Browser 270
 - Navigating with the Mobile Web 269
 - Using Bookmarks 272

- Mono**
 - Audio Setup 352
- Motion**
 - Function Activation 348
 - On 63, 187, 348
 - Using to Unlock 328
- Motion Settings** 348
- Mounting the SD card** 77
- Multi-Party Call** 96
 - Dropping One Participant 98
 - Private conversation 97
- Multi-party call**
 - Setting up 96
- Multi-party calls** 96
- Multi-Tasking**
 - Background Calling 81
 - Watching Videos 196
- Music** 248
 - Volume 318
- Music App**
 - Adding Songs to Playlists 207
 - Changing Library View 203
 - Changing Settings 204
 - Creating a Playlist 207

- Deleting a Playlist 208
- Listening 204
- Music Application 202
- Now Playing Screen 205
- Options While Playing 206
- Playing 204
- Playing a Playlist 208
- Searching for Music 204
- Tab Options 205

Music File Extensions

- 3GP 208
- AAC 208
- AAC+ 208
- eAAC+ 208
- M4A 208
- MP3 208
- MP4 208
- WMA 208

Music Files

- Removing 212
- Transferring 212

Music Hub 212

- Making a Purchase 213

Music Player

- Adding Music 211
- Creating a Playlist 211
- Editing a Playlist 211
- Making a Song a Ringtone 209
- Options 209
- Playing Music 208
- Removing Music 211
- Using Playlists 210

MusicPlayer 208

My Call Sound 310

N

Namecard

- Sending 131
- Sending All 131
- Share Via 131

Navigating

- Application Menus 66
- Sub-Menus 66
- Through Screens 55

Navigation

- Enable GPS 250
- Go Home 250
- Options 250

Need for Speed Most Wanted 251

Negative Colors 352

Network connection

- Adding a new 287

Network Mode

- 2G Network 301, 302
- 3G Network 302

New Album 193

New applications

- Downloading 254

NFC

- On 182
- Turning On 261

NFC (Near Field Communication) 306

Noise Reduction 94

Non-Market Applications 255

Notification

- Vibration Setting 319

Notification Bar 39

- Using 39

Notifications

- Volume 318

O

On/Off Switch 18

One Handed Operation

Keyboard 115, 339

On/Off 84

One-handed Operation 337

Operating Environment 375

Organizer

Calculator 228

World Clock 234

Other Downloads 235

Other Important Safety Information

380

Out of Office

Message 163

Settings 163

Outlook 155

Overview

Home Screen 41

Owner Information 334

P

Passwords

Make Visible 336

Pause

Adding to a Contact 125

Pause Dialing 87

Personal Localized Alerting Network (PLAN) 365

Phone

Icons 33

Switching on/off 18

Phone number

Finding 80

Phone Ringtone 319

Set As 210

Phone Vibration 319

Photo Editor

Download and Install 194

Photos

Options 177, 184, 193

Sharing 177, 184, 193

Taking Using Voice 176

Picture

Set As 187

Sharing via Group Cast 185

Streaming from Gallery 186

Picture-In-Picture 196

Pictures

Instant Sharing 180

Sharing 179, 182

Play Books 252

Play Magazines 252

Play Music 253

Play Store 253

Quick Access 44

Play Videos

Picture-In-Picture 196

Pointer Speed

Configuration 343

Popup Note

Lock Screen 332

Open 350

Power 40

Auto Adjust Screen Tone 321

Power Saving 40

Background Color 323

CPU Power 323

Haptic Feedback 323

LCD Adjustment 321

Learning About 323

Screen Power 323
Power Saving Mode 323

Predictive Text
Activation 116, 340
Using 116
Using XT9 115

Prepend
Area Code 315

Primary Shortcuts 42
Adding and Deleting 71
Customizing 71
Replacing 72

Q

Quick Dialing 81
Quick Glance
Options 64, 349
Quick Messaging 143

R

Recently-used Applications
Accessing 67
Redialing the last number 88
Reducing Exposure
Hands-Free Kits and Other
Accessories 361

Reject Call
Rejection Messages 309

Reject Calls
Managing 85

Reject List
Add To 86
Add to 102
Adding 127
Auto Reject 86
Removing 127

Rejection List
Assigning Multiple Numbers 86
Assigning Single Numbers 86

Rejection Messages 309
Reset 346
Reset App Preferences 326
Reset Device 346
Responsible Listening 373

Restarting
Device 19

Restore 345

Restrict
Background Data 299

**Restricting Children's Access to Your
Mobile device** 379

Ringtone 309
Device 319
Volume 318

Ripple 333
Ripple Effect
Lock Screen 333

S

S Beam 179, 307
On 182, 307
Sharing Multiple Pictures 183
Sharing Pictures 182

S Note 257
Creating During a Call 96

S Note Lite
Launching from S Pen 62

S Pen
Back Button Function 60
Functionality 58
Kepper Notification 350
Menu Button Function 62
Overview 58
Quick Command Settings 350

- Removing 59
- S Note Light Launching 62
- Settings 350
- Taking Screen Shots 60
- Using 60
- S Voice** 258
 - Require Wake-Up 333
 - Set Wake-Up Command 333
 - Using 99
- SafeSearch**
 - Filtering 267
- Samsung Account**
 - Creating 21
 - Merge Contacts 126
 - Set up 200
- Samsung Keyboard** 110
 - ABC Mode 113
 - Changing the Input Type 112
 - Enabling 110
 - Handwriting Mode 114
 - Handwriting Settings 115, 339
 - One Handed Operation 115, 339
 - Pen Detection 115, 339
 - Predictive Text 115

- Settings 339
- Symbol/Numeric Mode 113
- XT9 Advanced Settings 340
- Samsung Keypad**
 - Entering Symbols 113
- Samsung Mobile Products and Recycling** 368
- Save a Number**
 - From Keypad 121
- Scan for Nearby Devices** 210
- Scheduled Message**
 - Creating 145
- Scrapbook** 61
- Screen**
 - Home 41
 - Navigation 55
- Screen Capture** 65, 186, 219
 - Taking a Screen Shot 187
- Screen Lock**
 - Set Up 329
 - Sounds 320
- Screen Lock Pattern**
 - Changing 330
 - Creating 329

- Deleting 330
- Forgot My Pattern 331
- Screen Rotation** 40
- Screen Sharing**
 - Via Group Cast 185
- Screen Shots**
 - Selective 60
- Screen Timeout** 321
- Screen Unlock**
 - Face and Voice Unlock 329
 - Face Unlock 329
 - Motion 328
 - Swipe 328
- Screens**
 - Adding and Deleting 68
 - Customizing 67
 - Rearranging 69
- SD card**
 - Communicating With 77
 - Mounting the 77
 - Unmounting 78

SDXC 76

Search Engine 276

Sending a Namecard 131

Setting an Alarm

Alarm Setting 232

Setting up

Voicemail 23

Settings 292

Accessing 292

Browser 274

Call 84

Contact list 137

Display 33

Enabling the GPS Satellites 327

Enabling Wireless Locations 327

Messaging 149

Wallpaper 75

Setup

Initial 16

Severe Alert

Disable 152

Share Applications 69

Share Shot 173, 179, 180

Configuring 181

Enabling 181

Share With 174

Shooting Mode 174

Stop Sharing 181

Taking Images 181

Shortcuts

Adding from Application Screen

70

Adding from Home Screen 71

Deleting from a Screen 71

Managing 70

Primary 42

SIM

Micro 7, 10

see also micro SIM 10

Slow Motion

Video 190

Smart Alarm 233

Smart Practices While Driving 365

Smart Rotation 321

Smart Stay 321

Snooze 233

Repeat 232

SNS 135

Social Network

Adding Facebook Contacts 135

Resync 136

Social Networking

Adding Contacts From 135

Software Update 355, 356

Wi-Fi 357

Song

Set As 210

Sounds

Turn Off All 352

Spam 154

Accessing Your Spam Folder 154

Assigning Manually 153

Assigning Phone Numbers 153

Block Unknown Numbers 154

Block Unknown Senders 152,

154

Manually Register a Number 151,

153

Match Criteria 153

Register a Number 144, 145,

147

- Register a Phrase 151, 153
- Registering a Phrase as Spam 153
- Settings 151, 153
- Spam Messages** 144
 - Assigning 144
- Speakerphone**
 - Turning on and off 95
- Specific Absorption Rate (SAR)**
- Certification Information** 363
- Speed Dial**
 - Changing an entry 89
 - Making a call 89
 - Removing an entry 89
 - Setting 126
 - Setting up entries 88
- Split View** 150
- Standard Limited Warranty** 382
- Status Bar** 33
- Sub-Menus**
 - Navigation 66
- SugarSync**
 - Setup 216

- Swiftkey Flow** 115, 339
- Switching to a Bluetooth**
 - During a call 95
- Swype**
 - 123ABC Mode 109
 - ABC Mode 107
 - Cellular Data 106, 342
 - Connect 106, 341
 - Contribute Usage Data 106, 342
 - Entering Numbers 110
 - Entering Symbols 110
 - Entering Text 105
 - Keyboard Mode 108
 - Personal Dictionary 106, 342
 - Preferences 105, 341
 - Reset Dictionary 106, 341
 - Select Text Input Mode 107
 - Settings 105, 341
 - SYM mode 107
 - Updates 106, 342
- Sync** 40
- System Manager** 17, 346
- System Tone**
 - Settings 320

- Systeme**
 - Volume 318
- Tag Buddy** 177, 184
- Task Manger**
 - Overview 25
- TecTile**
 - Joining a Wi-Fi 263
 - Programming 262
 - Programming a Text Message 262
- TecTiles** 261
 - Installation 261
- Tethering** 303
 - Active Icon 288
 - Disconnecting 289
 - see USB Tethering 288
- Text**
 - Adjusting Size 275
 - Minimum Font Size 275
 - Soom Amount on Double Tap 275
- Text Input**
 - Methods 104

Text Input Method

Selecting 104

Text Templates 154

Create Your Own 154

Text To Speech 343**Text-to-speech**

Configuration 343

Third-Party Applications 324

Uninstalling 256

Time Zone

Selecting 351

Timer

Automatic Answering 310, 312

Tington

Assigning 310

Tones

Keypad 309

Tools

Camera 172

Touches

Show 353

TrackPad

Configure 343

Transferring Large Files 182, 307**Transferring Music Files** 212**TTS** 343**TTY Mode** 314**Twitter**

Personalize 117, 340

Personalize Swype 106, 341

U**UL Certified Travel Charger** 369**Understanding Your Device** 27

Back View 31

Display 32

Features 27

Front View 29

Home 41

S Pen 58

Side Views 31

Uninstalling

Third-party applications 256

Unknown Numbers

Blocking Messages 154

Unknown Sources 255**Unlock**

Options 332

Using Face 329

Using Voice 329

Unmounting

SD card 78

Usage

Battery 323

USB Connections

As Storage Device 282

USB Debugging 354

Disabling 77

USB Settings

As Storage Device 282

USB Tethering 288

Activating 288, 303

Use GPS Satellites 245, 327**Use Wireless Networks** 245, 250, 327**Using Favorites**

Adding Favorites 273

Deleting a Favorite 273

Editing Favorites 273

V

Vibrate 310

Vibration

Device 319

Intensity Setup 319

Video

Volume 318

Video Player

Picture-In-Picture 196

Sharing Videos 196

Videos

Default Storage Location 192

Options 178

Voice Actions 42

Voice Input

Recognition 342

Voice mail

Accessing 23

Accessing from another phone 23

Setting up 23

Voice Search 266

Voice Typing 104

Configuring 118, 338

Voicemail 317

Volume Settings

Adjusting 318

VPN

Adding 304

Settings 304

VPN Client 266

W

Wait 87, 125

Adding to a Contact 125

Wait dialing 87

Wallpaper

Assign Home 43

Home and Lock Screens 75

Wallpapers

Assigning from Gallery 178, 185

Changing Home Screen 74

Changing Lock Screen 75

Changing via Settings Menu 75

Managing 74

Warranty Information 382

WCDMA 301

Weather

Setting 333

Web 269

History 274

Web applications

enable downloading 281

Widget

Adding Widgets 43

Widgets

Adding and Removing 73

Google Talk 53

Moving to a Different Screen 74

Settings 53, 259

Stopwatch 234

Wi-Fi

About 285

Activating 90, 286, 292

Advanced settings 288

Calling 90

Connecting to 286

Deactivating 287

Direct Connection 295

During Sleep 293

MAC Address 294

Manually Adding Network 294

Manually scan for network 287

Off 287

On 286, 287, 292

Settings 292

Show Usage 299

Status icons 286

Wi-Fi Calling 9

Activating 91, 305

Connection Preferences 91, 306

Icons 92

Launching 92

Settings 91, 306

Wi-Fi Direct 295

Activate and Connect 180, 296

Assigning a Name 296

On 180, 296

World Clock

DST Settings 234

WPA2 PSK 289, 290

WPS PIN

Pairing 295

WPS Push Button 294

Connect 295

Pairing 295

Y

Yahoo! 276

YouTube

High Quality 267

High Quality 225

SafeSearch Filtering 267

Settings 267

Z

Zynga 268