

SPH-A303 heat

P O R T A B L E D I G I T A L D E V I C E

User Guide

**Please read this manual before operating your
phone, and keep it for future reference.**



Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating there to (the "Phone System"), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

Samsung Telecommunications America (STA), LLC

Headquarters:

1301 E. Lookout Drive

Richardson, TX 75082

Customer Care Center:

1000 Klein St.

Plano, TX 75074

Toll Free Tel: 1.888.987.HELP (4357)

Internet Address: <http://www.samsungusa.com>

©2007 Samsung Telecommunications America, LLC is a registered trademark of Samsung Electronics America, Inc. and its related entities.

Do you have questions about your Samsung Mobile Phone?

For 24 hour information and assistance, we offer a new FAQ/ARS System (Automated Response System) at:

www.samsungwireless.com/support

Licensed by Qualcomm Incorporated under one or more of the following patents:
U.S.

Patent No. 4, 901, 307; 5, 056, 109; 5, 099, 204; 5, 101, 501; 5, 103, 459; 5, 107, 225; 5, 109, 390.

Printed in Korea)

Openwave® is a registered Trademark of Openwave, Inc.

RSA® is a registered Trademark RSA Security, Inc.

Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

Table of Contents

Section 1: Getting Started	7
Understanding this User Manual	8
Activating Your Device	8
Charging the Battery	10
Setting Up Your Voice Mail	11
Section 2: Understanding Your Device	12
Features of Your Device	12
Closed View of Your Device	13
Open View of Your Device	15
Command Keys	18
Understanding the Display Screen	20
Your Device's Modes	23
Section 3: Call Functions	26
Making a Call — Number Entry Dialing	27
Making a Call — Speed Dialing	28
Answering a Call	29
Ignoring a Call	30
Adjusting the Call Volume	30
Call Log	30
Roaming	35
Section 4: Menu Navigation	36
Menu Navigation	37
Menu Outline	39
Section 5: Entering Text	48
Text Entry Modes	49
Changing the Text Entry Mode	49
Entering Text in Alpha (Abc) Mode	49
Entering Text in T9 Word Mode	50
Entering Upper and Lower Case Letters	51
Entering Korean	51
Entering Numbers	52
Entering Symbols	52
Section 6: Understanding CONTACT	53
Your Contacts List	54
Adding a New Contact	54
Finding a Contact	57
Editing an Existing Contact	59
Speed Dial Numbers	62
Contact Groups	63
Deleting a Contact	68
Call Logs	68

My Info	69
Service Numbers	69
Sync Contacts	69
Section 7: CUSTOMIZE	70
Rings	71
Screens	71
H.O.T. (Helio On Top) Screens	72
Sound Settings	72
Display Settings	75
Touch Sensitivity	80
Call Settings	80
Network	82
Device	82
Security	85
Bluetooth	87
Language	90
Airplane Mode	90
Section 8: SURF	91
SURF	92
Accessing Helio Portal	92
Using the SURF Browser	92
Using Links	93
How Browser Keys Work	93
Section 9: SNAP	94
SNAP Menu	95
Camera	95
Video Camera	99
Zoom	102
Brightness	102
Your Albums	102
Photo Studio	104
Settings	104
Memory Info	108
Section 10: VIDEO + MUSIC	110
Accessing VIDEO + MUSIC	111
Video	111
Download Video	112
Music	112
Download Music	113
Memory Info	113
Settings	114
Section 11: GAMES	116
Finding Games	117
Managing Games	117

Section 12: PLAN	119
Plan Menu	120
Calendar	120
To-do	122
Wake-up Call	123
Alarm	124
Calculator	127
World Time	127
Unit Converter	128
Notepad	129
Stopwatch	130
User Memory	130
Voice Memo	131
Section 13: MESSAGE	134
Creating and Sending New Messages	135
Receiving New Messages	138
Message/Media Boxes	139
Instant Messages	144
E-mail	144
Voicemail	144
Message Log	145
Section 14: APPS	147
Finding Applications	148
Managing Applications	148
Section 15: Health and Safety Information	150
Health and Safety Information	151
UL Certified Travel Adaptor	152
Consumer Information on Wireless Phones	152
Road Safety	158
Operating Environment	159
Using Your Phone Near Other Electronic Devices	159
Potentially Explosive Environments	161
Emergency Calls	161
FCC Notice and Cautions	162
Other Important Safety Information	163
Product Performance	163
Availability of Various Features/Ring Tones	164
Battery Standby and Talk Time	164
Battery Precautions	164
Samsung Mobile Products and Recycling	166
Care and Maintenance	166
Section 16: Warranty Information	167
Standard Limited Warranty	168
Index	172

Section 1: Getting Started

Topics Covered

- Understanding this User Manual
 - Activating Your Device
 - Charging the Battery
 - Setting Up Your Voice Mail
-

This section explains how to start using your device by activating your service, setting up your voice mail, or getting an understanding of how this manual is put together.

Understanding this User Manual

The chapters of this guide generally follow the same order as the menus and sub-menus in your device. A robust index for quick reference to most features begins on page 172.

Also included is important safety information that you should know before using your device. Most of this information is near the back of the guide, beginning on page 150.

Notes and tips

Throughout this guide are icons and text that are set apart from the rest. These are intended to point out important information, quick methods for activating features, to define terms, and more. The definitions for these methods are as follows:

- **Notes:** Explain alternative options within the current feature, menu, or sub menu.
- **Tips:** Provide quick or innovative methods for performing functions related to the subject at hand.
- **Fast Facts:** Are like snippets from a glossary. Fast facts provide definitions in context and proximity to the menu or feature in question.
- **Important:** Points out important information about the current feature that could affect performance, or even damage your device.

Activating Your Device

 
Contact your Wireless Carrier and follow their instructions for obtaining service, if necessary. We suggest that you read this guide to fully understand the services your device supports.

Install the Battery

Note: Your device comes packaged with a partially charged rechargeable standard Li-Ion battery and travel adapter.


Important: You must fully charge the battery the first time you use your device, otherwise you could damage the battery. You can use your device while the battery is charging, but the battery will take longer to recharge.

1. Slide the battery into the compartment so that the tabs on the end align with the slots at the top of the phone.(1) Press the battery down until it clicks into place.(2)

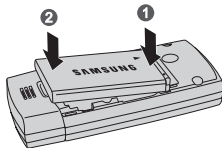

Activating Your Device

 2. Replace the battery cover (1) and slide it toward the bottom of the phone (2) until the cover clicks into place.
3. Make sure that the battery is properly installed before switching on the phone.

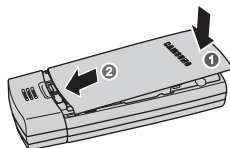

Turn Your Device On

1. Open the slide on your device.
2. Press and hold the  key for two or more seconds.

Note: As with any other radio-transmitting device, do not touch the antenna (located at the top of the battery compartment) while using your device as this can affect call quality and can cause the device to operate at a higher power level than is necessary.

3. The device begins searching for a network signal.
4. Once the device finds a signal, the current time displays on the upper, right side of the icon bar.
5. You're now ready to place and receive calls.

Note: If you are outside of your carrier's coverage or roaming area, the No Service icon () appears at the top of the device's display. If you cannot place or receive calls, try later when service is available, or at another location.

Turn Your Device Off

- Press and hold the  key for two or more seconds. Your device powers off.

 
Note: If your device is on and you press  for less than one second, the device will not power off. This prevents your device from being turned off accidentally.

Remove the Battery

Important! You must unplug the Travel Adapter (if it is connected) before removing the battery from the device during charging to avoid damage.

If necessary, switch off the phone by holding down the  key until the power turns off.


1. Remove the battery cover by sliding the battery cover in the direction of the arrow.
2. Carefully lift the battery cover away from the bottom of the phone.

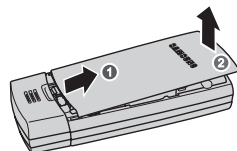

3. Lift (1) the bottom of the battery and remove it (2).


Charging the Battery

 Your device is powered by a rechargeable standard Li-Ion battery. Only use Samsung-approved charging devices and batteries. Samsung accessories are designed to maximize battery life. **Using other accessories may invalidate your warranty and may cause damage.**

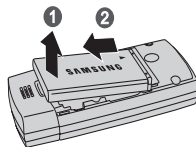

Use the Travel Adapter

 The travel adapter included with your device is a convenient, light-weight charger that rapidly charges your device from any 120/220 VAC outlet.

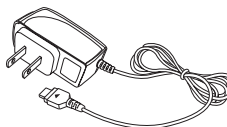


1. Plug the large end of the Travel Adapter into a standard 120 VAC or 220 VAC wall outlet.

Note: For connection to an electrical supply not located in the U.S., you must use an adaptor of the proper configuration for the power outlet. Use of the wrong adaptor could damage your device and void your warranty.

2. Insert the smaller end of the Travel Adapter into the charger/accessory connector at the lower right side of your device.

 Note: The following illustration shows the **correct** and **incorrect** method for connecting the charger. Verify the **arrow** on the adapter is showing and pointing to the device for a correct connection. If it is not, damage to the accessory port will occur therefore voiding the device's warranty.

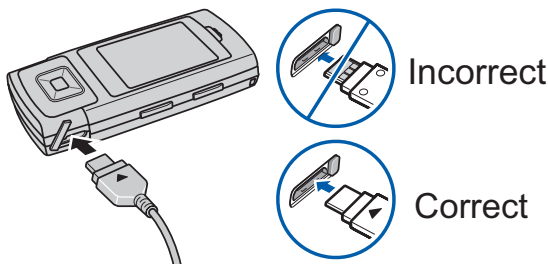

Note: With the device turned **OFF**, a discharged battery recharges fully in approximately 3 hours.

Low battery indicator

The battery indicator () in the upper-right corner of the display indicates power level. Monitor the battery strength and ensure your battery is adequately charged.

- Four bars () indicate a full charge.
- An empty battery icon () indicates a near empty battery.
- A blinking empty battery icon () and a tone sounding indicate you have two to three minutes before the battery is too low to operate the device.
If you continue to use your device without charging its battery, the device shuts down.

Setting Up Your Voice Mail

Voice mail allows callers to leave voice messages, which can be retrieved any time.

Note: Once your voice mail account has been set up, you can use the Voice Mail folder (under the Message menu) to view details of voice messages in your voice mail box.

1. In idle mode, press and hold the  key or dial your own mobile number to dial voice mail.
2. Follow the prompts in the new user tutorial to setup your mail box.

Listen to voice mail

1. In idle mode, press and hold the  key or dial your own mobile number to dial voice mail.
2. At the voice prompt, enter your passcode and follow the instructions.

Section 2: Understanding Your Device

Topics Covered

- Features of Your Device
 - Closed View of Your Device
 - Open View of Your Device
 - Command Keys
 - Understanding the Display Screen
 - Your Device's Modes
-

This section outlines some key features of your device. It also displays the screen and the icons that are displayed when the device is in use.

Features of Your Device

- Domestic and international voice and text messaging service (available on participating networks).
- High speed data (CDMA 2000 1x Technology)
- High speed data (EVDO 1x Technology)
- Global Positioning (GPS) Technology
- Personal Information Management (PIM) Functions
- MMS Messaging
- Text Messaging
- Email Messaging
- 1.3 Megapixel Camera with Flash and Camcorder function
- Speakerphone
- Bluetooth® Wireless Technology **

** The Samsung A303 supports the wireless handsfree profile, and Bluetooth OBEX profiles for Bluetooth® wireless technology.

Closed View of Your Device



Features

1. **Volume Keys** — With the device closed, turns on the external display backlight when held down.
2. **Display** — Indicates the status of your device, including status icons, message indicators, signal strength, and so on. Shows time and date.
3. **Play/Pause Key** — Used to unlock the External Touchpad and to control play of music files.
4. **Navigation Key** — Lets you scroll through the device menu options.
5. **External Touchpad** — Allows you to navigate through device menu options.
6. **Power/Accessory Connector** — Used to plug in the charging accessories and also connect any available accessory cables to your device. Lets you plug in an optional headset for safe, convenient, hands-free conversations and for listening to music.
7. **Key** — Pressing when navigating through a menu accepts the highlighted choice in a menu.
8. **Camera Key** — In standby mode, with the slider open, pressing this key displays the SNAP menu. Pressing and holding this key launches the camera. In camera mode, takes photos or starts and ends video clip recording.

9. **End/Power Key** — Ends a call. If you press and hold the End/Power key, the power goes On or Off. When you receive an incoming call, pressing this key sends the call to voicemail.
10. **Earpiece/Speaker** — Lets you hear the other caller.

Note: The touch keys [Left ] and Right ] soft touch keys, the Send  touch key, and the Back/Clear  touch key] are only active when unlocked. The touch keys lock automatically when you slide the phone. To unlock the touchpad, press and hold the Play/Pause key until the **Key Lock State Unlock key input?** appears in the display.

Caution: The External Touchpad responds to a light touch. Using excessive force when pressing touch keys may damage the touchpad.

Open View of Your Device



Features

1. **Earpiece/Speaker** — Lets you hear the other caller.
2. **Display** — Indicates the status of your device, including status icons, message indicators, signal strength, and so on. Shows menus, calls, and messages.
3. **Volume Keys** — During a call, adjusts the earpiece volume.
In standby mode with the device open, adjusts the ring volume.

4. **Left Soft Touch Key** — When you press and hold this key, Used to navigate through menus and applications and to select the choice available in the Left Soft touch key option.

When receiving a call with the device open or closed, pressing and holding the Left Soft Touch Key mutes the ringer.

Note: The touch keys [Left (•••)] and Right (•••)] soft touch keys, the Send (📞) touch key, and the Back/Clear (⬅️) touch key] are only active when unlocked. If the touch keys are locked ('Touch Buttons Locked' appears in the display), press the Play/Pause key to unlock the touchpad.

Caution: The External Touchpad responds to a light touch. Using excessive force when pressing touch keys may damage the touchpad.

5. **Navigation Key** — Lets you scroll through the device menu options.
6. **Play/Pause Key** — Used to unlock the External Touchpad and to control play of music files.
7. **Send Touch Key** — Lets you place or receive a call. In standby mode, press this touch key once to access the recent call log.
8. **Special Function Keys** — Enter special characters. Performs various functions.
9. **Microphone** — Lets the other caller hear you clearly when you are speaking to them.
10. **Power/Accessory Connector** — Used to plug in the charging accessories and also connect any available accessory cables to your device. Lets you plug in an optional headset for safe, convenient, hands-free conversations and for listening to music.
11. **Alpha-numeric Keys** — Use these keys to enter numbers, letters, and characters.
12. **Back/Clear Touch Key** — Deletes characters from the display when you are in text entry mode. Press this touch key to return to the previous menu or screen when navigating features on your device.
13. **Camera Key** — In standby mode, pressing this key displays the SNAP menu. Pressing and holding this key launches the camera.
In camera mode, takes photos or starts and ends video clip recording.
14. **👉 Key** — Pressing when navigating through a menu accepts the highlighted choice in a menu.
15. **Right Soft Touch Key** — Used to navigate through menus and applications and to select the choice available in the Right Soft touch key option. When you receive an incoming call, press and hold to ignore the call and send it to voicemail. Returns your device to standby mode.
16. **End/Power Key** — Ends a call. If you press and hold the End/Power key, the power goes On or Off. Returns your device to standby mode.

Rear



Features

1. **Self Portrait Mirror** — Helps you center the camera lens for self portraits. Strike a pose and look good in pictures of yourself.
2. **Camera Lens** — The lens of your built-in camera.
3. **End/Power Key** — Ends a call. If you press and hold the End/Power key, the power goes On or Off.
4. **Camera Key** — In standby mode, pressing this key displays the SNAP menu. Pressing and holding this key launches the camera. In camera mode, takes photos or starts and ends video clip recording.
5. **Power/Accessory Connector** — Used to plug in charging accessories and also to connect other available accessory cables to your device.

6. **Rear Speaker** — Lets you hear music, ringtones, alert tones, and other callers.
7. **Play/Pause Key** — Used to unlock the External Touchpad and to control play of music files.
8. **Volume Keys** — During a call, adjusts the earpiece volume.
In standby mode with the device open, adjusts the ring volume.
9. **Flash** — Used with the built-in camera to take photos and videos in low light.

Command Keys

Functions for the soft touch keys are defined by what appears above each in the display. There are two soft touch keys, the left soft touch key (⋮) and the right soft touch key (⋮).

Note: The touch keys [Left (⋮)] and [Right (⋮)] soft touch keys, the Send (⏭) touch key, and the Back/Clear (⏮) touch key are only active when unlocked. The touch keys lock automatically when you slide the phone. To unlock the touchpad, press and hold the Play/Pause key until the **Key Lock State Unlock key input?** appears in the display.

Caution: The External Touchpad responds to a light touch. Using excessive force when pressing touch keys may damage the touchpad.

Left Soft Touch Key

Some functions of the left soft touch key are as follows.

- In standby mode, press the **MENU** (left) soft touch key (⋮) to open the main menu.
- When the left soft touch key function is **Edit**, press the **Edit** (left) soft touch key (⋮) to edit a Contact.
- When the left soft touch key function is **Menu**, press the **Menu** (left) soft touch key (⋮) and a pop-up menu appears.

Right Soft Touch Key

Some functions of the right soft touch key are as follows.

- In standby mode, press the **CONTACTS** (right) soft touch key (⋮) to open the **Contacts** List screen.
- When the right soft touch key function is **Check**, press the **Check** (right) soft touch key (⋮) to select an item in a list to be acted on by a selected function, such as Delete.

Helio Key

- In a menu, press the **Helio** key (⏮) to accept the highlighted selection.
- In camera mode, press the **Helio** key (⏮) to take a photo.
- When the **Helio** key function is **Edit**, press the **Edit** (Helio) key (⏮) to edit a Draft message.

Back/Clear Key

The **Back/Clear key** () is used to erase or clear numbers, text, or symbols from the display. You can also use the  key to return to a previous menu or to return to standby mode from any menu.

1. If you enter an incorrect character, briefly press  to backspace (and delete) the character.
2. To erase the entire sentence, press and hold .
3. To back up one menu level, briefly press .
4. To return to standby mode, repeatedly press  until you return to standby mode.

End Key

1. In standby mode, press and hold the **End key** () to turn your device off.
2. Briefly press  once to disconnect a call.
3. Press  to return to standby mode from any menu, or to cancel the last input.
4. With your device turned off, press  to turn your device on.

Send Touch Key

The **Send touch key** () is used to answer calls, dial calls, and to recall the last number(s) dialed, received, or missed.

1. Press  once to answer calls.
2. Enter a number and briefly press  to make a call.
3. Briefly press  in standby mode to display a list of recent calls to and from your device.
4. Press  twice in standby mode to call the most recent number.
5. Press  to pick up a waiting call. Press  again to switch back to the other call.

Navigation Key

Use the directional keys on the navigation key () to browse menus, sub-menus, and lists. Each key also acts as a shortcut to launch applications.

Camera Key

In standby mode, momentarily press the Camera key () — located on the right side of your device — to display the SNAP menu.

In standby mode, press and hold the Camera key () to activate the camera built into your device.

With the camera or camcorder active, press the  key to select from among the camera and camcorder modes.

Play/Pause key

When playing music, press the Play/Pause key () — located on the left side of your device — to begin or to pause the music.

Understanding the Display Screen

1. The top line of your device's main display contains icons that indicate network status, battery power, signal strength, connection type, and more.
2. The center portion of the main display shows information such as call progress information, messages, and photos.
3. The bottom line of the main display shows current soft touch key functions. The sample screen shows that pressing the **Left** soft touch key () will show the main menu. Pressing the **Right** soft touch key () will show the Contacts List.



Display Screen Icons



Signal strength — Always appears when your device is on and indicates the current signal strength. More lines indicate higher signal strength.



In-Use indicator — Indicates a call in progress. When dialing a number, this icon flashes until the call connects.



No service indicator — Indicates your device cannot find a signal because you're outside a service area. You cannot make or receive calls. Wait for a signal or move into an open area to try and find a signal. The no service indicator always appears when you turn on your device and disappears once service is located.



Roam — Roaming occurs when you use your device outside your home area. While roaming, a wireless provider other than yours handles your call, so the service rate for the call may be higher than those made within your home area. Please refer to information from your Wireless Provider on roaming rates.



New Message — Indicates that you've received a new text, page, or web alert message. You're also notified by a visual and audible alert.



Text Message — Indicates that you've received a new text message.



Voicemail — Indicates that you've received a new voice message.



Battery strength — Indicates the battery charge level. The more black bars, the greater the charge. When the battery becomes very low, a flashing empty battery icon displays and the device sounds an audible alert, which indicates your device is about to shut down.



Alarm clock — The alarm clock is set.



Ring Only — **Ring Vibration** has been set to **Ring Only** using the **Settings** menu. When you receive a call, the device rings.



Vibrate — **Ring Vibration** has been set to **Vibrate** using the **Settings** menu. When you receive a call, the device vibrates but does not ring.



Light Only — **Ring Vibration** has been set to **Light Only** using the **Settings** menu.



Vibrate then Ring — **Ring Vibration** has been set to **Vibrate then Ring** using the **Settings** menu. When you receive a call, the device vibrates then it rings.



Ring and Vibrate — **Ring Vibration** has been set to **Ring and Vibrate** using the **Settings** menu. When you receive a call, the device vibrates and rings.



Silent mode — Indicates your device is in Silent mode. Ringer is silenced for all alerts, incoming calls, and incoming messages. The device alerts you of incoming calls, alerts, and messages by vibration and a message in the screen.

Dialogue Boxes

Dialogue boxes prompt for action, inform you of status, or warn of situations such as low memory. Dialogue boxes and their definitions are outlined below.

- **Choice**
 - Example: "Save message?"
- **Reconfirm**
 - Example: "Erase all messages?"
- **Performing**
 - Example: "SENDING..." "Connecting..."
- **Completed**
 - Example: "Message saved in drafts"
- **Information**
 - Example: "New Message"
- **Error**
 - Example: "No External Memory"
- **Warning**
 - Example: "Battery Low," "Memory Full!"

Backlights

Backlights illuminate the internal and external displays and the keypad. When you press any key or open the device, the backlights come on. They go off when no keys are pressed within a period of time set in the **Backlight** menu.

Note: During a phone call, the display backlights dim and turn off after ten seconds to conserve battery power, regardless of the Backlight setting.

See "Backlight" on page 79 for more information.

Your Device's Modes

Call Answer Mode

You can select how you wish to answer a call.

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CUSTOMIZE**),  (for **Settings**),  (for **Call**), and  for **Answer Call On**. The following call answer options appear in the display:
 - **Slide Open** — Sliding the device open or pressing  answers a call.
 - **Open + Anykey** — Sliding the device open or pressing any key except the  key or  key answers a call.
 - **Send Key Only** — Only pressing  answers a call.
2. Use the navigation keys to highlight an option.
3. Press the  key to select the method for answering calls.

Input mode

Input mode determines how you enter text, numbers and symbols. While at any text entry screen, repeatedly press the right soft touch key () to toggle between the text input modes: **T9 Word**, **123**, **Symbol**, **KOR**, and **Abc**. (See “Section 5: Entering Text” on page 48 for more information.)

Lock Mode

When the device is in Lock Mode, restrictions are placed on device use. You can receive calls and messages, but cannot place outgoing calls (except for emergency numbers) until you unlock the device. Lock Mode also restricts access to menus and the volume key. Unlock your device by entering the lock code when prompted. (See “Phone Lock” on page 85 for more information.)

Standby Mode

Standby mode is the state of the device once it has found service and is idle. The device goes into standby mode:

- After you power the device on.
- When you press  after a call or from within a menu.

In standby mode, you will see the time, day, and date as well as all device status icons.

1. While in standby mode, enter a phone number, and press  to place a call.
2. Press  to return to standby mode.

Receive Messages in Standby Mode

You can receive messages in standby mode. When a new message arrives, an alert tone sounds and the new message appears in the display.

Press the **Menu** (left) soft touch key () and the following options appear in the display:

- **Call** — Lets you call the sender of the message.
- **Reply** — Lets you compose and send a reply message to the sender of the original message.
- **Forward** — Sends a copy of the message to another recipient.
- **Delete** — Erases this message from your Inbox.
- **Save Contact Number** — Saves the message sender's number to your Contacts List.
- **Save Message** — Saves the message to one of your internal or external folders.
- **Message List** — Shows the Inbox screen in the display.

Use the navigation keys to highlight the desired option and press the  key.

Press , , or  to clear the message from the display. The message is saved in the Inbox.

Talk Mode

You can place and receive calls only when your device is on. While in a call your device is in talk mode. Press the **Menu** (left) soft touch key () to display a list of menu options. See “The In-Use Options” on page 38 for more information.

Enter/Exit Silent Mode

Silence the tones your keypad makes when you press a key.

- In standby mode, press and hold . “**Silent Mode On**” briefly appears in the display and your device returns to standby mode.
- While in Manner mode and standby mode, press and hold . “**Silent Mode Off**” briefly appears in the display and your device returns to standby mode.

Vibrate Mode

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CUSTOMIZE**),  (for **Settings**),  (for **Sound**), and  for **Ring Vibration**. The following options appear in the display:
 - **Ring Only** — An incoming call plays the ringtone selected with the **Ring** options.
 - **Vibrate** — An incoming call causes the device to vibrate.
 - **Light Only** — An incoming call causes a message to appear in the display.
 - **Vibrate then Ring** — An incoming call causes the device to vibrate then play a ringtone.
 - **Ring and Vibrate** — An incoming call causes the device to play a ringtone and vibrate.
2. Use the Up and Down navigation keys to highlight **Vibration**, then press the  key.

Note: The Vibrate icon () appears in the display when the device is in **Vibration** mode.

Adjust the Ringer

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CUSTOMIZE**),  (for **Settings**),  (for **Sound**), and  for **Volume**. The Volume screen appears in the display.
2. Use the Up and Down navigation keys to highlight **Ring Volume**.
3. Use the Left and Right navigation keys to adjust the Ring Volume to one of its five settings. The current ringtone sounds at the selected level.
4. When you are satisfied with the setting, press the  key. Your device returns to the **Sound** menu.

Camera Mode

Camera and Video Camera modes let you activate your device's camera to take pictures or videos. In Camera/Video Camera mode, you can also adjust the resolution and appearance of your pictures/videos. See "Section 9: SNAP" on page 94 for more information.

- **Entering Camera Mode** — In standby mode, press and hold the **Camera** key () on the lower right side of your device.
- **Entering Video Camera Mode** — In standby mode, press the **Camera** key on the lower right side of your device. The **SNAP** menu appears in the display. Select **Video Camera**.
- **Exiting Camera Mode** — Press the  key or the  key.

Section 3: Call Functions

Topics Covered

- Making a Call — Number Entry Dialing
 - Making a Call — Speed Dialing
 - Answering a Call
 - Ignoring a Call
 - Adjusting the Call Volume
 - Call Log
 - Roaming
-

This section explains how to make or answer a call. This section also includes the features and functionality associated with making or answering a call.

Making a Call — Number Entry Dialing

1. With the device on, enter the number you wish to call using the keypad.
2. Press the  key to place the call.

Dialing Emergency Numbers

To place an emergency call:

1. With the device on, enter 911 using the keypad.
2. Press the  key to place the call.

IMPORTANT! Emergency number 911 is hard-coded into your device. You can dial this number almost any time, even when the device is locked or restricted.

If you call 911 an audible tone is heard and an Emergency prompt appears in the display for the duration of the call.

IMPORTANT! Because of various transmission methods, network parameters, and user settings necessary to complete a call from your wireless device, a connection cannot always be guaranteed. Therefore, emergency calling may not be available on all wireless networks at all times.

IMPORTANT! DO NOT depend on this device as a primary method of calling 911 or for any other essential or emergency communications.

Dialing International Numbers

Call another country from the U.S.

1. In standby mode, enter the three-digit exit code (011) for the United States.
2. Enter the country code for the country that you are calling.
3. Enter the number that you wish to call, then press the  key.

Note: Puerto Rico and Canada are on the North American dialing plan. When making calls to Puerto Rico and Canada it is similar to making calls within the United States, no unique country codes are necessary.

Placing calls when outside the U.S. — Mexico

- **Calling locally within Mexico:** Dial the seven or eight-digit number.
- **Calling long distance within Mexico:** Dial 01, plus the ten-digit number (includes area code).
- **Calling to the U.S. or Canada from Mexico:** Dial 001, plus the ten-digit number (includes area code).
- **Calling Voicemail from Mexico:** Dial 001, plus your ten-digit wireless number. Once you hear the recorded prompt, press  and enter your passcode.

Manual Pause Calling

When you call automated systems (like banking services), you are often required to enter a password or account number. Instead of manually entering the numbers each time, you can store the numbers in your Contacts along with special characters called pauses.

- **Hard Pause (P)** — A hard pause stops the calling sequence until you press the  key.
- **2 Sec Pause(T)** — A two-second pause stops the calling sequence for two seconds and then automatically sends the remaining digits.

To manually call a number with pause(s) without storing it to your Contacts:

1. Enter the number you wish to call.
2. Press the **Menu** (left) soft touch key (). A pop-up menu containing the following options appears in the display:
 - **Hard Pause(P)** — a hard pause (awaits input from you ending in your pressing the  key).
 - **2 Sec Pause(T)** — a two-second pause.
3. Use the navigation keys to highlight the desired pause option.
4. Press  to enter the highlighted pause into your number sequence.
5. Press  to call the number.

Making a Call — Speed Dialing

You can store phone numbers and contact names in your device's Contacts list. Speed Dialing lets you quickly and easily dial any contact in your Contacts list by using that contact's location number in the list. You can assign and change location (speed dial) numbers for your contacts. (See "Speed Dial Numbers" on page 62 for more information.)

One-Touch Dialing

Memory locations 002 through 009 are special One-Touch dialing locations. You can call the phone numbers stored in your device's Contacts list from 002 through 009 by pressing and holding a single key.

Example: For location number 003, press and hold the  key until the name and number appear in the display and the number is dialed.

Two-Touch Dialing

Memory locations 010 through 099 are special Two-Touch dialing locations.

Example: For location number 013, briefly press the  key, then press and hold the  key until the name and number appear in the display and the number is dialed.

Three-Touch Dialing

Memory locations 100 through 999 are special Three-Touch dialing locations.

Example: For location number 113, briefly press the  key, briefly press the  key again, then press and hold the  key until the name and number appear in the display and the number is dialed.

Pause Dialing From a Contacts Entry

- If you speed dial a contact that contains (two-second) T pause(s) simply wait for the pauses to pass and the dialing to complete.
- If you speed dial a contact that contains (hard) P pause(s), wait for the appropriate prompt(s) from the number you are calling (credit card number, bank account number, and so on) and enter the appropriate response(s).

Answering a Call

Your device notifies you of a call in the following ways:

- A ring tone sounds and/or your device vibrates [Your device provides five ring volume settings — 1 – 5 — and five Ring Vibration settings — Ring Only, Vibrate, Light Only, Ring then Vibrate, Ring and Vibrate.]
- A phone number (unless blocked by the caller) and a name appear in the display (If the caller's number and name are stored in your Contacts list).
- If the caller can't be identified, **Call from unavailable#**, **Call from restricted number**, or no number appears in the display.
- Your device continues to notify you of the call until one of the following events occurs:
 - You answer the call.
 - You ignore the call.
 - The calling party ends the call.
 - The call is sent to voicemail.

Answering an Incoming Call

- Press the  key. The ring tone and/or vibration stop and the caller's voice can be heard in the earpiece.

Tip: You can set your device to answer calls when you Slide Open the handset, Open + Any Key, or when you press the  key. (See "Call Settings" on page 80 for more information.)

Ignoring a Call

When you ignore an incoming call, the call is immediately forwarded to your voice mail.

- During an incoming call, press and hold the **Silence** (left) soft touch key () to silence the ringer.

Press and hold the **Silence** (left) soft touch key () a second time to ignore the call and immediately forward the call to your voice mail.

Press and hold the **Ignore** (right) soft touch key () to ignore the call.

Adjusting the Call Volume

In incall mode, repeatedly press the volume key () down until the Call Volume Level desired appears in the display. The volume key is on the left side of your device.

Call Log

The Call Log retains information about Missed, Outgoing, Ignored, and Incoming calls. You can also view call duration times for your last call and the time totals for all calls.

Review the Calls Log — Menu Method

1. In standby mode, press the **MENU** (left) soft touch key () then press  (for **CONTACT**) and  (for **Call Log**). The following Call Logs appear in the display:
 - Press  for **All Calls**.
 - Press  for **Missed Calls**.
 - Press  for **Outgoing Calls**.
 - Press  for **Ignored Calls**.
 - Press  for **Incoming Calls**.
 - Press  for **Call Times**.
2. Press the number key associated with the Calls log that you wish to review, or
Use the Left and Right navigation keys to scroll through the Call Logs that you wish to review.

Note: In cases where there is a Contacts match for a Calls log entry, the name associated with the number appears in the display instead of the number.

Review the Calls Log — Key Method

1. In standby mode, press the  key. The **All Hist.** log appears in the display.
2. Use the Left and Right navigation keys to scroll through the following Calls histories that you wish to review:
 - **All Hist.** — Lists all calls made, received, missed, and ignored and lists voice messages.
 - **Missed Calls** — Lists all missed calls.
 - **Ignored Calls** — Lists all ignored calls.
 - **Call Hist.** — Lists all calls made and received.
 - **Message Hist.** — Lists voice messages.

Note: In cases where there is a Contact match for a Calls history entry, the name associated with the number appears in the display instead of the number.

All Calls History

You can review all of the up to 400 calls history entries (missed, ignored, outgoing, and incoming calls) for the time and date of a call, as well as other information.

1. In standby mode, press the **MENU** (left) soft touch key () then press  (for **CONTACT**),  (for **Call Log**), and  for **All Calls**. The **All calls** list appears in the display.

Do one of the following:

Review a Call

2. Use the navigation keys to highlight a call.
3. Press  to view further information about the call.
4. Press  to call the originator or recipient of this call.
5. Press the **Menu** (left) soft touch key (). A pop-up menu containing the following options appears in the display:
 - **Send Message** — Compose and send a text message to the dialed or originating number.

Note: See "Creating and Sending New Messages" on page 135 for more information.

- **Add to Blocked** — Add the dialed or originating number for this call to the Blocked List. (See "Call Block" on page 81 for more information.)
 - **Save Contact Number** — Add the dialed or originating number to the Contacts List.
 - **Delete** — Erase this call from the Call Log.
6. Use the navigation keys to highlight an option.
 7. Press the  key to perform the highlighted option's function.

Delete a Call

8. Use the navigation keys to highlight a call.

9. Press the **Menu** (left) soft touch key (). A pop-up menu containing the following options appears in the display:

- **Send Message** — Compose and send a text message to the dialed or originating number.

Note: See “Creating and Sending New Messages” on page 135 for more information.

- **Add to Blocked** — Add the dialed or originating number for this call to the Blocked List. (See “Call Block” on page 81 for more information.)
- **Save Contact Number** — Add the dialed or originating number to the Contacts List.
- **Delete** — Erase the highlighted call or all selected (Checked) calls from your Calls log.
- **Delete All** — Erase all calls from this calls log.

10. Use the navigation keys to highlight **Delete**.

11. Press the  key to delete the highlighted call.

Delete Multiple Calls

12. Use the navigation keys to highlight a call you wish to delete.

13. Press the **Check** (right) soft touch key. A check mark appears to the left of the highlighted call.

14. Repeat Steps 11 and 12 to select other calls you wish to delete.

15. Press the **Menu** (left) soft touch key (). A pop-up menu containing the following options appears in the display:

- **Send Message** — Compose and send a text message to the dialed or originating number.

Note: See “Creating and Sending New Messages” on page 135 for more information.

- **Add to Blocked** — Add the dialed or originating number for this call to the Blocked List. (See “Call Block” on page 81 for more information.)
- **Delete Selection** — Erase the selected (Checked) call(s) from your Calls log. [Select a call by highlighting it and then pressing the **Check** (right) soft touch key ().]
- **Deselect** — Uncheck all selected (Checked) calls in your Calls log.
- **Select All** — Check all calls in this calls log.

16. Use the navigation keys to highlight **Delete Selection**.

17. Press the  key to delete the selected (checked) calls.

Delete All Calls

18. Press the **Menu** (left) soft touch key (). A pop-up menu containing the following options appears in the display:

- **Send Message**
- **Add to Blocked**
- **Save Contact Number**
- **Delete**
- **Delete All**

19. Use the navigation keys to highlight **Delete All**.

20. Press the  key to delete all calls from this calls log.

Missed Calls

Your device retains information about the last 100 missed calls (calls that were never picked up) and stores them in the Missed Calls log. Using the Missed Calls log you can:

- Review missed calls for the times and dates of the calls, as well as other information.
- Return missed calls simply and easily.

Note: You can block further calls from a missed call number by adding it to your **Blocked List** by selecting the **Add to Blocked**. (See "All Calls History" on page 31 and "Call Block" on page 81 for more information.)

1. In standby mode, press the **MENU** (left) soft touch key () then press  (for **CONTACT**),  (for **Call Log**), and  for **Missed Calls**. The **Missed** list appears in the display.
2. Use the navigation keys to highlight a call, then press  to view further information about the call.

Note: For information on managing your Missed Calls, see "All Calls History" on page 31.

Outgoing Calls

Your device retains information about the last 100 outgoing calls and stores them in the Outgoing calls log. Using the Missed Calls log you can:

- Review outgoing calls for the times and dates of the calls, as well as other information.
- Recall outgoing calls numbers simply and easily.

Note: To quickly view your most recent calls, briefly press  in standby mode. Up to 400 of your most recent outgoing, incoming, and missed calls appear in the display.

1. In standby mode, press the **MENU** (left) soft touch key () then press  (for **CONTACT**),  (for **Call Log**), and  for **Outgoing Calls**. The **Dialed** list appears in the display.
2. Use the navigation keys to highlight a call, then press  to view further information about the call.
3. Press  to call the originator or recipient of this call.

Note: For information on managing your Outgoing Calls, see "All Calls History" on page 31.

Ignored Calls

Your device retains information about the last 100 Incoming calls from numbers that were automatically or manually ignored and stores them in the Ignored calls log. Using the Ignored calls log you can:

- Review ignored calls for the times and dates of the calls, as well as other information.
- Recall ignored calls numbers simply and easily.

Note: You can block further calls from an ignored call number by adding it to your **Blocked List** by selecting the **Add to Blocked** option. (See "All Calls History" on page 31 and "Call Block" on page 81 for more information.)

1. In standby mode, press the **MENU** (left) soft touch key () then press  (for **CONTACT**),  (for **Call Log**), and  for **Ignored Calls**. The **Ignored Calls** list appears in the display.
2. Use the navigation keys to highlight a call, then press  to view further information about the call.
3. Press  to call the originator or recipient of this call.

Note: For information on managing your Ignored Calls, see "All Calls History" on page 31.

Incoming Calls

Your device retains information about the last 100 Incoming calls and stores them in the Incoming call log. Using the Incoming Calls log you can:

- Review incoming calls for the times and dates of the calls, as well as other information.
- Recall incoming calls numbers simply and easily.

Note: You can block further calls from an incoming call number by adding it to your **Blocked List** by selecting the **Add to Blocked** option. (See "All Calls History" on page 31 and "Call Block" on page 81 for more information.)

1. In standby mode, press the **MENU** (left) soft touch key () then press  (for **CONTACT**),  (for **Call Log**), and  for **Incoming Calls**. The **Received** list appears in the display.
2. Use the navigation keys to highlight a call, then press  to view further information about the call.
3. Press  to call the originator or recipient of this call.

Note: For information on managing your Incoming Calls, see "All Calls History" on page 31.

Call Times

View the duration of your last call, total calls, and calls made during the life cycle of your device using the Call Times feature.

Note: Call Times is not for billing purposes.

1. In standby mode, press the **MENU** (left) soft touch key () then press  (for **CONTACT**),  (for **Call Log**), and  for **Call Times**. The **View Call Time** screen appears in the display showing the following call times:
 - **Total Call Time** — View the total duration of all calls since the last erasure (deletion).
 - **Last Call Time** — View the duration of your last call.
 - **Outgoing Call Time** — View the total duration of all outgoing calls made on your device since the last erasure (deletion).
2. Use the navigation keys to highlight a timer for erasure (deletion) of the calls duration value.
3. Press the **Menu** (left) soft touch key (). A pop-up menu containing the following options appears in the display:
 - **Weekly View** — Pops up a bar chart showing daily Total Call Times for the previous seven days.

Note: Deleting the **Total Call Time** timer also clears the **Weekly View** chart.

- **Delete** — Erases the highlighted timer to zero.
 - **Delete All** — Erases all of the timers to zero.
4. Press the  key or the  key if you wish to exit the screen.

Roaming

What is Roaming?

Roaming lets you use your A303 device when you travel outside of your Wireless Provider's coverage area. The Roaming icon () appears in the top line of the display when Roaming is active, and extra charges may apply when making or receiving calls.

Note: Some features may be unavailable while roaming. Roaming also consumes additional power from the battery requiring more frequent recharging. Contact your Wireless Provider for more information about Roaming.

Section 4: Menu Navigation

Topics Covered

- Menu Navigation
 - Menu Outline
-

This section explains the menu navigation for your device. It also includes an outline of the menus available with your device.

Menu Navigation

Access menus using the navigation keys, the two soft touch keys (⋮ ⋮), or a shortcut.

1. In Standby Mode, press the **Menu** (left) soft touch key (⋮). The first of several menus appears in the display.
2. Use the navigation keys to browse device menus.
3. Press the (🔥) key to access a menu or sub-menu highlighted in the display.



Return to the Previous Menu

Press the (←) key to return to the previous menu.

Navigate Using Shortcuts

 
You can also access menus and sub menus using menu numbers. This method is often called a “shortcut.” To shortcut to a menu or sub menu, press the **Menu** (left) soft touch key (⋮), then enter the menu and/or sub menu number(s) for the feature in question.

1. In Standby Mode, press the **Menu** (left) soft touch key (⋮). The main menu appears in the display.
2. Press the number of the menu, sub menu, and so on to arrive at the desired feature.

Note: See “Menu Outline” on page 39 for more information.

Navigation Key Shortcuts

In Standby Mode, press a navigation key (as illustrated below) to launch its corresponding function.

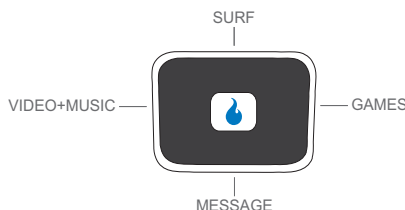

The In-Use Options

Access numerous menus and features even while in a call.

Press Menu

To access the basic In Use menu options, do the following:

Note: If the call is disconnected while accessing the In-Use Option, the In-Use Option disappears from the display and the device eventually returns to standby mode.

1. While in a call, press the Play/Pause key () to unlock the Touchpad.
2. Press the **Menu** (left) soft touch key (). The following menu items appear in the display:
 - **Mic Louder / Softer** — Increases/decreases the volume of your voice sent to the other caller.
 - **Speaker** — Enables/disables Speakerphone Mode.
 - **Memo** — Write a memo or review or change an existing memo.
 - **Contact** — The **CONTACT** menu appears in the display.
 - **Message** — The **MESSAGE** menu appears in the display.
 - **Mute Keypad** — Mutes/unmutes the keypad tone(s). Lets you use device features during a call without keypad tones hindering the conversation.
 - **Send My Number** — Send your phone number to the caller/called. Useful in dealing with automated systems.
 - **Send DTMF** — Lets you send your phone number or lets you enter numbers (such as PINs or passwords) and send them as keypad tones.
3. Do one of the following:
 - Use the navigation key to highlight a menu or feature. Press the  key to open the highlighted menu or to activate the highlighted feature.
 - Press the  key to exit the menu.

Enter Number and Press Menu

You can enter a number during a call and add the number to your Contacts list or send a message to the number. To access the entered number In Use menu options, do the following:

Note: If the call is disconnected while accessing the In-Use Option, the In-Use Option disappears from the display and the device eventually returns to standby mode.

1. While in a call, press the Play/Pause key () to unlock the Touchpad.
2. Press the **Menu** (left) soft touch key (). The following menu items appear in the display:
 - **Mic Louder** — Increases the microphone volume level.
 - **Speaker** — Enables/disables Speakerphone Mode.
 - **Memo** — Write a memo or review or change an existing memo.
 - **Contact** — The **CONTACT** menu appears in the display.
 - **Message** — The **Send Message** menu appears in the display.
 - **Mute Keypad** — Mutes/unmutes the keypad tone(s). Lets you use device features during a call without keypad tones hindering the conversation.
3. Do one of the following:
 - Use the navigation key to highlight a menu or feature. Press the  key to open the highlighted menu or to activate the highlighted feature.
 - Press the  key to exit the menu.

Menu Outline

Use the menu shortcuts on the following pages to quickly access sub menus. Press the **Menu** (left) soft touch key () to access the Main Menu, then use the navigation keys to highlight a sub-menu.

1 CUSTOMIZE

- 1.1 Rings
 - 1.1.1 Rings
 - 1.1.2 Freebies
- 1.2 Download Rings>
- 1.3 Home Screens
 - 1.3.1 Screens
 - 1.3.2 Video Screens
 - 1.3.3 Album

- 1.3.4 Freebies
 - 1.3.5 Incomp Downloads
- 1.4 Call Screens
 - 1.4.1 Screens
 - 1.4.2 Album
 - 1.4.3 Freebies
- 1.5 Download Screens>
- 1.6 H.O.T. Screens
- 1.7 Download H.O.T.>
- 1.8 Settings
 - 1.8.1 Sound
 - 1.8.1.1 Ring Vibration
 - 1.8.1.2 Volume
 - 1.8.1.3 Sound Effects
 - 1.8.1.4 Hourly Alert
 - 1.8.1.5 Sleep Mode
 - 1.8.2 Display
 - 1.8.2.1 Overlay
 - 1.8.2.2 Banner
 - 1.8.2.3 Clock
 - 1.8.2.4 Missed Events
 - 1.8.2.5 Font
 - 1.8.2.5.1 Font Style
 - 1.8.2.5.2 Font Size
 - 1.8.2.6 Dial Style
 - 1.8.2.6.1 Default
 - 1.8.2.6.2 Custom
 - 1.8.2.7 Backlight
 - 1.8.2.7.1 Display Duration
 - 1.8.2.7.2 Display Brightness
 - 1.8.2.7.3 Keypad Duration
 - 1.8.3 Touch Sensitivity

1.8.4 Call

- 1.8.4.1 Answer Call On
- 1.8.4.2 Call Forwarding
 - 1.8.4.2.1 Set Number
 - 1.8.4.2.2 Cancel
- 1.8.4.3 Call Block
 - 1.8.4.3.1 Settings
 - 1.8.4.3.2 Blocked List
 - 1.8.4.3.3 Blocked Group
- 1.8.4.4 Tone Length

1.8.5 Network

1.8.6 Device

- 1.8.6.1 Memory Info
 - 1.8.6.1.1 Download Memory
 - 1.8.6.1.2 System Memory
 - 1.8.6.1.3 USB Disk
- 1.8.6.2 S/W Info
- 1.8.6.3 My Info
- 1.8.6.4 Reset
 - 1.8.6.4.1 Delete Contacts
 - 1.8.6.4.2 Reset Defaults

1.8.7 Security

- 1.8.7.1 Phone Lock
- 1.8.7.2 Function Lock
- 1.8.7.3 Set Password

1.8.8 Bluetooth

- 1.8.8.1 Bluetooth Mode
- 1.8.8.2 Connect Device
- 1.8.8.3 Trusted Devices
- 1.8.8.4 Send + Receive
 - 1.8.8.4.1 Receive Mode
 - 1.8.8.4.2 Send My Info
 - 1.8.8.4.3 Send Contact
 - 1.8.8.4.4 Send Photo

- 1.8.8.5 Disconnect Device
- 1.8.8.6 Settings
 - 1.8.8.6.1 My Information
 - 1.8.8.6.2 Search Type
 - 1.8.8.6.3 Visibility
- 1.8.9 Language
- 1.8.0 Airplane Mode

2 SURF

- 2.1 Access Helio Portal

3 SNAP

- 3.1 Camera
- 3.2 Video Camera
- 3.3 Album
- 3.4 Helio Album
- 3.5 Photo Studio
 - 3.5.1 Filters
 - 3.5.2 Effects
 - 3.5.3 Apply Stickers
 - 3.5.4 Create Stickers
 - 3.5.5 Movie Frame Grab
 - 3.5.6 Fade Between
 - 3.5.7 Adjust
 - 3.5.8 Resize
 - 3.5.9 Rotate+Flip
 - 3.5.0 Overlay
- 3.6 Settings
 - 3.6.1 Album Lock
 - 3.6.2 Shutter Sound

- 3.6.2.1 Camera
 - 3.6.2.2 Video Camera
- 3.6.3 Block Calls
- 3.6.4 Auto Save
- 3.7 Print Photos
- 3.8 Memory Info
 - 3.8.1 Download Memory
 - 3.8.2 System Memory
 - 3.8.3 USB Disk

4 VIDEO + MUSIC

- 4.1 Video
 - 4.1.1 Recent
 - 4.1.2 Playlists
 - 4.1.3 Videos
- 4.2 Download Video>
- 4.3 Music
 - 4.3.1 Recent
 - 4.3.2 Playlists
 - 4.3.3 Artist
 - 4.3.4 Albums
 - 4.3.5 Songs
 - 4.3.6 Genres
- 4.4 Download Music>
- 4.5 Memory Info
 - 4.5.1 Download Memory
 - 4.5.2 System Memory
 - 4.5.3 USB Disk
- 4.6 Settings
 - 4.6.1 Backlight Duration

- 4.6.2 Play Time
- 4.6.3 Play Option

5 CONTACT

- 5.1 New Contact
- 5.2 Contacts List
- 5.3 Groups
- 5.4 Call Log
 - 5.4.1 All Calls
 - 5.4.2 Missed Calls
 - 5.4.3 Outgoing Calls
 - 5.4.4 Ignored Calls
 - 5.4.5 Incoming Calls
 - 5.4.6 Call Times
- 5.5 My Info
- 5.6 Service Numbers
 - 5.6.1 Emergency (911)
 - 5.6.2 Information (411)
 - 5.6.3 Customer Care (611)
- 5.7 Sync Contacts
 - 5.7.1 Sync Contacts
 - 5.7.2 Preview Sync
 - 5.7.3 Username/Password
 - 5.7.4 Help

6 GAMES

- 6.1 Download Game

7 PLAN

- 7.1 Calendar

- 7.2 To-do
- 7.3 Wake-up Call
- 7.4 Alarm
- 7.5 Calculator
- 7.6 World Time
- 7.7 Unit Converter
- 7.8 Notepad
- 7.9 Stopwatch
- 7.0 User Memory
 - 7.0.1 USB Disk Mode
 - 7.0.2 File Manager
 - 7.0.3 Memory Info
- 7.* Voice Memo
 - 7.*.1 Record Voice Memo
 - 7.*.2 Review Voice Memo

8 MESSAGE

- 8.1 Write Text Message
- 8.2 Write Pic Message
- 8.3 Text Messages
 - 8.3.1 Inbox
 - 8.3.2 Sent
 - 8.3.3 Drafts
 - 8.3.4 Timed
 - 8.3.5 Saved
 - 8.3.6 Junk
 - 8.3.7 Settings
 - 8.3.7.1 Alerts
 - 8.3.7.2 Quick Text
 - 8.3.7.3 Junk Filter

- 8.3.7.3.1 Filtered Numbers
 - 8.3.7.3.2 Filtered Text
 - 8.3.7.3.3 Junk Filter
 - 8.3.7.4 Select Stationery
- 8.4 Pic. Messages
 - 8.4.1 Inbox
 - 8.4.2 Outbox
 - 8.4.3 Drafts
 - 8.4.4 Media Box
 - 8.4.5 Settings
 - 8.4.5.1 Background
 - 8.4.5.2 Font Color
 - 8.4.5.3 Msg Rcv Alert
 - 8.4.5.4 Junk Filter
 - 8.4.5.4.1 Block Number
 - 8.4.5.4.2 Junk Setting
 - 8.4.5.5 Photo Size
 - 8.4.5.6 Msg Auto Save
- 8.5 Instant Messages
- 8.6 E-mail
- 8.7 Voicemail
 - 8.7.1 Call Voicemail
 - 8.7.2 Clear Envelope
- 8.8 Message Log
 - 8.8.1 Recent Messages
 - 8.8.2 All Messages
 - 8.8.3 This Month

9 APPS

- 9.1 Download App
- 9.2 Download H.O.T.

- 9.3 Google Maps
- 9.4 Buddy Beacon

Section 5: Entering Text

Topics Covered

- Text Entry Modes
 - Changing the Text Entry Mode
 - Entering Text in Alpha (Abc) Mode
 - Entering Text in T9 Word Mode
 - Entering Upper and Lower Case Letters
 - Entering Korean
 - Entering Numbers
 - Entering Symbols
-

This section outlines how to select the desired text input mode when entering characters into your device. This section also describes how to use the T9 predictive text entry system to reduce the amount of key strokes associated with entering text.

Text Entry Modes

You can compose text messages using alphabetical characters, symbols, and numbers. Each method of character entry (symbol, number, and so on) is called a text entry mode. There are five text entry modes, as indicated:

- **Alpha** — Alphabetical text entry mode. Options are:
 - **ABC** — All upper case
 - **Abc** — Initial capital
 - **abc** — All lower case
- **Korean** — Korean text entry mode. Allows you to enter Korean characters.
- **Symbol** — Symbol entry mode. Enter symbols into your message or memo by pressing the corresponding number that appears above it in the display.
- **123** — Number entry. Enter numbers by pressing the corresponding key on the keypad.
- **T9Word** — Predictive text mode. Press each key only once to enter the letter of the word that you're spelling.

Your current mode of text entry [**Abc**, **KOR**, **Symbol**, **T9Word**, or **123**] is indicated in the lower right part of the display when composing a text message.

Changing the Text Entry Mode

1. While composing a text message, press the Right soft touch key () to toggle the text input mode through the following options:
 - **T9Word**
 - **123**
 - **Symbol**
 - **KOR**
 - **Abc**

Note: Each of the text entry modes are explained in greater detail in "Section 13: MESSAGE" on page 134.

Entering Text in Alpha (Abc) Mode

1. Enter characters while in **Alpha** (Abc) mode by pressing the key with the desired characters (such as, pressing  once for "g").
2. Press the key repeatedly until the desired character appears in the display (such as, pressing  two times for "h").
3. Pause briefly and the displayed character is accepted and inserted into your message.
4. Press the  key to enter a space.

Entering Text in T9 Word Mode

T9 Word recognizes commonly used words for a sequence of keypresses and inserts the word into your message. Using T9 mode is much faster than the more traditional method Alpha mode, since T9 *requires only one key press per letter* of the word that you are spelling.

Note: See "Changing the Text Entry Mode" on page 49 for instructions on changing text entry modes.

1. While in **T9 Word** mode, press each key that corresponds to a desired letter, in sequence, one time.

For example, if you press the key sequence   , and the word "bad" appears on the screen.

2. When you have completed pressing all the keys for the desired word, review the word displayed in your text.
3. If the word is not the one you meant to enter, press the  key to show the next word that matches the sequence of keys that you pressed.

For example, when you press the key sequence   , the word "and" appears on the screen. Suppose the word you want is "cod". Just press the  key until "cod" appears in the display.

Note: If more than one word shares the same numeric sequence (such as, "263" for both "and" and "cod"), T9 Word provides the most commonly used word (such as, "and" for "263"). Press the  key to display other words, if any are available.

For practice, enter the word 'Samsung' into your message by pressing each of the following keys only once:



T9 Word recognizes that the most commonly used word for the sequence of keys you just pressed is "Samsung."

Tip: To enter words not likely to be in the T9 Word dictionary, such as uncommon abbreviations or slang, you might want to change the text entry mode from T9 Word to **ABC** or **ABC**.

Entering Upper and Lower Case Letters

In **Abc** and **T9 Word** modes, you can select to enter only upper case letters (**ABC/T9 WORD**), only lower case letters (**abc/T9 word**), or a mix of the two (**Abc/T9 Word**).

1. While in **T9 Word** or **Abc** mode, repeatedly press the  key to change the capitalization setting.

The left soft touch key label changes to indicate the current capitalization setting.

For example, if the left soft touch key label is **ABC**, and you want to enter the word “ball”, press the  key until the left soft touch key label changes to **abc**, then enter the word “ball”.

Tip: To enter a capital letter within a word, such as “SimTam”, change the capitalization setting to **Abc** at the beginning of the word and before entering the “T”. The capitalization setting will automatically change to **abc** after you enter each upper case letter.

Entering Korean

Enter Korean characters into a text message or memo while in Korean mode (KOR).

Note: See “Changing the Text Entry Mode” on page 49 for instructions on changing text entry modes.

- While in **KOR** mode, press the key containing the corresponding Korean character that you wish to insert into your message.

Keypad keys produce the following Korean characters. Some keys produce more than one character, depending upon the number of keypresses:

Key	Number of Keypresses		
	1	2	3
	1		
	.	..	
	—		
	ㄱ	ㅋ	ㆁ
	ㄴ	ㄷ	
	ㄷ	ㅌ	ㅍ

Key	Number of Keypresses		
	1	2	3
			
			
			
			
			
			

Entering Numbers

Enter numbers into a text message while in number mode (123).

Note: See "Changing the Text Entry Mode" on page 49 for instructions on changing text entry modes.

- While in **123** mode, press the key containing the corresponding number that you wish to insert into your message.

Entering Symbols

Symbol mode enables you to enter symbols such as @ or % in a text message.

1. In standby mode, press the Down navigation key (MESSAGE shortcut). The **MESSAGES** menu appears in the display.
2. Press  (for **Write Text Message**) to compose a new text message.
3. Press the Right soft touch key () until **Symbol** appears in the display.

Note: There are 5 pages of symbols to scroll through.

4. Use the Up and Down navigation keys to page through the other symbols, if necessary.
5. Press the key that corresponds with the symbol that you wish to enter. For example, press  for an exclamation point (!).
6. Repeat steps 4 and 5 to insert as many symbols into your message as desired.

Section 6: Understanding CONTACT

Topics Covered

- Your Contacts List
 - Adding a New Contact
 - Finding a Contact
 - Editing an Existing Contact
 - Speed Dial Numbers
 - Contact Groups
 - Deleting a Contact
 - Call Logs
 - My Info
 - Service Numbers
 - Sync Contacts
-

This section explains how to manage your daily contacts by storing their name and number in your Contacts. Contacts entries are sorted by name.

Your Contacts List

Your Contacts list can store up to 1000 entries, with each contact having up to five associated phone numbers, an email address, and a picture ID.

Each phone number can be up to 32 digits in length, including hard pauses. Contact names can be up to 18 characters in length. You can also specify a memory location for each entry, and you can restrict access to the Contacts list to prevent unauthorized use.

Tip: **One-Touch**, **Two-Touch**, and **Three-Touch Dialing** allow you to call numbers stored in your Contacts list faster. (See “Speed Dial Numbers” on page 62.)

Open Your Contacts List

1. In standby mode, press the **MENU** (left) soft touch key () , then press  for **CONTACT**. The following Contacts sub-menus and options appear in the display:
 - **New Contact** — Add a number or email to your Contacts.
 - **Contacts List** — Find a Contact by Name, by Number, or by email address.
 - **Groups** — Create and manage Contacts groups.
 - **Call Log** — Access and manage the Calls logs and view your call duration timers (see “Call Log” on page 30 for more information).
 - **My Info** — View the number assigned to your device by your Wireless Provider, and edit the contents of your name card, if any.
 - **Service Numbers** — View and dial pre-defined emergency and service numbers.
 - **Sync Contacts** — Launch the Addressbook Sync function which lets you synchronize your Contacts list and your Helio Web Mail address book.
2. Use the navigation keys to highlight the Contacts sub-menu or option of your choice, and press the  key.

Tip: You can also access a sub-menu or menu option by pressing the number key corresponds to the menu item number. For example, press  for **New Contact**.

Adding a New Contact

You can add an entirely new entry to your Contacts list or add information to an existing entry.

Using the Contacts Add Option

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CONTACT**) and  for **New Contact**. The **New Contact** screen appears in the display with the **Enter Name** field highlighted.

Tip: You can also launch the New Contact screen from standby mode by pressing the **CONTACTS** (right) soft touch key () , the **Menu** (left) soft touch key () , and then  for **New Contact**.

2. Enter a name or phrase to associate with the number(s) using the keypad. (See "Section 5: Entering Text" on page 48 for more information.)
3. Use the navigation keys to highlight each field.
4. Press the **Dial Type** (left) soft touch key () to select the type of number [**Mobile** ()], **Home** ()], **Office** ()], **Other** ()], or **Fax** ()] to enter for the new Contact.
5. Enter a phone number for the new Contact.

Note: You can store multiple numbers for each Contact. See "Add a Number or Email Address to a Contact" on page 61 for more information.

6. If desired, use the Left and Right navigation keys to select a Speed Dial () number for the new Contact's Mobile, Home, Office, Other, or Fax number.
7. If desired, assign the new Contact to a Group (). This lets you send messages to and find this Contact and other related contacts. (See "Groups" on page 58 for more information.)
8. If desired, select a unique Ringtone () to identify this new Contact. (See "Rings" on page 71 for more information.)
9. Press the  key to save the entry.

Saving a Number from a Call

Once you've finished a call, you can save the caller's number to your Contacts list.

Note: If the call was incoming and Caller ID information was unavailable, then the **Save** option is also unavailable.

1. After you press the  key to end your call, the call time, length of call, phone number, and name of the other party (if available) appear in the display.
Then your device returns to standby mode.
2. In standby mode, press the  key. The **All Hist.** list appears in the display. The call you just ended is highlighted.
3. Press the **Menu** (left) soft touch key (). The following options appear in the display:
 - **Send Message** — Compose and send a text message to the dialed or originating number.

Note: See "Creating and Sending New Messages" on page 135 for more information.

- **Add to Blocked** — Add the dialed or originating number for this call to the Blocked list. (See "Call Block" on page 81 for more information.)
- **Save Contact Number** — Add the dialed or originating number to the Contacts List.

- **Delete** — Erase the highlighted call or all selected (Checked) calls from your Call log. [Select a call by highlighting it and then pressing the **Check** (right) soft touch key (☐).]
 - **Delete All** — Erase all calls from this calls log.
4. Use the Up and Down navigation keys to highlight **Save Contact Number**. The **Save Contact Number** menu pop-up appears in the display showing the following options:
 - **New Contact** — Creates a new Contact for the selected number.
 - **Add Number** — Adds the selected number to an existing Contact.
 5. Use the Up and Down navigation keys to highlight an option, then press the (☑) key.

Note: For **Add Number**, the **Contacts List** screen appears in the display. Search out and highlight the Contact to which you are adding the number. (See “Finding a Contact” on page 57 for more information.) Then press the (☑) key.

The following (number type) icons appear in the display:



Mobile



Home



Office



Other



Fax

6. Use the navigation keys to highlight the number type that matches your new entry and press the (☑) key.
 For **New Contacts**, the **Add New Contact** screen appears in the display with the **Enter Name** field highlighted.
 For **Add Number**, the **Edit Number** screen appears in the display with the associated number type field highlighted.
7. For **New Contacts**, use the keypad and navigation keys to enter and select information for the new Contact. (See “Using the Contacts Add Option” on page 54 for more information.)
 For **Add Number**, if desired, use the Left and Right navigation keys to select a Speed Dial (⚡) number for the new number.
8. Press the (☑) key to save the entry.

Saving a Number from a Calls Log

You can store numbers from the Calls logs to your Contacts.

1. In standby mode, press the **MENU** (left) soft touch key (☐), then press **5** (for **CONTACT**) and **4** (for **Call Log**). The following Call Logs appear in the display:
 - Press **1** for **All Calls**.
 - Press **2** for **Missed Calls**.
 - Press **3** for **Outgoing Calls**.
 - Press **4** for **Ignored Calls**.
 - Press **5** for **Incoming Calls**.
 - Press **6** for **Call Times**.

2. Press the number key associated with the Calls log that you wish to review, or use the Left and Right navigation keys to scroll through the Call Logs to the one you wish to review.
3. Use the navigation keys to highlight the call whose number you wish to store in **CONTACT**.
4. Refer to "Saving a Number from a Call" on page 55 and do Steps 3 – 8 of that procedure.

Finding a Contact

Once you have added Contacts to your Contacts List, you have a number of methods you can use to find any of your Contacts.

Search by Name

The **Name** tab lets you quickly locate a Contact in your Contacts list by name.

1. In standby mode, press the **CONTACTS** (right) soft touch key (). The **Contacts List** screen appears in the display.
2. The **Name, Number, E-mail** field and a list of Contacts' numbers appears in the display.
3. Use the keypad to enter the first few characters of the name of the contact as it appears in your Contacts list.

Example: If you saved a contact name as "Amy Smith", begin your search for that contact by pressing  for "A".

Note: As you enter letters, the entry names of the closest matches (thus far) appear in the display.

4. When the desired Contacts entry is listed in the display, highlight the contact using the navigation keys (if necessary). Then, do one of the following
 - Press the  key to dial the number associated with the named Contact.
 - Press the  key to view information about the Contact and to access other options.
 - Press the **Menu** (left) soft touch key (). The following option appears in the display:
 - **New Contacts** — Lets you add a new number to your Contacts list or to the selected contact.
- Press the  key to add a new Contact.

Search by Number

The **Num** tab lets you quickly locate a Contact in your Contacts list by one of its numbers.

1. In standby mode, press the **CONTACTS** (right) soft touch key (). The **Contacts List** screen appears in the display.
2. The **Name, Number, E-mail** field and a list of Contacts' numbers appears in the display.

Tip: You can also search for a Contact number to call, from standby mode, by using the keypad to enter the first four digits or more of the number. The dialing screen appears in the display, and a list of any matching numbers pops up. Use the Up and Down navigation keys to highlight a number to call, then press the  key. The number appears in the dialing screen. Then press the  key to dial the selected number.

3. Use the keypad to enter the first few digits of the number for the Contact as it appears in your Contacts list.

Example: If you saved a Contact number as "817-555-2222", begin your search for that contact by pressing .

Note: As you enter digits, the closest matches (thus far) appear in the display.

4. When the desired Contacts entry is listed in the display, highlight the contact using the navigation keys (if necessary). Then, do one of the following
 - Press the  key to dial the number associated with the named Contact.
 - Press the  key to view information about the Contact and to access other options.
 - Press the **Menu** (left) soft touch key (). The following option appears in the display:
 - **New Contacts** — Lets you add a new number to your Contacts list or to the selected contact.
- Press the  key to add a new Contact.

Groups

This option lets you find a particular Contact within a list of Contacts assigned to the same Group.

1. In standby mode, press the **MENU** (left) soft touch key (), then press  (for **CONTACT**) and  for **Groups**. The **Groups** list appears in the display.
2. Use the Up and Down navigation keys to highlight the name of the group you wish to search, then press the  key.
3. Use the Up and Down navigation keys to scroll through the selected group highlight the name of each Contact. The number, Speed Dial number, and photo ID for the selected Contact appear at the top of the Groups list.

4. When the desired Contacts entry is listed in the display, highlight the contact using the navigation keys (if necessary). Then, do one of the following
 - Press the  key to dial the number associated with the named Contact.
 - Press the  key to view information about the Contact and to access other options.
 - Press the **Menu** (left) soft touch key (). The following option appears in the display:
 - **New Contacts** — Lets you add a new number to your Contacts list or to the selected contact.
- Press the  key to add a new Contact.

Editing an Existing Contact

Once stored in the Contacts List, a Contact can be changed quite easily.

1. Find the desired Contact in the Contacts list. (See “Finding a Contact” on page 57 for more information.)
2. Press the  key. The **View Number** screen appears in the display.
3. Press the **Menu** (left) soft touch key (). The following options appear in the display:
 - **Send Message** — Lets you send a text message to this Contact.
 - **Send Contact** — Lets you send this Contact information in a text message.
 - **Edit** — Change or add information for this Contact.
 - **Delete Name / Delete Selection** — Delete the name/number for this Contact.
4. Use the Up and Down navigation keys to highlight **Edit**, then press the  key. The **Edit Number** screen appears in the display with the photo ID field highlighted.
5. Use the navigation keys to highlight information fields in the selected Contact entry.
6. Press  to backspace and delete digits or letters.
7. Press and hold  to clear the entire number or name in the highlighted field.

Note: You can also add numbers (such as a second Mobile number or a Fax number) to the entry, assign it to a Group, and add other information.

8. When you're finished editing the Contact, press the  key to save your changes.

Adding Pauses to Contact Numbers

When you call automated systems (like banking services), you are often required to enter a password or account number. Instead of manually entering the numbers each time, you can store the numbers in your Contacts along with special characters called pauses.

- **Pause** — A hard pause stops the calling sequence until further input from you.
- **2sec Pause** — A two-second pause stops the calling sequence for two seconds and then automatically sends the remaining digits.

Tip: You can enter multiple two-second pauses to extend the length of a pause. For example, two consecutive two-second pauses cause a total pause time of four seconds.

Note: Keep in mind that pauses count as digits towards the 32-digit maximum.

Store Pauses in a New Contact

1. Add a new Contact. (See “Adding a New Contact” on page 54 for more information.)
2. Use the Up and Down navigation keys to highlight a number for this Contact.
3. Press the **Pause** (left) soft touch key () to add a hard pause (awaits input from you) to the number.

Press the **2sec Pause** (right) soft touch key () to add a two-second pause to the number.

4. When you're finished entering the number and pauses, and other Contact information, press the  key to save the new Contact.

Add Pauses to an Existing Contacts Entry

1. Find the desired entry in the Contacts List. (See “Editing an Existing Contact” on page 59 for more information.)
2. Press the  key. The **View Number** screen appears in the display.
3. Press the **Menu** (left) soft touch key (). The following options appear in the display:
 - **Send Message** — Lets you send a text message to this Contact.
 - **Send Contact** — Lets you send this Contact information in a text message.
 - **Edit** — Change or add information for this Contact.
 - **Delete Name / Delete Selection** — Delete the name/number for this Contact.
4. Use the Up and Down navigation keys to highlight **Edit**, then press the  key. The **Edit Number** screen appears in the display with the photo ID field highlighted.
5. Use the navigation keys to highlight a number stored in this contact entry.
6. Use the navigation keys to place the cursor where you want to add a pause (usually at the right-hand end of the number).
7. Press the **Pause** (left) soft touch key () to add a hard pause (awaits input from you) to the number.

Press the **2sec Pause** (right) soft touch key () to add a two-second pause to the number.

8. When you're finished entering pauses, press the  key to save your changes to the number in your Contacts List.

Add a Number or Email Address to a Contact

1. Find the desired Contact. (See “Finding a Contact” on page 57 for more information.)
2. Press the  key. The **View Number** screen appears in the display.
3. Press the **Menu** (left) soft touch key (). The following options appear in the display:
 - **Send Message** — Lets you send a text message to this Contact.
 - **Send Contact** — Lets you send this Contact information in a text message.
 - **Edit** — Change or add information for this Contact.
 - **Delete Name / Delete Selection** — Delete the name/number for this Contact.
4. Use the Up and Down navigation keys to highlight **Edit**, then press the  key. The **Edit Number** screen appears in the display with the photo ID field highlighted.
5. Use the Up navigation key to highlight the **View All** option.
6. Press the  key. **View Basic** changes to **View All**.
7. Use the Down navigation key to highlight an empty number field or Email Address ( field) for this Contact.
8. Use the keypad to enter an **Email** address. (See “Section 5: Entering Text” on page 48 for more information.)

To simplify the process of entering an Email address, the following functions are available:

- Press the **Email** (left) soft touch key (). A pop-up menu appears in the display listing some popular domains.
 - To insert the @ and . symbols, repeatedly press the  key until the desired symbol appears in the display.
9. Enter the new phone number or email address.
 10. Press the  key to save the new number or email address to the existing Contact.

Edit an Existing Email Address

1. Find the desired Contact. (See “Finding a Contact” on page 57 for more information.)
2. Press the  key. The **View Number** screen appears in the display.
3. Press the **Menu** (left) soft touch key (). The following options appear in the display:
 - **Send Message** — Lets you send a text message to this Contact.
 - **Send Contact** — Lets you send this Contact information in a text message.
 - **Edit** — Change or add information for this Contact.
 - **Delete Name / Delete Selection** — Delete the name/number for this Contact.
4. Use the Up and Down navigation keys to highlight **Edit**, then press the  key. The **Edit Number** screen appears in the display with the photo ID field highlighted.

5. Use the Up and Down navigation keys to highlight the **Email** field (labeled with the icon).
6. Use the keypad to edit the **Email** address. (See "Section 5: Entering Text" on page 48 for more information.)

To simplify the process of entering an Email address, the following functions are available:

- Press the **Email** (left) soft touch key (). A pop-up menu appears in the display listing some popular domains.
 - To insert the @ and . symbols, repeatedly press the  key until the desired symbol appears in the display.
7. Press the  key to save your changes.

Speed Dial Numbers

When you add or edit a Contact, you have the option of assigning a Speed Dial number to any of the Contact's numbers or of changing any of the Contact's currently assigned Speed Dial numbers.

1. Find the desired Contact. (See "Finding a Contact" on page 57 for more information.)

Tip: You can also assign a Speed Dial number when creating a new Contacts List entry. See "Adding a New Contact" on page 54 for more information.

2. Press the  key. The **View Number** screen appears in the display.
3. Press the **Menu** (left) soft touch key (). The following options appear in the display:
 - **Send Message** — Lets you send a text message to this Contact.
 - **Send Contact** — Lets you send this Contact information in a text message.
 - **Edit** — Change or add information for this Contact.
 - **Delete Name / Delete Selection** — Delete the name/number for this Contact.
4. Use the Up and Down navigation keys to highlight **Edit**, then press the  key. The **Edit Number** screen appears in the display with the photo ID field highlighted.
5. Use the Up and Down navigation keys to highlight a Speed Dial number field () for this Contact.

Note: If a Contact has more than one stored number (such as Home and Office), you can select one of these numbers as the one your device will dial when you speed dial that Contact, or you can assign each number a Speed Dial number.

6. Use the Left and Right navigation keys to select a Speed Dial number or use the keypad to enter a Speed Dial number.

Note: When you choose to select a Speed Dial number, your device only shows you unassigned Speed Dial numbers to choose from.

If you enter a Speed Dial number that is already assigned and press the key, the “**Speed Dial No. In Use. Enter Again**” message pops up in the display.

7. Press the  key to save the new Speed Dial number in the selected Contact.

Contact Groups

The Group feature lets you quickly and simply send text messages to a group of Contacts. When you add or edit a Contact, you have the option of assigning that Contact to a Group. You can also use the **Group** sub-menu to quickly and easily assign and reassign Contacts to any of the existing Groups and to create and rename Groups.

Assign/Reassign Contacts to Groups — Shortcut Method

When you add a Contact, your device automatically assigns the new Contact to the None group. You can assign or reassign a Contact to any available group.

1. Find the desired Contact in the Contacts List. (See “Finding a Contact” on page 57 for more information.)
2. Press the  key. The **View Number** screen appears in the display.
3. Press the **Menu** (left) soft touch key (). The following options appear in the display:
 - **Send Message** — Lets you send a text message to this Contact.
 - **Send Contact** — Lets you send this Contact information in a text message.
 - **Edit** — Change or add information for this Contact.
 - **Delete Name / Delete Selection** — Delete the name/number for this Contact.
4. Use the Up and Down navigation keys to highlight **Edit**, then press the  key. The **Edit Number** screen appears in the display with the photo ID field highlighted.
5. Use the Up and Down navigation keys to highlight the Group field () in the selected Contact entry.
6. Use the Left and Right navigation keys to select from Groups such as the following:
 - **General** — Contacts not assigned to a named Group.
 - **Family**
 - **Friend**
 - **Work**

Note: If the selected Contact does not fit with the existing Groups, press the **Group Info** (left) soft touch key () and select the **New Group** option. See “Create a Group” on page 65 for more information.

7. When you're finished editing the Contact, press the  key to save your changes.

Assign/Reassign Contacts to Groups — Menu Method

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CONTACT**) and  for **Groups**. A list of group names (like the following list) appears in the display:
 - **General** — Contacts not assigned to a named Group.
 - **Family**
 - **Friend**
 - **Work**
2. Use the Up and Down navigation keys to highlight the **None** group (to assign an unassigned Contact) or a named Group (to reassign or unassign an assigned Contact).
3. Press the **Menu** (left) soft touch key (). The following options pop-up in the display:
 - **Group Info** — Shows this Group's image ID, name, custom ringer setting, and whether this Group is secret. (Not active for the None group.)
 - **Edit** — Lets you change the image ID, name, and settings for this Group (Not active for the None group.)
 - **Add** — Add a new Group.
 - **Delete** — Lets you delete this Group and return the member Contacts to the None group (Not active for the None group.)
 - **Move Member** — Move a Contact from this Group to another Group.
4. Use the Up and Down navigation keys to highlight the **Move Member** option.
5. Press the  key. A list of Contacts in the highlighted group appears in the display.

Note: If the selected Group is Secret, you are prompted to enter your device's password.

6. Use the Up and Down navigation keys to highlight the Contact you wish to move to another Group.
7. Press the **Check** (right) soft touch key. A checkmark appears on the Contact entry. Repeat this step as needed for other Contacts you want to reassign.
8. Press the  key. The **Select Group** list pops-up in the display.
9. Use the Up and Down navigation keys to highlight the Group you want to receive the selected Contact(s).
10. Press the  key. Messages pop-up indicating the Contact is moved, then you are returned to the Groups screen.

Create a Group

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CONTACT**) and  for **Groups**. A list of group names (like the following list) appears in the display:
 - **General** — Contacts not assigned to a named Group (that is, a Group other than None).
 - **Family**
 - **Friend**
 - **Work**
2. Press the **Menu** (left) soft touch key (). The following options pop-up in the display:
 - **Group Info** — Shows this Group's image ID, name, custom ringer setting, and whether this Group is secret. (Not active for the None group.)
 - **Edit** — Lets you change the image ID, name, and settings for this Group (Not active for the None group.)
 - **Add** — Add a new Group.
 - **Delete** — Lets you delete this Group and return the member Contacts to the None group (Not active for the None group.) Only newly added groups can be deleted.
 - **Move Member** — Move a Contact from this Group to another Group.
3. Use the Up and Down navigation keys to highlight the **Add** option.
4. Press the  key. The **New Group** screen appears in the display.
5. Use the keypad to enter a name for the Group. (See “Section 5: Entering Text” on page 48 for more information.)

Note: You must enter a name for the new Group before your device will let you make the other settings.

6. Use the Up and Down navigation keys to highlight each setting.
7. For the Ringer () and Secret () settings, use the Left and Right navigation keys to select values.
8. For the Group ID () setting, press the **Edit** (left) soft touch key (). The Edit Photo menu pops-up in the display showing the following options:
 - **Use New Photo** — Launches the camera in your device so that you can take a photo to be used as the ID for the selected Group.
 - **Use Album Photo** — Lets you select a Group ID photo from the photo album in your device.
 - **Use Icon** — Lets you select an icon from the icon groups (Animals, People, Others) in your device.
9. Use the Up and Down navigation keys to highlight the desired Group ID source.
10. Press the  key and photograph or select a Group ID image.
11. Press the  key. The selected image appears in the **New Group** screen.
12. Press the  key to save your choices. You are returned to the Groups screen.

Edit a Group

The Edit option lets you change the name of a Group and its settings.

Note: You cannot rename the **None** group.

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CONTACT**) and  for **Groups**. A list of group names (like the following list) appears in the display:
 - **General** — Contacts not assigned to a named Group.
 - **Family**
 - **Friend**
 - **Work**
2. Use the Up and Down navigation keys to highlight the **General** group (to assign an unassigned Contact) or a named Group (to reassign or unassign an assigned Contact).
3. Press the **Menu** (left) soft touch key (). The following options pop-up in the display:
 - **Group Info** — Shows this Group's image ID, name, custom ringer setting, and whether this Group is secret. (Not active for the None group.)
 - **Edit** — Lets you change the image ID, name, and settings for this Group (Not active for the General group.)
 - **Add** — Add a new Group.
 - **Delete** — Lets you delete this Group and return the member Contacts to the None group (Not active for the None group.)
 - **Move Member** — Move a Contact from this Group to another Group.
4. Use the Up and Down navigation keys to highlight the **Edit** option.
5. Press the  key. The **Edit Group** screen appears in the display.

Note: If the selected Group is Secret, you are prompted to enter your device's password.

6. Use the Up and Down navigation keys to highlight each setting.
7. For the Group Name, use the keypad to change the name of this Group. (See "Section 5: Entering Text" on page 48 for more information.)
8. For the Ringer () and Secret () settings, use the Left and Right navigation keys to select values.
9. For the Group ID () setting, press the **Edit** (left) soft touch key (). The Edit Photo menu pops-up in the display showing the following options:
 - **Use New Photo** — Launches the camera in your device so that you can take a photo to be used as the ID for the selected Group.
 - **Use Album Photo** — Lets you select a Group ID photo from the photo album in your device.

- **Use Icon** — Lets you select an icon from the icon groups (Animals, People, Others) in your device.
10. Use the Up and Down navigation keys to highlight the desired Group ID source.
 11. Press the  key and photograph or select a new Group ID image.
 12. Press the  key. The new image appears in the **Edit Group** screen.
 13. Press the  key to save your choices. You are returned to the Groups screen.

Delete a Group

The Delete option lets you remove a Group and return its member Contacts to the None group.

Note: You cannot delete the **None** group.

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CONTACT**) and  for **Groups**. A list of group names (like the following list) appears in the display:
 - **General** — Contacts not assigned to a named Group.
 - **Family**
 - **Friend**
 - **Work**
2. Use the Up and Down navigation keys to highlight the name Group you want to delete.
3. Press the **Menu** (left) soft touch key (). The following options pop-up in the display:
 - **Group Info** — Shows this Group's image ID, name, custom ringer setting, and whether this Group is secret. (Not active for the None group.)
 - **Edit** — Lets you change the image ID, name, and settings for this Group (Not active for the None group.)
 - **Add** — Add a new Group.
 - **Delete** — Lets you delete this Group and return the member Contacts to the None group (Not active for the None group.)
 - **Move Member** — Move a Contact from this Group to another Group.
4. Use the Up and Down navigation keys to highlight the **Delete** option.
5. Press the  key. You are prompted to confirm the deletion.

Note: If the selected Group is Secret, you are prompted to enter your device's password.

6. Use the Left and Right navigation keys to highlight **Yes** to confirm the deletion. Highlight **No** to cancel the deletion.
7. Press the  key to invoke your selection.

Deleting a Contact

1. Find the desired entry in the Contacts list. (See “Finding a Contact” on page 57 for more information.)
2. Press the **Menu** (left) soft touch key (). The following options appear in the display:
 - **Send Message** — Compose and send a text message to the selected Contact.

Note: See “Creating and Sending New Messages” on page 135 for more information.

- **Send Contact** — Compose and send a text message containing the selected Contact’s information.
- **Edit** — Change or add information for this Contact.
- **New Contact** — Create a new Contact.
- **Delete** — Erase the selected Contact.

You can also press the  key before pressing the **Menu** (left) soft touch key () to verify the Contact is to be deleted. In this case, the following options appear in the display:

- **Send Message** — Compose and send a text message to the selected Contact.

Note: See “Creating and Sending New Messages” on page 135 for more information.

- **Send Contact** — Compose and send a text message containing the selected Contact’s information.
 - **Edit** — Change or add information for this Contact.
 - **Delete Selection** — Erase the selected Contact.
3. Use the Up and Down navigation keys to highlight **Delete**.
 4. Press the  key. The device prompts you to confirm the deletion.
 5. Use the Left and Right navigation keys to highlight **Yes** to confirm the deletion. Highlight **No** to cancel the deletion.
 6. Press the  key to invoke your selection.

Call Logs

The Calls Log retains information about Missed, Outgoing, Ignored, and Incoming calls. You can also view call duration times for your last call and the time totals for all calls. See “Call Log” on page 30 for more information.

My Info

My Info lets you view and edit your electronic business card which includes the number assigned to your device by your Wireless Provider.

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CONTACT**) and  for **My Info**. The **My Info** screen appears in the display.
2. Enter your name using the keypad. (See “Section 5: Entering Text” on page 48 for more information.)
3. Use the navigation keys and keypad to select fields and enter information.

Service Numbers

Service Numbers lets you view and dial the emergency and service numbers preset in your device.

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CONTACT**) and  for **Service Numbers**. The **Service Numbers** screen appears in the display listing the following numbers:
 -  — **Emergency (911)**
 -  — **Information (411)**
 -  — **Customer Care (611)**
2. To dial any of the preset numbers, press the associated key.

Sync Contacts

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CONTACT**) and  for **Sync Contacts**. The **Addressbook Sync** screen appears in the display listing the following options:
 - **Sync Contacts** — Synchronizes your Contacts List with your Helio Web Mail address book.
 - **Preview Sync** — Lets you preview the changes that will be made to your Helio Web Mail address book before using **Sync Contacts**.
 - **Username/Password** — Lets you set/change your Helio Web Mail Username and Password.
 - **Help** — Shows descriptions of these options.
2. Use the Up and Down navigation keys to highlight an option.
3. Press the  key to invoke your selection.

Section 7: CUSTOMIZE

Topics Covered

- Rings
 - Screens
 - H.O.T. (Helio On Top) Screens
 - Sound Settings
 - Display Settings
 - Call Settings
 - Network
 - Device
 - Security
 - Bluetooth
 - Language
 - Airplane Mode
-

This section explains how to customize your device to suit your needs and preferences.

Rings

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CUSTOMIZE**) and  for **Rings**. The **Rings** menu appears in the display showing the following options:
 - **Rings**
 - **Freebies**
2. Use the Up and Down navigation keys to highlight the desired ringtones gallery.
3. Press . A list of available ringtones appears in the display.
4. Use the Up and Down navigation keys to highlight the desired ringtone.
5. Press  to save and implement your selection.

Download Rings

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CUSTOMIZE**) and  for **Download Rings>**. The browser screen appears in the display and your A303 device attempts to connect to your Wireless Provider's server.

Screens

Home Screens

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CUSTOMIZE**) and  for **Home Screens**. The **Home Screens** menu appears in the display showing the following options:
 - **Screens** — Lets you select a downloaded image as the backdrop in your home (standby) screen.
 - **Video Screens** — Lets you select a downloaded video clip as the backdrop in your home (standby) screen.
 - **Album** — Lets you select a photo or video clip take with your device's camera as the backdrop in your home (standby) screen.
 - **Freebies** — Lets you select a pre-loaded image as the backdrop in your home (standby) screen.
 - **Incomp Downloads** — Lets you Delete or Download (resume downloading) screens that were interrupted during download.
2. Use the Up and Down navigation keys to highlight the desired image/video gallery.
3. Press . A list of available screens/folders appears in the display.
4. Use the Up and Down navigation keys to highlight the desired screen/folder.
If you select a folder, a list of available screens appears in the display, then use the Up and Down navigation keys to highlight the desired screen.
5. Press  to save and implement your selection.

Call Screens

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CUSTOMIZE**) and  for **Call Screens**. The **Call Screens** menu appears in the display showing the following options:
 - **Screens** — Lets you select a downloaded image as the backdrop in your home (standby) screen.
 - **Album** — Lets you select a photo or video clip take with your device's camera as the backdrop in your home (standby) screen.
 - **Freebies** — Lets you select a pre-loaded image as the backdrop in your home (standby) screen.
2. Use the Up and Down navigation keys to highlight the desired image/video gallery.
3. Press . A list of available screens/folders appears in the display.
4. Use the Up and Down navigation keys to highlight the desired screen/folder.

If you select a folder, a list of available screens appears in the display, then use the Up and Down navigation keys to highlight the desired screen.
5. Press  to save and implement your selection.

Download Screens

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CUSTOMIZE**) and  for **Download Screens>**. The browser screen appears in the display and your A303 device attempts to connect to your Wireless Provider's server.

H.O.T. (Helio On Top) Screens

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CUSTOMIZE**) and  for **H.O.T. Screens**. The **Apps** menu appears in the display.

Download H.O.T.

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CUSTOMIZE**) and  for **Download H.O.T.>**. The browser screen appears in the display and your A303 device attempts to connect to your Wireless Provider's server.

Sound Settings

The **Sound** menu provides a variety of options to customize audio properties for such things as ringers, keypad tones, alerts, and more.

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CUSTOMIZE**),  (for **Settings**), and  for **Sound**. The following options appear in the display:
 - **Ring Vibration**
 - **Volume**
 - **Sound Effects**

- Hourly Alert
- Sleep Mode

Ring Vibration

You can select that your device will ring, vibrate, both, or light only in the **Ring Vibration** sub-menu.

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CUSTOMIZE**),  (for **Settings**),  (for **Sound**), and  for **Ring Vibration**. The following options appear in the display:
 - Ring Only
 - Vibrate
 - Light Only
 - Vibrate then Ring
 - Ring and Vibrate
2. Use the **Up** and **Down** navigation keys to highlight the desired ringer type.
3. Press  to save and implement your selection.

Volume

Use the Volume sub-menu to set the default volumes for incoming calls, the keypad, alarms, and alerts.

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CUSTOMIZE**),  (for **Settings**),  (for **Sound**), and  for **Volume**. The following options appear in the display:
 - Ring
 - Receiver
 - Keypad
 - Effects
 - Message
 - Wake-up Call
 - Alert
 - Power Up
 - Power Down
2. Use the **Left** and **Right** navigation keys to select the volume level (or vibrate mode) for the selected setting.
3. Press the  key to save the setting.

Sound Effects

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CUSTOMIZE**),  (for **Settings**),  (for **Sound**), and  for **Sound Effects**.

The following options appear in the display:

- Keypad
 - Menu Popup
 - Message
 - OK/Save
 - Select
 - Power Up/Down
 - Slide
 - Cancel
 - Warning
 - Call Connect
 - Silent Mode
 - Low Battery
2. Use the **Left** and **Right** navigation keys to select particular sound effects for the selected setting.
 3. Press the  key to save the settings.

Hourly Alert

You can set your device to sound an alert whenever you enter or leave your service area, connect or disconnect a call, as well as other options.

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CUSTOMIZE**),  (for **Settings**),  (for **Sound**), and  for **Hourly Alert**. The following options appear in the display:
 - **On/Off** — Lets you set the Clock On or Clock Off.
 - **Alert Time** — Lets you enter the beginning and ending hours.
 - **Alert Sound** — Lets you select Cuckoo or Female Voice.
2. Use the Up and Down navigation keys to highlight a sub-menu.
3. Use the Left and Right navigation keys to highlight an **On/Off** or **Alert Sound** option.
4. Enter Alert Times in 2-digit format. To change the time of day (AM or PM), press the **AM / PM** (left) soft key ().
5. Press the  key to confirm your selections and entries.

Sleep Mode

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CUSTOMIZE**),  (for **Settings**),  (for **Sound**), and  for **Sleep Mode**. The following options appear in the display:
 - **Off / Once / Daily** — Lets you set Sleep Mode for one occurrence or for daily occurrence.
 - **Start** — Lets you enter the time in 12-hour format. Press the left soft touch key to toggle between AM and PM.
 - **End** — Lets you enter the time in 12-hour format. Press the left soft touch key to toggle between AM and PM.
 - **Ring** — Lets you set ringer volume during Sleep Mode.
 - **Message** — Lets you set message alert volume during Sleep Mode.
 - **Alert Sound** — Lets you set alert volume during Sleep Mode.
 - **Key/Function Sound** — Lets you set keypad/function volume during Sleep Mode.
2. Use the **Up** and **Down** navigation keys to highlight an option.
3. Use the **Left** and **Right** navigation keys to select a value, or use the keypad to enter a value.
4. Press the  key to confirm your selections and entries.

Display Settings

Using the **Display** menu, you can set the standby mode animation, customize the backlight settings, and more.

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CUSTOMIZE**),  (for **Settings**), and  for **Display**. The following Screen sub-menus appear in the display:
 - **Overlay** — Lets you choose an image to overlay the standby mode wallpaper.
 - **Banner** — Lets you create your own personalized greeting that appears in the display when your device is in standby mode.
 - **Clock** — Lets you choose whether to show the time in the display in digital or analog format.
 - **Missed Events** — Lets you enable or disable the Missed Events overlay for the standby mode screen.
 - **Font** — Lets you choose the font Style and Size for the standby mode screen.
 - **Dial Style** — Lets you choose how the number will display on the display screen.
 - **Backlight** — Lets you set backlight options for the LCD, keypad, and brightness.
2. Use the navigation keys to highlight a sub-menu.
3. Press the  key to enter the highlighted sub-menu. The following sections describe the above listed display sub-menus in greater detail.

Overlay

Displays an image overlaying the selected Home Screen.

1. In standby mode, press the **MENU** (left) soft touch key (), then press  (for **CUSTOMIZE**),  (for **Settings**),  (for **Display**), and  for **Overlay**. The following options appear in the display:
 - **None**
 - **Big Calendar**
 - **Small Calendar(top)**
 - **Small Calendar(bottom)**
 - **3 month Calendar(top)**
 - **3 month Calendar(bottom)**
 - **Today**
 - **Monthly Schedule**
 - **Weekly Schedule**
 - **Daily Schedule**
 - **To-Do**
 - **Dual Clock**
2. Use the **Up** and **Down** navigation keys to highlight an option.
3. Press the **Preview** (left) soft touch key (). A mock-up standby screen including the highlighted overlay appears in the display.
4. Press the  key to confirm your selections and entries.

Banner

Create your own personalized greeting that appears in the display while your device is in standby mode.

1. In standby mode, press the **MENU** (left) soft touch key (), then press  (for **CUSTOMIZE**),  (for **Settings**),  (for **Display**), and  for **Banner**. The **Banner** screen appears in the display with the banner presentation selection highlighted.
2. Use the Left and Right navigation keys to select how the banner will appear in the standby mode screen. The following options are available:
 - **Off** — Banner does not appear in the display.
 - **Slide** — Complete banner slides from right to left across the selected display line.
 - **Appear** — Letters appear, one at a time, and centered in the selected display line.
 - **Fly in** — Letters slide, one at a time, from the right edge to the center of the selected display line.
 - **Drop** — Letters slide, one at a time, from the top edge to the center of the selected display line.
 - **Fix Text** — Banner shows continually in the center of the selected display line.

3. Use the Up and Down navigation keys to highlight the banner text entry field.

Note: Press and hold the  key to erase an existing banner, if necessary.

4. Enter a word or short phrase (up to 20 characters) to appear in your device's display while in standby mode. (See "Section 5: Entering Text" on page 48 for more information.)
5. Use the Up and Down navigation keys to highlight the banner position selection.
6. Use the Left and Right navigation keys to select where the banner will appear in the standby mode screen. The following options are available:
 - **Top** — Banner appears on the top line of the display.
 - **Middle** — Banner appears on the middle line of the display.
 - **Bottom** — Banner appears on the bottom line of the display.
 - **User Set** — Lets you use the navigation keys to interactively select where the banner appears in the display.
7. Press the  key to save the new banner.

Clock

Clock lets you choose whether to show the time in the display in large or small digital format.

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CUSTOMIZE**),  (for **Settings**),  (for **Display**), and  for **Clock**. The following options appear in the display:
 - Clock type
 - **Digital Clock 1, 2, 3** — Large numerical time and date displays
 - **Off** — Default small digital time and date display
 - Placement
 - **Upper-Right, Upper-Left, Mid-Right, Mid-Left, Lower-Right, Lower-Left, User Set** (use navigation keys to position clock display).

Note: Placement only highlights when Digital Clock 1, 2, or 3 is selected.

2. Use the navigation keys to highlight the desired setting, then press the  key to save the setting.

Missed Events

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CUSTOMIZE**),  (for **Settings**),  (for **Display**), and  for **Missed Events**. The following options appear in the display:
 - **On**
 - **Off**

2. Use the navigation keys to highlight the desired setting, then press the  key to save the setting.

Font

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CUSTOMIZE**),  (for **Settings**),  (for **Display**), and  for **Font**. The following options appear in the display:
 - **Font Style** — Sets font (**Vector Fonts** (**General, Gothic, Swirl, Gurum, Donghwa, Panhwa**) or **Normal Fonts** (**Barun, Yulseo, Miso, Songulssi**)) used to show text.
 - **Font Size** — Sets size (**Small, Medium, Large, Larger, or Largest**) of the Style font used to show text.
2. Use the navigation keys to highlight the desired option and setting, then press the  key to save the setting.

Dial Style

Dial Style adjusts the color of display.

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CUSTOMIZE**),  (for **Settings**),  (for **Display**), and  for **Dial Style**. The following options appear in the display:
 - **Default**
 - **Number Size** — Sets size (**Small** or **Large**) of the Default font used to show dialed numbers.
 - **Color Scheme/Background** — Sets colors used to display entered phone number digits and the background color.
 - **Custom** — Sets font (**LED, No Effect, Ink Pen, or Memo Board**) used to show dialed numbers.
2. Use the navigation keys to highlight the desired option and setting, then press the  key to save the setting.

Backlight

You can set the backlight for your display or keypad to remain on for a specified period of time or remain on as long as the Slide is open.

Note: Prolonged backlight use drains your battery faster.

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CUSTOMIZE**),  (for **Settings**),  (for **Display**), and  for **Backlight**. The following options appear in the display:
 - **Display Duration** — Sets the amount of time the backlight for the main display remains on after a period of inactivity. Optional settings are **15 sec, 30 sec, 1 min, 3 min, and 10 min**.
 - **Display Brightness** — Use the navigation keys to select between any of 5 optional settings.
 - **Keypad Duration** — Sets the amount of time the main display backlight remains on after a period of inactivity. Optional settings are **Save Mode** (this setting uses much less power) and **Normal Mode**.

2. Use the navigation keys to highlight an option.
3. Press the  key to enter the highlighted option's sub-menu and to save changed settings as desired.

Touch Sensitivity

You can select how sensitive your device's Touch Pad is to your touch.

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CUSTOMIZE**),  (for **Settings**), and  for **Touch Sensitivity**. The following sensitivity options appear in the display:
 - **Low**
 - **Medium**
 - **High**
 - **Super**
2. Use the navigation keys to highlight an option.
3. Press the  key to select the sensitivity to be applied to the Touch Pad.

Call Settings

Answer Call On

You can select a specific answer mode when you receive an incoming call. Your device can be preset to answer when you do any of the following:

- Slide Open
 - Open + Any Key
 - Send Key Only
1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CUSTOMIZE**),  (for **Settings**),  (for **Call**), and  for **Answer Call On**. The following call answer options appear in the display:
 - **Slide Open** — Sliding the device open or pressing  answers a call.
 - **Open + Anykey** — Sliding the device open and pressing any key except the mp3 key answers a call.
 - **Send Key Only** — Only pressing  answers a call.
 2. Use the navigation keys to highlight an option.
 3. Press the  key to select the method for answering calls.

Call Forwarding

1. In standby mode, press the **MENU** (left) soft touch key (), then press  (for **CUSTOMIZE**),  (for **Settings**),  (for **Call**), and  for **Call Forwarding**. The following options appear in the display:
 - **Set Number**
 - **Cancel**
2. Use the navigation keys to highlight the method you wish to use for forwarding calls, then press the  key.

Call Block

Call Block lets you control which incoming calls, if any, you wish to receive. Using Call Block you can elect to ignore a List of specified numbers, or to ignore calls received from specified Contact Group(s).

1. In standby mode, press the **MENU** (left) soft touch key (), then press  (for **CUSTOMIZE**),  (for **Settings**),  (for **Call**), and  for **Call Block**. You're prompted to enter the password for your device.

Note: The default password is '0000'.

The following options appear in the display:

- **Settings** — Lets you enable/disable Call Block; specify whether to ignore calls from Saved Numbers, Unsaved Numbers, or All Numbers; assign a Sound Effect to ignored calls.
- **Blocked List** — Lets you review and manage the list of Saved Numbers you selected in the Call Log (see "Call Log" on page 30 for more information) or entered directly using Set Number.
- **Blocked Group** — Lets you ignore calls from one or more Contact Groups.

Tone Length

Use this menu to set DTMF settings to **Short** or **Long**.

1. In standby mode, press the **MENU** (left) soft touch key (), then press  (for **CUSTOMIZE**),  (for **Settings**),  (for **Call**), and  for **Tone Length**. The following options appear in the display:
 - **Short** — Select for a brief tone
 - **Long** — Select for an extended tone
2. Use the Up and Down navigation keys to highlight the Tone Length setting of your choice, then press . Your setting is saved.

Network

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CUSTOMIZE**),  (for **Settings**), and  for **Network**. The following options pop-up in the display:
 - **3G mode**
 - **1X only**
2. Use the navigation keys to highlight the method you wish to use for data transfer, then press the  key.

Device

Memory Info

Memory Info lets you quickly and easily review and manage your device memory usage. To access **Memory Info**, do the following:

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CUSTOMIZE**),  (for **Settings**), and  for **Device**. You're prompted to enter the password.

Note: The default password is '0000'.

2. Press  for **Memory Info**. The following options appear in the display:
 - **Download Memory** — Lets you review used and available memory in your various media (photo and video albums) and download folders.
 - **System Memory** — Lets you review used and available memory in your Contacts list, Message folders, Organizer (Planner) folders, and Calls Logs.
 - **USB Disk** — Lets you review and manage applications stored on your device.
3. Use the navigation keys to highlight the desired memory option, then press the  key to access that option.

Download Memory

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CUSTOMIZE**),  (for **Settings**), and  for **Device**. You're prompted to enter the password.

Note: The default password is '0000'.

2. Enter the password. The **Device** menu appears in the display.
3. Press  (for **Memory Info**). The **Memory Info** screen appears in the display.
4. Press  for **Download Memory**. You're prompted to enter the password.

Note: The default password is '0000'.

The following options appear in the display:

- **Photo + Video Album** memory usage
- **Music + Videos** memory usage
- **Contacts w Pics** memory usage
- **Rings** memory usage
- **Screens** memory usage
- **Voice Memo** memory usage
- **Etc.** memory usage

5. Use the Up and Down navigation keys to highlight the desired memory option.

System Memory

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CUSTOMIZE**),  (for **Settings**), and  for **Device**. You're prompted to enter the password.

Note: The default password is '0000'.

2. Enter the password. The **Device** menu appears in the display.
3. Press  (for **Memory Info**). The **Memory Info** screen appears in the display.
4. Press  for **System Memory**. The following options appear in the display:
 - **Name** memory usage
 - **Phone No.** memory usage
 - **Speed Dial** memory usage
 - **Group** memory usage
5. Use the Left and Right navigation keys to highlight the desired memory option.

USB Disk

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CUSTOMIZE**),  (for **Settings**), and  for **Device**. You're prompted to enter the password.

Note: The default password is '0000'.

2. Enter the password. The **Device** menu appears in the display.
3. Press  (for **Memory Info**). The **Memory Info** screen appears in the display.
4. Press  for **USB Disk**. You're prompted to enter the password.

Note: The default password is '0000'.

The **Mass Storage** screen appears in the display, showing the following file list sorting options:

- **Sort by Time**
 - **Sort by Size**
 - **Sort by Name**
 - **Sort by Type**
5. Use the Left and Right navigation keys to show the available applications list sorted according to the selected sorting option.

S/W Info

1. In standby mode, press the **MENU** (left) soft touch key (), then press  (for **CUSTOMIZE**),  (for **Settings**), and  for **Device**. You're prompted to enter the password.

Note: The default password is '0000'.

2. Enter the password. The **Device** menu appears in the display.
3. Press  for **S/W Info**.

Software version information appears in the display.

Note: This information can be valuable when contacting your Wireless Provider's Customer Care.

My Info

1. In standby mode, press the **MENU** (left) soft touch key (), then press  (for **CUSTOMIZE**),  (for **Settings**), and  for **Device**. You're prompted to enter the password.

Note: The default password is '0000'.

2. Enter the password. The **Device** menu appears in the display.
3. Press  for **My Info**. The **Edit My Info** screen appears in the display showing the ten-digit phone number assigned to your device by your Wireless Provider.

Note: You can also add or change personal information on this screen by pressing the **Menu** (left) soft touch key () and then selecting the **Edit** option.

Reset

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CUSTOMIZE**),  (for **Settings**), and  for **Device**. You're prompted to enter the password.

Note: The default password is '0000'.

2. Enter the password. The **Device** menu appears in the display.
3. Press  for **Reset**. The following options appear in the display:
 - **Delete Contacts** — Deletes all entries from the Contacts List.
 - **Reset Defaults** — Resets CUSTOMIZE settings to the factory default values.

CAUTION! Contact your Wireless Provider before using the Reset Defaults option.

Reset Defaults does not restore settings made by your Wireless Provider.

4. Use the Up and Down navigation keys to highlight the desired memory option, then press the  key to save your setting.
You are prompted to confirm the selected deletion or reset.
5. Use the Left and Right navigation keys to highlight **No** and press the  key to cancel the deletion or reset.
Use the Left and Right navigation keys to highlight **Yes** and press the  key to confirm the deletion or reset.

Security

Use the Security menu to lock your phone, lock functions (such as text messages, write messages, Picture messages, etc.) or set a password in the Security Menu.

Phone Lock

Locking the device limits all outgoing calls except calls to 911 emergency and the three user-programmable emergency numbers. You can lock the device manually during use, or set the device to lock automatically when it is turned on. With the device in lock mode, you can answer incoming calls, but you must unlock the device to place outgoing calls (except to emergency and secret numbers).

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CUSTOMIZE**),  (for **Settings**),  (for **Security**), and  for **Phone Lock**. You're prompted to enter the password.

Note: The default password is '0000'.

2. Enter the Lock Code. The following Phone Lock options pop-up in the display:
 - **Manual Lock** — Locks the device immediately (The device stays locked until you enter the lock code.)
 - **Auto Lock** — Locks the device automatically the next time your device is powered ON (The device stays locked until you enter the lock code.)
 - **Off** — Unlocks the device.
3. Use the navigation keys to highlight the Phone Lock mode option of your choice.
4. Press the  key to perform the function for the highlighted option.

Function Lock

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CUSTOMIZE**),  (for **Settings**),  (for **Security**), and  for **Function Lock**. You're prompted to enter the password.

Note: The default password is '0000'.

2. Enter the password. The following function lock options appear in the display:
 - **Text Messages**
 - **Write Messages**
 - **Picture Message**
 - **Message Log**
 - **Email**
 - **JunkMail(SMS Only)**
 - **Contact**
 - **Calender**
 - **To Do**
 - **Notepad**
3. Use the Up and Down navigation keys to highlight a function you want to lock.
4. Press the **Check** (right) soft touch key (). A check mark appears next to the highlighted function.
5. Repeat steps 3 and 4 for all functions you want to lock, then press the  key to lock the selected functions.

Set Password

The default lock code for your device is '0000'. It is advisable to change the default lock code to a secret code for security purposes.

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CUSTOMIZE**),  (for **Settings**),  (for **Security**), and  for **Set Password**. You're prompted to enter the Password (lock code).

Note: The default password is '0000'.

2. Enter the current password. You're prompted to enter the New Password.
 3. Enter the new password. You're prompted to re-enter the new password for verification.
 4. Enter the new password again. Your changes are stored.
-

Note: Your device does not allow you to view the password for obvious security reasons. If you change the password, be sure to write down or memorize the new password.

Bluetooth

Bluetooth is a short-range wireless communications technology capable of exchanging information over a distance of about 30 feet without requiring a physical connection.

Unlike infrared, you don't need to line up the devices to beam information with Bluetooth. If the devices are within a range of one another, you can exchange information between them, even if they are located in different rooms.

The Bluetooth wireless technology settings menu provides the ability to view and change the device name, show the visibility, and set the security for the device.

Bluetooth Mode

When the Bluetooth is turned on, you can use the Bluetooth features available. When the Bluetooth is turned off, you cannot send or receive information via Bluetooth. To save battery life or in situations where Bluetooth use is prohibited, such as airline traveling, you can turn off the Bluetooth wireless technology headset.

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CUSTOMIZE**),  (for **Settings**),  (for **Bluetooth**), and  for **Bluetooth Mode**. The following options appear in the display:
 - **On** — Bluetooth features are available.
 - **Off** — Bluetooth features are not available.
2. Use the **Up** and **Down** navigation keys to highlight the desired option, then press the  key.

Connect Device

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CUSTOMIZE**),  (for **Settings**),  (for **Bluetooth**), and  for **Connect Device**. The following options appear in the display:
 - **Headset/Hands-free**
 - **Stereo Headset**

2. Place a Bluetooth device in discoverable mode. (See the device user manual for more information.)
3. Use the **Up** and **Down** navigation keys to highlight the matching device type option and press the  key.

Note: If Bluetooth Mode is **OFF**, you are prompted to "**Activate Bluetooth Mode?**". Use the Left and Right navigation keys to highlight **Yes** and press the  key.

Names of available Bluetooth devices appear in the display.

4. Use the **Up** and **Down** navigation keys to highlight an available Bluetooth device then press the Right soft key to Connect.
You are prompted to enter the passkey or PIN for the selected device.
5. Enter the device passkey or PIN and press the  key. The selected device is automatically registered and connected, and the Bluetooth feature icon () appears in the display.

Trusted Devices

This menu provides a list of Bluetooth wireless technology devices registered on your device.

1. In standby mode, press the **MENU** (left) soft touch key (), then press  (for **CUSTOMIZE**),  (for **Settings**),  (for **Bluetooth**), and  for **Trusted Devices**. The **Regist Dev List** screen appears in the display listing all Bluetooth wireless technology devices currently registered on your device.
2. Use the Up and Down navigation keys to highlight a registered Bluetooth device.
3. Press the **Menu** (left) soft touch key (). The following options pop-up in the display:
 - **Connect** — Pairs your device with the selected device.
 - **Edit Name** — Lets you change the name of the selected device as it appears in the list. (See "Section 5: Entering Text" on page 48 for more information.)
 - **Delete** — Removes the selected device from the list.
 - **Delete All** — Removes all devices from the list.
4. Use the **Up** and **Down** navigation keys to highlight the desired option, then press the  key.

Send + Receive

The Send + Receive application lets you exchange Contact information and files (melodies, images, and photos) with Bluetooth wireless technology devices.

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CUSTOMIZE**),  (for **Settings**),  (for **Bluetooth**), and  for **Send + Receive**. The following options appear in the display:
 - **Receive Mode** — Lets your device receive information and files from a Bluetooth wireless technology device.
 - **Send My Info** — Send your NameCard to a Bluetooth wireless technology device.
 - **Send Contact** — Send Contact information to a Bluetooth wireless technology device.
 - **Send Photo** — Send a photo file to a Bluetooth wireless technology device.
2. Use the **Up** and **Down** navigation keys to highlight the desired option, then press the  key.

Disconnect Device

Selecting this option lets you disconnect Bluetooth devices currently connected to your device.

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CUSTOMIZE**),  (for **Settings**),  (for **Bluetooth**), and  for **Disconnected Device**. Information about the currently connected Bluetooth device appears in the display.
2. To disconnect the Bluetooth device, press the  key. You are prompted to verify the disconnection.

Settings

Settings lets you setup how the Bluetooth feature operates on your device.

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CUSTOMIZE**),  (for **Settings**),  (for **Bluetooth**), and  for **Settings**. The following options appear in the display:
 - **My Information** — Shows information about the Bluetooth device identity of your device.
 - **Search Type** — Lets you select whether to **Search by Type** or to **Search All** for Bluetooth devices.
 - **Visibility** — Lets you activate Bluetooth by selecting **Yes** at the prompt.
2. Use the **Up** and **Down** navigation keys to highlight the desired option, then press the  key.

Language

The language option on your device can change the language of voice prompts, menus, and key-input.

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CUSTOMIZE**),  (for **Settings**), and  for **Language**. The following options appear in the display:
 - **English**
 - **Korean**
2. Use the navigation keys to highlight your language preference, then press the  key.

Airplane Mode

When set to **On**, the Airplane Mode icon () appears in the display, and Airplane Mode disables all radio functions of your device. This prevents you from receiving or making calls (except emergency calls), but allows you to use other features (such as the camera and the Tools) safely in sensitive environments, such as on board an aircraft.

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **CUSTOMIZE**),  (for **Settings**), and  for **Airplane Mode**. The following options appear in the display:
 - **On** — Disables the radio transmitter and receiver in your device
 - **Off** — Enables the radio transmitter and receiver in your device
2. Use the navigation keys to highlight the desired option, then press the  key to save your setting.

Section 8: SURF

Topics Covered

- SURF
 - Accessing Helio Portal
 - Using the SURF Browser
 - Using Links
 - How Browser Keys Work
-

This section outlines how to launch the SURF browser, how to navigate to other pages on the web, and how the keys on the keypad are used with the web application. Additionally, links to other sites are briefly discussed.

SURF

With SURF, you can conveniently surf the web and download ringtones and wallpapers using your device. Each time you launch the SURF browser, your device connects to the Internet and the service indicator icon () appears in the display.

Stored Web Content

SURF ends an Internet connection after a certain period of inactivity, however some information from your session remains stored in the device (if you leave your device turned on). You can access this information without reconnecting to the Internet. However, if you are viewing stored information, and you select a link to a site that was not accessed in your last session, you automatically re-connect to the Internet.

Accessing Helio Portal

1. In standby mode, do one of the following to launch **SURF**:
 - Press the Up navigation key.
 - Press the **MENU** (left) soft touch key (), then press  (for **SURF**).
The browser launches.
2. A list of categories (each representing one or more web sites) appears in the display.
3. Use the navigation keys to browse the categories.
4. Once the desired category is highlighted, press the  key to enter the category list.

Exit Helio Portal

- Press  to exit **SURF**.

Using the SURF Browser

When you use SURF, some of the keys operate differently than during a call. SURF presents on-screen items in any of the following ways:

- Text or numeric input.
- Links (embedded in content).
- Numbered options (some may not be numbered).
- Simple text.

You can act upon options or links by using the soft touch keys.

SURF soft touch keys

The bottom of the browser display is a bar that contains browser commands. The left and right (⋮) soft touch keys on the keypad are used to execute the command that appears above them in the display. These are called “soft touch keys” because their function changes depending on the application.

Using Links

Links have several purposes, such as jumping to a different page, to a different site, or even initiating a phone call. Links are shown inside of brackets ([]). You can normally use the left soft touch key (⋮) to select a link when it is highlighted.

How Browser Keys Work

The following table lists SURF browser keys and their functions.



navigation keys — Use to browse lists and options



CLR Key — A browse, back-up key. Press once to back up one page. Press and hold to go back to home page.

Press to clear the last number, letter, or symbol entered. Press and hold to completely clear the display.



Asterisk/Shift Key — Press before entering text to enable uppercase characters.



Last Key — Press to enter a zero (0), or to move to the last item in a menu.



Pound/Space Key — Press to insert a space when entering text.



Number 1 thru 9 — Use the number keys to select items in a menu if they are numbered.



End Key — Press to exit SURF and return the device to standby mode.



Left Soft Touch Key — Press to activate the command that appears above it in the display.



Right Soft Touch Key — Press to activate the command that appears above it in the display.

Section 9: SNAP

Topics Covered

- SNAP Menu
 - Camera
 - Video Camera
 - Zoom
 - Brightness
 - Your Albums
 - Photo Studio
 - Settings
 - Memory Info
-

Use your A303 device to take full color digital pictures and video clips, display them on your device's vivid color display, and instantly share them with family and friends. It's fun, and as easy to use as a traditional point-and-click camera or camcorder. This section explains how you can do the following:

- Take pictures and video clips with your device's built-in digital camera-video camera.
- Send and receive pictures and video clips taken with your device's camera-video camera.
- Set the several options associated with the camera-video camera that help you take crisp, clear pictures and video clips.

SNAP Menu

To access the **SNAP** menu:

1. In standby mode, press the **Menu** (left) soft touch key () , then press  for **SNAP**.

The following options appear in the display:

- **Camera** — Launches the camera.
- **Video Camera** — Launches the video camera.
- **Album** — Lets you access and manage the photo album on the device.
- **Helio Album** — Lets you access and manage the Helio photo album on the device.
- **Photo Studio** — Lets you modify individual photos in a selected photo album.
- **Settings** — Lets you set basic parameters for the camera and video camera.
- **Print Photos** — Lets you send photos to a USB or Bluetooth printer.
- **Memory Info** — Lets you quickly and easily review and manage your device memory usage.

Camera

Taking pictures with the built-in camera can be as simple as choosing a subject, using the display as the viewfinder to point the lens (located on the top rear of the device), and pressing a button.

Note: The Camera activates only when the device slide is open.

Taking Snap Shots

To take a picture using the current camera settings, do the following:

1. In standby mode, press and hold the **Camera** key () on the right side of the device. The message “**Starting Camera**” appears in the display followed by a camera view finder screen.

Note: You can also activate the camera by pressing the **Menu** (left) soft touch key () , then pressing  (for **SNAP**) and  for **Camera**.

You can switch from Camcorder mode to Camera mode by pressing the  key and selecting either mode.

Tip: With **Auto Save** set to **On**, the photos you take with the slide open are automatically saved in the Album. (See “Auto Save” on page 106 for more information.)

2. Using the display as a viewfinder, point the camera at your subject.
3. Press the  key or the **Camera** key () when the image that you wish to capture appears in the display.
4. To save the picture, press the **Save** key () .

Tip: You can change a number of the camera's settings to suit particular uses for your pictures. See Camera Options for more information.

Camera Options

The Camera Options let you adjust the default camera settings to suite available lighting, the subject of the photo, or the purpose of the photo. To access Camera Options, do the following:

1. In standby mode, press and hold the Camera key (). The camera viewfinder screen appears in the display.
2. Press the left soft touch key (). The following sub-menus appear in the display:
 - **View Settings**
 - **Resolution**
 - **Quality**
 - **White Balance**
 - **Lighting**
 - **Effects**
 - **Set Frame**
3. Use the **Left** and **Right** navigation keys to highlight the desired option and/or setting, then press the  key to save the selected setting.

View Settings

View Settings shows the current option settings: image Size, Quality, White Balance, and Lighting.

1. In camera mode, press the  key. The options menu bar appears in the display with the View Settings pop-up showing.

Resolution

Control the size (in bytes) of your pictures using the **Resolution** setting.

1. In camera mode, press the  key. The options menu bar appears in the display.
2. Use the Up and Down navigation keys to highlight **Image Size**. The following options appear in the display:
 - **1280 x 960** (pixels) • **640 x 480** (pixels) • **240 x 240** (pixels)
 - **800 x 600** (pixels) • **320 x 240** (pixels)
3. Use the navigation keys to highlight the desired resolution and press the  key. You're returned to the camera viewfinder screen.

Note: The resolution setting affects zoom capabilities. When resolution is set to **1280 x 960**, zoom is not available. When resolution is set to **800 x 600** and below, zoom settings x01 – x12 are available.

Quality

You can affect how much your photo is compressed, thereby reducing it's overall size (not to be confused with resolution).

1. In camera mode, press the Left soft touch key (⋮). The options menu bar appears in the display.
2. Use the Left and Right navigation keys to highlight **Quality**.
3. Use the Up and Down navigation keys to highlight **Super Fine**, **Fine**, or **Normal**.
4. Once the Quality setting of your choice is highlighted, press the (👉) key. You're returned to the camera viewfinder screen.

White Balance

White Balance allows you to adjust picture quality according to available light.

1. In camera mode, press the left soft touch key (⋮). The options menu bar appears in the display.
2. Use the Left and Right navigation keys to highlight **White Balance**. The name of the current White Balance setting appears in the second line of the display. The options are:
 - **Auto** — The camera automatically adjusts picture quality to available light.
 - **Daylight** — Use this setting when taking pictures in full sun.
 - **Cloudy** — Use this setting when taking pictures in cloudy conditions.
 - **Incandescent** — Use this setting when taking pictures under incandescent lights.
 - **Fluorescent** — Use this setting when taking pictures under fluorescent lights.
3. Use the Up and Down navigation keys to highlight the various White Balances and the effects they have on a picture.
4. When you decide on the White Balance you wish to use, press the (👉) key. The camera viewfinder screen appears in the display with your selected White Balance applied.

The next time you press the (👉) key, the camera applies the selected White Balance to your picture.

Lighting

1. In camera mode, press the Left soft touch key (⋮). The options menu bar appears in the display.
2. Use the Left and Right navigation keys to highlight **Lighting**. The following options appear in the display:
 - **Normal** — Adjusts exposure to the average light level over a large picture area.
 - **Spotlight** — Adjusts exposure to the light level over a small portion of the subject.
3. Use the Up and Down navigation keys to highlight the sampling area of your choice, then press the (👉) key. You're returned to the camera viewfinder screen.

When you take your next picture, the device's display previews your subject image with the measured exposure.

Effects

Change the look of your pictures with color **Effects**. Choose from five available settings such as Grayscale, Negative, and Sepia. The selected color Effect previews in the display before you take the picture.

1. In camera mode, press the Left soft touch key (). The options menu bar appears in the display.
2. Use the Left and Right navigation keys to highlight **Effects**. The following options appear in the display:

Note: Choose **Normal** to disable **Effects**.

- **Color** — Subjects and pictures appear with a normal hue.
 - **Grayscale** — Subjects and pictures appear in black and white.
 - **Sepia** — Subjects and pictures appear in a brownish-gray hue.
 - **Green** — Subjects and pictures appear in a greenish hue.
 - **Aqua** — Subjects and pictures appear in an aqua hue.
 - **Negative** — Subjects and pictures appear in inverted colors.
3. Use the Up and Down navigation keys to highlight the color effect of your choice is highlighted, then press the  key. You're returned to the camera viewfinder screen. When you take your next picture, the device's display previews your subject image with the selected color effect.

Set Frame

Set Frame lets you temporarily apply one of the preloaded picture frames in your device to characterize or enhance one or more pictures.

1. In camera mode, press the Left soft touch key (). The options menu bar appears in the display.
2. Use the Left and Right navigation keys to highlight **Set Frame**. The following options appear in the display:
 - **No Frame** — Lets you take photos without enhancing frames.
 - **Frame 1 – Frame 20** — These options apply any of a series of frames to succeeding photos.
3. Use the Up and Down navigation keys to highlight the desired frame, then press the  key. You're returned to the camera viewfinder screen with the selected frame applied to the viewfinder screen. When you take your next picture, the photo will include the selected frame.

Video Camera

Taking pictures and videos with the built-in camera-video camera can be as simple as choosing a subject, using the display as the viewfinder to point the lens (located on the top rear of the device), and pressing a button.

Note: The device's slide must be open for the camera and the video camera to work.

Taking Videos

To take a video using the current video camera settings, do the following:

1. In standby mode, momentarily press the Camera key () on the right side of the device. The **SNAP** menu appears in the display.
2. Use the Up and Down navigation keys to highlight the **Video Camera** option, then press the  key. The message "**Starting Video Camera**" appears in the display followed by the video camera viewfinder screen.

Note: You can also activate the camera by pressing the **Menu** (left) soft touch key () , then pressing  (for **SNAP**) and  for **Video Camera**.

You can switch from Camcorder mode to Camera mode by pressing the  key and selecting either mode.

Tip: With Auto Save set to On, the videos you take with the slide open are automatically saved in the Album. (See "Settings" on page 104 for more information.)

3. Using the display as a viewfinder, point the camera lens at your subject.
4. Press the  key or the Camera key () when the image that you wish to capture appears in the display. Recording continues until you press the  key or until the available memory fills up.
5. To save the picture, press the Save key ().

Video Camera Options

The Video Camera Options let you adjust the default video camera settings for the duration of the current session. You can temporarily adjust video camera settings to suite available lighting, the subject of the video, or the purpose of the video. To access the Video Camera Options, do the following:

1. In standby mode, momentarily press the **Camera** key () . The **SNAP** menu appears in the display.
2. Use the Up and Down navigation keys to highlight **Video Camera**, then press the  key. The video camera viewfinder screen appears in the display.

3. Press the  key. The following sub-menus appear in the display:
 - **View Settings**
 - **Frame Rate**
 - **White Balance**
 - **Record Sound**
 - **Effects**
4. Use the Left and Right navigation keys to highlight the desired option and/or setting, then press the  key to save the selected setting.

View Settings

View Settings shows the current option settings: Frame Rate, White Balance, Record Sound, and Effects setting.

1. In video camera mode, press the Left soft touch key (). The options menu bar appears in the display with the View Settings pop-up showing.

Frame Rate

One way to control the size (in bytes) of your video clips is to use the **Frame Rate** setting. The higher the frame rate, the smoother and more flicker-free are your video clips. The lower the frame rate, the smaller the video clip file.

1. In video camera mode, press the Left soft touch key (). The options menu bar appears in the display.
2. Use the Up and Down navigation keys to highlight **Frame Rate**. The following options appear in the display:
 - **14 fps** (frames per second)
 - **7 fps**
3. Use the navigation keys to highlight the desired resolution and press the  key. You're returned to the camera viewfinder screen.

White Balance

White Balance allows you to adjust video quality according to available light.

1. In video camera mode, press the Left soft touch key (). The options menu bar appears in the display.
2. Use the Left and Right navigation keys to highlight **White Balance**. The options are:
 - **Auto** — The camcorder automatically adjusts color balance to available light.
 - **Daylight** — Use this setting when recording video clips in full sun.
 - **Cloudy** — Use this setting when recording video clips in cloudy conditions.
 - **Incandescent** — Use this setting when recording video clips under incandescent lights.
 - **Fluorescent** — Use this setting when recording video clips under fluorescent lights.
3. Use the Up and Down navigation keys to show the various White Balances and the effects they have on a video image.

4. When you decide on the White Balance you wish to use, press the  key. The video camera viewfinder screen appears in the display with your selected White Balance applied.

The next time you press the  key, the video camera applies the selected White Balance to your video clip.

Record Sound

1. In video camera mode, press the Left soft touch key (). The options menu bar appears in the display.
2. Use the Left and Right navigation keys to highlight **Record Sound**. The options are:
 - **On** — Records sound with your video clip.
 - **Off** — Records a silent video clip (no sound).
3. When you decide on the Record Sound setting you wish to use, press the  key. The next time you press the  key, the video camera applies the selected Record Sound setting to your video clip.

Effects

Change the look of your video clips with color Effects. Choose from five available settings such as Sepia, Aqua, and Negative. The selected color effect previews in the display before you record a video.

1. In video camera mode, press the Left soft touch key (). The options menu bar appears in the display.
2. Use the Left and Right navigation keys to highlight **Effects**. The following options appear in the display:

Note: Choose **Color** to disable color Effects.

- **Color** — Subjects and video clips appear with a normal hue.
 - **Grayscale** — Subjects and video clips appear in black and white.
 - **Sepia** — Subjects and video clips appear in a brownish-gray hue.
 - **Green** — Subjects and video clips appear in a greenish hue.
 - **Aqua** — Subjects and video clips appear in an aqua hue.
 - **Negative** — Subjects and video clips appear in negative (reversed brightness) hue.
3. Use the Up and Down navigation keys to highlight the color tone of your choice is highlighted, then press the  key. You're returned to the video camera viewfinder screen.

When you record your next video, the device's display previews your subject image with the selected color effect.

Zoom

Zoom lets you temporarily enlarge the pictures and video clips you take. Increasing the **Zoom** value from x01 – x06/12 enlarges your pictures or videos (x01 is normal).

Note: The resolution setting affects zoom capabilities. When resolution is set to **1280 x 960**, zoom is not available. When resolution is set to **800 x 600** and below, zoom settings x01 – x12 are available.

- In camera or video camera viewfinder screen, use the Left and Right navigation keys to adjust the **Zoom** (the screen image enlarges to show the affects of your changes).
The next time you press the  key, the camera takes an enlarged picture or the video camera takes an enlarged video image according to your selected **Zoom** setting.

Brightness

Brightness lets you temporarily lighten the pictures you take. Increasing the **Brightness** (01 – 09) lightens your pictures (01 is normal).

- In camera or video camera viewfinder screen, use the Up and Down navigation keys to adjust the **Brightness** (the screen image lightens or darkens to show the affects of your changes).
The next time you press the  key, the camera takes a lighter or darker picture or the video recorder records a lighter or darker video clip according to your selected **Brightness** setting.

Your Albums

Album

Saved pictures and video clips are stored in the Album. You can browse the pictures and video clips one at a time (expanded mode), or browse several pictures and video clips at once in thumbnail format.

Managing Folders

1. In standby mode, momentarily press the Camera key () on the right side of the device. The **SNAP** menu appears in the display.
2. Use the Up and Down navigation keys to highlight **Album**, then press the  key. A list of the folders residing in the selected memory appears in the display.
3. Use the Up and Down navigation keys to highlight a folder and/or press the **Menu** (left) soft touch key (). The following options appear in the display:
 - **Rename** — Lets you edit or replace a folder's name.
 - **Lock Folder / Unlock** — Album only — Lets you allow open access to a folder or to password-restrict access to the folder.
 - **New Folder** — Lets you create a new folder.

- **Slide Show** — Lets you view the contents of a folder as a “slide show” and set the length of the pauses between photos and video clips.
 - **Delete Folder** — Lets you remove a selected folder.
4. Use the navigation keys to highlight the desired option. Press the  key to perform the function for the option or enter its sub menu.

Accessing Folders and Managing Files

1. In standby mode, momentarily press the Camera key () on the right side of the device. The **SNAP** menu appears in the display.
2. Use the Up and Down navigation keys to highlight **Album**, then press the  key. A list of the folders residing in the selected memory appears in the display.
3. Use the Up and Down navigation keys to highlight the folder you wish to open, then press the  key. Thumbnail images of any pictures or video clips that you've saved in the selected folder appear in the display.
4. Use the navigation keys to highlight a particular picture or video in the folder, then press the HelioUP  key to expand the selected picture or video clip to full-screen size.

Press the **HelioUP** (right) soft key () to send a selected picture or video to your Helio online album.

Press the **Menu** (left) soft touch key () while viewing pictures in the folder. The following options appear in the display:

- **Helio UP** — Transfer a copy of a selected picture or video to an on-line album.
 - **Pic Msg** — Send the selected picture or video as part of a Picture Message.
 - **Set As Screen** — Lets you set the selected picture as the background image (wallpaper) and lets you select the size of the image.
 - **Set As Ring** — videos only — Sets the selected video to play and indicate incoming calls.
 - **Move** — Relocate a selected picture or video clip from one folder to another and/or from one album to another.
 - **Rename** — Rename the currently displayed or highlighted picture or video clip.
 - **More Info** — View the Title, time and date created, size, and resolution of the currently highlighted or displayed picture or video clip.
 - **Photo Studio** — pictures only — Lets you edit the picture. (See “Photo Studio” on page 104 for more information.)
 - **View 4 / 9 Photos** — Displays thumbnail images in a 2 x 2 or 3 x 3 matrix.
 - **Sort** — Re-order the files in your album by Date, Size, File Name, or Type.
 - **Create Slide Show** — pictures only — Form a slide show for use as a background image (wallpaper) using previously selected pictures.
 - **Delete** — Erase a selected picture or video clip.
5. Use the navigation keys to highlight the desired option. Press the  key to perform the function for the option or enter its sub menu.

Helio Album

Helio Album allows you to upload photos from My Pics by sending pictures messages using UP (87 on the keypad) to your Helio Album.

Photo Studio

Photo Studio lets you alter your photos for special purposes (such as for photo IDs within the Contacts List) and lets you apply a number of photographic corrections and effects to your photos.

1. In standby mode, momentarily press the Camera key () on the right side of the device. The **SNAP** menu appears in the display.
2. Use the Up and Down navigation keys to highlight the **Photo Studio** option, then press the () key. The following options appear in the display:
 - **Filters** — Lets you select a photo and change the photo's contrast and color balance by applying a selected filter.
 - **Effects** — Lets you select a photo and change the photo's color balance by applying a selected color effect.
 - **Apply Stickers** — Lets you apply preloaded stickers to a photo.
 - **Create Stickers** — Lets you create your own stickers by using "cookie cutter" shapes.
 - **Movie Frame Grab** — Lets you capture and save a single frame from a video.
 - **Fade Between** — Lets you combine two selected photos.
 - **Adjust** — Lets you individually adjust the contrast, brightness, hue, and blur characteristics of a selected photo.
 - **Resize** — Lets you change the size of a selected photo to 800 x 600, 640 x 480, 320 x 240, or 176 x 144.
 - **Rotate+Flip** — Lets you rotate (clockwise or counter-clockwise) and/or flip (top-to-bottom or side-to-side) a selected photo.
 - **Overlay** — Lets you overlay one selected photo onto another.
3. Use the Up and Down navigation keys to highlight the desired option. Press the () key to perform the function for the option or enter its sub menu.

Settings

The Settings options let you select parameter values that affect future camera and video camera sessions, until you again change the parameter values.

1. In standby mode, momentarily press the Camera key () on the right side of the device. The **SNAP** menu appears in the display.
2. Use the Up and Down navigation keys to highlight the **Settings** option, then press the () key. The following options appear in the display:
 - **Album Lock** — Lets you allow open access to the Album and to the Helio Album or lets you password-restrict access to both the Album and the Helio Album.

- **Shutter Sound** — Lets you select shutter sounds for the camera and video camera or to have no shutter sounds.
 - **Block Calls** — Lets you block incoming calls while the camera or video camera is active.
 - **Auto Save** — Lets you elect to have the camera and video camera automatically save photos and videos when you take them or to have the options of saving, discarding, or sharing by mail photos and videos.
3. Use the Up and Down navigation keys to highlight the desired option. Press the  key to perform the function for the option or enter its sub menu.

Album Lock

1. In standby mode, momentarily press the Camera key () on the right side of the device. The **SNAP** menu appears in the display.
2. Use the Up and Down navigation keys to highlight the **Settings** option, then press the  key.
3. Use the Up and Down navigation keys to highlight the **Album Lock** option, then press the  key. The following settings appear in the display:
 - **On** — Prompts you to enter the device Lock Code to access a selected memory.
 - **Off** — Allows you unrestricted access to the Album and Hello Album.
4. Use the Up and Down navigation keys to highlight the desired option. Press the  key to perform the function for the option or enter its sub menu.

Shutter Sound

Choose No Sound or any of several different sounds that your device can play whenever you take a picture or start and stop recording a video clip. Aside from being a cool sound effect, Shutter Sounds acts as an audible reminder that your camera has taken a picture or that your video camera has started or stopped recording a video clip.

Camera

1. In standby mode, momentarily press the Camera key () on the right side of the device. The **SNAP** menu appears in the display.
2. Use the Up and Down navigation keys to highlight **Settings**, then press the  key.
3. Use the Up and Down navigation keys to highlight **Shutter Sound**, then press the  key.
4. Use the Up and Down navigation keys to highlight **Camera**, then press the  key. The following options appear in the display:
 - **Shutter Sound** — The sound the device plays when a picture is taken.
 - **Ready Tone** — The sound the device plays when you press the  key or Camera key () to take a picture.
 - **Self-Timer Sound** — Can be set to No Sound or Ding.
5. Use the Up and Down navigation keys to highlight a camera sound setting.

6. Use the Left and Right navigation keys to select the sound of your choice, then press the  key. You're returned to the **Settings** menu.

Video Camera

Start Sound

Choose from two different sounds whenever you begin video recording. Aside from being a cool sound effect, Start Sound acts as an audible reminder that your camcorder has begun recording a video.

1. In standby mode, momentarily press the Camera key () on the right side of the device. The **SNAP** menu appears in the display.
2. Use the Up and Down navigation keys to highlight **Settings**, then press the  key.
3. Use the Up and Down navigation keys to highlight **Shutter Sound**, then press the  key.
4. Use the Up and Down navigation keys to highlight **Video Camera**, then press the  key.
 - **Start Sound** — The sound your device plays when you start recording a video clip.
 - **End Sound** — The sound your device plays when you stop recording a video clip.
5. Use the Up and Down navigation keys to highlight a video camera sound setting.
6. Use the Left and Right navigation keys to select the sound of your choice, then press the  key. You're returned to the **Settings** menu.

Block Calls

When set to **On**, **Block Calls** stops your device receiving calls while the Camera or Video Camera is active.

1. In standby mode, momentarily press the Camera key () on the right side of the device. The **SNAP** menu appears in the display.
2. Use the Up and Down navigation keys to highlight **Settings**.
3. Use the Up and Down navigation keys to highlight **Block Calls**, then press the  key. The following options appear in the display:
 - **On** — The device blocks incoming calls while the camera/video camera is active.
 - **Off** — The device accepts incoming calls while the camera/video camera is active.
4. Use the Up and Down navigation keys to highlight the desired setting, then press the  key. You're returned to the **Settings** menu.

Auto Save

1. In standby mode, momentarily press the Camera key () on the right side of the device. The **SNAP** menu appears in the display.
2. Use the Up and Down navigation keys to highlight **Settings**.

- Use the Up and Down navigation keys to highlight **Auto Save**, then press the  key. The following options appear in the display:
 - On** — Your picture or video clip is automatically saved when you take a picture or end recording of a video clip.
 - Off** — You are given the option to SEND or Save a picture or video clip when you take a picture or end recording of a video clip.
- Use the **Up** and **Down** navigation keys to highlight the automatic save setting of your choice, then press the  key. You're returned to the **Settings** menu.

Point, Click, and Send Pictures

Take a picture and send it to anyone with a compatible device in a few easy steps.

- In standby mode, momentarily press the Camera key () on the right side of the device. The **SNAP** menu appears in the display.
- Use the Up and Down navigation keys to highlight **Camera**, then press the  key.
- Press the  key or the Camera key () to take a picture.
- Press the **SEND** (left) soft touch key (). The **File Name** pop-up appears in the display.
- Press the  key to accept the automatically assigned file name, or enter a new file name and press the  key. The **Compose** screen appears in the display.
- Enter the message text, then press the  key. (For more information, see "Section 13: MESSAGE" on page 134.)
- Enter the recipient phone number(s) or email address(es) using the keypad.
- Press the  key to save the address(es) and to send the Picture message to the intended recipients.

Print Photos

The Print Photos feature allows you to send a Photo to a USB or Bluetooth printer.

- Connect the phone to a USB or Bluetooth printer.

Note: To connect the phone to a USB printer use the USB data cable (included in the box). For more information about Bluetooth mode, see "Bluetooth" on page 87.

- In standby mode, press the **Menu** (left) soft touch key (), then press  for **SNAP**. The following options appear in the display:
 - Camera** — Launches the camera.
 - Video Camera** — Launches the video camera.
 - Album** — Lets you access and manage the photo album on the device.
 - Helio Album** — Lets you access and manage the Helio photo album on the device.
 - Photo Studio** — Lets you modify individual photos in a selected photo album.
 - Settings** — Lets you set basic parameters for the camera and video camera.

- **Print Photos** — Lets you send photos to a USB or Bluetooth printer.
 - **Memory Info** — Lets you quickly and easily review and manage your device memory usage.
2. Select **Print Photos** from the menu then highlight the USB Printer or Bluetooth Printer and press the  key.

The phone ignores all calls while printing to an external device.

Memory Info

Memory Info lets you quickly and easily review and manage your device memory usage.

To access **Memory Info**, do the following:

1. In standby mode, momentarily press the Camera key () on the right side of the device. The **SNAP** menu appears in the display.
2. Use the Up and Down navigation keys to highlight **Memory Info**, then press the  key. The following options appear in the display:
 - **Download Memory** — Lets you review used and available memory in your various media (photo and video albums) and download folders.
 - **System Memory** — Lets you review used and available memory in your Contacts list, Message folders, Organizer (Planner) folders, and Calls Logs.
 - **USB Disk** — Lets you review and manage files stored on your device.
3. Use the navigation keys to highlight the desired memory option, then press the  key to access that option.

Download Memory

1. In standby mode, momentarily press the Camera key () on the right side of the device. The **SNAP** menu appears in the display.
2. Use the Up and Down navigation keys to highlight **Memory Info**, then press the  key. The following options appear in the display:
3. Use the Up and Down navigation keys to highlight **Download Memory**, then press the  key. You're prompted to enter the password.

Note: The default password is '0000'.

4. Enter the password. The following options appear in the display:
 - **Photo + Video Album** memory usage
 - **Music + Videos** memory usage
 - **Contacts w Pics** memory usage
 - **Rings** memory usage
 - **Screens** memory usage
 - **Voice Memo** memory usage
 - **Etc.** memory usage

5. Use the Up and Down navigation keys to highlight the desired memory option, then press the  key to access that memory usage option.

System Memory

1. In standby mode, press the **Menu** (left) soft touch key () , then press  (for **VIDEO + MUSIC**),  for (**Memory Info**), and  for **System Memory**. The following options appear in the display:
 - **Name** memory usage
 - **Phone No.** memory usage
 - **Speed Dial** memory usage
 - **Group** memory usage
2. Use the Left and Right navigation keys to highlight the desired memory option, then press the  key to access that memory usage option.

USB Disk

1. In standby mode, momentarily press the Camera key () on the right side of the device. The **SNAP** menu appears in the display.
2. Use the Up and Down navigation keys to highlight **Memory Info**, then press the  key. The following options appear in the display:
3. Use the Up and Down navigation keys to highlight **USB Disk**, then press the  key. You're prompted to enter the password.

Note: The default password is '0000'.

4. Enter the password. The **Mass Storage** screen appears in the display, showing the following file list sorting options:
 - **Sort by Time**
 - **Sort by Size**
 - **Sort by Name**
 - **Sort by Type**
5. Use the Left and Right navigation keys to show the available applications list sorted according to the selected sorting option.

Section 10: VIDEO + MUSIC

Topics Covered

- Accessing VIDEO + MUSIC
 - Video
 - Download Video
 - Music
 - Download Music
 - Memory Info
 - Settings
-

This section outlines your device's multimedia functions and key features associated with multimedia.

Accessing VIDEO + MUSIC

1. In standby mode, press the **Menu** (left) soft touch key () , then press  for **VIDEO + MUSIC**. The following sub-menus appear in the display:
 - **Video** — Lets you select video clips for playback, review, or removal.
 - **Download Video** — Lets you select and download video clips via your Wireless Provider.
 - **Music** — Lets you select audio files for playback, review, or removal.
 - **Download Music** — Lets you select and download audio files via your Wireless Provider.
 - **Memory Info** — Lets you review and manage the memory in your device and in an optional Memory Card.
 - **Settings** — Lets you make playback adjustments.
2. Use the Up and Down navigation keys to highlight a sub-menu.
3. Press  to enter the highlighted sub-menu. The following sections describe the above listed sub-menus in greater detail.

Video

Video lets you playback and manage the video clips you have stored in internal and external memory.

1. In standby mode, press the **Menu** (left) soft touch key () , then press  (for **VIDEO + MUSIC**) and  for **Video**. The following sub-menus appear in the display:
 - **Recent**
 - **Playlists**
 - **Videos**
2. Use the Up and Down navigation keys to highlight a sub-menu, then press the  key. A list of video clips appears in the display.
3. Use the Up and Down navigation keys to highlight the video clip of your choice, then do one of the following:
 - Press the **Menu** (left) soft touch key () to access the following options:
 - **Sort Files**
 - **Add to Playlist**
 - **Rename**
 - **Remove**
 - **Lock on/off**
 - **Select All**
 - **File Info**
 - Press the  key to play a highlighted or selected video clip. Press  to end playback and return to the file list. Press  to end playback and return to standby mode.
 - Press the **Check** (right) soft touch key () to select a highlighted video clip for playback, addition to a playlist, or removal.

Download Video

Download Video lets you select and download video clips via your Wireless Provider.

1. In standby mode, press the **Menu** (left) soft touch key () , then press  (for **VIDEO + MUSIC**) and  for **Download Video>**. The browser screen appears in the display showing the Helio video download screen.

Music

Music lets you playback and manage the music files you have stored in internal and external memory.

1. In standby mode, press the **Menu** (left) soft touch key () , then press  (for **VIDEO + MUSIC**) and  for **Music**. The following sub-menus appear in the display:
 - **Recent**
 - **Playlists**
 - **Artist**
 - **Albums**
 - **Songs**
 - **Genres**
2. Use the Up and Down navigation keys to highlight a sub-menu, then press the  key. A list of music files appears in the display.
3. Use the Up and Down navigation keys to highlight the music file of your choice, the do one of the following:
 - Press the **Menu** (left) soft touch key () to access the following options:
 - **Sort Files**
 - **Add to Playlist**
 - **Rename**
 - **Remove**
 - **Lock On/Off**
 - **Select All**
 - **File Info**
 - Press the  key to play a highlighted or selected music file. Press  to end playback and return to the file list. Press  to end playback and return to standby mode.
 - Press the **Check** (right) soft touch key () to select a highlighted music file for playback, addition to a playlist, or removal.

Download Music

Download Music lets you select and download music files via your Wireless Provider.

1. In standby mode, press the **Menu** (left) soft touch key () , then press  (for **VIDEO + MUSIC**) and  for **Download Music>**. The browser screen appears in the display showing the Helio music download screen.

Memory Info

Memory Info lets you quickly and easily review and manage your device memory usage.

To access **Memory Info**, do the following:

1. In standby mode, press the **Menu** (left) soft touch key () , then press  (for **VIDEO + MUSIC**) and  for **Memory Info**. The following options appear in the display:
 - **Download Memory** — Lets you review used and available memory in your various media (photo and video albums) and download folders.
 - **System Memory** — Lets you review used and available memory in your Contacts list, Message folders, Organizer (Planner) folders, and Calls Logs.
 - **USB Disk** — Lets you review and manage applications stored on your device.
2. Use the navigation keys to highlight the desired memory option, then press the  key to save your setting.

Download Memory

1. In standby mode, press the **Menu** (left) soft touch key () , then press  (for **VIDEO + MUSIC**) and  for (**Memory Info**), and  for **Download Memory**. You're prompted to enter the password.

Note: The default password is '0000'.

2. Enter the password. The following options appear in the display:
 - **Photo + Video Album** memory usage
 - **Music + Videos** memory usage
 - **Contacts w Pics** memory usage
 - **Rings** memory usage
 - **Screens** memory usage
 - **Voice Memo** memory usage
 - **Etc.** memory usage
3. Use the Up and Down navigation keys to highlight the desired memory option, then press the  key to access the memory option.

System Memory

1. In standby mode, press the **Menu** (left) soft touch key () , then press  (for **VIDEO + MUSIC**) and  for (**Memory Info**), and  for **System Memory**. The following options appear in the display:
 - **Name** memory usage
 - **Phone No.** memory usage
 - **Speed Dial** memory usage
 - **Group** memory usage
2. Use the Left and Right navigation keys to highlight the desired memory option.

USB Disk

1. In standby mode, press the **Menu** (left) soft touch key () , then press  (for **VIDEO + MUSIC**) and  for (**Memory Info**), and  for **USB Disk**. You're prompted to enter the password.

Note: The default password is '0000'.

2. Enter the password. The **Mass Storage** screen appears in the display, showing the following file list sorting options:
 - **Sort by Time**
 - **Sort by Size**
 - **Sort by Name**
 - **Sort by Type**
3. Use the Left and Right navigation keys to show the available applications list sorted according to the selected sorting option.

Settings

1. In standby mode, press the **Menu** (left) soft touch key () , then press  (for **VIDEO + MUSIC**) and  for **Settings**. The following sub-menus appear in the display:
 - **Backlight Duration** — Lets you override the Backlight setting for your device during playback.
 - **Play Time** — Lets you select a specific length of time for playback to take place.
 - **Play Option** — Lets you select video/music file playback options.
2. Use the Up and Down navigation keys to highlight an option, then press the  key to enter the selected sub-menu.

Backlight Duration

1. In standby mode, press the **Menu** (left) soft touch key () , then press  (for **VIDEO + MUSIC**) and  (for **Settings**), and  for **Backlight Duration**. The following options appear in the display:
 - **Use Display Setting** — The Backlight remains on for the length of time specified for the Backlight setting. (See “Backlight” on page 79 for more information.)
 - **Always On** — The Backlight remains on for the duration of the current playback session.
2. Use the Up and Down navigation keys to highlight an option, then press the  key to save your selection.

Play Time

1. In standby mode, press the **Menu** (left) soft touch key () , then press  (for **VIDEO + MUSIC**) and  (for **Settings**), and  for **Play Time**. The following options appear in the display:
 - **Continuously**
 - **30 min**
 - **1 hr**
 - **1 hr 30 min**
 - **2 hr**
 - **3 hr**
2. Use the Up and Down navigation keys to highlight an option, then press the  key to save your selection.

Play Option

1. In standby mode, press the **Menu** (left) soft touch key () , then press  (for **VIDEO + MUSIC**) and  (for **Settings**), and  for **Play Option**. The following options appear in the display:
 - **Normal**
 - **Repeat One**
 - **Repeat All**
 - **Shuffle**
2. Use the Up and Down navigation keys to highlight an option, then press the  key to save your selection.

Section 11: GAMES

Topics Covered

- Finding Games
 - Managing Games
-

This section explains the GAMES feature which lets you download and play games right on your device.

Finding Games

With **GAMES**, you can download full featured games over the air.

1. In standby mode, press the **Right** navigation key to launch **GAMES**. The **GAMES** menu appears in the display with the **Download Game** option highlighted.

Note: You can also access **GAME** by pressing the **MENU** (left) soft touch key () , then pressing  for **GAME**.

2. Press the  key. The **Welcome** screen appears in the display, with a Featured Game highlighted. You have the following options:
 - Use the navigation keys to highlight the **Featured Game** you wish to download and follow the online directions.
 - Use the navigation keys to highlight the **Catalog** tab, then press . The **Catalog** page appears in the display.
 Use the navigation keys to browse the Catalog menu and to highlight the game you wish to download and follow the online directions.

Managing Games

Use the **MENU** within **GAMES** to manage, move, purchase games, and much more.

1. In standby mode, press the **Right** navigation key to launch **GAMES**. The **GAMES** menu appears in the display with the **Download Game** option highlighted.

Note: You can also access **GAME** by pressing the **MENU** (left) soft touch key () , then pressing  for **GAME**.

2. Press the **MENU** (left) soft touch key (). The games management menu pops-up in the display. Some or all of the following options are active in the menu, depending up the application selected:
 - **Move to Folder** — Lets you move a selected game between available folders.
 - **Rename** — Lets you change the name of the selected game or folder.
 - **Info** — Shows information about the selected game or folder, such as, name, number of items, version, and size.
 - **Delete** — Removes the selected game or folder.
 - **New Folder** — Lets you add a folder to your list, allowing you to organize (group) your games for easier access.
 - **Settings** — Lets you customize your gaming experience and manage your folder contents by adjusting the Sound Volume for a game or for all games in a folder, reviewing a Download Summary for a particular folder, or Delete All Files from a selected folder.
3. Use the Up and Down navigation keys to highlight an option, then press  to enter the option's sub-menu.

Rearranging Items in Your GAMES List

GAMES automatically inserts new games and folders into the **GAMES** list in alphabetical order. Use the **MOVE** soft touch key to change the position in the list for a selected game or folder.

1. In standby mode, press the **Right** navigation key to launch **GAMES**. The **GAMES** menu appears in the display with the **Download Game** option highlighted.
2. Use the Up and Down navigation keys to highlight a game or folder.
3. Press the **MOVE** (right) soft touch key (). Directional arrows appear to the right of the game/folder name.
4. Use the Up and Down navigation keys to move the highlighted game or folder up or down in the list.
5. Press  to save the moved item's new position.

Section 12: PLAN

Topics Covered

- Plan Menu
 - Calendar
 - To-do
 - Wake-up Call
 - Alarm
 - Calculator
 - World Time
 - Unit Converter
 - Notepad
 - Stopwatch
 - User Memory
 - Voice Memo
-

This section explains how to use your device's digital assistant functionality to schedule events, set reminders, create a "to-do" list, perform calculations, and more.

Plan Menu

Tools is a suite of Personal Digital Assistant (PDA) applications such as a Calendar, To-do List, and Memo Pad that run on your device. You can use your device to schedule events, set reminders, create a To-do list, perform calculations, and more with the functions provided by this useful feature.

Opening Plan Menu

1. In standby mode, press the **MENU** (left) soft touch key () , then press  for **PLAN**. The following sub-menus appear in the display:
 - **Calendar** — Lets you view the current, past, or future events in a monthly, weekly, or daily calendar layout.
 - **To-do** — Lets you create, review, and manage a “to-do” list of tasks.
 - **Wake-up Call** — Lets you set an alarm to go off once, periodically, or daily, at a specified time.
 - **Alarm** — Lets you set multiple alarms to go off once, periodically, or daily, at specified times.
 - **Calculator** — Lets you perform calculations, including addition, subtraction, multiplication, and division.
 - **World Time** — Lets you view the current time of day or night in another part of the world.
 - **Unit Converter** — Lets you convert currencies (according to the latest rates) and weights, measures, and temperatures from one system or increment to another.
 - **Notepad** — Lets you store and review useful information.
 - **Stopwatch** — Lets you view the amount of time.
 - **User Memory** — Lets you configure your device's PC connection, manage your files, and review and manage your device memory usage.
 - **Voice Memo** — Lets you record voice memos for later playback.

2. Use the navigation keys to highlight an application, then press the  key.

The following sections provide detailed descriptions of the applications and how to use their functions.

Calendar

Calendar lets you view the current, past, or future month in a monthly calendar layout. While viewing the calendar, the current date is highlighted and days with scheduled events are surrounded by a box.

View an event

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **PLAN**) and  for **Calendar**.

A calendar appears in the display with the current date highlighted. The month and year also appear.

2. Use the navigation keys to move around within the calendar.
 - Press the  key to open the highlighted date. If there are no events defined for the highlighted date, the **Schedule** screen appears in the display.
 - Press the Up volume key () to view previous months.
 - Press the Down volume key () to view future months.
 - Press the **Menu** (left) soft touch key () while viewing the calendar. The following options appear in the display:
 - **New Event** — Lets you define a new Event.
 - **New Anniversary** — Lets you define a new Anniversary.
 - **New Deadline** — Lets you define a new Deadline.
 - **Today's Date** — Lets you jump to today's date.
 - **Specific Date** — Lets you jump to any date you specify.
 - **Delete** — Lets you erase an event.
 - **Delete All** — Lets you erase all events.
 - **Display All by Type** — Lists events, grouped by type.
 - Use the navigation keys to highlight the desired option, then press the  key to select the highlighted option and perform the related process.

Add a New Event

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **PLAN**) and  for **Calendar**.
A calendar appears in the display with the current date highlighted. The month and year also appear.
2. Use the navigation keys to highlight the date of the new event, or press the **Menu** (left) soft touch key () , then press  for **Specific Date**, enter the desired date, and press the  key.
3. Press the **Menu** (left) soft touch key () , then use the navigation keys to highlight one of the following options:
 - **New Event**
 - **New Anniversary**
 - **New Deadline**

The appropriate new event screen appears in the display.

4. Use the navigation keys and the keypad to select and enter details of the event. (See "Section 5: Entering Text" on page 48 for more information.)
 - Use the keypad to enter dates and/or times for the event using 2 digits for day, month, hour, and minute entries. Use 4 digits for year entries.
When entering a time, to change between **AM** and **PM**, press the Left soft touch key () .
 - When you're finished entering event dates and times, use the Up and Down navigation keys to highlight the **Alarm/Alert** field.
Use the Left and Right navigation keys to select a type of alarm/alert.

- Use the Up and Down navigation keys to highlight the **Repeat** field.
Use the Left and Right navigation keys to set **Repeat** to **None** or to select a repeat interval.
 - Use the Up and Down navigation keys to highlight the Alarm/Alert time field.
Use the Left and Right navigation keys to select the amount of time before the event occurs that you wish to be notified by an alarm/alert.
 - Use the Up and Down navigation keys to highlight the **Ring/Vib** field.
Use the Left and Right navigation keys to select **Ring** or **Vibrate**.
 - Use the Up and Down navigation keys to highlight the **Ringtone** field.
Use the Left and Right navigation keys to select the desired ringtone.
 - Use the Up and Down navigation keys to highlight the **Holiday** field.
Use the Left and Right navigation keys to select **Unmarked**, **Marked**, or the desired icon.
5. Press the  key to store the event in your calendar. An alarm/alert will notify you prior to the event, if you set a notification alarm/alert.

To-do

To-do lets you create a task list. You can store, prioritize, and manage up to 20 To-do tasks.

Add or erase tasks

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **PLAN**) and  for **To-do**. The **To-do** screen appears in the display showing a list of any To-do tasks.
2. Press the **Menu** (left) soft touch key (). A pop-up menu with the following options appears in the display:
 - **New** — Only option if there are no tasks in the list — Add a task to the To-do list.
 - **Check Completed/Clear Completed** — Change the status of a highlighted task to completed/uncompleted.
 - **Sort by Deadline** — Re-present the tasks in order of their deadlines.
 - **Delete** — Erase the currently highlighted task.
 - **Delete All** — Erase all tasks from your To-do list.
3. Use the Up and Down navigation keys to highlight an option.
4. Press  to select the option.
5. Use the navigation keys and the keypad to change details of the task.
 - Use the keypad to enter or change the name of the task. (See “Section 5: Entering Text” on page 48 for more information.)
 - Press the Right soft touch key () to change the text entry mode.
 - Press the  key to delete a character.
 - Press and hold the  key to erase the current task name.
 - Use the Up and Down navigation keys to highlight the **Priority** field.
Use the Left and Right navigation keys to select **Normal**, **High**, or **Low** priority.

- Use the Up and Down navigation keys to highlight the **Alarm** field.
Use the Left and Right navigation keys to select **None**, **Today**, **1 day before**, **3 days before**, or **7 days before**.
 - Use the Up and Down navigation keys to highlight the alarm time field.
 - Use the Left and Right navigation keys and the keypad to change the time.
 - Use the Left and Right navigation keys to highlight the part-of-day indicator. Press the Left soft touch key (⋮) to change between **AM** and **PM**.
 - Use the Up and Down navigation keys to highlight the **Ring/Vib** field.
Use the Left and Right navigation keys to select **Ring**, **Vibrate**, **Vibrate then Ring**, or **Dual Ring**.
 - Use the Up and Down navigation keys to highlight the **Ringtone** field.
Use the Left and Right navigation keys to select the desired ringtone.
6. Press  to save the task.

Edit tasks

1. In standby mode, press the **MENU** (left) soft touch key (⋮), then press  (for **PLAN**) and  for **To-do**. The **To-do** screen appears in the display showing a list of any To-do tasks.
2. Use the Up and Down navigation keys to browse and highlight tasks in your To-do List. Events are presented in order of priority and date.
3. Press the  key to review a task.
4. Press the **Edit** (left) soft touch key (⋮) to change the task.
5. Use the navigation keys and the keypad to change details of the task. (See “Section 5: Entering Text” on page 48 and “Add or erase tasks” on page 122 for more information.)

Wake-up Call

Your device has a Wake-up Call alarm that can be set to go off once, or daily at a specified time. Once set, the Wake-up Call alarm is easy to change or turn off completely.

Note: The Wake-up Call alarm doesn't function when the device is turned off. If the time for the Wake-up Call alarm has elapsed, **Alert** is set for **Once**, and the device is off, the alarm occurs at the same time on the following day.

Set the Wake-up Call

1. In standby mode, press the **MENU** (left) soft touch key (⋮), then press  (for **PLAN**) and  for **Wake-up Call**.

The following options appear in the display:

- **Set**
- **Cancel**

2. Use the Left and Right navigation keys to check the **Set** option. The **Edit** soft touch key label begins flashing.
3. Press the **Edit** (left) soft touch key () . The Wake-up Call screen appears in the display with the **Time** field highlighted.
4. Enter the time for the Wake-up Call using the keypad.
5. Press the **AM/PM** (left) soft touch key () to select AM or PM.
6. Use the Up and Down navigation keys to highlight any other fields whose settings you wish to change.
7. Use the Left and Right navigation keys to change settings in fields other than **Time**.
8. Press the  key to save your changes.
9. Press the  key again to set the Wake-up Call alarm. “**Wake-up Call On**” appears in the display.

Cancel the Wake-up Call

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **PLAN**) and  for **Wake-up Call**. The following options appear in the display:
 - **Set**
 - **Cancel**
2. Use the Left and Right navigation keys to check the **Cancel** option, then press the  key. “**Wake-up Call Off**” appears in the display.

Alarm

Your device has an alarm clock that can be set to go off once, or daily at a specified time. Once set, the alarm clock is easy to change or turn off completely.

Note: The alarm doesn't function when the device is turned off. If the time for an alarm that was set for Once has elapsed and the device is off, the alarm occurs at the same time on the following day.

Set an Alarm

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **PLAN**) and  for **Alarm**. The **Alarm** screen appears in the display showing a list of any currently defined alarms.
2. Press the **Menu** (left) soft touch key () key. The following options pop-up in the display:
 - **New Alarm**
 - **Delete**
 - **Delete All**
3. Use the Up and Down navigation keys to highlight **New Alarm**.

- Press the  key. The following options appear in the **Alarm** screen:

- **Alarm**
- **Time**
- **Alert**
- **Ring/Vib**
- **Ring**

Only the **Alarm** option is active, highlighted, and set to **Cancel**.

- Use the Left and Right navigation keys to change the **Alarm** option setting to **Set**. The other options become active.

Use the Up and Down navigation keys to highlight options, and use the Left and Right navigation keys to select values for the options.

Use the keypad to enter the time for the alarm.

- Press the  key when you're finished entering and selecting option settings for the alarm. "**New Alarm Saved**" appears in the **Alarm** screen, a new alarm entry appears in the **Alarm** screen, and the alarm icon () appears in the top of the display.

When an Alarm Sounds

An animated alarm clock appears in the display and an alert sounds when the specified time for the alarm arrives.

- Press the volume key () , the Up and Down navigation keys, or the  key to silence the alarm.
 - If the alarm was set as a **Once** only alarm, the alarm icon disappears from the top of the display.
 - If the alarm was set as a **Daily** alarm, the alarm icon remains in the top of the display.
 - If the alarm was set as a **Mon-Fri**, the alarm icon remains in the top of the display.
 - If the alarm was set as a **Mon-Sat**, the alarm icon remains in the top of the display.
 - If the alarm was set as a **Sat-Sun** only alarm, the alarm icon remains in the top of the display.
 - If the alarm was set as a **Sunday** only alarm, the alarm icon remains in the top of the display.

Cancel an Alarm

- In standby mode, press the **MENU** (left) soft touch key () , then press  (for **PLAN**) and  for **Alarm**. The **Alarm** screen appears in the display showing a list of all currently defined alarms.
- Use the navigation keys to highlight an Alarm selection.

3. Press the  key. The following options appear in the **Alarm** screen:
 - **Alarm**
 - **Time**
 - **Alert**
 - **Ring/Vib**
 - **Ring**
4. Use the Left and Right navigation keys to change the **Alarm** option setting to **Off**. The other options become inactive.
5. Press the  key. "**Saved**" appears in the display, the alarm is cancelled, and the alarm icon () disappears from the top of the display.

Delete Alarms

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **PLAN**) and  for **Alarm**. The **Alarm** screen appears in the display showing a list of all currently defined alarms.
2. Use the Up and Down navigation keys to highlight a particular alarm to delete.
3. Press the **Menu** (left) soft touch key () key. The following options pop-up in the display:
 - **New Alarm**
 - **Delete**
 - **Delete All**
4. Use the Up and Down navigation keys to highlight **Delete** to delete a highlighted alarm.
 Use the Up and Down navigation keys to highlight **Delete All** to delete all defined alarms.
5. Press the  key.
 - If you selected the **Delete** option, "**Deleted**" appears in the display, the alarm is removed from the list.
 - If you selected the **Delete All** option, you are prompted to confirm deletion of all current alarms.
 - Use the Left and Right navigation keys to highlight **Yes** to confirm deletion of all current alarms, then press the  key. All defined alarms are erased.
 - Use the Left and Right navigation keys to highlight **No** to abort deletion of all current alarms, then press the  key.

Calculator

You can perform calculations, including addition, subtraction, multiplication, and division using your device.

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **PLAN**) and  for **Calculator**. The **Calculator** screen appears in the display.
2. Enter the first number in your equation using the keypad (numbers can be up to nine digits long).
 - Press the  key to enter a decimal point. (Calculator accepts up to 5 digits after a decimal point. When you enter a decimal number smaller than 1.0, Calculator automatically inserts a leading zero, for example, 25 becomes 0.25.)
 - Press the  key to change the sign for a number to a negative.
 - Press the **C** (left) soft touch key () to delete digits.
3. Use the navigation keys to set the type of calculation that you wish to perform. Your choices are as follows:
 - **Up** navigation key —  Multiplication
 - **Left** navigation key —  Addition
 - **OK** key —  Nested operation
 - **Right** navigation key —  Subtraction
 - **Down** navigation key —  Division
4. Use the keypad to enter the second number into your equation.
5. Press the **=** (right) soft touch key () to perform the calculation and view the result.

World Time

World Time lets you view the time of day or night in another part of the world. World Time displays time in the 24 different time zones around the world.

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **PLAN**) and  for **World Time**. A world map appears in the display.
2. Use the **Left** and **Right** navigation keys to display the time zone and city that you wish to view. The following time zones/cities are supported:

New York, Miami, Washington D.C Montreal, Atlanta	Caracas, La Paz, Santiago	Buenos Aires, Brasilia, Sao Paulo	Mid-Atlantic
Cape Verde	London, Lisbon	Rome, Paris, Berlin, Stockholm, Madrid, Frankfurt	Athens, Helsinki, Cairo, Ankara
Moscow, Riyadh	Abudhabi, Muscat	Tashkent, Ashkhabad	Alma-Ata, Katmandu

Bangkok, Jakarta, Yangon	Hong Kong, Beijing, Taipei, Singapore, Manila	Seoul, Tokyo, Pyongyang	Guam, Sydney, Brisbane
Okhotsk	Wellington, Oakland, Fiji	Samoa, Midway	Honolulu, Hawaii, Tahiti
Anchorage	Los Angeles, San Francisco, Vancouver, Seattle	Denver, Phoenix, Salt Lake City	Chicago, Dallas, Houston, Mexico City

- Press the **Menu** (left) soft touch key () select to display **(DST)** or not display **(Cancel DST)** Daylight Savings Time (DST) for the selected time zone.
- Do one of the following:
 - Press the  key to set the selected time zone as the home time zone for your device.
 - Press the  key to return to the PLAN menu.

Unit Converter

The conversion menu provides the following conversion categories:

- **Length**
- **Area**
- **Weight**
- **Volume**
- **Temperature**

To convert a currency, length, weight, volume, area, or temperature, do the following:

- In standby mode, press the **MENU** (left) soft touch key () , then press  (for **PLAN**) and  for **Unit Converter**. The **Unit Converter** screen appears in the display showing the following conversion options:
 - **cm** — Length
 - **cm²** — Area
 - **kg** — Weight
 - **ml** — Volume
 - **°C** — Temperature
- Use the Left and Right navigation keys to highlight the conversion tab you wish to use.
- Use the Up and Down navigation keys to highlight the **From** and **To** fields in succession. Use the Left and Right navigation keys to select the units to be converted.

4. Enter the quantity you want converted in the **From** field. The converted quantity appears in the **To** field.

Note: To include a decimal point, press the Left soft touch key ().

Notepad

You can create notes and store them in Memo Pad. You can't prioritize or set an alert for stored notes. Return to Memo Pad anytime you wish to review and edit your notes.

Add a Memo

1. In standby mode, press the **MENU** (left) soft touch key (), then press  (for **PLAN**) and  for **Notepad**. If you have any stored memos, they appear as a list in the **Memo** page. If this is your first time in **Notepad**, "**Empty**" appears in the display.
2. To add a new memo, press the **Menu** (left) soft touch key (). The following options pop-up in the display:
 - **New** — Lets you create a new memo.
 - **Search Notepad** — Lets you search for a memo based on a word or string of characters in that memo.
 - **Set Background** — Lets you choose a background image that will appear behind the new memo.
 - **Lock/Unlock Notepad** — Prevents/Allows deletion of the highlighted memo.
 - **Delete** — Deletes the highlighted memo, provided it is unlocked.
 - **Delete all** — Deletes all unlocked memos.
3. Use the Up and Down navigation keys to highlight **New**, then press the  key. A blank memo appears in the display.
4. Enter memo text using the keypad. (See "Section 5: Entering Text" on page 48 for more information.)
Press the Right soft touch key () to change text input mode.
5. When you're finished entering details for the memo, press the  key. The memo is saved.

View, Edit, and Erase Memos

1. In standby mode, press the **MENU** (left) soft touch key (), then press  (for **PLAN**) and  for **Notepad**. A list of any stored memos appears in the **Memo** page.
2. Use the Up and Down navigation keys to highlight a memo.
3. To view the memo, press the  key. The selected memo appears in the display.
 - To edit the memo you are viewing, press the **Edit** (left) soft touch key ().
 - Edit the memo using the keypad. (See "Section 5: Entering Text" on page 48 for more information.)

- To erase the memo you are viewing, press the  key.
 - Press the **Menu** (left) soft touch key () , then select the **Delete** option.

Stopwatch

You can use this menu to set a stopwatch.

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **PLAN**), and  for **Stopwatch**.
2. Press the **Start** (right) soft touch key () key to start, stop, and record the stopwatch count.
3. Press the **Reset** (left) soft touch key () to reset the stopwatch count to all zeros.

User Memory

User Memory lets you use your device as a USB flash drive.

Connect Device

To connect your device to a personal computer as a USB flash drive, do the following:

1. Use the Data Cable supplied with your device to connect it to a personal computer USB port.
2. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **PLAN**) and  for **User Memory**. The following options appear in the display:
 - **USB Disk Mode** — Lets you load files onto your device.
 - **File Manager** — Lets you manage loaded files.
 - **Memory Info** — Lets you review used and available memory. (See “Memory Info” on page 82 for more information.)
3. Use the Up and Down navigation keys to highlight **USB Disk Mode**.
4. Press the  key. You are prompted to enter the device password.

Note: The default password is '0000'.

5. Enter the device password using the keypad keys. **“To avoid data loss please eject device before removing it.”** pops-up in the display, followed by the **USB Disk Mode** screen.

You can now use the device like a USB flash drive.

Disconnect Device

To disconnect your device from a personal computer, do the following:

1. On your personal computer, eject (stop) the device-related USB drive.
2. On your A303 device, in the **USB Disk Mode** screen, press the **Menu** (left) soft touch key (). The following options appear in the display:
 - **Format Disk**
 - **Disconnect**
3. Use the Up and Down navigation keys to highlight **Disconnect**.
4. Press the  key. "**Disconnecting**" appears in the display followed by returning to the **User Memory** menu.
5. Disconnect the Data Cable from your device and the personal computer.

Managing Files

To manage User Memory files on your device, do the following:

1. In standby mode, press the **MENU** (left) soft touch key (), then press  (for **PLAN**),  (for **User Memory**), and  for **File Manager**. You are prompted to enter the device password.

Note: The default password is '0000'.

2. Enter the device password using the keypad keys. The **File Viewer** screen appears in the display.
3. Use the Up and Down navigation keys to highlight a file, then press the **Menu** (left) soft touch key (). The following options appear in the display:
 - **Rename** — Lets you change the name of the highlighted file.
 - **More Information** — Lets you view information about the highlighted file.
 - **Delete** — Lets you delete the highlighted file.
 - **Delete All** — Lets you delete all the files in User Memory.
4. Use the Up and Down navigation keys to highlight the desired option, then press the  key to launch the highlighted option.

Voice Memo

You can use your device to record voice memos for later playback.

Note: The maximum length for a single voice memo is 30 minutes.

You can save as many voice memos as will fit in the empty memory capacity.

Record a Voice Memo

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **PLAN**) and  for **Voice Memo**. The following options appear in the display:
 - **Record Voice Memo**
 - **Review Voice Memo**
2. Use the Up and Down navigation keys to highlight **Record Voice Memo**.
3. Press the  key. The **Record Memo** screen appears in the display.
4. Press the Up navigation key, then start speaking. As it is recording the device displays a timer that shows the recording time being used.
 - To pause the memo, press the Up navigation key.
 - To continue recording, press the Up navigation key again.
5. Press the Down navigation key once you're finished recording. The following options appear in the display:
 - **Review**
 - **Record Over**
 - **Save**
6. Use the Up and Down navigation keys to highlight **Save**, then press the  key. The Memo Title window pops-up in the display.
7. Use the keypad keys to enter a title for your voice memo. (See "Section 5: Entering Text" on page 48 for more information.)
8. Press the  key. "Saved" pops-up in the display, and you are returned to the **Voice Memo** menu.

Review Voice Memos

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **PLAN**) and  (for **Voice Memo**), and  for **Review Voice Memo**. The **MemoBox** screen appears in the display listing saved voice memos.
2. Use the navigation keys to highlight the voice memo you wish to review.
3. Press the  key to play the voice memo.
 - To pause the memo, press the  key. Press the  key again to restart playing the memo.When the voice memo finishes playing, the selected voice memo remains highlighted in the list of sound files.
4. For other options, press the **Menu** (left) soft touch key () . The following options appear in the display:
 - **Play**
 - **Play All**
 - **Rename**
 - **Info**

- **Delete**
- **Delete All**

Erase One Voice Memo

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **PLAN**) and  (for **Voice Memo**), and  for **Review Voice Memo**. The **MemoBox** screen appears in the display listing saved voice memos.
2. Use the navigation keys to highlight the voice memo you wish to erase.
3. Press the **Menu** (left) soft touch key () . The following options appear in the display:
 - **Play**
 - **Play All**
 - **Rename**
 - **Info**
 - **Delete**
 - **Delete All**
4. Use the Up and Down navigation keys to highlight **Delete**.
5. Press the  key to delete the highlighted voice memo. “**Deleted**” pops-up in the display.

Erase All Voice Memos at One Time

1. In standby mode, press the **MENU** (left) soft touch key () , then press  (for **PLAN**) and  (for **Voice Memo**), and  for **Review Voice Memo**. The **MemoBox** screen appears in the display listing saved voice memos.
2. Press the **Menu** (left) soft touch key () . The following options appear in the display:
 - **Play**
 - **Play All**
 - **Rename**
 - **Info**
 - **Delete**
 - **Delete All**
3. Use the Up and Down navigation keys to highlight **Delete All**.
4. Press the  key. “**Delete All?**” pops-up in the display, prompting you to confirm the deletion.
5. Use the Left and Right navigation keys to highlight one of the following options:
 - **Yes** — Deletes all of the voice memos.
 - **No** — Keeps all of the voice memos.
6. Press the  key.

Section 13: MESSAGE

Topics Covered

- Creating and Sending New Messages
 - Receiving New Messages
 - Message/Media Boxes
 - E-mail
 - Instant Messages
 - Voicemail
 - Message Log
-

This section explains how to create, send, receive, and view different types of messages. This section also describes the features and functionality associated with messaging.

Creating and Sending New Messages

This section guides you through procedures for creating and sending text messages, picture messages, and video messages.

Creating and Sending a Text Message

1. In standby mode, press the Down navigation key (MESSAGE shortcut), then press  for **Write Text Message**. The **Text Message** screen appears in the display showing the Text field.

Tip: You can also access the Messages menu by pressing the **Menu** (left) soft touch key (), and then press  for **MESSAGE**.

2. Enter the text for your message using the keypad. (See “Section 5: Entering Text” on page 48 for more information.)
3. Press the right soft touch key () to change to one of the following text entry methods:
 - **T9 Word**
 - **123**
 - **Symbol**
 - **KOR**
 - **Abc**
4. Press the **Menu** (left) soft touch key () to access the following message composition options:
 - **Quick Text** — Select and add precomposed text to your message.
 - **Add Contact Info** — Find and add a Contact's name and number to your message.
 - **Save to Drafts** — Saves your text message to the Draft box.
 - **Cancel Message** — Discards your text message without saving to the Draft box.
 - **Large Text Mode** — Opens/closes a magnified text pop-up. Provides a close-up view of the text as you enter it.
5. Once you're finished composing your message, press the  key. The **Select Recipients** list appears in the display.
6. Press the **Menu** (left) soft touch key () to access the following message addressing options:
 - **View CallLog** — Select one or more recent calls and add the name(s) and number(s) to the **Select Recipients** list for this message.
 - **Find Contact** — Lets you search for Contacts by name or by group and add the name(s) and number(s) to the **Select Recipients** list for this message.
 - **Save to Drafts** — Saves your text message to the Draft box.
 - **Cancel Message** — Discards your text message without saving to the Draft box.

7. When you are finished addressing your message, press the  key to send your message.

Creating and Sending a Picture Message

1. In standby mode, press the Down navigation key (MESSAGE shortcut), then press  for **Write Pic. Message**. The **Compose** screen appears in the display with the text field highlighted.

Tip: You can also access the Messages menu by pressing the **Menu** (left) soft touch key (), and then press  for **MESSAGE**.

2. Enter the text for your message using the keypad. (See “Section 5: Entering Text” on page 48 for more information.)
3. To add a background image to your message, use the navigation keys to highlight **Backgrounds**, then press the  key. The **Backgrounds** list appears in the display showing the following options:
 - **Image Background** — Lets you apply a pre-loaded image as a message background.
 - **Photo Background** — Lets you apply one of your photos as a message background.
 - **Color Background** — Lets you change the message background color.
 - **No Background** — Lets you restore the message background to the default color.

Use the navigation keys to select an option, then press the  key to access the related sub-menu or to invoke the related function.

4. To change the text color in your message, use the navigation keys to highlight **Font Color**, then press the  key. The **Color** list pops-up in the display.

Use the navigation keys to select a color, then press the  key to apply the selected color to succeeding text entries in your message.

5. To add a file to your message, use the navigation keys to highlight the **Add** field, then press the **Add** (left) soft touch key (). The following options pop-up in the display:
 - **Add Photo** — Lets you add one of your photos to your message.
 - **Add Music** — Lets you add a music file to your message.
 - **Add Video Rec** — Lets you add a video clip to your message.
 - **Delete Media** — Removes all photo, music, and/or video files from your message.

Use the navigation keys to select an option, then press the  key to access the related sub-menu or to invoke the related function.

6. To see your message as the recipient(s) will see it, press the **Preview** (right) soft touch key (). Press the  key to return to the **Compose** screen.
7. To address your message, press the  key. The first Recipient field becomes highlighted.

8. Enter a recipient's number or press the **To:** (left) soft touch key (). The following options pop-up in the display:
 - **Enter Email** — Lets you enter a recipient's email address.
 - **Search by Group** — Lets you address your message to some or all Contacts in the same Group.
 - **Contacts** — Lets you find and address your message to one of your Contacts.
9. Once you're finished composing your picture message, press the  key to **Send** the message.

Creating and an Sending Instant Message

1. In standby mode, press the Down navigation key (MESSAGE shortcut), then press  (for **Instant Messages**) and for Write Email. The screen appears in the display with the field highlighted.

Creating and Sending an Email Message

1. In standby mode, press the Down navigation key (MESSAGE shortcut), then press  (for **Email**) and  for Write Email. The **Write E-mail** screen appears in the display with the **Subject** field highlighted.
2. Enter the text for your message Subject using the keypad. (See "Section 5: Entering Text" on page 48 for more information.)
3. When you finish entering a Subject, press the  key. "**Write Message**" appears in the display, and the message text field becomes highlighted.
4. Press the **Menu** (left) soft touch key () to access the following message text options:
 - **Word** — Select and insert precomposed text into your email message.
 - **Load Memo** — Lets you insert text from one of your memos into your email message.
 - **Add PhoneNumber** — Find and insert a Contact's name and number into your email message.
 - **Save to Draft** — Lets you save your message to the Draft box for later editing and sending.
 - **Cancel E-mail** — Discards your email message without saving it to the Draft box.

Use the navigation keys to select an option, then press the  key to access the related sub-menu or to invoke the related function.

5. When you finish entering message text, press the  key. The **Receiver Address** fields appear in the display.
6. Press the **Menu** (left) soft touch key () to access the following message addressing options:
 - **Common E-mail Addr.** — Lets you select a frequently-used domain name to append to the intended recipient's email account ID.
 - **Search Contacts** — Lets you find a Contact and add the Contact's name and number as a message recipient.

- **Search Group** — Lets you add the names and numbers of one or more Contacts in a Group as message recipients.
 - **Recent Address** — Lets you add the email address from a recent message as a message recipient.
 - **Enter My E-mail** — Lets you add your own email address as a message recipient.
 - **Save to Draft** — Lets you save your message to the Draft box for later editing and sending.
 - **Cancel E-mail** — Discards your email message without saving it to the Draft box.
7. When you are finished addressing your message, press the  key to send your message.

Receiving New Messages

When you receive a message in standby mode, an alert sounds (unless turned off), the closed envelope icon () appears in the display, and a **New Msg** window pops-up in the display showing the date and time of the message and the message contents.

- You can close the message by pressing the  key or the  key.
- You can press the **Menu** (left) soft touch key () and Call the sender or Reply to, Forward, Delete, Save Contact Number from, or Save the message to My folder. You can also review your Message List.

Use the navigation keys to highlight the desired option and press the  key.

Receive Messages While in a Call

When you receive a message while in a call, the closed envelope icon () appears in the display, and a **New Msg** window pops-up in the display showing the date and time of the message and the message contents.

- You can close the message by pressing the  key or the  key.
- You can press the **Menu** (left) soft touch key () and Call the sender or Reply to, Forward, Delete, Save Contact Number from, or Save the message to My folder. You can also review your Message List.

Use the navigation keys to highlight the desired option and press the  key.

Messages and Lock Mode

Your device can still receive messages while in Lock Mode. The time and date of the message appear in the display, but you cannot access the message until you enter the lock code. (See ‘Phone Lock’ on page 85 for more information.)

Message/Media Boxes

The A303 device stores copies of all of your messages and/or media from your messages, except those that you cancel. Messages of each type and picture message media are stored in the following boxes:

- Inbox
- Sent/Outbox/Outgoing
- Drafts
- Timed (text messages only)
- Saved (text messages only)
- Media Box (picture messages only)
- Junk (text messages only)

Inbox

Received messages other than Email and Voice Mail are stored in an Inbox on your device.

1. In standby mode, press the Down navigation key (MESSAGE shortcut), then do one of the following:
 - Press  (for **Text Messages**) and  for **Inbox**. The **Inbox** screen appears in the display listing received Text messages.
 - Press  (for **Pic. Messages**) and  for **Inbox**. The **Inbox** screen appears in the display listing received Picture messages.
2. Use the navigation keys to highlight a message, then do one of the following:
 - Press the  key to view the highlighted message, then proceed to Step 3.
 - Press the **Menu** (left) soft touch key (). The following options appear in the display:
 - **Call** — Lets you call the sender of a message.
 - **Reply** — Lets you reply to a message.
 - **Forward** — Lets you forward the message to Contacts, other mobile phone numbers, and/or Email addresses.
 - **Protection On/Off** — Blocks or allows deletion of the highlighted message.
 - **Add to Junk** — Blocks further messages from the sender of the highlighted message.
 - **Sort Messages** — Sort the messages in the Inbox by date and time received, sender, priority, or message size.
 - **Save Message** — Save the highlighted message to an Inside folder on your device or to an Outside folder on a memory card. This lets you keep important messages and re-use message box space for new messages.
 - **Delete** — Deletes the highlighted message from the Inbox.
 - **Delete All** — Deletes all messages from the Inbox.
 - **Extract** — Picture messages only — Saves pictures, sounds files, and video clips to the Media Box.

Use the navigation keys to highlight an option. Press the  key to perform the function for the highlighted option.

3. While viewing a selected message, do one of the following:

- Press the **Menu** (left) soft touch key () . The following options appear in the display:
 - **Call** — Lets you call the sender of a message.
 - **Reply** — Lets you reply to this message.
 - **Forward** — Lets you forward this message to Contacts, other mobile phone numbers, and/or Email addresses.
 - **Delete** — Deletes this message from the Inbox.
 - **Protection On/Off** — Blocks or allows deletion of this message.
 - **Save Contact Number** — Lets you add the addressee numbers or Email addresses to your Contacts list.
 - **Save Message** — Save the highlighted message to an Inside folder on your device or to an Outside folder on a memory card. This lets you keep important messages and re-use message box space for new messages.
 - **Save Quick Text** — Saves the message text as a Favorite/Quick Text entry.
 - **Extract** — Picture messages only — Saves pictures, sounds files, and video clips to the Media Box.
- Press the  key to return to the previous menu.

Sent Box/Outbox/Outgoing

Your device stores outgoing messages in the Sent box, but only if the messages were successfully sent to their addressees. Messages that fail to be sent are saved in the Drafts box.

1. In standby mode, press the Down navigation key (MESSAGE shortcut), then do one of the following:

- Press  (for **Text Messages**) and  for **Sent**. The **Sent** screen appears in the display listing sent Text messages.
- Press  (for **Pic. Messages**) and  for **Outbox**. The **Outbox** screen appears in the display listing sent Picture messages.

2. Use the navigation keys to highlight a message, then do one of the following:

- Press the  key to view the highlighted message, then proceed to Step 3.
- Press the **Menu** (left) soft touch key () . The following options appear in the display:
 - **Forward** — Send the highlighted message to another addressee.
 - **Edit/Send** — Send the highlighted message to another addressee.
 - **Delete** — Deletes the highlighted message from the Sent box/Outbox/Outgoing box.
 - **Sort** — Sort the messages in the Sent box/Outbox/Outgoing box by date and time received, sender, priority, or message size.
 - **Recipient** — View the time and date the message was sent and the recipient number/email address.
 - **Save Message** — Save the message text as a Favorite/Quick Text.
 - **Delete All** — Deletes all messages from the Sent box/Outbox/Outgoing box.

Use the navigation keys to highlight an option. Press the  key to perform the function for the highlighted option.

- Press the  key to return to the previous menu.
3. While viewing a selected message, do one of the following:
- Press the **Menu** (left) soft touch key (). The following options appear in the display:
 - **Forward** — Send the highlighted message to another addressee.
 - **Delete** — Deletes the highlighted message from the Sent box/Outbox/Outgoing box.
 - **Recipient** — View the time and date the message was sent and the recipient number/email address.
 - **Save to My Folder** — Save the highlighted message to an Inside folder on your device or to an Outside folder on a memory card. This lets you keep important messages and re-use message box space for new messages.
 - **Save Message** — Save the message text as a Favorite/Quick Text.
 - **Save Phone Number** — Lets you add the addressee numbers or Email addresses to your Contacts list.
- Use the navigation keys to highlight an option. Press the  key to perform the function for the highlighted option.
- Press the  key to return to the previous menu.

Drafts Box

Messages in the Drafts box are those that have been composed but not sent or that fail to be sent. You can return to the Drafts box at any time to view, edit, or send a draft message.

1. In standby mode, press the Down navigation key (MESSAGE shortcut), then do one of the following:
 - Press  (for **Text Messages**) and  for **Drafts**. The **Draft** screen appears in the display listing draft Text messages.
 - Press  (for **Pic. Messages**) and  for **Drafts**. The **Drafts** screen appears in the display listing draft Picture messages.
2. Use the navigation keys to highlight the message that you wish to view/edit/re-send, then do one of the following:
 - Press the  key to view the highlighted message, then one of the following screens appears in the display:
 - **Text Message** screen showing the **Text** field.
 - **Compose** (Picture message) screen showing the **Recipient** list. Change or add numbers and addresses, then press the  key.
 - **Draft** (Email) screen with the **Subject** field highlighted.

Proceed to Step 3.

 - Press the **Menu** (left) soft touch key (). The following options appear in the display:
 - **Re-Send / Resend** — Send the highlighted message again to the current addressee(s).
 - **Delete** — Deletes the highlighted message from the Drafts box.
 - **Sort** — Sort the messages in the Drafts box by date and time received, sender, priority, or message size.
 - **Delete All** — Erase all messages in the Drafts box.

Use the navigation keys to highlight an option. Press the  key to perform the function for the highlighted option.

- Press the  key to return to the previous menu.
3. In the **Text Message/Compose/Draft** screen, do the following:
 - Enter or change the **Subject** and/or the message text using the keypad. (See “Section 5: Entering Text” on page 48 for more information.)
 - Picture messages only — Add, change, or delete pictures, sounds files, and video clips in the highlighted message.
 4. Once you're finished composing your message, do one of the following:
 - Press the  key to send your message.
 - Press the  key to exit the message. You are prompted to save your changed message to the Drafts box.

Erasing Messages

You can erase any or all of the messages in each of your message boxes.

1. In standby mode, press the Down navigation key (MESSAGE shortcut), then use the Up and Down navigation keys to highlight one of the following message types:
 - **Text Messages**
 - **Pic. Messages**
2. Use the navigation keys to highlight the type of messages that you wish to delete.
3. Press the  key to select the highlighted message type. Some or all of the following message box types appear in the display:
 - **Inbox**
 - **Sent**
 - **Drafts**
 - **Timed** (text messages only)
 - **Saved** (text messages only)
 - **Media Box** (picture messages only)
 - **Junk** (text messages only)
4. Use the navigation keys to highlight the box containing the messages that you wish to delete.
5. Press the  key to select the highlighted message box.
6. If desired, use the Up and Down navigation keys to highlight a particular message to be deleted.
7. Press the **Menu** (left) soft touch key () , highlight the **Delete / Delete All** option, then press the  key. You are prompted to confirm the erasure of all messages in the folder.
8. Use the Left and Right navigation keys to highlight **No** to cancel deleting any messages, or highlight **Yes** to delete one or all messages from the selected message box.

9. Press the  key to complete the cancellation or deletion.

Message Settings

Text Message Settings

1. In standby mode, press the Down navigation key (MESSAGE shortcut), then press  (for **Text Messages**) and  for **Settings**. The following Text message options appear in the display:
 - **Alerts** — Lets you enable and select a distinctive tone or melody to alert you of incoming Text messages.
 - **Quick Text** — Lets you compose and edit text for inclusion in your Text messages.
 - **Junk Filter** — Lets you enable/disable blocking of Text messages from specific phone numbers and/or containing specific text. Also lets you maintain your list of Restricted numbers and Restricted text. Junk mail is stored in the Junk Mail box, if you wish to review it before deleting it.
 - **Select Stationery** — Lets you select preloaded stationery as a background for your Picture messages.
2. Use the navigation keys to highlight the desired sub-menu.
3. Press the  key to enter the sub-menu and change the selected Text message settings.

Picture Message Settings

1. In standby mode, press the Down navigation key (MESSAGE shortcut), then press  (for **Pic. Message**) and  for **Settings**. The Settings screen appears in the display showing the following options:
 - **Background** — Lets you select an image, a photo, or a color as a background for your Picture messages.
 - **Font Color** — Lets you select a default color for the text in your Picture messages.
 - **Msg Rcv Alert** — Lets you enable and select a distinctive tone or melody to alert you of incoming Picture messages.
 - **Junk Filter** — Lets you enable/disable blocking of Picture messages from specific phone numbers. Also lets you maintain your list of blocked numbers.
 - **Photo Size** — Lets you select whether A303 is to automatically reduce the size of pictures you include in your Picture messages.
 - **Msg Auto Save** — Lets you select whether your device automatically saves canceled Picture messages.
2. Use the navigation keys to highlight the desired sub-menu.
3. Press the  key to enter the sub-menu and change the selected message settings.

Instant Messages

- In standby mode, press the **Down** navigation key (MESSAGE shortcut), then press  (for **Instant Messages**). A browser screen appears in the display showing Instant Messaging options.

Note: Contact your Wireless Provider for information about subscribing to and accessing Instant Messaging.

E-mail

- In standby mode, press the **Down** navigation key (MESSAGE shortcut), then press  (for **E-mail**). A browser screen appears in the display showing E-mail options.

Note: Contact your Wireless Provider for information about subscribing to and accessing E-mail.

Voicemail

Voicemail allows callers to leave voice messages in your voice mailbox, and lets you review, play, and delete your voice messages any time you are in your Carrier's network coverage area.

New voice messages in your voice mailbox cause your device to plan an alert tone and show an icon at the top of the display.

1. In standby mode, press the **Down** navigation key (MESSAGE shortcut), then press  (for **Voicemail**). The following options appear in the display:
 - **Call Voicemail** — Dials your voice mailbox and lets you listen to your voice messages.

Note: You can, in standby mode, also press and hold the  key to dial your voice mailbox.

- **Clear Envelope** — Removes the Voicemail icon from the display.
2. Use the **Up** and **Down** navigation keys to highlight the desired option. Press the  key to launch the highlighted option.

Voice Mail Setup

Before callers can leave voice mail messages, you must first set up your account. See "Setting Up Your Voice Mail" on page 11 for more information.

Checking your Voicemail

1. In standby mode, press and hold the  key until you're connected to the voice mail system. A recorded message prompts you for a password.
2. Enter your password, then follow the recorded prompts, to listen to your voice message, change administrative options, and so on.

Message Log

Your A303 device keeps running totals of all messages received and sent.

Recent Message Log

The Recent Message Log lists the 20 most recent messages (incoming and outgoing).

1. In standby mode, press the Down navigation key (MESSAGE shortcut), then press  (for **Message Log**) and  for **Recent Message Log**. The **Recent Message Log** screen appears in the display showing a list of the most recent messages.

Tip: You can also access the Messages menu by pressing the **Menu** (left) soft touch key () , and then press  for **MESSAGE**.

2. To view a message, use the Up and Down navigation keys to highlight a message, then press the  key to view the message details.
 - Use the Left and Right navigation keys to view details of other recent messages.
 - Press the **Menu** (left) soft touch key () to access the following options:
 - **Send Message** — Lets you send a message to the originator/recipient of the message you are reviewing.
 - **Add to Blocked** — Add the number of the originator/recipient of the message you are reviewing to your Call Ignored list. (See “Call Block” on page 81 for more information.)
 - **Save Contact Number** — Add the number of the originator/recipient of the message you are reviewing to your Contacts list. (See “Saving a Number from a Calls Log” on page 56 for more information.)
 - **Delete** — Delete the highlighted message you are reviewing.
 - **Delete All** — Delete all messages from the Recent Message Log.
 - Press the  key to return to the **Recent Message Log** screen.
3. Use the Up and Down navigation keys to view details of other recent messages.

All Message

The All Message log shows counts of all messages, by type — both sent and received, since the last time you cleared the counters.

1. In standby mode, press the Down navigation key (MESSAGE shortcut), then press  (for **Message Log**) and  for **All Message**. The **All Messages** screen appears in the display showing counts of all text messages sent and received.

Tip: You can also access the Messages menu by pressing the **Menu** (left) soft touch key () , and then press  for **MESSAGE**.

2. Use the Up and Down navigation keys to show other message counts.
3. Press the **Clear** (left) soft touch key () to reset the counters to zero.

Message log for This Month

The Message log for This Month shows counts of all messages, by type — both sent and received, since the beginning of this month.

1. In standby mode, press the Down navigation key (MESSAGE shortcut), then press  (for **Message Log**) and  for **This Month**. The **This Month** screen appears in the display showing counts of all text messages sent and received this month.

Tip: You can also access the Messages menu by pressing the **Menu** (left) soft touch key () , and then press  for **MESSAGE**.

2. Use the Up and Down navigation keys to show other message counts.
3. Press the **Clear** (left) soft touch key () to reset the counters to zero.

Section 14: APPS

Topics Covered

- Finding Applications
 - Managing Applications
-

This section explains the APPS feature which lets you identify, purchase, and download useful applications to your device.

Finding Applications

With **APPS**, you can download full featured applications over the air.

1. In standby mode, press the **Right** navigation key to launch **GAME**, then press the **Right** or **Left** navigation key to launch **APPS**. The **APPS** menu appears in the display with the **Download App** option highlighted.

Note: You can also access **APPS** by pressing the **MENU** (left) soft touch key () , then pressing  for **APPS**.

2. Press the  key. The **Welcome** screen appears in the display, with a **Featured App** highlighted. You have the following options:
 - Use the navigation keys to highlight the **Featured App** you wish to download and follow the online directions.
 - Use the navigation keys to highlight the **Catalog** tab, then press . The **Catalog** page appears in the display.
Use the navigation keys to browse the Catalog menu and to highlight the game you wish to download and follow the online directions.

Managing Applications

Use the **MENU** within **APPS** to manage, move, purchase applications, and much more.

1. In standby mode, press the **Menu (left)** soft touch key () , then press  key to launch **APPS**. The **APPS** menu appears in the display with the **Download App** option highlighted.
2. Press the **MENU** (left) soft touch key () . The applications management menu pops-up in the display. Some or all of the following options are active in the menu, depending up the application selected:
 - **Move to Folder** — Lets you move a selected application between available folders.
 - **Rename** — Lets you change the name of the selected application or folder.
 - **Info** — Shows information about the selected application or folder, such as, name, number of items, version, and size.
 - **Delete** — Removes the selected application or folder.
 - **New Folder** — Lets you add a folder to your list, allowing you to organize (group) your application for easier access.
 - **Settings** — Lets you customize your application experience and manage your folder contents by adjusting the Sound Volume for a application or for all applications in a folder, reviewing a Download Summary for a particular folder, or Delete All Files from a selected folder.
3. Use the Up and Down navigation keys to highlight an option, then press  to enter the option's sub-menu.

Rearranging Items in Your APPS List

APPS automatically inserts new applications and folders into the **APPS** list in alphabetical order. Use the **MOVE** soft touch key to change the position in the list for a selected application or folder.

1. In standby mode, press the **Right** navigation key to launch **APPS**. The **APPS** menu appears in the display with the **Download App** option highlighted.
2. Use the Up and Down navigation keys to highlight a application or folder.
3. Press the **MOVE** (right) soft touch key (). Directional arrows appear to the right of the application/folder name.
4. Use the Up and Down navigation keys to move the highlighted application or folder up or down in the list.
5. Press  to save the moved item's new position.

Section 15: Health and Safety Information

Topics Covered

- Health and Safety Information
 - UL Certified Travel Adaptor
 - Consumer Information on Wireless Phones
 - Road Safety
 - Operating Environment
 - Using Your Phone Near Other Electronic Devices
 - Potentially Explosive Environments
 - Emergency Calls
 - FCC Notice and Cautions
 - Other Important Safety Information
 - Product Performance
 - Availability of Various Features/Ring Tones
 - Battery Standby and Talk Time
 - Battery Precautions
 - Samsung Mobile Products and Recycling
 - Care and Maintenance
-

This section outlines the safety precautions associated with using your device. These safety precautions should be followed to safely use your device.

Health and Safety Information

Exposure to Radio Frequency (RF) Signals

Certification Information (SAR)

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the exposure limits for radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. government. These FCC exposure limits are derived from the recommendations of two expert organizations, the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure limit set by the FCC for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg). The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each model phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC. For body worn operation, this phone has been tested and meets FCC RF exposure guidelines when used with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

The FCC has granted an Equipment Authorization for this mobile phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. The maximum SAR values for this model phone as reported to the FCC are:

- Part 22
 - Head: 0.845 W/Kg.
 - Body-worn: 0.76 W/Kg.
- Part 24
 - Head: 1.46 W/Kg.
 - Body-worn: 1.21 W/Kg.

SAR information on this and other model phones can be viewed on-line at www.fcc.gov/oet/fccid. To find information that pertains to a particular model phone, this site uses the phone FCC ID number which is usually printed somewhere on the case of the phone. Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone. Additional product specific SAR information can also be obtained at www.fcc.gov/cgb/sar.

UL Certified Travel Adaptor

The Travel Adaptor for this phone has met UL 1310 safety requirements. Please adhere to the following safety instructions per UL guidelines.

FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS.

DANGER - TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.

FOR CONNECTION TO A SUPPLY NOT IN THE U.S.A., USE AN ATTACHMENT PLUG ADAPTOR OF THE PROPER CONFIGURATION FOR THE POWER OUTLET.

THIS POWER UNIT IS INTENDED TO BE CORRECTLY ORIENTATED IN A VERTICAL OR HORIZONTAL OR FLOOR MOUNT POSITION.

Consumer Information on Wireless Phones

The U.S. Food and Drug Administration (FDA) has published a series of Questions and Answers for consumers relating to radio frequency (RF) exposure from wireless phones. The FDA publication includes the following information:

What kinds of phones are the subject of this update?

The term wireless phone refers here to hand-held wireless phones with built-in antennas, often called "cell," "mobile," or "PCS" phones. These types of wireless phones can expose the user to measurable radio frequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called "cordless phones," which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures well within the FCC's compliance limits.

Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radio frequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radio frequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- "Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- "Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and

- "Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- "National Institute for Occupational Safety and Health
- "Environmental Protection Agency
- "Federal Communications Commission
- "Occupational Safety and Health Administration
- "National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones.

FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the primary subject of the safety questions discussed in this document.

What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radio frequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phones RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years' follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radio frequency energy (RF).

FDA has been a leading participant in the World Health Organization international Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues.

FDA and Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies

of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?

If there is a risk from these products - and at this point we do not know that there is - it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

- "If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna.

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radio frequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

Do hands-free kits for wireless phones reduce risks from exposure to RF emissions?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that hands-free kits reduce risks. Hands-free kits can be used with wireless phones for convenience and comfort. These systems reduce the absorption of RF energy in the head because the phone, which is the source of the RF emissions, will not be placed against the head. On the other hand, if the phone is mounted against the waist or other part of the body during use, then that part of the body will absorb more RF energy. Wireless phones marketed in the U.S. are required to meet safety requirements regardless of whether

they are used against the head or against the body. Either configuration should result in compliance with the safety limit.

Do wireless phone accessories that claim to shield the head from RF radiation work?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that accessories that claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone cases, while others involve nothing more than a metallic accessory attached to the phone. Studies have shown that these products generally do not work as advertised. Unlike "hand-free" kits, these so-called "shields" may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption. In February 2002, the Federal Trade Commission (FTC) charged two companies that sold devices that claimed to protect wireless phone users from radiation with making false and unsubstantiated claims. According to FTC, these defendants lacked a reasonable basis to substantiate their claim.

What about wireless phone interference with medical equipment?

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. FDA has tested wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a compatible phone and a compatible hearing aid at the same time. This standard was approved by the IEEE in 2000.

FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

Additional information on the safety of RF exposures from various sources can be obtained from the following organizations:

- FCC RF Safety Program:
<http://www.fcc.gov/oet/rfsafety/>
- Environmental Protection Agency (EPA):
<http://www.epa.gov/radiation/>

- Occupational Safety and Health Administration's (OSHA):
<http://www.osha.gov/SLTC/radiofrequencyradiation/index.html>
- National institute for Occupational Safety and Health (NIOSH):
<http://www.cdc.gov/niosh/emfpg.html>
- World health Organization (WHO):
<http://www.who.int/peh-emf/>
- International Commission on Non-Ionizing Radiation Protection:
<http://www.icnirp.de>
- Radiation Protection Division of Health Protection Agency (UK):
<http://www.hpa.org.uk/radiation/>
- US food and Drug Administration
<http://www.fda.gov/cellphones>

Road Safety

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features, such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road.
2. When available, use a hands-free device. If possible, add an additional layer of convenience and safety to your wireless phone with one of the many hands free accessories available today.
3. Position your wireless phone within easy reach. Be able to access your wireless phone without removing your eyes from the road. If you get an incoming call at an inconvenient time, let your voice mail answer it for you.
4. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.
5. Do not take notes or look up phone numbers while driving. Jotting down a "to do" list or flipping through your address book takes attention away from your primary responsibility, driving safely.

6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
7. Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies. Remember, it is a free call on your wireless phone!
9. Use your wireless phone to help others in emergencies. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.
10. Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency number.

"The wireless industry reminds you to use your phone safely when driving."

For more information, please call 1-888-901-SAFE, or visit our web-site www.wow-com.com

Provided by the Cellular Telecommunications & Internet Association

Operating Environment

Remember to follow any special regulations in force in any area and always switch your phone off whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder if you are using an external antenna).

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

Pacemakers

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker.

These recommendations are consistent with the independent research and recommendations of Wireless Technology Research.

Persons with pacemakers:

- should always keep the phone more than 15 cm (6 inches) from their pacemaker when the phone is switched on.
- should not carry the phone in a breast pocket.
- should use the ear opposite the pacemaker to minimize potential interference.

If you have any reason to suspect that interference is taking place, switch your phone off immediately.

Hearing Aid Compatibility with Mobile Phones

When some mobile phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. T4 is the better/higher of the two ratings. (Note that not all hearing devices have telecoils in them.)

Hearing devices may also be measured for immunity to this type of interference. Your hearing device manufacturer or hearing health professional may help you find results for your hearing

device. The more immune your hearing aid is, the less likely you are to experience interference noise from mobile phones.

Other Medical Devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch your phone off in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Switch your phone off in any facility where posted notices require you to do so.

Potentially Explosive Environments

Switch your phone off when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch the phone off while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Emergency Calls

This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications (medical emergencies, for example).

Remember, to make or receive any calls the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone

networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

1. If the phone is not on, switch it on.
2. Key in the emergency number for your present location (for example, 911 or other official emergency number). Emergency numbers vary by location.
3. Press the  key.

If certain features are in use (call barring, for example), you may first need to deactivate those features before you can make an emergency call. Consult this document and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your phone may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.

Restricting Children's access to your Phone

Your phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone or make calls that increase your phone bill.

FCC Notice and Cautions

FCC Notice

The phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the phone if such interference cannot be eliminated.

Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Batterymarch Park, Quincy, MA 02269, Attn: Publication Sales Division.

Cautions

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment, and void your authority to operate this equipment. Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

Other Important Safety Information

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.
- Switch your phone off before boarding an aircraft. The use of wireless phone in aircraft is illegal and may be dangerous to the aircraft's operation.
- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Product Performance

Getting the Most Out of Your Signal Reception

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal.

If you're inside a building, being near a window may give you better reception.

Understanding the Power Save Feature

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. If your phone is active, it periodically rechecks service availability or you can check it yourself by pressing any key.

Anytime the Power Save feature is activated, a message displays on the screen. When a signal is found, your phone returns to standby mode.

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

Maintaining Your Phone's Peak Performance

For the best care of your phone, only authorized personnel should service your phone and accessories. Faulty service may void the warranty.

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- If your phone is equipped with an external antenna, hold the phone with the antenna raised, fully-extended and over your shoulder.
- Do not hold, bend or twist the phone's antenna, if applicable.
- Do not use the phone if the antenna is damaged.
- If your phone is equipped with an internal antenna, obstructing the internal antenna could inhibit call performance.
- Speak directly into the phone's receiver.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery.

Availability of Various Features/Ring Tones

Many services and features are network dependent and may require additional subscription and/or usage charges. Not all features are available for purchase or use in all areas. Downloadable Ring Tones may be available at an additional cost. Other conditions and restrictions may apply. See your service provider for additional information.

Battery Standby and Talk Time

Standby and talk times will vary depending on phone usage patterns and conditions. Battery power consumption depends on factors such as network configuration, signal strength, operating temperature, features selected, frequency of calls, and voice, data, and other application usage patterns.

Battery Precautions

- Avoid dropping the cell phone. Dropping it, especially on a hard surface, can potentially cause damage to the phone and battery. If you suspect damage to the phone or battery, take it to a service center for inspection.
- Never use any charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power; talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.

- Follow battery usage, storage and charging guidelines found in the user's guide.
- Battery charging time depends on the remaining battery charge and the type of battery and charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.
- Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- Do not use incompatible cell phone batteries and chargers. Some Web sites and second-hand dealers, not associated with reputable manufacturers and carriers, might be selling incompatible or even counterfeit batteries and chargers. Consumers should purchase manufacturer or carrier recommended products and accessories. If unsure about whether a replacement battery or charger is compatible, contact the manufacturer of the battery or charger.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and lifetime of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0 °C (32 °F).
- Do not place the phone in areas that may get very hot, such as on or near a cooking surface, cooking appliance, iron, or radiator.
- Do not get your phone or battery wet. Even though they will dry and appear to operate normally, the circuitry could slowly corrode and pose a safety hazard.
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and - terminals of the battery (metal strips on the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- Do not permit a battery out of the phone to come in contact with metal objects, such as coins, keys or jewelry.
- Do not crush, puncture or put a high degree of pressure on the battery as this can cause an internal short-circuit, resulting in overheating.
- Dispose of used batteries in accordance with local regulations. In some areas, the disposal of batteries in household or business trash may be prohibited. For safe disposal options for Li-ion batteries, contact your nearest Samsung authorized service center. Always recycle. Do not dispose of batteries in a fire.

Samsung Mobile Products and Recycling

Samsung cares for the environment and encourages its customers to recycle Samsung mobile phones and genuine Samsung accessories.

Go to:

<http://www.samsungwireless.com/recycling.htm>
for more information.

Care and Maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits.
- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.
- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, a stove or a radiator. The phone may explode when overheated.
- If your phone is equipped with an external antenna, use only the supplied or an approved replacement antenna. Unauthorized antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

Section 16: Warranty Information

Topics Covered

- Standard Limited Warranty
-

Standard Limited Warranty

What is Covered and For How Long?

SAMSUNG TELECOMMUNICATIONS AMERICA, LLC ("SAMSUNG") warrants to the original purchaser ("Purchaser") that SAMSUNG's Phones and accessories ("Products") are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase and continuing for the following specified period of time after that date:

Phone	1 Year
Batteries	1 Year
Leather Case/ Pouch	90 Days
Holster	90 Days
Other Phone Accessories	1 Year

What is Not Covered? This Limited Warranty is conditioned upon proper use of Product by Purchaser. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abuse, neglect, unusual physical, electrical or electromechanical stress, or modification of any part of Product, including antenna, or cosmetic damage; (b) equipment that has the serial number removed or made illegible; (c) any plastic surfaces or other externally exposed parts that are scratched or damaged due to normal use; (d) malfunctions resulting from the use of Product in conjunction with accessories, products, or ancillary/peripheral equipment not furnished or approved by SAMSUNG; (e) defects or damage from improper testing, operation, maintenance, installation, or adjustment; (f) installation, maintenance, and service of Product, or (g) Product used or purchased outside the United States or Canada. This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, or (iii) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

What are SAMSUNG's Obligations? During the applicable warranty period, SAMSUNG will repair or replace, at SAMSUNG's sole option, without charge to Purchaser, any defective component part of Product. To obtain service under this Limited Warranty, Purchaser must return Product to an authorized phone service facility in an adequate container for shipping, accompanied by Purchaser's sales receipt or comparable substitute proof of sale showing the date of purchase, the serial number of Product and the sellers' name and

address. To obtain assistance on where to deliver the Product, call Samsung Customer Care at 1-888-987-4357. Upon receipt, SAMSUNG will promptly repair or replace the defective Product. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any Product or replace Product with a rebuilt, reconditioned or new Product. Repaired/replaced leather cases, pouches and holsters will be warranted for a period of ninety (90) days. All other repaired/replaced Product will be warranted for a period equal to the remainder of the original Limited Warranty on the original Product or for 90 days, whichever is longer. All replaced parts, components, boards and equipment shall become the property of SAMSUNG. If SAMSUNG determines that any Product is not covered by this Limited Warranty, Purchaser must pay all parts, shipping, and labor charges for the repair or return of such Product.

WHAT ARE THE LIMITS ON SAMSUNG'S WARRANTY/LIABILITY? EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED HEREIN, PURCHASER TAKES THE PRODUCT "AS IS," AND SAMSUNG MAKES NO WARRANTY OR REPRESENTATION AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO:

- "THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE;
- "WARRANTIES OF TITLE OR NON-INFRINGEMENT;
- "DESIGN, CONDITION, QUALITY, OR PERFORMANCE OF THE PRODUCT;
- "THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR
- "COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO.

NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. ALL IMPLIED WARRANTIES AND CONDITIONS THAT MAY ARISE BY OPERATION OF LAW, INCLUDING IF APPLICABLE THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO THE SAME DURATION OF TIME AS THE EXPRESS WRITTEN WARRANTY STATED HEREIN. SOME STATES/PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE, USE, OR MISUSE OF, OR INABILITY TO USE THE PRODUCT OR ARISING DIRECTLY OR INDIRECTLY FROM THE USE OR LOSS OF USE OF THE PRODUCT OR FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL, CONSEQUENTIAL OR SIMILAR DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS, OR FOR DAMAGES ARISING

FROM ANY TORT (INCLUDING NEGLIGENCE OR GROSS NEGLIGENCE) OR FAULT COMMITTED BY SAMSUNG, ITS AGENTS OR EMPLOYEES, OR FOR ANY BREACH OF CONTRACT OR FOR ANY CLAIM BROUGHT AGAINST PURCHASER BY ANY OTHER PARTY. SOME STATES/PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE/PROVINCE TO PROVINCE. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND STATES PURCHASER'S EXCLUSIVE REMEDY. IF ANY PORTION OF THIS LIMITED WARRANTY IS HELD ILLEGAL OR UNENFORCEABLE BY REASON OF ANY LAW, SUCH PARTIAL ILLEGALITY OR UNENFORCEABILITY SHALL NOT AFFECT THE ENFORCEABILITY FOR THE REMAINDER OF THIS LIMITED WARRANTY WHICH PURCHASER ACKNOWLEDGES IS AND WILL ALWAYS BE CONSTRUED TO BE LIMITED BY ITS TERMS OR AS LIMITED AS THE LAW PERMITS. THE PARTIES UNDERSTAND THAT THE PURCHASER MAY USE THIRD-PARTY SOFTWARE OR EQUIPMENT IN CONJUNCTION WITH THE PRODUCT. SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRDPARTY SOFTWARE OR EQUIPMENT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR OTHERWISE, INCLUDING THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT. THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT LIE SOLELY WITH THE PURCHASER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT, AS THE CASE MAY BE.

This Limited Warranty allocates risk of Product failure between Purchaser and SAMSUNG, and SAMSUNG's Product pricing reflects this allocation of risk and the limitations of liability contained in this Limited Warranty. The agents, employees, distributors, and dealers of SAMSUNG are not authorized to make modifications to this Limited Warranty, or make additional warranties binding on SAMSUNG. Accordingly, additional statements such as dealer advertising or presentation, whether oral or written, do not constitute warranties by SAMSUNG and should not be relied upon.

Samsung Telecommunications America, LLC
1000 Klein Street
Plano, Texas 75074

Phone: 1-800-SAMSUNG

Phone: 1-888-987-HELP (4357)

©2007 Samsung Telecommunications America. All rights reserved.

No reproduction in whole or in part allowed without prior written approval. Specifications and availability subject to change without notice.

Printed in Korea

Index

A

Adjust

Ringer setting 25

B

Back/Clear key 19

Backup to last menu 37

Battery 8

Charging 10
installing 8
Low battery indicator 11
Removal 9
removing 9
Travel adapter 10

C

Call Answer mode 23

Call Functions

Adjusting the Call
Volume 30
Answering a Call 29
Call Log 30
Making a Call — Number
Entry Dialing 27
Making a Call — Speed
Dialing 28

Call Settings 80

Camera

Brightness 102
Color Tones 98
Options 96
Zoom 102

Camera mode 25

Camera Options

Resolution 96

Contacts List 54

Open 54

Creating and Sending New

Messages 135

Picture (Pic) Message 136
Text Message 135

D

Display screen icons 20

Display Settings

Backlight 79
Banner 76

E

Emergency Calls 27

End key 19

Entering Text 48

Alpha (Abc) Mode 49
Entering Numbers 51, 52
Entering Symbols 52
Entering Upper and Lower
Case Letters 51
Text Entry Modes 49

Erase memos 133

Exit Helio Portal 92

F

Fast fact, description 8

G

Getting Started 7

Activating Your Phone 8
Understanding this User
Manual 8
Voicemail 11

H

Health and Safety Information 150

I

Input mode 23

International Calls 27

In-use menu 38

L

Language 90

Left soft touch key 18

Lock mode 23

M

Memo Pad

Add a Memo 129

Review, edit, and erase
memos 129

Menu Navigation 36

Menu Outline 39

Menu shortcuts 37

Menu, in-use options 38

MESSAGE 134

Message Boxes

Drafts 141

Inbox 139

Sent 140

Voice Mail 144

Message Folders

Messages and Lock
Mode 138

Message Setting 143

Message/Media Boxes 139

Messaging

Erasing Messages 142

Message Settings 143

Mode

Call answer 23

Camera 25

Input 23

Lock 23

Silent 24

Standby 23

Talk 24

Vibrate 24

N

Navigation key 19

Navigation key shortcuts 37

Notes and tips 8

Notes, description 8

Number Entry Dialing 27

O

OK key 18

P

Photos

Sending 107

Picture (Pic) message 136

Plan

Alarm Clock 124

Calculator 127

Calendar 120

Notepad 129

Plan Menu 120

Stopwatch 130

To-do 122

Unit Converter 128

User Memory 130

Voice Memo 131

Wake-up Call 123

World Time 127

Q

Quality, pictures 97

R

Receiving New Messages 138

While in a Call 138

Record memos 132

Resolution, notes about 96, 102

Return to last menu 37

Right soft touch key 18

Roaming 35

S

Security Settings 85

Send Pic messages 107

Send touch key 19

Settings

Call 80

Security 85

Sound 72

Setup

Voicemail 144

Shortcut to menus 37

Shutter sound 105

Silent mode

Entering 24

Exiting 24

SNAP

Settings 104

Sound Settings 72

Speed Dialing 28

One-Touch Dialing 28

Three Touch Dialing 29

Two-Touch Dialing 28

Standard Limited Warranty 168

Standby mode 23

SURF 91

How Browser Keys

Work 93

Using Links 93

Using SURF 92

T

Talk mode 24

Text message 135

Tip, description 8

U

Understanding Your Contacts 53

Deleting a Contact

Entry 68

Finding a Contact Entry 57

My Info 69

Pauses 59

Understanding Your Contacts List

Adding a New Contact 54

Editing an Existing

Contact 59

Understanding Your Device 12

Closed View of Your

Device 13

Command Keys 18

Display Screen 20

Features of Your Device 12

Open View of Your

Device 15

V

Vibrate mode 24

Video Camera

Effects 101

Options 99

White Balance 100

Voice mail

Listening to 11

Voice Memo

Erase all memos 133

Record memos 132

Review memos 132

Voicemail

Checking 144

Setup 144

W

Warranty Information 167