

SCH-a310 Series

P O R T A B L E

T r i - M o d e

T E L E P H O N E

User Guide

Please read this manual before operating your phone, and keep it for future reference.

Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating thereto (the "Phone System"), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

Samsung Telecommunications America (STA), Inc.

Headquarters:

1130 E. Arapaho Road
Richardson, TX 75081
Tel: 972.761.7000
Fax: 972.761.7001

Customer Care Center:

1601 E. Plano Parkway, Suite 150
Plano, TX 75074
Toll Free Tel: 1.888.987.HELP (4357)
Fax: 972.761.7501

Internet Address: <http://www.samsungusa.com>

©2002 Samsung Telecommunications America, Inc. All rights reserved. No reproduction in whole or in part allowed without prior written approval. Samsung Telecommunications America, Inc. is a trademark of Samsung Electronics Corporation, Ltd.

Licensed by Qualcomm Incorporated under one or more of the following patents:
U.S. Patent No. 4, 901, 307; 5, 056, 109; 5, 099, 204; 5, 101, 501; 5, 103, 459; 5, 107, 225; 5, 109, 390.

English: 2003:5:30. Version 2.0
Printed in South Korea
GH68-02616A

Openwave® is a registered Trademark of Openwave, Inc.

RSA® is a registered Trademark RSA Security, Inc.

Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

Introduction to the SCH-a310 phone

Congratulations on the purchase of your SCH-a310 phone. Using the latest digital technology, your new phone operates on the same basis as other wireless phones while providing superior resonance and tone quality.

The SCH-a310 phone is packed with productive features that are easy to use. Here are some of them:

- Operates in 1900 MHz digital CDMA, 800 MHz digital CDMA, and 800 MHz analog networks.
- Voice Dialing – 20 locations
- User friendly display with dedicated icons for signal strength, service, roaming, messages, vibrator, location service, and battery states.
- Replaceable faceplates
- Monotone ring types - 6, melody tones - 15.
- Distinctive ringer types for voice, message, and alarm calls
- Distinctive ringer volumes for voice, message, and alarm calls
- Phone Book Memory - 500 Locations
- Call Logs - 10 Locations each for outgoing, incoming, and missed calls
- Internet MiniBrowser
- Pause dialing for tele-services
- Fast ringer mute during incoming call
- Alarm clock with programmable alarm
- One-touch dialing - 9 locations
- Two-touch dialing - 90 locations
- Three-touch dialing - 401 location
- Easily mute the microphone during conversation
- Security features including call restriction, emergency/secret number capability, and lock mode
- Fax and Data capability
- External LCD display - 7 colors
- Selectable English/Spanish user interface

How To Use This User Guide

This user guide explains your Samsung SCH-a310 phone operations through easy-to-follow instructions and illustrations.

We've included some important safety and usage information that you should know before using your phone.

If you still have questions, we'll be happy to answer them. Just call our Samsung Customer Care Center toll-free at 1.888.987.HELP (4357).

Table of Contents

Samsung Telecommunications America (STA), Inc.	2
Disclaimer of Warranties; Exclusion of Liability	3
Introduction to the SCH-a310 phone	4
How To Use This User Guide	5
Your consumer package	15
Front view of the SCH-a310	16
Getting to know your phone	17
Antenna	17
Backlight features	17
Clear key	17
End key	17
Headset connector	18
LED indicator	18
Menu key	18
Microphone	18
Numeric keypad	18
OK/Message key	18
Speaker	18
Send key	19
Navigation	19
Display screen	19
Display screen icons	20
Other phone icons	21
Installing the battery	23

Removing the battery	23
Charging the battery	24
Adaptor outlet	24
Using the travel adaptor	24
Low battery indicator	25
The empty battery icon	25
Your phone's modes	26
Answer mode	26
Digital mode	26
Input mode	26
Lock mode	26
Power save mode	26
Silent mode	27
Standby mode	27
Talk mode	28
Vibrate mode	28
Getting Started	29
Getting service	29
Turning your phone on	29
Turning your phone off	30
Several ways to answer a call	30
List of main and sub menus	31
Using your phone's menus	34
Accessing menus using the navigation key	34
Returning to the previous menu	34
Accessing menus using shortcut numbers	35

Calls 35

Outgoing	35
Incoming	35
Missed	36
Erase log	37
Reviewing calls	37
Keeping track of call activity	38
Air time	38
Call waiting	41
Caller I.D.	41
Three way calling	42

Phone Book 42

Find by name	43
Find by entry	43
Find by group	44
Renaming a group	44
Add	45
Editing phone book numbers	46
Adding pauses	47
Storing pauses in a phone book entry	48
Pause dialing from a stored entry	48
Manual pause calling	48
Erasing individual phone book entries	49
Erasing your phone book	49
Editing an existing e-mail address	50
Setting speed dial	50
Storing incoming phone numbers at the end of a call	51

Storing phone numbers from call logs	51
Shortcuts to storing phone numbers	51
One-touch dialing	52
Two-touch dialing	52
Three-touch dialing	52
Shortcuts to memory dialing	52
My phone #	53
Memory	53

Messages 53

Mobile originating SMS text messaging	53
Creating SMS text messages	54
Entering text, numbers, and/or symbols	55
Alphabetical text entry	56
Entering numbers	56
Symbol entry	56
T9® word text entry	57
New messages	57
Inbox	58
Outbox	59
Filed message	60
Web Alert	61
Erase message	61
Message setup	62
Receiving a message in standby mode	63
Receiving a message while on a call	64
Reviewing voice mails and text messages	64

Reviewing stored voicemail and text messages in standby mode	64
Message options	65
Mobile web	67
A shortcut to launching the Web	67
Launching the minibrowser	68
Exiting the web/minibrowser	69
The minibrowser start and end prompts	69
The minibrowser soft keys	69
Navigating the web	70
How the minibrowser keys work	70
Using links	71
Making a phone call while using the minibrowser	71
Planner	72
Today	72
Scheduler	72
How to schedule an event	73
How to add, edit, or erase an event	74
Scheduler	74
How to view an event	74
Jump to date	75
To do list	75
How to view, edit, add, or erase a to do list item	75
Memo pad	76
Count down	76
How to view, edit, add or erase a count down timer	77
Alarm clock	77

World time	78
Checking current time world wide	78
Calculator	79
Display	80
Animation	80
Banner	81
Color Window	81
Backlight	82
Contrast	83
Auto hyphen	83
Sounds	84
Ringer options	84
Adjusting ringer volume (rapidly)	84
Adjusting voice volume during a call	84
Ringer volume	84
Ringer type	85
Key beep	87
Alerts	88
Power on/off	89
Roam ringer	90
Whisper mode	90
Voice	90
Voice dial	91
Tips on recording names	91
Voice Memo	93
Voice Answer	94

Games	94
Key commands	95
Push Push	95
Fly Ribbon	95
Spider Hunter	97
Setup	97
Location	97
Network	98
Data/fax	98
Security	100
Lock phone	101
Restricting the use of your phone	102
Lock code	103
Emergency number	103
Clear Memory	105
Resetting your phone	105
Call answer	106
Auto answer	106
Auto retry	107
Language	107
Clock set	108
Version	109

In-Use Menu	110
Usage guidelines:	
All about performance and safety	111
Getting the Most Out of Your Reception	111
Maintaining Safe Use of and Access to Your Phone	112
Caring for the Battery	115
Acknowledging Special Precautions and FCC	116
Specific Absorption Rates (SAR) for Wireless Phones	117
FDA Consumer Update	118
Owner's Record	130
User Guide Proprietary Notice	131
Limited Warranty	132


Your consumer package

Your consumer package contains the following items:

- Samsung SCH-a310 phone with hand strap
- Samsung Standard Li-Ion battery
- Samsung travel adaptor
- Samsung holster
- User guide



Front view of the SCH-a310

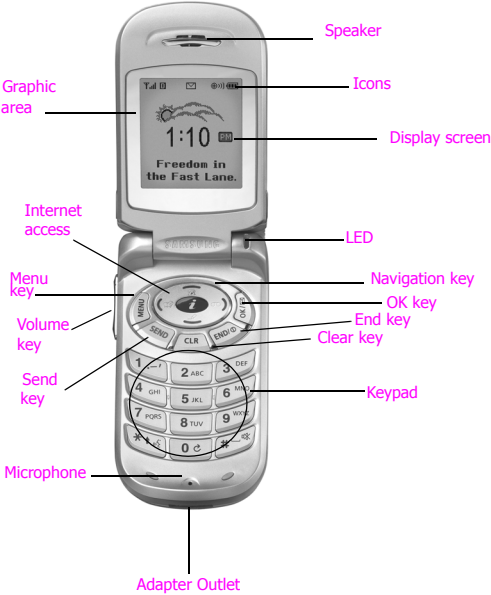

Getting to know your phone

Antenna

The antenna is a device for transmitting and receiving signals. The shape and size of the antenna is determined, in part, by the frequency of the signals that they receive. An antenna makes the call sound clearer when it is fully extended. Use only in the normal position and do not touch the antenna unnecessarily when the phone is active.

Backlight features

Your keypad has user settable backlighting for easy visibility.

Clear key

The  key is used to erase/clear numbers or characters that may have been incorrectly entered. Or, you can use it to return to a previous screen.

- If you enter an incorrect number or character on the display screen, press  once briefly.
- To erase all digits or characters from the display screen, press  for two seconds.
- To back up one menu level, press  once briefly.
- To return to standby mode from any menu, press  for two seconds.

End key

This  key is utilized in several ways:

- Press and hold  to turn on your phone.
- Press and hold  to turn off your phone.
- Press  once to disconnect a call, return to standby mode, or cancel any input.

Headset connector

This is where the optional hands-free headset is connected. The headset includes an earbud and microphone in a convenient, lightweight unit so you can talk without using your hands.

- Before inserting the hands-free headset connector to your phone, gently pry open the top of the cover to expose the headset connector.

LED indicator

The LED indicator flashes to indicate an incoming call or message. When you have the phone ringer set to off, the LED indicator notifies you of an incoming call or message.

- The LED indicator lights momentarily when you power up the phone.

Menu key

Press  to enter the menu selection.

Microphone

The microphone is used for conversation and recording.

Numeric keypad

Use these keys to enter text, numbers, and special characters.

OK/Message key

The  key stores information that you enter. When in standby mode,  functions as a **Message** menu access key to send messages and review received messages.

Speaker

The speaker is for listening to voice conversations.

Send key

The  key performs several useful functions:

- Press  once to answer calls.
- Enter a number and press  once to connect a call.
- Press  twice in standby mode to redial the last outgoing number.

Navigation

The Navigation key  allows you to locate different menu options by pressing in the appropriate direction.

When in standby mode the navigation key also acts as a hot key.

Display screen

Your phone has two display screens:

- The display screen on the front of your phone (folder type) comprises of two areas; an upper line of stationary icons, and the lower line showing text information or time of day.



- The display screen on the inside of your phone comprises of three areas, an upper line of stationary icons, lower line of text information, and a graphic area in the middle.



The top line of icons shown on the liquid crystal display (LCD), appear according to the phone's operating mode.

The lower area of the LCD displays in-use information.

Display screen icons



Signal strength: This icon always appears when your phone is on. It shows your current signal strength. More lines indicate more signal strength.



Service indicator: This icon indicates a call is in progress. When the phone is calling a number, this icon will flash until the call is connected.



No service indicator: This icon indicates your phone cannot find a signal because you're outside a service area. You cannot make or receive calls. Wait a little while for a signal or move into an open area.

Note: The no service indicator icon will always appear when you turn on your phone. As soon as service is located, the indicator will disappear.



Roam: This icon is your extended roaming indicator. Roaming occurs when you use your phone outside your home area. While roaming, another service provider's system handles your call, so the service rate for the call may be higher than the rate for calls made within your home area. Please refer to the price plan information from your carrier for more detail regarding your service rates



New Message: This icon appears when a new voice, text, page or web alert message is received.



Digital mode: This icon indicates your phone is operating in digital mode. Your phone has some features that work only in a digital service area; these services include the Web Browser and certain

other message(s) services. If this icon is absent, your phone is operating in analog mode.



Vibrate mode: This icon indicates that an incoming call will make the phone vibrate rather than ring.



Battery strength: This icon always displays when your phone is active, it displays your battery charge level. The more black bars you see, the greater the charge. When the battery becomes very low, a flashing empty battery icon displays and the phone sounds an audible alert; this indicates that your phone is about to turn itself off.



Alarm clock: This icon displays when you have your alarm clock set.



Ringer silent: This icon indicates that your phones ringer is set to silent.



GPS (911 only): This icon represents Global Positioning Service (GPS) for 911.



GPS: This icon indicates GPS is on for location.



Silent mode: This is the icon for silent mode.

Other phone icons



Duplicate: This icon indicates that a duplicate message was sent.



E-mail: This icon represents an e-mail address.



Fax: This icon represents a fax number.



Filed Message: This icon displays if a message is filed.



Home: This icon indicates represents an individual's home number.



Message: This icon displays when outgoing messages are transmitted.



Message read: This icon displays when you have read a message.



Message received: This icon indicates that an incoming text, voicemail, page or web message has been received.



Mobile: This icon represents a mobile phone number.



Multi: This icon displays if multi messages are successfully delivered.



No label: This icon indicates that no label exists for this entry.



Office: This icon represents an office number.



Pager: This icon represents a pager number.



Send Failed: This icon displays if a message failed to be sent.



Speed Dial: This icon displays when the number you want to call is available using the speed dial feature.




Urgent: This icon displays if a message is urgent.

Installing the battery

Note: Your phone comes packaged with a partially charged rechargeable standard Li-Ion battery and travel adapter. The phone can be used while the battery is charging, but must be fully charged the first time you use your phone otherwise the battery could be damaged.

To attach the battery to your phone:

1. Gently place the battery into the provided slots on the underside of the phone.
2. Slide the top end of the battery up (The top end of the battery displays the word Samsung in raised letters.) until you hear it click into place.

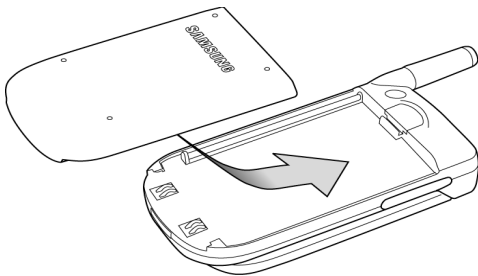

Removing the battery

To remove the battery from your phone:

1. Turn the phone off (by pressing and holding  until the closing animation begins).
2. On the back side of the phone, hold the button down and push the battery toward the bottom edge of the phone. The battery will then lift or fall away from the phone.

Charging the battery

Your phone is powered by a rechargeable standard Li-Ion battery. Only use Samsung-approved adaptors and batteries. These adaptors are designed to maximize battery life. **Using other adaptors may invalidate your warranty and may cause damage.**

When the phone has finished charging it can be disconnected.

Adaptor outlet

Use the adaptor outlet to connect your phone to a wireless data device or a hands-free car kit (both sold separately). The adaptor outlet is located at the bottom of the phone.

To charge your battery:

1. Plug the travel adaptor that is supplied with your phone into a wall outlet.
2. Using your thumb and first finger, gently squeeze the two buttons located on either side of the other end of the travel adaptor and insert the adaptor into your phone's outlet. The yellow arrow on the travel adaptor should be facing upwards and pointing toward the phone.
3. When you unplug the travel adaptor from your phone, squeeze these same two buttons, and pull gently on the adaptor to disconnect it from the phone.

Using the travel adaptor

The travel adaptor allows you to charge your phone's battery from any standard 110/220 free volt AC wall outlet. Also, using the travel adaptor allows you to make a phone call while the battery is charging. The travel adaptor will fully charge an empty standard battery in approximately 4 hours, and an empty extended battery in about 6 hours.

Follow these steps:

1. With the battery in position in the phone, attach the cord from the travel adaptor by plugging it into the adaptor outlet at the bottom of the phone.
2. Connect the adaptor to a standard 110/220 free volt AC wall outlet. The battery will begin charging immediately, and the LED (located at the top of your phone) will light and remain red while the battery icon animates, the icon will remain animated, even if the phone is turned off during charging.
3. The LED indicates the status of the battery being charged.
 - **Red** indicates that the battery is charging.
 - **Green** indicates that the battery is fully charged.
 - **Yellow** indicates (1) the battery is not seated correctly in the phone, (2) the adaptor is not plugged in correctly, or (3) the battery is inoperable. Please check the adaptor and/or battery.
4. You can make a phone call when the phone is plugged into the travel adaptor. The adaptor will continue to charge the battery even when you are making the call.

Note: The battery charges faster when the phone is turned off.

Low battery indicator

You can tell whether or not your battery needs to be recharged by checking the battery indicator (this icon  is located in the upper-right corner of the display screen). The presence of all three bars indicate a full charge. No bars (the battery icon is empty) means your battery must be charged.

The empty battery icon

Two to three minutes before the battery charge level gets too low to operate the phone, the battery sensor will let you know by blinking an empty battery icon () , and sounding a tone. If you continue to operate the phone without charging the battery, the phone will automatically turn off. If this happens, your wireless call will be terminated. However, if you plug into a charging device,

you can continue your call. Be sure to monitor the battery strength icon and make certain your battery is adequately charged.

Your phone's modes

Answer mode

With this option activated, you can select how you want to answer your phone when you receive an incoming call.

Digital mode

Some of your phone's features work only in digital service areas, the **D** icon indicates that your phone is operating in digital mode. If the digital icon is absent, your phone is operating in analog mode.

Input mode

Use input mode to enter text, numbers and symbols into various screens.

Lock mode

When you lock your phone using the Lock Mode menu option, you restrict phone usage. You can receive messages and calls, but you cannot make an outgoing call until your phone is unlocked. You can unlock your phone, by following the prompts and entering the lock code.

Power save mode

Your phone comes with a power save feature that automatically activates if your phone is unable to find a signal after 15 minutes of searching. While this feature is active, the phone's battery charge is conserved. The phone automatically rechecks periodically for a signal. To manually force the phone to recheck for a signal, press any key. A message on the display screen will inform you when your phone is operating in the power save mode.

Silent mode

The Silent Mode feature allows you to instantaneously silence the ringer when in standby mode.

- With the phone in standby mode, press and hold  for 2 seconds. **Entering Silent Mode** displays briefly. (The silent mode icon displays on the standby screen.)
- To exit from Silent Mode press and hold  for 2 seconds. The screen prompt **Exit Silent Mode** displays, and your phone automatically reactivates the previous ringer volume setting. (The silent mode icon is removed from the standby screen.)

Standby mode

Standby mode is the fundamental state of your phone once your phone has found service.

Your phone goes into standby mode:

1. After you power it on.
2. When you press  after a call, if your phone is on.

When in standby mode, you will see:

1. The month/date, and time.
2. All other active icons.

While in standby mode, enter a phone number, and press  to call.

Press  at any time to return to standby mode, but be careful; if you are on a call when you press , you will return to standby mode and disconnect your call.

Messages can also be received when in standby mode, the alert tone will sound when a new message is received. The menu is accessed when you are in standby mode by pressing .

Talk mode

You can place and answer calls only when your phone is turned on. When you are on a call your phone is in Talk mode. Pressing  will display a list of the In-Use menu options.

Vibrate mode

In standby mode:

1. Press the down arrow located on the left side of your phone to adjust the ringer volume .
2. The vibrate icon  appears on the display.

To change the setting:

1. Press the down arrow located on the left side of your phone to adjust the ringer volume.
2. Your options are: **silent, 1 beep, vibrate, level 1, level 2, level 3, level 4, and level 5.**
3. The vibrate icon no longer appears on the display screen.

Getting Started

Getting service

You must contact your service provider and follow their instructions for obtaining service for your phone. We suggest that you read this user guide to fully understand the services that your phone supports.

Turning your phone on

To turn your phone on:

1. Fully extend the antenna for the clearest reception.
2. Press and hold  for more than two seconds.

Note: Your phone has a built-in antenna. As with any other radio-transmitting device, do not touch the antenna as it affects call quality and can cause the phone to operate at a higher power level than is necessary.

3. The LED indicator lights and a power-up alert sounds. The name of your service provider momentarily appears on the display screen.
4. The phone begins searching for a network signal. When a signal is found, the date, day, and time appears.
5. Your phone is now ready to place and receive calls.

If the phone is outside of your carrier's coverage or roaming area the  icon displays. If this happens you cannot place or receive calls. You must try later when service becomes available.

Turning your phone off

To turn your phone off:

1. Press and hold  for more than two seconds.
2. The display screen and the backlight go off.

Note: If your phone is on, and  is pressed for less than one second, the phone will not power off. This feature prevents your phone from being turned off accidentally.

Several ways to answer a call

When you receive a call:

- If the caller can be identified, the phone displays “Call from caller’s phone number, (or name if pre-stored in your Phone Book)”.
- If the caller cannot be identified, the phone displays “Call from Unavailable No”.

There are several ways to answer an incoming call.

- Press 
- Press any key
- Open folder
- Voice answer
- Set the Auto Answer feature

List of main and sub menus

This list displays the Main menu structure and Message features. It shows the individual sub menus and features assigned to each main menu option.

1:Calls

- 1:Outgoing
 - 2:Incoming
 - 3:Missed
 - 4:Erase Logs
 - 5:Air Time
- Outgoing/Incoming/Missed/All Calls
Last Call/Total/LifeTime/Erase Total

2:Phone Book

- 1:Find
 - 2:Add
 - 3:Rename Grp.
 - 1:Friend
 - 2:Family
 - 3:Colleague
 - 4:VIP
 - 5:No Name
 - 4:My Phone#
 - 5:Memory
- By Name/By Entry/By Group

3:Message

- 1:New Messages
 - 1:Send To
 - 2:Message
 - 3:Call Back
 - 4:Options
 - 5:Action

Priority/Validity/Send Later/Message Save
SEND:Send Msg/OK:File Msg/CLR:Back to Msg/
END:Quit
- 2:Voice
- 3:Inbox
- 4:Outbox
- 5:Filed Msg
- 6:WebAlert
- 7:Erase Msg
 - 1:Voice
 - 2:OldInbox
 - 3:NewInbox
 - 4:Outbox
 - 5:Filed
 - 6:All Messages
- 8:Msg Setup
 - 1:Scroll Timer
 - 2:Msg. Reminder
 - 3:Voice Mail #
 - 4:New Message
 - 1:Callback #
 - 2:Save Message
 - 3:Entry Method
 - 4:Auto Delete
 - 5:Canned Msg.
 - 0:Yes

1/2/3/4/5 seconds/Off
Every 2 min/Off/Once

Auto Save/Prompt /Not Save
T9 Word/Alphabet
Warning Msg/Auto Delete

	1:No	
	2:Call me	
	3:Need directions	
	4:Where are you?	
	5:Will call later	
	6:Busy	
	7:On my way	
	8:Will arrive 15 minutes	
	9:Thank you	
	6:Msg. Volume	
	7:Ringer Type	Voice Mail/Page/Text/Web Alert
4:Mobile Web		
	1:Get In Web	
	2:Prompt	
5:Planner		
	1:Today	
	2:Scheduler	
	3:Jump To Date	
	4:To Do List	
	5:Memo Pad	
	6:Count Down	
	7:Alarm Clock	
	8:World Time	
	9:Calculator	
6:Display		
	1:Animation	Opening/Closing/Wall Paper
	2:Banner	
	3:Color Window	
	1:Group	
	2:Day of Week	
	3:Planner	
	4:Initialize all	
	4:Backlight	Folder Open/Always Off/7 Seconds/ 15 Seconds/30 Seconds
	5:Contrast	
	6:Auto Hyphen	No/Yes
7:Sounds		
	1:Ringer Volume	
	1:Calls	
	2:Alarm	
	2:Ringer Type	
	1:Calls	
	2:Alarm	
	3:Data/Fax In	
	4:Planner	
	3:Key Beep	
	1:Volume	
	2:Tone Length	
	4:Alerts	
	1:Minute Beep	On/Off
	2:Service	On/Off
	3:Connect	On/Off
	4:Disconnect	On/Off
	5:Fade	On/Off
	6:Roam	On/Off

	7:Privacy	On/Off
	5:Power On/Off	
	6:Roam Ringer	
	7:Whisper Mode	
8:Voice		
	1:Voice Dial	
	1:Record	
	2:Review	
	3:Erase All	
	4:Set Active	[*]Only/[*]+Folder/[*]+EarMic
	2:Voice Memo	
	1:Record	
	2:Review	
	3:Erase All	
	3:Voice Answer	
	1:On/Off	Enable/Disable
	2:Setup	Greeting/Screening/Wait Time
	3:Inbox	
9:Games		
	1:Push Push	
	2:Fly Ribbon	
	3:Spider Hunter	
0:Setup		
	1:Location	
	2:Network	
	3:Data/Fax	data-fax off/fax for next call/fax until powered off/ data for next call/data until powered off
	4:Security	
	1:Lock Phone	
	2:Change Lock	
	3:Emergency #	
	4:Voice Privacy	
	5:Restriction	
	6:Clear Memory	
	7:Reset Phone	
	5:Call Answer	Send Key/Folder Open/Any Key
	6:Auto Answer	
	7:Auto Retry	
	8:Language	English/Spanish
	9:Clock Set	
	1:Main Clock	
	2:Dual Clock	
	0:Version	
In-Use Menu (Can be opened only when on a call)		
	1:Mute/Quit	
	2:Calls	Outgoing/Incoming/Missed/Erase Logs/Air Time
	3:Phone Book	
	1:Find	
	2:Add	
	3:Rename Grp	
	4:My Phone#	
	5:Memory	
	4:Silent/Quit	
	5:Send Tel #	
	6:My Phone #	

Using your phone's menus

Your phone offers a range of functions that allow you to tailor the phone to your personal requirements. These functions are arranged in menus and submenus.

The menus and submenus can be accessed by using the navigation key or using shortcuts.

Accessing menus using the navigation key

- Menu options are numbered but can also be accessed by using the navigation key.
- Press right to activate **Voice Memo**.
- Press down to activate the **Memo Pad**.
- Press left to activate the **Scheduler**.
- Press up to search your **Phone Book** by name.

Returning to the previous menu

When using the navigation key you can return to the previous menu at anytime.

To do this:

- Press  to return to the previous menu.
- Press  to exit the menu without saving the setting.

Accessing menus using shortcut numbers

All main menus, menu levels, and menu content items are assigned numbers. All menus and their contents can be accessed using these “Shortcut” numbers.

The following steps are a sample exercise to access games:

1. In standby mode, press  to access the main menu.
2. Press  for **Games**.
3. Press  for **Push Push**.
4. Press  to start.

Calls

Outgoing

To place a call press  to power on your phone. The phone first shows an animated sequence and the icons discussed earlier display, this indicates your phone is on. (No dial tone will be heard). This is called standby mode.

1. Enter the phone number you want to call (up to 32 digits), by pressing the numeric keys. The phone numbers display from left to right.
2. Press  to place a call to the entered phone number.

Incoming

Your phone signals an incoming call or message in the following ways:

- An animation message
- The LCD color changes according to your color setting
- The backlight illuminates
- The red LED indicator flashes
- The ringer sounds (unless you have set the ringer to vibrate or off)

Incoming call notification continues until one of the following events occurs:

- You answer the call
- The calling party ends the call
- The call is sent to voicemail

Your phone provides the following voice call notification features:

- Five ring volume settings including 1- beep, vibrate, or silent.
- Six ring types and fifteen melody tones
- Name display with Caller ID. (If the caller's name is programmed into your Phone Book.)
- Automatic storage of an incoming call's information to a call log.
(The last 10 calls you answered are stored in an Incoming call log list and the last 10 calls you missed are stored in a Missed call log list)

Missed

Your phone keeps a list of calls that you did not answer when the phone was active and service available. The phone indicates a missed call by displaying a text notification on the screen. Additionally, if caller information is available, a Missed call entry is created, and the screen displays the phone number of the most recent missed call.

Your phone has several convenient options for when you miss a call:

- Press  to call the displayed number.
- Press  to clear the Missed Call message from the display.
- View your Missed calls log.

Erase log

You can erase any one of the call directories (Outgoing, Incoming or Missed), or you can erase all three directories.

To erase all directories:

1. In standby mode, press  to display the main menu.
2. Press  for the **Calls** menu.
3. Press  for **Erase Log**. The available options are:
 - **Outgoing**
 - **Incoming**
 - **Missed**
 - **All Calls**
4. Press  highlight **All Calls**.
5. Press  to erase all your call directories.
6. Press  to cancel the action and return to the previous menu.

Reviewing calls

When a call log is displayed, press the number associated with the call log to be connected.

1. In standby mode, press  to display the main menu.
2. Press  for **Calls**.
3. Press the number associated with the call log to select an option:
 - Press  for **Outgoing** calls.
 - Press  for **Incoming** calls.
 - Press  for **Missed** calls.
 - Press  for **Erase Logs**.
 - Press  for **Air Time**.

4. When the call log option displays, press  to locate the call information you require. If there is a Phone Book match, the name displays. If there is no Phone Book match, only the phone number will display.
5. When your selection is highlighted you can:
 - Press  to be connected to that party.
 - Press  to review all the available call information (name and phone number [if available] and time/date stamp.)
 - Press  for more options.
6. Press  to exit, and return to the previous screen.

Keeping track of call activity

Your phone saves a record of calling activity that permits you to easily return calls.

Your phone retains the following call directories in memory:

- **Outgoing:** The last 10 calls placed from your phone.
- **Incoming:** The last 10 calls placed to your phone.
- **Missed:** The last 10 calls placed to your phone that you did not answer.
- **Erase Logs:** The last 10 calls you chose to erase from your call log.
- **Air Time:** The talk time spent on your calls.

Air time

Your phone records (or logs), the amount of air time or talk time used for all calls.

To view Air Time from standby mode:

1. In standby mode, press  to display the main menu.
2. Press  for **Calls**.
3. Press  for **Air Time**.

4. Press  to highlight an option. The available options are:
 - **Last Call**
 - **Total**
 - **LifeTime**
 - **Erase Total**
5. Press  to open an option, or press  to cancel, and return to the previous screen.

Last call

Last call allows you to review the amount of time spent on the last call you made.

1. In standby mode, press  to display the main menu.
2. Press  for **Calls**.
3. Press  for **Air Time**.
4. Press  for **Last Call**. The amount of time spent on your last call displays.
5. Press  to return to the previous display screen.

Total

Total air time is the cumulative amount of time the phone has been used since the total air time was last erased. Air time for all incoming and outgoing calls is saved here. This feature is not intended for billing purposes.

1. In standby mode, press  to display the main menu.
2. Press  for **Calls**.
3. Press  for **Air Time**.
4. Press  for **Total**.

The screen displays the total number of calls, and the total air time for calls made and received since you last set the **Total** air time to zero (by using the **Erase Total** option.)

5. Press  to return to the previous display screen.

LifeTime

LifeTime air time is the amount of time the phone has been used since it was first activated. Air time for all incoming and outgoing calls is saved here. This feature is not intended for billing purposes.

Note: You cannot erase any information created by this option.

1. In standby mode, press  to display the main menu.
2. Press  for **Calls**.
3. Press  for **Air Time**.
4. Press  for **LifeTime**.

The screen displays the total number of calls made from this phone, and the total amount of air time used since this phone was set-up. This information cannot be erased.

5. Press  to return to the previous display screen.

Erase total

If you choose the Erase Total option, the counter for all air times with the exception of LifeTime, will be set to zero. The counter will begin counting the next time you make or receive a call.

To erase your total air time:

1. In standby mode, press  to display the main menu.
2. Press  for **Calls**.
3. Press  for **Air Time**.

4. Press  for **Erase Total**.
5. Press  to highlight **Yes** or **No**.
6. With **Yes** highlighted, press  to erase the total airtime and return to previous display, or press  to cancel the operation and return to the previous display screen.

Call waiting

Your phone beeps when another call is coming in.

To answer this call:

1. Press . When connected, ask them to remain on the line or, request to call back later.
2. Press  and they will be placed on hold.

You are now connected to your original call. You can press  to alternate between calls.

Caller I.D.

This feature allows you to see who is calling you by displaying the callers number when the phone rings. If the callers name and number are stored in the phone book, the name also displays. You can also block your number from being displayed on another phone by enabling the call block feature.

To activate call block:

1. Press    .
2. Enter the phone number and press .

Note: To block your number permanently, contact your service provider.

Three way calling

To place a three way call:

1. Call the first party, and press . When connected, ask them to remain on the line, press  and they will be placed on hold.
2. Call the second phone number, and press .
3. When the second party answers, press  and all parties will be connected.

Note: You may need to contact your service carrier to set up Call waiting, Caller I.D., and Three way calling.

Phone Book

Your phone permits you to store up to 500 numbers and names in the Phone Book. Each entry can have up to 7 associated phone numbers and one e-mail address. Each entry can contain up to 32 digits including hard pauses, with an associated name of up to 12 characters. (Name entry is optional). You can specify the memory location of your choice for each entry. Memory locations can be marked Secret preventing unauthorized viewing.

One-Touch, Two-Touch, and Three-Touch Dialing from your Phone Book makes it easy to call a phone number stored in your Phone Book.

To access your Phone Book:

1. Press  for the main menu.
2. Press  for **Phone Book**.

Use the instructions given in the following subsections to manipulate your Phone Book.

Find by name

This option allows you to find a stored name (alphabetically) in the Phone Book and place a call to that name.

1. In standby mode, press  to display the main menu.
2. Press  for **Phone Book**.
3. Press  for **Find**.
4. Press  to highlight **By name**.
5. Press  to select the name. The display screen shows the phone number and E-mail address (if available) associated with the name.
6. Press  to place the call.
7. Pressing  returns you to the previous screen.

Find by entry

This option allows you to find a stored entry by location number.

1. In standby mode, press  to display the main menu.
2. Press  for the **Phone Book**.
3. Press  for **Find**.
4. Press  to highlight **by Entry**.
5. Press  to select the entry. The entry information is displayed.
6. Press  to highlight the phone number.
7. Press  to call the number.

Find by group

This option allows you to find a stored entry in a related group.

1. In standby mode, press  to display the main menu.
2. Press  for the **Phone Book**.
3. Press  for **Find**.
4. Press  to highlight **by Group**.
5. Press  to select the entry. The entry information is displayed.
6. Press  to highlight the phone number.
7. Press  to call the number.

Renaming a group

Use this option to rename or edit a group in your phone book.

1. In standby mode, press  to display the main menu.
2. Press  for the **Phone Book**.
3. Press  for **Rename Group**.
4. Press  up or down to locate the group you are renaming.
5. Press  .
6. Press  to select **T9 word, ABC, Symbol or 123**.
7. Press  to erase the old group name.
8. Use the keypad to enter new group name.
9. Press  .

Add

This menu allows you to add information to your Phone Book.

With the phone in standby mode:

1. Press  for the main menu.
2. Press  for **Phone Book**.
3. Press  for **Add**. The **Phone Book** display screen prompts you to confirm **Number** or **E-mail**.
4. Press . Enter the phone number or e-mail address. For pause options press .
5. Press  to save in **New Entry**.
6. Press  to highlight one of the following fields:
 - **Home**
 - **Office**
 - **Mobile**
 - **Pager**
 - **Fax**
 - **No Label**
7. Using the keypad, enter the name that is associated with the number.

Note: This step is optional

8. Press  to save the entry.

Setting secret

This feature allows you to keep certain numbers in your **Phone Book** confidential so that others cannot access them.

1. From the **Phone Book** (option) screen, press  to highlight **Secret**.
2. Press  to highlight **Secret On** or **Secret Off**.
3. Press .

Note: All Phone Book entries can be made secret. If you access the entry later, you will be prompted to enter your 4-digit user lock code.

Editing phone book numbers

Once stored in the Phone Book, an entry can be changed quite easily.

To change a Phone Book entry:

1. In standby mode, press  to display the main menu.
2. Press  for **Phone Book**.
3. Press  for **Find**.
4. Press  to highlight the entry requiring editing.
5. Press . The existing phone number is highlighted.
6. Press  and  to highlight the **Edit** option.
7. Press . The **Phone Book** (option) screen displays.
8. Press  to save your changes.

Note: Press  until the existing number is deleted. Enter the new number.
(You can enter up to 32 digits.)

Overwriting existing name and number information

You can overwrite existing information using separate actions in both the name and number fields. Follow these instructions:

1. At the **Phone Book** (options) screen, press the  to highlight an existing name or number field. When highlighted, press  .
2. To overwrite, press , until you clear the existing name or number.
3. Enter the new information.
4. Press  again to save your entry.

Adding pauses

When you call automated systems (like banking services), you are often required to enter a password or account number. Instead of manually entering the numbers each time, you can store the numbers in your Phone Book separated by special characters called pauses.

- **P pause:** A hard pause stops the calling sequence.
- **T pause:** A 2 second pause stops the calling sequence for 2 seconds and then automatically sends the remaining digits.
- **Hyphen:** Places a hyphen between characters.

Note: Multiple 2 second pauses can be entered to extend the length of a pause. For example, 2 consecutive 2 second pauses cause a total pause time of 4 seconds. However, keep in mind that pauses count as digits towards the 32 digit calling maximum.

Storing pauses in a phone book entry

To store a number in your Phone Book that contains pauses:

1. Enter the phone number you want to store (such as the bank's teleservice phone number).
2. Press . The pause menu options display.
3. Press  to highlight one of the three pause menu options offered.
4. Press  to select an option.
5. When the number and pauses are complete, press  to store the number in your **Phone Book**.

Pause dialing from a stored entry

To pause dial from the Phone Book:

1. If you stored the number using (2 second) T pause(s), simply call the number from the Phone Book.
2. If you stored the number using (hard) P pause(s), call the number from the **Phone Book** and wait for the appropriate prompt from the number you are calling (credit card number, bank account number, etc.).
3. Press  to call the number.

Manual pause calling

To manually call a number with pause(s) without storing to the Phone Book:

1. Enter the phone number of the service you want to call (such as a bank's teleservice phone number). Begin by entering the number 1.
2. Press  to display the pause **Menu** options. Press  to locate the pause option of choice and press  to activate. Continue in this manner until you enter the complete number with pause(s).
3. Press  to call the number.

Note: Storing pauses is convenient if you plan to call the number frequently.

Erasing individual phone book entries

To erase an existing entry from either the **Find by Name** or **Find by Entry** option.

1. In standby mode, press  to display the main menu.
2. Press  for **Phone Book**.
3. Press  for **Find**.
4. Press  to highlight the information and press .
5. Press  to display the following menu options:
 - **Talk**
 - **Edit**
 - **Erase**
6. Press  to highlight the **Erase** option.
7. Press . The phone prompts **Yes** or **No**.
8. Press  to highlight your option.
9. Press  to confirm (Yes) and erase the **Phone Book** entry, or press  to cancel (No) the **Erase** command.

Erasing your phone book

You can erase all the numbers stored in your Phone Book. This is useful if you want to give your phone to a friend or family member, or if you need to erase all of your phone numbers.

1. In standby mode, press  to display the main menu.
2. Press   for **Security**. Enter your current 4-digit lock code.
3. Press  for **Clear Memory**. A confirmation message displays asking if you still want to **Erase**.

4. Select **Yes** and press  to erase the **Phone Book entirely**, or press  to cancel the operation. **Erasing Phone Book** and **Voice Dial** displays. The phone then returns to standby mode.

Editing an existing e-mail address

To edit an existing e-mail address:

1. In standby mode, press  to display the main menu.
2. Press  for **Phone Book**.
3. Press  for **Find**. The **Phone Book** displays.
4. Press  to highlight the entry and press .
5. Press , and select the **Edit** option. The Phone Book (options) screen displays. Edit the existing E-mail address.
6. Press  to save.

Setting speed dial

For each name entered in the Phone Book, the option of designating a Speed Dial number is available.

1. In standby mode, press  to display the main menu.
2. Press  for **Phone Book**.
3. Press  for the **Find**.
4. Press  to highlight your entry.
5. Press  to display that entry's phone number.
6. Press  for options.
7. Press  to highlight the **Edit** option.
8. Press . The **Phone Book** (options) screen displays.
9. Use the keypad to enter the associated **Speed dial** number.

10. Press  to continue, following the prompts, or press  to cancel and return to the previous screen.

Storing incoming phone numbers at the end of a call

To store a phone number after ending a call:

Note: If the call was incoming, and Caller ID information was unavailable, then the store option will also be unavailable.

1. Once you have pressed  to end your call, the screen displays the call time (length of call), phone number and name of the party (if available).
2. Press .
3. Follow the prompts to save the number.

Storing phone numbers from call logs

To store a phone number from the call logs:

1. In standby mode, press  to display the main menu.
2. Press  for **Calls**.
3. Press  for **Outgoing**,  for **Incoming**, or  for **Missed** calls.
4. Highlight the number you want stored in the **Phone Book** and press .
5. Press  for menu options, navigate to highlight **Save**.
6. Press  to store the phone number to the **Phone Book**.

Shortcuts to storing phone numbers

You can store a phone number by entering the number, and pressing .

Follow the screen prompts to designate other information. You can also save a number after an incoming or outgoing call.

One-touch dialing

Memory locations 001 through 009 are special One-Touch locations. You can call the phone numbers stored in the Phone Book memory from 001 through 009 by pressing one key. For example, for location number 001. Press and hold  until the name and number are displayed and called.

Two-touch dialing

Memory locations 010 through 099 are special Two-Touch locations. For example, for location number 013, press  and hold down  until the name and number are displayed and called. To dial the number 100, Three Touch dialing is required.

Three-touch dialing

Memory locations 100 through 500 are three-Touch locations. For example, for location number 113, press   and hold  until the name and number are displayed and called. To dial the number 100, Three Touch dialing is required.

Shortcuts to memory dialing

Speed Dialing:

1. From standby mode, enter the entry's **Speed Dial** number.
2. Press  to call.

Note: You must press and hold the last digit of your speed dial number for your call to go through.

Navigating to the number:

1. From standby mode, press  for main menu.
2. Press  for **Phone Book**.
3. Press  for **Find**.
4. Use the navigation key to highlight the entry.

5. Press  to call that entry's **Speed Dial** number.

My phone

To display your phone's number:

1. In standby mode, press  to display the main menu.
2. Press  for the **Phone Book**.
3. Press  for **My Phone #**. The phone's number displays.
4. You can press  to return to the previous menu at any time.

Memory

This features saves voice and dial calls in memory. You can save up to 500 automatic dial in your Phone Book and up to 20 in Voice Dial.

Messages

Your phone comes equipped with several ways to send and receive messages.

Mobile originating SMS text messaging

Note: Check with your service provider to confirm availability of this service.

Your phone is able to send and receive text messages. When a message is received, your phone will sound an alert tone (unless turned off) and a new message pop-up window displays on the screen.

Note: This memory is shared between all messages. You can store 30 incoming, 30 outgoing, 20 filed, and 1 voice mail. The number of messages that can be stored is dependent upon the length of the messages. Messages that you send can contain a total of 160 characters.

Creating SMS text messages

1. In standby mode, press   (press  when in-use) to display **Message**.
2. Press  for **New Messages**. The screen displays **Send To:**.
3. Press  to select from options. (**Phone Book, T9 Word, ABC, Symbol, 123**).
4. Press  to highlight an option.
5. Press .
6. Enter the message using the keypad and selected method of entry.
7. Press  to open the **Action** menu. Select one of the following:
 -  Allows you to send the message.
 -  Allows you to save the message.
 -  Allows you to return to the previous menu.
 -  Allows you to cancel the message and end the session.
8. When finished, press . The phone will send you a delivery acknowledgement about 20 seconds after delivery.

To continue, select from the following two menus:

9. Pressing  opens the **Options** menu. Select from the following:
 - **Priority:** Allows you to assign a priority to your messages.
 - **Urgent**
 - **Normal**
 - **Validity:** Allows you to select the period of time you want the message to be available to the recipient.
 - **None**
 - **30 min.**
 - **1 hour**
 - **2 hours**
 - **12 hours**
 - **1 day**

- **2 days**
- **3 days**
- **Send Later:** Allows you decide when you want your message sent.
 - **None**
 - **30 min.**
 - **1 hour**
 - **2 hours**
 - **12 hours**
 - **1 day**
 - **2 days**
 - **3 days**
- **Message Save:** Provides options on how your message is saved.
 - **Do not save**
 - **Prompt Save**
 - **Auto Save (Default)**

Entering text, numbers, and/or symbols

At various times when using your phone, you will need to enter text in the display screen. Some examples would be: adding an E-mail address, storing a name in the Phone Book, entering events in the Scheduler, or inputting text messages. If you want to enter text on the display screen.

1. When you are entering events, numbers, or text in your phone select  to view the menu options:
 - **T9 Word**
 - **ABC**
 - **Symbol**
 - **123**
2. After you are in the correct menu, use the navigation key to highlight your option, then press  to save. Enter your information. You can:
 - Press  to insert a space.
 - Press  to clear the last number, letter, or symbol, or Press and hold  to completely clear the input field.

To change the input mode again:

1. Press  to view the options.
 2. Press  to highlight your choice.
 3. Press  to save.
- **ABC:** This is the text entry mode.
 - **T9 Word:** This is the predictive word entry mode. You can quickly and easily enter frequently used words.
 - **Symbol:** Symbol entry is used with numeric keys and associated symbols.
 - **123:** This is the number entry mode.

Alphabetical text entry

Alphabetical text entry characters may be entered in ABC mode, by pressing the corresponding key to the letter you want to enter.

Press the same key repeatedly to change between the characters represented by each key. To change capitalization formats while entering text, press .

Entering numbers

Numeric mode enables you to enter numbers into a text message.

Symbol entry

Symbol mode enables you to enter symbols into a text message. Use  to display the options, then press the navigation key up/down to select the symbol option. When displayed, use the navigation key to manipulate the symbols. When in Symbol input mode, press the key shown on the display under the required symbol.

T9® word text entry

T9 Word, or T9 for text on 9 keys, requires only one key press per letter, and recognizes the most commonly used word of a numeric sequence.

For example, to enter the word hello, you can spell out the word by pressing only five keys, 4-3-5-5-6. T9 Text Input recognizes the most commonly used word for that numeric sequence is hello. If two or more words share the same numeric sequence, T9 provides the most commonly used word, with the ability to navigate to the next most commonly used word by pressing .

Press  repeatedly to display all of the available words that T9 knows. When the word you need displays, continue to enter text in the same way, or change to another text or character entry mode.

Note: To type words not found in the T9 mode, change the text input mode to ABC mode. You can include numbers between letters without exiting the T9 input mode by pressing and holding the desired numeric key.

New messages

You can create text or e-mail messages to send to another party. Each message can be sent to up to 10 numbers or E-mail addresses at a time. Message options allow you to set a priority, validate a time period, or send a message after a specified time. You can also file draft messages yet to be sent, into a folder, or save sent messages to the Outbox to review their delivery status.

Note: Sending messages is only supported in digital networks. This feature will only be available if your service provider's network supports it.

Note: Once you begin entering data, the number of characters available will be displayed on the screen.

1. In standby mode, press   (press  when in-use) to display **Message**.
2. Press  for **New Messages**.
3. The screen displays **Send To:**

4. Pressing  permits selection from the options: **Phone Book, T9 Word, ABC, Symbol** and **123**.
5. After finding and entering the **Send To:** information, press  to go to the **Message** menu.
6. Enter your message data, (press  to select your text entry mode), when finished, press  to return to the **New Message** menu.
7. If the same message is to be sent to multiple recipients, press  to go to the **Send To** menu.
8. Press  and enter the number you want to send
9. Press  when finished.
10. To add additional recipient addresses, repeat the above steps. The multiple destinations entered will be updated on the **Send To** screen.
11. Press  at any time to despatch the information.

Inbox

Your phone can store text messages in your inbox.

To view your messages:

1. In standby mode, press   (press  when in-use).
2. Press  to open the Inbox
3. Highlight the message you want to view using the .
4. Press . The phone displays the message contents.
5. While viewing your message press  to access the following options:
 - Reply
 - Forward
 - Delete
 - Save
 - Save addr
 - Save cb#

Outbox

Your phone stores messages in Outbox, regardless of whether the message was successfully transmitted. If Do Not Save was not set in the Save Message setting under Msg Setup, you can review, resend, or delete any message stored in the Outbox. You can also verify if a message or E-Mail was successfully transmitted, and at what date and time by opening the Delivery Acknowledgement feature.

Reviewing outbox

To review outgoing messages:

1. In standby mode, press   (press  when in-use) to display the **Message** menu.
2. Press  for **Outbox**. A list of messages displays.
3. Using the , highlight the message you want to review and press  to select it.
4. Press  for further options. A **Sent Msg** menu will display.
 - Select **Re-send** to resend the message, press  to resend with the same message settings.
 - Select **Delete** to delete the message from **Outbox**.

Message memory capacity

Your phone can store up to 81 messages combined for all messages. The storage capacity includes all received, sent, filed message types, VMN (Voicemail Notification), and text messages. The number of messages stored, depends upon the length of each message. When message memory reaches over 75% capacity, the screen displays a text notification. At 100% capacity, the screen displays a text notification and rejects additional incoming messages until you erase the stored messages from Inbox, Outbox or Filed Msg.

Messages and lock mode

Incoming messages are received even when your phone is in Lock Mode. The screen will display the time and date of the message but you cannot access the message. To access the message, unlock the phone to proceed.

Filed message

Your phone can store draft messages that are yet to be sent in the Filed Msg folder. You can access this folder at a later time to edit and send the message.

To view messages:

1. In standby mode, press   (press  when in-use) to display the **Message** menu.
2. Press  for **Filed Messages**.
3. Press  to view messages.

To access unsent messages and continue editing:

1. In standby mode, press   (press  when in-use) to display the **Message** menu.
2. Press  for **Filed Msg**. The number of pending messages display next to the **Filed Msg** text. The filed messages will display in order.
3. Press  to highlight the message, and press  to open.
4. Press  for the options.
5. Use the navigation key to highlight **Edit** or **Delete**.
6. Press  to view and select from the available options.
7. Enter the **Send To:** information and press . The **Message** screen displays.
8. Press  for the options. Use the navigation key to highlight an option and press .

9. Enter a message, when finished press , the **New Messages** screen displays.
10. Press  for **Action**.
11. Press  for **Filed Msg**.

Web Alert

Your phone alerts you with incoming browser messages. When a new message arrives, your phone will display a text notification together with an audible alert.

You can access Web Alert from the Message menu:

1. In standby mode, press   (press  when in-use) to display the **Message** menu.
2. Press  for **Web Alert**.
3. Press  to complete the action.

Note: Contact your service provider for availability.

Erase message

1. In standby mode, press   (press  when in-use) to display the **Message** menu.
2. Press  for **Erase Msg**.
3. Press  to highlight an option.
4. Press  to complete the action.

Message setup

1. In standby mode, press   (press  when in-use) to display the **Message** menu.
2. Press  for **Message setup**.

You can preset a number of options for general settings or new messages. The message indicator is displayed and remains on the screen until you listen to the new voicemail message, read the **New BrowserMsg** or **Text Msg**.

Scroll timer

Scroll Timer allows you to select the amount of time you would like your scroll to be available before closing.

Msg. reminder

Message Reminder allows you to select the number of times you would like to be reminded that you have a message.

Voice mail

Voice Mail # allows you to input numbers for Voice Mail.

New message

Offers a number of options. Each option offers different features.

Callback #

Press  to automatically call the number displayed on the screen.

Save Message

You are offered three options. Select  to save the setting.

Prompt - saves the message.

Not Save - does not save the message.

Auto Save - automatically saves the created message to the **Outbox** after the message is transmitted.

Entry Method

You can navigate between **Alphabet** and **T9 Word** (predictive keypad) for the default setting. Select  to save the setting.

Auto delete

This option allows you to have your message automatically deleted after viewing it. Or, you can choose to be warned before your message is deleted.

Canned Msg.

Canned messages are pre-programmed into your phone. You can select the number that is associated with each canned message, and press  to edit.

Once you are done editing your **canned message**, press  to save.

Message volume

While setting up your messages you can adjust the message volume. To do this press    for **Message setup**. Press  for **Message volume**. Use the Navigation key to highlight your volume level, and press  to save.

Receiving a message in standby mode

When your phone receives incoming messages in standby mode, the ringer sounds, (unless it is turned off), and the screen displays: **New Voicemail**, **New Text**, **New Page** or **New BrowserMsg**. The message icon is displayed, and remains on display until you listen to, or read, the new message.

Receiving a message while on a call

When you receive a message while you are on a call, the **New Messages** screen displays two options: **Ignore** and **Read**. The closed envelope icon  is displayed.

You can easily review the new message while on the call by just pressing . Your call will not be disconnected, and you can ask the other party to wait while you review the message. If you want to ignore the message, just select that option and continue with your call.

Reviewing voice mails and text messages

When a message arrives, you can recall the sender's call back number if it is available, by pressing . To review the message, press . The **Inbox Msg** list provides options for reviewing the sender's name, number, date and time information, and the message.

Reviewing stored voicemail and text messages in standby mode

1. In standby mode, press , to display the **Message** menu. The number of received or sent messages displays next to the associated message type in the menu.
2. Press  for **Voice**. The date and time for the last voice mail message received display with a notification of the number of new voice mail messages.
 - You can press  to call your mail box directly to review voice mails.
 - You can press  for **Inbox**. A list of messages displays.
 -  next to an entry number indicates an urgent message.
 -  next to an entry number indicates that the message has already been read.
3. Use the  to highlight the message you want to review, press  to open it.

- While reviewing the message, you can press the  to locate message information such as: date and time, sender's call back number, senders number, E-Mail address, and message. However, if you wait a few seconds the phone will automatically scroll through the display.
- To review other messages, press the  to the right to review the next message, or to the left to review the previous message.

4. Pressing  returns you to the previous screen.

Note: Press  for further options when reviewing a message. When in standby mode, press and hold  to automatically dial voice mail.

Message options

When reviewing Messages, the menu provides a number of options. You can return a call or text message to the phone number, or e-mail address in that message, or you can forward the message to another.

1. In standby mode, press   (press  when in-use) to display the **Message** menu. A number of received or sent messages displays next to the associated message type in the menu.
2. For **Text** messages use the  to locate the message you want to review, press  to open.
3. Press  to view the following options:
 - **Reply:** to reply to the sender. The phone accesses the New Message menu and copies the sender's originating address to the Send To field.
 - **Forward:** to forward the message to another. The phone accesses the New Message menu, and copies the sender's message (body) to the Message field.
 - **Delete:** to delete the message from the Inbox.
 - **Save:** to store information in filed mgs.

- **Save addr:** to save the sender's e-mail address to the Phone Book. The address is automatically copied into the Add Entry or E-mail Entry field.
- **Save cb#:** to save the call back number to the Phone Book. The number is automatically copied to the Add Entry field.

4. Pressing  returns you to the previous **Inbox** messages list screen.

Ringer type — Message

To activate, view or change the ringer type for messages:

1. In standby mode, press  to display the main menu.
2. Press  for **Message**.
3. Press  for **Msg Setup**.
4. Press  **Ringer Type**.
5. Press the  to highlight the message ringer type you are changing.
6. Press .
7. Use the  to hear tones. Each tone plays as you navigate through the options.
8. When the desired ringer type plays, press  to save the setting.

Note: You can press  to return to the previous menu at any time.

Mobile web

Your phone comes equipped with Wireless Web Internet access through a MiniBrowser. The MiniBrowser displays immediate information through your phone. You can view specially designed versions of popular sites which include sports, weather, news, stock quotes, etc. Browsing the Web through your phone is not the same as using your PC since site providers have only selected certain aspects of the available sites to present to the wireless phone users and have removed most graphics.

Each time you launch the MiniBrowser, the phone will connect to the Internet and the service indicator icon will display. Any time the service indicator icon is visible on the display, you are connected to the Internet and will be invoiced accordingly. Rates and pricing vary according to your service option. For further information contact your service provider.

The MiniBrowser will end an Internet connection after a certain period of inactivity, however some information from your session remains stored in the phone, and (if you leave your phone turned on) you can access this information without reconnecting to the Internet. If you are viewing this stored information, and you select a link to a site that was not accessed in your last session, then you will automatically be re-connected to the Internet.

Note: The phone must be in a digital network to use the MiniBrowser. When you are in a digital network, the **D** icon is displayed.

A shortcut to launching the Web

You can quickly use this shortcut to access the Minibrowser.

In standby mode, press the center of the navigation key:



Internet
access key

Launching the minibrowser

Note: The first time you use the MiniBrowser, you will be prompted to go through a security setup process that takes approximately three to five minutes.

Note: When the security key is initially sent to the carrier, a unique value is created. If the phone is reset for any reason, you must contact the carrier to reset the security key. The original key is no longer valid and will not allow the MiniBrowser to operate.

To launch the MiniBrowser.

1. In standby mode, press , or  .
2. Press  for **Get in Web**.
3. Press the  left. Your phone will begin its search to launch the MiniBrowser.
4. Once connected, the Home Page (or the last page visited), will be displayed. Press and hold  to access the MiniBrowser. An example of a **Home Page** is shown below:

WEB HOME PAGE

1. Financial
2. Traffic
3. Travel
4. Weather
5. Sports
6. Entertainment
7. Games
8. Shopping
9. Portals

Note: What appears in the display window is dependent upon the service provider content. To view additional text, use the .

Exiting the web/minibrowser

Press  to exit the Web.

If the **Prompt to end** or **Prompt both** option is selected in the MiniBrowser setup (  ), a prompt asking if you want to end the MiniBrowser call is displayed.

The minibrowser start and end prompts

Your phone can be set to view a prompt each time you start or end a MiniBrowser session. You have the option to change this default prompt setting. The default setting may differ as it is based upon the carrier's requirement.

To change the settings:

1. In standby mode, press the  or press   for **Mobile Web**.
2. Press  for **Prompt**.
3. Press  to highlight your option:
 - **None:** This prompt is never displayed.
 - **To Start:** You will see this prompt when you enter the browser, but not when you exit it.
 - **To End:** You will see this prompt only when you exit the browser.
 - **Both:** You will be prompted when you enter or exit the browser.
4. Press  to save your setting or press  to cancel.

The minibrowser soft keys

At the bottom of the MiniBrowser display is a solid bar which contains the browser commands. The “soft” keys ( ) appear below the solid bar and are used to execute the commands. These two keys are called “soft” keys because their function changes depending on where you are in the MiniBrowser software.

Navigating the web

When you use the MiniBrowser, some of the keys on your keypad will operate differently than during a normal phone call.

The MiniBrowser presents on-screen items in any of the following ways:

- Text or numeric input
- Links (embedded in content)
- Numbered options (some options may not be numbered)
- Simple text

You can act on the options or links by using the soft keys.

How the minibrowser keys work



Navigation key: Use this key to find and select all of your options.



OK / message: This key is used primarily for selecting the highlighted item.



CLR: This key performs two functions:

- It is used as a browser back-up key.
Pressing it once backs you up one page.
Pressing and holding it down backs you up to the carrier's **Home Page**.
- It also clears entered text or numbers.
When entering numbers or text, press it to clear the last number, letter, or symbol.
Press and hold it down to completely clear the input field.



Asterisk / Shift: Press this key before entering text to create upper case characters. You can also use this key to move back one space on the display screen.



0/Next: Press this key to enter a 0, or to move to the next word when in T9 predictive word entry mode.



Pound/Space: Press this key to insert a space when entering text.



Numbers 1 - 9: If items on a menu are numbered, these keys can be used to select them.



END: Press this key to exit the MiniBrowser and return the phone to standby mode.



MENU: This key can be used to enter the MiniBrowser menu at any time.



SEND: This key can be used to send a call.

Using links

Links have several purposes, including jumping to a different page, jumping to a different site or even initiating a phone call from some sites. Links are shown inside of brackets ([]), and you can normally use the left soft key to select a link when it is highlighted.

Making a phone call while using the minibrowser

You may initiate a phone call from the MiniBrowser if the site you are using supports this feature (the phone number may be highlighted and the left soft key will appear as Call). Pressing the Call soft key will call the number. In most cases you can also use  to call the number. The Internet connection will

be terminated when you initiate the call. After you end the call, your phone will return to standby mode.

Planner

The Planner allows you to add events in a calendar. They can be viewed at anytime. You can also set an alert to remind you of your plans.

1. In standby mode, press  to display the main menu.
2. Press  for **Planner**.
3. Press  to highlight an option. The available options are:
 - **Today**
 - **Scheduler**
 - **Jump To Date**
 - **To Do List**
 - **Memo Pad**
 - **Count Down**
 - **Alarm Clock**
 - **World Time**
 - **Calculator**
4. Press  to open that option.

Today

You can schedule up to 9 events for the current day by indicating each event's start and end time. You can be alerted by an alarm before an event is to commence. Events that are scheduled for future dates automatically appear on your Today events schedule on that particular day.

Scheduler

Scheduler functions allow you to schedule personal events and view them in an easily read format.

How to schedule an event

1. In standby mode, press  to display the main menu.
2. Press  for **Planner**
3. Press  for **Scheduler**.
4. Press  to select **View**, or **Add New**.
5. Make your selection and press .
6. Press  to view the following options.

- **T9 Word**
- **ABC**
- **Symbol**
- **123**

7. Press  to highlight an option.
8. Press  to select that option.

Note: Press and hold  to navigate between text entry modes and numeric icons, making it easier to enter information in the correct format.

9. Enter the event. (Up to 32 characters can be entered.)
10. Press  to continue. The **Time/Date** screen displays.
11. Add the start time and date using the keypad.
12. Press  to display the next screen. Add the end time and date. After the correct information is entered.
13. Press , an alarm screen is displayed. Use the navigation key to highlight an alarm to notify you of your event. The options are: **No alarm, On time, 10Min before, 30Min before, 1Hour before**.
14. Use the  to locate the option and press  to save. The phone prompts that the information is **Stored**.

How to add, edit, or erase an event

1. In standby mode, press   for the **Planner**.
2. Press  to display **Today**.
3. Press .
4. Press  for the following options:
 - **Add New:** Allows you to add an event
 - **Edit:** Allows you to edit an event
 - **Erase:** Allows you to erase an event
 - **Erase all:** Allows you to erase all scheduled events
5. Press  to select the option of choice, and complete the exercise by following the prompts.

Scheduler

Scheduler allows you to view in calendar format the current month, a past month or a future month. In Scheduler, the current date is highlighted on the calendar. Days with scheduled events are underlined.

How to view an event

1. In standby mode, press  to display the main menu.
2. Press  for **Planner**.
3. Press  for **Scheduler**.
4. A current calendar screen displays. The current date is highlighted.
5. Press the  right/left to select a new date.
6. Press the  up/down to view a new week.
7. Press the  to view a new month.
8. Pressing  at a selected date, offers the following options:
 - **View:** Permits you to view the previous entries for that date
 - **Add New:** Permits you to add a new entry for that date.

9. Use the navigation key to highlight **Add New**.

10. Press  to enter the option.

Jump to date

Jump To Date allows you to specify the calendar date you want to view. You can enter, edit, and/or erase events in your calendar.

Using jump to date:

1. In standby mode, press .
2. Press  for **Planner**.
3. Press  for **Jump To Date**.
4. Enter the date you want then press .

To do list

The To Do List allows you to compile a list of items to be completed. Your phone can store, prioritize and manage twenty To Do List items.

Creating a to do list item:

1. In standby mode, press   for the **Planner**.
2. Press  for **To Do List**. An **Add To Do** screen displays.
3. Use the navigation key to set the priority for a **To Do List** item. Your choices are **High** and **Low**.

How to view, edit, add, or erase a to do list item

1. In standby mode, press   for the **Planner**. Press  for **To Do List**. Press  to locate the event you want to change.
2. Press . Your options are: **Add new, Edit, Erase, and Erase all**. Complete the exercise by following the prompts.

Memo pad

1. In standby mode, press  to display the main menu.
2. Press  for **Planner**
3. Press  for **Memo Pad**.
4. Press  to view old memos.
5. Press  to view the following options:
 - **Add new**
 - **Edit**
 - **Erase**
 - **Erase All**
6. Choose your option and press .
7. Press  to view the following options:
 - **T9 Word**
 - **ABC**
 - **Symbol**
 - **123**
8. Press  to highlight an option.
9. Press  to select the option.

Count down

Count Down allows you to find out how much time will elapse between the time entered and a scheduled event. You can create up to twenty Countdown timers.

-   and  are equal to A.M. and P.M.
 - Countdowns can be entered for dates between the years 1980 and 2099.
1. In standby mode, press   for the **Planner**.
 2. Press  for **Count Down**. The screen prompts for a new **Count Down**. Enter a name for your new **Count Down** timer.
 3. Press .

4. Enter the date and time you want to “**Count Down**” to. For example: if today's date is April 1, 2001 and you want to know how many months, days, and hours remain before 7:00 P.M. February 14th 2002, enter the time 07:00 P.M. and the date 02/14/2002.
5. Press  to store the **Count Down** timer.

How to view, edit, add or erase a count down timer

1. In standby mode, press   for the **Planner**.
2. Press  for **Count Down**. Countdown timers display in order of the least amount of time passed since the countdown commenced, and least amount of time remaining until the specified date.
3. Press  to open the options.
4. Press  to select the option. Use the navigation key to find the item you want to change and follow the prompts.
5. Press  at any time to exit the exercise.

Alarm clock

Your phone has an Alarm Clock that can be set to go off once, or daily at a specified time.

Once set, the Alarm Clock is easy to change or turn off completely.

To set the Alarm Clock:

1. In standby mode, press  to display the main menu.
2. Press  for **Planner**.
3. Press  for **Alarm Clock**.
4. Press  to the option you want to use.
5. Press . The **Alarm Clock** menu opens.

- Using the keypad, enter the time for the alarm to activate. Press  to store the setting, or press  to return to the previous alarm options menu.

Your phone only supports a 12 hour time display, it is necessary to press either

  , or  . These keys represent A.M. and P.M. respectively.

Note: Once an alarm is set, an alarm clock icon  displays on the screen in standby mode. When the alarm is turned off the alarm clock icon  is removed.

World time

Informs you of the time of day, or night in another part of the world. World Time displays the time in 24 different time zones around the world, in one or more major cities, states, regions or countries. It should be noted that World Time does not support Daylight Savings Time for countries other than the USA.

Checking current time world wide

- In standby mode, press   for the **Planner**.
- Press  for **World Time**. The screen displays a world map. The city, country, time and date are indicated by a longitude indicator. You can navigate up/down, left/right to reach the city and time you need.

• Alaska	• San Francisco	• Denver, Arizona
• Chicago, Mexico	• New York	• Caracas
• Brasilia	• Mid Atlantic	• Cape Verde
• London	• Paris, Berlin	• Athens, Helsinki
• Moscow	• Abu Dhabi	• Tashkent
• Alma-ata	• Bangkok, Jakarta	• Hongkong, Beijing
• Seoul, Tokyo	• Guam, Sydney	• Okhotsk
• Wellington	• Samoa, Midway	• Honolulu, Hawaii

Calculator

You can perform calculations, including addition, subtraction, multiplication and division using your phone.

To perform a calculation:

Use  to enter a decimal point, and  to change the sign for a number to a negative.

1. In standby mode, press   for the **Planner**.
2. Press  for **Calculator**. The Calculator screen displays.
3. Use the keypad to enter the first number in your calculator. (Numbers can be up to 9 digits long.)
4. Use the navigation key to set the operation for your calculator. Your choices are:
 - **[+] Addition**
 - **[-] Subtraction**
 - **[x] Multiplication**
 - **[/] Division**
5. Use the keypad to enter the second number into your calculator.
6. Press  to perform the calculation and view the result, or continue to calculate with the same operator, or change the operator and continue. Every time you change the operator, the previous calculation is performed and the result is displayed as the bottom number on the display screen.
7. Press  to perform the calculation and view the result.

Display

The following features offered under the Display menu allow you to customize your phone.

- **Animation**
- **Banner**
- **Color Window**
- **Backlight**
- **Contrast**
- **Auto Hyphen**

Animation

This feature allows you to choose from animations already available on your phone:

To display an animated image:

1. In standby mode, press  to display the main menu.
2. Press  for **Display**.
3. Press  for **Animation**.
4. Press  to change one or all of the following options:
 - **Opening**
 - **Closing**
 - **Wallpaper (Idle Mode)**
5. Make your selection and press  to save.

Banner

This option allows you to edit and personalize a banner to display on your phone while in Standby Mode.

Note: Enter the personal greeting using the keypad, Press  for **T9 Word, ABC, symbols** and **123** options respectively

Note: The  key also navigates through the same options in identical order, and can be pressed for upper case characters.

To create a banner:

1. In standby mode, press  to display the main menu.
2. Press  for **Display**.
3. Press  for **Banner**.

Note: Press and hold  to erase an existing banner.

4. Enter your new banner (Up to 12 characters).
5. Press  to save.

Color Window

This feature allows you to display different colors for the following options:

- **Group:** Friend, Family, Colleague, VIP, No name
- **Day of week:** Monday, Tuesday, Wednesday, Thursday, Friday, Saturday, Sunday
- **Planner:** Alarm, Event
- **Initialize all:** Select Yes or No to initialize the color window for all of your entries.

To set the color:

1. In standby mode, press  to display the main menu.
2. Press  for **Display**.
3. Press  for **Color Window**.

4. Press the  to go through the menu options.
5. Select your option and press .

The following options appear:

- **Friend**
- **Family**
- **Colleague**
- **VIP**
- **No Name**

6. Select your option and press .
7. Press the  to make your color selection.
8. Press  to save.

Backlight

There are several options for setting the Backlight features.

Press any key and the backlight comes on.

Note: Backlight usage drains your battery faster.

To set the Backlight:

1. In standby mode, press  to display the main menu.
2. Press  for **Display**.
3. Press  for **Backlight**.
4. Press the  to go through the menu options:
 - **Always Off**
 - **7 seconds**
 - **15 seconds**
 - **30 seconds**
 - **Folder open**
5. When the desired setting is reached, press  to save.

Contrast

The LCD has contrast setting that can help you see the screen better in different lighting conditions.

To set the LCD contrast:

1. Press  to display the menu.
2. Press  for **Display**.
3. Press  for **LCD Contrast**.
4. Scroll between the contrast settings to determine what contrast is most visible to you.
5. When the desired contrast setting displays, press  to save.

Auto hyphen

With the option set to **Yes**, your phone automatically hyphenates numbers. For example: 972-761-0000.

To set the Auto Hyphen option:

1. In standby mode, press  to display the main menu.
2. Press  for **Display**.
3. Press  for **Auto Hyphen**. The **Yes** and **No** options display.
4. Press  to highlight an option.
5. Press  to save.

Note: You can press  to return to the previous menu at any time.

Sounds

Ringer options

Your phone provides a variety of ringer options through the Sounds menu. These options allow you to customize your ringer type and ringer volume settings in order to easily recognize a certain type of incoming call, message or scheduled event.

Adjusting ringer volume (rapidly)

From standby mode, you can adjust the ringer to vibrate, 1-beep, silent, or volume levels 1-5 using the .

Adjusting voice volume during a call

You can adjust the handset as well as the (optional) headset volume during a call by using the .

Ringer volume

To adjust the volume using the Sounds ringer volume option:

1. In standby mode, press  to display the main menu.
2. Press  for **Sounds**.
3. Press  for **Ringer Volume**.
4. Highlight your option and press .
5. The screen immediately displays the volume icon  the bars of which will change according to the setting chosen, you can also press the  down to change the setting. When the desired setting is reached, press  to save.
6. Press  to return to the previous menu at any time.

Ringer type

Six monotone ringer types and fifteen melody tones can be found under the ringer type option in the Sounds menu.

Ringer type — Calls

To activate, view or change the ringer type for calls:

1. In standby mode, press  to display the main menu.
2. Press  for **Sounds**.
3. Press  for **Ringer Type**.
4. Press  for **Calls**.
5. Use the  to navigate through the 6 monotone ringer types and 15 melody tones. Each tone plays as you navigate through the options.

Note: When the lowest volume setting is reached, the phone automatically goes into vibrate mode, physically alerting you to this option.

6. When the desired ringer type plays, press  to save the setting.

Note: You can press  to return to the previous menu at any time.

Ringer type — Alarm

To activate, view or change the ringer type for the alarm:

1. In standby mode, press  to display the main menu.
2. Press  for **Sounds**.
3. Press  for **Ringer Type**.
4. Press  for **Alarm**.
5. Press the  to hear tones. Each tone plays as you navigate through the options.
6. When the desired ringer type plays, press  to save the setting.

Note: You can press  to return to the previous menu at any time.

Ringer type — data/fax incoming

To activate, view or change the ringer type for incoming data/fax calls:

1. In standby mode, press  to display the main menu.
2. Press  for **Sounds**.
3. Press  for **Ringer Type**.
4. Press  for **Data/Fax In**.
5. Use the  to hear tones. Each tone plays as you navigate through the options.
6. When the desired ringer type plays, press  to save the setting.

Note: You can press  to return to the previous menu at any time.

Ringer type — planner

To activate, view or change the ringer type for your planner:

1. In standby mode, press  to display the main menu.
2. Press  for **Sounds**.
3. Press  for **Ringer Type**.
4. Press  for **Planner**.
5. Use the  to hear tones. Each tone plays as you navigate through the options.
6. When the desired ringer type plays, press  to save the setting.

Note: You can press  to return to the previous menu at any time.

Key beep

Key Beep allows you to adjust the tone length and volume level that the keypad generates each time you press a key. The display icon shows up to 5 levels (the loudest setting). No bars indicate that the key beep function is silenced.

1. In standby mode, press  to display the main menu.
2. Press  for **Sounds**.
3. Press  for **Key Beep**.
4. Press  for **Volume**, or press  for **Tone Length**.
5. Press the  to adjust level or tone.
6. When the desired level or tone is reached, press  to save the setting.

Note: You can press  to return to the previous menu at any time.

To mute DTMF:

1. Press .
2. Press  for **Sound**.
3. Press  for **Key beep**.
4. Press  for **Volume**.
5. Use the  or  to **Silence tones**.
6. Press . Your key beeps are now silenced during your call.

To mute DTMF while using Earpiece/Headset:

1. Press .
2. Press  for **Sound**.
3. Press  for **Key beep**.
4. Press  for **Volume**.
5. Use the  or  to **Silence tones**.
6. Press . Your key beeps are now silenced during your call.

Alerts

Your phone will beep from time to time, this beep is called an alert beep. Alert beeps can easily be turned on or off. This feature offers the following options:

Minute beep, Service, Connect, Disconnect, Fade, Roam, and Privacy.

Alerts — Minute beep

You can set the minute beep option to sound an alert 10 seconds before each elapsed minute to remind you of the length of the current call.

To turn minute beep on or off:

1. In standby mode, press  to display the main menu.
2. Press  for **Sounds**.
3. Press  for **Alerts**.
4. In this exercise select the **Minute beep** option. (For other Alerts/ exercises to work correctly, select the appropriate option.)
5. Press the  to choose between **On** or **Off**.
6. When the desired setting is reached, press  to save the setting.

Note: You can press  to return to the previous menu at any time.

Alerts — service

You can set the service alert option to sound an alert when the phone goes in and out of service coverage areas.

Alerts — connect

With this option set to **On**, the phone sounds an alert when your call is connected.

Alerts — disconnect

When this option is set to **On**, the phone sounds an alert when the phone experiences a dropped or a failed call.

Note: You can press  to return to the previous menu at any time. When a call experiences a failed or dropped call, a text message will display. Press  to clear the prompt and return to standby mode. If the dropped call was an outgoing call from your phone, you can redial the number automatically by pressing  twice.

Alerts —fade

When this option is set to **On**, the phone sounds an alert when a dropped call occurs during conversation in response to a signal fade.

Alerts — roam

When this option is set to **On**, the phone sounds a unique tone when you leave your home service area when on a call.

Alerts — privacy

The Privacy option allows you to set the security level of your phone to avoid eavesdropping. You will hear a tone when this option is set to **ON**.

Power on/off

Using this feature you can choose to have sound when you power on and off.

1. In standby mode, press  to display the main menu.
2. Press  for **Sounds**.
3. Press  for **Power On/Off**.
4. Press  to choose between **On** or **Off**.
5. When the desired setting is reached, press  to save the setting.

Roam ringer

When this option is set to **On**, your phone sounds a unique tone when a call is received in a network service area. This feature is set to **On** by default.

To set the Roam Ringer alert on or off:

1. In standby mode, press  to display the main menu.
2. Press  for **Sounds**.
3. Press  for **Roam Ringer**.
4. Press the  to choose between **On** or **Off**.
5. When the desired setting is reached, press  to save the setting.

Note: You can press  to return to the previous menu at any time.

Whisper mode

This feature allows you to whisper when you are talking to a caller.

1. In standby mode, press  to display the main menu.
2. Press  for **Sounds**.
3. Press  for **Whisper Mode**.
4. Press  to choose between **On** or **Off**.
5. When the desired setting is reached, press  to save the setting.

Voice

You can call up to 20 stored names simply by speaking one of the names into the microphone.

Voice dial

Your phone features Voice Dial(ing). Using the Voice Dialing feature requires that you first program the phone to recognize the name of the person you are calling.

Note: You can store only one voice dial entry per stored name. You **CANNOT** store multiple entries for a stored name.

Tips on recording names

- Avoid recording similar names phonetically. If you record a name similar to one already stored in voice memory, the phone requests another name.
- Avoid recording in a noisy place.
- Speak clearly and naturally.
- Avoid very long or very short names. Names with two to five syllables are recommended.
- If a voice entry does not properly connect, you may need to record the name and number again.

Record

The phone provides voice prompts and screen displays to guide you through the recording process.

To program the phone for voice calling:

1. In standby mode, press  to display the main menu.
2. Press  for **Voice**.
3. Press  for **Voice Dial**.
4. Press  for **Record**. The phone will prompt you to say the name you want to record.

5. Wait for the beep and then say the name. For best results, use names with at least two syllables, or use both a first and last name. The phone stores the name as a “first” sample, and then prompts you to say the name again.
6. Respond to the prompt by repeating the name exactly as you did the first time. The phone stores the name as a second sample and then requests the phone number.
7. Enter the phone number using the keypad.
8. Press  to save the number.
- If you select **New Entry**, you can save your numbers in location 504-523.
9. The screen then returns to the **Voice Dial** menu.

Review

To review voice calling entries:

1. In standby mode, press  to display the main menu.
2. Press  for **Voice**.
3. Press  for **Voice Dial**.
4. Press  for **Review**. A list of stored names and numbers display.
5. Press  to highlight the desired entry and press . The recorded name is vocalized.

Erase all

To erase all voice calling entries

1. In standby mode, press  to display the main menu.
2. Press  for **Voice**.
3. Press  for **Voice Dial**.
4. Press  for **Erase All**.

5. At the voice and screen prompt, press  to confirm that you want to **Erase All** of the entries. A screen prompt will display when the entries have been erased.
6. Press  at any time to exit without removing any voice entries.

Set active - Voice dial

Voice dialing is always active once you have programmed the phone to accept voice entries and the associated phone numbers. To place voice activated calls, press and hold . After you hear the voice prompt and the beep, say the name of the person you are calling into the phone or earbud microphone.

1. While in standby, press  to display the main menu
2. Press  for **Voice**.
3. Press  for **Voice Dial**.
4. Press  to set **Set Active**.

- ***Only**
- ***+Folder**
- ***+EarMic**

Voice Memo

Use the following to create a Voice Memo to be heard at a later date:

1. In standby mode, press  to display the main menu.
2. Press  for **Voice**.
3. Press  for **Voice Memo**.
4. Press  for **Record**. The phone will prompt you to say what you want to record.

Note: Pressing the Navigation key left allows you to pause your recording.
Pressing the Navigation key right allows you to re-record your memo.

5. Press  to confirm your memo.

Voice Answer

Use the following to have an incoming call automatically answered and heard at a later date:

1. In standby mode, press  to display the main menu.
2. Press  for **Voice**.
3. Press  for **Voice Answer**.

The following options appear:

- **On/Off**

- **Setup**

Greeting - A default greeting is used to welcome incoming callers when the Call Answer option is enabled. The default message is "Please leave a message after the tone". You can also record your own personal greeting.

Screening - Use this option to turn the speaker on/off.

Wait Time - Use this option to set the amount of time the caller waits to leave a message.

- **Inbox**

4. Use the  to highlight the option you want to change.
5. Press  to confirm your memo.

Games

Your phone's software allows you to play the following games:

- Push Push
- Fly Ribbon
- Spider Hunter

Note: Games are also available on-line by launching your minibrowser.

Contact your service provider for details.

Key commands



- Press up repeatedly to go up or forward. Press left to go left. Press right to go right. Press down repeatedly to go backward.



- Press to begin the game.



- Press to end the game.

Push Push

To open Push Push:

1. Press .
2. Press for **Games**.
3. Press for **Push Push**.
4. Press to start or press for help.

Object

The object of the game is to push the balls into the little house. The ball can be pushed left, right, up, or down. It cannot however, be pushed backwards.

There must always be a space to push the ball forward or else the ball is stuck and the level cannot be completed. Two balls cannot be pushed together, only one ball at a time may be pushed. Once the ball has been pushed into the house, another ball can push the house if another house is located behind it.

You can go back one move by pressing .

Fly Ribbon

To open Fly Ribbon:

1. Press .
2. Press for **Games**.
3. Press for **Fly Ribbon**.
4. Press to view **Help**, then press to start.

Object

The object of the game is to fly the ribbon through a maze of obstacles. Use the navigation key to control the path of the ribbon. Move the flight path of the ribbon up or down to avoid the wall. The longer the distance, the faster the ribbon goes.

Spider Hunter

To open Spider Hunter:

1. Press  to display the menu.
2. Press  for **Games**.
3. Press  for **Spider Hunter**.
4. Press any key to start the game.
5. Select the level by pressing  for easy or  for hard.

Object

The object of the game is to drop the potted plants on the spiders from the top of the wall. To drop the plants, press . The spiders will attempt to reach the top of the wall. You start out with three hearts. If a spider reaches the top, you loose one heart. When you loose all three, the game is over. A high score is recorded each time you play.

Setup

The following features allow you to personalize your phone.

Location

The settings allow you to turn the Location ON or OFF. When you first use your phone this option is set to OFF. This option is automatically turned ON when you place a call to 911. However, this option is turned back OFF when your 911 call is completed.

Note: Check with your service provider to determine if/when/where location-based services are available.

To turn Location ON or OFF:

1. Press  for **Main Menu**.
2. Press   for **Location**.

3. Press  to display the Setting screen.
4. Use  to select an option.
5. Press  to Save and exit.

Network

Your phone allows you to set the preferred system. Contact your service provider to determine the best networking methods for you.

To select the network you want to use:

1. In standby mode, press  to display the main menu.
2. Press  for **Setup**.
3. Press  for **Network**.
4. Use  to select an option:
 - **Set Nam**
 - **Roam Option**
 - **Force Call**
5. Press  to save.
6. Pressing  returns you to the **Setup** menu.

Data/fax

Your phone is capable of sending and receiving digital data and fax calls when connected to a computing device (laptop, desktop, hand held, palmtop, etc.) running Windows 95, Windows 98, Windows 2000, Windows ME, or Windows NT. Your phone functions just like a typical modem on your PC, enabling you to use wireless data involving a wide variety of Windows software applications.

To use digital data or fax services with your phone, you will need to obtain a digital data/fax kit from your service provider. This kit will contain the necessary cables, software, and documentation required for you to connect and use your phone with your computing device.

To set up Data/Fax calls:

1. In standby mode, press  to display the main menu.
 2. Press  for Setup.
 3. Press  for **Data/Fax**. The **Data Mode** screen displays.
 4. Use  to select an option. The options are:
data/fax off, **fax for next call**, **fax until powered off**, **data for next call**, and **data until powered off**.
 5. Press  to save your option of choice.
 6. Pressing  returns you to the previous screen.
- **data/fax off:** No incoming Data/Fax calls can be received.
 - **fax for next call:** Waiting for Fax Call. No Voice Calls can be received for next 10 minutes.
 - **fax until powered off:** No Voice Calls can be received.
 - **data for next call:** Waiting for data call. No voice calls can be received.
 - **data until powered off:** No voice calls can be received.

Note: The phone must be on a digital network to receive or send faxes and data. When you are in a digital network, the **D** icon is displayed.

Receiving a fax

1. In standby mode, press  to display the main menu.
2. Press  for **Setup**.
3. Press  for **Data/Fax**.
4. Use  to highlight **fax for next call**.
5. Press  to save this option.

In the Fax program on your PC set up **Answer Mode**. Click on Receive and select either **Automatic Receive** (recommended), or **Manual Receive**. Your phone is now ready to receive an incoming fax.

Note: Once you have set your phone's mode to fax for next call, you cannot receive regular voice calls until you change back to data/fax off, or a fax is received.

Ending a fax or data call

Some of the normal ways to end a call, like closing the phone, will not end a fax or data call. Always close the connection through the application on your computer. Your phone will return to standby mode. Disconnecting the data cable or turning off your phone will also end a data or fax call, but may disrupt your computer.

Sending a fax or data file

When connected to a computing device, your phone allows wireless fax and data transmissions. Your computing device software initiates the call to the destination phone number. Your phone functions as a wireless modem to send the fax or data file to the number designated by your PC software.

Changing your phone back to voice calling

To change your phone back to voice calling:

1. In standby mode, press  to display the main menu.
2. Press  for **Setup**.
3. Press  for **Data/Fax**.
4. Use  to highlight **data/fax off**.
5. Press  to save this option. The screen displays **No incoming Data/Fax calls can be received**.

Security

Your phone provides security options, including a user-programmable lock code and emergency/secret phone number features.

To access the Security menu in standby mode:

1. Press  ,  ,  .
2. Enter the 4-digit lock code (**normally the lock code is the last 4-digits of your phone number**).
3. Make your selection from the following options:
 - **Lock Phone**
 - **Change Lock**
 - **Emergency #**
 - **Voice Privacy**
 - **Restriction**
 - **Clear Memory**
 - **Reset Phone**

Lock phone

Locking the phone limits all outgoing calls except calls to 911 emergency and the three user-programmable emergency/secret numbers.

You can lock the phone manually during use, or set the phone to lock automatically when it is turned on. When the phone is in Lock Mode, you can answer incoming calls, but you must unlock the phone to place outgoing calls (except to emergency and secret numbers).

Locking the phone

The Security menu allows you to lock the phone manually or automatically when powering on your phone or to leave the phone unlocked.

To lock the phone:

1. In standby mode, press  to display the main menu.
2. Press   for **Security** and enter your current lock code.
3. Press  for **Lock Phone**.
4. Press the  to select your option.
 - **Never:** The phone remains unlocked.
 - **Now:** The phone locks immediately and stays locked until the lock code is entered.
 - **On Power-Up:** The phone locks automatically the next time your phone is powered on and stays locked until the lock code is entered.
5. Press  to save the setting.

Unlocking the phone

Enter your phone's lock code (last four digits of the phone number or 0000), and the phone is immediately unlocked.

Calling in lock mode

You can place emergency calls using confidential numbers you program in lock mode.

To place an outgoing call in lock mode:

To call 911 or a confidential number, enter the number and then press .

Restricting the use of your phone

This feature allows you to restrict the use of your phone.

1. In standby mode, press  to display the main menu.

2. Press   for **Security**. Enter your current lock code.
3. Press  for the **Restriction** options.
4. Use the  to restrict the use of your Outgoing calls, Incoming calls, and your Phone Book.
5. Press  .
6. Use the  to select **Yes** or **NO**.
7. Press  to save.

Lock code

The default lock code for your phone is generally the last four digits of your phone number. You can enter a personal lock code and later change the lock code as often as you like.

To enter a new lock code:

1. In standby mode, press  to display the main menu.
2. Press   for **Security**. Enter your current lock code.
3. Press  for **Change Lock**. The screen prompts **ENTER NEW CODE**. Enter a new, 4-digit lock code by pressing the keypad. You will be prompted to **RE-ENTER NEW CODE**. Enter the same 4-digit lock code.

Note: Your phone does not allow viewing of the lock code unless you know the lock code (this is for obvious security reasons). So, if you change the lock code, be sure to write down or memorize the new code.

Emergency number

Your phone provides the option of storing three emergency numbers. Each number can be up to 32 digits.

All emergency numbers can be manually called at any time even when your phone is locked or restricted. This can be a useful feature for controlling what numbers can be called from your phone.

Note: Emergency number 911 is hard-coded into your phone. You can dial these numbers and press  at any time, even when the phone is locked or restricted. If you call 911 an audible tone is heard and an **Emergency** prompt is displayed during the duration of the call.

Because of various transmission methods, network parameters, and user settings used to complete a call from your wireless phone, a connection cannot always be guaranteed.

Therefore, emergency calling may not be available on all wireless networks at all times.

DO NOT depend on this phone as a primary method of calling 911 or for any other essential or emergency communications.

Remember to always turn your phone on and check for adequate signal strength before placing a call.

Storing emergency numbers

To store emergency numbers:

1. In standby mode, press  to display the main menu.
2. Press  for **Setup**.
3. Press  for **Security**.
4. Enter your current lock code.
5. Press  for **Emergency #**.
6. Press , , or  to select from the three entry openings.
7. Enter the emergency number. Up to 32 digits can be entered for each number.
8. Press  to save the number entered.
9. Press  to exit and return to the previous menu.

Calling emergency numbers in lock mode

To call emergency numbers in lock mode:

1. In standby mode, use the keypad to enter the emergency number.
2. Press  to place the call.

Clear Memory

Clear Memory erases your Phone Book and Voice Dial recordings. Personal settings (the call log, Messages, Schedules, or other phone feature settings), are unaffected by clearing the memory on your phone. This feature is useful if you want to give your phone to a friend or family member, or if you want to erase all of your phone numbers.

To clear your phone's memory:

1. In standby mode, press  to display the main menu.
2. Press   for **Security**. Enter your current lock code.
3. Press  for **Clear Memory**. A confirmation prompt will display.
4. Press  to clear the phone's memory, or press  to cancel the operation.

Note: After a few seconds, a prompt Erased message will display and the phone will return to standby mode.

Resetting your phone

Resetting the phone returns all setup options to the factory default settings.

To reset the phone:

1. In standby mode, press  to display the main menu.
2. Press   for **Setup** and **Security** and enter your current lock code.
3. Press  for **Reset Phone**. A confirmation prompt displays asking if you want to **Proceed**.

4. Press  to reset the phone or press  to cancel the operation.

Call answer

With this option activated, your phone will allow you to select a specific answer mode when you receive an incoming call. Your phone can be preset to answer when you do any of the following:

- **SEND key:** You can answer the phone by pressing .
- **Any key:** You can answer the call by pressing any key except .
- **Folder open:** Opening your phone will answer your call.

To set Call answer:

1. In standby mode, press  to display the main menu.
2. Press  for **Setup**.
3. Press  for **Call Answer**. The **Call Answer** screen displays.
4. Use  to highlight an option.
5. Press  to save your option.
6. Pressing  returns you to the previous screen.

Auto answer

With this option activated, your phone will automatically answer calls after the specified number of seconds. This options is useful when driving.

If Auto Answer is set to Off the phone will not answer an incoming call. If you do not answer the call it is automatically stored in the Missed Call log.

To enable Auto Answer:

1. In standby mode, press  to display the main menu.
2. Press  for **Setup**.
3. Press  for **Auto Answer**. The **Auto Answer** screen displays.
4. Press  to highlight one of the available options:

- off

- **after 1 sec**
- **after 3 sec**
- **after 5 sec**

5. Press  to save.
6. Pressing  returns you to the previous screen.

Auto retry

With this option activated, your phone automatically dials the number when a connection fails. Dependent upon your location, the number of times your phone automatically dials the number may vary.

To enable Auto Retry.

1. In standby mode, press  to display the main menu.
2. Press  for **Setup**.
3. Press  for **Auto Retry**. The **Auto Retry** screen displays.
4. Press  to highlight an option. The options are:
off, every 10 seconds, every 30 seconds and every 60 seconds.
5. Press  to save your option.
6. Pressing  returns you to the previous screen.

Language

The language option on your phone can change the language of voice prompts, menus, and key-input.

To change the language:

1. In standby mode, press  to display the main menu.
2. Press  for **Setup**.
3. Press  for **Language**.
4. Press  to highlight the language required.
5. Press  to save.

Note: You can press  to return to the previous menu at any time.

Clock set

Your phone is equipped with a standard clock and a dual clock for seeing time in multiple cities or countries. Your phone automatically displays the time and date when in digital mode. This same information is unavailable on the screen when your phone is out of service or in analog mode when powered up.

To manually set the time and date:

1. In standby mode, press  to display the main menu.
2. Press  for the **Setup**.
3. Press  for **Clock Set**. The **Main Clock** and **Dual Clock** options display.

To set Main Clock:

1. Press the  to highlight **Main Clock**.
2. Press .
3. Enter the time (using the 12 hour format) and date. Use  for A.M. and  for P.M.
4. When the desired setting displays, press  to save.

Note: You can press  to return to the previous menu at any time.

To set Dual Clock:

1. Press the  to highlight **Dual Clock**.
2. Press .
3. Press the  left or right to select from the following:
 - **Location** - Allows you to choose the country/city.
 - **Summer Time** - To accommodate for Daylight savings time you must manually set this option **On** or **Off** for each country/city offered in **Location**.

4. Use the  set each option.
5. When the desired setting displays, press  to save.

Note: You can press  to return to the previous menu at any time.

Version

You can view both the software version and hardware version running on your phone. This feature is helpful if you need to call your carrier.

Note: You can press  to return to the previous menu at any time.

1. In standby mode, press  to display the main menu.
2. Press  for **Setup**.
3. Press  for **Version**. The hardware and software information displays.
4. Press  to return to standby mode.

In-Use Menu

Your phone includes both a standby menu and an In-Use menu. The In-Use menu is displayed by pressing  while the phone is being used during a call.

The In-Use menu options are:

- **Mute/Quit** - Mutes or (Un)mutes your end of a phone conversation so that the recipient can hear nothing except key tone.
- **Calls** - Checks your call log for outgoing, incoming, and missed calls. You can also erase the logs from this menu.
- **Phone Book** - Accesses the Phone Book menu options.
- **Silent/Quit** - Activates or deactivates the Silent keypad feature. When set to the silent mode, your keypad's tone is not sent out to the calling party. However, this feature should not be used when you access automated services that require you to select options, or enter numbers using the keypad.
- **Send Tel #** - Sends your phone number to the calling party or automated services.
- **My Phone #** - Displays the phone's own number.
- **Version** - Displays the version of the software and hardware that is being used on the phone.
- **Voice Privacy** - Gives you the option of having enhanced or standard privacy.
- **Location** - Displays whether GPS is set to On or 911 only.
- **Send DTMF** - This menu item allows the user to manipulate the audible keypad tones. See "Key beep" on page 87 to mute DTMF in earpiece or headset.

Usage guidelines:

All about performance and safety

Getting the Most Out of Your Reception

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal.

If you're inside a building, being near a window may give you better reception.

Understanding the Power Save Feature

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. If your phone is active, it periodically rechecks service availability or you can check it yourself by pressing any key. Anytime the Power Save feature is activated, a message displays on the screen. When a signal is found, your phone returns to standby mode.

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

Knowing Radio Frequency Safety

The design of your phone complies with updated NCRP standards described below.

In 1991-92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this updated standard after reviewing

the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

Maintaining Your Phone's Peak Performance

Note: For the best care of your phone, only authorized personnel should service your phone and accessories. Faulty service may void the warranty.

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- Hold the phone with the antenna raised, fully-extended and over your shoulder.
- Try not to hold, bend or twist the phone's antenna.
- Don't use the phone if the antenna is damaged.
- Speak directly into the phone's receiver.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery. If it's inoperable, return it to an authorized service provider or call Customer Care for service.

Maintaining Safe Use of and Access to Your Phone

FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE

Using Your Phone While Driving

Talking on your phone while driving is illegal in some states. Even where it's not, it can divert your attention from driving. Remember that safety always comes first.

When using your phone in the car:

- Get to know your phone and its features, such as speed dial and redial.
- When available, use a hands-free device.
- Position your phone within easy reach.
- Let the person you are speaking to know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.
- Do not take notes or look up phone numbers while driving.
- Dial sensibly and assess the traffic; if possible, place calls when you are stationary or before pulling into traffic.
- Do not engage in stressful or emotional conversations that may divert your attention from the road.
- Dial    to report serious emergencies. It's free from your wireless phone.
- Use your phone to help others in emergencies.
- Call special non-emergency wireless number when necessary.

Following Safety Guidelines

Note: Always turn off the phone in health care facilities and request permission before using the phone near medical equipment.

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating systems and/or entertainment systems in motor vehicles. Check with

the manufacturer or their representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

Turning Off Your Phone Before Flying

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

Turning Off Your Phone in Dangerous Areas

To avoid interfering with blasting operations, turn off your phone when in a blasting area or in other areas with signs indicating that two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

Note: Never transport or store flammable gas, liquid or explosives in the compartment of your vehicle that contains your phone or accessories.

Turn off your phone when you're in any area that has a potentially explosive atmosphere. Although it's rare, your phone or its accessories could generate sparks. Sparks could cause an explosion or a fire resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They include:

- Fueling areas such as gas stations.
- Below deck on boats.

- Fuel or chemical transfer or storage facilities.
- Areas where the air contains chemicals or particles such as grain, dust or metal powders.
- Any other area where you would normally be advised to turn off your vehicle's engine.

Restricting Children's Access to your Phone

Your phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone or make calls that increase your phone bill.

Caring for the Battery

Protecting your Battery

The guidelines listed below help you get the most out of your battery's performance.

- Use only Samsung-approved batteries and desktop chargers. These chargers are designed to maximize battery life. Using other batteries or chargers voids your warranty and may cause damage.
- In order to avoid damage, charge the battery only in temperatures that range from 32° F to 104° F (0° C to 40° C).
- Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- Never dispose of the battery by incineration.
- Keep the metal contacts on top of the battery clean.
- Don't attempt to disassemble or short-circuit the battery.
- The battery may need recharging if it has not been used for a long period of time.

- It's best to replace the battery when it no longer provides acceptable performance. It can be recharged hundreds of times before it needs replacing.

Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:

Less than one month:

32° F to 131° F (0° C to 55° C)

More than one month:

32° F to 104° F (0° C to 40° C)

Disposal of Lithium Ion (Li-Ion) Batteries

Note: For safety, do not handle a damaged or leaking Li-Ion battery.

For safe disposal options of your Li-Ion batteries, contact your nearest Samsung-authorized service center.

Special Note: Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

Acknowledging Special Precautions and FCC

FCC Notice

The phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the phone if such interference cannot be eliminated.

Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Batterymarch Park, Quincy, MA 02269, Attn: Publication Sales Division.

Cautions

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment, and void your authority

to operate this equipment. Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

Body-Worn Operation

To maintain compliance with FCC RF exposure guidelines, if you wear a handset on your body, use the Samsung supplied or approved carrying case, holster or other body-worn accessory. If you do not use a body-worn accessory, ensure that the antenna is at least one inch (2.5 centimeters) from your body when transmitting. Use of non- Samsung approved accessories may violate FCC RF exposure guidelines.

For more information about RF exposure, please visit the FCC website at www.fcc.gov.

Specific Absorption Rates (SAR) for Wireless Phones

The SAR is a value that corresponds to the relative amount of RF energy absorbed in the head of a user of a wireless handset.

The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different

model phones do not mean variations in safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

This wireless portable device has been shown to be capable of compliance for localized specific absorption rate (SAR) for uncontrolled environment/general population exposure limits specified in ANSI/IEEE Std. C95.1-1992 and has been tested in accordance with the measurement procedures specified in ANSI/IEEE Std. C95.3-1992.

Part 22 AMPS Mode - Head Max. SAR: 1.1860 W/Kg

Part 22 AMPS Mode - Body Max. SAR: 1.07 W/Kg

FDA Consumer Update

Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radio frequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new

drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radio frequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that it is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to a interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Committee
- Occupational Safety and Health Administration

The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities about wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones.

FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the wireless exposures that people get from these base stations are typically thousands of times lower than those they get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

What kinds of phones are the subject of this update?

The term “wireless phones” refers here to hand-held wireless phones with built-in antennas, often called “cell,” “mobile,” or “PCS”. These types of wireless phones can expose the user to measurable radio frequency energy (RF) because of the short distance between the phone and the user’s head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person’s RF exposure decreases rapidly with increasing distance from the source. The so-called “cordless phones” which have a base unit connected to the phone wiring in a house, typically operate at far lower per levels, and thus produce RF exposures far below the FCC safety limits.

What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radio frequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could Accelerate the development of cancer in laboratory animals. However, many of the studies

that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what results of such studies mean for human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glaucoma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phones RF exposures. However, none of the studies can answer questions about long-term exposures, since average period of phone use in these studies was around three years.

What research is needed to decide whether RF exposure from wireless phones poses a health threat?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years' follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones.

Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radio frequency energy (RF).

FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The project has also helped develop a series of public information documents on EMF issues.

FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

How can I find out how much radio frequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit radio frequency energy (RF) exposures. FCC established these guidelines in consultation with FDA and other federal health and safety agencies. The FCC limit for exposure from wireless telephones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissue that absorb energy from the wireless phone and is set well below levels known to have effects.

Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

What has FDA done to measure the radio frequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the radio frequency energy (RF) exposure from wireless phones and other wireless hand sets with the participation and leadership of FDA scientists and engineers. The standard, "Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques," sets forth the first consistent test methodology for measuring the

rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?

If there is a risk from these products--and at this point we do not know that there is--it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna.

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radio frequency energy (RF), the measured described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

What about wireless phone interference with medical equipment?

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed on late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI.

FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of

Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a “compatible” phone and a “compatible” hearing aid at the same time. This standard was approved by the IEEE in 2000.

FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

Where can I find additional information?

For additional information, please refer to the following resources:

- FDA web page on wireless phones
(<http://www.fda.gov/cdrh/phones/index.html>)
- Federal Communications Commission (FCC) RF Safety Program
(<http://www.fda.gov/oet/rfsafety>)
- International Commission on Non-Ionizing Radiation Protection
(<http://www.icnirp.de>)
- World Health Organization (WHO) International EMF Project
(<http://www.who.int/emf>)
- National Radiological Protection Board (UK)
(<http://www.nrpb.org.uk>)

CTIA Safety Information

Exposure to radio frequency signals

Your wireless hand held portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standard bodies:

- ANSI C95.1 (1992)
- NCRP Report 86 (1986)
- ICNIRP (1996)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of your phone complies with the FCC guidelines (and those standards).

Antenna care

Use only the specified of approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

Phone operation

NORMAL POSITION: Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

Tips on efficient operation:

For your phone to operate most efficiently:

- Extend your antenna fully.
- Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Driving

Check the laws and regulations on the use of wireless telephones in the areas where you drive. Always obey them. Also, if using your phone while driving, please:

- Give full attention to driving--driving safety is your first responsibility.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Electronic devices

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6") inches be maintained between a hand-held wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- Should ALWAYS keep the phone more than six inches from their pacemaker when the pacemaker is turned on;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference.
- If you have any reason to suspect that interference is taking place, turn your phone OFF immediately.

Hearing aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives.) *Optional for each phone manufacturer.*

Other medical devices

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted facilities

Turn your phone OFF in any facility where posted notices so require.

Aircraft

FCC regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

Blasting areas

To avoid interfering with blasting operations, turn your phone OFF when in a “blasting area” or in areas posted: “Turn off two-way radio”. Obey all signs and instructions.

Potentially explosive atmospheres

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include fueling areas such as gasoline stations; below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

For vehicles equipped with an airbag

An airbag inflates with great force. DO NOT place objects, including both installed or portable wireless equipment, in the area over the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Owner's Record

The model number, regulatory number and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This will be helpful if you need to contact us about your phone in the future.

Model:

Serial No.:

User Guide Proprietary Notice

CDMA Technology is licensed by QUALCOMM Incorporated under one or more of the following patents:

4,901,307, 5,109,390, 5,267,262, 5,416,797

5,506,865, 5,544,196, 5,657,420, 5,101,501

5,267,261, 5,414,796, 5,504,773, 5,535,239

5,600,754, 5,778,338, 5,228,054, 5,337,338

5,710,784, 5,056,109, 5,568,483, 5,659,569

5,490,165, 5,511,073

T9 Text Input is licensed by Tegic Communications and is covered by U.S. Pat. 5,818,437, U.S. Pat. 5,953,541, U.S. Pat. 6,011,554 and other patents pending.

Limited Warranty

1. What is Covered and For How Long?

SAMSUNG TELECOMMUNICATIONS AMERICA, L.P. (“SAMSUNG”) warrants the original (“Purchaser”) that SAMSUNG’s phones and accessories (“Products”) are free from defects in material and workmanship under normal use and service for a period commencing on the date of purchase and continuing for the specified period of time after the date:

- **Phone - 1 year**
- **Batteries - 1 year**
- **Leather Cases/Pouch - 90 Days**
- **Holster - 90 Days**
- **Other Phone Accessories - 1 year**

2. What is Not Covered?

The limited warranty is conditioned upon proper use of Product by Purchaser. This limited warranty does not cover: (a) defects or damage resulting from accident, misuse, abuse, neglect, unusual physical, electrical, or electromechanical stress, modifications of any part of the Product, including antenna, or cosmetic damage; (b) equipment that has the serial number removed or made illegible; (c) any plastic surfaces or other externally exposed parts that are scratched or damaged due to normal usage; (d) malfunctions resulting from the use of Product in conjunction with the accessories, products, ancillary, or peripheral equipment not furnished or approved by SAMSUNG; (e) defects or damage from improper testing, operation, maintenance, installation, or adjustment; (f) installation, maintenance, and service of product, or (g) Product used or purchased outside the United States or Canada. This Limited Warranty covers batteries only if the battery falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not

cover any battery if (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, or (iii) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

3. What are SAMSUNG's Obligations?

During the applicable warranty period, SAMSUNG will repair or replace at SAMSUNG's sole option, without charge to purchaser, any defective component part of the phone or accessory. To obtain service under this limited warranty, purchaser must return Product to an authorized phone service facility in an adequate container for shipping, accompanied by Purchaser's sales receipt or comparable proof of sale showing the date of purchase, the serial number of Product, and the seller's name and address. To obtain information on where to deliver the phone or accessory, call your service provider or Samsung Customer Care at (888) 987-4357. Upon receipt, SAMSUNG will promptly repair the defective product. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any product or replace a product with a rebuilt, reconditioned, or new product. Repaired products will be warranted for a period equal to the remainder of the original limited warranty on the original product or for 90 days, whatever is longer. All replaced parts, components, boards, and equipment becomes the property of SAMSUNG. If SAMSUNG determines that any product is not covered by this limited warranty, purchaser must pay all parts, shipping, and labor charges for the repair or return of said product.

4. What Are the Limits On SAMSUNG's Liability?

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED HEREIN, PURCHASER TAKES THE PRODUCT "AS IS," AND SAMSUNG MAKES NO WARRANTY OR REPRESENTATION AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO:

- THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE;
- WARRANTIES OF TITLE OR NON-INFRINGEMENT;
- DESIGN, CONDITION, QUALITY, OR PERFORMANCE OF THE PRODUCT;
- THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR
- COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO.

NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. ALL IMPLIED WARRANTIES AND CONDITIONS THAT MAY ARISE BY OPERATION OF LAW, INCLUDING IF APPLICABLE THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO THE SAME DURATION OF TIME AS THE EXPRESS WRITTEN WARRANTY STATED HEREIN. SOME STATES/ PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IN ADDITION SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE, USE, OR MISUSE OF, OR INABILITY TO USE THE PRODUCT OR ARISING DIRECTLY OR INDIRECTLY FROM THE USE OR LOSS OF USE OF THE PRODUCT OR FROM BREACH OF THE EXPRESS

WARRANTY, INCLUDING INCIDENTAL, SPECIAL, CONSEQUENTIAL OR SIMILAR DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS, OR FOR DAMAGES ARISING FROM ANY TORT (INCLUDING NEGLIGENCE OR GROSS NEGLIGENCE) OR FAULT COMMITTED BY SAMSUNG, ITS AGENTS OR EMPLOYEES, OR ANY BREACH OF CONTRACT OR FOR ANY CLAIM BROUGHT AGAINST PURCHASER BY ANY OTHER PARTY. SOME STATES/PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE/PROVINCE TO PROVINCE. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND STATES PURCHASER'S EXCLUSIVE REMEDY. IF ANY PORTION OF THIS LIMITED WARRANTY IS HELD ILLEGAL OR UNENFORCEABLE BY REASON OF ANY LAW, SUCH PARTIAL ILLEGALITY OR UNENFORCEABILITY SHALL NOT AFFECT THE ENFORCEABILITY FOR THE REMAINDER OF THIS LIMITED WARRANTY WHICH PURCHASER ACKNOWLEDGES IS AND WILL ALWAYS BE CONSTRUCTED TO BE LIMITED BY ITS TERMS OR AS LIMITED AS THE LAW PERMITS.

THE PARTIES UNDERSTAND THE PURCHASER MAY USE THIRD-PARTY SOFTWARE OR EQUIPMENT IN CONJUNCTION WITH THE PRODUCT. SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRD-PARTY SOFTWARE OR EQUIPMENT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR OTHERWISE, INCLUDING THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT. THE QUALITY, CAPABILITIES OPERATIONS, PERFORMANCE AND SUITABILITY OF

ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT LIE SOLELY WITH THE PURCHASER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT, AS THE CASE MAY BE.

This Limited Warranty allocates risk of Product failure between Purchaser and SAMSUNG, and SAMSUNG's Product pricing reflects this allocation of risk and the limitations of liability contained in this Limited Warranty. The agents, employees, distributors, and dealers of SAMSUNG are not authorized to make modifications to this Limited Warranty, or make additional warranties binding on SAMSUNG. Accordingly, additional statements such as dealer advertising or presentation, whether oral or written, do not constitute warranties by SAMSUNG and should not be relied upon.

Samsung Telecommunications America, Inc.

1130 East Arapaho Road

Richardson, Texas 75081

Phone: 1-800-SAMSUNG

Phone: 1-888-987-HELP (4357)

©2002 Samsung Telecommunications America, Inc. All rights reserved. No reproduction in whole or in part allowed without prior written approval. Specifications and availability subject to change without notice.

Index

0 / next key, 71

911, 104

A

Accessing menus, 34

Accessing menus using shortcut numbers, 35

Adaptor outlet, 24

Adjusting ringer volume, 84

Adjusting voice volume during a call, 84

Air time, 38

Alarm clock, 77

Alerts, 88, 89

Alerts - connect, 88

Alerts - disconnect, 88

Alerts - service, 88

Alphabetical text entry, 56

Antenna, 17

Asterisk / shift key, 71

Auto answer, 106

B

Backlight features, 17

Battery Care, 115

C

Call answer, 106

Call waiting, 41

Calling emergency numbers in lock mode, 105

Calling in Lock Mode, 102

Calls, 35

Clear key, 17

Clear memory, 105

CLR, 70

Count down, 76

D

Dangerous Areas, 114

Duplicate, 21

E

Editing phone book numbers, 46

E-mail, 21

Emergency number, 103

END key, 71

Ending a fax or data call, 100

Entering numbers, 56

Entering text, numbers, and/or symbols, 55

Erase log, 37

Erase Message, 61

Exiting the web/minibrowser, 69

F

Fax, 21

FCC Notice, 116

Find by entry, 43

Fly Ribbon, 95

Flying, 114

Front view of the Samsung SCH-a310, 16

G

Games, 94

Getting service, 29

Getting to know your phone, 17

Green, 25

H

Home, 21

I

Inbox, 58

Incoming, 35

Input mode, 26

Installing the battery, 23

K

Key beep, 87

L

Last call, 39

Launching the minibrowser, 68

LED indicator, 18

LifeTime, 40

List of main and sub menus, 31

Lock, 101

Lock Code, 103

Lock mode, 26

Lock phone, 101

Locking, 102

Locking the phone, 102

M

Manual pause calling, 48

MENU key, 71

Menu key, 18

Message, 21

Message options, 65

Message read, 21

Message received, 22

Message setup, 62

Messages and lock mode, 60

Microphone, 18

Missed, 36

Mobile, 22

Mobile web, 67

Multi, 22

N

Navigation, 19

Navigation key, 70

Network, 98

New messages, 57

Numbers 1-9, 71

Numeric keypad, 18

Numeric mode, 56

O

Office, 22

OK/Message key, 18

One-touch dialing, 52

Outbox, 59

Outgoing, 35

Owner's Record, 130

P

Pager, 22

Peak Performance, 112

Phone, 112

Phone While Driving, 112

Planner, 72

Pound / space key, 71

Power On/Off, 89

Power Save Feature, 111

Protecting your Battery, 115

Push Push, 95

R

Radio Frequency, 111

Receiving a fax, 99

Reception, 111

Record, 91

Red, 25

Removing the battery, 23

Resetting your phone, 105

Returning to the previous menu, 34

Reviewing, 59

Reviewing calls, 37

Reviewing outbox, 59

Ringer, 86

Ringer options, 84

Ringer type - data/fax incoming, 86

Ringer type - Planner, 86

Roam, 89

S

Safe Use of and Access to Your Phone, 112

Safety Guidelines, 113

Scroll timer, 62

Send key, 19

Sending a fax or data file, 100

Sending messages, 57

Set active, 93

Setup, 97

Speaker, 18
Special Precautions, 116
Speed dial, 22
Spider Hunter, 97
Storing emergency numbers, 104
Storing pauses in a phone book, 48
Storing phone numbers at the end of a call, 51
Symbol entry, 56
Symbol mode, 56

T

T9® Word, 57
Talk mode, 28
Three-touch dialing, 52
Tips on recording names, 91
Total air time, 39
Turning your phone off, 30
Turning your phone on, 29
Two-touch dialing, 52

U

Unlocking the Phone, 102
Usage guidelines, 111
User Guide Proprietary Notice, 131
Using the travel adaptor, 24
Using your phone's menus, 34

V

Version, 109

Voice dial, 90

Y

Yellow, 25

Your consumer package, 15