

SCH-u420 Series

P O R T A B L E T r i - M o d e T E L E P H O N E

User Guide

**Please read this manual before operating your
phone, and keep it for future reference.**



Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating there to (the “Phone System”), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

Samsung Telecommunications America (STA), Inc.

Headquarters:

1301 E. Lookout Drive
Richardson, TX 75082

Customer Care Center:

1000 Klein Street
Plano, TX 75074

Toll Free Tel: 1.888.987.HELP (4357)

Internet Address: <http://www.samsungusa.com>

©2006 Samsung Telecommunications America, Inc. is a registered trademark of Samsung Electronics America, Inc. and its related entities.

Samsung Telecommunications America (STA), Inc.

Licensed by Qualcomm Incorporated under one or more of the following patents: U.S. Patent No. 4,901,307; 5,056,109; 5,099,204; 5,101,501; 5,103,459; 5,107,225; 5,109,390.

GH68-011291A

Openwave® is a registered Trademark of Openwave, Inc.

RSA® is a registered Trademark RSA Security, Inc.

Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

Table of Contents

Samsung Telecommunications America (STA), Inc.	2
Section 1: Getting Started	9
Understanding this User Manual	10
Activating Your Phone	11
Charging the Battery	13
Setting Up Your Voice Mail	15
Section 2: Understanding Your Phone	17
Features of Your Phone	18
Closed View of Your Phone	19
Open View of Your Phone	21
Rear View of Your Phone	24
Command Keys	25
Understanding the Display Screen	28
Your Phone's Modes	31
Section 3: Call Functions	37
Making a Call — Number Entry Dialing	38
Making a Call — Speed Dialing	40
Making a Call — Voice Dialing	42
Answering a Call	44
Ignoring a Call	45
Adjusting the Call Volume	45
Calls Log	46
Phone Modes	53
Roaming	58
Section 4: Menu Navigation	59
Menu Navigation	60
Menu Outline	65
Section 5: Entering Text	73
Text Entry Modes	74

Changing the Text Entry Mode	74
Entering Text in Alpha (Abc) Mode	75
Entering Text in T9 Word Mode	75
Entering Upper and Lower Case Letters	77
Entering Numbers	77
Entering Symbols	78
Section 6: Understanding Your Contacts	79
Your Contacts List	80
Adding a New Contacts Entry	81
Finding a Contacts Entry	84
Editing an Existing Contact Entry	89
Renaming a Contacts Group	94
Deleting a Contacts Entry	95
Memory Info	96
Section 7: Messaging	97
Creating and Sending New Messages	98
Message Send Options	102
Receiving New Messages	104
Voicemail	105
Message Folders	105
Erasing Messages	112
Message Settings	113
Section 8: Xcess Shop	117
Finding Applications	118
Managing Applications	119
Section 9: Camera	121
Taking Pictures	122
Camera Screen	123
Saving Pictures	124
Camera Options	125
Zoom	132
Brightness	132

The Photo Gallery	133
Point, Click, and Send a Photo	134
Section 10: Access Web	135
Access Web	136
Launching Access Web	136
Using Access Web	137
Using Links	137
How Access Web Keys Work	138
Section 11: Multimedia	139
Accessing Multimedia	140
My Images	140
My Ringtones	142
My Sounds	143
Shuffle	145
Section 12: Tools	149
Tools Menu	150
Voice Service	151
Bluetooth	158
Calendar	161
Memo Pad	163
Alarm Clock	165
World Time	167
Calculator	168
Stop Watch	169
Converter	169
Tip Calculator	173
Section 13: Changing Your Settings	175
Location	176
Display Settings	176
Sound Settings	181
Call Settings	184
Phone Settings	189

Memory Info	198
Section 14: Phone Info	201
Phone Number	202
Icon Glossary	202
Version	202
Section 15: Health and Safety Information ...	203
Health and Safety Information	204
UL Certified Travel Adapter	206
Consumer Information on Wireless Phones	207
Road Safety	216
Operating Environment	219
Using Your Phone Near Other Electronic Devices	219
Potentially Explosive Environments	222
Emergency Calls	223
FCC Notice and Cautions	224
Other Important Safety Information	225
Product Performance	226
Availability of Various Features/Ring Tones	227
Battery Standby and Talk Time	228
Battery Precautions	228
Care and Maintenance	230
Section 16: Warranty Information	233
Standard Limited Warranty	234
Index	241

Section 1: Getting Started

Topics Covered

- Understanding this User Manual
 - Activating Your Phone
 - Charging the Battery
 - Setting Up Your Voice Mail
-

This section explains how to start using your phone by activating your service, setting up your voice mail, or getting an understanding of how this manual is put together.

Understanding this User Manual

The chapters of this guide generally follow the same order as the menus and sub-menus in your phone. A robust index for quick reference to most features begins on page 241.

Also included is important safety information that you should know before using your phone. Most of this information is near the back of the guide, beginning on page 203.

Notes and tips

Throughout this guide are icons and text that are set apart from the rest. These are intended to point out important information, quick methods for activating features, to define terms, and more. The definitions for these methods are as follows:

- **Notes:** Explain alternative options within the current feature, menu, or sub menu.
- **Tips:** Provide quick or innovative methods for performing functions related to the subject at hand.
- **Fast Facts:** Are like snippets from a glossary. Fast facts provide definitions in context and proximity to the menu or feature in question.
- **Important:** Points out important information about the current feature that could affect performance, or even damage your phone.

Activating Your Phone

 
 
Contact your Wireless Carrier and follow their instructions for obtaining service, if necessary. We suggest that you read this guide to fully understand the services your phone supports.

Install the Battery

Note: Your phone comes packaged with a partially charged rechargeable standard Li-Ion battery and travel adapter.

Important: You must fully charge the battery the first time you use your phone, otherwise you could damage the battery. You can use your phone while the battery is charging, but the battery will take longer to recharge.

1. Insert the bottom end of the battery first, matching the gold contacts on the bottom end of the battery to those inside of the phone.
2. Press the top end of the battery down into the phone.
3. Place the battery cover over the battery (1) and slide the cover downward into place (2).

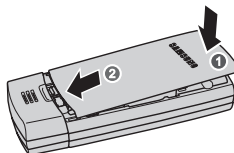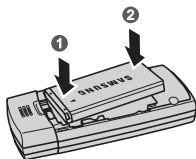

Turn Your Phone On

1. Open the slide on your phone.
2. Press the  key.

Note: As with any other radio-transmitting device, do not touch the antenna while using your phone as this can affect call quality and can cause the phone to operate at a higher power level than is necessary.

3. The phone begins searching for a network signal.
4. Once the phone finds a signal, the time, date and day appear in the bottom of the display.
5. You're now ready to place and receive calls.

Note: If you are outside of your carrier's coverage or roaming area, the No Service icon () appears at the top of the phone's display. If you cannot place or receive calls, try later when service is available, or at another location.

Turn Your Phone Off

- Press and hold the  key for two or more seconds. Your phone powers off.

Note: If your phone is on and you press  for less than one second, the phone will not power off. This prevents your phone from being turned off accidentally.

 
 
Remove the Battery

Important! You must unplug the Travel Adapter (if it is connected) before removing the battery from the phone during charging to avoid damage.

1. Press and hold the  key to turn off the phone (if on).

Charging the Battery

2. Press the battery cover at point (1) and slide the cover (2) toward the top end of the phone.
3. Lift the battery (1) up and away from the phone (2), top end first.

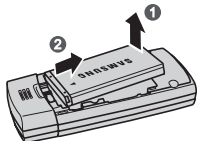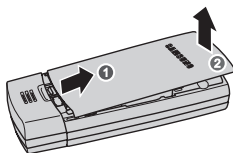


Charging the Battery

Your phone is powered by a rechargeable standard Li-Ion battery. Only use Samsung-approved charging devices and batteries. Samsung accessories are designed to maximize battery life. **Using other accessories may invalidate your warranty and may cause damage.**

Use the Travel Adapter

 
The travel adapter included with your phone is a convenient, lightweight charger that rapidly charges your phone from any 120/220 VAC outlet.

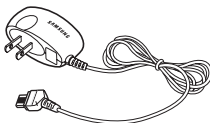

1. Plug the large end of the Travel Adapter into a standard 120 VAC or 220 VAC wall outlet.

Note: For connection to an electrical supply not located in the U.S., you must use an adaptor of the proper configuration for the power outlet. Use of the wrong adapter could damage your phone and void your warranty.

 2. Insert the smaller end of the Travel Adapter into the charger/accessory connector at the lower right side of your phone.

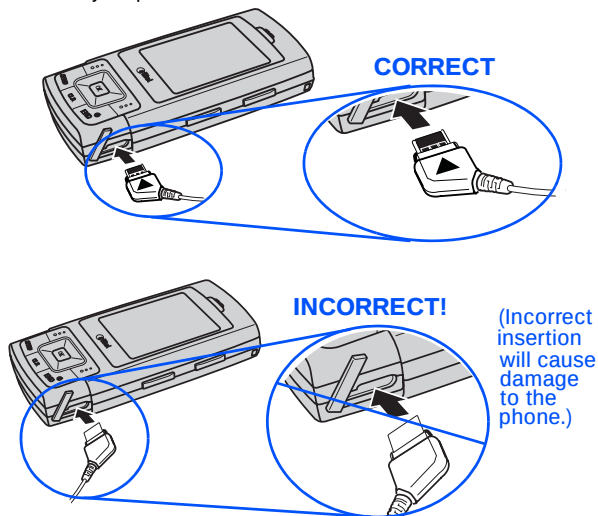

Note: With the phone turned **OFF**, a discharged battery recharges fully in approximately 200 minutes.

Low battery indicator

The battery indicator () in the upper-right corner of the display indicates power level. Monitor the battery strength and ensure your battery is adequately charged.

- Four bars () indicate a full charge.
- An empty battery icon () indicates a near empty battery.

- A blinking empty battery icon () and a tone sounding indicate you have two to three minutes before the battery is too low to operate the phone.

If you continue to use your phone without charging its battery, the phone shuts down.

Setting Up Your Voice Mail

Voice mail allows callers to leave voice messages, which can be retrieved any time.

Note: Once your voice mail account has been set up, you can use the Voice Mail folder (under the Message menu) to view details of voice messages in your voice mail box.

1. In idle mode, press and hold the  key or dial your own mobile number to dial voice mail.
2. Follow the prompts in the new user tutorial to setup your mail box.

Listen to voice mail

1. In idle mode, press and hold the  key or dial your own mobile number to dial voice mail. After connecting, you will hear your voice greeting.
2. Interrupt your greeting by pressing .
3. You are then prompted to enter your password.



Section 1

Section 2: Understanding Your Phone

Topics Covered

- Features of Your Phone
 - Closed View of Your Phone
 - Open View of Your Phone
 - Rear View of Your Phone
 - Command Keys
 - Understanding the Display Screen
 - Your Phone's Modes
-

This section outlines some key features of your phone. It also displays the screen and the icons that are displayed when the phone is in use.

Features of Your Phone

- Domestic and international voice and text messaging service (available on participating networks).
- High speed data (CDMA 2000 1x Technology)
- Global Positioning (GPS) Technology
- PIM Functions
- MMS Messaging
- Text Messaging
- Email Messaging
- Built-in Digital Camera with Flash
- Voice Dial
- Speakerphone
- Bluetooth wireless technology support

Closed View of Your Phone



Features

1. **Volume Keys** — With the phone closed, turns on the external display backlight when held down.
When receiving a call, mutes the ringer and can reject the call to Voice mail.
2. **Display** — Indicates the status of your phone, including status icons, message indicators, signal strength, and so on. Shows menus, calls, and messages.
3. **Left Soft Key** — With the phone closed, turns on the external display backlight when held down.
With the phone closed and in Keypad Lock mode, used to unlock phone.

With the phone closed and unlocked, used to navigate through menus and applications and to select the choice available as the Left Soft key option.

4. **External Keypad** — Used with the phone closed (and when unlocked by the Left Soft key) to navigate through menus, to select options.
5. **Power/Accessory Connector** — Used to plug in the charging accessories and also connect any available accessory cables to your phone. Lets you plug in an optional headset for safe, convenient, hands-free conversations.
6. **Camera Key** — Disabled when the phone is closed.
7. **Speakerphone Key** — Locked when the phone is closed. When unlocked by the Left Soft key, enables and disables speaker phone mode.
8. **Earpiece-Speaker** — Used to listen to audio from your phone, such as alerts and ringtones.

Open View of Your Phone



Section 2

Features

- 1. Earpiece/Speaker** — Lets you hear the other caller.

2. **Display Screen** — Indicates the status of your phone, including status icons, message indicators, signal strength, and so on. Shows menus, calls, and messages.
3. **Volume Keys** — During a call, adjusts the earpiece volume.

In standby mode with the phone open, adjusts the ring volume.

When receiving a call with the phone open or closed, mutes the ringer and can reject the call to Voice mail.
4. **Navigation Key** — Lets you scroll through the phone menu options.
5. **Left Soft Key** — Used to navigate through menus and applications and to select the choice available in the Left Soft key option.
6. **Send Key** — Lets you place or receive a call. In standby mode, press the key once to access the recent call log.
7. **Special Function Keys** — Enter special characters. Performs various functions.
8. **Microphone** — Lets the other caller hear you clearly when you are speaking to them.
9. **Voice Recognition Key** — Launches VoiceSignal options.
10. **Power/Accessory Connector** — Used to plug in the charging accessories and also connect any available accessory cables to your phone. Lets you plug in an optional headset for safe, convenient, hands-free conversations.
11. **Alpha-numeric Keys** — Use these keys to enter numbers, letters, and characters.

- 12. Clear Key** — Deletes characters from the display when you are in text entry mode. Press this key to return to the previous menu or screen when navigating features on your phone.
- 13. End Key** — Ends a call. If you press and hold the END key, the power goes On or Off. When you receive an incoming call, press to mute the ringer and send the call to voicemail.
- 14. Camera Key** — Launches the Camera feature of your phone.
- 15. OK Key** — Pressing when navigating through a menu accepts the highlighted choice in a menu.
- 16. Right Soft Key** — Used to navigate through menus and applications and to select the choice available in the Right Soft key option.
- 17. Speakerphone Key** — Enables and disables speaker phone mode.

Rear View of Your Phone



Section 2

Features

- 1. Mirror** — Lets you center the camera when taking a picture of yourself.

2. **Camera** — The lens of your built-in camera.
3. **Speaker Mode Key** — Enables and disables Speakerphone mode.
4. **Camera Key** — Launches the Camera feature of your phone.
5. **Power/Accessory Connector** — Used to plug in the charging accessories and also connect any available accessory cables to your phone. Lets you plug in an optional headset for safe, convenient, hands-free conversations.
6. **Rear Speaker** — Lets you hear the other caller in Speakerphone mode, alerts, and ringtones.
7. **Volume Keys** — Lets you adjust the ringer volume in standby mode (with the phone open) or adjust the voice volume during a call. To mute the ringer during an incoming call, press the volume key up or down.
8. **Flash** — Lets you take pictures in low light.

Command Keys

Functions for the soft keys are defined by what appears above each in the display. There are two soft keys, the left soft key (⌂) and the right soft key (⌂).

Left Soft Key

Some functions of the left soft key are as follows.

- In standby mode, press the **Menu** (left) soft key (⌂) to open the main menu.
- With the slide closed, press the **Unlock** (left) soft key (⌂) to unlock the external keypad.

- When the left soft key function is Edit, press the **Edit** (left) soft key () to edit a Contact.

Right Soft Key

Some functions of the right soft key are as follows.

- In standby mode, press the **Message** (right) soft key () to open the Messages menu.
- When the right soft key function is Back, press the **Back** (right) soft key () to back up one menu level.
- When the right soft key function is Options, press the **Options** (right) soft key () and a pop-up menu appears.

OK Key

- In a menu, press the **OK** key () to accept the highlighted selection.
- In camera mode, press the **OK** key () to take a photo or to create a Pic message.
- When the **OK** key function is Edit, press the **Edit** (OK) key () to edit a Draft message.

Clear Key

The **CLR** key () is used to erase or clear numbers, text, or symbols from the display. You can also use the  key to return to a previous menu or to return to standby mode from any menu.

1. If you enter an incorrect character, briefly press  to backspace (and delete) the character.
2. To erase the entire sentence, press and hold .
3. To back up one menu level, briefly press .
4. To return to standby mode, press and hold  until you return to standby mode.

End Key

1. In standby mode, press and hold the **End** key () to turn your phone off.
2. Briefly press  once to disconnect a call.
3. Press  to return to standby mode from any menu, or to cancel the last input.
4. With your phone turned off, press  to turn your phone on.

Send Key

The **Send** key () is used to answer calls, dial calls, and to recall the last number(s) dialed, received, or missed.

1. Press  once to answer calls.
2. Enter a number and briefly press  to make a call.
3. Briefly press  in standby mode to display a list of recent calls to and from your phone.
4. Press  twice in standby mode to call the most recent number.
5. Press  to pick up a waiting call. Press  again to switch back to the other call.

Navigation Key

Use the directional keys on the navigation key () to browse menus, sub-menus, and lists. Each key also acts as a shortcut to launch applications.

Speakerphone Key

 
Use the speakerphone key () — located on the right side of your phone — to switch from using the earpiece to the speakerphone before or during a call. Use the volume keys — located on the left side of your phone — to adjust the volume. Press the speakerphone key to enable and disable the speakerphone option.

Camera Key

Use the camera key () — located on the right side of your phone — to activate the camera built into your phone and to take pictures.

Understanding the Display Screen

The top line of your phone's display contains icons that indicate network status, battery power, signal strength, connection type, and more. The following list contains icons that may appear in your display.

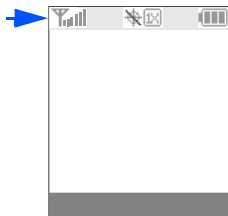

Display Screen Icons

-  **Signal strength** — Always appears when your phone is on and indicates the current signal strength. More lines indicate higher signal strength.
-  **In Use/Call** — Indicates a call in progress. When dialing a number, this icon flashes until the call connects.



No service indicator — Indicates your phone cannot find a signal because you're outside a service area. You cannot make or receive calls. Wait for a signal or move into an open area to try and find a signal. The no service indicator always appears when you turn on your phone and disappears once service is located.



Roam — Roaming occurs when you use your phone outside your home area. While roaming, a wireless provider other than yours handles your call, so the service rate for the call may be higher than those made within your home area. Please refer to information from your Wireless Provider on roaming rates.



New Message — Indicates that you've received a new text, page, or web alert message. You're also notified by a visual and audible alert.



Voice Mail — Indicates that you've received a new voice mail.



1X Protocol — Indicates your phone is using the 1X protocol.



Battery strength — Indicates the battery charge level. The more black bars, the greater the charge. When the battery becomes very low, a flashing empty battery icon displays and the phone sounds an audible alert, which indicates your phone is about to shut down.



Alarm clock — The alarm clock is set.



GPS (911 only) — Your phone passes Global Positioning Service (GPS) location data only during 911 calls.



GPS — Your phone passes GPS location data during all calls.



Vibrate—The ringer has been set to **Vibrate** using the volume key on the side of the phone. When you receive a call, the phone vibrates but does not ring.



Vibrate plus Ring—The ringer has been set to **Vibrate/High** using the volume key on the side of the phone. When you receive a call, the phone vibrates and rings.



Ring — The ringer has been set to **Low**, **Low/Medium**, **Medium**, **Medium/High**, or **High** using the volume key on the side of the phone. When you receive a call, the phone rings.



Ringer Off — The ringer has been set to **Ringer Off** using the volume key on the side of the phone.



Silent mode—Indicates your phone is in silent mode. Ringer is silenced for all alerts, incoming calls, and incoming messages. The phone alerts you of incoming calls, alerts, and messages by vibration and a flashing Service LED.

Dialogue Boxes

Dialogue boxes prompt for action, inform you of status, or warn of situations such as low memory. Dialogue boxes and their definitions are outlined below.

- **Choice**
 - Example: “Save message?”
- **Reconfirm**
 - Example: “Erase all messages?”
- **Performing**
 - Example: “SENDING...” “Connecting...”
- **Completed**

- Example: "Message saved in drafts"
- **Information**
 - Example: "New Message"
- **Error**
 - Example: "System Error!"
- **Warning**
 - Example: "Battery Low," "Memory Full!"

Backlights

Backlights illuminate the internal and external displays and the keypad. When you press any key or open the phone, the backlights come on. They go off when no keys are pressed within a period of time set in the **Backlight** menu.

Note: During a phone call, the display backlights dim and turn off after ten seconds to conserve battery power, regardless of the Backlight setting.

See "Backlight" on page 180 for more information.

Your Phone's Modes

Keypad Lock Mode

When you close the slide on your u420 phone, it enters Keypad Lock mode. This prevents accidental activation of phone functions or features. While your phone is in Keypad Lock mode and with no incoming call or message, only the Volume keys and the Left Soft key function.

To unlock your phone's front keypad while closed:

1. Press the **Unlock** (left) soft key (). You are prompted to press the  key.
2. Press the  key. The phone enters standby mode.

Now, all external keys, except the Camera key, are active. You can now use a number of your phone's functions, such as, reviewing your messages and launching Axxess Shop and Axxess Web.

Idle Mode

Call Answer Mode

You can select how you wish to answer a call.

1. In standby mode, press the **Menu** (left) soft key (), then press  (for **Settings**),  (for **Call Settings**), and  for **Call Answer**. The following call answer options appear in the display:
 - **Any Key** — Pressing any key except the  key or  key answers a call.
 - **Send Only** — Only pressing  answers a call.
 - **Slide Up** — Opening the phone's slide or pressing  answers a call.

Tip: You can set your phone to answer calls automatically, without any input from you. (See "Auto Answer" on page 185 for more information.)

2. Use the navigation keys to highlight an option.
3. Press the  key to select the method for answering calls.

Input mode

Input mode determines how you enter text, numbers and symbols. While at any text entry screen, press the **Option** (left) soft key () , then choose the input mode from the pop-up menu using the navigation keys. Optional input modes are **T9 Word**, **Abc**, **ABC**, **Symbols**, **123**, and **Quick Text**. (See “Section 5: Entering Text” on page 73 for more information.)

Tip: You can also cycle between **T9 Word**, **ABC**, and **123** by repeatedly pressing and holding the  key.

Lock Mode

When the phone is in Lock Mode, restrictions are placed on phone use. You can receive calls and messages, but cannot place outgoing calls (except for emergency numbers) until you unlock the phone. Lock Mode also restricts access to menus and the volume key. Unlock your phone by entering the lock code when prompted. (See “Lock Phone” on page 190 for more information.)

Standby Mode

Standby mode is the state of the phone once it has found service and is idle. The phone goes into standby mode:

- After you power the phone on.
- When you press  after a call or from within a menu.

In standby mode, you will see the time, day, and date as well as all phone status icons.

1. While in standby mode, enter a phone number, and press  to place a call.
2. Press  to return to standby mode.

Receive Messages in Standby Mode

You can receive messages in standby mode. An alert tone sounds and a notification message appears in the display when a new message arrives. The following options also appear in the display:

- **View Now**
- **View Later**

Use the navigation keys to highlight the desired option and press the  key.

Talk Mode

You can place and receive calls only when your phone is on. While in a call your phone is in talk mode. Press the **Options** (right) soft key () to display a list of menu options. See “The In-Use Options” on page 61 for more information.

Enter/Exit Silent Mode

Silence the tones your keypad makes when you press a key.

- In standby mode, press and hold . “**Entering silent mode**” briefly appears in the display and your phone returns to standby mode.
- While in Silent mode and standby mode, press and hold . “**Exit silent mode**” briefly appears in the display and your phone returns to standby mode.

Vibrate Mode

- In standby mode, repeatedly press and the **Down** volume key () until **Vibrate** appears in the display.

The volume key is on the upper left side of phone, near the left soft key ().

Adjust the Ringer

1. In standby mode, press the volume key () on the left side of the phone up or down. Options are:
 - Ringer Off
 - Vibrate
 - Low
 - Low/Medium
 - Medium
 - Medium/High
 - High
 - Vibrate/High
2. When you are satisfied with the setting, press the **SET** () key. Your phone returns to standby mode.

Tip: You can also enter the **Volume** sub-menu by pressing the **Menu** (left soft key ()), then pressing the , , , and  keys. Use the volume key on the left side of your phone to adjust the ringer volume settings.

Note: The Vibrate icon () appears in the display when the phone is in **Vibrate** mode. The Vibrate plus Ring icon () appears in the display when the phone is in or **Vibrate/High** mode.

Camera Mode

Camera mode lets you activate your phone's camera to take pictures. In Camera mode, you can also adjust the resolution and appearance of your pictures.

See "Section 9: Camera" on page 121 for more information.

- **Entering Camera Mode** — In standby mode, press the **Camera** key () on the keypad or on the upper right side of your phone.
- **Exiting Camera Mode** — Press the  key.

Section 3: Call Functions

Topics Covered

- Making a Call — Number Entry Dialing
 - Making a Call — Speed Dialing
 - Making a Call — Voice Dialing
 - Answering a Call
 - Ignoring a Call
 - Adjusting the Call Volume
 - Calls Log
 - Phone Modes
 - Roaming
-

This section explains how to make or answer a call. This section also includes the features and functionality associated with making or answering a call.

Making a Call — Number Entry Dialing

1. With the phone on, enter the number you wish to call using the keypad.
2. Press the  key to place the call.

Dialing Emergency Numbers

To place an emergency call:

1. With the phone on, enter 911 using the keypad.
2. Press the  key to place the call.

You can specify other numbers as emergency numbers using the **Emergency #** settings. (See “Emergency #” on page 191 for more information.)

IMPORTANT! Emergency number 911 is hard-coded into your phone. You can dial this number almost any time, even when the phone is locked or restricted.

If you call 911 an audible tone is heard and an Emergency prompt appears in the display for the duration of the call.

IMPORTANT! Because of various transmission methods, network parameters, and user settings necessary to complete a call from your wireless phone, a connection cannot always be guaranteed. Therefore, emergency calling may not be available on all wireless networks at all times.

IMPORTANT! DO NOT depend on this phone as a primary method of calling 911 or for any other essential or emergency communications.

Dialing International Numbers

Call another country from the U.S.

1. In standby mode, enter the three-digit exit code (011) for the United States.
2. Enter the country code for the country that you are calling.
3. Enter the number that you wish to call, then press the  key.

Note: Puerto Rico and Canada are on the North American dialing plan. When making calls to Puerto Rico and Canada it is similar to making calls within the United States, no unique country codes are necessary.

Placing calls when outside the U.S. — Mexico

- **Calling locally within Mexico:** Dial the seven or eight-digit number.
- **Calling long distance within Mexico:** Dial 01, plus the ten-digit number (includes area code).
- **Calling to the U.S. or Canada from Mexico:** Dial 001, plus the ten-digit number (includes area code).
- **Calling Voicemail from Mexico:** Dial 001, plus your ten-digit wireless number. Once you hear the recorded prompt, press  and enter your passcode.

Manual Pause Calling

When you call automated systems (like banking services), you are often required to enter a password or account number. Instead of manually entering the numbers each time, you can store the numbers in your Contacts along with special characters called pauses.

- **P pause** — A hard pause stops the calling sequence until you press the  key.
- **T pause** — A two-second pause stops the calling sequence for two seconds and then automatically sends the remaining digits.

To manually call a number with pause(s) without storing it to your Contacts:

1. Enter the number you wish to call.
2. Press the **Options** (right) soft key (). A pop-up menu containing the following options appears in the display:
 - **P pause** — a hard pause (awaits input from you).
 - **T pause** — a two-second pause.
3. Use the navigation keys to highlight the desired pause option.
4. Press  to enter the highlighted pause into your number sequence.
5. Press  to call the number.

Making a Call — Speed Dialing

You can store phone numbers and contact names in your phone's Contacts list. Speed Dialing lets you quickly and easily dial any contact in your Contacts list by using that contact's location number in the list. You can assign and change location (speed dial) numbers for your contacts. (See "Assigning Speed Dial Numbers" on page 92 for more information.)

One-Touch Dialing

Memory locations 002 through 009 are special One-Touch dialing locations. You can call the phone numbers stored in your phone's Contacts list from 002 through 009 by pressing and holding a single key.

Example: For location number 003, press and hold the **3=** key until the name and number appear in the display and the number is dialed.

Two-Touch Dialing

Memory locations 010 through 099 are special Two-Touch dialing locations.

Example: For location number 013, briefly press the **1=** key, then press and hold the **3=** key until the name and number appear in the display and the number is dialed.

Three-Touch Dialing

Memory locations 100 through 500 are special Three-Touch dialing locations.

Example: For location number 113, briefly press the **1=** key, briefly press the **1=** key again, then press and hold the **3=** key until the name and number appear in the display and the number is dialed.

Pause Dialing From a Contacts Entry

- If you speed dial a contact that contains (two-second) T pause(s) simply wait for the pauses to pass and the dialing to complete.
- If you speed dial a contact that contains (hard) P pause(s), wait for the appropriate prompt(s) from the number you are calling (credit card number, bank account number, and so on) and enter the appropriate response(s).

Making a Call — Voice Dialing

Your SCH-U420 mobile phone includes state-of-the-art voice recognition software that lets you dial numbers using your voice.

Using Voice Dial

Use the **Voice Dial** command to dial any number stored in your Contacts list by saying the name of the contact (Name Dialing). You can also use Voice Dial to dial any valid telephone number, even numbers not stored in your contact list, by speaking the individual digits in the number (Digit Dialing).

Voice Dialing Tips:

- Wait for the beep before speaking.
- Speak clearly at a normal volume, as if you were talking to someone on the phone.
- When saying a name, say the first name then the last name.

Dialing a Name

To dial a name, do the following:

1. In standby mode, press and hold the **One** key.
“**Say a Command**” appears in the display and is pronounced through the earpiece.
2. Say, “**Call**”.
You are prompted to “**Say the name or number**”.
3. Speak clearly and say the name of a person in your Contacts list, first name followed by last name.
If the name is recognized, Voice Dial repeats the name and dials the number.

If Voice Dial is not sure which name you said, it displays a choice list of up to three names and prompts you with “**Did you say?**” followed by the first name on the list.

4. Say “**Yes**” to confirm the name or “**No**” to hear the next name, or use the keypad to select the correct name from the list. (See “Choice Lists” on page 153, for more information.)
 - Press the **Repeat** (right) soft key () to say the name again.
 - Press the **Settings** (left) soft key () and press the **Cancel** right soft key () to exit Voice Dial without dialing.

If the recognized name has multiple numbers stored for it (that is, Mobile, Office, Home, and so on), Voice Dial displays the possible choices and prompts you with “**Which number?**”

5. Say one of the following number types:
 - “**Mobile**”
 - “**Office**”
 - “**Home**”
 - “**Pager**”
 - “**Fax**”

Voice Dial dials the specified number.

Dialing a Number

To dial a number using Voice Dial, do the following:

1. In standby mode, press and hold the  key.
“**Say a Command**” appears in the display and is pronounced through the speaker.
2. Say “**Call**”.
VoiceSignal prompts you to “**Say the name or number.**”

3. Speak clearly and say the telephone number of the person you want to call. *For example, say “7 8 1 9 7 0 5 2 0 0.”*

If it recognizes the number, Voice Dial repeats it and dials the number. If Voice Dial is not sure it has recognized the number, it displays a choice list of up to three numbers and prompts you with “**Did you say?**” followed by the first number on the list.

4. Say “**Yes**” to confirm the number or “**No**” to hear the next one, or use the keypad to select the correct number from the list. (See “Choice Lists” on page 153, for more information.)
 - Press the **Repeat** (right) soft key () to say the name again.
 - Press the **Settings** (left) soft key () and press the **Cancel** right soft key () to exit Voice Dial without dialing.

Pause Dialing From a Contacts Entry

- If you voice dial a contact that contains (two-second) T pause(s) simply wait for the pauses to pass and the dialing to complete.
- If you voice dial a contact that contains (hard) P pause(s), wait for the appropriate prompt(s) from the number you are calling (credit card number, bank account number, and so on) and enter the appropriate response(s).

Answering a Call

Your phone notifies you of a call in the following ways:

- A ring tone sounds and/or your phone vibrates (Your phone provides eight ring volume settings including: Ringer Off, Vibrate, Low, Low/Medium, Medium, Medium/High, High, or Vibrate/High, and/or different ring types to distinguish callers.)

- A phone number (unless blocked by the caller) and a name appear in the display (If the caller's number and name are stored in your Contacts list).
- If the caller can't be identified, **Call from unavailable#**, **Call from restricted number**, or no number appears in the display.
- Your phone continues to notify you of the call until one of the following events occurs:
 - You answer the call.
 - You ignore the call.
 - The calling party ends the call.
 - The call is sent to voicemail.

Answering an Incoming Call

- Press the  key. The ring tone and/or vibration stop and the caller's voice can be heard in the earpiece.

Tip: You can set your phone to answer calls when you open the slide, when you press any key but the  key, or automatically. (See "Call Settings" on page 184 for more information.)

Ignoring a Call

When you ignore an incoming call, the call is immediately forwarded to your voice mail.

- During an incoming call, press the **Ignore** (right) soft key (). The caller is forwarded to your voice mail.

Adjusting the Call Volume

In standby mode, repeatedly press the volume key () down until the Call Volume Level desired appears in the display. The volume key is on the left side of phone.

Calls Log

The Calls log retains information about Outgoing, Incoming, and Missed calls. You can also view times for your last call and the time totals for all calls.

Review the Calls Log

1. In standby mode, press the **Menu** (left) soft key ()
The Main Menu appears in the display.
2. Press the  key (for **Calls**).
3. Press the number key associated with the Calls log that you wish to review or the function you wish to access:
 - Press  for **Outgoing** calls.
 - Press  for **Incoming** calls.
 - Press  for **Missed** calls.
 - Press  for **Data Call**.
 - Press  for **Erase History**.
 - Press  for **Call Timer**.
 - Press  for **Data Counter**.

Note: In cases where there is a Contacts match for a Calls log entry, the name associated with the number appears in the display instead of the number.

Outgoing Calls

Your phone retains information about the last 90 outgoing calls and stores them in the Outgoing calls log. You can review the Outgoing calls log for the time and date of a call, as well as other information.

Note: To quickly view your most recent calls, briefly press  in standby mode. Up to 270 of your most recent outgoing, incoming, and missed calls appear in the display.

1. In standby mode, press the **Menu** (left) soft key () then press  (for **Calls**) and  for **Outgoing Calls**. A list of your outgoing calls appears in the display.
2. Use the navigation keys to highlight a call, then press  to view further information about the call.
3. Press the **Options** (right) soft key (). A pop-up menu containing the following options appears in the display:
 - **Save** — Save the number to your Contacts.
 - **Erase** — Erase the selected call from your Outgoing call log.
 - **Lock** — Protect the selected call from being erased.
 - **Erase All** — Erase all calls from your Outgoing call log.
 - **View Timer** — Shows the number of calls and/or the total time spent on the Last Call, All Calls, Received, Outgoing, Roaming Calls, Lifetime Calls.
4. Press the **Msg** (left) soft key (). The following options appear in the display:
 - **Text Message** — Lets you send a text message to the selected number called.
 - **Picture Message** — Lets you send a picture message to the selected number called.

Note: See “Creating and Sending New Messages” on page 98 for more information.

5. Use the navigation keys to highlight an option.
6. Press the  key to perform the highlighted option's function.

Incoming Calls

Your phone retains information about the last 90 Incoming calls and stores them in the Incoming call log. You can review the Incoming call log for the time and date of the call, as well as other information.

1. In standby mode, press the **Menu** (left) soft key () then press  (for **Calls**) and  for **Incoming Calls**. A list of your Incoming calls appears in the display.
2. Use the navigation keys to highlight a call, then press  to view further information about the call.
3. Press the **Options** (right) soft key (). A pop-up menu containing the following options appears in the display:
 - **Save** — Save the number to your Contacts.
 - **Erase** — Erase the selected call from your Outgoing call log.
 - **Lock** — Protect the selected call from being erased.
 - **Erase All** — Erase all calls from your Outgoing call log.
 - **View Timer** — Shows the number of calls and/or the total time spent on the Last Call, All Calls, Received, Outgoing, Roaming Calls, Lifetime Calls.
4. Press the **Msg** (left) soft key (). The following options appear in the display:
 - **Text Message** — Lets you send a text message to the selected calling number.
 - **Picture Message** — Lets you send a picture message to the selected calling number.

Note: See “Creating and Sending New Messages” on page 98 for more information.

5. Use the navigation keys to highlight an option.

6. Press the **OK** key to perform the highlighted option's function.

Missed Calls

Your phone retains information about the last 90 missed calls (calls that were never picked up) and stores them in the Missed call log. You can review the Missed call log for the time and date of the call, as well as other information.

1. In standby mode, press the **Menu** (left) soft key () then press  (for **Calls**) and  for **Missed Calls**. A list of your missed calls appears in the display.
2. Use the navigation keys to highlight a call, then press **OK** to view further information about the call.
3. Press the **Options** (right) soft key (). A pop-up menu containing the following options appears in the display:
 - **Save** — Save the number to your Contacts.
 - **Erase** — Erase the selected call from your Missed call log.
 - **Lock** — Protect the selected call from being erased.
 - **Erase All** — Erase all calls from your Missed call log.
 - **View Timer** — Shows the number of calls and/or the total time spent on the Last Call, All Calls, Received, Outgoing, Roaming Calls, Lifetime Calls.
4. Press the **Msg** (left) soft key (). The following options appear in the display:
 - **Text Message** — Lets you send a text message to the selected called number.
 - **Picture Message** — Lets you send a picture message to the selected called number.

Note: See “Creating and Sending New Messages” on page 98 for more information.

5. Use the navigation keys to highlight an option.
6. Press the **OK** key to perform the highlighted option's function.

Data Call

Your phone retains information about the last 90 data calls and stores them in the Data call log. You can review the Data call log for the time and date of the call, as well as other information.

1. In standby mode, press the **Menu** (left) soft key () then press  (for **Calls**) and  for **Data Call**. A list of your missed calls appears in the display.
2. Use the navigation keys to highlight a call, then press **OK** to view further information about the call.
3. Press the **Options** (right) soft key (). A pop-up menu containing the following options appears in the display:
 - **Save** — Save the number to your Contacts.
 - **Erase** — Erase the selected call from your Data call log.
 - **Lock** — Protect the selected call from being erased.
 - **Erase All** — Erase all calls from your Data call log.
 - **Data Counter** — Shows the amount of data Transmitted and Received during this call, the Total amount of data exchanged during this call, and the total amount of data exchanged since the phone was activated.
4. Use the navigation keys to highlight an option.
5. Press the **OK** key to perform the highlighted option's function.

Erase History

You can erase the **Outgoing, Incoming, Missed**, or **Data** calls log or you can erase **All Calls**.

Erase All Calls

1. In standby mode, press the **Menu** (left) soft key (⏮) then press **C** (for **Calls**), **5** (for **Erase History**), and **5** for **All Calls**.

“**Erase all entries?**” appears in the display as well as the following soft keys:

- **Yes** — Press the left soft key (⏮) to erase all calls in the Calls log.
- **No** — Press the right soft key (⏭) to cancel erasing calls.

Call Timer

View the duration of your last call, total calls, and calls made during the life cycle of you phone using the Call Timer feature.

Note: Call Timer is not for billing purposes.

1. In standby mode, press the **Menu** (left) soft key (⏮) then press **C** (for **Calls**) and **T** for **Call Timer**. The following options appear in the display:
 - **Last Call** — View the duration of your last call.
 - **All Calls** — View the duration of the total call, incoming, outgoing, and data calls made on your phone since the last erasure.
 - **Received** — View the duration of the total incoming calls received on your phone since the last erasure.
 - **Outgoing** — View the duration of the total outgoing calls made on your phone since the last erasure.

- **Roaming** — View the total calls duration on your phone while roaming since the last erasure.
 - **Lifetime Calls** — View the duration of all calls on your phone since activation (Lifetime Calls timer cannot be reset).
2. Press the **Reset** (left) soft key () to reset a selected counter except Lifetime Calls.
 3. Press the **Reset All** (right) soft key () to reset all counters except Lifetime Calls.
 4. Press the  key or the  key if you wish to exit the list.

Note: Although Total call timers can be erased, Lifetime call timers can never be erased.

Data Counter

View the amount of Transmit data, Receive data, and Total data transmitted or received since the last time you reset the data counters, and the Lifetime amount of data transmitted or received.

Note: Data Counter is not for billing purposes.

1. In standby mode, press the **Menu** (left) soft key () then press  (for **Calls**) and  for **Data Counter**. The following options appear in the display:
 - **Transmit KB** — View the total amount of data transmitted by your phone since the last reset.
 - **Received KB** — View the total amount of data received by your phone since the last reset.
 - **Total** — View the total amount of data sent or received by your phone since the last reset.

- **Lifetime Data Counter** — View the total amount of data sent or received by your phone since activation (Lifetime Data Counter cannot be reset).
2. Press the **Reset** (left) soft key () to reset a selected counter except Lifetime Data Counter.
 3. Press the **Reset All** (right) soft key () to reset all counters except Lifetime Data Counter.
 4. Press the **OK** key or the  key if you wish to exit the list.

Note: Although Total data counters can be erased, the Lifetime Data Counter can never be erased.

Phone Modes

Standby Mode

Standby mode is the state of your phone once it is powered on and has found a wireless service. Your phone goes into standby mode:

- After you power the phone on.
- When you press the  key after a call or from within a menu or phone function screen.

When in standby mode, you will see the time, day, and date in the display as well as all currently active icons.

When in standby mode, you can:

- Make calls.
- Receive calls and messages.
- Access your phone's menus.

- Change your phone's mode.
- Activate Voice Command.

Receive Messages in Standby Mode

You can receive messages in standby mode. An alert tone sounds and a notification message appears in the display when a new message arrives. The following options also appear in the display:

- **View Now**
- **View Later**

Use the navigation keys to highlight the desired option and press the **OK** key.

Talk Mode

While in a call your phone is in talk mode. Press the Mute / Unmute (left) soft key (**M**) to enable / disable the other microphone.

Press the **Options** (right) soft key (**O**) to display a list of In-Use menu options. (See “The In-Use Options” on page 61 for more information).

Lock Mode

When you lock your phone using the **Lock Mode** menu option (see “Lock Phone” on page 190 for more information), the following restrictions are placed on use of your phone:

- You can receive messages and calls.
- You cannot make outgoing calls (except for emergency numbers).
- You cannot access your phone's menus.
- The volume key is disabled.

Unlock your phone by following the prompts and entering the lock code.

Silent Mode

With a single press of the key you can silence the call ringer and tones that your keypad makes whenever you press a key.

When you receive a call, the phone vibrates instead of ringing.

Enter Silent Mode

- In standby mode, press and hold the  key.
“Entering silent mode” briefly appears in the display and your phone returns to standby mode.
 The Silent Mode icon () appears in the top line of the display.

Exit Silent Mode

- In standby mode, press and hold the  key.
“Exit silent mode” briefly appears in the display and your phone returns to standby mode.

Vibrate Mode

You can set your phone to vibrate whenever you receive an incoming call using either of the following methods:

- In standby mode, repeatedly press the **Down** volume key () on the left side of the phone until **Vibrate** appears in the display, or do the following:
 - In standby mode, press the **Menu** (left) soft key () , then press  (for **Settings**),  (for **Sound Settings**),  (for **Volume**), and  for **Voice Calls**.

- Press the **Left** navigation key until “**Vibrate**” appears in the display, then press the **SET** soft key ().

Text Input Modes

You use your phone’s text input modes (Alpha, Symbol, Number, or T9 WORD) to enter text, numbers, or symbols into messages, events, and other functions. The current text input mode is indicated in the lower right part of the display.

Note: See “Section 5: Entering Text” on page 73 for more information about text input modes.

Alpha Mode

Enter characters while in Alpha mode by pressing the key with the desired characters (such as  for “a”).

- Press the key repeatedly until the desired character (letter, number, or symbol) appears in the display.
- Pause briefly and the displayed character is accepted and inserted into your message.
- Press  to enter a space.

Tip: To enter large numbers of symbols or numbers quickly, use Symbol mode or Number mode as described in the following sections.

Symbol Mode

Symbol mode lets you use keypad number keys to enter symbols such as @ or % into a text message, event, or email address without going through repeated key presses as with Alpha mode.

You press the key that corresponds with the symbol that you wish to enter. For example, press  for an exclamation point (!).

Number Mode

Number mode lets you use keypad number keys to enter numbers into a text message, event, or email address without going through repeated key presses as with Alpha mode.

T9 Word Text Entry Mode

T9 Word recognizes a commonly used word that is represented by a sequence of number key presses and inserts that word into your message. (For example, entering '8378' would insert 'test' into your message.) Using T9 Word is much faster than the more traditional text input method (Alpha mode) and requires only one press of a key per letter of the word that you're entering. [For example, in Alpha mode, you would have to enter '83377778' for 'test' instead of entering '8378' for 'test' as in T9 Word mode.]

Note: See "Entering Text in T9 Word Mode" on page 75 for more information about using the T9 Word text input mode.

Roaming

What is Roaming?

Roaming lets you use your SCH-u420 phone when you travel outside of your Wireless Provider's coverage area. The Roaming icon (**R**) appears in the top line of the display when Roaming is active, and extra charges may apply when making or receiving calls.

Note: Some features may be unavailable while roaming. Roaming also consumes additional power from the battery requiring more frequent recharging. Contact your Wireless Provider for more information about Roaming.

How Roaming Works

Roam Option lets you set roaming preferences if you move in and out of your home network. The following roaming options are available:

- **Home only** — Your phone is available for normal operation only in the designated coverage area.
- **Automatic-A** — Your Wireless Provider's Preferred Roaming List (PRL) of networks is used to acquire service. If no preferred networks are found, any digital "A" system is acquired.
- **Automatic-B** — Your Wireless Provider's PRL is used to acquire service. If no preferred networks are found, any digital "B" system is acquired.

Section 4: Menu Navigation

Topics Covered

- Menu Navigation
 - Menu Outline
-

This section explains the menu navigation for your phone. It also includes an outline of the menus available with your phone.

Menu Navigation

Access menus using the navigation keys, the two soft keys ( ) , or a shortcut.

1. In Standby Mode, press the **Menu** (left) soft key (). The first of several menus appears in the display.
2. Use the navigation keys to browse phone menus.
3. Press the **OK** key to access a menu or sub-menu highlighted in the display.

Return to the Previous Menu

Press the **CLR** key or the **Back** (right) soft key () to return to the previous menu.

Navigate Using Shortcuts

You can also access menus and sub menus using menu numbers. This method is often called a “shortcut.” To shortcut to a menu or sub menu, press the **Menu** (left) soft key () , then enter the menu and /or sub menu number(s) for the feature in question.

1. In Standby Mode, press the **Menu** (left) soft key (). The main menu appears in the display.
2. Press the number of the menu, sub menu, and so on to arrive at the desired feature.

Note: See “Menu Outline” on page 65 for more information.

Navigation Key Shortcuts

In Standby Mode, press a navigation key (as illustrated below) to launch its corresponding application.



The In-Use Options

Access numerous menus and features even while in a call.

Note: If the call is disconnected while accessing the In-Use Option, the In-Use Option disappears from the display and the phone eventually returns to standby mode.

1. While in a call, press the **Options** (right) soft key (). The following menu items appear in the display:
 - **Message** — The **Messages** menu appears in the display.
 - **Contacts** — The **Contacts Find** screen appears in the display.
 - **Recent Calls** — View, respond to, and manage your recent outgoing, incoming, missed, and Data calls.
 - **Send DTMF** — Send keypad tones.
 - **Voice Privacy** — Prevent recipients of your calls from seeing your number on their display. Select from **Standard** or **Enhanced** options.
 - **Location** — Change the GPS setting to **Location On** or **911 Only**.
 - **Voice Memo** — Record a voice memo.

2. Do one of the following:

- Use the navigation key to highlight a menu or feature. Press the **OK** key to open the highlighted menu or to activate the highlighted feature.
- Press the **Mute/Unmute** (left) soft key () to disable/enable the microphone.
- Press the **Back** (right) soft key () to exit the menu.

Messaging

Access messaging features from within a call.

- While in a call, press the **Options** (right) soft key () , then press  for **Message**. The **Messages** menu items appear in the display. See “Section 7: Messaging” on page 97 for more information.

Voice Memo

You can use your phone to record voice memos for later playback. You can also record the caller on the other end of the line during a phone conversation.

Note: There is limited space for the number and length of recordings.

- The maximum number of voice memos is 100.
- The maximum length for a single voice memo is 60 seconds.

Record a Voice Memo

1. In standby mode, press and hold  until the phone prompts, “**Say a command.**” Say “**Go to Voice Memo**” into the microphone. The **Record New** screen appears in the display.

Tip: You can also set your phone to Voice Memo:

While in a Call.

This lets you record the phone call. See “The In-Use Options” on page 61 for more information.

From Standby Mode.

In standby mode, press the **Menu** (left) soft key () , then press  (for **Multimedia**),  (for **My Sounds**), and  for **Record New**.

2. Press the  key, then start speaking. As it is recording the phone displays a countdown timer that shows the seconds remaining for the recording.
 - To pause the memo, press the **Pause** (left) soft key (). When a memo is paused, select **Resume** to continue recording.
3. Press the  key once you're finished recording. The new recording is automatically saved. The standby mode screen appears in the display.

Review Voice Memos

If you've saved any voice memos, you can review them anytime.

1. In standby mode, press the **Menu** (left) soft key () , then press  (for **Multimedia**) and  for **My Sounds**. A list of sound files appears in the display.
2. Use the navigation keys to highlight the voice memo you wish to review.
3. Press the  key to play the voice memo.
 - To stop the memo, press the  key. Press the  key again to restart playing the memo.

When the voice memo finishes playing, the selected voice memo remains highlighted in the list of sound files.

Erase One Voice Memo

1. In standby mode, press the **Menu** (left) soft key (), then press  (for **Multimedia**) and  for **My Sounds**. A list of sound files appears in the display.
2. Use the navigation keys to highlight the voice memo you wish to erase.
3. Press the **Erase** (left) soft key (). “**Erase Sound?**” appears in the display.
4. Press the **Yes** (left) soft key () to erase the selected voice memo or press the **No** (right) soft key () to return to the list of sound files.

Erase All Voice Memos at One Time

1. In standby mode, press the **Menu** (left) soft key (), then press  (for **Multimedia**) and  for **My Sounds**). A list of sound files appears in the display.
2. Press the **Options** (right) soft key (). The following options appear in the display:
 - **Send**
 - **Online Album**
 - **Rename**
 - **Lock**
 - **Erase all**
 - **Sound Info**
3. Use the navigation keys to highlight **Erase all**, then press the  key. “**Erase All Sounds?**” appears in the display.
4. Press the **Yes** (left) soft key () to all of the sound files or press the **No** (right) soft key () to return to the list of sound files.

Menu Outline

Use the menu shortcuts on the following pages to quickly access sub menus. Press the **Menu** (left) soft key () to access the Main Menu, then use the navigation keys to highlight a sub-menu.

1 Messages

- 1.1 Send Message
 - 1.1.1 Text Message
 - 1.1.2 Picture Message
- 1.2 Inbox
- 1.3 Outbox
- 1.4 Drafts
- 1.5 Voicemail
- 1.6 Erase Messages
 - 1.6.1 Inbox
 - 1.6.2 Outbox
 - 1.6.3 Drafts
 - 1.6.4 All Messages
- 1.7 Msg Settings
 - 1.7.1 General
 - 1.7.1.1 Auto Save
 - 1.7.1.2 Auto Erase
 - 1.7.1.3 Quick Text
 - 1.7.1.4 Voicemail #
 - 1.7.1.5 Entry Mode
 - 1.7.1.6 Callback #
 - 1.7.1.7 Signature
 - 1.7.1.8 Reminder

1.7.2 Text Message

1.7.2.1 Auto View

1.7.2.2 Signature

1.7.2.3 Auto Scroll

1.7.3 Picture Message

1.7.3.1 Auto Receive

1.7.3.2 Signature

2 Axxess Shop

2.1 Axxess Shop

3 Multimedia

3.1 Camera

3.2 My Images

3.3 My Ringtones

3.4 My Sounds

3.5 Shuffle

3.5.1 Image Shuffle

3.5.2 Melody Shuffle

4 Axxess Web

4.1 Axxess Web

5 Contacts

5.1 Find

5.2 Add New Entry

5.3 Speed Dial#s

5.4 Group

5.4.1 No Group

- 5.4.2 Business
- 5.4.3 Colleague
- 5.4.4 Family
- 5.4.5 Friends

- 5.5 Memory Info

6 Calls

- 6.1 Outgoing Calls
- 6.2 Incoming Calls
- 6.3 Missed Calls
- 6.4 Data Call
- 6.5 Erase History
 - 6.5.1 Outgoing Calls
 - 6.5.2 Incoming Calls
 - 6.5.3 Missed Calls
 - 6.5.4 Data Call
 - 6.5.5 All Calls
- 6.6 Call Timer

7 Tools

- 7.1 Voice Service
 - 7.1.1 Voice Commands
 - 7.1.2 Voice Settings
 - 7.1.2.1 Choice Lists
 - 7.1.2.2 Sensitivity
 - 7.1.2.3 Digit Dialing
 - 7.1.2.3.1 Adapt Digits
 - 7.1.2.3.2 Reset Digits
 - 7.1.2.4 Sound

- 7.1.2.4.1 Prompts
- 7.1.2.4.2 Digits
- 7.1.2.4.3 Names
- 7.1.2.4.4 Name Settings
- 7.1.2.5 Voice Launch
- 7.1.2.6 About
- 7.2 Bluetooth
- 7.3 Calendar
- 7.4 Memo Pad
- 7.5 Alarm Clock
 - 7.5.1 Alarm 1
 - 7.5.2 Alarm 2
 - 7.5.3 Alarm 3
- 7.6 World Time
- 7.7 Calculator
- 7.8 Stop Watch
- 7.9 Converter
 - 7.9.1 Currency
 - 7.9.2 Length
 - 7.9.3 Weight
 - 7.9.4 Volume
 - 7.9.5 Area
 - 7.9.6 Temperature
- 7.10 Tip Calculator

8 Settings

- 8.1 Location
- 8.2 Display Settings

- 8.2.1 Menu Style
- 8.2.2 Wallpaper
 - 8.2.2.1 My Images
 - 8.2.2.2 Preset Images
 - 8.2.2.3 Image Shuffle
- 8.2.3 Clock Format
- 8.2.4 Theme
- 8.2.5 Dialing Font
 - 8.2.5.1 Style
 - 8.2.5.2 Size
- 8.2.6 Banner
- 8.2.7 Backlight
 - 8.2.7.1 Main Display
 - 8.2.7.2 Keypad
 - 8.2.7.3 Brightness
- 8.3 Sound Settings
 - 8.3.1 Volume
 - 8.3.1.1 Voice Calls
 - 8.3.1.2 Messages
 - 8.3.1.3 Alarms
 - 8.3.1.4 Key Tone
 - 8.3.2 Ringer Type
 - 8.3.2.1 Voice Calls
 - 8.3.2.2 Messages
 - 8.3.3 Alerts
 - 8.3.3.1 Minute Beep
 - 8.3.3.2 Roaming
 - 8.3.3.3 Call Connect
 - 8.3.3.4 Power On/Off
- 8.4 Call Settings

- 8.4.1 Restriction
 - 8.4.1.1 Outgoing
 - 8.4.1.2 Incoming
 - 8.4.1.3 Contacts
- 8.4.2 Call Answer
- 8.4.3 Auto Answer
- 8.4.4 Auto Retry
- 8.4.5 TTY Mode
- 8.4.6 Voice Privacy
- 8.4.7 Data Settings
- 8.4.8 DTMF Tones
- 8.5 Phone Settings
 - 8.5.1 Airplane Mode
 - 8.5.2 Language
 - 8.5.3 Security
 - 8.5.3.1 Lock Phone
 - 8.5.3.2 Change Lock
 - 8.5.3.3 Emergency #
 - 8.5.3.3.1 911
 - 8.5.3.3.2 Empty
 - 8.5.3.3.3 Empty
 - 8.5.3.4 Reset Phone
 - 8.5.3.5 Erase All Entry
 - 8.5.4 NAM Selection
 - 8.5.5 System Select
 - 8.5.6 Clock Set
 - 8.5.6.1 Set Time
 - 8.5.6.2 Set Date
 - 8.5.7 Quick Search

- 8.5.8 PC Connection
- 8.6 Memory Info
 - 8.6.1 Memory Usage
 - 8.6.2 My Images
 - 8.6.3 My Ringtones
 - 8.6.4 My Sounds

9 Phone Info

- 9.1 Phone Number
- 9.2 Icon Glossary
- 9.3 Version

Section 5: Entering Text

Topics Covered

- Text Entry Modes
 - Changing the Text Entry Mode
 - Entering Text in Alpha (Abc) Mode
 - Entering Text in T9 Word Mode
 - Entering Upper and Lower Case Letters
 - Entering Numbers
 - Entering Symbols
-

This section outlines how to select the desired text input mode when entering characters into your phone. This section also describes how to use the T9 predictive text entry system to reduce the amount of key strokes associated with entering text.

Text Entry Modes

You can compose text messages using alphabetical characters, symbols, and numbers. Each method of character entry (symbol, number, and so on) is called a text entry mode. There are four text entry modes, as indicated:

- **Alpha**—Alphabetical text entry mode. Options are:
 - **ABC** — All upper case
 - **Abc** — Initial capital
 - **abc** — All lower case
- **Symbols** — Symbol entry mode. Enter symbols into your message by pressing the corresponding number that appears above it in the display.
- **123** — Number entry. Enter numbers by pressing the corresponding key on the keypad.
- **T9 Word** — Predictive text mode. Press each key only once to enter the letter of the word that you're spelling.

Your current mode of text entry [**Abc**, **123**, or **T9 Word**] is indicated in the lower left part of the display when composing a text message.

Changing the Text Entry Mode

1. While composing a text message, press the **Abc** (left) soft key (). A pop-up menu containing the following options appears in the display:
 - **T9 Word**
 - **Abc**
 - **ABC**
 - **123**
 - **Symbols**

Abc is highlighted. Use the **Up** and **Down** navigation keys to choose any of the other four text entry modes. Each of the text entry modes are explained in greater detail in “Section 7: Messaging” on page 97.

Entering Text in Alpha (Abc) Mode

1. Enter characters while in **Alpha** (Abc) mode by pressing the key with the desired characters (such as, pressing  once for “G”).
2. Press the key repeatedly until the desired character appears in the display (such as, pressing  two times for “h”).
3. Pause briefly and the displayed character is accepted and inserted into your message.
4. Press the  key to enter a space.

Entering Text in T9 Word Mode

T9 Word recognizes commonly used words for a sequence of keypresses and inserts the word into your message. Using T9 mode is much faster than the more traditional method Alpha mode, since T9 *requires only one key press per letter* of the word that you are spelling.

Note: See “Changing the Text Entry Mode” on page 74 for instructions on changing text entry modes.

1. While in **T9 Word** mode, press each key that corresponds to a desired letter, in sequence, one time. For example, if you press the key sequence   , and the word “bad” appears on the screen.

2. When you have completed pressing all the keys for the desired word, review the word displayed in your text.
3. If the word is not the one you meant to enter, press the **0-123** key to show the next word that matches the sequence of keys that you pressed.

For example, when you press the key sequence **2-6-3**, the word “and” appears on the screen. Suppose the word you want is “cod”. Just press the **0-123** key until “cod” appears in the display.

Note: If more than one word shares the same numeric sequence (such as, “263” for both “and” and “cod”), T9 Word provides the most commonly used word (such as, “and” for “263”). Press the **0-123** key to display other words, if any are available.

For practice, enter the word ‘Samsung’ into your message by pressing each of the following keys only once:

7-9 **2-ABC** **6-MNO** **7-9** **8-UVW** **6-MNO** **4-GHI**
 S A M S U N G

T9 Word recognizes that the most commonly used word for the sequence of keys you just pressed is “Samsung.”

Tip: To enter words not likely to be in the T9 Word dictionary, such as uncommon abbreviations or slang, you might want to change the text entry mode from T9 Word to **Abc** or **ABC**.

Entering Upper and Lower Case Letters

In **Abc** and **T9 Word** modes, you can select to enter only upper case letters (**ABC / T9 WORD**), only lower case letters (**abc / T9 word**), or a mix of the two (**Abc / T9 Word**).

1. While in **T9 Word** or **Abc** mode, repeatedly press the  key to change the capitalization setting.

The left soft key label changes to indicate the current capitalization setting.

For example, if the left soft key label is **ABC**, and you want to enter the word “ball”, press the  key until the left soft key label changes to **abc**, then enter the word “ball”.

Tip: To enter a capital letter within a word, such as “SimTam”, change the capitalization setting to **Abc** at the beginning of the word and before entering the “T”. The capitalization setting will automatically change to **abc** after you enter each upper case letter.

Entering Numbers

Enter numbers into a text message while in number mode (123).

Note: See “Changing the Text Entry Mode” on page 74 for instructions on changing text entry modes.

- While in **123** mode, press the key containing the corresponding number that you wish to insert into your message.

Entering Symbols

Symbol mode enables you to enter symbols such as @ or % in a text message.

1. In standby mode, press the **Message** (right) soft key () , then press  (for **Send Message**) and  for **Text Message** to compose a new text message.
2. Enter the phone number of the recipient, then press the  key.
3. Press the **Abc** (left) soft key (). A pop-up menu containing the following options appears in the display:
 - **T9 Word**
 - **Abc**
 - **ABC**
 - **123**
 - **Symbols**
4. **Abc** is highlighted. Use the **Up** and **Down** navigation keys to highlight **Symbols**, then press the  key. The first of three screens of symbols appears in the display.
5. Use the **Prev** (left) soft key () and the **Next** (right) soft key () to page through the other symbols, if necessary.
6. Press the key that corresponds with the symbol that you wish to enter. For example, press  for an exclamation point (!).

Note: You can also use the navigation keys to highlight the desired symbol and then press the  key to enter the selected symbol into your message.

7. Repeat steps 3 through 6 to insert as many symbols into your message as desired.

Section 6: Understanding Your Contacts

Topics Covered

- Your Contacts List
 - Adding a New Contacts Entry
 - Finding a Contacts Entry
 - Editing an Existing Contact Entry
 - Renaming a Contacts Group
 - Deleting a Contacts Entry
 - Memory Info
-

This section explains how to manage your daily contacts by storing their name and number in your Contacts. Contacts entries can be sorted by name, entry, or group.

Your Contacts List

Your Contacts list can store up to 500 numbers, with each contact having up to five associated phone numbers, an email address, and a picture ID.

Each phone number can be up to 32 digits in length, including hard pauses. Contact names can be up to 32 characters in length. You can also specify a memory location for each entry, and you can restrict access to the Contacts list to prevent unauthorized use.

Tip: **One-Touch**, **Two-Touch**, and **Three-Touch Dialing** allow you to call numbers stored in your Contacts list faster. (See page 40.)

Open Your Contacts List

1. In standby mode, press the **Menu** (left) soft key () , then press  for **Contacts**. The following Contacts sub-menus and options appear in the display:
 - **Find** — Find a phone number By Name, By Entry, or By Group.
 - **Add New Entry** — Add a number or email to your Contacts.
 - **Speed Dial** — Assign speed dial numbers to your Contacts.
 - **Group** — Rename one of your five Contacts groups.
 - **Memory Info** — View available memory for dial entries.
2. Use the navigation keys to highlight the Contacts sub-menu or option of your choice, and press the  key.

Tip: You can also access a sub-menu or menu option by pressing the number key corresponds to the menu item number. For example, press  for **Add New Entry**.

Adding a New Contacts Entry

You can add an entirely new entry to your Contacts list or add information to an existing entry.

Using the Contacts Add Option

1. In standby mode, press the **Menu** (left) soft key () , then press  (for **Contacts**) and  for **Add New Entry**. The **Add New Entry** screen appears in the display with the **Name** field highlighted.
2. Enter a name or phrase to associate with the type using the keypad. (See “Section 5: Entering Text” on page 73 for more information.)
3. Use the navigation keys to highlight each field.
4. Enter a phone number (**Mobile 1**, **Home**, **Work**, **Mobile 2**, or **Fax**) or an email address (**Email 1** or **Email 2**) for the new Contacts entry.
5. If desired, assign the new Contact to a **Group**. This lets you send messages to and find this Contact and other related contacts. (See “Group” on page 87 for more information.)
6. If desired, select a unique **Ringtone** to identify this new Contact. (See “Ringer Type” on page 182 for more information.)
7. Press the **SAVE** soft key () to save the entry.

Saving a Number from a Call

Once you’ve finished a call, you can save the number of the caller to your Contacts list.

Note: If the call was incoming and Caller ID information was unavailable, then the **Save** option is also unavailable.

1. After you press the  key to end your call, the call time, length of call, phone number, and name of the other party (if available) appear in the display.
 2. Press the **Save** (right) soft key (). The following options appear in the display:
 - **Create New** — Lets you create a new Contacts entry.
 - **Update Existing** — Lets you add the number or email address you just entered to an existing Contacts entry.
-

Tip: You can also store a phone number by entering the number, and pressing the **Save** (left) soft key ().

3. Use the navigation keys to highlight **Create New**, then press the  key. The following (number type) icons appear in the display:



4. Use the navigation keys to highlight the number type that matches your new entry and press the  key. The **Add New Entry/Update Existing** information screen appears in the display with the **Name** field highlighted.
5. Enter a name or phrase to associate with the type using the keypad. (See “Section 5: Entering Text” on page 73 for more information.)
6. Use the navigation keys to highlight other numbers and selections for this new/existing entry.

7. Press the **OK** key to save the entry.

Storing Number from a Calls Log

You can store numbers from the Calls logs to your Contacts.

1. In standby mode, press the **Menu** (left) soft key () , then press  for **Calls**.
2. Press the corresponding number on the keypad to view the following Calls logs:
 - Press  for **Outgoing**
 - Press  for **Incoming**
 - Press  for **Missed**

A list of your calls appears in the display.

3. Use the navigation keys to highlight the number you wish to store in **Contacts**.
4. Press the **Options** (right) soft key (). The following options appear in the display:
 - **Save** — Saves the selected number to your Contacts list.
 - **Erase** — Deletes the selected number from the selected Calls log.
 - **Lock/Unlock** — Prevents/allows deletion of the selected number.
 - **Erase All** — Deletes all numbers from the selected Calls log.
 - **View Timer** — Shows the call times for the Last Call, All Calls, Received Calls, Outgoing Calls, Roaming Calls, and Lifetime Calls timers for the selected Calls log.
5. Use the navigation keys to highlight **Save**, then press the **OK** key. The following options appear in the display:
 - **Create New** — Lets you create a new Contacts entry.

- **Update Existing** — Lets you add the number or email address you just entered to an existing Contacts entry.
6. Use the navigation keys to highlight **Create New**, then press the **OK** key. The following (number type) icons appear in the display:



7. Use the navigation keys to highlight the number type that matches your new entry and press the **OK** key. The **Add New Entry/Update Existing** information screen appears in the display with the **Name** field highlighted.
8. Enter a name or phrase to associate with the type using the keypad. (See “Section 5: Entering Text” on page 73 for more information.)
9. Use the navigation keys to highlight other numbers and selections for this new/existing entry.
10. Press the **OK** key to save the entry.

Finding a Contacts Entry

Voice Method

Use the VoiceSignal **Contacts** command to view contact information for any named contact stored in your Contacts list by saying the name.

Note: The **Contacts** command shows the requested contact information in the display but does not dial any phone numbers for the contact.

To look up information for a specific contact:

1. In standby mode, press and hold the **OK** key to launch **VoiceSignal**.

“**Say a Command**” appears in the display and is pronounced through the speaker.

2. Say “**Lookup**”.

VoiceSignal prompts you to “**Say the name.**”

3. Speak clearly and say the full name of the person you want to call, exactly as it is entered in your contact list.

- If VoiceSignal recognizes the name you said, the contact information for that name appears in the display.
- If VoiceSignal does not recognize the name you said, a choice list of up to three names appears in the display, and VoiceSignal prompts you with “**Did you say?**” followed by the first name on the list.

4. Say “**Yes**” to confirm the name or “**No**” to hear the next name, or use the keypad to select the correct name from the list. (See “Choice Lists” on page 153, for more information.)

- To say the name again, press the **Repeat** (right) soft () key.
- To exit VoiceSignal without dialing, press the **Settings** (left) soft () key and press the **Exit** (right) soft ().

5. The contact information for the name you selected appears in the display.

Keypad Methods

Find by Name

If you have stored a named contact in your Contacts list, Find lets you locate the entry quickly.

1. In standby mode, do one of the following:
 - Press the **Up** navigation key (Contacts Find shortcut).
 - Press the **Menu** (left) soft key () , then press **5**** (for **Contacts**) and **1**** for **Find**.

The **FIND** screen appears in the display with an alphabetical list of Contacts showing.

2. Enter the first few characters of the name of the contact as it appears in your Contacts list.

Example: If you saved a contact name as “Amy Smith”, begin your search for that contact by pressing **2**** for “A”.

Note: As you enter letters, the entry names of the closest matches (thus far) appear in the display.

3. When the desired Contacts entry is listed in the display, highlight the contact using the navigation keys (if necessary). Then, do one of the following
 - Press the **Call** key to dial the number associated with the named contact.
 - Press the **Edit** (left) soft key () to change the information about the contact.
 - Press the **OK** key to view information about the contact.
 - Press the **Options** (right) soft key () . The following options appear in the display:
 - **New Contact** — Lets you add a new number to your Contacts list or to the selected contact.
 - **Erase** — Lets you delete the highlighted contact.
 - **Send TXT Msg** — Lets you send a text message to the selected contact.

- **Send Pic Msg** — Lets you send a picture message to the selected contact.
 - **Call** — Lets you place a call to the highlighted contact.
4. Use the navigation keys to highlight an option, then press the **OK** key to enter that option's sub-menu.

Group

This option lets you find a Contacts list entry with a specific Group name.

1. In standby mode, press the **Menu** (left) soft key (**☰**), then press **5#** (for **Contacts**) and **4#** for **Group**. The GROUP LIST appears in the display.
2. Use the navigation keys to highlight the name of the group you wish to search, then press the **OK** key.
3. When the desired Contacts entry is listed in the display, highlight the contact using the navigation keys (if necessary). Then, do one of the following:
 - Press the **Remove** (left) soft key (**☒**) to delete the selected contact from the Group.
 - Press the **OK** key to **ADD** an existing contact entry to the selected Group.
 - Press the **Options** (right) soft key (**⋮**). The following options appear in the display:
 - **Send TXT Msg** — Lets you send a text message to the selected contact.
 - **Send Pic Msg** — Lets you send a picture message to the selected contact.
4. Use the navigation keys to highlight an option, then press the **OK** key to enter that option's sub-menu.

Search by Number

This option lets you find a Contacts list entry by one of its phone numbers.

1. In standby mode, enter the first few numbers of the Contacts list entry you wish to find (such as the area code or area code and exchange — for example, 888-987).
2. Press the **Options** (right) soft key (). The following menu options appear in the display:
 - **Search** — Lets you find Contacts list entries by their phone numbers.
 - **T pause** — Adds a two-second pause.
 - **P pause** — Adds a hard pause (awaits input from you).
 - **Send TXT Msg** — Lets you send a text message to the entered number.
 - **Send Pic Msg** — Lets you send a picture message to the entered number.
3. Use the navigation keys to highlight the **Search** option, then press the  key. The FIND screen appears in the display listing all phone numbers in your Contacts list that contain the entered digits.
4. Use the navigation keys (if necessary) to highlight the desired Contacts entry. Then do one of the following:
 - Press the  key to dial the highlighted number.
 - Press the  key to view information about the Contacts entry associated with the highlighted number. From the VIEW CONTACT screen, you can erase or edit the selected Contacts entry.

Editing an Existing Contact Entry

Once stored in the Contacts, an entry can be changed quite easily.

1. Find the desired entry in the Contacts list. (See “Finding a Contacts Entry” on page 84 for more information.)
2. Press the **Edit** (left) soft key () . The **Edit Contact** screen appears in the display with the contact name highlighted.
3. Use the navigation keys to highlight a number stored in this contact entry.
4. Press  to backspace and delete numbers.
5. Press and hold  to clear all numbers in the highlighted field.

Note: You can also add numbers (such as a second Mobile number or a Fax number) to the entry, assign it to a Group, and add other information.

6. When you're finished editing the entry, press the  key. Your changes are saved and a confirmation message appears in the display.

Adding Pauses to Contacts Numbers

When you call automated systems (like banking services), you are often required to enter a password or account number. Instead of manually entering the numbers each time, you can store the numbers in your Contacts along with special characters called pauses.

- **P pause** — A hard pause stops the calling sequence until further input from you.

- **T pause** — A two-second pause stops the calling sequence for two seconds and then automatically sends the remaining digits.

Tip: You can enter multiple two-second pauses to extend the length of a pause. For example, two consecutive two-second pauses cause a total pause time of four seconds.

Note: Keep in mind that pauses count as digits towards the 32-digit maximum.

Store Pauses in a New Contacts Entry

1. In standby mode, enter the number you wish to store (such as your bank's teleservice number).
2. Press the **Options** (right) soft key (). The following menu options appear in the display:
 - **Search** — Lets you find Contacts list entries by their phone numbers.
 - **T pause** — Adds a two-second pause.
 - **P pause** — Adds a hard pause (awaits input from you).
 - **Send TXT Msg** — Lets you send a text message to the entered number.
 - **Send Pic Msg** — Lets you send a picture message to the entered number.
3. Use the navigation keys to highlight the pause option of your choice.
4. Press the **OK** key to enter the highlighted pause into your number sequence.
5. When you're finished entering the number and pauses, press the **Save** (left) soft key () to store the number in your **Contacts**.

Add Pauses to an Existing Contacts Entry

1. Find the desired entry in the Contacts list. (See “Finding a Contacts Entry” on page 84 for more information.)
2. Press the **Edit** (left) soft key (). The **Edit Contact** screen appears in the display with the contact name highlighted.
3. Use the navigation keys to highlight a number stored in this contact entry.
4. Use the navigation keys to place the cursor where you want to add a pause (usually at the right-hand end of the number).
5. Press the **Options** (right) soft key (). The following menu options appear in the display:
 - **Set Speed Dial** — lets you assign a Speed Dial number to this Contacts entry.
 - **Set As Default** — your phone automatically dials this number when you find this Contacts entry and press the  key.
 - **T pause** — a two-second pause.
 - **P pause** — a hard pause (awaits input from you).
6. Use the navigation keys to highlight the pause option of your choice.
7. Press the  key to enter the highlighted pause into your number sequence.
8. When you're finished entering pauses, press the  key to save your changes to the number in your **Contacts**.

Assigning Speed Dial Numbers

When you add or edit an entry to the Contacts list, you have the option of assigning a Speed Dial number using the Options pop-up menu or of returning to the Contacts menu and using the Speed Dial#s option. You can also change a contact's Speed Dial number.

1. Find the desired entry in the Contacts list. (See “Finding a Contacts Entry” on page 84 for more information.)
2. Press the **Edit** (left) soft key () . The **Edit Contact** screen appears in the display with the contact name highlighted.
3. Use the navigation keys to highlight a number stored in this contact entry.

Note: If a contact has more than one stored number (such as Home and Office), you can select which of these numbers your phone will dial when you speed dial that contact.

4. Press the **Options** (right) soft key () . The following menu options appear in the display:
 - **Set Speed Dial** — lets you assign a Speed Dial number to this Contacts entry.
 - **Set As Default** — your phone automatically dials this number when you Find this Contacts entry and press the  key.
 - **T pause** — a two-second pause.
 - **P pause** — a hard pause (awaits input from you).

Set Speed Dial is highlighted.

5. Press the **OK** key. The **Speed Dials** screen appears in the display.
6. Enter, or use the navigation keys to select, an unassigned Speed Dial number.

7. Press the **OK** key to assign the new Speed Dial number to the selected Contact. You are prompted to confirm the assignment.
8. Press the **Yes** (left) soft key (**Y**) to assign the selected Speed Dial number. The **Edit Contact** screen appears in the display.
9. Press the **OK** key to save the new Speed Dial number assignment.

Add a Number or Email Address to an Existing Entry

1. Find the desired entry in the Contacts list. (See “Finding a Contacts Entry” on page 84 for more information.)
2. Press the **Edit** (left) soft key (**E**). The **Edit Contact** screen appears in the display with the contact name highlighted.
3. Use the navigation keys to highlight a number field or Email field in this contact entry.
4. Enter the phone number or email address for the new Contacts entry.
5. Press the **OK** key to add the number or email address to the existing entry.

Edit an Existing Email Address

1. Find the desired entry in the Contacts list. (See “Finding a Contacts Entry” on page 84 for more information.)
2. Press the **Edit** (left) soft key (**E**). The **Edit Contact** screen appears in the display with the contact name highlighted.
3. Use the navigation keys to highlight the **Email 1** or **Email 2** field (labeled with the @ symbol).

4. Use the keypad to edit the **Email** address. (See “Section 5: Entering Text” on page 73 for more information.)
 - To insert the @ symbol, do the following:
 - Press the **abc** (left) soft key (). A pop-up menu appears in the display with **Abc** highlighted.
 - Use the navigation keys to highlight **Symbols**, then press the **OK** key.
 - Press the **2nd** key (@ symbol), and enter the remainder of the email address using the keypad. (See “Section 5: Entering Text” on page 73 for more information.)
 - To add the domain type to the end of the email address, do the following:
 - Press the **abc** (left) soft key (). A pop-up menu appears in the display with **Abc** highlighted.
 - Use the navigation keys to highlight **Shortcuts**, then press the **OK** key.
 - Use the navigation keys to highlight the desired domain type (such as, .com, .net, or .edu), then press the **OK** key.
5. Press the **OK** key to save your changes.

Renaming a Contacts Group

Use this option to rename a group in your Contacts list.

1. In standby mode, press the **Menu** (left) soft key () , then press **5th** (for **Contacts**) and **4th** for **Group**. A list of group names (like the following list) appears in the display:
 - **No Group**
 - **Business**
 - **Colleague**

- **Family**
- **Friends**

Note: You cannot rename **No Group**.

2. Use the navigation keys to highlight the group (other than **No Group**) that you wish to rename, then press the Options (right) soft key (). The following options appear in the display:
 - **Send TXT Msg** — Lets you send a text message to Contacts in the selected Group.
 - **Send Pic Msg** — Lets you send a picture message to Contacts in the selected Group.
 - **Rename** — Lets you change the name of the selected Group.
 - **Erase** — Lets you erase the selected Group.
 - **Add** — Lets you add Contacts to the selected Group.
3. The **Rename Group** screen appears in the display. The current name of the selected group shows with a flashing cursor at the end of the name.
4. Enter a new group name using the keypad. (See “Section 5: Entering Text” on page 73 for more information.)
5. Press the  key to save the changed group name.

Deleting a Contacts Entry

1. Find the desired entry in the Contacts list. (See “Finding a Contacts Entry” on page 84 for more information.)

2. Press the **Options** (right) soft key (). A pop-up menu containing the following options appears in the display:
 - **New Contact** — Lets you add an entry to your Contacts list.
 - **Erase** — Erases the selected Contact.
 - **Send Text Msg** — Lets you send a text message to the selected contact.
 - **Send Pic Msg** — Lets you send a picture message to the selected contact.
 - **Call** — Calls the highlighted Contact.
3. Use the navigation keys to highlight **Erase**.
4. Press the  key. The phone prompts you to confirm the erasure.
5. Press the **Yes** (left) soft key () or the **No** (right) soft key ().

Memory Info

Use the Memory sub-menu to view the amount of Contacts entries you have stored, as well as the remaining memory.

- In standby mode, press the **Menu** (left) soft key () , then press  (for **Contacts**) and  for **Memory Info**. The amounts of memory used and remaining for Contacts entries appear in the display.

Section 7: Messaging

Topics Covered

- Creating and Sending New Messages
 - Message Send Options
 - Receiving New Messages
 - Voicemail
 - Message Folders
 - Erasing Messages
 - Message Settings
-

This section explains how to create, send, receive, and view different types of messages. This section also describes the features and functionality associated with messaging.

Creating and Sending New Messages

This section guides you through procedures for creating and sending text messages and picture messages.

Creating and Sending a Text Message

1. In standby mode, press the **Message** (right) soft key () , then press  (for **Send Message**) and  for **Text Message**. The **Create Text Msg** screen appears in the display showing the **Send To** list.

Tip: You can also access Messages by pressing the **Menu** (left) soft key () , and then press  for **Messages**.

2. Address your message by selecting contacts and/or entering number(s) or email address(es) of message recipient(s):
 - To select a mobile number or email address using your Contacts list, press the **Add** (right) soft key (). The following options appear in the display:

- **Contacts**
- **Groups**
- **Recent Calls**

The **Contacts** option is highlighted.

Press the  key. The **ADD CONTACTS** screen appears in the display. See “Finding a Contacts Entry” on page 84 for more information on finding a contact.

Use the navigation keys to highlight a contact and press the  key to mark your selection.

To add the selected contacts to the **Send To** list, press the **Done** (left) soft key (). The **CREATE TXT Message** screen appears in the display.

- To enter recipient email address(es), press and hold the  key to change the text entry mode from **123** to **T9 word** or **abc**. (See “Add a Number or Email Address to an Existing Entry” on page 93 for more information.)
3. When you are finished addressing your message, press the  key. The **Text** field appears in the display.
 4. Enter the text for your message using the keypad. (See “Section 5: Entering Text” on page 73 for more information.)
 - To change the text input method, do one of the following:
 - Repeatedly press and hold the  key until the desired text input method is indicated by the left soft key label.
 - Press the left soft key (), use the navigation keys to select the desired text input method, and press .
 - Press the **Abc** (left) soft key () to select one of the following text entry methods:
 - **T9 Word**
 - **Abc**
 - **ABC**
 - **123**
 - **Symbols**
 5. At any point while composing a message, you can set message send options by pressing the **Options** (right) soft key (). (See “Message Send Options” on page 102 for more information.)
 6. Once you’re finished composing your message, press the **SEND** ( key) to send your message.

Creating and Sending a Picture Message

1. In standby mode, press the **Message** (right) soft key (), then press  (for **Send Message**) and  for **Picture Message**. The **Create Pic Msg** screen appears in the display with the **Send To** field highlighted.

Tip: You can also access Messages by pressing the **Menu** (left) soft key (), and then press  for **Messages**.

2. Address your message by selecting contacts and/or entering number(s) or email address(es) of message recipient(s).
(See Step 2 of “Creating and Sending a Text Message” on page 98 for more information on addressing your message.)
3. After addressing your picture message, the **Subject** field becomes highlighted.
4. Enter the Subject text using the keypad.
(See Step 4 of “Creating and Sending a Text Message” on page 98 for more information on choosing a text entry method, also see “Section 5: Entering Text” on page 73 for more information on using text entry methods.)
5. Press the **Down** navigation key. The **Text** field becomes highlighted.
6. Enter the message text using the keypad.
(See Step 4 of “Creating and Sending a Text Message” on page 98 for more information on choosing a text entry method, also see “Section 5: Entering Text” on page 73 for more information on using text entry methods.)

7. To set message send options, press the **Options** (right) soft key () . (See “Message Send Options” on page 102 for more information.)
8. To add a picture to the message, use the navigation keys to highlight the **PIC** field.
 - Press the **Images** (left) soft key () to access the picture gallery. If there are no pictures in the gallery, press the Camera (left) soft key () to launch the camera, then take a picture. If there are pictures in the gallery, thumbnail pictures appear in the display. Then, do the following:
 - Use the navigation keys to highlight a picture in the gallery.
 - Press the **View** (left) soft key () to expand the highlighted picture to fill the display.
 - Press the **Camera** (right) soft key () to activate the phone's camera and take a new picture. (See “Section 9: Camera” on page 121 for more information.)
 - Press the **Options** (right) soft key () . (See “Message Send Options” on page 102 for more information.)
9. Once you have selected a photo, press the **OK** key. The **Create Pic Msg** screen appears in the display with the selected photo in the **PIC** field.
10. Press the **Down** navigation key. The **Sound** field becomes highlighted.
11. Press the **Sounds** (left) soft key () . The **Record New** option and a list of sound files appear in the display with the **Record New** option highlighted.
12. Press the **OK** key to record a new sound file, or use the navigation keys to select a listed sound file.
 - If you select the **Record New** option, the **Record New** screen appears in the display. Press the **REC** () key to begin recording.

- Wait for the beep, then start speaking. As it is recording the phone displays a countdown timer that shows the seconds remaining for the recording.
 - To pause the memo, press the **Pause** (left) soft key (⏸). When a memo is paused, press the **Resume** (left) soft key (⏮) to continue recording.
 - Press the **SAVE** (OK) key to stop recording. The **Record New** option and a list of sound files appear in the display with the **Record New** option highlighted.
 - Use the navigation keys to highlight your new sound file and press the (OK) key. The **Create Pic Msg** screen appears in the display with your selected sound file in the **Sound** field.
- 13.** Once you're finished composing your picture message, do one of the following:
- Press the (OK) key to SEND the message.
 - Press the **Options** (right) soft key (⋮). (See "Message Send Options" on page 102 for more information.)

Message Send Options

You can set priority, validity, and other options before you send a message.

- 1.** After you've composed a text or picture message, press the **Options** (right) soft key (⋮). The following are Send Options that can appear in the display (which options appear depends on what type of message you composed and what message field you have highlighted):
 - **Edit Send To** — Lets you add, delete, or change numbers or Email addresses in a Text message **Send To:** list.
 - **Preview** — Lets you view a Picture message as the recipient will see it.

- **Add** — Lets you add **Graphics, Animation, Sound**, or **Quick Text** to a Text message.
 - **Add Quick Text** — Lets you add **Quick Text** to a Picture message.
 - **Edit Text Format** — Lets you select text **Size, Alignment, Color, Style, and Background** in a Text message.
 - **Save As Draft** — Saves this message in the Drafts folder.
 - **Priority Level** — Lets you assign a **High** or **Normal** priority to the message.
 - **Validity Period** — Lets you set a **Date** and **Time** when this message will no longer be available to the recipient. After the set period of time, your message is recalled.
 - **Deferred Delivery** — Lets you set a **Date** and **Time** when this message will be delivered.
 - **Enh. Delivery Ack / Deliver Ack** — Set to **On** to be alerted when your message is received by the addressee.
 - **Remove PIC** — Removes the picture from a Picture message.
 - **Remove Sound** — Removes the sound file from a Picture message.
 - **Add To Contacts** — Lets you add the addressee numbers or Email addresses to your Contacts list.
2. Use the navigation keys to display the various **Send Options** for each menu item.
 3. When the desired send option is highlighted, press the  key to confirm the selection or to enter the send option's sub-menu.

Receiving New Messages

When you receive a message in standby mode, an alert sounds (unless turned off) and a **New Message** notification appears in the display along with the closed envelope icon (✉). The date and time of the message and the following options also appear in the display:

- **View Now** — Opens the message where you have the option to Reply, Forward, Erase, Save Text, Save Msg, Save Contact, Lock/Unlock, Save Media, or Block sender.
- **View Later** — Closes the popup and saves the message to your inbox where you can view it later.

Use the navigation keys to highlight the desired option and press the **OK** key.

Receive Messages While in a Call

When you receive a message while in a call, a **New Message** notification appears in the display along with the closed envelope icon (✉). The date and time of the message and the following options also appear in the display:

- **View Now** — Opens the message where you have the option to Reply, Forward, Erase, Save Text, Save Msg, Save Contact, Lock/Unlock, Save Media, or Block sender.
- **View Later** — Closes the popup and saves the message to your inbox where you can view it later.

Use the navigation keys to highlight the desired option and press the **OK** key.

Voicemail

Voicemail allows callers to leave voice messages in your voice mailbox, and lets you review, play, and delete your voice messages any time you are in your Carrier's network coverage area.

Voice Mail Setup

Before callers can leave voice mail messages, you must first set up your account. See “Setting Up Your Voice Mail” on page 15 and General Message Settings for more information.

Checking your Voicemail

1. In standby mode, press and hold the  key until you're connected to the voice mail system. A recorded message prompts you for a password.
2. Enter your password, then follow the recorded prompts, to listen to your voice message, change administrative options, and so on.

Tip: You can also access your Voicemail by using the entries in the Voicemail folder. See “Voicemail” on page 112 for more information.

Message Folders

Inbox

Received messages of all types (except Voice Mail) are stored in the Inbox.

1. In standby mode, press the **Message** (right) soft key () , then press  for **Inbox**, to open the **Inbox** folder.

2. Use the navigation keys to highlight a message, then do one of the following:

- Press the **Erase** (left) soft key () to delete the message.
- Press the **OPEN** () key to view the highlighted message, then proceed to Step 3.
- Press the **Options** (right) soft key (). The following options appear in the display:
 - **Reply** — Lets you reply to a message.
 - **Reply With Copy** — Text Message only — Lets you reply to a message and include a copy of the original message.
 - **Save Quick Text** — Text Message only — Lets you save the message text as a Quick Text entry.
 - **Save Pic** — Picture Message only — Lets you save the picture to your gallery.
 - **Forward** — Lets you forward the message to other Email addresses or mobile phone numbers.
 - **Lock/Unlock** — Block or allow changes to the selected message.
 - **Add To Contacts** — Lets you add the addressee numbers or Email addresses to your Contacts list.
 - **Erase Inbox** — Deletes all messages from the Inbox folder.
 - **Message Info** — Lets you display status information about a message.

Use the navigation keys to highlight an option. Press the **OK** () key to perform the function for the highlighted option.

- Press the **CLR** () key to return to the **Messages** menu.
3. While viewing a selected message, do one of the following:
 - Press the **Erase** (left) soft key () to delete the message.

- Press the **REPLY** () key to compose and send a message to the sender of the highlighted message.
- Press the **Options** (right) soft key () The following options appear in the display:
 - **Play Again** — Picture Messages only — Replay a sound file included with a message.
 - **Forward** — Lets you forward the message to other Email addresses or mobile phone numbers.
 - **Reply With Copy** — Text Message only — Lets you reply to a message and include a copy of the original message.
 - **Save Pic** — Saves a copy of the image included in the selected message.
 - **Save Quick Text** — Saves the message text as a Quick Text entry.
 - **Lock/Unlock** — Block or allow changes to the selected message.
 - **Erase** — Erases the selected message.
 - **Add To Contacts** — Lets you add the addressee numbers or Email addresses to your Contacts list.
 - **Message Info** — Lets you display status information about a message.

Use the navigation keys to highlight an option. Press the  key to perform the function for the highlighted option.

- Press the  key to return to the **Inbox** list.

Messages and Lock Mode

Your phone can still receive messages while in Lock Mode. The time and date of the message appear in the display, but you cannot access the message until you enter the lock code. (See “Lock Phone” on page 190 for more information.)

Outbox

Your phone stores outgoing messages in the Outbox, regardless of whether the message was successfully sent to, or received by, the addressee.

Tip: Verify whether and when a message or email was successfully received by enabling the **Delivery Ack** message send option. (See "Message Send Options" on page 102 for more information.)

1. In standby mode, press the **Message** (right) soft key (), then press  for **Outbox**. A list of your outgoing messages appears in the display.
2. Use the navigation keys to highlight a message, then do one of the following:
 - Press the **Erase** (left) soft key () to delete the message.
 - Press the **OPEN** () key to view the highlighted message, then proceed to Step 3.
 - Press the **Options** (right) soft key (). The following options appear in the display:
 - **Forward** — Send the message to another addressee.
 - **Resend** — Re-send the message.
 - **Lock/Unlock** — Block a message from being erased or free a message to be erased.
 - **Add To Contacts** — Lets you add the addressee numbers or Email addresses to your Contacts list.
 - **Erase Outbox** — Erase all messages in the Outbox folder.
 - **Message Info** — Lets you display status information about picture messages.

Use the navigation keys to highlight an option. Press the () key to perform the function for the highlighted option.

- Press the  key to return to the **Messages** menu.

3. While viewing a selected message, do one of the following:
- Press the **Erase** (left) soft key () to delete the message.
 - Press the **RESEND** () key to resend a message to the original addressee.
 - Press the **Options** (right) soft key (), The following options appear in the display:
 - **Play Again** — Picture Messages only — Replay a sound file included with a message.
 - **Forward** — Send the message to another addressee.
 - **Erase** — Picture Messages only — Delete the message.
 - **Save Quick Text** — Save the message text in the Quick Text folder.
 - **Save Pic** — Picture Message only — Lets you save the picture to your gallery.
 - **Lock/Unlock** — Block a message from being erased or free a message to be erased.
 - **Add To Contacts** — Lets you add the addressee numbers or Email addresses to your Contacts list.
 - **Message Info** — Lets you display status information about picture messages.
- Use the navigation keys to highlight an option. Press the () key to perform the function for the highlighted option.
- Press the () key to return to the **Inbox** list.

Drafts Folder

Messages in the Drafts folder are those that have been composed but never sent. You can return to the Drafts folder at any time to view, edit, or send a draft message.

1. In standby mode, press the **Message** (right) soft key (), then press  for **Drafts**. A list of your draft messages appears in the display.
2. Use the navigation keys to highlight the message that you wish to edit, then do one of the following:
 - Press the **Erase** (left) soft key () to delete the message.
 - Press the **EDIT** () key to view the highlighted message, then proceed to One of the following screens appears in the display:
 - **Text Message** — **Create Text Msg** screen showing the **Text** field appears in the display.
 - **Picture Message** — **Create Pic Msg** screen showing the **Send To** list appears in the display. Change or add numbers and addresses, then press the () key.

Proceed to Step 3.

- Press the **Options** (right) soft key (). The following options appear in the display:
 - **Send** — Send the message to the current addressee(s).
 - **Lock/Unlock** — Block a message from being erased or free a message to be erased.
 - **Add To Contacts** — Lets you add the addressee numbers or Email addresses to your Contacts list.
 - **Save Quick Text** — Save the message text in the Quick Text folder.
 - **Save Pic** — Picture Message only — Lets you save the picture to your gallery.
 - **Erase Drafts** — Erase all messages in the Drafts folder.
- Use the navigation keys to highlight an option. Press the () key to perform the function for the highlighted option.
- Press the  key to return to the **Messages** menu.

3. In the **Text** screen/field, do one of the following:

- Press the **Abc** (left) soft key (). The following options appear in the display:
 - **T9 Word** — Predictive, single key press per letter text entry mode.
 - **Abc** — Alphabetical, multiple key press text entry mode. The first letter is capitalized.
 - **ABC** — Alphabetical, multiple key press text entry mode. All letters are capitalized.
 - **123** — Enter numbers by pressing the corresponding key on the keypad.
 - **Symbols** — Enter symbols into your message by pressing the corresponding number that appears above it in the display.

Use the navigation keys to highlight the desired option.

Press the **OK** key to perform the function for the highlighted option.

- Press the **SEND** () key to send the message.
- Press the **Options** (right) soft key (). (See “Message Send Options” on page 102 for more information.)

4. Once you’re finished composing your message, do one of the following:

- Press the **SEND** () key to send your message.
- Press the **END** () key to exit the message. You are prompted to save your changed message to the Drafts folder.

Voicemail

New voice messages in your voice mailbox are logged in the Voicemail folder of the Messages menu. Open the Voicemail folder to view the Callback # (if available), Urgency, and other details of new voicemail messages.

1. In standby mode, press the **Message** (right) soft key () , then press  for **Voicemail**. A Voicemail status screen indicating the number of new messages in your voice mailbox, their urgency, and any callback numbers appears in the display.
2. Press the  key to call your voice mailbox and listen to your voice messages.

Note: You can, in standby mode, also press and hold the  key to dial your voice mailbox.

Erasing Messages

You can erase all of the messages in each / all of your message folders from one convenient location.

Note: This function erases all messages in a selected message folder or in all message folders. To delete a single message, from the **Messages** menu, open the message folder where the message to be deleted is stored, then select and delete the message from the **Option** menu while viewing the message content.

1. In standby mode, press the **Message** (right) soft key () , then press  for **Erase Messages**. The following options appear in the display:
 - **Inbox** — Lets you delete all messages from your Inbox.
 - **Outbox** — Lets you delete all messages from your Outbox.

- **Drafts** — Lets you delete all draft messages from the Drafts folder.
 - **All Messages** — Lets you delete all messages from all message folders.
2. Use the navigation keys to highlight the folder containing the messages that you wish to delete.
 3. Press the **OK** key to select the highlighted folder. You are prompted to confirm the erasure of all messages in the folder.
 4. Press the **No** (right) soft key () to cancel deleting any messages, or press the **Yes** (left) soft key () to delete all messages from the selected folder.

Message Settings

The Msg Settings folder lets you define numerous message settings such as ringer types and save options.

1. In standby mode, press the **Message** (right) soft key () , then press  for **Msg Settings**. The following **Msg Setting** options appear in the display:
 - **General** — Lets you set default option values for Text, Picture, and Voice messages.
 - **Text Message** — Lets you set default message text option values for both Text and Pic messages.
 - **Picture Message** — Lets you set default picture message option values.
2. Use the navigation keys to highlight the desired option.
3. Press the **OK** key to perform the function for the highlighted option.

General Message Settings

1. In standby mode, press the **Message** (right) soft key (), then press  (for **Msg Settings**) and  for **General**. The following general message options appear in the display:
 - **Auto Save** — Lets you set whether to automatically save to the Drafts folder, to discard, or to prompt you to save unsent messages when you exit them.
 - **Auto Erase** — Automatically erase first message received after memory is full.
 - **Quick Text** — Lets you change pre-composed text or compose text for addition to your outgoing messages.
 - **Voicemail #** — Lets you update your Voicemail access number.
 - **Entry Mode** — Lets you set the default text entry mode [T9 Word, Abc/ABC (alphabetically, or 123 (numerical)] for composing message text.
 - **Callback #** — Lets you disable, enable, and update the callback number that can be inserted in outgoing messages.
 - **Signature** — Lets you disable, enable, and update the text signature that can be inserted in outgoing messages.
 - **Reminder** — Lets you set the message receipt reminder to play **Once**, **Every 2 Minutes**, **Every 15 Minutes**, or not to play (**Off**).
2. Use the navigation keys to highlight the desired sub-menu.
3. Press the  key to enter the sub-menu and change the selected message settings.

Text Message Settings

1. In standby mode, press the **Message** (right) soft key (ⓘ), then press **7^{ms}** (for **Msg Settings**) and **2^{ms}** for **Text Message**. The following Text message options appear in the display:
 - **Auto View** — Automatically view messages as they are received.
 - **Signature** — Lets you disable, enable, and update the text signature that can be inserted in outgoing text messages. (Overrides the **General > Signature** setting.)
 - **Auto Scroll** — When set to **On**, the phone automatically scrolls message text, letting you see the complete message text without using the navigation keys.
2. Use the navigation keys to highlight the desired sub-menu.
3. Press the **OK** key to enter the sub-menu and change the selected message settings.

Picture Message Settings

1. In standby mode, press the **Message** (right) soft key (ⓘ), then press **7^{ms}** (for **Msg Settings**) and **3^{ms}** for **Picture Message**. The following picture message options appear in the display:
 - **Auto Receive** — Lets you choose whether to be prompted to retrieve picture messages from your provider's email server or to automatically retrieve all picture messages as they are received by the server.
 - **Signature** — Lets you disable, enable, and update the text signature that can be inserted in outgoing picture messages. (Overrides the **General > Signature** setting.)

2. Use the navigation keys to highlight the desired sub-menu.
3. Press the **OK** key to enter the sub-menu and change the selected message settings.

Section 8: Axxess Shop

Topics Covered

- Finding Applications
 - Managing Applications
-

This section explains the Axxess Shop features where users can download multimedia, applications, games, and check news and sports.

Finding Applications

With Axxess Shop, you can download full featured applications over the air including games, personalized ring tones, pictures, and more. Send and receive instant messages, or browse the web to catch up on all the latest news.

1. In standby mode, press the **Right** navigation key to launch Axxess Shop. The Axxess Shop menu appears in the display with the **Axxess Shop** icon () highlighted.
2. Press the **OK** key. The **Welcome** screen appears in the display, with a Featured Application highlighted. You have the following options:

- Use the navigation keys to highlight the **Featured App** you wish to download and follow the online directions.
- Use the navigation keys to highlight the Catalog tab () , then press **OK**. The **Catalog** page appears in the display.
Use the navigation keys to browse the Catalog menu and to highlight the application you wish to download and follow the online directions.
- Use the navigation keys to highlight the Axxess search tab () , then press **OK**. The **Axxess search** page appears in the display.

Use the keypad to enter (in **abc** mode only) part of an application name or application category. (See “Section 5: Entering Text” on page 73 for more information.)

Press the Search (left) soft key () . A list of matching applications appears on the **Axxess search** page.

Use the navigation keys to highlight application the you wish to download and follow the online directions.

Managing Applications

Use the Settings sub-menu within Axxess Shop to manage, move, order applications and much more.

1. In standby mode, press the **Right** navigation key to launch Axxess Shop. The Axxess Shop menu appears in the display with the **Axxess Shop** icon () highlighted.
2. Use the navigation keys to highlight the **Manage Apps** icon () , then press **OK**. The **Manage Apps** screen appears in the display, listing the apps currently on your phone.
3. Use the navigation keys to highlight an application. Some or all of the following **Options** appear in the display, depending up the application selected:
 - **App Info** — Shows information about the selected application, such as, name, version, size, and expiration date.
 - **Buy more uses** — Lets you purchase more usage time for the selected application.
 - **Delete** — Removes the selected application.
 - **Move** — Lets you move the selected application between available folders.
 - **View Download Log** — Shows information about recent activity using Axxess Shop.
4. Use the navigation keys to highlight an option, then press **OK** to enter the option's sub-menu.

Section 9: Camera

Topics Covered

- Taking Pictures
 - Camera Screen
 - Saving Pictures
 - Camera Options
 - Zoom
 - Brightness
 - The Photo Gallery
 - Point, Click, and Send a Photo
-

Use your SCH-U420 phone to take full color digital pictures, display them on your phone's vivid color display, and instantly share them with family and friends. It's fun, and as easy to use as a traditional point-and-click camera. Depending on the resolution you choose, you can save dozens of pictures in your phone's memory. This section explains how you can do the following:

- Take pictures with your phone's built-in digital camera.
- Send and receive pictures taken with your phone's camera.
- Set the several options associated with the camera that help you take crisp, clear pictures.

Taking Pictures

Taking pictures with the built-in camera is as simple as choosing a subject, pointing the lens [located on the rear of the slide (at the top)], and pressing a button.

Note: You cannot use the camera with the phone closed. To use the camera, you must open your phone by moving the slide up.

Simple Snap Shot

To take a single picture using the current camera settings, do the following:

1. In standby mode, press the camera key () on the right side of the phone. The message “**Loading...**” followed by a camera view finder screen appears in the display. (See “Camera Screen” on page 123 for more information.)

 
Note: You can also activate the camera by pressing the **Menu** (left) soft key () , then press  (for **Multimedia**) and  for **Camera**.

2. Point the camera at your subject.
3. Using the display as a viewfinder, press the camera key () or the **OK** key () when the image that you wish to capture appears in the display.
4. Press the **Save** (left) soft key () to save the picture to memory.
5. Press the **Erase** (right) soft key () to erase the photo.

Tip: You can change a number of the camera’s settings to suit particular uses for your pictures. See “Camera Options” on page 125 for more information.

Camera Screen

When you activate your phone's camera, the second line of the display is reserved for the current camera resolution setting and the picture counter. The center of the display shows a viewfinder image of the subject at which the camera is pointed. The soft key labels on the bottom line of the display change to the following:

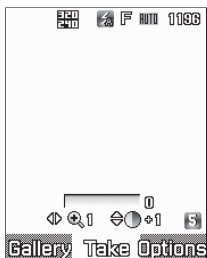

- **Gallery** — Pressing the left soft key () opens the **My Images** multimedia folder so you can view or manage your stored pictures. (See “The Photo Gallery” on page 133 for more information.)
- **Take** — Pressing the  key takes a picture of the image currently appearing on the display. Pressing the **Camera** key () on the right side of the phone also takes the picture.
- **Options** — Pressing the right soft key () opens a pop-up menu of camera settings.

Camera Screen Icons



Camera Resolution — Indicates camera's current resolution setting. (You can change the camera resolution setting. See “Camera Options” on page 125 for more information.)



Flash Setting — Indicates camera's flash setting. (You can change the camera flash setting. See “Flash” on page 127 for more information.)



Quality — Indicates camera's picture quality setting. (You can change the picture quality setting. See “Quality” on page 129 for more information.)

 **White Balance** — Indicates camera's white balance setting. (You can change the camera white balance setting. See "White Balance" on page 128 for more information.)

 **Photo Counter** — Indicates the number of photos you can still take. (Depending on the camera resolution setting.)

 **Multi Shot in use** — Takes multiple pictures after you press the **Camera** key () or the **OK** key. The number of pictures taken depends upon the resolution setting.

 **Zoom** — Enlarges the image from X1 to X3 before you take a picture. (Depending on the camera resolution setting.)

 **Brightness** — Brightens or darkens the image from -5 to +5.

 **Self Timer in use** — Delays the camera shutter from 3 to 10 seconds after you press the **Camera** key () or the **OK** key.

Saving Pictures

After you've taken a picture, you can do any of the following:

- **Save the picture** by pressing the **Save** (left) soft key ()

The picture is stored in the **Picture Gallery**, a part of the phone's memory devoted to storing, browsing, and viewing saved pictures. (See "The Photo Gallery" on page 133 for more information.)

- **Send the picture** to someone else by pressing the **OK** key.

For a detailed procedure, see "Creating and Sending a Picture Message" on page 100.

- **Discard the picture** by pressing the **Erase** (right) soft key ().

Camera Options

The Camera Options let you adjust the default camera settings to suite available lighting, the subject of the photo, or the purpose of the photo.

Accessing Camera Options

1. In standby mode, briefly press the **Camera** key (). The camera viewfinder screen appears in the display.
2. Press the **Options** (right) soft key (). The following sub-menus appear in the display:
 - **Resolution**
 - **Self Timer**
 - **Flash**
 - **Multi Shot**
 - **White Balance**
 - **Quality**
 - **Shutter Sound**
 - **Color Tones**

Note: **Color Tones** is not initially visible in the pop-up menu. Use the navigation keys to scroll down and view this menu item.

3. If needed, use the navigation keys to highlight the desired option, then press the **OK** key to open the selected sub-menu.

Resolution

Change the size (in bytes) of your pictures using the Resolution setting. Options are **High**, **Medium**, and **Low**.

1. In camera mode, press the **Options** (right) soft key ().
2. Use the navigation keys to highlight **Resolution**, and press the **OK** key. The following options appear in the display:
 - **High (640 X 480)** (pixels)
 - **Med (320 X 240)** (pixels)
 - **Low (160X 120)** (pixels)
3. Use the navigation keys to highlight the desired resolution and press the **OK** key. You're returned to the camera viewfinder screen.

Note: The resolution setting affects zoom capabilities. When resolution is set to High, zoom is not available. When resolution is set to Medium, X1 and X2 are available. When resolution is set to Low, X1, X2, and X3 zoom settings are available.

Self Timer

Self Timer lets you delay taking a picture long enough to let you join others in a picture.

1. In camera mode, press the **Options** (right) soft key ().
2. Use the navigation keys to highlight **Self Timer**, then press the **OK** key. The following options appear in the display:
 - **Off**

- **3 seconds**
 - **5 seconds**
 - **10 seconds**
3. Use the navigation keys to highlight the desired delay, then press the **OK** key. The camera screen appears in the display.

The next time you press the **Camera** key () or the **OK** key, a countdown timer appears in the display that indicates the time remaining before the camera takes the picture. A beep tone sounds each of the last five seconds until the picture is taken.

Tip: To stop the countdown timer without resetting it, press the  key.

Flash

Flash lets you control whether the camera flash lights (**Off**) and when [always (**On**), automatically (**Auto**), one shot only (**Only This Shot**)].

1. In camera mode, press the **Options** (right) soft key ().
2. Use the navigation keys to highlight **Flash**, then press the **OK** key. The following options appear in the display:
 - **Off**
 - **On**
 - **Auto**
 - **Only This Shot**
3. Use the navigation keys to highlight the desired flash setting, then press the **OK** key. The camera screen appears in the display.

Multi Shot

Multi Shot lets you take multiple pictures in succession at the touch of a key. The number of pictures you take depends on the **Resolution** setting, as indicated in the following list:

- **High resolution** — 3 pictures
- **Medium resolution** — 3 pictures
- **Low resolution** — 5 pictures

See “Resolution” on page 126 for more information.

1. In camera mode, press the **Options** (right) soft key ().
2. Use the navigation keys to highlight **Multi Shot**, then press the  key. **Off** and **On** appear in the display.
3. Use the navigation keys to highlight **On**, then press the  key. The camera screen appears in the display.

Note: When Multi Shot is set to **On**, the multi shot icon () appears in the display in camera mode.

The next time you press the **Camera** key () or the  key, the camera takes several pictures in rapid succession.

White Balance

White Balance allows you to adjust picture quality according to available light.

1. In camera mode, press the **Options** (right) soft key ().

2. Use the navigation keys to highlight **White Balance**, then press the  key. The name of the current White Balance setting appears in the second line of the display. The options are:
 - **Auto** — The camera automatically adjusts picture quality to available light.
 - **Sunny** — Use this setting when taking pictures in full sun.
 - **Cloudy** — Use this setting when taking pictures in cloudy conditions.
 - **Tungsten** — Use this setting when taking pictures under incandescent lights.
 - **Fluorescent** — Use this setting when taking pictures under fluorescent lights.
 3. Use the **Left** and **Right** navigation keys to show the various White Balances and the effects they have on a picture.
 4. When you decide on the White Balance you wish to use, press the  key. The camera viewfinder screen appears in the display with your selected White Balance applied.
- The next time you press the **Camera** key () or the  key, the camera applies the selected White Balance to your picture.

Quality

You can affect how much your photo is compressed, thereby reducing it's overall size (not to be confused with resolution).

1. In camera mode, press the **Options** (right) soft key (.

2. Use the navigation keys to highlight **Quality**, then press the **OK** key.
3. Use the navigation keys to highlight **Fine**, **Normal**, or **Economy**.
4. Once the quality setting of your choice is highlighted, press the **OK** key. You're returned to the camera viewfinder screen.

Shutter Sounds

Choose from four different sounds whenever you take a picture. Aside from being a cool sound effect, Shutter Sounds acts as an audible reminder that your camera has taken a picture.

Tip: You cannot use **Shutter Sounds** to disable the shutter sound.

1. In camera mode, press the **Options** (right) soft key (**ⓘ**).
2. Use the navigation keys to highlight **Shutter Sounds**, then press the **OK** key.
3. Use the navigation keys to highlight one of the following shutter sounds. Each sound plays as it is highlighted.
 - **Shutter**
 - **Okay**
 - **Chime**
 - **No Sound**
4. Once the shutter sound setting of your choice is highlighted, press the **OK** key. You're returned to the camera viewfinder screen.

Color Tones

Change the look of your pictures with Color Tones. Choose from five available settings such as Emboss, Negative, and Sepia. The selected color tone previews in the display before you take the picture.

1. In camera mode, press the **Options** (right) soft key (ⓘ).
2. Use the navigation keys to highlight **Color Tones**, and press the **OK** key. The following options appear in the display:

Note: Choose **Normal** to disable Color Tones.

- **Normal** — Subjects and pictures appear with a normal hue.
 - **Black & White** — Subjects and pictures appear in black and white.
 - **Sepia** — Subjects and pictures appear in a brownish-gray hue.
 - **Green** — Subjects and pictures appear in a greenish hue.
 - **Aqua** — Subjects and pictures appear in an aqua hue.
 - **Antique** — Subjects and pictures appear in.
 - **Cool** — Subjects and pictures appear in a bluish hue.
 - **Warm** — Subjects and pictures appear in a.
3. Use the navigation keys to highlight the color tone of your choice is highlighted, then press the **OK** key. You're returned to the camera viewfinder screen.

When you take your next picture, the phone's display previews your subject image with the selected color tone.

Zoom

Zoom lets you temporarily enlarge the pictures you take. Increasing the Zoom (X1 – X3) enlarges your pictures (0 is normal).

Note: The resolution setting affects zoom capabilities. When resolution is set to High, zoom is not available. When resolution is set to Medium, X1 and X2 are available. When resolution is set to Low, X1, X2, and X3 zoom settings are available.

1. In standby mode, briefly press the **Camera** key ()
The camera viewfinder screen appears in the display.
2. Use the **Left** and **Right** navigation keys to adjust the Zoom (the screen image enlarges to show the affects of your changes).

The next time you press the **Camera** key () or the **OK** key, the camera takes an enlarged picture according to your selected Zoom setting.

Brightness

Brightness lets you temporarily lighten the pictures you take. Increasing the Brightness (-4 – +4) lightens your pictures (0 is normal).

1. In standby mode, briefly press the **Camera** key ()
The camera viewfinder screen appears in the display.
2. Use the **Up** and **Down** navigation keys to adjust the Brightness (the screen image lightens or darkens to show the affects of your changes).

The next time you press the **Camera** key () or the **OK** key, the camera takes a lighter or darker picture according to your selected Brightness setting.

The Photo Gallery

Saved pictures are stored in the My Images folder. You can browse the pictures one at a time (expanded mode), or view several pictures at once in thumbnail format.

1. In standby mode, briefly press the **Camera** key (). The Camera viewfinder screen appears in the display.
2. Press the **Gallery** (left) soft key (). Any pictures that you've saved appear in the display.
3. Use the navigation keys to browse pictures in the gallery.
4. Press the **Options** (right) soft key () while viewing pictures in the Gallery. The following options appear in the display:
 - **Send** — Send the currently displayed or highlighted picture as a Picture message.
 - **Online Album** — Send the currently displayed or highlighted picture to the OnlineAlbum.
 - **Set As** — Assign the currently displayed or highlighted picture to Wallpaper, as an opening and closing (power on and power off) graphic, or as a photo ID for someone in your Contacts list.
 - **Rename** — Rename the currently displayed or highlighted picture.
 - **Lock/Unlock** — Lock the currently displayed or highlighted picture so that it cannot be deleted, or unlock the picture so that it can be deleted.
 - **Erase** — Erase the currently displayed or highlighted picture, provided it is unlocked.
 - **Erase All** — Erase all of the unlocked pictures in the Picture Gallery. Locked pictures must be unlocked before you can erase them.

- **Photo Info** — View the Title, time and date created, size, and resolution of the currently highlighted or displayed picture.
5. Use the navigation keys to highlight the desired option. Press the **OK** key to perform the function for the option or enter its sub menu.

Switch From Expanded to Thumbnail Mode

1. Use the navigation keys to highlight a picture that you wish to view full size, press the **OK** key.
2. Press the **OK** key to return to the thumbnail view of your photos.

Point, Click, and Send a Photo

Take a photo and send it to anyone with a compatible device in a few easy steps.

Tip: You can send a Picture message to up to ten recipients. Separate each recipient's address or phone number with a space in the **Send to** field of the Picture message composer.

1. In standby mode, press and hold the **Camera** key (**📷**) to activate the camera.
2. Using the display as a viewfinder, take the desired picture by pressing the **Camera** key (**📷**) or the **OK** key.
3. Press the **OK** key to display the Picture message composer.
4. Enter the recipient's phone number or email address using the keypad.
5. Press the **OK** key to send the Picture message to the intended recipients.

Section 10: Axxess Web

Topics Covered

- Axxess Web
 - Launching Axxess Web
 - Using Axxess Web
 - Using Links
 - How Axxess Web Keys Work
-

This section outlines how to launch Axxess Web, how to navigate to other pages on the web, and how the keys on the keypad are used with the web application. Additionally, links to other sites are briefly discussed.

Axcess Web

With Axcess Web, you can conveniently surf the web and download ringtones and wallpapers using your phone. Each time you launch Axcess Web, your phone connects to the Internet and the service indicator icon () appears in the display.

Stored Web Content

Axcess Web ends an Internet connection after a certain period of inactivity, however some information from your session remains stored in the phone (if you leave your phone turned on). You can access this information without reconnecting to the Internet. However, if you are viewing stored information, and you select a link to a site that was not accessed in your last session, you automatically re-connect to the Internet.

Launching Axcess Web

1. In standby mode, do one of the following to launch **Axcess Web**:
 - Press the **Down** navigation key.
 - Press the **Menu** (left) soft key () , then press  (for **Axcess Web**) and  for **Axcess Web**.
2. A list of categories (each representing one or more web sites) appears in the display.
3. Use the navigation keys to browse the categories.
4. Once the desired category is highlighted, press the **Left** (left) soft key () to enter the category list. 

Exit Axxess Web

- Press  to exit **Axxess Web**.

Using Axxess Web

When you use Axxess Web, some of the keys operate differently than during a normal phone call. Axxess Web presents on-screen items in any of the following ways:

- Text or numeric input.
- Links (embedded in content).
- Numbered options (some may not be numbered).
- Simple text.

You can act upon options or links by using the soft keys.

Axxess Web soft keys

The bottom of the Axxess Web display is a bar that contains browser commands. The left and right () soft keys on the keypad are used to execute the command that appears above them in the display. These are called “soft keys” because their function changes depending on the application.

Using Links

Links have several purposes, such as jumping to a different page, to a different site, or even initiating a phone call. Links are shown inside of brackets ([]).

You can normally use the left soft key () to select a link when it is highlighted.

How Axxess Web Keys Work

The following table lists Axxess Web keys and their functions.



navigation keys — Use to browse lists and options



CLR Key — A browse, back-up key. Press once to back up one page. Press and hold to go back to home page.

Press to clear the last number, letter, or symbol entered. Press and hold to completely clear the display.



Asterisk/Shift Key — Press before entering text to enable uppercase characters.



Last Key — Press to enter a zero (0), or to move to the last item in a menu.



Pound/Space Key — Press to insert a space when entering text.



Number 1 thru 9 — Use the number keys to select items in a menu if they are numbered.



End Key — Press to exit the Axxess Web and return the phone to standby mode.



Left Soft Key — Press to activate the command that appears above it in the display.



Right Soft Key — Press to activate the command that appears above it in the display.

Section 11: Multimedia

Topics Covered

- Accessing Multimedia
 - My Images
 - My Ringtones
 - My Sounds
 - Shuffle
-

This section outlines your phone's multimedia functions and key features associated with multimedia.

Accessing Multimedia

1. In standby mode, press the **Menu** (left) soft key () , then press,  for **Multimedia**. The following Multimedia sub-menus appear in the display:
 - **Camera** — Lets you launch and set up your phone's camera. (See “Section 9: Camera” on page 121 for more information.)
 - **My Images** — Lets you choose the multi-media or pictures that appear in your phone's display.
 - **My Ringtones** — Lets you assign melody tones for calls, alarms, and other alerts.
 - **My Sounds** — Lets you assign melody tones for calls, alarms, and other alerts.
 - **Shuffle** — Lets you assign animated melody tones for calls, alarms and calendar.
2. Use the navigation keys to highlight a sub-menu.
3. Press  to enter the highlighted sub-menu. The following sections describe the above listed sub-menus in greater detail.

My Images

My Images lets you choose the pictures that appear in your phone's display while in standby mode (wallpaper) and as picture IDs for your contacts.

1. In standby mode, press the **Menu** (left) soft key () , then press,  (for **Multimedia**) and  for **My Images**. A 2-by-2 matrix of thumbnail images of your pictures appears in the display.

Tip: You can also access My Images from:

- The Camera screen by pressing the **Gallery** (left) soft key ()
 - The **Edit Contact** screen by selecting the picture ID field and pressing the **Set** (left) soft key ()
-

2. Use the navigation keys to highlight a picture.
Press the  key to expand the selected picture to fill the screen.
3. Press the **Options** (right) soft key (). A pop-up menu containing the following options appears in the display:
 - **Send** — Lets you send the selected image to a specified recipient in a Picture message.
 - **Online Album** — Lets you send the selected image to an Online Album on your wireless provider's server. For details, contact your wireless provider.
 - **Set As** — Lets you assign the selected picture as the **Main Wallpaper** or as the **Picture ID** for a Contact.
 - **Rename** — Lets you rename the picture.
 - **Lock** — Lets you protect the picture from being deleted.
 - **Erase** — Erases a selected picture.
 - **Erase All** — Erases all pictures.
 - **Photo Info** — Displays information about the picture, such as the picture name, creation time and date, resolution, and the data size.
4. Use the navigation keys to highlight an option, then press the  key to invoke the selected option.
5. Press the  key to return to the previous menu, or press the  key to return to standby mode.

My Ringtones

My Ringtones lets you assign ringtones (preloaded and downloaded) for calls, alerts, and as distinctive ringers for Contacts.

1. In standby mode, press the **Menu** (left) soft key (), then press,  (for **Multimedia**) and  for **My Ringtones**. A list of ringtones appears in the display.

Tip: You can also access My Ringtones from:

- A Set Alarm screen by selecting the **Ringer** option, highlighting the second (file name) field, pressing the **Left** or **Right** navigation key, and selecting **My Ringtones**
 - The **Edit Contact** screen by selecting the **Ringtone** field, pressing the **Set** (left) soft key (), and selecting **My Ringtones**
-

2. Use the navigation keys to highlight a particular ringtone.
 - Press the **OK** key to **PLAY** the ringtone.
 - Press the **Info** (right) soft key () to show the file name and file type.
3. Press the **Set As** (left) soft key () to assign the highlighted ringtone. The following options appear in the display:
 - **Ringtone** — Lets you assign the selected ringtone to incoming voice calls.
 - **Contact ID** — Lets you assign the selected ringtone as the distinctive ringer for a Contact.
 - **Alert Tone** — Lets you assign the selected ringtone to **All Messages, Text Message, Picture Message**, or **Voicemail Msg**.

Use the navigation keys to highlight an option, then press the **OK** key.

4. When using a downloaded ringtone, press the **Options** (right) soft key () and the following options appear in the display:
 - **Lock / Unlock** — Lets you prevent/permit file deletion
 - **Erase** — Erases the selected file
 - **Rename** — Lets you rename the selected file
 - **Ringtone Info** — Displays information about the selected file, such as the file name, the file type, and the data size

Use the navigation keys to highlight an option, then press the  key.
5. Press the  key to return to the previous menu, or press the  key to return to standby mode.

My Sounds

My Sounds lets you record voice memos and lets you assign preloaded and downloaded sound files as ringtones for calls, alarms, and other alerts.

1. In standby mode, press the **Menu** (left) soft key (), then press,  (for **Multimedia**) and  for **My Sounds**. **Record New** and a list of sound files appears in the display.

Tip: You can also access My Sounds from:

- A Set Alarm screen by selecting the **Ringer** option, highlighting the second (file name) field, pressing the **Left** or **Right** navigation key, and selecting **My Sounds**
- The **Edit Contact** screen by selecting the **Ringtone** field, pressing the **Set** (left) soft key (), and selecting **My Sounds**

Note: Recorded sound files (voice memos) do not appear in these lists.

2. Use the navigation keys to highlight the **Record New** option, then press the **OK** key to record a voice memo. (See “Voice Memo” on page 62 for more information.)
3. Press the **Options** (right) soft key ().
 - For a recorded sound file, a pop-up menu containing the following options appears in the display:
 - **Send** — Lets you send the selected sound file to a specified recipient in a Picture message.
 - **Online Album** — Lets you send the selected sound file to an Online Album on your wireless provider's server. For details, contact your wireless provider.
 - **Rename** — Lets you rename the sound file.
 - **Lock / Unlock** — Lets you protect the sound file from being deleted.
 - **Erase All** — Erases all sound files.
 - **Sound Info** — Displays information about the sound file, such as the file name, file type, and the data size.
 - For a preloaded sound file, a pop-up menu containing the following options appears in the display:
 - **Send** — Lets you send the selected sound file to a specified recipient in a Picture message.
 - **Set As** — Lets you assign the selected sound file as the **Ringtone** or as the **Contact ID** for a Contact or an **Alert Tone** for Text, Picture, or Voicemail messages.
 - **Erase All** — Erases all sound files.
 - **Sound Info** — Displays information about the sound file, such as the file name, file type, and the data size.
 - For a downloaded sound file, the following options appear in the display:

- **Set As** — Lets you assign the selected sound file as the **Ringtone** or as the **Contact ID** for a Contact or an **Alert Tone** for Text, Picture, or Voicemail messages.
- **Rename** — Lets you rename the sound file.
- **Lock / Unlock** — Lets you protect the sound file from being deleted.
- **Erase All** — Erases all sound files.
- **Sound Info** — Displays information about the sound file, such as the file name, file type, and the data size.

Use the navigation keys to highlight an option and press the  key.

4. Press the  key to return to the previous menu, or press the  key to return to standby mode.

Shuffle

Shuffle lets you select sets of picture and sound files that display and play in random order.

Image Shuffle

1. In standby mode, press the **Menu** (left) soft key () , then press,  (for **Multimedia**) and  for **Shuffle**. The following options appear in the display:
 - **Image Shuffle** — When set to **On**, presents a random slide show of a set of specified pictures as **Wallpaper** in standby mode.
 - **Melody Shuffle** — When set to **On**, plays one of a set of specified ringtones and/or sound files, selected randomly, as the ringer for incoming calls.

Use the navigation keys to highlight **Image Shuffle** and press the  key. The **Image Shuffle** screen appears in the display, showing the message “**No Image Shuffle**”.

2. To select images for the Image Shuffle, do the following:

- Press the **Add** (left) soft key (). The following options appear in the display:

- **My Images**
- **Preset Images**

Use the navigation keys to highlight either option, then press the  key. A list of image files appears in the display.

- Use the navigation keys to highlight a picture, then press the  key. A check mark appears in the check box for the selected picture.

Repeat this step for each picture to be included in the Image Shuffle.

- Press the **Done** (left) soft key (). You are prompted to save this entry. Press the **Yes** (left) soft key () to save this entry.

The **Image Shuffle** screen appears in the display showing thumbnails of the selected pictures.

- Press the  key. You are returned to the **Shuffle** screen.

3. To activate the Image Shuffle, use the navigation keys to highlight the **Image Shuffle** option, then press the **Set As** (left) soft key (). The following options appear in the display:

- **On**
- **Off**

Use the navigation keys to highlight the **On** option and press the  key. “**Image shuffle set**” appears in the display, then you are returned to the **Shuffle** screen.

4. Press the to return to the previous menu, or press the key to return to standby mode.

Melody Shuffle

1. In standby mode, press the **Menu** (left) soft key () , then press,  (for **Multimedia**) and  for **Shuffle**. The following options appear in the display:
 - **Image Shuffle** — When set to **On**, presents a random slide show of a set of specified pictures as **Wallpaper** in standby mode.
 - **Melody Shuffle** — When set to **On**, plays one of a set of specified ringtones and/or sound files, selected randomly, as the ringer for incoming calls.

Use the navigation keys to highlight **Melody Shuffle** and press the  key. The **Melody Shuffle** screen appears in the display, showing the message “**No Melody Shuffle**”.

2. To select sound files for the Melody Shuffle, do the following:
 - Press the **Add** (left) soft key (). The following options appear in the display:
 - **My Ringtones**
 - **My Sounds**

Use the navigation keys to highlight either option, then press the  key. A list of sound files appears in the display.
 - Use the navigation keys to highlight a sound file, then press the  key. A check mark appears in the check box for the selected sound file.
Repeat this step for each sound file to be included in the Melody Shuffle.
 - Press the **Done** (left) soft key (). You are prompted to save this entry. Press the **Yes** (left) soft key () to save this entry.

The **Melody Shuffle** screen appears in the display showing a list of the selected sound files.

- Press the **CLR** key. You are returned to the **Shuffle** screen.

3. To activate the Melody Shuffle, use the navigation keys to highlight the **Melody Shuffle** option, then press the **Set As** (left) soft key (**⏮**). The following options appear in the display:

- **On**
- **Off**

Use the navigation keys to highlight the **On** option and press the **OK** key. "**Melody shuffle set**" appears in the display, then you are returned to the **Shuffle** screen.

4. Press the **CLR** key to return to the previous menu, or press the **END** key to return to standby mode.

Section 12: Tools

Topics Covered

- Tools Menu
 - Voice Service
 - Bluetooth
 - Calendar
 - Memo Pad
 - Alarm Clock
 - World Time
 - Calculator
 - Stop Watch
 - Converter
 - Tip Calculator
-

This section explains how to use your phone's digital assistant functionality to schedule events, set reminders, create a "to do" list, perform calculations, and more.

Tools Menu

Tools is a suite of Personal Digital Assistant (PDA) applications such as a Calendar, To Do List, and Memo Pad that run on your phone. You can use your phone to schedule events, set reminders, create a to do list, perform calculations, and more with the functions provided by this useful feature.

Opening Tools Menu

1. In standby mode, press the **Menu** (left) soft key () , then press  for **Tools**. The following sub-menus appear in the display:
 - **Voice Service** — Lets you access voice recognition functions.
 - **Bluetooth** — Lets you access Bluetooth functions.
 - **Calendar** — Lets you view the current, past, or future month in a monthly calendar layout.
 - **Memo Pad** — Lets you store and review useful information.
 - **Alarm Clock** — Lets you set an alarm to go off once, or daily, at a specified time.
 - **World Time** — Lets you view the current time of day or night in another part of the world.
 - **Calculator** — Lets you perform calculations, including addition, subtraction, multiplication, and division.
 - **Stop Watch** — Lets you view the amount of time.
 - **Converter** — Lets you convert currencies (according to the latest rates) and weights, measures, and temperatures from one system or increment to another.
 - **Tip Calculator** — Lets you quickly calculate service gratuities with a minimum of keypresses.
2. Use the navigation keys to highlight an application, then press the  key.

The following sections provide detailed descriptions of the applications and how to use their functions.

Voice Service

VoiceSignal is state-of-the-art voice recognition software for your mobile phone that lets you dial numbers, lookup contact information, and open applications using your voice. To access your phone's voice settings, do the following:

1. In standby mode, press the **Menu** (left) soft key () , then press  (for **Tools**), and  for **Voice Service**. The following options appear in the display:
 - **Voice Commands**—Lets you place calls, access your Contacts List, review your appointments, and more by speaking commands into your phone. Also see “Making a Call — Voice Dialing” on page 42 and “Voice Method” on page 84 for more information.
 - **Voice Settings**—Lets you tailor VoiceSignal to better respond to your voice and your phone use preferences.
2. Use the navigation keys to highlight the desired sub-menu, then press .

Voice Commands

To start VoiceSignal, do one of the following:

- In standby mode, press and hold the  key.
 “**Say a Command**” appears in the display and is pronounced through the earpiece, followed by a list of available commands.
- In standby mode, press the **Menu** (left) soft key () , then press  (for **Tools**), and  (for **Voice Service**), and  for **Voice Command**.

Note: You can also set your phone to start VoiceSignal when you open the phone. See “Voice Launch” on page 157 for more information.

VoiceSignal includes the following commands:

- **Call** — Lets you dial the phone by saying any name stored in your contact list, without ever having to record, or “train” that name. VoiceSignal automatically voice-activates all your contacts, even if you have hundreds of them stored on your phone. You can also dial any telephone number, even if it is not stored in your contact list, by saying the digits in the number. (See “Making a Call — Voice Dialing” on page 42 for more information.)
- **Send Text** — Lets you launch the **Create Text Msg** screen. (See “Creating and Sending a Text Message” on page 98 for more information.)
- **Send Picture** — Lets you launch the **Create Pic Msg** screen. (See “Creating and Sending a Picture Message” on page 100 for more information.)
- **Lookup** — Lets you look up and display contact information for any name stored in your Contacts list by saying the name. (See “Finding a Contacts Entry” on page 84 for more information.)
- **Go to** — Lets you access the Voice Memo, Calendar, and Contacts List features of your phone. (See “Voice Memo” on page 62, “Calendar” on page 161, and “Your Contacts List” on page 80 for more information.)
- **Check** — Lets you check your phone’s status (that is, network coverage, signal strength, and battery in the same report), network coverage, signal strength, battery, and phone number.

Note: Speaking clearly, say the command that you want to use. If, after a few seconds, the device has not recognized a command, it prompts you to repeat the command. If, after a few more seconds, it still has not recognized a command, it tells you **“Sorry, no match found,”** and cancels voice recognition.

Voice Command Tips:

- Make sure you wait for the beep before speaking.
- Speak clearly at a normal volume, as if you were talking on the phone.

Voice-Activating Your Contacts List

When you first start VoiceSignal, it reads your Contacts list and voice-activates all the names stored there. When you have add or change contacts, VoiceSignal automatically reloads and voice-activates the entire list.

Ending Calls Before Restarting the VoiceSignal Software

When you use VoiceSignal to make a call, you must end that call before you can use VoiceSignal again.

Voice Settings**Choice Lists**

VoiceSignal uses choice lists when it is not confident it has correctly recognized a name or number. In this case, it can display a list of up to three possible choices, and prompt you to confirm the correct one.

You can change the way that VoiceSignal uses choice lists with name dialing, digit dialing, and contacts. For each feature, you can choose to always see a choice list (even if there is only one choice), or never see a choice list (even if there are multiple choices). If you leave the setting at “Automatic,” VoiceSignal displays a choice list only when it is not confident it has correctly recognized the name or number.

To change the way VoiceSignal uses choice lists:

1. In standby mode, press the **Menu** (left) soft key () , then press  (for **Tools**), and  (for **Voice Service**),  (for **Voice Settings**), and  for **Choice Lists** the following options appear in the display:
 - **Automatic**—VoiceSignal displays a choice list only when it is not sure if it has correctly recognized the name or number.
 - **Always On**—VoiceSignal always displays a choice list, even when there is only one choice.
 - **Always Off**—VoiceSignal never displays a choice list.

Use the navigation keys to highlight the Choice List behavior you prefer, then press the  key to accept the new setting.

Sensitivity

1. In standby mode, press the **Menu** (left) soft key () , then press  (for **Tools**), and  (for **Voice Service**),  (for **Voice Settings**), and  for **Sensitivity**. The **Sensitivity** screen appears in the display.
2. Use the navigation keys to adjust the selected Sensitivity setting to **Reject More** spoken commands or names or to **Reject Less** spoken commands or names.
3. Press the  key to accept the new setting.

Digit Dialing

If you regularly have trouble with VoiceSignal not recognize the numbers you say, try adapting digit dialing to your voice. Adapting can improve the accuracy of digit recognition, especially for people with strong regional accents.

Note: After you adapt Digit Dial, your phone is customized to your voice, and your voice only. Others will not be able to use it unless they reset the phone to factory defaults.

Adaptation involves recording several sequences of four digits each. The recording process takes about a minute.

Tips for Adapting Digit Dialing

- Use Adapt Digits in a quiet place.
- Make sure you wait for the beep before starting to speak.
- Speak clearly, and say each digit distinctly.
- If you make a mistake while recording a sequence of digits, or if there is an unexpected noise that spoils the recording, re-record that sequence.
- Only adapt digits if you are regularly having problems with digit dialing. Once you adapt, digit dialing will not work as well for other people using your phone. (You can always reset digit adaptation to its original state, as described below.)

Adapt Digits

To adapt digit dialing, do the following:

1. In standby mode, press the **Menu** (left) soft key () , then press  (for **Tools**), and  (for **Voice Service**),  (for **Voice Settings**), and  for **Digit Dialing**. The following options appear in the display:
 - **Adapt Digits**
 - **Reset Digits**
2. Use the navigation keys to highlight **Adapt Digits**, then press the  key. Your phone displays the first digit sequence and “**Please say**” plays through the speaker followed by the four digits appearing in the display.

3. Wait for the beep and say the digits using your normal tone of voice. After a moment, the phone plays back the recording and prompts “Did the recording sound ok?”

- If the recording was good, say “**Yes**.”
- If you need to re-record, say “**No**.”

If you say “**No**,” the phone prompts you to pronounce the digits again. Wait for the beep and then say the digits.

Repeat this step until you’re satisfied with the recording.

4. After confirming that the recording sounds “ok”, continue the recording process with the next set of digits.
5. After six sets of digits, the phone asks whether you want to do more adaptation. Answer “**Yes**.”
6. Repeat steps 4 and 5 for another six sets of digits. After the second group of six sets of digits, “**Adaptation complete**” plays through the speaker and you are returned to the **Adapt Digits** menu.

Reset Digits

To reset digit dialing to factory default settings, do the following:

1. In standby mode, press the **Menu** (left) soft key () , then press  (for **Tools**), and  (for **Voice Service**),  (for **Voice Settings**), and  for **Digit Dialing**. The following options appear in the display:
 - **Adapt Digits**
 - **Reset Digits**
2. Use the navigation keys to highlight **Reset Digits**, then press the  key. The phone prompts you to confirm digit rest.

3. Use the navigation keys to select **Yes** to reset your digit adaptation, or **No** to cancel.
4. Press the **OK** key to save and exit.

Sound

Sound lets you specify what (if any) text prompts you want your phone to read to you through the earpiece.

1. In standby mode, press the **Menu** (left) soft key () , then press  (for **Tools**), and  (for **Voice Service**),  (for **Voice Settings**), and  for **Sound**. The following options appear in the display:
 - **Prompts** — Enables or disables audio prompts.
 - **Digits** — Enables or disables audio digit playback.
 - **Names** — Enables or disables audio name playback.
 - **Name Settings** — Lets you adjust the speed and volume of your phone's audio name playback.
2. Use the navigation keys to highlight the desired setting.
3. Press the **OK** key to accept the new setting.

Voice Launch

To set the key or action that launches VoiceSignal, do the following:

1. In standby mode, press the **Menu** (left) soft key () , then press  (for **Tools**), and  (for **Voice Service**),  (for **Voice Settings**), and  for **Voice Launch**. The following options appear in the display:
 - **Key Only** — Press and hold  to activate VoiceSignal for one call.

- **Key/Ear Mic** — Attach a headset to your phone. Press and hold  to activate VoiceSignal. Now, you can make and end calls using VoiceSignal by pushing the button on the headset.
2. Use the navigation keys to highlight the option you want, then press the  key to save and exit.

About VoiceSignal

This option causes the **About VoiceSignal** screen to appear in the display, showing version and build information about the VoiceSignal software included on your phone.

1. In standby mode, press the **Menu** (left) soft key () , then press  (for **Tools**), and  (for **Voice Service**),  (for **Voice Settings**), and  for **About**.

The **About VoiceSignal** screen appears in the display showing the version level of the VoiceSignal software currently installed on your phone.

Bluetooth

Bluetooth is a short-range wireless communications technology capable of exchanging information over a distance of about 30 feet without requiring a physical connection.

Unlike infrared, you don't need to line up the devices to beam information with Bluetooth. If the devices are within a range of one another, you can exchange information between them, even if they are located in different rooms.

The Bluetooth wireless technology settings menu provides the ability to view and change the device name, show the visibility, and set the security for the device.

Turn Bluetooth On/Off

When the Bluetooth is turned on, you can use the Bluetooth features available. When the Bluetooth is turned off, you cannot send or receive information via Bluetooth. To save battery life or in situations where Bluetooth use is prohibited, such as airline traveling, you can turn off the Bluetooth wireless technology headset.

Add New Device

To search for available Bluetooth device(s),

1. In standby mode, press the **Menu** (left) soft key (), then press  (for **Tools**) and  for **Bluetooth**. The following options appear in the display:

- **Add New Device**
- **Registered List**
- **Bluetooth Setting**

2. Highlight **Add New Device** and press the  key.

If Bluetooth is off, you are prompted to “Turn Bluetooth on?”. Press the **Yes** (left) soft key () to turn Bluetooth on. Press the **No** (right) soft key () to leave Bluetooth off.

“Place device you are connecting to in discoverable mode” appears in the display.

3. Place the Bluetooth device in discoverable mode. (See the device user manual for more information.)

4. Press the **OK** key. Names of the available devices appears in the display.
5. Use the navigation keys to highlight the device you want to pair with your phone.
6. Press the **PAIR** (**OK**) key to pair the selected device with the phone. You are prompted to enter the passkey or PIN for the selected device.
7. Enter the device passkey or PIN and press the **OK** key.

Registered List

This menu provides a list of Bluetooth wireless technology devices discovered by your handset.

1. In standby mode, press the **Menu** (left) soft key (), then press **7mm** (for **Tools**) and **2mm** for **Bluetooth**. The following options appear in the display:
 - **Add New Device**
 - **Registered List**
 - **Bluetooth Setting**
2. Highlight **Registered List** and press the **Select** soft key or the **OK** key.

Connecting to a Bluetooth Device

From the Device list,

1. Highlight the device and press the **OK** key.
2. If you are unable to pair with the device a popup appears in the display. Press the **Yes** soft key to retry.

Bluetooth Settings

Enable/Disable

Selecting this option turns Bluetooth on or off.

Discovery Mode

Allows other users to see your accessibility. Select **On** for other devices to see your device, or **Off** for no visibility.

Device Name

Shows the handset name. You may change this name enter the text and press the **OK** key.

Device Info

Shows the Bluetooth Type, Status, and Address of your phone.

Calendar

Calendar lets you view the current, past, or future month in a monthly calendar layout. While viewing the calendar, the current date is highlighted and days with scheduled events are surrounded by a box.

View an event

1. In standby mode, press the **Menu** (left) soft key (**☰**), then press **7th** (for **Tools**) and **3rd** for **Calendar**.

Tip: To launch Calendar using a voice command — In standby mode, press and hold **⓪** until the phone prompts, “**Say a command.**” Say “**Calendar**” into the microphone.

A calendar appears in the display with the current date highlighted. The month and year also appear.

2. Use the navigation keys to move around within the calendar.

- Press the **OK** key to open the highlighted date.
- Press the volume up key () to view previous months.
- Press the volume down key () to view future months.
- Press the **Options** (right) soft key () while viewing the calendar. The following options appear in the display:
 - **Go to Date** — Lets you jump to any date you specify.
 - **Go to Today** — Lets you jump to any date you specify.
 - **Erase Old** — Lets you erase past events.
 - **Erase all** — Lets you erase all events.
- Use the navigation keys to highlight the desired option, then press the **OK** key to select the highlighted option and perform the related process.

Add a New Event

1. In standby mode, press the **Menu** (left) soft key () , then press  (for **Tools**) and  for **Calendar**.

Tip: To launch Calendar using a voice command — In standby mode, press and hold  until the phone prompts, “Say a command.” Say “Calendar” into the microphone.

A calendar appears in the display with the current date highlighted. The month and year also appear.

2. Use the navigation keys to highlight the date of the new event.
3. Press the **Add** (left) soft key () . The **New Event** screen appears in the display.
4. Use the navigation keys and the keypad to select and enter details of the event. (See “Section 5: Entering Text” on page 73 for more information.)

5. Enter the start and End dates and times for the event using the keypad. Enter the dates and times for the event using 2 digits for day, month, hour, and minute entries. Use 4 digits for year entries.
6. Use the **Left** and **Right** navigation keys to change between **AM** and **PM**.
7. When you're finished entering the dates and times, use the **Up** and **Down** navigation keys to highlight the **Alert** field. Use the **Left** and **Right** navigation keys to select a type of alert.
8. Use the **Up** and **Down** navigation keys to highlight the **Reminder** field. Use the **Left** and **Right** navigation keys to select the Reminder off or to select a reminder interval.
9. Use the **Up** and **Down** navigation keys to highlight the **Alert time** field. Use the **Left** and **Right** navigation keys to select the amount of time before the event occurs that you wish to be notified by an alert.
10. Press the **OK** key to store the event in your calendar. An alert will notify you prior to the event, if you set a notification alert.

Memo Pad

You can create a notes and store them in Memo Pad. You can't prioritize or set an alert for stored notes. Return to Memo Pad anytime you wish to review and edit your notes.

Add a Memo

1. In standby mode, press the **Menu** (left) soft key (), then press  (for **Tools**) and  for **Memo Pad**.
2. If you have any stored memos, they appear as a list in the display. If this is your first time in **Memo Pad**, “**No memos**” appears in the display. Press the **Add** (left) soft key () to add a new memo.
3. Enter a memo using the keypad. (See “Section 5: Entering Text” on page 73 for more information.)
4. When you’re finished entering details for the memo, press the  key. The memo is saved.

View, Edit, and Erase Memos

1. In standby mode, press the **Menu** (left) soft key (), then press  (for **Tools**) and  for **Memo Pad**.
2. Use the navigation keys to highlight a memo.
3. To view the memo, press the **VIEW** () key.
4. To edit the memo you are viewing, press the **Edit** (left) soft key ().

Edit the memo using the keypad. (See “Section 5: Entering Text” on page 73 for more information.)

5. To erase the memo you are viewing, press the **Options** (right) soft key (), then select the Erase option.

You are prompted to verify the erasure. Press the **Yes** (left) soft key () to erase the memo. Press the **No** (right) soft key () to keep the memo.

Alarm Clock

Your phone has an alarm clock that can be set to go off once, or daily at a specified time. Once set, the alarm clock is easy to change or turn off completely.

Note: The alarm doesn't function when the phone is turned off. If the time for an alarm that was set for Once has elapsed and the phone is off, the alarm occurs at the same time on the following day.

1. In standby mode, press the **Menu** (left) soft key () , then press  (for **Tools**) and  for **Alarm Clock**. The following options appear in the display:
 - **Alarm 1**
 - **Alarm 2**
 - **Alarm 3**
2. Use the navigation keys to highlight an Alarm selection, then press the  key. A Set Alarm screen appears in the display containing the following options:
 - **Alarm**
 - **Time**
 - **Repeat**
 - **Ringer**

Use the **Up** and **Down** navigation keys to select options, and use the **Left** and **Right** navigation keys to select values for the options.

Use the keypad to enter the time for the alarm.

3. Press the  key when you're finished entering the time for the alarm. The alarm is set and the alarm icon () appears in the top of the display.

When an Alarm Sounds

An animated alarm clock appears in the display with the options **Snooze** or **Dismiss**, and an alert sounds when the specified time for the alarm arrives.

- Use the navigation keys to highlight **Dismiss**, then press the **OK** key to silence the alarm.
 - If the alarm was set as a Daily alarm, the alarm icon remains in the top of the display.
 - If the alarm was set as a Mon.-Fri., the alarm icon remains in the top of the display.
 - If the alarm was set as a Weekends only alarm, the alarm icon remains in the top of the display.
 - If the alarm was set as a Once only alarm, the alarm icon disappears from the top of the display.

Turn Off the Alarm

1. In standby mode, press the **Menu** (left) soft key () , then press **7m** (for **Tools**) and **5m** for **Alarm Clock**. The following options appear in the display:
 - **Alarm 1**
 - **Alarm 2**
 - **Alarm 3**
2. Use the navigation keys to highlight an active Alarm selection, then press the **OK** key.
3. The **Alarm** option is highlighted, use the **Left** and **Right** navigation keys to select **Off**, then press the **OK** key. Select alarm is turned off.

World Time

World Time lets you view the time of day or night in another part of the world. World Time displays time in the 24 different time zones around the world.

1. In standby mode, press the **Menu** (left) soft key (), then press  (for **Tools**) and  for **World Time**. A world map appears in the display.
2. Use the **Left** and **Right** navigation keys to display the time zone and city that you wish to view. The following time zones/cities are supported:

EST/EDT: Detroit Washington D.C New York Montreal Boston	Caracas	Brasilia	Mid Atlantic
Cape Verde	London	Paris	Rome
Berlin	Athens	Helsinki	Jerusalem
Moscow	Baku	Abu Dhabi	Tashkent
Alma-ata	Bangkok	Jakarta	Hong Kong
Beijing	Seoul	Tokyo	Guam
Sydney	Okhotsk	Wellington	Samoa
Midway	HAST/HADT: Honolulu Hawaii	AKST/AKDT: Alaska	PST/PDT: Seattle San Francisco Los Angeles
MST/MDT: Denver Arizona	CST/CDT: Dallas Chicago Houston Mexico City		

3. Press the **Options** (right) soft key () select to display (**DST On**) or not display (**DST Off**) Daylight Savings Time (DST) for the selected time zone.
4. Do one of the following:
 - Press the  key to set the selected time zone as the home time zone for your phone.
 - Press the  key to return to the Tools menu.

Calculator

You can perform calculations, including addition, subtraction, multiplication, and division using your phone.

1. In standby mode, press the **Menu** (left) soft key () , then press  (for **Tools**) and  for **Calculator**. The **Calculator** appears in the display.
2. Enter the first number in your equation using the keypad (numbers can be up to nine digits long).
 - Press  to enter a decimal point. (Calculator only accepts 2 digits after a decimal point.)
 - Press  to change the sign for a number to a negative.
3. Use the navigation keys to set the type of calculation that you wish to perform. Your choices are as follows:
 - **Up** navigation key —  Multiplication
 - **Left** navigation key —  Subtraction
 - **OK** key —  Equals/Total
 - **Right** navigation key —  Addition
 - **Down** navigation key —  Division

4. Use the keypad to enter the second number into your equation.
5. Press the **OK** key to perform the calculation and view the result.

Stop Watch

You can use this menu to set a stop watch.

1. In standby mode, press the **Menu** (left) soft key (), then press  (for **Tools**), and  for **Stop Watch**.
2. Press the **OK** key to start, stop, and resume the stopwatch count.
3. Press the **Record** (left) soft key () at the start of each succeeding event/lap to record the completion time for the previous event/lap.
4. Press the **Reset** (right) soft key () to erase all stop watch (lap) times recorded.

Converter

The conversion menu provides the following conversion categories:

- Currency
- Length
- Weight
- Volume
- Area
- Temperature

To convert a currency, length, weight, volume, area, or temperature, do the following:

1. In standby mode, press the **Menu** (left) soft key () , then press  (for **Tools**), and  for **Converter**.
2. Use the navigation keys to highlight the conversion feature you wish to use, then press the  key.
3. Use the navigation keys to select the units to be converted **From** and **To**.
4. Enter the quantity you want converted in the **From** field. The converted quantity appears in the **To** field.

Note: To include a decimal point, press the  key.

Currency — Reviewing/Editing Exchange Rates

The Currency Converter includes long-term average exchange rates as default values. To review and / or change a default exchange rate to the current exchange rate, do the following:

1. In standby mode, press the **Menu** (left) soft key () , then press  (for **Tools**),  (for **Converter**), and  for **Currency**.
2. Use the navigation keys to select the currency to be converted **From**.
3. Press the **Rate** (left) soft key (). The **Exchange Rate** list for the **From** currency appears in the display.
4. Press the  key to edit the exchange rate.
5. Use the **Up** and **Down** navigation keys to highlight the currency to be converted **To**, then change the current exchange rate.

6. Press the **OK** key to save the changed exchange rate.
7. Press the **CLR** key to return to the Currency Converter screen.

Currency — Adding Exchange Rates

You can use the Currency Converter to convert from and to obscure currencies by adding exchange rates for these currencies. To add a currency and its exchange rate to the Currency Converter, do the following:

1. In standby mode, press the **Menu** (left) soft key (), then press  (for **Tools**),  (for **Converter**), and  for **Currency**.
2. Press the **Rate** (left) soft key (). The **Exchange Rate** list for the **From** currency appears in the display.
3. Press the **Add** (left) soft key (). The **Add Exchange Rate** screen appears in the display with the **Base** field highlighted.
4. Use the **Left** and **Right** navigation keys to select the **Base** currency to be converted from.
5. Press the **Down** navigation key to highlight the **Currency** field.
6. Enter an identifier of up to 5 characters for the new currency using the keypad. (See “Section 5: Entering Text” on page 73 for more information.)
7. Press the **Down** navigation key to highlight the **Exchange Rate** field.
8. Enter a decimal exchange rate for the new currency using the keypad.

Notes:

Press the  key to enter the decimal point.

The **Exchange Rate** field only accepts two digits after the decimal point.

9. Press the  key to save the new exchange rate.

Currency — Erasing Exchange Rates

You cannot erase the preloaded currencies from the Exchange Rate list. You can erase a currency that you have added to the list by doing the following:

1. In standby mode, press the **Menu** (left) soft key (), then press  (for **Tools**),  (for **Converter**), and  for **Currency**.
2. Press the **Rate** (left) soft key (). The **Exchange Rate** list for the **From** currency appears in the display.
3. Use the **Up** and **Down** navigation keys to highlight the currency exchange rate to be erased.
4. Press the **Erase** (right) soft key (). You are prompted to confirm the erasure.
5. Press the **Yes** (left) soft key () to erase the selected exchange rate or press the **No** (right) soft key () to return to the Exchange Rate list.

Tip Calculator

Tip Calculator automatically calculates the following amounts:

- Gratuity (tip)
- Individual payment (for groups)

Calculations are based on the total amount of the check, a selected percentage, and the number of people paying.

1. In standby mode, press the **Menu** (left) soft key () , then press  (for **Tools**).
2. Use the navigator keys to highlight **Tip Calculator**, then press the  key. The **Bill** field is highlighted.
3. Use the keypad to enter the total amount of the bill.
4. If needed, press the Down navigation key to highlight the **Tip** field.
5. Use the keypad to enter a tip percentage.
6. If needed, press the Down navigation key to highlight the **# Paying** field.
7. Use the keypad to enter the number of persons paying.
8. The amount of the Tip, the bill Total, and the amount Each person should pay appear in the lower half of the screen.

Section 13: Changing Your Settings

Topics Covered

- Location
 - Display Settings
 - Sound Settings
 - Call Settings
 - Phone Settings
 - Memory Info
-

This section explains how to customize your phone to suit your needs and preferences.

Location

This function identifies your location to the network via the Global Positioning System (GPS). You can set this function for continuous operation or to operate only in the event that you dial 911.

Note: Contact your Wireless Provider to determine whether, when, or where location-based services are available.

1. In standby mode, press the **Menu** (left) soft key () , then press  (for **Settings**), and  for **Location**.

The following options appear in the display:

- **Location on** — GPS location setting is on whenever you make or receive a call, wherever the feature is available.
 - **911 Only** — GPS location setting is on only when you dial 911.
2. Use the navigation keys to highlight the option you want.
 3. Press the  key to select the desired Location setting. You're returned to the **Settings** menu.

Display Settings

Using the **Display** menu, you can set the menu style, set the standby mode animation, customize the backlight settings, and more.

1. In standby mode, press the **Menu** (left) soft key () , then press  (for **Settings**), and  for **Display Settings**. The following options appear in the display:
 - **Menu Style** — Lets you choose the main menu style.

- **Wallpapers** — Lets you choose the picture(s) that display(s) on your phone when in standby mode.
 - **Clock Format** — Lets you choose whether to show the time in the display in digital or analog format.
 - **Theme** — Lets you select the main menu color scheme.
 - **Dialing Font** — Lets you choose how the number will display on the display screen.
 - **Banner** — Lets you create your own personalized greeting that appears in the display when your phone is in standby mode.
 - **Backlight** — Lets you set backlight options for the LCD, keypad, and brightness.
2. Use the navigation keys to highlight a sub-menu.
 3. Press the **OK** key to enter the highlighted sub-menu.
- The following sections describe the above listed display sub-menus in greater detail.

Menu Style

Menu Style allows you to choose how main menus appear in your display.

1. In idle mode, press the **Menu** (left) soft key (**ⓘ**), then press **8** (for **Settings**), **2** (for **Display Settings**), and **1** (for **Menu Style**). The following options appear in the display:
 - **Icon** — Display main menus as icons.
 - **List** — Display main menus in a list format.
2. Use the navigation keys to highlight the option you want.
3. Press the **OK** key to select the highlighted option.

Wallpapers

Wallpapers lets you choose the pictures that appear in your phone's display while in standby mode.

1. In standby mode, press the **Menu** (left) soft key () , then press  (for **Settings**),  (for **Display Settings**), and  for **Wallpapers**. The following sub-menus appear in the display:
 - **My Images** — Choose a picture to appear in the display when the phone is in standby mode.
 - **Preset Images** — Choose a preset image to appear in the display when the phone is in standby mode.
 - **Image Shuffle** — Lets you enable or disable a set of selected pictures and/or preset images that appear in random order in your display when the phone is in standby mode. (See "Shuffle" on page 145 for more information.)
2. Use the navigation keys to highlight the sub-menu that you wish to enter, then press the  key.
 - For **My Images** and **Preset Images**, a 2 X 2 array of pictures or images appears in the display.
 - Use the navigation keys to highlight a picture or an image.
 - Press the  key to set the highlighted picture or image to display when the phone is in standby mode.
 - For **Image Shuffle**, the following options appear in the display:
 - **On** — Overrides the **My Images** or **Preset Images** setting and enables random display of the Shuffle pictures and/or images.
 - **Off** — Disables random display of the Shuffle pictures and/or images and restores the **My Images** or **Preset Images** setting.

Use the navigation keys to select the desired option, then press the  key.

Clock Format

Clock Format lets you choose whether to show the time in the display in digital or analog format.

1. In standby mode, press the **Menu** (left) soft key () , then press  (for **Settings**),  (for **Display Settings**), and  for **Clock Format**. The following options appear in the display:
 - **Digital** — Numerical time and date display
 - **Analog** — 12-hour clock face with moving hour and minute hands
 - **Off** — No time or date display
2. Use the navigation keys to highlight the desired setting, then press the  key to save the setting.

Theme

Theme lets you select the color scheme your phone uses to highlight menu items and scroll bar positions.

1. In standby mode, press the **Menu** (left) soft key () , then press  (for **Settings**),  (for **Display Settings**), and  for **Theme**. The following options appear in the display:
 - **Papaya**
 - **Black**
2. Use the navigation keys to highlight the desired setting, then press the  key to save the setting.

Dialing Font

Dialing Font adjusts the color of display.

1. In standby mode, press the **Menu** (left) soft key () , then press  (for **Settings**),  (for **Display Settings**), and  for **Dialing Font**. The following options appear in the display:
 - **Style** — Sets font (**Normal**, **Quill Pen**, **Sticky**, or **Color Dial**) used to show dialed numbers.
 - **Size** — Sets size (**Normal** or **Large**) of the font used to show dialed numbers.
2. Use the navigation keys to highlight the desired option and setting, then press the  key to save the setting.

Banner

Create your own personalized greeting that appears in the display while your phone is in standby mode.

1. In standby mode, press the **Menu** (left) soft key () , then press  (for **Settings**),  (for **Display Settings**), and  for **Banner**. The **Banner** text entry screen appears in the display.

Note: Press and hold the  key to erase an existing banner, if necessary.

2. Enter a word or short phrase (up to 12 characters) to appear in your phone's display while in standby mode. (See "Section 5: Entering Text" on page 73 for more information.)
3. Press the  key to save the new banner.

Backlight

You can set the backlight for your display or keypad to remain on for a specified period of time or remain on as long as the slide is open.

Note: Prolonged backlight use drains your battery faster.

1. In standby mode, press the **Menu** (left) soft key () , then press  (for **Settings**),  (for **Display Settings**), and  for **Backlight**. The following sub-menus appear in the display:
 - **Main Display** — Sets the amount of time the backlight for the main display remains on after a period of inactivity. Optional settings are **7**, **15**, and **30 Seconds** as well as **Always On** (this setting uses much more power than the timed settings) and **Always Off**.
 - **Keypad** — Sets the amount of time the backlight for the main display remains on after a period of inactivity. Optional settings are **7**, **15**, and **30 Seconds** as well as **Always On** (this setting uses much more power than the timed settings) and **Always Off**.
 - **Brightness** — Use the Left and Right soft keys to select between any of 5 optional settings.
2. Use the navigation keys to highlight an option.
3. Press the  key to enter the highlighted option's sub-menu and to save changed settings as desired.

Sound Settings

The sound menu provides a variety of options to customize audio properties for such things as ringers, keypad tones alerts, and more.

Volume

Use the Volume sub-menu to set the default volume for incoming calls and alarms, or set the phone to vibrate.

1. In standby mode, press the **Menu** (left) soft key () , then press  (for **Settings**),  (for **Sound Settings**), and  for **Volume**. The following options appear in the display:
 - **Voice Calls** — Lets you set the volume and/or vibration for the incoming calls ringer.
 - **Messages** — Lets you set the volume and/or vibration for the incoming messages ringer.
 - **Alarms** — Lets you set the volume and/or vibration for the alarm ringer.
 - **Key Tone** — Lets you set the volume for the keypad tone(s).
2. Use the navigation keys to highlight an option, then press the  key.
3. Use the **Up** and **Down** volume keys on the left side of the phone (or the **Left** and **Right** navigation keys) to select the volume level (or vibrate mode) for the selected setting.
4. Press the  key to save the setting.

Ringer Type

You can assign ringer types and melody tones for calls, alarms, and other alerts, in the Ringer Type sub-menu.

1. In standby mode, press the **Left** navigation key for **Ringer Type**. The following sub-menus appear in the display:
 - **Voice Calls** — Lets you set which ringtone, sound file, and/or one of a set of ringtones and/or sound files plays when you receive a voice call.
 - **Messages** — Lets you set which ringtone or sound file plays when you receive a Text Message, Picture Message, and/or Voicemail message.

Note: You can also access the Ringer Type sub-menu by pressing **Menu**, , , .

2. Use the navigation keys to highlight the desired sub-menu, then press the  key.
 - For **Voice Calls**, the following options appear in the display:
 - **My Ringtones**
 - **My Sounds**
 - **Melody Shuffle**
 - For **Messages**, the following options appear in the display:
 - **Text Message**
 - **Picture Message**
 - **Voicemail**
3. Use the navigation keys to highlight an option.
4. Press the  key to enter the highlighted option's sub-menu and to save changed settings as desired.

Alerts

You can set your phone to sound an alert whenever you enter or leave your service area, connect or disconnect a call, as well as other options.

1. In standby mode, press the **Menu** (left) soft key () , then press  (for **Settings**),  (for **Sound Settings**), and  for **Alerts**. The following Alerts sub-menus appear in the display:
 - **Minute Beep** — Sounds an alert ten seconds before each elapsed minute of a call.
 - **Roaming** — Sounds a unique ring tone when you receive a call your home service area.
 - **Call Connect** — Sounds an alert when you answer a call.

- **Power On/Off** — Plays a melody when turn the phone on or off.
2. Use the navigation keys to highlight a sub-menu, then press the **OK** key.
 3. Use the **Up** and **Down** navigation keys to highlight **On** or **Off**.
 4. Press the **OK** key to confirm your selection.

Call Settings

Restriction

Restriction lets you restrict the use of your phone for outgoing calls, incoming calls, and calls placed from your Contacts.

1. In standby mode, press the **Menu** (left) soft key () , then press  (for **Settings**),  (for **Call Settings**), and  for **Restriction**.
2. Use the navigation keys to select **Outgoing**, **Incoming**, or **Contacts**.
3. Press the **OK** key.
4. Use the navigation keys to highlight **On** or **Off**, then press the **OK** key.

Call Answer

You can select a specific answer mode when you receive an incoming call. Your phone can be preset to answer when you do any of the following:

- Press any key
- Press the Send key

- Open the slide
1. In standby mode, press the **Menu** (left) soft key () , then press  (for **Settings**) ,  (for **Call Settings**) , and  for **Call Answer**. The **Call Answer** sub-menu with the following options appears in the display:
 - **Any Key** — Press any key except the  , or left soft key () to answer an incoming call.
 - **Send Key** — Press  to answer an incoming call.
 - **Slide Up** — Open the slide to answer an incoming call.

Tip: You can set your phone to answer calls automatically, without any input from you. (See “Auto Answer” on page 185 for more information.)

2. Use the navigation keys to highlight the method you wish to use for answering calls, then press the  key.

Auto Answer

Auto Answer enables your phone to automatically answer calls after a period of time that you specify.

1. In standby mode, the **Menu** (left) soft key () , then press  (for **Settings**) ,  (for **Call Settings**) , and  for **Auto Answer**. The following options appear in the display:
 - **Off** — Disables automatic answering of calls
 - **After 1 Second** — Phone automatically answers calls after 1 second
 - **After 3 Seconds** — Phone automatically answers calls after 3 seconds
 - **After 5 Seconds** — Phone automatically answers calls after 5 seconds

2. Use the navigation keys to highlight the desired setting, then press the **OK** key.

Auto Retry

Auto Retry automatically re-dials a number if the connection fails. Depending upon your location, the number of times your phone automatically dials the number may vary.

1. In standby mode, press the **Menu** (left) soft key () , then press **8** (for **Settings**), **4** (for **Call Settings**), and **4** for **Auto Retry**. The **Auto Retry** sub-menu with the following options appears in the display:
 - **Off** — Disables automatic redialing of numbers
 - **Every 10 Second** — Phone automatically redials a number every 10 seconds
 - **Every 30 Second** — Phone automatically redials a number every 30 seconds
 - **Every 60 Second** — Phone automatically redials a number every 60 seconds
2. Use the navigation keys to highlight the desired setting, then press the **OK** key.

TTY Mode

Your phone is fully TTY compatible. TTY equipment is connected to your phone through the headset connector on the left side of the phone. TTY must be enabled before you can use your phone with a TTY device.

1. In standby mode, press the **Menu** (left) soft key () , then press **8** (for **Settings**), **4** (for **Call Settings**), and **5** for **TTY Mode**. You are prompted to confirm you want to change the current TTY Mode setting.

Note: The “**Enabling TTY may impair headset use and non-TTY accessory performance**” message pops up when you select **TTY Mode**.

2. Press the **Yes** (left) soft key () to access the TTY Mode options or press the **No** (right) soft key () to return to the **Call Settings** sub-menu.
3. If you press the **Yes** (left) soft key (), the following options appear in the display:
 - **TTY Full** — Enables TTY mode and disables microphone and earpiece
 - **TTY + Talk** — Enables TTY mode and microphone
 - **TTY + Hear** — Enables TTY mode and earpiece
 - **TTY Off** — Disables TTY mode
4. Use the navigation keys to highlight your selection and press the  key to save your selection.

Note: The TTY icon () appears in the top of the display when the phone is in standby mode.

Voice Privacy

Voice Privacy when enabled (that is, set to **Enhanced**), turns on advanced voice encryption.

1. In standby mode, press the **Menu** (left) soft key (), then press  (for **Settings**),  (for **Call Settings**), and  for **Voice Privacy**. The following options appear in the display:
 - **Standard** — Voice privacy is disabled
 - **Enhanced** — Voice privacy is enabled

2. Use the **Up** and **Down** navigation keys to highlight the Voice Privacy option of your choice, then press **OK**. Your settings are saved.

Data Settings

Use the **Data Settings** menu to configure data connection settings.

1. In standby mode, press the **Menu** (left) soft key (**☰**), then press **8** (for **Settings**), **4** (for **Call Settings**), and **7** for **Data Settings**.
2. The following options appear in the display:
 - **Data Off** — No incoming data calls accepted.
 - **Data for Next Call** — Wait for data call for the next 10 minutes.
 - **Data until Powered Off** — Data calls only, no voice calls accepted, until you power the phone off and on again.
3. Use the **Up** and **Down** navigation keys to highlight the data setting of your choice, then press **OK**. Your setting is saved.

DTMF Tones

Use this menu to set DTMF settings to **Normal**, or **Long**.

1. In standby mode, press the **Menu** (left) soft key (**☰**), then press **8** (for **Settings**), **4** (for **Call Settings**), and **8** for **DTMF Tones**. The following options appear in the display:
 - **Normal** — Select for a normal tone
 - **Long** — Select for an extended tone
2. Use the **Up** and **Down** navigation keys to highlight the DTMF Tones setting of your choice, then press **OK**. Your setting is saved.

Phone Settings

Airplane Mode

When set to **On**, Airplane Mode disables all radio functions of your phone. This prevents you from making or receiving calls, but allows you to use other features (such as the camera and the Tools) safely in sensitive environments, such as on board an aircraft.

1. In standby mode, press the **Menu** (left) soft key () , then press  (for **Settings**),  (for **Phone Settings**), and  for **Airplane Mode**. The following options appear in the display:
 - **Off** — Enables the radio transmitter and receiver in your phone
 - **On** — Disables the radio transmitter and receiver in your phone
2. Use the navigation keys to highlight the desired option, then press the  key to save your setting.

Language

The language option on your phone can change the language of voice prompts, menus, and key-input.

1. In standby mode, press the **Menu** (left) soft key () , then press  (for **Settings**),  (for **Phone Settings**), and  for **Language**. The following options appear in the display:
 - **English**
 - **Spanish**
2. Use the navigation keys to highlight your language preference, then press the  key.

Security

Use the Security menu to lock your phone, set up emergency numbers, enable or disable voice privacy, set restrictions, as well as other security options.

Lock Phone

Locking the phone limits all outgoing calls except calls to 911 emergency and the three user-programmable emergency numbers. You can lock the phone manually during use, or set the phone to lock automatically when it is turned on. With the phone in lock mode, you can answer incoming calls, but you must unlock the phone to place outgoing calls (except to emergency and secret numbers).

1. In standby mode, press the **Menu** (left) soft key () , then press  (for **Settings**),  (for **Phone Settings**), and  for **Security**. You're prompted to enter the lock code.

Note: The default lock code is the last four digits of your telephone number.

2. Press  for **Lock Phone**. The following Device Lock Mode options appear in the display:
 - **Lock** — Locks the phone immediately (The phone stays locked until you enter the lock code.)
 - **Unlock** — Unlocks the phone
 - **On Power up** — The phone locks automatically the next time your phone is powered ON (The phone stays locked until you enter the lock code.)
3. Use the navigation keys to highlight the Device Lock Mode option of your choice.

4. Press the **OK** key to perform the function for the highlighted option.

Change Lock

The default lock code for your phone is generally the last four digits of your phone number. It is advisable to change the default lock code to a secret code for security purposes.

1. In standby mode, press the **Menu** (left) soft key (**☰**), then press **8th** (for **Settings**), **5th** (for **Phone Settings**), and **3rd** for **Security**. You're prompted to enter the lock code.

Note: The default lock code is the last four digits of your telephone number.

2. Press **2nd** for **Change Lock**. You're prompted to enter the new lock code.
3. Enter the new lock code. You're prompted to re-enter the new lock code for verification.
4. Enter the new lock code again. Your changes are stored.

Note: Your phone does not allow you to view the lock code for obvious security reasons. If you change the lock code, be sure to write down or memorize the new code.

Emergency

Your phone provides the option of storing three emergency numbers. Each number can be up to 32 digits in length. All emergency numbers can be manually called at any time, even when your phone is locked or restricted. This can be a useful feature for controlling outgoing calls from your phone.

Note: Emergency number 911 is hard-coded into your phone. You can dial this number any time, even when the phone is locked or restricted. If you call 911 an audible tone is heard and an Emergency prompt appears in the display for the duration of the call.

Important: Because of various transmission methods, network parameters, and user settings necessary to complete a call from your wireless phone, a connection cannot always be guaranteed. Therefore, emergency calling may not be available on all wireless networks at all times.

Important: DO NOT depend on this phone as a primary method of calling 911 or for any other essential or emergency communications.

Remember to always turn your phone on and check for adequate signal strength before placing a call.

- **Store Emergency Numbers**

1. In standby mode, press the **Menu** (left) soft key () , then press  (for **Settings**),  (for **Phone Settings**), and  for **Security**. You're prompted to enter the lock code.

Note: The default lock code is the last four digits of your telephone number.

2. Enter the lock code, then press  for **Emergency #**.
3. Press , , or  to select from the three emergency number entries.
4. Enter an emergency number (up to 32 digits in length).
5. Press the  key to save the number that you entered.

- Call Emergency Numbers in Lock Mode

1. In standby mode, enter the emergency number.
2. Press the  key to place the call.

Resetting Your Phone

Reset Phone returns all setup options to their factory default.

1. In standby mode, press the **Menu** (left) soft key () , then press  (for **Settings**),  (for **Phone Settings**), and  for **Security**. You're prompted to enter the lock code.

Note: The default lock code is the last four digits of your telephone number.

2. Enter the lock code, then press  for **Reset Phone**. A prompt appears in the display asking if you wish to restore default settings (except for the Contacts and Voice Dial).
3. Press the **Yes** (left) soft key () to restore default settings or press the **No** (right) soft key () to return to the **Security** sub-menu.

Erase All Entry

Erase memory erases your Contacts and Photo Gallery. This feature is useful if you want to give your phone to someone else.

1. In standby mode, press the **Menu** (left) soft key () , then press  (for **Settings**),  (for **Phone Settings**), and  for **Security**. You are prompted to enter the lock code.

Note: The default lock code is the last four digits of your telephone number.

2. Enter the lock code, then press **5#** for **Erase All Entry**.
You are prompted to enter the lock code a second time.

Note: The default lock code is the last four digits of your telephone number.

3. You are prompted to confirm erasure of all entries.
4. Press the **Yes** (left) soft key (**Yes**) to erase all entries or press the **No** (right) soft key (**No**) to return to the **Security** sub-menu.

NAM Selection

The **Network** menu allows you to select **NAM** (Number Assignment Module) settings for your phone. You can store two **NAM** settings, which are essentially telephone numbers, for your phone.

1. In standby mode, press the **Menu** (left) soft key (**Menu**), then press **8#** (for **Settings**), **5#** (for **Phone Settings**), and **4#** for **NAM Selection**. The following options appear in the display:
 - **NAM1** — Your service contract has one phone line.
 - **NAM2** — Your service contract has two phone lines.
2. Use the navigation keys to highlight the desired option, then press the **OK** key to save your setting.
The phone powers itself off and back on.

System Select

The **System Select** menu allows you to select the roaming setting for your phone.

1. In standby mode, press the **Menu** (left) soft key (**Menu**), then press **8#** (for **Settings**), **5#** (for **Phone Settings**), and **5#** for **System Select**. The following

roaming options appear in the display:

- **Home only** — Your phone is available for normal operation only within your designated coverage area.
- **Automatic-A** — The Preferred Roaming List (PRL) is used to acquire service. If no preferred systems are found, any digital “A” system is acquired.
- **Automatic-B** — The PRL is used to acquire service. If no preferred systems are found, any digital “B” system is acquired.

2. Use the navigation keys to highlight the desired roaming option, then press the **OK** key to save your setting.

Clock Set

Use the **Clock Set** option to set the current date and time.

Note: In digital service mode, the **Clock Set** feature is disabled. The network adjusts time and date automatically.

1. In standby mode, press the **Menu** (left) soft key (**☰**), then press **8** (for **Settings**), **5** (for **Phone Settings**), and **6** for **Clock Set**. The following options appear in the display:
 - **Set Time**
 - **Set Date**
2. Use the navigation keys to highlight the desired option, then press the **OK** key.
 - For **Set Time**, the **Set Time** screen appears in the display.
 - Enter the current time using your keypad. The hour and minute must be entered using two digits each and in 12-hour format.
 - Use the **Left** and **Right** navigation keys to select **am** or **pm**.

- Press **OK** to save your time setting.
- For **Set Date**, the **Set Date** screen appears in the display.
 - Enter the current date using your keypad.
The month and day must be entered using two digits each.
The year must be entered using all four digits.
 - Press **OK** to save your date setting.

Quick Search

Quick Search is an easy way to locate Menu items and Contacts.

1. In standby mode, press the **Menu** (left) soft key () , then press **8** (for **Settings**), **5** (for **Phone Settings**), and **7** for **Quick Search**. The following options appear in the display:
 - **On** — Quick Search is enabled
 - **Off** — Quick Search is disabled
2. Use the navigation keys to highlight the desired Quick Search option, then press the **OK** key to save your setting.

Searching for a Menu Item

1. In standby mode, press the first few numeric keys that correspond to the letters of the Menu item name.
For example, to search for “Inbox” you would enter:

				
I	N	B	O	X

2. Press the **Down** navigation key. The **Menu List** screen appears in the display with the first menu item matching your entry highlighted.

3. Press the **OK** key to access the content of the menu item.

Searching for a Contact

1. In standby mode, press the first few numeric keys that correspond to the letters of the contacts name.

For example, to search for “Sally” you would enter:



2. Press the **Up** navigation key. The Find screen appears in the display with the first contact name matching your entry highlighted.
3. Press the **SEND** key to call the contact.

PC Connection

PC Connection allows you to select how you want to connect your phone to your personal computer.

1. In standby mode, press the **Menu** (left) soft key () , then press **8** (for **Settings**), **5** (for **Phone Settings**), and **8** for **PC Connection**. The following options appear in the display:
 - **USB** — Use a Universal Serial Bus connection
 - **Bluetooth** — Use a Bluetooth wireless connection
 - **No Connection** — Disable PC Connection
2. Use the navigation keys to highlight the desired PC Connection option, then press the **OK** key to save your setting.

Memory Info

Memory Info lets you quickly and easily review and manage your phone memory usage.

Memory Usage

Memory Usage lets you review your usage of your phone's memory.

1. In standby mode, press the **Menu** (left) soft key () , then press  (for **Settings**),  (for **Memory Info**), and  for **Memory Usage**. The Memory Usage screen appears in the display showing the following information:
 - **Total** memory usage
 - **Available** unused memory
 - **My Photo** memory usage
 - **My Ringtones** memory usage
 - **My Sounds** memory usage
 - **Applications** memory usage
2. Press the  key to return to the **Memory Info** menu.

Freeing Memory

Memory Info sub-menus let you list files in your Multimedia folders and lets you erase files as needed to free up phone memory for reuse.

1. In standby mode, press the **Menu** (left) soft key () , then press  (for **Settings**),  for **Memory Info**. The following sub-menus appear in the display:
 - **Memory Usage**
 - **My Images**
 - **My Ringtones**
 - **My Sounds**

2. Use the Up and Down navigator keys to highlight a Memory Info sub-menu, then press the **OK** key. A list of all files in the related folder appears in the display.

Files are listed by name, and each file entry shows the name and size of each file.

3. To erase files, do the following:

- Press the **Erase** (right) soft key () . An ERASE screen appears in the display.
- Use the **Up** and **Down** navigation keys to highlight each file to be deleted, then press the **OK** key to mark the file for erasure. (Press the **Mark All** (right) soft key () to mark all files for erasure.)
- Press the **Done** (left) soft key () . You are prompted to confirm erasure of the selected image(s).
- Press the **Yes** (left) soft key () to erase all marked images or press the **No** (right) soft key () to return to the ERASE screen.

4. Press the **CLR** key to return to the **My Images / Ringtones / Sounds** sub-menu, then press the **OK** key to return to the **Memory Info** sub-menu. Press the  key to return to standby mode.

Section 14: Phone Info

Topics Covered

- Phone Number
 - Icon Glossary
 - Version
-

This section explains how to identify the hardware and software versions of your phone and to identify the phone number assigned to your phone.

Phone Number

This option causes the Phone Number screen to appear in the display and show the ten-digit number assigned to your phone by your Wireless Provider.

1. In idle mode, press the **Menu** (left) soft key () , then press  (for **Phone Info**) and  for **Phone Number**. The phone number assigned by your Wireless Provider appears in the display.
2. Press  to return to the **Phone Info** menu.

Icon Glossary

This option causes the ICON GLOSSARY list to appear in the display and show the icons that can appear in the display and the names of the icons.

1. In idle mode, press the **Menu** (left) soft key () , then press  (for **Phone Info**) and  for **Icon Glossary**. A list of the icons that can appear on the top line of the display shows in the display.
2. Press  to return to the **Phone Info** menu.

Version

You can view both the software and hardware version of your phone using this feature. This feature is helpful if you need to contact Customer Service.

1. In standby mode, press the **Menu** (left) soft key () , then press  (for **Phone Info**) and  for **Version**.
Your phone's hardware and software information appears in the display.
2. Press  to return to the **Phone Info** menu.

Section 15: Health and Safety Information

Topics Covered

- Health and Safety Information
-

This section outlines the safety precautions associated with using your phone. These safety precautions should be followed to safely use your phone.

Health and Safety Information

Exposure to Radio Frequency (RF) Signals

Certification Information (SAR)

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the exposure limits for radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. government. These FCC exposure limits are derived from the recommendations of two expert organizations, the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure limit set by the FCC for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram ($1.6 W/kg$). The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all

tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each model phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC. Body-worn operations are restricted to Samsung-supplied, approved, or non-Samsung designated accessories that have no metal and must provide at least 1.5 cm separation between the device, including its antenna (whether extended or retracted) and the user's body. Non-compliance with the above restrictions may result in violation of FCC RF exposure guidelines.

The FCC has granted an Equipment Authorization for this mobile phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. The maximum SAR values for this model phone as reported to the FCC are:

- Head: 1.28 W/Kg.
- Body-worn: . 0.939 W/Kg.

SAR information on this and other model phones can be viewed on-line at www.fcc.gov/oet/fccid. To find information that pertains to a particular model phone,

this site uses the phone FCC ID number which is usually printed somewhere on the case of the phone. Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone. Additional product specific SAR information can also be obtained at www.fcc.gov/cgb/sar.

UL Certified Travel Adapter

The Travel Adapter for this phone has met UL 1310 safety requirements. Please adhere to the following safety instructions per UL guidelines.

**FAILURE TO FOLLOW THE INSTRUCTIONS
OUTLINED MAY LEAD TO SERIOUS PERSONAL
INJURY AND POSSIBLE PROPERTY DAMAGE**

**IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE
INSTRUCTIONS. DANGER - TO REDUCE THE RISK
OF FIRE OR ELECTRIC SHOCK, CAREFULLY
FOLLOW THESE INSTRUCTIONS.**

**FOR CONNECTION TO A SUPPLY NOT IN THE
U.S.A., USE AN ATTACHMENT PLUG ADAPTOR OF
THE PROPER CONFIGURATION FOR THE POWER
OUTLET.**

Consumer Information on Wireless Phones

The U.S. Food and Drug Administration (FDA) has published a series of Questions and Answers for consumers relating to radio frequency (RF) exposure from wireless phones. The FDA publication includes the following information:

What kinds of phones are the subject of this update?

The term wireless phone refers here to hand-held wireless phones with built-in antennas, often called “cell,” “mobile,” or “PCS” phones. These types of wireless phones can expose the user to measurable radio frequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called “cordless phones,” which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures well within the FCC's compliance limits.

Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low

levels of radio frequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radio frequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- "Support needed research into possible biological effects of RF of the type emitted by wireless phones;

- “Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- “Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- “National Institute for Occupational Safety and Health
- “Environmental Protection Agency
- “Federal Communications Commission
- “Occupational Safety and Health Administration
- “National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones.

FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones.

Base stations are thus not the primary subject of the safety questions discussed in this document.

What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radio frequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phones RF exposures. However, none of the studies can answer questions

about long-term exposures, since the average period of phone use in these studies was around three years.

What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years' follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radio frequency energy (RF).

FDA has been a leading participant in the World Health Organization international Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues.

FDA and Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?

If there is a risk from these products - and at this point we do not know that there is - it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

- “If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna.

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radio frequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

Do hands-free kits for wireless phones reduce risks from exposure to RF emissions?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that hands-free kits reduce risks. Hands-free kits can be used with wireless phones for convenience and comfort. These systems reduce the absorption of RF energy in the head because the phone, which is the source of the RF emissions, will not be placed against the head. On the other hand, if the phone is mounted against the waist or other part of the body during use, then that part of the body will absorb more RF energy. Wireless phones marketed in the U.S. are required to meet safety requirements regardless of whether they are used against the head or against the body. Either configuration should result in compliance with the safety limit.

Do wireless phone accessories that claim to shield the head from RF radiation work?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that accessories that claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone cases, while others involve nothing more than a metallic accessory attached to the phone. Studies have shown that these products generally do not work as advertised. Unlike “hand-free” kits, these so-called “shields” may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption. In

February 2002, the Federal Trade Commission (FTC) charged two companies that sold devices that claimed to protect wireless phone users from radiation with making false and unsubstantiated claims. According to FTC, these defendants lacked a reasonable basis to substantiate their claim.

What about wireless phone interference with medical equipment?

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. FDA has tested wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a compatible phone and a compatible hearing aid at the same time. This standard was approved by the IEEE in 2000.

FDA continues to monitor the use of wireless phones for possible interactions with other medical devices.

Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

Additional information on the safety of RF exposures from various sources can be obtained from the following organizations:

- FCC RF Safety Program:
<http://www.fcc.gov/oet/rfsafety/>
- Environmental Protection Agency (EPA):
<http://www.epa.gov/radiation/>
- Occupational Safety and Health Administration's (OSHA):
<http://www.osha.gov/SLTC/radiofrequencyradiation/index.html>
- National institute for Occupational Safety and Health (NIOSH):
<http://www.cdc.gov/niosh/topics/emf/>
- World health Organization (WHO):
<http://www.who.int/peh-emf/>
- International Commission on Non-Ionizing Radiation Protection:
<http://www.icnirp.de>
- Radiation Protection Division of Health Protection Agency (UK):
<http://www.hpa.org.uk/radiation/>
- US Food and Drug Administration:
<http://www.fda.gov/cellphones>

Road Safety

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features, such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road.
2. When available, use a hands-free device. If possible, add an additional layer of convenience and safety to your wireless phone with one of the many hands free accessories available today.
3. Position your wireless phone within easy reach. Be able to access your wireless phone without removing your eyes from the road. If you get an incoming call at an inconvenient time, let your voice mail answer it for you.
4. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.
5. Do not take notes or look up phone numbers while driving. Jotting down a “to do” list or flipping through your address book takes attention away from your primary responsibility, driving safely.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.

7. Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies. Remember, it is a free call on your wireless phone!
9. Use your wireless phone to help others in emergencies. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.
10. Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency number.

“The wireless industry reminds you to use your phone safely when driving.”

For more information, please call 1-888-901-SAFE, or visit our web-site www.wow-com.com

Provided by the Cellular Telecommunications & Internet Association.

Operating Environment

Remember to follow any special regulations in force in any area and always switch your phone off whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder if you are using an external antenna).

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

Pacemakers

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker.

These recommendations are consistent with the independent research and recommendations of Wireless Technology Research.

Persons with pacemakers:

- should always keep the phone more than 15 cm (6 inches) from their pacemaker when the phone is switched on.
- should not carry the phone in a breast pocket.
- should use the ear opposite the pacemaker to minimize potential interference.

If you have any reason to suspect that interference is taking place, switch your phone off immediately.

Hearing Aid Compatibility with Mobile Phones

When some mobile phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing

device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better / higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. T4 is the better / higher of the two ratings. (Note that not all hearing devices have telecoils in them.)

Hearing devices may also be measured for immunity to this type of interference. Your hearing device manufacturer or hearing health professional may help you find results for your hearing device. The more immune your hearing aid is, the less likely you are to experience interference noise from mobile phones.

Other Medical Devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch your phone off in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Switch your phone off in any facility where posted notices require you to do so.

Potentially Explosive Environments

Switch your phone off when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch the phone off while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust or metal

powders, and any other area where you would normally be advised to turn off your vehicle engine.

Emergency Calls

This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications (medical emergencies, for example).

Remember, to make or receive any calls the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

1. If the phone is not on, switch it on.
2. Key in the emergency number for your present location (for example, 911 or other official emergency number). Emergency numbers vary by location.
3. Press the  key.

If certain features are in use (call barring, for example), you may first need to deactivate those features before you can make an emergency call. Consult this document and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your phone may be the only means of

communication at the scene of an accident; do not cut off the call until given permission to do so.

Restricting Children's access to your Phone

Your phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone or make calls that increase your phone bill.

FCC Notice and Cautions

FCC Notice

The phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the phone if such interference cannot be eliminated.

Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Batterymarch Park, Quincy, MA 02269, Attn: Publication Sales Division.

Cautions

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment, and void your authority to operate this equipment. Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the phone

warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

Other Important Safety Information

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.
- Switch your phone off before boarding an aircraft. The use of wireless phone in aircraft is illegal and may be dangerous to the aircraft's operation.
- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Product Performance

Getting the Most Out of Your Signal Reception

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal.

If you're inside a building, being near a window may give you better reception.

Understanding the Power Save Feature

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. If your phone is active, it periodically rechecks service availability or you can check it yourself by pressing any key.

Anytime the Power Save feature is activated, a message displays on the screen. When a signal is found, your phone returns to standby mode.

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

Maintaining Your Phone's Peak Performance

For the best care of your phone, only authorized personnel should service your phone and accessories. Faulty service may void the warranty.

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- If your phone is equipped with an external antenna, hold the phone with the antenna raised, fully-extended and over your shoulder.
- Do not hold, bend or twist the phone's antenna.
- Do not use the phone if the antenna is damaged.
- If your phone is equipped with an internal antenna, obstructing the internal antenna could inhibit performance.
- Speak directly into the phone's receiver.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery.

Availability of Various Features/Ring Tones

Many services and features are network dependent and may require additional subscription and/or usage charges. Not all features are available for purchase or use in all areas. Downloadable Ring Tones may be available at an additional cost. Other conditions and restrictions may apply. See your service provider for additional information.

Battery Standby and Talk Time

Standby and talk times will vary depending on phone usage patterns and conditions. Battery power consumption depends on factors such as network configuration, signal strength, operating temperature, features selected, frequency of calls, and voice, data, and other application usage patterns.

Battery Precautions

- Avoid dropping the cell phone. Dropping it, especially on a hard surface, can potentially cause damage to the phone and battery. If you suspect damage to the phone or battery, take it to a service center for inspection.
- Never use any charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power; talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- Follow battery usage, storage and charging guidelines found in the user's guide.
- Battery charging time depends on the remaining battery charge and the type of battery and charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.
- Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers. When a charger is not in use, disconnect it from the power source. Do not leave

the battery connected to a charger for more than a week, since overcharging may shorten its life.

- Do not use incompatible cell phone batteries and chargers. Some Web sites and second-hand dealers, not associated with reputable manufacturers and carriers, might be selling incompatible or even counterfeit batteries and chargers. Consumers should purchase manufacturer or carrier recommended products and accessories. If unsure about whether a replacement battery or charger is compatible, contact the manufacturer of the battery or charger.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and lifetime of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0 °C (32 °F).
- Do not place the phone in areas that may get very hot, such as on or near a cooking surface, cooking appliance, iron, or radiator.
- Do not get your phone or battery wet. Even though they will dry and appear to operate normally, the circuitry could slowly corrode and pose a safety hazard.
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and - terminals of the battery (metal strips on the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- Do not permit a battery out of the phone to come in contact with metal objects, such as coins, keys or jewelry.
- Do not crush, puncture or put a high degree of pressure on the battery as this can cause an internal short-circuit, resulting in overheating.

- Dispose of used batteries in accordance with local regulations. In some areas, the disposal of batteries in household or business trash may be prohibited. For safe disposal options for Li-Ion batteries, contact your nearest Samsung authorized service center. Always recycle. Do not dispose of batteries in a fire.

Care and Maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits.
- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.

- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, a stove or a radiator. The phone may explode when overheated.
- If your phone has an external antenna, use only the supplied or an approved replacement antenna. Unauthorized antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

[12 / 01 / 05]

Section 16: Warranty Information

Topics Covered

- Standard Limited Warranty
-

Standard Limited Warranty

What is Covered and For How Long? SAMSUNG

TELECOMMUNICATIONS AMERICA, L.P. (“SAMSUNG”) warrants to the original purchaser (“Purchaser”) that SAMSUNG's Phones and accessories (“Products”) are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase and continuing for the following specified period of time after that date:

Phone	1 Year
Batteries	1 Year
Leather Case/ Pouch	90 Days
Holster	90 Days
Other Phone Accessories	1 Year

What is Not Covered? This Limited Warranty is conditioned upon proper use of Product by Purchaser. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abuse, neglect, unusual physical, electrical or electromechanical stress, or modification of any part of Product, including antenna, or cosmetic damage; (b) equipment that has the serial number removed or made illegible; (c) any plastic surfaces or other externally exposed parts that are scratched or damaged due to normal use; (d) malfunctions resulting from the use of Product in conjunction with accessories, products, or ancillary / peripheral equipment not furnished or approved by

SAMSUNG; (e) defects or damage from improper testing, operation, maintenance, installation, or adjustment; (f) installation, maintenance, and service of Product, or (g) Product used or purchased outside the United States or Canada. This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, or (iii) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

What are SAMSUNG's Obligations? During the applicable warranty period, SAMSUNG will repair or replace, at SAMSUNG's sole option, without charge to Purchaser, any defective component part of Product. To obtain service under this Limited Warranty, Purchaser must return Product to an authorized phone service facility in an adequate container for shipping, accompanied by Purchaser's sales receipt or comparable substitute proof of sale showing the date of purchase, the serial number of Product and the sellers' name and address. To obtain assistance on where to deliver the Product, call Samsung Customer Care at 1-888-987-4357. Upon receipt, SAMSUNG will promptly repair or replace the defective Product. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any Product or replace Product with a rebuilt, reconditioned or new Product. Repaired / replaced leather cases, pouches and holsters

will be warranted for a period of ninety (90) days. All other repaired / replaced Product will be warranted for a period equal to the remainder of the original Limited Warranty on the original Product or for 90 days, whichever is longer. All replaced parts, components, boards and equipment shall become the property of SAMSUNG. If SAMSUNG determines that any Product is not covered by this Limited Warranty, Purchaser must pay all parts, shipping, and labor charges for the repair or return of such Product.

WHAT ARE THE LIMITS ON SAMSUNG'S WARRANTY/LIABILITY?

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED HEREIN, PURCHASER TAKES THE PRODUCT "AS IS," AND SAMSUNG MAKES NO WARRANTY OR REPRESENTATION AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO:

- "THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE;
- "WARRANTIES OF TITLE OR NON-INFRINGEMENT;
- "DESIGN, CONDITION, QUALITY, OR PERFORMANCE OF THE PRODUCT;
- "THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR
- "COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO.

NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS WARRANTY OF ANY KIND

WHATSOEVER WITH RESPECT TO THE PRODUCT. ALL IMPLIED WARRANTIES AND CONDITIONS THAT MAY ARISE BY OPERATION OF LAW, INCLUDING IF APPLICABLE THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO THE SAME DURATION OF TIME AS THE EXPRESS WRITTEN WARRANTY STATED HEREIN. SOME STATES / PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE, USE, OR MISUSE OF, OR INABILITY TO USE THE PRODUCT OR ARISING DIRECTLY OR INDIRECTLY FROM THE USE OR LOSS OF USE OF THE PRODUCT OR FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL, CONSEQUENTIAL OR SIMILAR DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS, OR FOR DAMAGES ARISING FROM ANY TORT (INCLUDING NEGLIGENCE OR GROSS NEGLIGENCE) OR FAULT COMMITTED BY SAMSUNG, ITS AGENTS OR EMPLOYEES, OR FOR ANY BREACH OF CONTRACT OR FOR ANY CLAIM BROUGHT AGAINST PURCHASER BY ANY OTHER PARTY. SOME STATES / PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY

NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE / PROVINCE TO PROVINCE. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND STATES PURCHASER'S EXCLUSIVE REMEDY. IF ANY PORTION OF THIS LIMITED WARRANTY IS HELD ILLEGAL OR UNENFORCEABLE BY REASON OF ANY LAW, SUCH PARTIAL ILLEGALITY OR UNENFORCEABILITY SHALL NOT AFFECT THE ENFORCEABILITY FOR THE REMAINDER OF THIS LIMITED WARRANTY WHICH PURCHASER ACKNOWLEDGES IS AND WILL ALWAYS BE CONSTRUED TO BE LIMITED BY ITS TERMS OR AS LIMITED AS THE LAW PERMITS. THE PARTIES UNDERSTAND THAT THE PURCHASER MAY USE THIRD-PARTY SOFTWARE OR EQUIPMENT IN CONJUNCTION WITH THE PRODUCT. SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRDPARTY SOFTWARE OR EQUIPMENT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR OTHERWISE, INCLUDING THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT. THE QUALITY, CAPABILITIES,

OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT LIE SOLELY WITH THE PURCHASER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT, AS THE CASE MAY BE.

This Limited Warranty allocates risk of Product failure between Purchaser and SAMSUNG, and SAMSUNG's Product pricing reflects this allocation of risk and the limitations of liability contained in this Limited Warranty. The agents, employees, distributors, and dealers of SAMSUNG are not authorized to make modifications to this Limited Warranty, or make additional warranties binding on SAMSUNG. Accordingly, additional statements such as dealer advertising or presentation, whether oral or written, do not constitute warranties by SAMSUNG and should not be relied upon.

Samsung Telecommunications America, L.P.
1000 Klein Street
Plano, Texas 75074

Phone: 1-800-SAMSUNG

Phone: 1-888-987-HELP (4357)

©2006 Samsung Telecommunications America, L.P. All rights reserved.

No reproduction in whole or in part allowed without prior written approval. Specifications and availability subject to change without notice.

Printed in Korea

Index

A

Adjust

Ringer setting 35

Access Shop 117

Access Web 135

How Access Web Keys

Work 138

Launching Access

Web 136

Using Access Web 137

Using Links 137

B

Backup to last menu 60

Battery 11

Charging 13

Low battery indicator 14

Removal 12

Travel adapter 13

C

Call Answer mode 32

Call Functions

Adjusting the Call

Volume 45

Answering a Call 44

Call Log 46

Making a Call — Number

Entry Dialing 38

Making a Call — Speed

Dialing 40, 42

Call Options

Auto Answer 185

Auto Retry 186

Call Answer 184

Data 188

TTY 186

Call Settings 184

Camera 121

Brightness 132

Color Tones 131

Multi Shot 128

Options 125

Photo Gallery 133

Save Pictures 124

Screen 123

Screen Icons 123

Taking Pictures 122

Zoom 132

Camera mode 35

Camera Options

Resolution 126

Camera Screen 123

Clear key 26

Clock Set 195

Contacts List 80

Open 80

Creating and Sending New

Messages 98

Picture (Pic)

Message 100

Text Message 98

D

Display screen icons 28

Display Settings 176

- Backlight 180
- Banner 180
- Dial Screen 179
- Menu Style 177
- Theme Color 179

E

Emergency Calls 38

End key 27

Entering Text 73

- Alpha (Abc) Mode 75
- Entering Numbers 77
- Entering Symbols 78
- Entering Upper and Lower Case Letters 77
- Text Entry Modes 74

Erase memos 64

Exit Access Web 137

F

Fast fact, description 10

G

Gallery, photo 133

Getting Started 9

- Activating Your Phone 11
- Understanding this User Manual 10
- Voicemail 15

H

Health and Safety Information 203

I

Icon Glossary 202

Input mode 33

International Calls 39

In-use menu 61

L

Language 189

Left soft key 25

Lock mode 33

M

Memo Pad

- Add a Memo 164
- Review, edit, and erase memos 164

Menu Navigation 59

- Menu Outline 65

Menu shortcuts 60

Menu, in-use options 61

Message Folders 105

- Drafts folder 109
- Inbox 105
- Messages and Lock Mode 107
- Outbox 108
- Voicemail 112

Message Send Options 102

Message Setting 113

Messaging 97

- Erasing Messages 112
- Message Settings 113

Mode

- Call answer 32
- Camera 35
- Input 33

- Lock 33
- Silent 34
- Standby 33
- Talk 34
- Vibrate 35
- Multi shot** 128
- Multimedia** 139
- N**
- Navigation key** 27
- Navigation key shortcuts** 60
- Notes and tips** 10
- Notes, description** 10
- Number Entry Dialing** 38
- O**
- OK key** 26
- P**
- Personal Organizer**
 - Alarm Clock 165
 - Calculator 168
 - Calendar 161
 - Memo Pad 163
 - Voice Memo 62
 - World Time 167
- Phone Info** 201
 - Icon Glossary 202
 - Phone Number 202
 - Version 202
- Phone Modes** 53
- Phone Number** 202
- Photo gallery** 133

- Photos**
 - Sending 134
- Picture (Pic) message** 100
- Q**
- Quality, pictures** 129
- R**
- Receiving New Messages** 104
 - While in a Call 104
- Record memos** 62
- Resolution, notes about** 126, 132
- Return to last menu** 60
- Right soft key** 26
- Roaming** 58
- S**
- Save pictures** 124
- Security Settings** 190
 - Change Lock 191
 - Emergency # 191
 - Erase Memory 193
 - Lock Phone 190
 - Resetting Your P hone 193
 - Restriction 184
- Send key** 27
- Send Pic messages** 134
- Settings** 175
 - Call 184
 - Display 176
 - Security 190
 - Sound 181

Setup

- Location 176
- Voicemail 105

Shortcut to menus 60

Shutter sound 130

Silent mode

- Entering 34
- Exiting 34

Sound Settings 181

- Alerts 183
- Ringer Type 182
- Volume/Vibrate 181

Speakerphone Key 28

Speed Dialing 40

- One-Touch Dialing 41
- Three Touch Dialing 41
- Two-Touch Dialing 41

Standard Limited

Warranty 234

Standby mode 33

T

Take pictures

- With folder open 122

Taking pictures 122

Talk mode 34

Text message 98

Tip, description 10

Tools 149

- Tools Menu 150

TTY Mode 186

U

Understanding Your

Contacts 79

- Adding a New Contact Entry 81
- Deleting a Contact Entry 95
- Editing an Existing Contact Entry 89
- Finding a Contact Entry 84
- Memory 96
- Pauses 89

Understanding Your

Phone 17

- Closed View of Your Phone 19
- Command Keys 25
- Display Screen 28
- Features of Your Phone 18
- Open View of Your Phone 21

V

Version 202

Vibrate mode 35

Voice Dialing 42

Voice Launch 157

Voice mail

- Listening to 15

Voice Memo 62

- Erase all memos 64
- Record memos 62

Review memos 63

Voice Service 151

Voicemail 105

Checking 105

Setup 105

VoiceSignal

About VoiceSignal 158

Voice Memos 62

W

Warranty Information 233

