

SGH-t709

P O R T A B L E T r i - B a n d T E L E P H O N E

User Guide

**Please read this manual before operating your
phone, and keep it for future reference.**



Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating there to (the "Phone System"), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

Samsung Telecommunications America (STA), Inc.

Headquarters:

1301 E. Lookout Drive
Richardson, TX 75082

Customer Care Center:

1000 Klein St.
Plano, TX 75074

Toll Free Tel: 1.888.987.HELP (4357)

Internet Address: <http://www.samsungusa.com>

©2006 Samsung Telecommunications America, Inc. is a registered trademark of Samsung Electronics America, Inc. and its related entities.

Printed in Korea.

GH68-08160A

Openwave® is a registered Trademark of Openwave, Inc.

RSA® is a registered Trademark RSA Security, Inc.

Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

Table of Contents

Section 1: Getting Started	5
Activating Your Phone	6
Switching the Phone On or Off	10
Setting Up Your Voice Mail	11
Section 2: Understanding Your Phone	13
Features of Your Phone	14
View of Your Phone	14
Keys	15
Display Layout	17
Get More Help	19
Section 3: Call Functions	21
Making a Call	22
Adjusting the Call Volume	24
Answering a Call	24
Call Records	25
Silent mode	29
Selecting Functions and Options	29
Section 4: Menu Navigation	37
Menu Navigation	38
Menu Outline	39
Section 5: Entering Text	45
Changing the Text Input Mode	46
Using ABC Mode	47
Using T9 Mode	49
Using Number Mode	51
Using Symbol Mode	51
Section 6: Understanding Your Phonebook	53
Storing a Number in the Phone's Memory	54
Storing a Number in the SIM Card	55

Finding a Phonebook Entry	57
Speed Dialing	59
Editing a Caller Group	60
Copying all SIM Phonebook Entries	62
Deleting all of the Phonebook Entries	62
My Name Card	63
Finding My Own Phone Number	64
FDN List	65
Management	65
Section 7: Messages	69
Voice Notes	70
Text Messages	72
Picture Messages	75
Inbox	78
Sentbox	85
Outbox	86
Drafts	87
Templates	88
Voice Mail	88
Delete All	89
Settings	90
Broadcast Messages (SIM Dependent)	91
Instant Messaging	91
Memory Status	92
Section 8: Changing Your Settings	93
Time & Date Settings	94
Phone Settings	95
Display Settings	97
Sound Settings	100
Network Services Settings	103
Security Settings	106
Memory Status	109

Reset Settings	110
Section 9: Fun & Apps	111
My Files	112
Audio Player	118
Voice Recognition	119
Games	126
Image Editor	126
Organizer	128
Section 10: Camera and Camcorder	139
Using the Camera and Camcorder	140
Take and Send	140
Record Video	144
My Photos	147
My Videos	149
My Album	151
My Journal	151
Section 11: t-zones	153
t-zones	154
Section 12: Wi-Fi	159
Introducing Your T-Mobile Wi-Fi Capable Phone	160
Connecting to Wi-Fi for the First Time	162
Using Wi-Fi	164
Connecting to Wi-Fi Networks	165
Troubleshooting	180
Section 13: Health and Safety Information ...	199
Health and Safety Information	200
UL Certified Travel Adapter	202
Consumer Information on Wireless Phones	203
Road Safety	212
Operating Environment	215
Using Your Phone Near Other Electronic Devices	215

Potentially Explosive Environments	217
Emergency Calls	217
FCC Notice and Cautions	218
Other Important Safety Information	219
Product Performance	220
Availability of Various Features/Ring Tones	221
Battery Standby and Talk Time	222
Battery Precautions	222
Care and Maintenance	224
Section 14: Warranty Information	227
Standard Limited Warranty	228
Index	235

Section 1: Getting Started

Topics Covered

- Activating Your Phone
 - Switching the Phone On or Off
 - Setting Up Your Voicemail
-

This section describes how to start using your phone by activating your service and setting up your voice mail.

Activating Your Phone

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available, and many others.

Installing the SIM Card

Important! The plug-in SIM card and its contacts can be easily damaged by scratching or bending, so be careful when handling, inserting, or removing the card. Keep all SIM cards out of reach of small children.


If necessary, switch off the phone by holding down the  key until the power-off image displays.

To install the SIM card, do the following:


1. Push in the battery lock toward the top of the phone and hold it in that position.
2. Lift the battery away, as shown.




3. Slide the SIM card into the SIM card socket so that the card locks into place. Make sure the gold contacts of the card face into the phone.

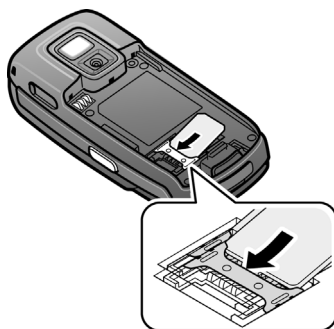

Note: When you need to remove the SIM card, slide it as shown, and take it out of the socket.

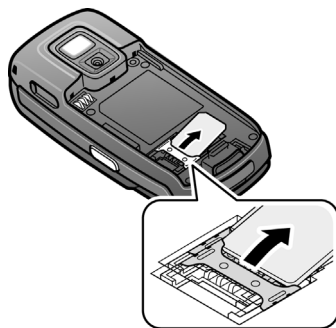

4. Place the battery so that the tabs on the end align with the slots at the bottom of the phone (1).

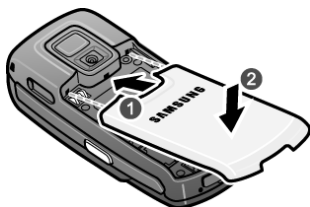

5. Press the battery down until it clicks into place (2). Make sure that the battery is properly installed before switching on the phone.

Charging a Battery

Your phone is powered by a rechargeable Li-ion battery. A travel adapter comes with your phone for charging the battery. Use only approved batteries and chargers. Ask your local Samsung dealer for further details.

You can use the phone while the battery is charging, but this causes the phone to charge more slowly.

Note: You must fully charge the battery before using your phone for the first time. A discharged battery recharges fully in approximately 200 minutes.

1. With the battery in position on the phone, plug the connector of the travel adapter into the jack at the bottom of the phone.



2. Plug the adapter into a standard AC wall outlet.

Note: For connection to an electrical supply not located in the U.S., you **must** use an adaptor of the proper configuration for the power outlet. Use of the wrong adaptor could damage your phone and void your warranty.

3. When charging is finished, unplug the adapter from the power outlet and disconnect it from the phone by pressing the buttons on both sides of the connector (1) and pulling the connector out (2).



Note: You must unplug the adapter before you remove the battery from the phone during charging; otherwise, the phone could be damaged.

Low Battery Indicator

When the battery is weak and only a few minutes of talk time remain, a warning tone sounds and the "Battery low" message repeats at regular intervals on the display. When this happens, your phone turns off the backlight to conserve the remaining battery power.

When the battery level becomes too low, the phone automatically turns off.

Switching the Phone On or Off

1. Slide the phone open.
2. Press and hold the  key until the phone switches on.
3. If the phone asks for a PIN, enter the PIN and press the **OK** soft key or the  key. For further details, see "PIN check" on page 106.

The phone searches for your network and after finding it, the Idle screen appears. Now, you can make or receive calls.

Note: The display language is preset to English at the factory. To change the language, use the Language menu. For further details, see "Language" on page 95.

4. When you wish to switch off the phone, press and hold the  key until the power-off image displays.

Setting Up Your Voice Mail

For new users, follow the instructions below to set up voicemail:

1. Open your phone to access the keypad.
2. In Idle mode, press and hold the  key on the keypad.
You may be prompted to enter a password.
3. Follow the tutorial to create a password, a greeting, and your name.

Note: These steps may be different depending on your network.

Accessing Your Voice Mail

You can access your Voice Mail by pressing the  key on the keypad or by going to the menu. To access Voice Mail using the menu:

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Highlight **Messages** and press the **Select** soft key or the  key.
3. Highlight **Voice mail** and press the **Select** soft key or the  key.
4. Highlight **Call voice mail** and press the **Select** soft key or the  key. Your phone dials the specified voice mail number.
5. When connected, follow the voice prompts from the voice mail center.

Changing the Voice Mail Number

Your SIM card gives you the default service number of the voice mail center. However, should you need to change the number, use the following procedures:

1. In Idle mode, press the **Menu** soft key to access the Menu mode.
2. Highlight **Messages** and press the **Select** soft key or the  key.
3. Highlight **Voice mail** and press the **Select** soft key or the  key.
4. Highlight **Voice server number** and press the **Select** soft key or the  key. Highlight **Voice mail** and press the **Options** soft key.
5. Highlight **Edit** and press the **Select** soft key or the  key. Or, you may highlight **Delete** to delete the number.
6. Edit the name if desired, and then press the **Down** Navigation key to edit the number.
7. Press the **Options** soft key, highlight the **Save** option, and press the **Select** soft key or the  key.
8. Press the  key to return to Idle mode.

Section 2: Understanding Your Phone

Topics Covered

- Features of Your Phone
 - View of Your Phone
 - Keys
 - Display Layout
 - Get More Help
-

This section outlines some key features of your phone. It also describes the screen and the icons that are displayed when the phone is in use.

Features of Your Phone

Your phone is lightweight, easy-to-use and offers many significant features. The following list outlines a few of the features included in your phone.

- Wi-Fi® (Wireless Fidelity) capability
- Voice Commands
- Instant Messaging capability
- Multimedia capability
- Fun & Apps feature provides My files, audio player, camera, voice recognition, games, image editor, alarms, calendar, calculator, world time, unit conversion, timer, and stopwatch.

View of Your Phone

The following illustrations show the main elements of your phone:





Keys


The following list correlates to the illustrations.

1. During a call, adjusts the earpiece volume.
In Idle mode with the phone open, adjusts the ring volume. With the phone closed, turns on the display when held down.
2. Performs the functions indicated by the screen text on the bottom line of the display.
3. Makes or answers a call.
In Idle mode, displays the Call records menu.
4. In Idle mode, accesses voice mail when held down.
5. Enters special characters. Performs various functions.
6. The microphone used during phone calls and voice memo recordings.
7. Enters numbers, letters, and some special characters.
8. The Cancel key deletes characters from the display.
In Menu mode, it returns you to the previous menu level.

9. Ends a call. Also switches the phone on and off when held down.
In Menu mode, cancels your input and returns the phone to Idle mode.
10. In Idle mode, launches the WAP (Wireless Application Protocol) browser.
In Menu mode, selects the highlighted menu options.
11. In Menu mode, scrolls through the menus and Phonebook.
In Idle mode:
 - **Down key:** allows you to access your Contact list directly.
 - **Up key:** allows you to access the Camera or Camcorder feature directly.
 - **Left key:** allows you to access Text messaging directly.
 - **Right key:** allows you to access Voice Recognition directly.When entering text, moves the cursor to the left or right, depending on which side you press.
12. Display area where text and graphics are displayed.
13. Used to listen to audio from your phone.
14. The headset jack is used for the hands-free headset.
15. The camera key is used to launch the camera (with a press and hold) and to take a photo (with a short press).
16. The mirror allows you to adjust the camera when taking a picture of yourself.
17. The built-in digital camera/camcorder has video capture capabilities.

Display Layout

The display has 4 areas:

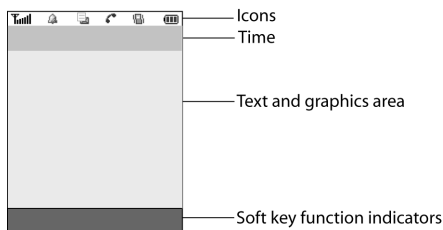

Icons

-  Shows the received signal strength. The greater the number of bars, the stronger the signal.
-  Appears when a new text message or voice mail has been received.
-  Appears when a new multimedia message has been received.
-  Appears when you set an alarm to ring at a specified time. For details, see page "Alarm" on page 128.
-  Appears when you are out of your service area.
-  Appears when a call is in progress.
-  Appears when the Call Forwarding feature is active. For details, see page "Call forwarding" on page 103.
-  Appears when Alert type is vibration or you set the phone to vibrate when you receive a call.

-  Appears when Silent Mode is active.
-  Appears when Mute is active.
-  Shows the level of your battery. The more bars you see, the more power you have remaining.

Backlight

A backlight illuminates the display and the keypad. When you press any key or slide the phone open, the backlight comes on. It goes off when no keys are pressed within a given period of time, depending on the setting in the **Backlight** menu. The display turns off after one minute to conserve battery power.

The **On** setting is how long the keypad backlight is on. You can select 15 seconds, 30 seconds, 1 minute, 3 minutes, or 10 minutes.

The **Dim** option is how much longer after the keypad backlight goes off that the display remains lit. You can select Off, 5 seconds, 15 seconds, 30 seconds, 1 minute, or 3 minutes.

To specify your Backlight settings:

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Settings** icon. Press the **Select** soft key or the  key to enter the menu.
3. Highlight the **Display settings** option and press the **Select** soft key or the  key.
4. Highlight the **Backlight** option and press the **Select** soft key or the  key.

5. Highlight the **On** option. Use the **Left** or **Right** Navigation key to select the time that the backlight is on. You may choose between 15 seconds, 30 seconds, 1 minute, 3 minutes, or 10 minutes.
6. Press the **Down** key to take you to the **Dim** option. Use the **Left** or **Right** Navigation key to select the time that Dimming mode is on. You may choose between Off, 5 seconds, 15 seconds, 30 seconds, 1 minute, or 3 minutes.
7. Press the **Save** soft key to save your settings.

Get More Help

Get More Help is designed to show you some of the features of your phone using t-zones. You can search help files on the fly while traveling, at home or anywhere, using help.wap.t-mobile.com.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Get More Help** icon. Press the **Select** soft key or the  key.
3. You will enter t-zones and the **Get More Help** menu will be displayed.

The following options are available:

- **Browse Help Topics:** this option gives you a list of different topics that you can select.
- **Enter a Search:** this option allows you to enter a keyword to search on.

- **About:** this option offers general information about Get More Help including concept and site design, copyright information, and contact e-mail address.

To access the browser options menu:

1. Press the **Menu** soft key to see the Browser Options.
2. Make a selection and press the **Select** soft key or the  key.

Note: The menus may vary, depending on your version of t-zones.

For more information on browser options, see "Selecting and Using Menu Options" on page 155.

Section 3: Call Functions

Topics Covered

- Making a Call
 - Adjusting the Call Volume
 - Answering a Call
 - Call Records
 - Silent Mode
 - Selecting Functions and Options
-

This section describes how to make or answer a call. It also includes information on the features and functionality associated with making or answering a call.

Making a Call

When the idle screen displays, enter the number you wish to dial and press the  key.

Note: When you activate the **Auto redial** option in the Extra settings menu, the phone will automatically redial up to 10 times when the person does not answer the call or is already on the phone, provided your call is not sent to voice mail. See page "Extra settings" on page 96 for further details.

Making an International Call

1. Press and hold the  key. The + character appears.
2. Enter the country code, area code, and phone number and press the  key.

Correcting the Number

1. To clear the last digit displayed, press the  key.
2. To clear any other digit in the number, press the **Left** or **Right** key until the cursor is immediately to the right of the digit to be cleared. Press the  key. You can also enter a missing digit.
3. To clear the whole display, press and hold the  key.

Ending a Call

When you want to finish your call, briefly press the  key.

Redialing the Last Number

The phone stores the numbers of the calls you've dialed, received, or missed if the caller is identified.

To recall any of these numbers:

1. If you have typed characters on the display, press the .

key to return to Idle mode.

2. Press the  key to display a list of the most recent numbers used in the order you dialed or received them.
3. Use the **Up** and **Down** keys to scroll through the numbers and highlight the number you want.
4. To dial the number, press the  key.

Before you dial the number, you may press the **Options** soft key for the following options:

- **Details:** displays details of the number including name, number, and dates and times of calls.
- **Call back:** places a call back to the number.
- **Send message:** allows you to send a text message, picture message, or voice note to the number.
- **Store to phonebook:** stores the number in your phonebook.
- **Delete:** allows you to delete the number or delete all call records.

Making a Call from the Phonebook

You can store phone numbers that you use regularly on the SIM card or in the phone's memory. These entries are collectively called the Phonebook.

Once you have stored a number in the Phonebook, you can dial it by pressing a few keys. You can also assign your most frequently-used numbers to number keys using the Speed Dial feature.

For further details about the Phonebook feature, see "Section 6: Understanding Your Phonebook" on page 53.

Adjusting the Call Volume

During a call, if you want to adjust the earpiece volume, use the Volume keys on the left side of the phone.

Press the ▲ key to increase the volume level and the ▼ key to decrease the level.



In Idle mode, you can also adjust the ring volume using these keys while the phone is open.

Answering a Call

When somebody calls you, the phone rings and displays the incoming call image.

The caller's phone number, or name if stored in Phonebook, displays.

1. If necessary, slide the phone open. Press the  key or the **Accept** soft key to answer the incoming call.

If the **Up** option in the **Slide settings** menu is set to **Accept call**, you can answer the call by simply sliding the phone open.

If the **Anykey answer** option in the **Extra Settings** menu is activated, you can press any key to answer a call except for the  key and the **Reject** soft key.

Note: To reject an incoming call, press the **Reject** soft key or  key.

2. End the call by closing the phone or pressing the  key.

Note: You can answer a call while using the Phonebook or menu features. After ending the call, the phone returns to the function screen you were using.

Call Records

All incoming, outgoing and missed calls are listed in the Call Records. You can also view Call time records.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Call records** icon. Press the **Select** soft key or the  key to enter the menu.

Note: You can also access the call records of incoming, outgoing, and missed calls by pressing the  key in Idle mode.

The following Call Record options are available:

All calls

This menu lets you view the 90 most recent calls you received, sent, and missed.

The number or name, if already stored in your Phonebook, displays with the number of occurrences of each number.

Note: at any time while you are in Call Records, you may use the **Left** or **Right** Navigation key to scroll between **All calls**, **Missed calls**, **Incoming calls**, and **Outgoing calls**.

Missed calls

This menu lets you view the 30 most recent calls you received, but did not answer.

The number and name, if already stored in your Phonebook, displays with the number of occurrences of each number.

Viewing Missed Calls

When you are unable to answer a call for any reason, you can find out who is calling you, if this service is available, so that you can call the person back.

The number of calls you have missed displays on the idle screen immediately after a call is missed.

To view a missed call immediately:

1. If the phone is closed, slide the phone open.
2. Press the **View** soft key.

The number corresponding to the most recent missed call displays, if available.

3. To scroll through the missed calls, press the **Up** or **Down** Navigation key.
4. To call the number displayed, press the  key.
5. Press the **Options** soft key for the following options:
 - **Details:** displays details of the number including name, number, and dates and times of calls.
 - **Call back:** places a call back to the number.
 - **Send message:** allows you to send a text message, picture message, or voice note to the number.
 - **Store to phonebook:** stores the number in your phonebook.
 - **Delete:** allows you to delete the number or delete all call records.

You can press the  key at any time to exit the Missed Call feature.

Incoming calls

This menu lets you view the 30 most recent calls you received.

The number and name, if already stored in your Phonebook, displays with the number of occurrences of each number.

Outgoing calls

This menu lets you view the 30 most recent calls you dialed.

The number and name, if already stored in your Phonebook, displays with the number of occurrences of each number.

Delete all

This menu allows you to delete all of the records in each call record separately, or you can delete all of your call records at one time.

1. Highlight the type of calls you want to delete and press the **Select** soft key or the **OK** key to make a check mark.
2. Press the **Delete** soft key to delete the calls.
3. When a confirmation message displays, press the **Yes** soft key or **OK** key to confirm.

Call time

This menu lets you view the time log for calls made and received.

Note: The actual time invoiced by your service provider may differ from times displayed due to network features and service plan.

The following time logs are available:

- **Last call time:** shows the length of your last call.
- **Total incoming:** shows the total length of all calls you have received since the timer was last reset.
- **Total outgoing:** shows the total length of all calls you have made since the timer was last reset.
- **Life time:** shows the total length of time for incoming and outgoing calls. The length of call time must be at least 1 minute to increment this field. This information cannot be cleared.
- **Reset timers:** allows you to reset the call timers. At the **Are you sure?** prompt, press the **Yes** soft key. Enter the phone password and then press the **OK** soft key or **OK** key.

Note: The password is preset to “00000000” at the factory. To change this password, see “Change password” on page 108.

Silent mode

Silent mode is convenient when you wish to stop the phone from making noise, in a theater for example.

In Idle mode, press and hold the  key until the “Silent Mode On” message and the Silent mode icon () display.

In Silent mode, instead of sounds, your phone will vibrate.


To exit and reactivate the previous sound settings, press and hold the  key again until the “Exit Silent Mode” message appears. The Silent mode icon () no longer displays.

Selecting Functions and Options

Your phone offers a set of functions that allow you to customize it. These functions are arranged in menus and sub-menus, accessed using the two soft keys. Each menu and sub-menu allows you to view and alter the settings of a particular function.

Soft Keys

The roles of the soft keys vary depending on the function you are currently using. The labels on the bottom line of the display just above each key indicate their current role.

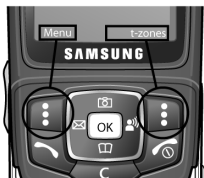

Press the left soft key for **Menu** mode.

Press the right soft key to access the **t-zones** menu.

Selecting Options

To view the various functions and options available and to select the one you want:

- Press the appropriate soft key.
- To select the function displayed or the option highlighted, press the **Select** soft key or the **OK** key.
- To view the next function or highlight the next option on a list, press the **Down** Navigation key.
- To move back to the previous function or option on a list, press the **Up** key.
- To move back up one level in the menu structure, press the **Back** soft key.
- To exit the menu structure without changing the settings, press the **End** key.

When you access a list of options, your phone highlights the currently active option. If, however, there are only two options, such as **On/Off** or **Enable/Disable**, your phone highlights the option that is not currently active, so that you can select it directly.

Options During a Call

Your phone provides a number of control functions that you can use during a call.

Putting a Call on Hold

You can place the current call on hold whenever you want. You can make another call while you have a call in progress if your network supports this service.

To place a call on hold, simply press the **Options** soft key, highlight the **Hold** option, then press the **Select** soft key or the **OK** key. You can reactivate the call whenever you want, by pressing the **Resume** soft key.

To make a call while you have a call in progress:

1. Enter the phone number that you wish to dial or look it up in the Phonebook.
2. Press the  key to dial the second call.

The first call is automatically put on hold.

Or:

1. Press the **Options** soft key and select **Hold**.
2. Make the second call in the normal way.

When you have an active call and a call on hold, you may switch between the two calls, changing the one on hold to active and placing the other on hold.

To switch between the two calls, simply press the **Options** soft key and select **Swap**.

The current call is placed on hold and the call on hold is reactivated so that you can continue conversing with that person.

When you want to finish, end each call normally by pressing the  key.

Switching off the Microphone (Mute)

You can temporarily switch your phone's microphone off, so that the other person cannot hear you.

Example: You wish to say something to a person in the room but do not want the person on the phone to hear you.

To switch the microphone off temporarily:

1. Press the **Options** soft key and highlight **Mute**.
2. Press the **Select** soft key or the  key. The other person can no longer hear you. The Mute icon is displayed.

To switch the microphone back on:

1. Press the **Options** soft key and highlight **Unmute**.
2. Press the **Select** soft key or the  key. The other person can hear you again.

Using the Speakerphone

While on a call, you can use your Speakerphone by following these steps:

1. Press the **Spkr on** soft key to turn the Speakerphone on.
2. To turn the Speakerphone off, press the **Spkr off** soft key.

Muting or Sending Key Tones

These options allow you to turn the key tones off or on. If the **Mute keys** option is selected, your phone does not transmit the DTMF (Dual Tone Multi-Frequency) tones of

the keys, which allows you to press keys without hearing annoying key tones during a call.

Note: To communicate with answering machines or computerized telephone systems, the **Send DTMF** option must be selected.

Send DTMF

You can use the **Send DTMF** option to send a key string or number during a phone call. For example, you can send a calling card number by DTMF while on a call. Select the **Send DTMF** option and enter a number. Press the **OK** soft key and the number is sent.

Searching for a Number in Phonebook

You can search for a number in Phonebook during a call.

1. Press the **Options** soft key or the  key.
2. Press the **Down** key to highlight the **Phonebook** option and press the **Select** soft key or the  key.
3. Press the **Down** key to highlight the **Contact list** option and press the **Select** soft key or the  key.

The Phonebook entries are listed.

4. Enter the name that you wish to find in the textbox located above the entries. If you enter the first few letters of the name, the Phonebook entries are listed starting with the first entry matching your input.
Or, use the **Up** or **Down** Navigation key to highlight the contact that you desire.
5. To view the highlighted entry, press the **Options** soft key.

6. Highlight the **View** option and press the **Select** soft key or the  key. The Contact is displayed.

For further details about the Phonebook feature, see "Finding a Phonebook Entry" on page 57.

Call Waiting

You can answer an incoming call while you have a call in progress, if this service is supported by the network and you have set the Call waiting menu to **Activate**. You are notified of an incoming call by a call waiting tone.

To answer a call while you have a call in progress:

1. Press the  key or the **Accept** softkey to answer the incoming call. The first call is automatically put on hold.
2. To switch between the two calls, press the **Options** soft key, highlight **Swap** and press the **Select** soft key or the  key.

To end a call on hold, press the **Options** soft key and select the **End held call** option. Then press the **Select** soft key or the  key.

To end the current call, press the  key.

Making a Multi-Party Call

A multi-party call is a network service that allows up to six people to take part simultaneously in a multi-party or conference call.

For further details about subscribing to this service, contact your service provider.

Setting up a Multi-Party Call

1. Call the first participant in the normal way.
2. Call the second participant in the normal way. The first call is automatically put on hold.
3. To join the first participant to the multi-party call, press the **Options** soft key or the  key and select **Join**. Press the **Select** soft key or the  key.
4. To add a new person to the multi-party call, call the new person in the normal way and then press the **Options** soft key or the  key. Select the **Join** option and press the **Select** soft key or the  key.

You can add incoming callers by answering the call and pressing the **Options** soft key or the  key, and selecting **Join**. Repeat as required.

Having a Private Conversation With One Participant

1. Press the **Options** soft key or the  key and choose the **Split** option. Press the **Select** soft key or the  key.
The list of call participants appears.
2. Highlight a person you wish to talk privately with by pressing the **Up** or **Down** Navigation key, and press the **Select** soft key or the  key.

Now you can talk only to that person. The other participants can continue to converse with each other.

3. To return to the multi-party call, press the **Options** soft key or the  key and select **Join**. Press the **Select** soft key or the  key.

All of the multi-party call participants can now hear each other.

Dropping One Participant

1. Press the **Options** soft key or the  key and choose the **Split** option. Press the **Select** soft key or the  key.

The list of call participants appears.

2. Highlight the person you want to keep and press the **Select** soft key or the  key. Press the **Options** soft key and highlight **End held multiparty**. Press the **Select** soft key or the  key.

The call with the participant on hold will end, but you can continue to talk to the other participants.

3. When you want to end the multi-party call, close the phone or press the  key.

Section 4: Menu Navigation

Topics Covered

- Menu Navigation
 - Menu Outline
-

This section explains the menu navigation for your phone. It also includes an outline of all the available menus associated with your phone.

Menu Navigation

You can tailor the phone's range of functions to your needs using menus and sub-menus. Menus and sub-menus can be accessed by scrolling using the Navigation keys or by using the shortcuts.

Accessing a Menu Function by Scrolling

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Scroll using the Navigation keys to reach a main menu, **Settings** for example. Press the **Select** soft key or the  key to enter the menu.
3. If the menu contains sub-menus, **Security** for example, you can access them by pressing the **Select** soft key or the  key after the sub-menu has been highlighted.
If the menu that you have selected contains further options, repeat this step.
4. To scroll through the menus, press the **Up** or **Down** Navigation keys.
5. To confirm the chosen setting, press the **Select** soft key, or the  key.
6. To return to the previous menu level, press the **Back** soft key, or the  key.
7. To exit the menu without changing the settings, press the  key.

Using Shortcuts

The menu items, such as menus, sub-menus, and options, are numbered and can be accessed quickly by using their

shortcut numbers. For the main menus, you can access any one of them by pressing the number keys (1 to 0) corresponding to their location on the screen.

Example: Accessing the Security menu.

1. Press the **Menu** soft key.
2. Press the  key for **Settings**.
3. Press the  key for **Security**.

Menu Outline

The following list shows the menu structure and indicates the number assigned to each option.

1 Voice notes

2 Call records

- 2.1 All calls
- 2.2 Missed calls
- 2.3 Incoming calls
- 2.4 Outgoing calls
- 2.5 Delete all
- 2.6 Call time
 - 2.6.1 Last call time
 - 2.6.2 Total incoming
 - 2.6.3 Total outgoing
 - 2.6.4 Life time
 - 2.6.5 Reset timers

3 t-zones

- 3.1 Home

- 3.2 Favorites
- 3.3 Go to URL
- 3.4 Clear cache

4 IM

4.1 AIM

- 4.1.1 Sign on
- 4.1.2 Saved conversations
- 4.1.3 Offline conversations
- 4.1.4 Settings
- 4.1.5 Help

4.2 ICQ

- 4.2.1 Connect
- 4.2.2 Saved conversations
- 4.2.3 Offline conversations
- 4.2.4 Settings
- 4.2.5 Help

4.3 Yahoo!

- 4.3.1 Sign in
- 4.3.2 Saved conversations
- 4.3.3 Offline conversations
- 4.3.4 Settings
- 4.3.5 Help

5 Messages

5.1 Create new

- 5.1.1 Text message
- 5.1.2 Picture message
- 5.1.3 Voice note

5.2 Inbox

5.3 Sentbox

5.4 Outbox

5.5 Drafts

- 5.6 Templates
 - 5.6.1 Text template
 - 5.6.2 Picture message template
- 5.7 Voice mail
 - 5.7.1 Call voice mail
 - 5.7.2 Voice server number
- 5.8 Delete all
- 5.9 Settings
 - 5.9.1 Text message
 - 5.9.2 Picture message
- 5.10 Broadcast messages**
- 5.11 Memory status

6 Fun & Apps

- 6.1 My Files
 - 6.1.1 Sounds
 - 6.1.2 Images
 - 6.1.3 Videos
 - 6.1.4 Music
 - 6.1.5 Memory status
- 6.2 Audio player
- 6.3 Camera
- 6.4 Voice recognition
- 6.5 Games
- 6.6 Image editor
- 6.7 Organizer
 - 6.7.1 Alarm
 - 6.7.2 Calendar
 - 6.7.3 Calculator
 - 6.7.4 World time
 - 6.7.5 Unit conversion
 - 6.7.6 Timer

6.7.7 Stopwatch

7 Get More Help

8 Phonebook

- 8.1 Add new contact
- 8.2 Contact list
- 8.3 Group
- 8.4 Speed dial
- 8.5 My name card
- 8.6 Own number
- 8.7 FDN list
- 8.8 Management
 - 8.8.1 Default Saving
 - 8.8.2 Copy all to phone
 - 8.8.3 Sort by contacts
 - 8.8.4 Delete all
 - 8.8.5 Memory status

9 Settings

- 9.1 Wi-Fi
 - 9.1.1 Available Networks
 - 9.1.2 Saved Networks
 - 9.1.3 Quick Connect
 - 9.1.4 Turn Wi-Fi Off/On
 - 9.1.5 Get Security Key
 - 9.1.6 Add new network
 - 9.1.7 Wi-Fi Help
- 9.2 Time & Date
- 9.3 Phone settings
 - 9.3.1 Language
 - 9.3.2 Greeting message
 - 9.3.3 Slide settings

- 9.3.4 Extra settings
- 9.4 Display settings
 - 9.4.1 Wallpaper
 - 9.4.2 Interior display
 - 9.4.3 Brightness control
 - 9.4.4 Backlight
 - 9.4.5 Dialing display
 - 9.4.6 Calendar
 - 9.4.7 Show caller information
- 9.5 Sound settings
 - 9.5.1 Incoming call
 - 9.5.2 Keypad tone
 - 9.5.3 Message tone
 - 9.5.4 Power on/off
 - 9.5.5 Slide tone
 - 9.5.6 Silent mode
 - 9.5.7 Extra tones
- 9.6 Network services
 - 9.6.1 Call forwarding
 - 9.6.2 Call barring**
 - 9.6.3 Call waiting
 - 9.6.4 Network selection
 - 9.6.5 Caller ID
- 9.7 Security
 - 9.7.1 PIN check
 - 9.7.2 Change PIN
 - 9.7.3 Phone lock
 - 9.7.4 Change password
 - 9.7.5 Privacy
 - 9.7.6 FDN mode
 - 9.7.7 Change PIN2
- 9.8 Memory status
 - 9.8.1 Shared memory
 - 9.8.2 Messages

- 9.8.3 My files
- 9.8.4 Calendar
- 9.8.5 Phonebook
- 9.8.6 Games

9.9 Reset settings

**** Shows only if supported by your SIM card.**

Section 5: Entering Text

Topics Covered

- Changing the Text Input Mode
 - Using ABC Mode
 - Using T9 Mode
 - Using Number Mode
 - Using Symbol Mode
-

This section outlines how to select the desired text input mode when entering characters into your phone. This section also describes how to use the T9 predictive text entry system to reduce the number of key strokes associated with entering text.

Changing the Text Input Mode

When using your phone, you will often need to enter text, such as when storing a name in your Phonebook, creating your personal greeting or scheduling events on your calendar. You can enter alphanumeric characters by using your phone's keypad.

Your phone has the following text input modes:

- **ABC mode:** this mode allows you to enter letters by pressing the key labeled with the letter you want. How many times you press the key determines which letter or number appears.
- **T9 mode:** this mode allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter; for example, pressing  can enter J, K, or L. However, the T9 mode automatically compares the series of keystrokes you make with an internal linguistic dictionary to determine the most likely word, thus requiring far fewer keystrokes than the traditional ABC mode.
- **Number mode:** this mode allows you to enter numbers.
- **Symbol mode:** this mode allows you to enter symbols, such as punctuation marks.

When you are in a field that allows characters to be entered, you will notice the text input mode indicator on the display.

Example: Writing a text message.



1. To change the text input mode, press the **Right** soft key.
2. Each time you press the **Right** soft key, a different Text input mode indicator will be displayed at the lower right corner of your display.

The following options are available:

En: T9 mode

En: Number mode

En: Symbol mode

En: ABC mode

3. When the text input mode indicator that you desire is displayed, you may enter text in the text message box using the selected text input mode.

Using ABC Mode

To use ABC mode, use the number keys to enter your text.

1. Press the key labeled with the letter you want:
 - Once for the first letter
 - Twice for the second letter

- And so on

2. Select the other letters in the same way.

- To enter periods, hyphens, or apostrophes, press the  key. ABC mode applies grammar rules to ensure that correct punctuation is used.
- To shift case in ABC mode, use the  key. There are 3 cases: Initial capital, Capital lock, and Lower case.
- You can move the cursor by using the Navigation keys. To delete letters, press the  key. Press and hold the  key to clear the display.

Note: The cursor moves to the right when you press a different key. When entering the same letter twice or a different letter on the same key, just wait for a few seconds for the cursor to move to the right automatically, and then select the next letter.

Keys

 . @ , - ? ! : () / 1

 A B C 2

a b c 2

 D E F 3

d e f 3

 G H I 4

g h i 4

5 jkl J K L 5

j k l 5

6 mno M N O 6

m n o 6

7 pqrs P Q R S 7

p q r s 7

8 tuv T U V 8

t u v 8

9 wxyz W X Y Z 9

w x y z 9

0+ + = < > € £ \$ % & ¥ ¤ 0

Using T9 Mode

T9 is a predictive text input mode that allows you to key in any character using single keystrokes. This text input mode is based on a built-in dictionary.

To enter a word in T9 mode:

1. When you are in T9 mode, start entering a word by pressing the **2** to **9** keys. Press each key only once for each letter.

Example: To enter “Hello” in T9 mode, press the **4**, **3**, **5**, **5**, and **6** keys.

The word that you are typing appears on the display. It may change with each key that you press.

2. Enter the whole word before editing or deleting the keystrokes.
3. When the word displays correctly, go to step 4.

If the word doesn't display correctly, press the  key to display alternative word choices for the keys that you have pressed.

Example: Both "Of" and "Me" have the **6** and **3** keys. The phone displays the most commonly used choice first.

4. Insert a space by pressing the  key and start entering the next word.

To add a new word into the T9 dictionary:

1. After pressing the keys corresponding to the word you want to add, press the  key to display the alternative words.
2. When you press the  key at the last alternative word, the display shows **Spell** on the bottom line. Press the **Spell** soft key or the  key.
3. Enter the word you want to add using ABC mode.
4. Press the **OK** soft key or the  key.

The word is added to the T9 dictionary and becomes a word for the associated keypress series.

Note: This feature may not be available for some languages.

- To enter periods, hyphens, or apostrophes, press the  key. T9 mode applies grammar rules to ensure that correct punctuation is used.
- To shift case in T9 mode, use the  key. There are 3 cases: Initial capital, Capital lock, and Lower case.
- You can move the cursor by using the Navigation keys. To delete letters, press the  key. Press and hold the  key to clear the display.

Using Number Mode

Number mode enables you to enter numbers into a text message. Press the keys corresponding to the digits you want to enter.

Using Symbol Mode

Symbol mode enables you to insert symbols and punctuation marks into text.

1. To select a symbol, press the corresponding number key.
2. To display more symbols, press the **Up** or **Down** Navigation key.
3. To clear the symbol(s), press the  key. When the input field is empty, this key returns the display to the previous mode.
4. To insert the symbol(s) into your message, press the **OK** soft key or the  key.



Section 5

Section 6: Understanding Your Phonebook

Topics Covered

- Storing a Number in the Phone's Memory
 - Storing a Number in the SIM Card
 - Finding a Phonebook Entry
 - Speed Dialing
 - Editing a Caller Group
 - Copying all SIM Phonebook Entries
 - Deleting all of the Phonebook Entries
 - My Name Card
 - Finding My Own Phone Number
 - FDN List
 - Management
-

This section describes how to manage your contacts by storing their name and number in your Phonebook. You can save phone numbers to your phone's memory or to your SIM card.

Storing a Number in the Phone's Memory

The default for saving phone numbers to your phonebook is your phone's memory. You can also save it to your SIM card or you can set your default so that whenever a new phonebook entry is created, you will be prompted to choose between **Phone** or **SIM card**. See "Default saving" on page 65 for information on how to change this setting.

Also, numbers that have been stored on your SIM card can be copied to your phone's memory.

Note: When you copy a phone number from your SIM card to your phone, the number will appear twice in your Contact list.

1. At the Idle screen, press the **Down** Navigation key to highlight **Phonebook**. Press the **Select** soft key.
2. Scroll to **Add new contact** by pressing the **Up** or **Down** Navigation key and press the **Select** soft key or the **OK** key.
3. Enter a first name in the **Name** text box. Tab to the next text box by pressing the **Down** key.

For further details about how to enter characters, see "Using ABC Mode" on page 47.

4. Enter a last name in the text box.
5. Highlight a number Type by pressing the **Up** or **Down** Navigation key, then enter a number in the text box.

The following types are available:

- **Mobile:** assigns the number entered to the Mobile entry.
- **Home:** assigns the number entered to the Home entry.
- **Office:** assigns the number entered to the Office entry.

- **Fax:** assigns the number entered to the Fax entry.
 - **Other:** allows you to enter more detailed information for the entry.
6. Continue to scroll down using the **Down** Navigation key to enter Email address, Picture ID, Ringtone, Group, and Notes if desired.
 7. Press the **Save** soft key or press the **Options** soft key and highlight the **Save** option and press the **Select** soft key or the **OK** key. The number is saved to your phone and the new contact information is displayed.
 8. To return to the Idle screen, press the  key.

Storing a Number in the SIM Card

The default for saving phone numbers to your phonebook is your phone's memory. To store a number in your SIM card, you need to change the **Default Saving** option first.

1. At the Idle screen, press the **Down** Navigation key to highlight **Phonebook**. Press the **Select** soft key.
2. Scroll to **Management** by pressing the **Up** or **Down** Navigation key and press the **Select** soft key or the **OK** key.
3. Highlight **Default saving** and press the **Select** soft key or the **OK** key.
4. Highlight **SIM card** and press the **Select** soft key or the **OK** key.

Note: You can also set the **Default saving** option to **Ask on saving** in the Management menu. With this option, you will be prompted for storage

location each time you add a new contact. See "Default saving" on page 65 for more information.

Now that your phone is set up to store numbers to your SIM card, follow this procedure to store a number.

1. At the Idle screen, press the **Down** Navigation key to highlight **Phonebook**. Press the **Select** soft key.
2. Highlight the **Add new contact** option and press the **Select** soft key or the  key.
3. Enter a name in the **Name** text box. Tab to the next text box by pressing the **Down** key.

For further details about how to enter characters, see "Using ABC Mode" on page 47.

4. Enter a number you want to store and press the **Save** soft key or the  key. The number is saved in your SIM card.

After storing, the phone displays the Phonebook entry you just created.

5. To use the entry options **before** saving the number, press the **Options** soft key.

The following options are available:

- **Save**: saves the number in the SIM card.
- **Language select**: allows you to select between English, French, or Spanish.
- **Cancel**: cancels the Add New Contact screen and returns you to the previous menu.

6. To use the entry options **after** saving the number, press the **Options** soft key.

The following options are available:

- **Edit:** allows you to edit the name and number fields in the entry.
- **Send message:** allows you to send a message to the selected number. You may choose between Text messages, Picture messages, or Voice notes.
- **Call:** allows you to call the number.
- **Copy to:** allows you to copy the number to your Phone, SIM card or FDN.
- **Send name card:** allows you to send your name card via Text message or Picture message.
- **Assign speed dial:** allows you to assign a speed dial key number to the selected Phonebook entry.
- **Delete:** allows you to delete the name and number from Phonebook. You are asked to confirm that you wish to delete the name and number by pressing the **Yes** soft key. To cancel, press the **No** soft key.

7. To return to the Idle screen, press the  key.

Finding a Phonebook Entry

You can store phone numbers and their corresponding names in your SIM card and phone's memories. They are physically separate but are used as a single entity, called Phonebook.

Depending on your particular SIM card, the maximum number of phone numbers the SIM card can store may differ.

1. At the Idle screen, press the **Down** Navigation key to highlight **Phonebook**. Press the **Select** soft key.

2. Highlight **Contact list** and press the **Select** soft key or the  key.
3. Enter the first few letters of the name in the text box.

The Phonebook entries are listed, starting with the first entry matching your input.
4. If needed, press the **Up** or **Down** Navigation key until the entry you want is highlighted.
5. Once you have found the entry, press the  key to dial the number, or press the **Options** soft key to access the following Phonebook entry options:
 - **View**: shows details of the Phonebook entry.
 - **Send message**: allows you to send a message to the selected number. You may choose between Text messages, Picture messages, or Voice notes.
 - **New contact**: takes you to the New Contact menu.
 - **Call**: places a call to the number.
 - **Assign speed dial**: allows you to assign a speed dial key number to the selected Phonebook entry.
 - **Delete**: allows you to delete the selected name and number from your Phonebook or delete all numbers. You are asked to confirm that you wish to delete the name and number by pressing the **Yes** soft key. To cancel, press the **No** soft key.
 - **Language select**: allows you to select between English, French, or Spanish.
6. If you select the **View** option, press the **Options** soft key after the contact information is displayed, for these additional options:
 - **Edit**: allows you to edit the name and number fields in the entry. You can also add e-mail address and notes.

- **Send message:** allows you to send a message to the selected number. You may choose between Text messages, Picture messages, or Voice notes.
- **Call:** places a call to the number.
- **Copy to:** allows you to copy the number to your phone, SIM card or FDN.
- **Send name card via:** allows you to send your name card via Text message or Picture message.
- **Assign speed dial:** allows you to assign a speed dial key number to the selected Phonebook entry.
- **Delete:** allows you to delete the name and number from Phonebook. You are asked to confirm that you wish to delete the name and number by pressing the **Yes** soft key. To cancel, press the **No** soft key.

After viewing one Phonebook entry, you can scroll through all Phonebook entries by pressing the **Right** or **Left** Navigation keys.

Speed Dialing

Once you have stored phone numbers from your Phonebook list, you can set up to 8 speed dial entries and then dial them easily whenever you want, simply by pressing the associated numeric key.

In Idle mode, to speed dial the numbers assigned to keys (2 to 9), press and hold the appropriate key.

Setting Up Speed Dial Entries

1. At the Idle screen, press the **Down** Navigation key to highlight **Phonebook**. Press the **Select** soft key.

2. Scroll to **Speed dial** by pressing the **Up** or **Down** Navigation key and press the **Select** soft key or the  key.
3. Use the **Up** or **Down** Navigation key to select the number key to which you wish to assign the speed-dialing number. Select from the **2** to **9** keys, and press the **Add** soft key.
4. Highlight **Contact list** or **FDN list** and press the **Select** soft key or the  key.
5. Highlight the entry that you want to assign the speed dial number to and press the **Select** soft key or the  key.

Note: Memory location 1 is reserved for your Voice mail server number and cannot be changed.

6. In Idle mode, press and hold the speed dial number to call the assigned number.

Editing a Caller Group

1. At the Idle screen, press the **Down** Navigation key to highlight **Phonebook**. Press the **Select** soft key.
2. Highlight the **Group** option and press the **Select** soft key or the  key.
3. Scroll through the group list by pressing the **Up** or **Down** Navigation key.
4. Highlight the group you want and press the **Options** soft key.
5. Highlight the **Edit** option and press the **Select** soft key or the  key.

6. To edit the Caller group name, modify the text in the **Name** text box.
7. To change the image associated with the Caller group, press the **Down** key to highlight the Picture ID icon. Press the  key.

The following options are available:

- **Take picture:** allows you to take a picture with your camera.
- **My photos:** allows you to choose a photo from My photos folder.
- **Downloaded images:** allows you to choose a photo from your downloaded images folder.
- **Icons:** allows you to choose from pre-defined icons
- **My videos:** allows you to choose a video from your My video clips folder.
- **Downloaded videos:** allows you to choose a video from your Downloaded videos folder.
- **Do not assign:** removes any image that was previously used and sets to Not assigned status.

8. To change the ringtone associated with the Caller group, press the **Down** key to highlight the Ringtone icon. Press the  key.

The following options are available:

- **Default melodies:** allows you to choose between 20 different melodies.
- **Voice list:** allows you to assign a Ringtone from your Voice list.
- **My sounds:** allows you to assign a Ringtone from your My sounds folder.
- **Music:** allows you to assign a Ringtone from your Music list.

9. When you are finished making your changes, press the **Save** soft key. Your Caller group settings will be saved.
10. Press the  key to return to Idle mode.

Copying all SIM Phonebook Entries

You can copy all SIM entries to the Phone using this option. When you copy entries to the phone, duplicate entries are created in your Phonebook.

1. At the Idle screen, press the **Down** Navigation key to highlight **Phonebook**. Press the **Select** soft key.
2. Highlight **Management** and press the **Select** soft key or the  key.
3. Highlight **Copy all to phone** and press the **Select** soft key or the  key.
4. After receiving the **Sure to copy all?** confirmation message, press the **Yes** soft key.

Note: Options are available for phone entries stored in the phone that are not available when stored to the SIM card. For details see "Storing a Number in the Phone's Memory" on page 54.

Note: When you copy a phone number from your SIM card to your phone, the number will appear twice in your Contact list.

Deleting all of the Phonebook Entries

You can delete all your entries from your phone's memory, your SIM card, or both.

Important! Once Phonebook entries have been deleted, they cannot be recovered.

1. At the Idle screen, press the **Down** Navigation key to highlight **Phonebook**. Press the **Select** soft key.
2. Highlight **Management** and press the **Select** soft key or the  key.
3. Scroll to **Delete all** by pressing the **Up** or **Down** Navigation key and press the **Select** soft key or the  key.
4. Press the  key to place a check mark by the memory location you want to empty; All, Phone, SIM card, or SIM card (FDN).

You can remove the check mark by pressing the  key again.

5. Press the **Delete** soft key to delete the entries in the selected memory location.
6. When the **Delete?** confirmation message appears, press the **Yes** soft key or the  key.
7. To cancel the deletion, press the **No** soft key.
8. When you are finished, press the  key to return to Idle mode.

My Name Card

My name card allows you to create a virtual business card. Once completed, you can send the card to recipients as an attachment.

1. At the Idle screen, press the **Down** Navigation key to

highlight **Phonebook**. Press the **Select** soft key.

2. Highlight **My name card** and press the **Select** soft key or the  key.
3. My Name Card opens with the **Name** field highlighted.
4. Enter information in each of the fields as desired. Use the Navigation keys to move between fields, then use the keypad to enter information.
5. When finished, press the **Save** soft key or press the **Options** soft key and highlight the **Save** option. Press the **Select** soft key or the  key.

Finding My Own Phone Number

This function is a memory aid, which you can use to check your own phone number if you need to do so.

You can assign a name to each of your own phone numbers registered on your SIM card. You can also edit the names and numbers. Any changes made here do not in any way affect the actual subscriber numbers on your SIM card.

1. At the Idle screen, press the **Down** Navigation key to highlight **Phonebook**. Press the **Select** soft key.
2. Select the **Own number** option by pressing the **Up** or **Down** Navigation key and press the **Select** soft key or the  key.
3. Highlight the **Empty** option and press the  key. Your phone number is displayed. You may edit the number if you wish. Press the **Save** soft key or the  key.

FDN List

FDN (Fixed Dial Number) mode, if supported by your SIM card, allows you to restrict your outgoing calls to a limited set of phone numbers.

The FDN List allows you to set up a list of numbers that your phone may dial.

FDN mode must first be enabled in the Security settings. See "FDN mode" on page 109 for more information on changing this setting.

To enable FDN mode, a PIN2 number is required. You can obtain your PIN2 from your service provider.

Management

The Management menu allows you to select where your contacts will be saved, copy your SIM contacts to your phone, sort your contacts, delete your contacts, or check your memory status.

Default saving

The **Default Saving** option allows you to choose where your contacts will be saved. The following options are available:

- **SIM card:** new phonebook contacts will be saved to your SIM card.
- **Phone memory:** new phonebook contacts will be saved to your phone.
- **Ask on saving:** you will be prompted to choose between **Phone** or **SIM card** whenever you save a new contact.

Copy all to phone

This option allows you to copy all contacts from your SIM card to your phone. For more information, see "Copying all SIM Phonebook Entries" on page 62.

Sort by contacts

This option allows you to sort contacts stored to your phone's memory, by first name or last name.

Note: Contacts stored to your SIM card do not have first and last names as separate fields. Therefore, they will be sorted on the first letter of the name entered in the **Name** field.

Delete all

Important! Once contact entries have been deleted, they cannot be recovered.

This option allows you to delete your contacts. You may delete from All, Phone, SIM card, or SIM card (FDN). For more information, see "Deleting all of the Phonebook Entries" on page 62.

Memory status

You can check how many names and numbers are stored in the Phonebook. You can see how many are stored in your phones's memory and on your SIM card, and how many are stored as FDNs. You can also see the capacity of the three memories.

1. At the Idle screen, press the **Down** Navigation key to highlight **Phonebook**. Press the **Select** soft key.

2. Highlight **Management** and press the **Select** soft key or the  key.
3. Select the **Memory status** option by pressing the **Up** or **Down** Navigation key and press the **Select** soft key or the  key.
4. When you are finished, press the  key or the **Back** soft key.

A blue rounded rectangle with a black border, containing the text "Section 6" in white.

Section 6

Section 7: Messages

Topics Covered

- Voice Notes
- Text Messages
- Picture Messages
- Inbox
- Sentbox
- Outbox
- Drafts
- Templates
- Voice Mail
- Delete All
- Settings
- Broadcast Messages (SIM Dependent)
- Instant Messaging
- Memory Status

This section describes how to send or receive different types of messages. It also includes the features and functionality associated with messaging.

Your phone provides the following message types:

- Voice Notes
- Text Messages
- Picture Messages
- Voice Mail Messages
- Broadcast Messages (SIM Dependent)
- Instant Messaging

Voice Notes

In this menu, you can record a voice note of up to one minute long and then immediately send it by a Picture Messaging message.

When you access this menu, a timer appears on the screen.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Voice notes** icon. Press the **Select** soft key or the  key to enter the menu.
3. Press the **Record** soft key to start recording.
4. Record a memo by speaking into the microphone.
The display shows both the elapsed time and the remaining time.
5. When you are finished, press the **Stop** soft key. Or, when the recording time is expired, the display switches to the next screen.
6. Press the **Options** soft key for the following options:

- **Send to:** allows you to send the Voice note.
- **Play:** plays back your Voice note.
- **Re-record:** discards the Voice note and enables you to record another one.
- **Set default destination:** allows you to remove or edit the default destination.
- **Save:** saves the Voice note.

7. To send the Voice note, press the **Send** soft key.

8. Highlight one the following options:

- **Recent log:** allows you to select a number or an address from the 20 last destinations you entered for sending the last messages.
- **Phonebook:** allows you to enter the phone number you want from your phonebook. Use the  key to check the selected entries.
- **Phone number:** allows you to enter a phone number.
- **Email address:** allows you to enter an email address to send the voice note to.
- **My Album:** allows you to send the voice note to My Album.
- **My Journal:** allows you to send the voice note to My Journal.

9. Press the **Select** soft key or the  key.

10. If you chose **Recent log** or **Phonebook**, use the  key to place checkmarks next to the entry or entries you want your message sent to and press the **Next** softkey.

11. If you chose **Phone number**, enter the number in the **To** text box.

12. To add another destination, select **Empty**. Repeat from step 8. You can enter up to 20 destinations.

13. When you have finished entering the destinations, press the **Options** soft key, highlight the **Send** option and press the **Select** soft key or the **OK** key.

Your phone sends the message. After sending, the message is saved in the Sentbox.

Text Messages

Short Message Service (SMS) allows you to send and receive short text messages to and from other mobile phones. In addition, your phone supports the Enhanced Messaging Service (EMS), which enables you to include simple pictures, melodies, and animated images in your messages. To use this feature, you must subscribe to your service provider's message service.

When the Message icon (📧) appears, you have received new text messages. When the memory is full, the message icon (📧) will flash on your phone and you cannot receive any new messages. You must delete a message before you can receive additional messages.

Use the **Delete** option in each message box to delete obsolete messages.

Create new

In this menu, you can write and send a text message.

Creating a Simple Text Message

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Messages** icon. Press the **Select** soft key or the **OK** key to enter the menu.

3. Highlight the **Create new** option and press the **Select** soft key or the  key.
4. Highlight the **Text message** option and press the **Select** soft key or the  key.
5. Create your message.

Notes: For further details about entering characters, see "Using ABC Mode" on page 47.

You can enter up to 160 standard Alphabet characters per page in your message. The message can be up to 12 pages long for a total of 1920 characters.

6. When you finish entering your message, press the **Options** soft key. The following options are available:
 - **Send:** allows you to send the message.
 - **Insert from:** allows you to insert Text template, Phonebook, or Favorites. The Text template allows you to apply one of the preset message templates to the text. Select one of the 10 items stored in the Text messages template menu. Phonebook allows you to add names and phone numbers to your message. Favorites allows you to add internet addresses to your message.
 - **Add content:** allows you to add a picture, animation, or melody to your message.
 - **Attach:** allows you to attach Name card, Schedule, Anniversary, Miscellaneous, or To do items to your message.
 - **Save to Drafts:** save the message to your Phone or SIM.
 - **Language select:** allows you to set the language to English, French, or Spanish.
 - **Text style:** allows you to format the style of the text. For the Text size, Large, Medium, and Small size are available. Text mode options are Normal, Underline, and Strikethrough.

The options for Bold and Italic are set by using the **OK** key to place a checkmark by them. Alignment options are Left, Center, and Right.

- **Back:** allows you save to your draft folder without sending.
7. Highlight the **Send** option and press the **Select** soft key or the **OK** key.
 8. Highlight one of the following options and press the **Select** soft key or the **OK** key:
 - **Recent log:** allows you to select from recipients of your previous messages.
 - **Phonebook:** allows you to select the phone number(s) you want from your phonebook.
 - **Phone number:** allows you to enter a number to send your message to.
 9. If you chose **Recent log** or **Phonebook**, use the **OK** key to place checkmarks next to the entry or entries you want your message sent to and press the **Next** softkey.
 10. If you chose **Phone number**, enter the number in the **To** text box.
 11. To add another destination, select an **Empty** option and press the **Options** soft key. Repeat from step 6. You can enter up to 20 destinations.
 12. When you have finished entering the destinations, press the **Options** soft key, highlight the **Send** option and press the **Select** soft key or the **OK** key.



Picture Messages

This menu allows you to use the Multimedia Message Service.

Picture Messaging is a messaging service that provides delivery of personal multimedia messages from phone to phone or from phone to e-mail.

In addition to the familiar text content of text messages, multimedia messages can contain images, graphics, voice, and audio clips. A Picture Messaging message is a multimedia presentation in a single file. It is not a text file with attachments.

Using the Picture Messaging feature, your phone can receive and send messages that contain multimedia files, such as photos, videos, sounds and images you downloaded from the Internet and voice notes you recorded. This function is available only if it is supported by your service provider. Only phones that offer multimedia messaging features can receive and display multimedia messages.

Create new

This menu allows you to create a new multimedia message and send to one or multiple destinations.

Creating and Sending a Multimedia Message

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Messages** icon. Press the **Select** soft key or the  key to enter the menu.

3. Highlight the **Create new** option and press the **Select** soft key or the  key.
4. Highlight the **Picture message** option and press the **Select** soft key or the  key.
5. Highlight **Subject** and press the  key.
6. Enter the subject of your message and press the  key.

Note: For more information about entering characters, see "Using ABC Mode" on page 47.

7. To add a picture or video clip, highlight the **Image & Video** option and press the  key.
8. Highlight one of the following options and press the **Select** soft key or the  key.
 - **Pictures:** allows you to take a picture to include, or select a picture from your different picture folders.
 - **Videos:** allows you to record a video to include, or select a video from your different video folders.
9. Select a picture or video from the various options available.
10. Highlight the picture or video and press the **Options** soft key. Highlight the **Add** option and press the **Select** soft key or the  key to add it to your message.
11. To add a sound, highlight the **Sound** option and press the  key.

Note: if you attached a video clip to your message, you will not be able to add audio to the message.

12. Highlight one of the following options and press the **Select** soft key or the **OK** key.
 - **Record audio:** allows you to record a new audio message.
 - **My sounds:** allows you to select a sound from your My sounds folder.
 - **Voice list:** takes you to the Voice list folder to select a voice message to add.
13. Select a Sound or Voice memo and press **OK** key. Press the **Add** soft key to add the sound to your message.
14. To add a message, highlight **Message** and press the **OK** key.
15. Enter your message and press the **OK** key.
16. When you have finished creating the message, press the **Options** key and highlight the **Send** option. Press the **Select** soft key or the **OK** key.
17. Highlight one of the following options:
 - **Recent log:** allows you to select from recipients of your previous messages.
 - **Phonebook:** allows you to enter the phone number you want from your phonebook.
 - **Phone number:** allows you to enter a phone number.
 - **Email address:** allows you to enter an email address.
 - **My Album:** allows you to send the message to the My Album.
 - **My Journal:** allows you to send the message to My Journal.

18. After selecting where to send your message, press the **Options** softkey and highlight the **Send** option. Press the **Select** soft key or the  key. Your phone sends the message.

Inbox

The Inbox stores messages that you have received. You can tell what kind of message it is by the icon displayed. If the icon envelope is open then the message has been read, otherwise it will appear closed.

The following types of messages may appear in your inbox:



Voice notes



Text messages



Multimedia messages



Push messages

When you enter the Inbox, the list of messages displays with the sender's phone numbers, or names, if available in your Phonebook. After you have read the message, the envelope in the icon will appear opened.

Note: By pressing the **Left** or **Right** Navigation keys, you may scroll between Inbox, Sentbox, Outbox, and Drafts.

1. In Idle mode, press the **Menu** soft key to access Menu mode.

2. Using the Navigation keys, scroll to the **Messages** icon. Press the **Select** soft key or the  key to enter the menu.
3. Highlight the **Inbox** option and press the **Select** soft key or the  key.

Viewing a Text Message in Inbox

1. Select a text message from the list and press the **Options** soft key.

The following options will appear:

- **View:** read the text message.
- **Reply via:** allows you to send a reply to the sender by sending a text or picture message.
- **Call back:** places a call to the selected number.
- **Delete:** deletes the selected text message or all messages.
- **Move to phone:** allows you to move the message from the SIM card to the phone's memory. This option is only available for messages stored in the SIM card.
- **Move to SIM card:** allows you to move the message from the phone's memory to the SIM card. This option is only available for messages stored in the phone's memory.
- **Sort by:** allows you to sort messages by Read/Unread, Date, Name, Type, Size, or Subject.

2. Highlight the **View** option and press the **Select** soft key or the  key to read the message contents.
3. To scroll through the contents, press the **Up** or **Down** Navigation key.

While reading a text message, you may choose the following options by pressing the **Options** soft key:

- **Reply via:** allows you to send a reply to the sender by sending a text or picture message.
- **Call back:** places a call to the selected number.
- **Forward:** allows you to forward the message to another number.
- **Delete:** allows you to delete the message.
- **Move to phone:** allows you to move the message from the SIM card to the phone's memory. This option is only available for messages stored in the SIM card.
- **Move to SIM card:** allows you to move the message from the phone's memory to the SIM card. This option is only available for messages stored in the phone's memory.
- **Save address:** allows you to extract the sender's number and URL, email addresses or phone numbers from the message text, so that you can save them in your phone's memory.
- **Protection:** allows you to lock the message to protect it from being deleted.

Viewing a Picture Message in Inbox

1. Highlight a picture message from the list and press the **Options** soft key.

The following options will appear:

- **View:** read the picture message.
- **Reply via:** allows you to send a reply to the sender by sending a picture message, text message, or voice note.
- **Reply all via:** allows you to send a reply to All by sending a picture message or voice note.
- **Call back:** places a call to the selected number.
- **Forward:** allows you to forward the message to another number.



- **Delete:** deletes the selected picture message or all messages.
 - **Sort by:** allows you to sort messages by Read/Unread, Date, Name, Type, Size, or Subject.
 - **Protection:** allows you to lock the message to protect it from being deleted.
 - **Properties:** shows you information about the message, such as time and date the message was received, the sender's e-mail address or phone number, recipient's e-mail address or phone number, Cc, message size, priority, and class.
2. Highlight the **View** option and press the **Select** soft key or the  key to read the message contents.
 3. To scroll through the contents, press the **Up** or **Down** Navigation key.

While viewing a picture message, you may choose the following options by pressing the **Options** soft key:

- **Reply via:** allows you to send a reply to the sender by sending a text or picture message or a voice note.
- **Reply all via:** allows you to send a reply to All by sending a picture message or voice note.
- **Call back:** places a call to the selected number.
- **Forward:** allows you to forward the message to another number.
- **Replay:** allows you to view the message again.
- **Delete:** allows you to delete the message.
- **Save address:** allows you to extract the sender's number and URL, e-mail addresses or phone numbers from the message text, so that you can save them in your phone's memory.

- **Save media:** allows you to save the message to different areas or to your vCard or vCalendar.
- **Protection:** allows you to lock the message to protect it from being deleted.
- **Properties:** shows you information about the message, such as time and date the message was received, the sender's e-mail address or phone number, recipient's e-mail address or phone number, Cc, message size, priority, and class.

Viewing a Voice Note in Inbox

1. Highlight a Voice Note from the list and press the **Options** soft key.

The following options will appear:

- **View:** listen to the Voice note and view message details.
- **Reply via:** allows you to send a reply to the sender by sending a picture message, text message, or voice note.
- **Reply all via:** allows you to send a reply to All by sending a picture message or voice note.
- **Call back:** places a call to the selected number.
- **Forward:** allows you to forward the Voice note to another number.
- **Delete:** allows you to delete the selected Voice note or all messages.
- **Sort by:** allows you to sort messages by Read/Unread, Date, Name, Type, Size, or Subject.
- **Protection:** allows you to lock the Voice note to protect it from being deleted.
- **Properties:** shows you information about the Voice note, such as time and date the Voice note was received, the sender's e-mail address or phone number, recipient's e-mail address or phone number, Cc, Voice note size, priority, and class.

2. Highlight the **View** option and press the **Select** soft key or the  key to listen to the message contents.

While listening to the message, you may choose the following options by pressing the **Options** soft key:

- **Reply via:** allows you to send a reply to the sender by sending a text or picture message or a voice note.
- **Reply all via:** allows you to send a reply to All by sending a picture message or voice note.
- **Call back:** places a call to the selected number.
- **Forward:** allows you to forward the message to another number.
- **Replay:** allows you to listen to the voice note again.
- **Delete:** allows you to delete the voice note.
- **Save address:** allows you to extract the sender's number and URL, e-mail addresses or phone numbers from the message text, so that you can save them in your phone's memory.
- **Save media:** allows you to save the message to different areas or to your vCard or vCalendar.
- **Protection:** allows you to lock the message to protect it from being deleted.
- **Properties:** shows you information about the message, such as time and date the message was received, the sender's e-mail address or phone number, recipient's e-mail address or phone number, Cc, message size, priority, and class.

Viewing a Push Message in Inbox

A Push message is a way of delivering content (e.g. images, ringtones, etc.) to mobile phones that are WAP enabled. With a Push message you don't actually send the content in the text message, you direct the mobile phone where to get it from.

1. Select a Push message from the list and press the **Options** soft key.

The following options will appear:

- **View:** listen to the Voice note and view message details.
 - **Delete:** allows you to delete the selected message or all messages.
 - **Sort by:** allows you to sort messages by Read/Unread, Date, Name, Type, Size, or Subject.
2. Highlight the **View** option and press the **Select** soft key or the  key to listen to the message contents.

While reading the message, you may choose the following options by pressing the **Options** soft key:

- **Go to URL:** allows you to go to the website on your WAP browser.
- **Delete:** allows you to delete the message.
- **Save address:** allows you to extract the sender's number and URL, e-mail addresses or phone numbers from the message text, so that you can save them in your phone's memory.

Viewing a Message When You Receive It

When a new multimedia message comes in, the display shows the Picture Messaging Message icon.

1. Press the **View** soft key to view the message.
Press the **Exit** soft key if you want to view the message later in the Inbox.
2. Press the **Options** soft key or the  key to access the various options described above.
3. When you are finished, press the  key.

Sentbox

This message box stores messages that you have sent.

When you enter this menu, the list of messages in the box displays with the recipients' phone numbers or names, if available in your Phonebook.

Note: By pressing the **Left** or **Right** Navigation keys, you may scroll between Inbox, Sentbox, Outbox, and Drafts.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Messages** icon. Press the **Select** soft key or the  key to enter the menu.
3. Highlight the **Sentbox** option and press the **Select** soft key or the  key.
4. Select a message from the list and press the **Options** soft key.
5. Highlight the **View** option and press the **Select** soft key or the  key to view the message contents.
6. To scroll through the contents, press the **Up** or **Down** Navigation key.

While reading a message, you can choose different options by pressing the **Options** soft key.

Outbox

This message box stores messages that you have attempted to send but have not actually been sent yet.

When you enter this menu, the list of messages in the box displays with the recipients' phone numbers or names, if available in your Phonebook.

Note: By pressing the **Left** or **Right** Navigation keys, you may scroll between Inbox, Sentbox, Outbox, and Drafts.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Messages** icon. Press the **Select** soft key or the **OK** key to enter the menu.
3. Highlight the **Outbox** option and press the **Select** soft key or the **OK** key.
4. Select a message from the list and press the **Options** soft key.
5. Highlight the **View** option and press the **Select** soft key or the **OK** key to view the message contents.
6. To scroll through the contents, press the **Up** or **Down** Navigation key.

While reading a message, you can choose different options by pressing the **Options** soft key.

Drafts

This message box stores messages that you may want to edit or send at a later time.

When you enter this menu, the list of messages in the box displays.

Note: By pressing the **Left** or **Right** Navigation keys, you may scroll between Inbox, Sentbox, Outbox, and Drafts.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Messages** icon. Press the **Select** soft key or the  key to enter the menu.
3. Highlight the **Drafts** option and press the **Select** soft key or the  key.
4. Select a message from the list and press the **Options** soft key.
5. Highlight the **Edit** option and press the **Select** soft key or the  key to edit the message contents.
6. To send the message, press the **Options** soft key and highlight the **Send** option.
7. Press the **Select** soft key or the  key to send the message.

While viewing a draft message, you can choose different options, depending on the type of message, by pressing the **Options** soft key.

Templates

Besides entering message text using the keypad keys, you can speed message composition by including copies of stored text (Templates) in your message.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Messages** icon. Press the **Select** soft key or the **OK** key to enter the menu.
3. Highlight the **Templates** option and press the **Select** soft key or the **OK** key.
4. If you want templates for a text message, highlight the **Text template** option and press the **Select** soft key or the **OK** key.

You can choose from ten predefined sentences that you can add to your text message to save time.

5. If you want templates for a picture message, highlight the **Picture messages template** option and press the **Select** soft key or the **OK** key.

You can choose between twelve different picture message formats. You can then edit the parts that you choose.

Voice Mail

This menu provides you with a way of accessing your voice mailbox, if provided by your network.

1. In Idle mode, press the **Menu** soft key to access Menu mode.

2. Using the Navigation keys, scroll to the **Messages** icon. Press the **Select** soft key or the  key to enter the menu.
3. Highlight the **Voice mail** option and press the **Select** soft key or the  key.

The following options are available:

- **Call voice mail:** before using the Voice Mail feature, you must enter the voice server number obtained from your service provider. You can then select this option and press the **Select** soft key or the  key to listen to your messages. You can also connect to the voice server by pressing and holding the  key in Idle mode.
- **Voice server number:** allows you to change the voice mail server number, if necessary.

Note: Voice mail is a network feature. Please contact your service provider for further details.

Delete All

This menu allows you to delete all of the messages in each message box. Or, you can also delete all of your messages in all message boxes at one time.

1. To select a message box to clear, press the **Up** or **Down** Navigation key to highlight the message box you want to delete. Press the  key to place a check mark. To delete all of your messages, select the **All messages** option.
2. To remove a check mark, press the  key.
3. Press the **Delete** soft key to delete the marked objects.

4. After you receive the **Delete?** confirmation, press the **Yes** soft key to delete the selected message box contents. Otherwise, press the **No** soft key.

Settings

In this menu, you can set up default text and picture message information. The last setting you accessed is automatically activated for sending subsequent messages.

Text message

- **Service center:** allows you to store or change the number of your message center, which is required when sending messages. You must obtain this number from your service provider.
- **Destination address:** allows you to enter a number that you would like to send all messages to. You can still message others, but this number will always appear in the Send list.
- **Validity period:** allows you to set the length of time your text messages are stored at the message center while attempts are made to deliver them.
- **Reply path:** allows the recipient of your message to send you a reply message using your message center, if your network supports this service.
- **Delivery report:** allows you to activate or deactivate the report function. When this function is activated, the network informs you whether or not your message has been delivered.

Picture message

The following options are used to set Send and Receive settings for Picture messages.

Send Settings

- **Delivery report:** when this option is enabled, the network informs you whether or not your message has been delivered.
- **Read reply:** when this option is enabled, your phone sends a request for a reply along with your message to the recipient.
- **Priority:** you can select the priority level of your messages.
- **Expiry date:** The expiration date is how long the message receiver has to retrieve the message.
- **Delivery after:** you can set a delay time before the phone sends your messages.

Receive Settings

- **Anonymous reject:** you can set your phone to automatically reject anonymous messages.
- **Ads allowed:** allows you to receive advertisements.
- **Report allowed:** you can set the option to receive a delivery report.

Broadcast Messages (SIM Dependent)

This network service allows you to receive text messages on various topics, such as the weather or traffic.

Please contact your service provider for further details.

Instant Messaging

Instant Messaging (IM) is a way of sending short, simple messages that are delivered immediately to users online at that moment.

Before using this feature, you need to subscribe to a messenger service. For further details, contact your service provider.

Starting your Instant Messaging

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **IM** icon. Press the **Select** soft key or the **OK** key to enter the menu.
3. Highlight the messenger service to which you subscribed using the **Up** or **Down** Navigation key and press the **Select** soft key or the **OK** key.
4. Highlight the **Sign on**, **Connect**, or **Sign in** option, depending on your messenger service and press the **Select** soft key or the **OK** key.
5. Enter the required sign on information such as ID and password and press the **OK** soft key.

Note: The information required for sign on will vary depending on the instant messaging provider you are using.

6. Follow the on-screen instructions to read, reply to, compose, send, and manage your IM account.

Memory Status

You can check the amount of the memory being used and the memory remaining for text, picture, and push messages.

The display shows the total space including the used and free space. You can also view how much space is currently occupied by each message box.

Section 8: Changing Your Settings

Topics Covered

- Time & Date Settings
 - Phone Settings
 - Display Settings
 - Sound Settings
 - Network Services Settings
 - Security Settings
 - Memory Status
 - Reset Settings
-

This section explains the sound and phone settings for your phone. It includes display settings, security settings, and extra settings associated with your phone.

Time & Date Settings

This menu allows you to change the current time and date displayed.

The following options are available:

- **Set time:** allows you to change the hour and minute.
- **AM/PM:** allows you to set either AM or PM.
- **Time format:** allows you to select whether your time is displayed in 12 hour or 24 hour format.
- **Set date:** allows you to enter the month, day, and year.
- **Date format:** allows you to select MM/DD/YYYY, DD/MM/YYYY, or YYYY/MM/DD format.
- **Week start day:** allows you to choose between Sunday or Monday as the day your week will start.
- **Auto update:** allows you to receive time information from your service provider's network.
 - **On:** the phone automatically updates the time and date according to the current time zone using the network service.
 - **Confirm first:** the phone asks for a confirmation before the update.
 - **Off:** you need to manually set the time and date according to the current time zone using the Set time menu.

To change your time and date settings:

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Settings** icon. Press the **Select** soft key or the  key to enter the menu.

3. Highlight the **Time & Date** options and press the **Select** soft key or the  key.
4. Use the **Up** or **Down** Navigation key to select the option you wish to change.
5. To set **Set time** or **Set date**, use the **Left** or **Right** key to position the cursor over the number you wish to change.
6. Enter the desired number.
7. To change other options, use the **Left** or **Right** key to select the desired setting.
8. When you are finished changing your settings, press the **Save** soft key to save your settings. Otherwise press the **Cancel** soft key.

Note: Automatic updates of time and date do not change the time you have set for alarm settings or calendar memos.

Phone Settings

You can customize various phone settings.

Language

This menu allows you to select a display language for Text language and Input mode. Choose from English, French, and Spanish.

Greeting message

This menu allows you to set a greeting to be displayed briefly when the phone is switched on.

For details about entering characters, see "Using ABC Mode" on page 47.

Slide settings

This menu allows you to set how your phone will function when you slide your phone open or closed. The following options are available:

- **Up:** select **Accept call** if you want the call to be answered when you slide your phone open. Otherwise, select **None**.
- **Down:** select **Stop operation** if you want the call to be discontinued when you slide your phone closed. Otherwise, select **Continue operation**.

Extra settings

You can turn the automatic redialing or answering features on or off.

1. To turn a feature on, highlight the feature and press the  key. A check mark displays in front of the option.
2. To turn a feature off, highlight the checked feature and press the  key. The check mark no longer displays.

The following options are available:

- **Auto redial:** when this option is checked, the phone makes up to ten attempts to redial a phone number after an unsuccessful call.

Note: The interval between call attempts varies.

- **Anykey answer:** when this option is checked, you can answer an incoming call by pressing any key, except the  key or the **Reject** soft key. To reject the call, press the  key or the **Reject** soft key. When this option is unchecked, you must press the  key or **Accept** soft key to answer a call.

3. When you have finished changing your settings, press the **Save** soft key to save your settings. Otherwise press the **Cancel** soft key.

Display Settings

In this menu, you can change various settings for the display or backlight.

Wallpaper

This menu allows you to change the background image or the color of the text to be displayed in Idle mode.

The following options are available:

- **Get more wallpaper:** this option takes you to t-zones where you can download wallpapers.
- **Default wallpapers:** allows you to choose from a list of wallpapers included with your phone.
- **My photos:** allows you to choose a photo from My photos folder.
- **My downloads:** allows you to choose a photo from your downloaded images folder.

To change the background image:

1. Scroll through the list by pressing the Navigation keys.
2. When the image you want highlights, press the **Save** soft key if selecting from **Default wallpapers**. Otherwise, press the **Options** soft key. Highlight the **Save** option and press the **Select** soft key or the  key.

Interior display

You can select the color of the menus displayed. There are two different patterns to choose from.

Brightness control

You can adjust the display brightness to see it better in different lighting conditions.

Press the **Left** or **Right** Navigation key or press the **Volume** keys to adjust the brightness. Press the **Save** soft key when you are finished.

Backlight

In this menu, you can select the length of time that the keypad backlight is on and how much longer the display is illuminated before going off.

The **On** setting is how long the keypad backlight is on. You can select 15 seconds, 30 seconds, 1 minute, 3 minutes, or 10 minutes.

The **Dim** option is how much longer after the keypad backlight goes off that the display remains lit. You can select Off, 5 seconds, 15 seconds, 30 seconds, 1 minute or 3 minutes.

For example, if you set **On** for 30 seconds and **Dim** for 5 seconds, after 30 seconds the backlight on the keys would turn off and 5 seconds later the display light would turn off.

Press the **Left** or **Right** Navigation key to adjust the settings.

Dialing display

This menu allows you to select the size and color of your dialing font. You can also set your background color.

To change the size of the font:

1. Highlight the **Font size** option and press the **Select** soft key or the **OK** key.
2. Use the **Left** or **Right** key to select between Large, Medium, or Small.
3. Press the **Save** soft key or the **OK** key to save your change. Otherwise, press the **Cancel** soft key.

To change the color of the font:

1. Highlight the **Font color** option and press the **Select** soft key or the **OK** key.
2. Use the **Left** or **Right** key to select either Basic (black), Rainbow, Monochrome, or Gradation.
3. If you select **Monochrome** or **Gradation**, use the **Down** key to highlight the color selections, then use the **Left** or **Right** key to select between 10 different colors.
4. Press the **Save** soft key or the **OK** key to save your change. Otherwise, press the **Cancel** soft key.

To change the background color:

1. Highlight the **Background color** option and press the **Select** soft key or the **OK** key.
2. Use the **Left** or **Right** key to select between 10 different colors or None.
3. Press the **Save** soft key or the **OK** key to save your change. Otherwise, press the **Cancel** soft key.

Calendar

This menu allows you to set a calendar to display over the top of your wallpaper in Idle mode. Choose between **On** or **Off**. The Calendar is set to **Off** by default.

Show caller information

By turning this option on, when you miss a call, caller information such as name will be displayed on your display when your missed calls are listed.

Sound Settings

You can customize various sound settings for your phone.

Incoming call

Get more mega tones

Using the **Get more mega tones** option, you can access the web site preset by T-Mobile and download new sounds.

Get More HiFi Ringers

Using the **Get More HiFi Ringers** option, you can access the web site preset by T-Mobile and download new HiFi Ringers.

Ring tone

This menu allows you to select a ring melody. Highlight **Ring tone** and press the **OK** key. Use the **Up** or **Down** key to highlight a ring tone. Press the **Select** soft key or press the **OK** key.

Volume

This menu allows you to adjust the ring volume to one of 5 levels.

Use the **Right** or **Left** key to increase or decrease the volume.

Alert type

This menu allows you to specify how you are to be informed of incoming calls. Use the **Right** or **Left** key to select a ring tone.

The following options are available:

- **Melody:** the phone rings using the ring melody selected in the Ringtone menu.
- **Vibration:** the phone vibrates but does not ring.
- **Vibration then melody:** the phone vibrates 3 times and then starts ringing.

Keypad tone

This menu allows you to select the key tone and volume that the phone sounds when you press a key.

Use the **Right** or **Left** key to make your selections.

To turn off the sound, select **Off**.

Message tone

This menu allows you to set up the ringer for incoming messages and email. You can set the Tone, Alert type, and Repetition.

Use the **Right** or **Left** key to make your selections.

Power on/off

This menu allows you to select the melody that the phone sounds when it is switched on and off. You can choose between 2 tones.

To turn off the sound, select **Off**.

Slide tone

This menu allows you to select the melody that the phone sounds when you slide open or close your phone. You can choose between 4 tones.

To turn off the sound, select **Off**.

Silent mode

This menu allows you to select whether or not your phone will vibrate while in quiet mode. You may choose between **Vibration** and **Mute**.

Extra tones

You can customize additional tones for the phone.

1. To turn a given tone on, press the  key. A check mark displays in front of the option.
2. To turn a given tone off, press the  key. The check mark no longer displays in front of the option.

The following options are available:

- **Indicative tones:** generates a tone whenever a pop-up window appears on the screen.
- **Minute minder:** sets whether or not the phone beeps every minute during an outgoing call to keep you informed of the length of your call.
- **Connection tone:** sets whether or not the phone beeps when your call is connected to the system.
- **Alerts on call:** sets whether or not you receive tones when a message arrives while you are on a call.

Network Services Settings

Call forwarding

This network service enables incoming calls to be rerouted to the number that you specify.

Example: You may wish to forward your business calls to a colleague while you are on holiday.

To set your call forwarding options:

1. Select a call forwarding option by pressing the **Up** or **Down** Navigation key and then press the **Select** soft key or the **OK** key.

The following options are available:

- **Forward always:** all calls are forwarded.
- **Busy:** calls are forwarded when your phone is busy.
- **No reply:** calls are forwarded when your phone is not answered.
- **Unreachable:** calls are forwarded when you are not in an area covered by your service provider or when your phone is switched off.
- **Cancel all:** all call forwarding options are canceled.

2. Select the type of calls, **Voice calls** or **Data calls**, by pressing the **Up** or **Down** Navigation key, and then press the **Select** soft key or the **OK** key.

The current status displays. If the option has already been set, the number to which the calls are forwarded displays.

3. To activate call forwarding, select **IP Activated** by using the **Left** or **Right** key.

4. To deactivate call forwarding, select **Deactivate** by using the **Left** or **Right** key.
5. Enter the number to which the calls are to be forwarded in the **Forward to** text box and press the **Select** soft key or the **OK** key.
To enter an international code, press and hold the **0+** key until the **+** sign displays.

6. When you select **Unreachable** in step 1, select the length of time the network waits for before forwarding a call.

The phone sends your settings to the network and the network's acknowledgement displays.

Call barring (SIM Dependent)

Call Barring allows you to restrict specific types of incoming and outgoing calls for your phone. This is useful if you allow someone to use your phone for a short period of time.

Call waiting

This network service informs you when someone is trying to reach you during another call.

You can specify individual call waiting options for voice calls and/or data calls.

To set your call waiting options:

1. Select the type of calls, **Voice calls** or **Data calls**, to which the call waiting option is to be applied by pressing the **Up** or **Down** Navigation key and then press the **Select** soft key or the **OK** key.

The screen informs you whether call waiting is activated or deactivated.

2. Highlight **IP Activated** or **Deactivate** and press the **Select** soft key or the **OK** key.
3. Call waiting will then be activated or deactivated.
4. Select the **Cancel all** option to deactivate Call waiting on all voice and data calls.

Network selection

The Network Selection feature enables you to automatically or manually select the network used when roaming outside of your home area.

Note: You can select a network other than your home network only if there is a valid roaming agreement between the two.

To change Network Selection mode:

1. Highlight the **Search now** option and press the **Select** soft key or the **OK** key.
2. Press the **Up** or **Down** Navigation key until the network you want highlights and then press the **Select** soft key or the **OK** key.

The phone will scan for that network and you will be connected.

To change you Default setup:

1. Highlight the **Default setup** option and press the **Select** soft key or the **OK** key.
2. Highlight either the **Automatic** or **Manual** option and press the **Select** soft key or the **OK** key.

If you select **Automatic**, you are connected to the first available network when roaming.

3. If you select **Manual**, press the **Up** or **Down** Navigation key until the network you want highlights and then press the **Select** soft key or the  key.

The phone will scan for that network and you will be connected.

Caller ID

You can prevent your phone number from being displayed on the phone of the person being called.

Note: Some networks do not allow you to change this setting.

The following options are available:

- **Default:** the default setting provided by the network is used.
- **Hide number:** your number does not display on the other person's phone.
- **Send number:** your number is sent each time you make a call.

Security Settings

The Security feature enables you to restrict the use of your phone by others and to restrict the types of calls.

Various codes and passwords are used to protect the features of your phone.

PIN check

When the PIN Check feature is enabled, you must enter your PIN each time you switch on the phone.

Consequently, any person who does not have your PIN cannot use your phone without your approval.

Note: Before enabling or disabling the PIN Check feature, you must enter your PIN.

The following options are available:

- **Disable:** the phone connects directly to the network when you switch it on.
- **Enable:** you must enter the PIN each time the phone is switched on.

Change PIN

This feature allows you to change your current PIN, provided that the PIN check feature is enabled. You must enter the current PIN before you can specify a new one.

Once you have entered a new PIN, you are asked to confirm it by entering it again.

Phone lock

When the Phone lock feature is enabled, the phone is locked and you must enter the 4- to 8-digit phone password each time the phone is switched on.

The password is preset to “00000000” at the factory. To change the phone password, see “Change password” on page 108.

Once the correct password has been entered, you can use the phone until you switch it off.

The following options are available:

- **Disable:** you are not asked to enter the phone password when you switch on the phone.

- **Enable:** you are required to enter the phone password when you switch on the phone.

Change password

The Change password feature allows you to change your current phone password to a new one. You must enter the current password before you can specify a new one.

The password is preset to “00000000” at the factory. Once you have entered a new password, you are asked to confirm it by entering it again.

Privacy

Using this menu, you can lock your media contents, such as picture messages, Voice messages, Voice memos, images, sounds, and videos. Once you have locked the contents, you must enter the phone’s password to access the associated menus.

1. To select an item to lock, press the **Up** or **Down** Navigation key. To lock all of the contents, select **Phone privacy**.
2. To place a check mark, press the  key.
3. To remove a check mark, press the  key.
4. To lock the marked items, press the **Save** soft key.
5. Enter a password and press the **OK** soft key or the  key.

Note: The password is preset to “00000000” at the factory. To change this password, see “Change password” on page 108.

FDN mode

FDN (Fixed Dial Number) mode, if supported by your SIM card, allows you to restrict your outgoing calls to a limited set of phone numbers.

The following options are available:

- **Disable:** you can call any number.
- **Enable:** you can only call phone numbers stored in Phonebook. You must enter your PIN2. You can obtain your PIN2 from your service provider.

Change PIN2

The Change PIN2 feature allows you to change your current PIN2 to a new one. You must enter the current PIN2 before you can specify a new one. Once you have entered a new PIN2, you are asked to confirm it by entering it again.

Note: Not all SIM cards have a PIN2. If your SIM card does not, this menu does not display.

Memory Status

You can check the amount of the memory being used and the memory remaining for Shared memory, Messages, My files, Calendar, Phonebook, and Games.

The display shows the total space including the used and free space. You can also view how much space is currently occupied by each message box.

You can also check how many names and numbers are stored in Phonebook, in both SIM card and the phone memory. You can also see the capacity of both memories.

In any of the Memory status menus, you can press the **Left** or **Right** navigation keys to scroll through different categories.

Reset Settings

From this menu you can reset your phone and sound settings to the default settings.

The following options are available:

- **All:** Phone, Display, Sound, and WLAN settings will be returned to default values.
- **Phone settings:** only phone settings will be returned to default values.
- **Display settings:** only display settings will be returned to default values.
- **Sound settings:** only sound settings will be returned to default values.
- **WLAN settings:** only WLAN settings will be returned to default values.

To reset your settings:

1. Highlight one of the options and press the  key to place a check mark next to the option.
2. Press the **Reset** soft key.
3. When you see the **Reset settings?** prompt, press the **Yes** soft key.
4. Enter the 4- to 8-digit password and press the **OK** soft key or the  key. You will receive a **Reset** confirmation message.

The password is preset to "00000000." To change this password, see "Change password" on page 108.

Section 9: Fun & Apps

Topics Covered

- My Files
 - Audio Player
 - Voice Recognition
 - Games
 - Image Editor
 - Organizer
-

This section outlines the various applications that are available on your phone.

My Files

My files allows you to manage your sounds, images, videos and music in one convenient location.

Sounds

In this menu, you can view the list of sounds downloaded from the web server or received in multimedia messages. You can set a downloaded sound as the current ring tone.

The following options are available:

Get More MegaTones

Using the **Get More MegaTones** option on the sounds list, you can access the web site preset by T-Mobile and download new sounds.

Get More HiFi Ringers

Using the **Get More HiFi Ringers** option on the sounds list, you can access the web site preset by T-Mobile and download new HiFi Ringers.

My sounds

Highlight an item in the **My sounds** menu and press the **Options** soft key or the  key. The following options are available:

- **Download new:** takes you to t-zones where you can download new sounds.
- **Play:** plays the sound.
- **Send via picture message:** allows you to send the sound via Picture message.
- **Set as:** allows you to set the sound as your Ringtone, a Caller ringtone, or an Alarm tone.

- **Delete:** allows you to delete the sound or delete all sounds.
- **Rename:** allows you to change the name of the sound.
- **Protection:** allows you to lock the sound to protect it from deletion.
- **Properties:** displays the sound name, date, format, length, size, and protection.

Voice list

The Voice list contains your recorded audio messages. Highlight an item in the **Voice list** menu and press the **Options** soft key or the  key. The following options are available:

- **Play:** plays the audio message.
- **Send via picture message:** allows you to send the audio message via Picture message.
- **Set as:** allows you to set the audio message as your ring tone, caller ringtone or alarm tone.
- **Delete:** allows you to delete the audio message or delete all audio messages.
- **Rename:** allows you to change the name of the audio message.
- **Protection:** allows you to lock the audio message to protect it from deletion.
- **Properties:** displays the audio message name, date, format, length, size, and protection.

Images

In this menu, you can view the list of images downloaded from the web server or received in messages. You can set a downloaded image as the current background image.

The following options are available:

Get More Wallpapers

Using the **Get More Wallpapers** option, you can access the web site preset by T-Mobile and download new images.

My Album

This menu provides the ability for you to view the photos you have stored on the t-zone browser. Use the following procedures to access **My Album**.

1. In your t-zone browser, select the **My Albums Menu** link and press the **Select** soft key or the **OK** key.
2. Photos sent to this folder are stored in the **Inbox Album**. Press the **Select** soft key to view the photos.
3. Press the **Back** key to exit t-zones and return to the Idle screen.

My Journal

This menu provides the ability for you to store your photos using the t-zone browser.

My downloads

This menu allows you to access your downloaded images.

Scroll to the image you want to view. By pressing the **Options** soft key you can access the following options:

- **Download new:** takes you to t-zones where you can download new images.
- **View:** displays the image.
- **Send via picture message:** allows you to send the image via Picture message.

- **Set as:** allows you to set the image as Wallpaper or as a Caller ID.
- **Delete:** allows you to delete the selected image or multiple images.
- **Rename:** allows you to change the name of the item.
- **Display mode:** allows you to see your images displayed in a Line view or in Thumbnail view.
- **Slide show:** allows you to see all of your photos in a slide show presentation.
- **Protection:** allows you to lock the image to protect it from deletion.
- **Properties:** displays the image name, date, format, resolution, size, quality, and protection.

My photos

In this menu you can review the photos you've taken. Highlight a photo and press the **Options** soft key to choose from the following options:

- **View:** displays the photo.
- **Send to My Album:** allows you to send the photo to My Album.
- **Send:** allows you to send the image via Picture message.
- **Default destination:** allows you to remove or replace the default destination.
- **Set as:** allows you to set the photo as Wallpaper or as a Caller ID.
- **Edit image:** takes you to the Image editor screen where you can add emoticons or frames to your photos or apply special effects.
- **Delete:** allows you to delete the selected photo or multiple photos.

- **Rename:** allows you to change the name of the photo.
- **Display mode:** allows you to see your images displayed in a Line view or in Thumbnail view.
- **Slide Show:** allows you to see all of your photos in a slide show presentation.
- **Protection:** allows you to lock the image to protect it from deletion.
- **Properties:** displays the image name, date, format, resolution, size, and protection.

Videos

In this menu, you can view a list of videos downloaded from the web server or received in multimedia messages. The following options are available:

Downloaded videos

This menu allows you to access your downloaded video clips.

Scroll to the video you want to view. By pressing the **Options** soft key you can access the following options:

- **Play:** plays the video.
- **Send via picture message:** allows you to send the video via Picture message.
- **Set as caller ID:** allows you to set the video as a Caller ID.
- **Delete:** allows you to delete the selected video or multiple videos.
- **Rename:** allows you to change the name of the video.
- **Display mode:** allows you to see your videos displayed in a Line view or in Thumbnail view.

- **Protection:** allows you to lock the video to protect it from deletion.
- **Properties:** displays the video name, date, format, resolution, size, length, quality, and protection.

My videos

In this menu you can review the photos you've taken. Highlight a video and press the **Options** soft key to choose from the following options:

- **Play:** plays the video.
- **Send via picture message:** allows you to send the video via Picture message.
- **Set as caller ID:** allows you to set the video as a Caller ID.
- **Delete:** allows you to delete the video.
- **Rename:** allows you to change the name of the video.
- **Display mode:** allows you to see your videos displayed in a Line view or in Thumbnail view.
- **Protection:** allows you to lock the video to protect it from deletion.
- **Properties:** displays the video name, date, format, resolution, size, length, quality, and protection.

Music

This option allows you to access your audio files in your **My Music** folder. You can also access other audio files by selecting the **Sonic wellness** option.

Memory Status

You can check the amount of memory being used and memory remaining for images, videos, music, and sounds. Press the **Left** or **Right** keys to scroll between the

memory status of Fun & Apps, Sounds, Images, My '5' icons, Videos, and Music.

Audio Player

The Audio Player can be used to play music files you have loaded from your PC.

Note: The following characters cannot be used in the filename:

/ \ * ? " < > : |

The file name is limited to 47 total characters).

1. In the **Fun & Apps** menu, select **Audio player** and press the **Select** soft key or the  key.
2. Before you select an audio file, press the **Options** soft key to select from the following options:
 - **Add music:** allows you to add music from your Phone.
 - **Open:** allows you to open My playlist or Current playlist.
 - **Settings:** allows you to set these settings; Repeat mode, Shuffle, Equalizer, 3D sound, Visualization, and Volume.
3. After you select an audio file, press the **Options** soft key to select from the following options:
 - **Play:** allows you to listen to the audio file from your phone.
 - **Open:** allows you to open My playlist or Current playlist.
 - **Set as:** allows you to set the audio file as an alarm tone. Audio files with DRM (Digital Rights Management) can also be used as a ringtone and a caller ringtone, while files without DRM can only be used as an alarmtone.
 - **Remove from play list:** removes the audio file from your current playlist.
 - **Settings:** allows you to set these settings; Repeat mode, Shuffle, Equalizer, 3D sound, Visualization, and Volume.

- **Properties:** allows you to view the audio file name, date, format, bitrate, length, size, and protection.
4. Highlight the **Open** option and press the **Select** soft key or the  key.
 5. Highlight the **My playlist** option and press the **Select** soft key or the  key.
 6. Four playlists are shown, each holding up to 30 audio files. Highlight a playlist and press the  key.
 7. Press the **Up** or **Down** navigation keys to highlight the song you want to listen to and press  to play it.
 8. While listening to an audio file, press the **Options** soft key for the following options:
 - **Pause:** allows you to pause the song you are listening to. Press the  to resume the song.
 - **Open:** allows you to open My playlist or Current playlist.
 - **Remove from play list:** removes the audio file from your current playlist.
 - **Settings:** allows you to set these settings; Repeat mode, Shuffle, Equalizer, 3D sound, Visualization, and Volume.
 - **Properties:** allows you to view the audio file name, date, format, bitrate, length, size, and protection.

Voice Recognition

VoiceSignal is advanced speech recognition software that can be used to activate a wide variety of functions on your phone. VoiceSignal software automatically voice activates all contacts for voice dialing and searching, no pre-recording or training needed. Speak phone numbers naturally to dial, and use voice

commands to launch applications and navigate phone menus.

VoiceSignal Options

The following is a list of functions that you can perform using VoiceSignal speech recognition on your phone.

- **Call <Name or #>:** dial by saying either a Name in your Contacts list or a number
- **Send Text<Name>:** send a text message to a number or to someone in your Contacts List.
- **Lookup <Name>:** open the contact record for any name in your Contacts list.
- **Go To <App>:** open any application installed on your device.
- **Check <Item>:** provides details of your coverage, signal strength, and battery level.

Call Digit Dialing

Digit Dial allows you to dial any phone number by simply speaking the digits into the phone. No training is necessary, and Digit Dial is programmed to understand natural speech.

1. In Idle mode, press and hold the  key to launch VoiceSignal.
2. After a brief pause, a list of optional commands appears in the display and the audio prompt “Say a command” plays through the earpiece.
3. To use Digit Dialing, say “Call” and the area code and number that you want to dial at a distance of 3-12 inches from the phone in a natural voice.

4. The number that you said is repeated through the earpiece and your phone dials the number.
5. If VoiceSignal is not sure of the number that you said, a list of possible matches appears in the display.
6. You're asked to confirm the correct number as VoiceSignal displays the results. Say "Yes" or "No" to confirm or reject the number when prompted.

Call Name Dialing

To use Name Dial, you'll need to have entries stored in your Phonebook. See "Section 6: Understanding Your Phonebook" on page 53 for information on creating Phonebook entries.

1. In Idle mode, press and hold the  key to launch VoiceSignal.
2. After a brief pause, a list of optional commands appears in the display and the audio prompt "Say a command" plays through the earpiece.
3. To use Name Dialing, say "Call" and the name of the contact that you want to dial.
4. The name that you said is repeated through the earpiece and your phone dials the number.
5. If VoiceSignal is not sure of the name that you said, a list of possible matches appears in the display.
6. You're asked to confirm the correct number as VoiceSignal displays the results. Say "Yes" or "No" to confirm or reject the number when prompted.

7. The location is repeated through the earpiece and your phone dials the number.

Send Text Message

1. In Idle mode, press and hold the  key to launch VoiceSignal.
2. A list of commands appears in the display and the audio prompt “Say a command” plays through the earpiece.
3. Say “Send Text” at a distance of 3-12 inches from the microphone. “Say the Name or Number” plays through the earpiece.
4. After you say a name or number, you might be prompted, “Did you say?” To confirm a name or number, wait for the beep and then say “Yes.”
5. You can also choose the correct name or number from the choice list using the phone’s arrow keys.
6. The Text Message client is launched. Enter your text message.

Name Lookup

To perform a name lookup, you’ll need to have some entries in your Contacts list.

1. In Idle mode, press and hold the  key to launch VoiceSignal.
2. A list of commands appears in the display and the audio prompt “Say a command” plays through the earpiece.
3. Say “Lookup” at a distance of 3-12 inches from the microphone. “Say the name” plays through the earpiece.

4. Say the name exactly as it is displayed in your Contacts list, first name followed by last name.
5. The contact name appears in the display with other information that you've entered for that contact.

Opening Applications

You can open an application or access a menu on your phone using VoiceSignal.

1. In Idle mode, press and hold the  key to launch VoiceSignal.
2. A list of commands appears in the display and the audio prompt "Say a command" plays through the earpiece.
3. Say "Go To" at a distance of 3-12 inches from the microphone. A list of options displays and a prompt of "Please choose" plays through the earpiece. If the option you desire is not listed, say "Next Menu" to scroll to the next page.
4. The menu option spoken opens.

Checking Phone Status

Use the Check command to see and hear status information from your phone, including its phone number, status, current signal strength, network coverage, and battery level.

To check phone status:

1. In Idle mode, press and hold the  key to launch VoiceSignal.
2. A list of commands appears in the display and the audio prompt "Say a command" plays through the earpiece.

3. Say “Check” at a distance of 3-12 inches from the microphone. A list of options displays and a prompt of “Please choose” plays through the earpiece.
4. The phone status menu option spoken is displayed.

VoiceSignal Settings

You can adjust the settings and preferences for VoiceSignal by opening the Voice Settings menu.

To access the VoiceSignal Settings menu, follow these steps:

1. Press the **Settings** soft key.
2. Use the navigation keys to select the setting you want to change.

The following options are available:

- **Choice Lists:** if VoiceSignal is not absolutely confident that it has correctly identified a name or number, it can display a choice list of up to three possibilities, and prompt you to confirm the correct one. You can control when choice lists appear by changing the Choice Lists setting to the following:
 - **Automatic:** VoiceSignal displays a choice list when it is not confident it has identified the correct choice from among multiple alternatives.
 - **Always On:** when there are multiple alternatives, VoiceSignal always displays a choice list.
 - **Always Off:** VoiceSignal never displays a choice list. Instead, the application picks the best from among the possible choices.
- **Sensitivity:** in VoiceSignal, sensitivity controls the balance between rejecting too much, which means the phone frequently does not recognize names, numbers, or commands, and rejecting too little, which means it frequently recognizes

something even if nothing was said. When VoiceSignal rejects an utterance, it displays a message such as “Please repeat...” or “No match found.” If you frequently experience these messages, you might be able to get better recognition by adjusting the Sensitivity setting toward **Reject Less**. If you frequently experience false activations (VoiceSignal detects a wrong match), you might be able to get better performance by adjusting the Sensitivity setting toward **Reject More**.

- **Digit Dialing:** use the Digit Dialing menu to adapt digit dialing to your voice.
 - **Select Location:** choose between North America or Other.
 - **Adapt Digits:** lets you adapt digits, which can improve voice recognition of phone numbers. Adaptation takes about 60 seconds.
 - **Reset Digits:** erases any digit adaptation you have done and resets digit recognition to the factory default. If you have not adapted digits, this option is grayed out.
- **Sound:** you can customize the VoiceSignal user interface by turning playback on or off for prompts, names, and numbers. You can also change the speed and volume of name playback.
 - **Prompts:** turns playback on or off for prompts such as “Please say a command.”
 - **Digits:** turns playback on or off for digits, for example, when confirming a phone number.
 - **Names:** turns playback on or off for names.
 - **Name Settings:** adjusts the speed and volume of name playback.
 - **Speakerphone:** allows you to enable or disable the speakerphone option when using VoiceSignal.
- **About:** displays information about VoiceSignal including version number, build number, and device number.

Games

You can download MIDlets (Java applications that run on mobile phones) from various sources using t-zones and store them in your phone.

When you access the **Games** menu, the list of default games appears. Once you have downloaded games, they are added to the list.

Note: Java services may not be available, depending on your service provider.

Get more games

You can download more games from the web site preset by your service provider using the **Get more games** option.

Games List

1. Scroll to the MIDlet you want on the Games list and press the  key.
2. The startup screen of the MIDlet will be displayed along with game options. Use the Navigation keys to scroll between options. Press the  key to make a selection.

Note: MIDlet game options will differ depending on the MIDlet you select.

Image Editor

Image Editor allows you to enhance your photos and images by adding special effects, adjusting brightness, contrast and color, rotating or flipping, and adding frames or clip art.

To use the Image Editor, follow these steps:

1. In the **Fun & Apps** menu, select **Image editor** and press the **Select** soft key or the **OK** key.
2. The message **No image loaded** will appear. Press the **Options** soft key.
3. Select the **New image** option and press the **Select** soft key or the **OK** key.
4. To choose an image to edit, select either **My photos** or **Take Photo** and press the **Select** soft key or the **OK** key.
5. After you have selected a photo or taken a new one, press the **Load** soft key. You will be returned to the Image editor screen.
6. Press the **Options** soft key for a list of options you can use to edit your photo.
 - **Send**: allows you to send your image in a picture message.
 - **New image**: select another image from your My photos folder or take another picture with your camera.
 - **Save**: allows you to save your edited image.
 - **Effects**: allows you to apply special effects to your image. Choose between None, Black & White, Negative, Sepia, Blur, Sharp, Sketch, Posterize, or Solarize.
 - **Adjust**: allows you to adjust the brightness, contrast, and color.
 - **Transform**: allows you to rotate or flip your image.
 - **Insert**: allows you to add a frame, emoticons, or clip art to your image.
 - **Set as**: allows you to set your edited image as Wallpaper or Caller ID.

- **Undo:** allows you to undo the last action you performed on your edited image.

Organizer

The Organizer allows you to set alarms, schedule appointments, view the calendar, create To-Do lists, perform simple math calculations, check world time, perform unit conversions, set a timer, and use a stopwatch.

Alarm

This feature allows you to:

- set up to 3 alarms to ring at specified times.
- set the phone to switch on automatically and ring the alarm even if the phone is switched off.

The following options are available:

- **Wake-up call:** the alarm rings to wake you up in the morning.
- **Alarm1:** set the day, time, and tone for this alarm.
- **Alarm2:** set the day, time, and tone for this alarm.
- **Auto power:** alarm rings at the specified time even if the phone is turned off. If the option is set to **Off** and the phone is switched off at the specified time, the alarm does not ring.

To set an alarm:

1. Highlight the alarm you would like to set and press the **Select** soft key or the **OK** key.
2. Highlight the **Alarm** option and press the **Right** key to set Alarm to **On**.
3. Press the **Down** key to highlight the **Alarm time** option. Enter the time you want the Alarm to sound.

4. Press the **Down** key to highlight the **AM/PM** option. Press the **Left** or **Right** key to set to **AM** or **PM**.
5. Press the **Down** key to highlight the Monday-Sunday checkboxes. Press the  key to bring up a list of days.
6. Place a checkmark next to the days you want the alarm to sound. To place or remove a check mark, press the  key. Press the **OK** soft key.
7. Press the **Down** key to highlight the **Alarm tone** option. Press the  key to bring up a list of alarm tones.
8. Press the **Up** or **Down** Navigation key to highlight an alarm tone. Press the **Select** soft key or the  key.
9. Press the **Save** soft key or the  key.
10. Press the  key to return to Idle mode.

Note: Your phone is preset to a 12-hour format. To change the time format, see "Time & Date Settings" on page 94.

11. To stop the alarm when it rings, press any key.

Calendar

With the Calendar feature, you can:

- consult the calendar by month, week, or day.
- set schedules and note anniversaries
- make a To do list.
- write memos to keep track of your schedule.
- set an alarm to act as a reminder, if necessary.
- check your memory status.

When you select the Calendar menu, the following options are available:

Month view

When you select this option, the calendar displays the selected month with today's date highlighted.

At the bottom of the calendar, the following icons are displayed along with the number of entries for each:

-  Schedule items
-  Anniversary events
-  To do items
-  Miscellaneous items

The number of entries next to each icon reflects the number of entries for the selected day on the calendar.

The following options are available when you press the **Options** soft key:

- **View mode:** allows you to select between Day view or Week view of the selected day.
- **Create:** allows you to create a Schedule, Anniversary, Miscellaneous, or To do event.
- **Go to:** allows you to see the Month view with today's date highlighted or a specified date.
- **Delete:** allows you to delete all events for a selected date, or delete all events for preceding dates. You can also delete all events.

Week view

When you select this option, the calendar displays the selected week with today's date and time highlighted.

The following options are available when you press the **Options** soft key:

- **View mode:** allows you to select between Day view or Month view of the selected day.
- **Create:** allows you to create a Schedule, Anniversary, Miscellaneous, or To do event.
- **Go to:** allows you to see the Week view with today's date highlighted or a specified date.
- **Delete:** allows you to delete all events for a selected date, or delete all events for preceding dates. You can also delete all events.

Day view

When you select this option, you are taken to the Day view of the selected day with any events listed. The following options are available when you press the **Options** soft key:

- **Create:** allows you to create a Schedule, Anniversary, Miscellaneous, or To do event.
- **View mode:** allows you to select between Month view or Week view of the selected day.

While in Month view, Week view, or Day view, press the **Options** soft key and select **Create** to see the following options:

Schedule

This option allows you to write memos to a schedule.

1. From Month, Week, or Day View, press the **Options** soft key. Highlight the **Create** option and press the **Select** soft key or the  key.

2. Highlight the **Schedule** option and press the **Select** soft key or the **OK** key.
3. Enter the subject in the **Subject** text box then press the **Down** soft key.
4. Continue to enter other information including Details, Start date, Start time, AM/PM, End date, End time, AM/PM, Location, Alarm, and Alarm tone. Check the **Repeat** box using the **OK** key if you want to repeat the alarm.
5. When you are finished, press the **Save** soft key.
Your information is saved to the Schedule.

Anniversary

This option allows you to record Anniversaries in your calendar. You can also set an alarm to remind you of important anniversaries.

1. From Month, Week, or Day View, press the **Options** soft key. Highlight the **Create** option and press the **Select** soft key or the **OK** key.
2. Highlight the **Anniversary** option and press the **Select** soft key or the **OK** key.
3. Enter the occasion in the **Occasion** text box then press the **Down** soft key.
4. Continue to enter other information including Date, Alarm, Alarm time, AM/PM, and Alarm tone. Check the **Repeat** box using the **OK** key if you want to repeat the anniversary every year.
5. When you are finished, press the **Save** soft key.
Your Anniversary information is saved to the Calendar.

Miscellaneous

This option allows you to record miscellaneous dates or events in your calendar.

1. From Month, Week, or Day View, press the **Options** soft key. Highlight the **Create** option and press the **Select** soft key or the  key.
2. Highlight the **Miscellaneous** option and press the **Select** soft key or the  key.
3. Enter the subject in the **Subject** text box then press the **Down** soft key.
4. Continue to enter other information including Details, Start date, Start time, AM/PM, End date, End time, and AM/PM. If you would like to set an alarm, check the Alarm box and then enter the number of minutes before the date or event that you want the alarm to sound. Then select an Alarm tone.
5. When you are finished, press the **Save** soft key.
Your Miscellaneous information is saved to the Calendar.

To do

This feature allows you to enter a list of tasks to be done.

1. From Month, Week, or Day View, press the **Options** soft key. Highlight the **Create** option and press the **Select** soft key or the  key.
2. Highlight the **To do** option and press the **Select** soft key or the  key.
3. Enter the Item to be done in the **To do** text box then press the **Down** soft key.

4. Continue to enter other information including Start date, Due date, and Priority.
5. When you are finished, press the **Save** soft key.
Your To do list is saved to the Calendar.

Editing the To do List

When you select Day view, the current contents display with a status checkbox and a priority marker.

If the item has been done, a check appears in the checkbox.

High priority items have a red explanation mark, Normal priority items have a blue explanation mark, and Low priority items have a gray explanation mark.

1. To mark an item **Done**, highlight the item and press the **Options** soft key.
2. Highlight the **Done** option and press the **Select** soft key or the  key.
3. The status checkbox next to the To do item will be checked.
4. To edit other fields in the To do item, highlight the item and press the  key.
5. Press the **Options** soft key.
6. Highlight the **Edit** option and press the **Select** soft key or the  key.
7. Edit the items you wish to change.
8. Press the **Save** soft key or the  key.

Calculator

With this feature, you can use the phone as a calculator. The calculator provides the basic arithmetic functions; addition, subtraction, multiplication, and division.

1. Enter the first number using the numeric keys.
2. Enter the operation for your calculation by pressing the following navigation keys:
 - **Left**: subtraction (-)
 - **Right**: addition (+)
 - **Up**: multiplication ($\times$)
 - **Down**: division ($\div$)
3. The Left soft key can be used to insert a decimal point, a left bracket, or a right bracket. Press it once for a decimal point, twice for a left bracket, or three times for a right bracket.
4. Enter the next number.
5. To view the result, press the  key.

Repeat steps 1 to 5 as many times as required.

World Time

This feature allows you to find out what time it is another part of world, using the **Left** and **Right** Navigation keys.

There are two time lines available. You can set the first setting to your home city and then use the second setting to check other city times.

Press the **Options** soft key for the following options:

- **Save**: this allows you to save your world time settings.

- **Set daylight saving time:** use the  key to place a checkmark next to the cities that you want to set daylight saving time. Each city listed represents a time zone.

Unit conversion

The conversion menu provides the following conversion categories:

- Currency
- Length
- Weight
- Volume
- Area
- Temperature

To convert any of the above categories, do the following:

1. Scroll to the conversion feature you wish to use and press the **Select** soft key or the  key.
2. Enter the quantity you want converted in the text box.

Note: To include a decimal point, press the  key.

3. Use the **Up**, **Down**, **Left**, and **Right** keys to select the “From” and “To” units of money or measure for the quantity you want converted.
4. As you enter numbers in the first text box, the conversion will be shown in the second text box.

Timer

You can use this menu to set a timer. To enable the Timer, use the following options:

1. Press the **Set** soft key to enter the length of time.
2. Enter the time and press the **OK** soft key.
3. Press the  key to start the timer. Press the  key again to stop the timer.

Stopwatch

This feature allows you to use a stopwatch. Press the  key to start the stopwatch. Press the **Reset** soft key to erase all stopwatch times recorded. Press the  key for the lap time. You can have up to 4 lap times.

Section 9

Section 10: Camera and Camcorder

Topics Covered

- Using the Camera and Camcorder
 - Take and Send
 - Record Video
 - My Photos
 - My Videos
 - My Album
 - My Journal
-

This section explains how to use the camera and camcorder on your phone. You can take photos and video clips using the built-in camera and camcorder.

Using the Camera and Camcorder

Using the camera/camcorder module in your phone, you can take photos or video clips of people or events while on the move. Additionally, you can send photos and video clips to other people in a Picture Messaging message or set a wallpaper or caller ID image.

Note:

Do not take photos or videos of people without their permission.
Do not take photos or videos in places where cameras are not allowed.
Do not take photos or videos in places where you may interfere with another person's privacy.

Take and Send

Your camera produces photos in JPEG format.

Note: When you take a photo in direct sunlight or in bright conditions, shadows may appear on the photo.

1. In Idle mode, press and **Up** navigation key to turn on the camera.

You can also press the **Menu** soft key to access Menu mode. Highlight **Camera** and press the **Select** soft key or press the  key.

2. Highlight **Take and send** and press the **Select** soft key or the  key.

3. Adjust the image by aiming the camera at the subject. Press the **Left** soft key to access the camera options. For details, see "Using Camera Options" on page 141. You can use the keypad to quickly change the camera options.
4. Press the  key or the  key to take the photo. **Send To: My Album?** is displayed. Press the **Yes** soft key if you want to send the photo to your T-Mobile **My Album** service. The phone's default destination is set to **My Album**. The photo is automatically saved in **My Photos** in the phone.

Note: To change the default destination for your pictures, press the **Options** soft key when **Send To: My Album?** appears on the display. Select the **Default destination** option. You can then remove or change your default destination to a phone number, email address, Phonebook, My Album, My Journal, or a Recent log.

5. To use the photo options, press the **Options** soft key.
6. To return to Capture mode, select **Take another**.
7. To return to Idle mode, press the  key.

Using Camera Options

In Capture mode, you can use various options for the camera by pressing the **Left** soft key.

The following options are available:

Record video: switches from camera to camcorder.

Shooting mode: allows you to take a photo in various modes. Once you change the mode, the corresponding

indicator appears at the top right of the display. The following modes are available:

- **Single shot:** allows you to take a photo in the normal mode.
- **Multi shot:** allows you to take a series of action stills. Select the capture speed, High Speed or Normal Speed, and the number of photos the camera will take. When you press the **OK** key, the camera takes photos successively.
- **Mosaic shot:** allows you to take several photos to combine in a mosaic.

Effects: allows you to change the color tone or apply special effects to the photo.

Frames: allows you to select a decorative frame. Select a frame from the list using the Navigation keys and press the **OK** key to save your setting.

Timer: allows you to set a time delay before the camera takes the photo. Select the length of delay you want. When you press the **0** or **OK** key, the camera takes the photo after the specified time has elapsed.

Go to My Photos: takes you to your **My photos** folder.

Settings: allows you to change the image settings. Select Function or Setup.

- **Function**
 - **Size:** allows you to set the image size to either SXGA(1280X1024), Mega(1152X864), SVGA(800X600), VGA(640x480), QVGA(320x240), Mobile(176X220), or Frame(176X132). The selected image size displays on the capture screen.

- **View finder:** allows you to set the view finder to Full screen, Full screen & indicator, Full screen & Guideline, or Standard ratio.
- **Scene programs:** allows you to choose Normal or Night scene.
- **Metering exposure:** allows you to choose between Matrix, Center-weighted, and spot.
- **White balance:** allows you to choose between Auto, Daylight, Incandescent, Fluorescent, Cloudy, and Sunset.
- **ISO:** allows you to set ISO to Auto, 100, 200, or 400. The ISO value is a number indicating the digital camera sensors sensitivity to light. In bright light, set the ISO value lower.
- **Setup**
 - **Shutter sound:** allows you to select a tone for the shutter sound. Choose between 5 tones.
 - **Zoom sound:** allows you to turn zoom sound On or Off.
 - **Brightness sound:** allows you to turn brightness sound On or Off.
 - **Default name:** allows you to change the default name assigned to your photo.

Camera short cuts: shows you how to change options using your keypad in capture mode. The following short cuts are available:



Up and Down keys zoom in and out.



Left and Right keys adjust the image brightness.

- ▲ Up volume key flips the image vertically.
- ▼ Down volume key creates a mirror image.

-  changes from camera to camcorder or camcorder to camera.
-  changes the picture resolution.
-  changes the camera shot mode.
-  changes the color tone or applies a special effect to the photo.
-  selects ISO settings.
-  selects a decorative frame.
-  sets a time delay.
-  takes you to **My photos** menu.
-  changes capture mode to full screen.
-  adjusts the white balance.

Record Video

Your camcorder produces videos in 3GP format.

1. In Idle mode, press and **Up** navigation key to turn on the camera. Press the  key to toggle from camera to camcorder.

You can also press the **Menu** soft key to access Menu mode. Highlight **Camera** and press the **Select** soft key or press the  key.

2. Highlight **Record video** and press the **Select** soft key or the  key.

3. Adjust the image by aiming the camcorder at the subject. Press the **Left** soft key to access the camcorder options. For details, see "Using Camcorder Options" on page 145. You can use the keypad to quickly change the camcorder options.
4. To start recording your video clip, press the  key.
5. To stop the recording, press **Right** soft key. The video clip is automatically saved in the **My videos** folder.
6. To delete the video clip, press the **Left** soft key, highlight **Delete** soft key, and press the **Select** soft key or the  key.
To return to Idle mode, press the  key.
To access camcorder options, press the **Left** soft key.

Using Camcorder Options

In Capture mode, you can use various options for the camcorder by pressing the **Left** soft key.

The following options are available:

Take and send: allows you to take a photo in camera mode.

Effects: allows you to change the color tone or apply special effects to the video clip.

Timer: allows you to set a time delay before the camcorder takes the video clip. Select the length of delay you want. When you press the  key, the camcorder records the video after the specified time has elapsed.

Go to My videos: takes you to your **My videos** folder where you can view your videos.

Settings: allows you to change the recording settings.

- **Recording mode:** allows you to change the size of your video. Select Normal or Limit for Picture message.
- **Size:** allows you to set the image size to either CIF (352x288), QVGA (320x240), QCIF(176x144), or Sub-QCIF(128x96). The selected image size displays on the capture screen.
- **View finder:** allows you to set the view finder to Full screen view, Full screen & indicator, or Standard Ratio.
- **Audio Record:** allows you to be able to record sounds with your video. Set to On or Off.
- **White balance:** allows you to choose between Auto, Daylight, Incandescent, Fluorescent, and Cloudy.
- **Scene programs:** allows you to choose Normal or Night scene.
- **Zoom sound:** allows you to turn zoom sound On or Off.
- **Brightness sound:** allows you to turn brightness sound On or Off.
- **Default name:** allows you to change the default name assigned to your video.

Camcorder short cuts: shows you how to change options using your keypad in capture mode. The following short cuts are available:



Up and Down keys zoom in and out.



Left and Right keys adjust the video brightness.



Up volume key flips the image vertically.



Down volume key creates a mirror image.



changes from camera to camcorder or camcorder to camera.

-  changes the video resolution.
-  changes the shooting mode.
-  changes the color tone or applies a special effect to the video.
-  turns the audio On or Off.
-  changes scene program from Normal to Night scene.
-  sets a time delay.
-  takes you to **My videos** menu.
-  changes capture mode to full screen.
-  adjusts the white balance.

My Photos

1. In Idle mode press the **Menu** soft key to access the Menu mode.
2. Highlight **Camera** and press the **Select** soft key or the  key.
3. Select **My photos** and press the **Select** soft key or the  key.

When you access this menu, your phone displays the photos in Thumbnail mode, which shows them as small images. Use the Navigation keys to scroll through the photos.

4. To view the photos on the full screen, press the  key. To go back to Thumbnail mode, press the **Back** soft key or the  key.

5. You can use the **Left** and **Right** navigation keys to scroll through your photos.

Photo Album Options

In the My photos menu, press the **Options** soft key to use the following options:

- **View:** allows you to view the photo on your display.
- **Send to My Album:** allows you to send the photo to My Album.
- **Send:** allows you to send the photo via Picture message.
- **Default destination:** allows you to remove or edit the default destination.
- **Set as:** allows you to set the photo as your wallpaper or as a Caller ID.
- **Edit image:** allows you to add emoticons or frames to your photos or apply special effects.
- **Delete:** allows you to delete the photo or delete all photos.
- **Rename:** allows you to change the name of the photo.
- **Display mode:** allows you to see your photos displayed in a Line view or in Thumbnail view.
- **Slide show:** allows you to see all of your photos in a slide show presentation.
- **Protection:** allows you to protect the photo from being deleted.
- **Properties:** shows the properties of the photo, such as the file name, file date, file format, image resolution, file size, and protection status.

Deleting a Photo

You can delete photos one by one or all at one time.

1. From the My Photos menu, select the photo you want to

delete and press the **Options** soft key. Highlight the **Delete** option and press the **Select** soft key or the  key.

2. Highlight the **Selected** option and press the **Select** soft key or the  key. Or, highlight **All** to delete all photos.
3. Press the **Yes** soft key to confirm the deletion.
4. When you have finished, press the  key.

My Videos

1. In Idle mode press the **Menu** soft key to access the Menu mode.
2. Highlight **Camera** and press the **Select** soft key or the  key.

Select **My videos** and press the **Select** soft key or the  key.

When you access this menu, your phone displays the video clips in Thumbnail mode, which shows them as small images. Use the Navigation keys to scroll through the video clips.

3. Press the  key to view the video clip. To view the video clip on the full screen, press the  key.

My videos Options

In the **My videos** menu, press the **Options** soft key to use the following options:

- **Play:** allows you to play the video clip on your display.
- **Send via picture message:** allows you to send the video as part of a Picture message.

- **Set as caller ID:** allows you to set the video as a Caller ID.
- **Delete:** allows you to delete the selected video clip or delete all video clips.
- **Rename:** allows you to change the name of the video clip.
- **Display mode:** allows you to see your videos displayed in a Line view or in Thumbnail view.
- **Protection:** allows you to protect the video clip from being deleted.
- **Properties:** shows the properties of the video clip, such as the name, date, format, resolution, size, video length, quality, and protection status.

Deleting a Video Clip

You can delete video clips one by one or all at one time.

1. From the **My videos** menu, use the **Up** or **Down** Navigation key to highlight the video you want to delete and press the **Options** soft key.
2. Highlight the **Delete** Option, then press the **Right** Navigation key.
3. Highlight **Selected** if you only want to delete the video clip that you selected. Highlight **All** if you want to delete all video clips.
4. Press the **Select** soft key or the  key.
5. Press the **Yes** soft key to confirm the deletion.
6. When you have finished, press the  key to return Idle mode.

My Album

This menu provides the ability for you to view the photos you have stored on the t-zone website. Use the following procedures to access **My Album**.

1. In Idle mode press the **Menu** soft key to access the Menu mode.
2. Highlight **Camera** and press the **Select** soft key or the  key.
3. Select **My Album** and press the **Select** soft key or the  key. The browser is launched and the T-Mobile Web page displays.
4. Select the **My Albums Menu** link and press the  key, or press the **Options** soft key and highlight **Select**. Then press the **OK** soft key or the  key.
5. Photos sent to this folder are stored in the **Inbox Album**. Highlight the **Inbox Album** link and press the  key. Highlight a photo and press the  key to view the photos.
6. Press the  key to exit t-zones and return to the Idle screen.

My Journal

This menu provides the ability for you to store your photos using the t-zone website.

Section 11: t-zones

Topics Covered

- t-zones
-

This section outlines the t-zones service on your phone. For more information, contact T-Mobile.

t-zones

Your phone is equipped with a WAP (Wireless Application Protocol) browser to allow you to access and navigate the Wireless Web using your phone.

To access t-zones, follow these steps:

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **t-zones** icon. Press the **Select** soft key or the  key to enter the menu.

The following options are available:

Home

Selecting this menu connects the phone to the network and loads the t-zones homepage. You can also press the  key in Idle mode to launch the t-zones browser.

The content of the t-zones startup homepage depends on your Wireless Web service provider. To scroll through the screen, use the **Up** and **Down** keys.

To go to the startup homepage from any other screen in the t-zones, use the **Home** option. For more information on the t-zones menus, see "Selecting and Using Menu Options" on page 155.

Exiting the t-zones

To exit the browser at any time, simply press the  key.

Navigating the t-zones

1. To scroll through browser items, press the **Up** or **Down** Navigation key.

2. To select browser items, press the  key.
3. To return to the previous page, press the  key.
4. To return to the startup homepage, press the **Menu** soft key and select the **Home** option.

Entering Text in the t-zones

When you are prompted to enter text, the currently active text input mode is indicated as the Left soft key. Press the Left soft key to bring up all of the text entry modes. The following modes are available:

- **abc**: works the same as ABC mode. See "Using ABC Mode" on page 47 for more information.
- **Sym**: works similar to Symbol mode. See "Using Symbol Mode" on page 51 for more information.
- **123**: works similar to Number mode. See "Using Number Mode" on page 51 for more information.
- **word**: works the same as T9 mode. See "Using T9 Mode" on page 49 for more information.

Note: You can change the case of the letter to be entered by pressing the  key.

Selecting and Using Menu Options

Various menus are available when you are using t-zones to navigate the Wireless Web.

To access the browser options menu:

1. Press the **Menu** soft key.
2. Or, highlight the Openwave icon at the top of the page by pressing the **Up** and **Down** keys and press the **Select** soft key or the  key.

Note: The menus may vary, depending on your version of t-zones.

The following options are available:

- **Go to URL:** allows you to manually enter the URL address of a Web page. After entering an address, press the **OK** soft key or  key to go there directly.
- **Favorites:** shows the bookmarks list. You can bookmark the current web page or access previously bookmarked pages.
- **Messages:** allows you to create an SMS message or check your My messages folder.
- **File manager:** allows you to access Sounds, Images, Videos, Music, or check Memory status.
- **Home:** takes you back at any time to the home page of the Wireless Web service provider.
- **Back:** takes you back to the previous web browser screen.
- **Show URL:** displays the URL address of the Web page to which you are currently connected. It also enables you to set the current site as the startup home page.
- **Reload:** reloads the current page.

Favorites

This menu stores up to 10 URL addresses.

To store a URL address:

1. Select an empty location and press the **Select** soft key or the  key.
2. Enter a name for the favorite item in the Name text box and press the **Down** key.
3. Enter the address in the URL text box and press the **Options** soft key.

4. Highlight the **Save** option and press the **Select** soft key or the  key.

Note: For further details about how to enter characters, see "Section 5: Entering Text" on page 45.

After saving favorite items, you can access the following options by selecting the item, then pressing the **Options** soft key:

- **Go:** takes you to the site.
- **Edit:** allows you to edit the address.
- **Delete:** allows you to delete the address or you can delete all addresses.

Or, you can select the favorite item and press the  key. Your browser will take you to the site.

Go to URL

This menu allows you to manually enter the URL address of a web site that you wish to access.

For further details about entering text characters, see "Section 5: Entering Text" on page 45.

Clear Cache

You can clear the information stored in the cache, which is the phone's temporary memory which stores the most recently accessed Web pages.

At the **Sure to clear?** prompt, press the **Yes** soft key to confirm the deletion. Otherwise, press the **No** soft key.

Section 12: WI-FI

Topics Covered

- Introducing Your T-Mobile Wi-Fi Capable Phone
 - Connecting to Wi-Fi for the First Time
 - Using Wi-Fi
 - Connecting to WI-FI Networks
 - Wi-Fi Settings
 - Troubleshooting
-

This section introduces you to T-Mobile Wi-Fi compatibility and provides you with information on Wi-Fi and instructions on how to use this type of connection with your phone.

Introducing Your T-Mobile Wi-Fi Capable Phone

Your phone is capable of connecting to T-Mobile via Wi-Fi (wireless Internet broadband) and GSM (cellular towers). When making voice calls, your phone will seamlessly transfer between Wi-Fi and GSM connections, always using the network with the best signal strength.

Your T-Mobile Wi-Fi compatible phone is capable of the following:

- Connect to Wi-Fi at home

Connect to T-Mobile through Wi-Fi if you have a wireless router set up in your home. See the Get Started Poster (provided with your phone) and the User Guide for your wireless router for more information.

- Connect to Wi-Fi while you're on the go (hotspots)

Connect to public Wi-Fi networks at hotspot locations, such as a T-Mobile HotSpot. Wireless Internet provides wireless Internet access in convenient locations, such as airports, coffeehouses, libraries, and many others.

- Connect to GSM

Connect to the GSM network when Wi-Fi is not available or if you are not interested in connecting to Wi-Fi.

Here's How it Works

Rather than using GSM radio as your phone normally would to connect your phone to cellular towers, your T-Mobile Wi-Fi compatible phone uses UMA (Unlicensed Mobile Access) technology that lets you use a wireless broadband Internet connection for your mobile phone

services. This includes voice calls, mobile browsing, e-mail, Picture Messaging, Text Messaging, and basically any mobile service for which your phone uses a network connection.

UMA technology offers fast, reliable, and affordable connectivity for your life using your mobile phone for virtually all of your communications. UMA connects your mobile phone to your GSM/GPRS services through WLAN (802.11) and allows you to handle calls, send and receive messages, and check your e-mail. This technology allows you to use your mobile phone in all of the ways you normally do. The only difference with using UMA technology is that you are connecting through a wireless broadband Internet connection (Wi-Fi).

What is Wi-Fi?

Wi-Fi, or Wireless Fidelity, is a term that is used generically to refer to any product or service using any type of 802.11 technology. Wi-Fi networks operate in the unlicensed 2.4 and 5 GHz radio bands, with an 11 Mbps (802.11b) or 54 Mbps (802.11a) data rate.

Wi-Fi enabled devices (laptops and PDAs as well as UMA phones) can send and receive data wirelessly from any location equipped with Wi-Fi access. This is accomplished using wireless routers, installed within a Wi-Fi location. A wireless router transmits an RF signal to Wi-Fi enabled devices that are within range of the router. Depending on the particular router, its range is usually about 300 feet. The speed of the transmission is governed by the speed of the pipeline fed into the wireless router.

What This Means to You


When you are not in range of a Wi-Fi connection, your normal cellular network takes over and keeps you connected. Your phone switches automatically from Wi-Fi to cellular whenever it's necessary to maintain your connection, whether your phone is in Idle mode or in the middle of an active call. The switching process is virtually unnoticeable.

Warning: The 911 Emergency Service for your Wi-Fi compatible phone is somewhat more limited than a traditional wireless or landline 911 service (for example, the service will not function during electrical power or broadband outages). Before using this service, you **MUST** provide us with the primary street address where you will use it, and you must furnish us with any address changes. See T-Mobile's Terms and Conditions for other limitations and information.

Connecting to Wi-Fi for the First Time

Important: You must set up your wireless router first before using your phone to connect to Wi-Fi. For T-Mobile routers, run the CD that comes with the router and follow its instructions. If you have a different router, follow its installation procedures and confirm the router is set up properly.

1. Press and hold the  key to power on your phone.
2. Your phone will show a tutorial prompt. Select **Yes** to run the brief tutorial.

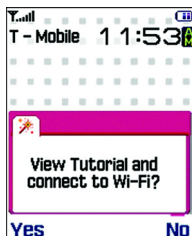

3. At the end of the tutorial, your phone will detect a Wi-Fi network and attempt to connect to it. If your router requires a security key, it will prompt you to enter it. For T-Mobile routers, select Get Security Key, which automatically provides security keys for T-Mobile routers (see "Get Security Key" on page 174 for more information).

If you have a T-Mobile router, select **Yes**. This will acquire the security key or passphrase so that you do not have to manually type it into your phone.

If you do not have a T-Mobile router, select **No**. It will then require you to enter your key or passphrase.

If you are not sure what your key or passphrase (WEP or WPA encryption) is, please refer to your router documentation. (For T-Mobile routers see "Get Security Key" on page 174.

4. Save the network when prompted. After the network is saved to your Saved Networks list, you will automatically connect to that network each time you are within range (see "Saved Networks" on page 169 for additional information).


You have connected to your first Wi-Fi network and can begin making calls using Wi-Fi or your regular T-Mobile GSM network.

To access all of the Wi-Fi features on your phone, go to **Menu > Settings > Wi-Fi**.

If the Tutorial does not appear on your phone, see Connecting to Wi-Fi Networks section in this manual.

Using Wi-Fi

Once set up for Wi-Fi connectivity, your phone will automatically use Wi-Fi, when available, for all your mobile phone services. You can simply use your phone in a normal manner; there is nothing special you need to do. Your phone will switch automatically between Wi-Fi and cellular whenever it's necessary to maintain your connection, whether your phone is idle or on an active call. When connected to Wi-Fi, the signal bars will change and the wireless network name will display in the upper left of the idle screen as shown in the following illustration.

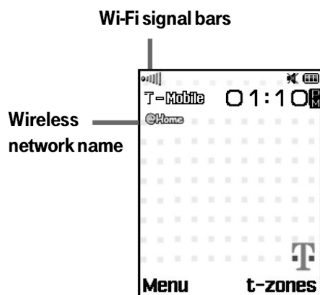

You will always see the signal bars when on a call. They will change correctly when you are on a call to indicate what network you are on. The name of your network will show when on the idle screen as seen here.

Connecting to Wi-Fi Networks

Connecting to Wi-Fi networks with your phone is what allows you to make calls using Wi-Fi. The following features were designed to keep you connected to the networks you want:

- View available networks
- View saved networks that you use often
- Find open networks quickly

Available Networks

The list of available networks displays all the available Wi-Fi networks to which you can connect. The networks are listed in the order of their signal strength, from the strongest signal to the weakest.

Note: If you want to connect to a secure network (marked by a key icon), you will be prompted to provide the security key for that network. If you change the router settings, you can edit the phone's profile with the new setting or you can create a new phone profile.

 signal-strength

 indicates that a network is connected.

 indicates that a network has been saved to your Saved Networks list (see next section for details).


 indicates that a network is protected with a security key (see "Get Security Key" on page 174 for more information).

 checkmark


Note: Set up your wireless router first. For T-Mobile routers, run the CD that comes with the router and follow its instructions. If you have a different router, follow its installation procedures and confirm the router is set up properly.

Connect to Wi-Fi from the Available Networks

1. From the idle screen, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, highlight **Settings** and press the **Select** soft key to enter the menu.
3. Highlight the **Wi-Fi** option and press the **Select** soft key.
4. Highlight the **Available Networks** option and press the **Select** soft key.
5. The phone searches for all available networks and then displays a list of available networks.

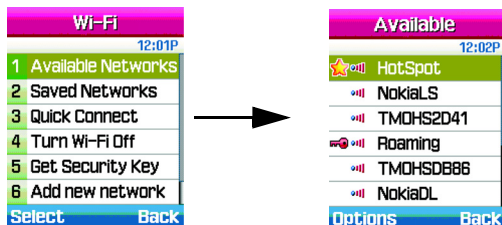

6. Highlight the network to which you want to connect and press the **Options** soft key. Highlight the **Connect** option, and press the **Select** soft key. You will be prompted to save the network.

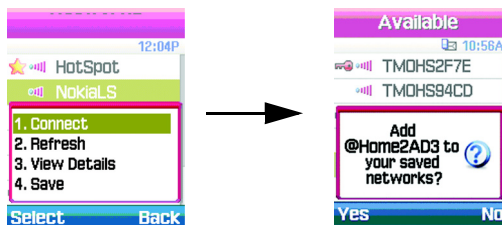

7. When prompted, press the **Yes** soft key to save the network to your **Saved Networks** list.
8. Create a profile name for your network and press the **OK** soft key.

After the network is saved to your **Saved Networks** list, you will automatically connect to that network each time you are within range (see "Saved Networks" on page 169 for additional information).

On the Available Networks list, a checkmark indicates a network to which you are currently connected, a star indicates that a network is saved, and a key indicates a network is protected with a security key.

 key

 signal-strength


 star

 checkmark

Note: Press the **Back** soft key from the Available Networks list to return to the Wi-Fi menu.

Available Networks Options

From the Available Networks menu, press the **Options** soft key to use the following options:

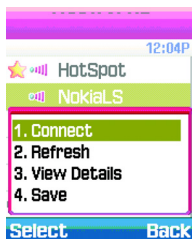


- **Connect/Disconnect:** Connects or disconnects your phone to or from the currently highlighted network. This option changes dynamically, depending on whether or not your phone is currently connected to a Wi-Fi network. Alternatively, you can connect to a network on the **Available Networks** list by highlighting the network and pressing the **Select** soft key.
- **Refresh:** Refreshes the list of available networks to include any recent changes, for example new Wi-Fi networks recently set up or others that have been removed from service.
- **View Details:** Displays the details for the currently highlighted Wi-Fi network.
- **Save:** Saves the selected network to your **Saved Networks List**. This option appears only if the network is not already saved.

Saved Networks

The Saved Networks list displays all of the Wi-Fi networks you have saved on your phone. If you set up your phone for automatic connections, you will automatically be connected to a Wi-Fi network on your **Saved Networks List** each time you are within range of that network.

Important: Networks displayed on the Saved Networks List are networks that are saved and not necessarily those that are in range and available. Editing a saved network's profile name will not affect the ability to connect to that network. However, changing the SSID field or security settings will impact the ability to connect.

If you change the router settings, you can edit the phone's profile with the new setting or you can create a new phone profile.

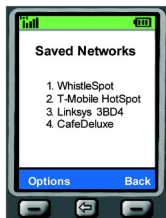

On the **Saved Networks List**, a ✓ indicates a network to which you are currently connected .


Connect to a Specific Saved Network

1. From the idle screen, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to **Settings**. Press the **Select** soft key to enter the menu.
3. Highlight the **Wi-Fi** option and press the **Select** soft key.
4. Highlight the **Saved Networks** option and press the **Select** soft key. The phone displays your **Saved Networks List**.
5. Highlight the network to which you want to connect and press **Options > Connect**. Your phone will connect to the Wi-Fi network if it is available.
6. On the **Saved Networks List**, a checkmark indicates a network to which you are currently connected.

Note: Press the **Back** soft key from the Available Networks list to return to the Wi-Fi menu.

Saved Networks Options

In the Saved Networks menu, press the **Options** soft key to use the following options:

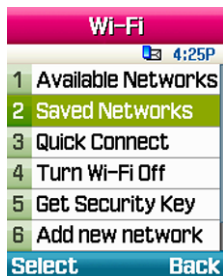

- **Edit Details:** Allows you to edit the highlighted Wi-Fi network's parameters. Note that this option is not available for your T-Mobile-designated Wi-Fi network profiles.
- **Connect/Disconnect:** Connects or disconnects your phone to or from the currently highlighted network. This option changes dynamically, depending on whether or not your phone is currently connected to a Wi-Fi network. Alternatively, you can connect to a network on the Saved Networks list.
- **Delete:** Deletes the selected network from the Saved Networks list. Note that this option is not available for your T-Mobile-designated Wi-Fi network profiles.
- **Forward Settings:** Sends the highlighted network's settings to another user. Note that this option is not available for your T-Mobile designated Wi-Fi network profiles.
- **Priority:** Lets you change the order of the Wi-Fi networks to which your phone will attempt to connect. Connections to networks with a higher priority are tried first.

- **Add New Network:** Adds a new network to your Saved Networks list. This option also allows you to manually add settings for the new network. The submenu items for the Add New menu are as follows:
 - **From Available Networks:** Allows you to add a new network from the list of Available Networks.
 - **Create Manually:** Allows you to manually enter the new network's settings.

Quick Connect

Select the **Quick Connect** option from the Wi-Fi menu to scan for any available preferred or open Wi-Fi network and connect to the network with the best signal strength. This feature allows you to make a quick Wi-Fi connection in instances where you know you are within range of an open Wi-Fi network.

Note: **Quick Connect** will not attempt to connect to closed or secured wireless networks that are not part of the **Saved Networks List**.



Use Quick Connect

- From the Idle screen, press and hold the  key. Your phone connects to the strongest Wi-Fi network within range.


Or..

1. From the Idle screen, press the **Menu** soft key to access Menu mode and proceed through the following steps:
2. Using the Navigation keys, scroll to **Settings**. Press the **Select** soft key to enter the menu.
3. Highlight the **Wi-Fi** option and press the **Select** soft key.
4. Highlight the **Quick Connect** option and press the **Select** soft key.
5. Your phone will connect to the strongest Wi-Fi network available.

Note: If the Quick Connect option is selected when your phone is in Sleep mode (Wi-Fi OFF), the phone automatically switches to Active Mode (Wi-Fi ON) before attempting to make the connection. **During the Quick Connect process, the phone will not display any error messages if it fails to connect to a network.**

Turn Wi-Fi On/Off

Select the **Turn Wi-Fi ON/OFF** option from the Wi-Fi menu to activate/deactivate the Wi-Fi feature. Your phone's default state is Wi-Fi On (Active Mode). Wi-Fi should be left on to take advantage of the seamless transfer between regular cellular networks.

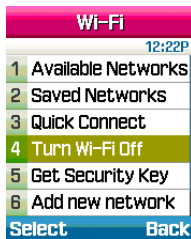

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to **Settings**. Press the **Select** soft key to enter the menu.
3. Highlight the **Wi-Fi** option and press the **Select** soft key.
4. Highlight the **Turn Wi-Fi ON/OFF** option and press the **Select** soft key.

Note: If the Quick Connect option is selected when your phone is in Sleep mode (Wi-Fi OFF), the phone automatically switches to Active Mode (Wi-Fi ON) before attempting to make the connection.

Get Security Key

Get Security Key option can only be used with a T-Mobile wireless router. Select the **Get Security Key** option from the Wi-Fi menu to acquire the security key for a T-Mobile Wi-Fi compatible phone from a T-Mobile wireless router. This feature is about exchanging security information between a T-Mobile router and a T-Mobile Wi-Fi phone.

When used with an open network, the Get Security Key process will create a WPA key on the router. This key is

automatically transferred to the phone. All laptops and devices connected wirelessly will need to be manually configured for the new security. When used on an already secured network, the key configured on the router will be transferred to the phone. For the duration of the process (for example, while the  on the router is blinking), all laptops and devices using the wireless network will lose their connection.

For T-Mobile routers without encryption enabled, following this sequence will turn on WPA and send the security key to your T-Mobile phone. If you already have encryption enabled, the light will be steadily lit on the T-Mobile router, and the current router settings will be sent to the phone.

Note: If you change the router settings, you can edit the phone's profile with the new setting or you can create a new phone profile.



Get Security Key option can only be used with a T-Mobile wireless router. Select the **Get Security Key** option from the Wi-Fi menu to acquire automatic security keys for a T-

Mobile Wi-Fi compatible phone from a T-Mobile wireless router.

Use Get Security Key

1. From the idle screen, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to **Settings**. Press the **Select** soft key to enter the menu.
3. Highlight the **Wi-Fi** option and press the **Select** soft key.
4. Highlight the **Get Security Key** option and press the **Select** soft key.
5. Follow the on-screen prompts to step through the process of acquiring security keys.

This process involves pressing the secure button on the front of the router. You can identify the secure button by the  on, or adjacent to the button. The key / passphrase will be stored with the profile on your Saved Networks list. The phone will try to connect to a network after successfully securing.

You can also enter a security key manually in the phone. If connecting via available networks, the phone will prompt you to enter the key for WEP or passphrase for WPA. You can also follow the steps for manually adding a network seen in a subsequent section of the manual. When entering a security key, if numbers are part of the key, press and hold the desired key to quickly access the number, this bypasses the multi-tap text entry mode.

In order to view the security key, you may need to log into your wireless router's administrative site. If you printed


or saved your settings when setting up your router, you may reference this as well.

Add New Network

By adding a network to your phone, you can automatically connect to the network when you are in range. If it requires a security key or passphrase, you can enter the key and the phone stores the key or passphrase with the profile.

You can add a new network using one of the following methods:

- When connecting to a network from **Available Networks**, select to save when prompted
- Select **Add New Network** from the **Available Networks List**
- Select **Add New Network > Create Manually**
- Select **Saved Networks > Create Manually**

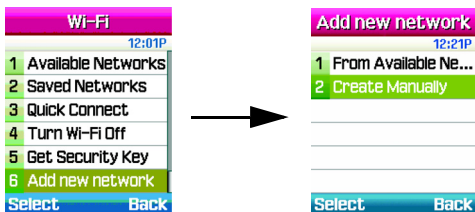

Add From Available Network Option

To add a new network to your Saved Networks list from your list of available networks:

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to **Settings**. Press the **Select** soft key to enter the menu.
3. Highlight the **Wi-Fi** option and press the **Select** soft key.
4. Highlight the **Add New Network** option and press the **Select** soft key.
5. Highlight the **From Available Networks** option and press the **Select** soft key. The phone searches for available networks and displays a list of networks in signal-strength order.
6. Highlight the network you want and press the **Save** soft key. To give the network a new name before saving it, use the **Cancel**  key to delete the name and then type a new network name.
7. Press the  key to save the new network.

Add Manually

To manually add a new network to your Saved Networks list:

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to **Settings**. Press the **Select** soft key to enter the menu.
3. Highlight the **Wi-Fi** option and press the **Select** soft key.
4. Highlight the **Add New Network** option and press the **Select** soft key.

5. Highlight the **Create Manually** option and press the **Select** soft key.
6. Type your desired profile name for the network.
7. Press the **Down** key to highlight the SSID option. Enter the new network's SSID.

The SSID (Service Set Identifier), is the actual name of the wireless network, not the profile name you entered. The profile name is simply a name to help you keep track of which network is which. The SSID is a key piece of information needed to locate and connect to a wireless network.

8. Press the **Down** key to highlight the **Security Type** option. Press the **Left** or **Right** key to set to **KEY NONE**, **WEP 64 KEY**, **WEP 128 KEY**, **WPA KEY**, or **WPA2 KEY**.

Note: The **Security Type** refers to the particular security protocol being used for a specific wireless network. WPA is the current security standard for wireless networks and is recommended by T-Mobile. WEP is an older, and less robust security standard, but it provides wider compatibility.

9. Press the **Down** key to highlight the **Key** option. Type the security key.
10. Press the **Down** key to highlight the **Connection Setting** option. Press the **Left** or **Right** key to set to **Automatically Connect**, **Don't Automatically Connect**, or **Ask Before Connecting**.

11. Press the **Down** key to highlight the **Non-Broadcast SSID** option. Press the **OK** key to place a checkmark in this box if your router does NOT broadcast its SSID. In general, the default setting for most routers will broadcast the SSID.
12. Press the **Down** key to highlight the **Inter AP handovers** option. Press the **OK** key to place a checkmark in this box if you can connect to multiple Wi-Fi access points (AP) and would like your phone to switch automatically (while on a call) when leaving one Wi-Fi zone and entering another nearby Wi-Fi zone.
13. Press the **Down** key to highlight the **IP setting** option. Press the **Left** or **Right** key to set to **Dynamic** or **Static**. Dynamic is the standard and recommended setting.
 - If you select **Static** in this step, press the **Down** key to highlight the **IP address** option. Press the **OK** key to enter the IP address menu. If you are using a T-Mobile Router, copy the information regarding the Subnet Mask, DNS Server, and Gateway from your router into your phone. The IP address you input must be different from the one you use to access the router. If you are connected to a Wi-Fi network that requires Static IP addresses (usually in a corporate environment), please see your System Administrator to get the required information.
14. When finished, press the **Save** soft key.

Troubleshooting

This section provides resources for determining solutions to problems or issues that may occur with your T-Mobile Wi-Fi compatible phone.

T-Mobile Wi-Fi Help

Use the following steps to select the Wi-Fi Help option from the Wi-Fi menu and get specific Wi-Fi assistance.:

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to **Settings**. Press the **Select** soft key to enter the menu.
3. Highlight the **Wi-Fi** option and press the **Select** soft key.
4. Highlight the **Wi-Fi Help** option and press the **Select** soft key.

Understanding Displayed Error Codes

The following table provides information on how to interpret the error messages that, from time to time, may appear on your phone.

Error Code	Displayed Error Text	Meaning	How to fix it
W000	Security key incorrect.	The security on the router does not match the security on the phone..	1. Re-enter the key on the phone to match the key configured on the router. Make sure that the encryption type and security settings match on the router and phone. 2. If on the available network list, the network in question does not have a key next to it, check if MAC filtering is enabled on the wireless router. If it is, check that the phone MAC address is on the Safe List, if not, add it.

Error Code	Displayed Error Text	Meaning	How to fix it
W010	Wi-Fi Connection Failed	The wireless network is no longer in range, or it has a weak signal.	1. The wireless network is not in range or has a weak signal to provide a successful connection. 2. If the attempt to connect is through the Saved Networks list, the network may not be available or the profile saved has different security settings than the available WLAN. 3. If the attempt to connect is through the Available Networks list, then the user has probably walked out of the area of coverage of that particular WLAN.

Error Code	Displayed Error Text	Meaning	How to fix it
W002	Wi-Fi Connection Failed	The phone was unable to get an IP address from the DHCP server in order to establish a connection.	1. If WEP encryption is in use, check that the key configured on the router matches the key entered on the phone. 2. DHCP may be disabled on the wireless router and there is no other DHCP server on the network. Make sure that the option of DHCP is set to enable on the wireless router. 3. DHCP pool may be exhausted - Need to increase the range of the DHCP server. If the number of devices currently connected to the WLAN is greater than the number of IP addresses available, then increase the range. 4. The wireless network the user is trying to connect to is configured for static IP addresses only, check with the system administrator for an IP address assignment. 5. Check if MAC filtering is enabled on the wireless router. If it is, check that the phone MAC address is on the Safe List, if not, add it.

Error Code	Displayed Error Text	Meaning	How to fix it
W003	Wi-Fi Connection Failed	The phone detected an IP Address conflict.	1. Another device on the WLAN network (laptop, desktop or phone) has the same IP address as the phone displaying the error, make sure that no other device is set for static IP addresses. User might want to re-try connecting to the network. 2. If the phone is being configured with a static IP address, then this address is currently being used by another device on the network, try to get another IP address assigned to the phone.
W004	ISP error. DNS server cannot be reached. W004	The phone cannot contact a DNS server	1. Retry connecting to the network. 2. Reboot the T-Mobile wireless router, if applicable.
W005.1	ISP Error. Retry.	The phone is unable to establish network connectivity.	1. Retry connecting to the network. 2. Reboot the T-Mobile wireless router, if applicable.

Error Code	Displayed Error Text	Meaning	How to fix it
W005.2	ISP Error. Retry.	The phone is unable to establish network connectivity.	1. Retry connecting to the network. 2. Reboot the T-Mobile wireless router, if applicable.
W005.3	ISP Error. Retry.	The phone is unable to establish network connectivity.	1. Retry connecting to the network. 2. Reboot the T-Mobile wireless router, if applicable.
W005.4	T-Mobile Network Error. Retry	The phone is unable to establish network connectivity.	1. Retry connecting to the network. 2. Reboot the T-Mobile wireless router, if applicable.
W005.5	T-Mobile Network Error. Retry.	The phone is unable to establish network connectivity.	1. Retry connecting to the network. 2. Reboot the T-Mobile wireless router, if applicable.
W005.6	T-Mobile Network Error. Retry.	The phone is unable to establish network connectivity.	1. Retry connecting to the network. 2. Reboot the T-Mobile wireless router, if applicable.

Error Code	Displayed Error Text	Meaning	How to fix it
W006.1	ISP or T-Mobile Network error.	The phone is unable to establish network connectivity. This could be a problem on the ISP side or the network side.	1. The connection to the WAN port of the wireless router is down: either the cable is unplugged or the DSL/Cable modem (whichever applies) is turned off. This could also be caused by an outage of the DSL/Cable service. 2. Check if MAC filtering is enabled on the wireless router. If it is, check that the phone MAC address is on the Safe List, if not, add it. 3. The network that the user is trying to connect to uses Web Redirection: this means that when trying to connect to the network in question with a laptop, you are required to enter username and password or pay to use the service. The phone cannot connect to such networks. 4. The problem can be caused by network issues. At this point, the user might want to try at a later time.

Error Code	Displayed Error Text	Meaning	How to fix it
W006.2	ISP or T-Mobile Network error.	The phone is unable to establish network connectivity. This could be a problem on the ISP side or the network side.	1. The connection to the WAN port of the wireless router is down: either the cable is unplugged or the DSL/Cable modem (whichever applies) is turned off. This could also be caused by an outage of the DSL/Cable service. 2. Check if MAC filtering is enabled on the wireless router. If it is, check that the phone MAC address is on the Safe List, if not, add it. 3. The network that the user is trying to connect to uses Web Redirection: this means that when trying to connect to the network in question with a laptop, you are required to enter username and password or pay to use the service. The phone cannot connect to such networks. 4. The problem can be caused by network issues. At this point, the user might want to try at a later time.

Error Code	Displayed Error Text	Meaning	How to fix it
W006.3	ISP or T-Mobile Network error.	The phone is unable to establish network connectivity. This could be a problem on the ISP side or the network side.	1. The connection to the WAN port of the wireless router is down: either the cable is unplugged or the DSL/Cable modem (whichever applies) is turned off. This could also be caused by an outage of the DSL/Cable service. 2. Check if MAC filtering is enabled on the wireless router. If it is, check that the phone MAC address is on the Safe List, if not, add it. 3. The network that the user is trying to connect to uses Web Redirection: this means that when trying to connect to the network in question with a laptop, you are required to enter username and password or pay to use the service. The phone cannot connect to such networks. 4. The problem can be caused by network issues. At this point, the user might want to try at a later time.

Error Code	Displayed Error Text	Meaning	How to fix it
W006.4	T-Mobile Network error.	The phone is unable to establish network connectivity	
W006.5	T-Mobile Network error	The phone is unable to establish network connectivity	
W006.6	T-Mobile Network error.	The phone is unable to establish network connectivity	
W006.7	T-Mobile Network error.	The phone is unable to establish network connectivity	
W006.8	T-Mobile Network error.	The phone is unable to establish network connectivity	

Error Code	Displayed Error Text	Meaning	How to fix it
W006.9	T-Mobile Network error.	The phone is unable to establish network connectivity	
J007	Incorrect Security Certificate.		Make sure that the date set on the phone is current and not set to a previous year.
J008.0	Network Busy. Retry.		The network is experiencing congestion, try at a later time.
J008.1	Failed to connect. Retry	Network connectivity failed.	
J008.2	Phone not allowed on T-Mobile network.		The phone is not allowed to use UMA service.
J008.3+	Phone not allowed on T-Mobile network.		
J009.0	Network Busy. Retry		The network is experiencing congestion, try at a later time.
J009.1	Failed to connect. Retry.	Network connectivity failed.	

Error Code	Displayed Error Text	Meaning	How to fix it
J009.2	Phone not allowed on T-Mobile network.		The phone is not allowed to use UMA service.
J009.3+	Phone not allowed on T-Mobile network.		
J0010.0	Network Busy. Retry		The network is experiencing congestion, try at a later time.
J0010.1	Failed to connect. Retry.	Network connectivity failed.	
J0010.2	Phone not allowed on T-Mobile network.		The phone is not allowed to use UMA service.
J0010.3	Phone not allowed on T-Mobile network.		
J0011.0	Network Busy. Retry		The network is experiencing congestion, try at a later time.
J0011.1	Failed to connect. Retry.	Network connectivity failed.	The wireless router through which the phone is trying to use UMA service is not allowed on the network. Trying to access the service through another network should fix the problem.

Error Code	Displayed Error Text	Meaning	How to fix it
J0011.2	Failed to connect. Location not allowed	Network connectivity failed.	Connections from the current location are not allowed to go through. Using the service at a different location should fix the problem.
J0011.3	Phone not allowed on T-Mobile network.		
J0011.4	Failed to connect. Location unknown.	Network connectivity failed.	Connections from the current location are not allowed to go through. Using the service at a different location should fix the problem.
J0011.5	Phone not allowed on T-Mobile network.		The phone is not allowed to use UMA service.
J0011.6	Failed to connect. Retry.	Network connectivity failed.	
J0011.7	Failed to connect. Retry.	Network connectivity failed.	
J0011.8	Failed to connect. Retry.	Network connectivity failed.	

Error Code	Displayed Error Text	Meaning	How to fix it
J0011.9	Failed to connect. Retry.	Network connectivity failed.	
0011.10	Failed to connect. Retry.	Network connectivity failed.	
J0011.11	Failed to connect. Retry.	Network connectivity failed.	
J0011.12	Phone not allowed on T-Mobile network.		
J0012.0	Network Busy. Retry		The network is experiencing congestion, try at a later time.
J0012.1	Failed to connect. Retry.	Network connectivity failed.	The wireless router through which the phone is trying to use UMA service is not allowed on the network. Trying to access the service through another network should fix the problem.
J0012.2	Failed to connect. Location not allowed	Network connectivity failed.	Connections from the current location are not allowed to go through. Using the service at a different location should fix the problem.

Error Code	Displayed Error Text	Meaning	How to fix it
J0012.3	Phone not allowed on T-Mobile network.		
J0012.4	Failed to connect. Location unknown.	Network connectivity failed.	Connections from the current location are not allowed to go through. Using the service at a different location should fix the problem.
J0012.5	Phone not allowed on T-Mobile network.		The phone is not allowed to use UMA service.
J0012.6	Failed to connect. Retry.	Network connectivity failed.	
J0012.7	Failed to connect. Retry.	Network connectivity failed.	
J0012.8	Failed to connect. Retry.	Network connectivity failed.	
J0012.9	Failed to connect. Retry.	Network connectivity failed.	

Error Code	Displayed Error Text	Meaning	How to fix it
J0012.10	Failed to connect. Retry.	Network connectivity failed.	
J0012.11	Failed to connect. Retry.	Network connectivity failed.	
J0012.12 +	Phone not allowed on T-Mobile network.		
J0013.0	Network Busy. Retry		The network is experiencing congestion, try at a later time.
J0013.1	Failed to connect. Retry.	Network connectivity failed.	The wireless router through which the phone is trying to use UMA service is not allowed on the network. Trying to access the service through another network should fix the problem.
J0013.2	Failed to connect. Location not allowed	Network connectivity failed.	Connections from the current location are not allowed to go through. Using the service at a different location should fix the problem.
J0013.3	Phone not allowed on T-Mobile network.		

Error Code	Displayed Error Text	Meaning	How to fix it
J0013.4	Failed to connect. Location unknown.	Network connectivity failed.	Connections from the current location are not allowed to go through. Using the service at a different location should fix the problem.
J0013.5	Phone not allowed on T-Mobile network.		The phone is not allowed to use UMA service.
J0013.6	Failed to connect. Retry.	Network connectivity failed.	
J0013.7	Failed to connect. Retry.	Network connectivity failed.	
J0013.8	Failed to connect. Retry.	Network connectivity failed.	
J0013.9	Failed to connect. Retry.	Network connectivity failed.	
J0013.10	Failed to connect. Retry.	Network connectivity failed.	

Error Code	Displayed Error Text	Meaning	How to fix it
J0013.11	Failed to connect. Retry.	Network connectivity failed.	
J0013.12 +	Phone not allowed on T-Mobile network.		

Section 13: Health and Safety Information

Topics Covered

- Health and Safety Information
 - Consumer Information on Wireless Phones
 - Road Safety
 - Operating Environment
 - Using Your Phone Near Other Electronic Devices
 - Potentially Explosive Environments
 - Emergency Calls
 - FCC Notice and Cautions
 - Other Important Safety Information
 - Product Performance
 - Availability of Various Features/Ring Tones
 - Battery Standby and Talk Time
 - Battery Precautions
 - Care and Maintenance
-

This section outlines the safety precautions associated with using your phone. These safety precautions should be followed to safely use your phone.

Health and Safety Information

Exposure to Radio Frequency (RF) Signals

Certification Information (SAR)

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the exposure limits for radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. government. These FCC exposure limits are derived from the recommendations of two expert organizations, the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure limit set by the FCC for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg). The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each model phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC. For body worn operation, this phone has been tested and meets FCC RF exposure guidelines when used with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

The FCC has granted an Equipment Authorization for this mobile phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. The maximum SAR values for this model phone as reported to the FCC are:

- Head: .24 W/Kg.
- Body-worn: .7 W/Kg.

SAR information on this and other model phones can be viewed on-line at www.fcc.gov/oet/fccid. To find information that pertains to a particular model phone, this site uses the phone FCC ID number which is usually printed somewhere on the case of the phone. Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone. Additional product specific SAR information can also be obtained at www.fcc.gov/cgb/sar.

UL Certified Travel Adapter

The Travel Adapter for this phone has met UL 1310 safety requirements. Please adhere to the following safety instructions per UL guidelines.

FAILURE TO FOLLOW THE INSTRUCTIONS
OUTLINED MAY LEAD TO SERIOUS PERSONAL
INJURY AND POSSIBLE PROPERTY DAMAGE.

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE
INSTRUCTIONS.

DANGER - TO REDUCE THE RISK OF FIRE OR
ELECTRIC SHOCK, CAREFULLY FOLLOW THESE
INSTRUCTIONS.

FOR CONNECTION TO A SUPPLY NOT IN THE U.S.A.,
USE AN ATTACHMENT PLUG ADAPTOR OF THE
PROPER CONFIGURATION FOR THE POWER
OUTLET.

Consumer Information on Wireless Phones

The U.S. Food and Drug Administration (FDA) has published a series of Questions and Answers for consumers relating to radio frequency (RF) exposure from wireless phones. The FDA publication includes the following information:

What kinds of phones are the subject of this update?

The term wireless phone refers here to hand-held wireless phones with built-in antennas, often called "cell," "mobile," or "PCS" phones. These types of wireless phones can expose the user to measurable radio frequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called "cordless phones," which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures well within the FCC's compliance limits.

Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radio frequency energy (RF) in the microwave range

while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radio frequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;

- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones.

FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are

thus not the primary subject of the safety questions discussed in this document.

What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radio frequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phones RF exposures. However, none of the studies can answer questions about long-term

exposures, since the average period of phone use in these studies was around three years.

What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years' follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radio frequency energy (RF).

FDA has been a leading participant in the World Health Organization international Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues.

FDA and Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?

If there is a risk from these products - and at this point we do not know that there is - it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

- If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna.

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radio frequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

Do hands-free kits for wireless phones reduce risks from exposure to RF emissions?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that hands-free kits reduce risks. Hands-free kits can be used with wireless phones for convenience and comfort. These systems reduce the absorption of RF energy in the head because the phone, which is the source of the RF emissions, will not be placed against the head. On the other hand, if the phone is mounted against the waist or other part of the body during use, then that part of the body will absorb more RF energy. Wireless phones marketed in the U.S. are required to meet safety requirements regardless of whether they are used against the head or against the body. Either configuration should result in compliance with the safety limit.

Do wireless phone accessories that claim to shield the head from RF radiation work?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that accessories that claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone cases, while others involve nothing more than a metallic accessory attached to the phone. Studies have shown that these products generally do not work as advertised. Unlike "hand-free" kits, these so-called "shields" may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption. In February 2002, the Federal Trade Commission (FTC) charged two companies

that sold devices that claimed to protect wireless phone users from radiation with making false and unsubstantiated claims. According to FTC, these defendants lacked a reasonable basis to substantiate their claim.

What about wireless phone interference with medical equipment?

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. FDA has tested wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a compatible phone and a compatible hearing aid at the same time. This standard was approved by the IEEE in 2000.

FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct

testing to assess the interference and work to resolve the problem.

Additional information on the safety of RF exposures from various sources can be obtained from the following organizations:

- FCC RF Safety Program:
<http://www.fcc.gov/oet/rfsafety/>
- Environmental Protection Agency (EPA):
<http://www.epa.gov/radiation/>
- Occupational Safety and Health Administration's (OSHA):
<http://www.osha.gov/SLTC/radiofrequencyradiation/index.html>
- National institute for Occupational Safety and Health (NIOSH):
<http://www.cdc.gov/niosh/topics/emf>
- World health Organization (WHO):
<http://www.who.int/peh-emf/>
- International Commission on Non-Ionizing Radiation Protection:
<http://www.icnirp.de>
- National Radiation Protection Board (UK):
<http://www.nrpb.org.uk>
- Updated 4/3/2002: US Food and Drug Administration
<http://www.fda.gov/cellphones>

Road Safety

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a

car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features, such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road.
2. When available, use a hands-free device. If possible, add an additional layer of convenience and safety to your wireless phone with one of the many hands free accessories available today.
3. Position your wireless phone within easy reach. Be able to access your wireless phone without removing your eyes from the road. If you get an incoming call at an inconvenient time, let your voice mail answer it for you.
4. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.
5. Do not take notes or look up phone numbers while driving. Jotting down a "to do" list or flipping through your address book takes attention away from your primary responsibility, driving safely.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.

7. Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies. Remember, it is a free call on your wireless phone!
9. Use your wireless phone to help others in emergencies. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.
10. Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency number.

"The wireless industry reminds you to use your phone safely when driving."

For more information, please call 1-888-901-SAFE, or visit our web-site www.wow-com.com

Provided by the Cellular Telecommunications & Internet Association.

Operating Environment

Remember to follow any special regulations in force in any area and always switch your phone off whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and

for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder if you are using an external antenna).

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

Pacemakers

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker.

These recommendations are consistent with the independent research and recommendations of Wireless Technology Research.

Persons with pacemakers:

- should always keep the phone more than 15 cm (6 inches) from their pacemaker when the phone is switched on.
- should not carry the phone in a breast pocket.
- should use the ear opposite the pacemaker to minimize potential interference.

If you have any reason to suspect that interference is taking place, switch your phone off immediately.

Other Medical Devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch your phone off in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Switch your phone off in any facility where posted notices require you to do so.

Potentially Explosive Environments

Switch your phone off when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch the phone off while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Emergency Calls

This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications (medical emergencies, for example).

Remember, to make or receive any calls the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all

wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

1. If the phone is not on, switch it on.
2. Key in the emergency number for your present location (for example, 911 or other official emergency number). Emergency numbers vary by location.
3. Press the  key.

If certain features are in use (call barring, for example), you may first need to deactivate those features before you can make an emergency call. Consult this document and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your phone may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.

Restricting Children's access to your Phone

Your phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone or make calls that increase your phone bill.

FCC Notice and Cautions

FCC Notice

The phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can

require you to stop using the phone if such interference cannot be eliminated.

Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Batterymarch Park, Quincy, MA 02269, Attn: Publication Sales Division.

Cautions

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment, and void your authority to operate this equipment. Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

Other Important Safety Information

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.

- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.
- Switch your phone off before boarding an aircraft. The use of wireless phone in aircraft is illegal and may be dangerous to the aircraft's operation.
- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Product Performance

Getting the Most Out of Your Signal Reception

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal.

If you're inside a building, being near a window may give you better reception.

Understanding the Power Save Feature

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. If your phone is active, it periodically rechecks service availability or you can check it yourself by pressing any key.

Anytime the Power Save feature is activated, a message displays on the screen. When a signal is found, your phone returns to standby mode.

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

Maintaining Your Phone's Peak Performance

For the best care of your phone, only authorized personnel should service your phone and accessories. Faulty service may void the warranty.

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- If your phone is equipped with an external antenna, hold the phone with the antenna raised, fully-extended and over your shoulder.
- Do not hold, bend or twist the phone's antenna, if applicable.
- Do not use the phone if the antenna is damaged.
- If your phone is equipped with an internal antenna, obstructing the internal antenna could inhibit call performance.
- Speak directly into the phone's receiver.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery. If it is inoperable, call Customer Care for service.

Availability of Various Features/Ring Tones

Many services and features are network dependent and may require additional subscription and/or usage

charges. Not all features are available for purchase or use in all areas. Downloadable Ring Tones may be available at an additional cost. Other conditions and restrictions may apply. See your service provider for additional information.

Battery Standby and Talk Time

Standby and talk times will vary depending on phone usage patterns and conditions. Battery power consumption depends on factors such as network configuration, signal strength, operating temperature, features selected, frequency of calls, and voice, data, and other application usage patterns.

Battery Precautions

- Avoid dropping the cell phone. Dropping it, especially on a hard surface, can potentially cause damage to the phone and battery. If you suspect damage to the phone or battery, take it to a service center for inspection.
- Never use any charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power; talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- Follow battery usage, storage and charging guidelines found in the user's guide.
- Battery charging time depends on the remaining battery charge and the type of battery and charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.

- If left unused, a fully charged battery will discharge itself over time.
- Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- Do not use incompatible cell phone batteries and chargers. Some Web sites and second-hand dealers, not associated with reputable manufacturers and carriers, might be selling incompatible or even counterfeit batteries and chargers. Consumers should purchase manufacturer or carrier recommended products and accessories. If unsure about whether a replacement battery or charger is compatible, contact the manufacturer of the battery or charger.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and lifetime of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0 °C (32 °F).
- Do not place the phone in areas that may get very hot, such as on or near a cooking surface, cooking appliance, iron, or radiator.
- Do not get your phone or battery wet. Even though they will dry and appear to operate normally, the circuitry could slowly corrode and pose a safety hazard.
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and - terminals of the battery (metal strips on the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.

- Do not permit a battery out of the phone to come in contact with metal objects, such as coins, keys or jewelry.
- Do not crush, puncture or put a high degree of pressure on the battery as this can cause an internal short-circuit, resulting in overheating.
- Dispose of used batteries in accordance with local regulations. In some areas, the disposal of batteries in household or business trash may be prohibited. For safe disposal options for Li-Ion batteries, contact your nearest Samsung authorized service center. Always recycle. Do not dispose of batteries in a fire.

Care and Maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits.
- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.

- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.
- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, a stove or a radiator. The phone may explode when overheated.
- If your phone is equipped with an external antenna, use only the supplied or an approved replacement antenna. Unauthorized antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

Section 14: Warranty Information

Topics Covered

- Standard Limited Warranty
-

Standard Limited Warranty

What is Covered and For How Long? SAMSUNG

TELECOMMUNICATIONS AMERICA, L.P. ("SAMSUNG") warrants to the original purchaser ("Purchaser") that SAMSUNG's Phones and accessories ("Products") are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase and continuing for the following specified period of time after that date:

Phone	1 Year
Batteries	1 Year
Leather Case/ Pouch	90 Days
Holster	90 Days
Other Phone Accessories	1 Year

What is Not Covered? This Limited Warranty is conditioned upon proper use of Product by Purchaser. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abuse, neglect, unusual physical, electrical or electromechanical stress, or modification of any part of Product, including antenna, or cosmetic damage; (b) equipment that has the serial number removed or made illegible; (c) any plastic surfaces or other externally exposed parts that are scratched or damaged due to normal use; (d) malfunctions resulting from the use of Product in conjunction with accessories, products, or

ancillary/peripheral equipment not furnished or approved by SAMSUNG; (e) defects or damage from improper testing, operation, maintenance, installation, or adjustment; (f) installation, maintenance, and service of Product, or (g) Product used or purchased outside the United States or Canada. This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, or (iii) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

What are SAMSUNG's Obligations? During the applicable warranty period, SAMSUNG will repair or replace, at SAMSUNG's sole option, without charge to Purchaser, any defective component part of Product. To obtain service under this Limited Warranty, Purchaser must return Product to an authorized phone service facility in an adequate container for shipping, accompanied by Purchaser's sales receipt or comparable substitute proof of sale showing the date of purchase, the serial number of Product and the sellers' name and address. To obtain assistance on where to deliver the Product, call Samsung Customer Care at 1-888-987-4357. Upon receipt, SAMSUNG will promptly repair or replace the defective Product. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any Product or replace Product with a rebuilt, reconditioned or new Product. Repaired/replaced leather cases, pouches and holsters will be

warranted for a period of ninety (90) days. All other repaired /replaced Product will be warranted for a period equal to the remainder of the original Limited Warranty on the original Product or for 90 days, whichever is longer. All replaced parts, components, boards and equipment shall become the property of SAMSUNG. If SAMSUNG determines that any Product is not covered by this Limited Warranty, Purchaser must pay all parts, shipping, and labor charges for the repair or return of such Product.

WHAT ARE THE LIMITS ON SAMSUNG'S WARRANTY/LIABILITY?
EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED HEREIN, PURCHASER TAKES THE PRODUCT "AS IS," AND SAMSUNG MAKES NO WARRANTY OR REPRESENTATION AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO:

- THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE;
- WARRANTIES OF TITLE OR NON-INFRINGEMENT;
- DESIGN, CONDITION, QUALITY, OR PERFORMANCE OF THE PRODUCT;
- THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR
- COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO.

NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN

EXPRESS WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. ALL IMPLIED WARRANTIES AND CONDITIONS THAT MAY ARISE BY OPERATION OF LAW, INCLUDING IF APPLICABLE THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO THE SAME DURATION OF TIME AS THE EXPRESS WRITTEN WARRANTY STATED HEREIN. SOME STATES/PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE, USE, OR MISUSE OF, OR INABILITY TO USE THE PRODUCT OR ARISING DIRECTLY OR INDIRECTLY FROM THE USE OR LOSS OF USE OF THE PRODUCT OR FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL, CONSEQUENTIAL OR SIMILAR DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS, OR FOR DAMAGES ARISING FROM ANY TORT (INCLUDING NEGLIGENCE OR GROSS NEGLIGENCE) OR FAULT COMMITTED BY SAMSUNG, ITS AGENTS OR EMPLOYEES, OR FOR ANY BREACH OF CONTRACT OR FOR ANY CLAIM BROUGHT AGAINST PURCHASER BY ANY OTHER PARTY. SOME STATES/PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS

WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE/PROVINCE TO PROVINCE. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND STATES PURCHASER'S EXCLUSIVE REMEDY. IF ANY PORTION OF THIS LIMITED WARRANTY IS HELD ILLEGAL OR UNENFORCEABLE BY REASON OF ANY LAW, SUCH PARTIAL ILLEGALITY OR UNENFORCEABILITY SHALL NOT AFFECT THE ENFORCEABILITY FOR THE REMAINDER OF THIS LIMITED WARRANTY WHICH PURCHASER ACKNOWLEDGES IS AND WILL ALWAYS BE CONSTRUED TO BE LIMITED BY ITS TERMS OR AS LIMITED AS THE LAW PERMITS. THE PARTIES UNDERSTAND THAT THE PURCHASER MAY USE THIRD-PARTY SOFTWARE OR EQUIPMENT IN CONJUNCTION WITH THE PRODUCT. SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRDPARTY SOFTWARE OR EQUIPMENT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR OTHERWISE, INCLUDING THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT. THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY

OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT LIE SOLELY WITH THE PURCHASER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT, AS THE CASE MAY BE.

This Limited Warranty allocates risk of Product failure between Purchaser and SAMSUNG, and SAMSUNG's Product pricing reflects this allocation of risk and the limitations of liability contained in this Limited Warranty. The agents, employees, distributors, and dealers of SAMSUNG are not authorized to make modifications to this Limited Warranty, or make additional warranties binding on SAMSUNG. Accordingly, additional statements such as dealer advertising or presentation, whether oral or written, do not constitute warranties by SAMSUNG and should not be relied upon.

Samsung Telecommunications America, L.P.

1301 East Lookout Drive

Richardson, Texas 75082

Phone: 1-800-SAMSUNG

Phone: 1-888-987-HELP (4357)

©2006 Samsung Telecommunications America. All rights reserved.

No reproduction in whole or in part allowed without prior written approval. Specifications and availability subject to change without notice.

Index

A

ABC Mode 46

Accessing a Menu Function

38

Alarm 128

Alert Type 101

Audio Player 118

B

Backlight

description 18

settings 98

Battery

charging 8

installing 8

low indicator 10

removing 6

Broadcast Messages 91

C

Calendar 129

Call Barring 104

Call Functions 21

adjusting the call volume 24

answering a call 24

call records 25

correcting the number 22

ending a call 22

making a call 22

making a call from phone-book 23

making a call using Wi-Fi 24

redialing last number 22

silent mode 29

Call Records

all calls 26

call time 28

delete all 28

incoming calls 27

missed calls 26

outgoing calls 27

Call Waiting 34, 104

Caller Group 60

Caller ID 106

Camcorder 139

recording video 144

Camera 139

taking photos 140

Change Password 108

Charging Battery 8

D

Dialing Display 99

Display

backlight 18

icons 17

DTMF 32

E

Entering Text 45

changing text entry mode 46

using ABC mode 47

using number mode 51

using symbol mode 51

using T9 mode 49

F

Fun & Apps 111

Functions and Options 29

G

Games 126

Get More Help 19

Getting Started 5

activating your phone 6

voicemail 11

H

Health and Safety Information 199

HiFi Ringers 100, 112

I

Icon Descriptions 17

Image Editor 126

Instant Messaging 91

International Call 22

K

Keypad Tone 101

L

Low Battery Indicator 10

M

Making a Call

from phonebook 23

MegaTones 100, 112

Menu Navigation 37

menu outline 39

Message Settings 90

Message Tone 101

Messages 69

types of messages 70

Missed Call

viewing 26

Multi-Party Call 34

dropping one participant 36

private conversation 35

setting up 35

Mute 32

My Album 114, 151

My Files 112

My Journal 114, 151

My Name Card 63

My photos

accessing pictures 147

My Videos 149

N

Network Selection 105

Network Services

call barring 104

call forwarding 103

call waiting 104

caller ID 106

network selection 105

Network Services Settings

103

Number Mode 46

O

On/Off Switch, Phone 10

Options

during a call 31

putting a call on hold 31

Organizer 128

alarm 128

calculator 135

calendar 129

stopwatch 137

- timer 136
- to do list 133
- unit conversion 136
- world time 135

Own Number 64

P

Phone

- features of your phone 14
- icons 17
- switching on/off 10
- view of your phone 14

Phone Lock 107

Phone Settings 95

Phonebook

- finding a phonebook entry 57
- finding my phone number 64
- management 65
- searching for a number 33
- understanding your phonebook 53

Phonebook Management 65

Picture Messages 75

PIN

- change 107
- check 106

Privacy 108

Push Message

- settings 91
- viewing in inbox 83

R

Reset Settings 110

Ring Volume 100

S

Security 106

Sentbox 85

Settings 93

- sound settings 100

Shortcuts 38

Silent Mode 29, 102

SIM Card

- installing 6

Soft Keys 29

Speakerphone 32

Speed Dial

- setting up entries 59

Standard Limited Warranty

228

Stopwatch 137

Storing a Number

- phone's memory 54
- SIM card 55

Symbol Mode 46

T

T9 Mode 46

Templates 88

Text Input Mode

- changing 46

Text Messages 72

Time & Date Settings 94

Timer 136

Travel Adapter 8

t-zones 154, 160

- Entering Text 155
- exiting 154

navigating 154

U

Understanding Your Phone 13

V

Voice Mail 11, 88

changing number 12

Voice Messages 70

Voice Notes 70

Voice Recognition 119

VoiceSignal

checking phone status 123

digit dial 120

features 120

menu 119

name dial 121

name lookup 122

open applications 123

send text message 122

settings 124

W

Warranty Information 227

Wi-Fi

Settings 180