



User Guide

KATANA® Eclipse X by SANYO®

www.sprint.com

© 2008 Sprint. Sprint and the logo are trademarks of Sprint. Other marks are the property of their respective owners. SANYO is a registered trademark of SANYO Electric Co., Ltd. and used under license.

Table of Contents

Introduction	<i>.i</i>
Your Phone's Menu	<i>.ii</i>
Section 1: Getting Started	<i>1</i>
1A. Setting Up Service	<i>2</i>
Setting Up Your Phone	<i>2</i>
Activating Your Phone	<i>3</i>
Setting Up Your Voicemail	<i>4</i>
Sprint Account Passwords	<i>4</i>
Getting Help	<i>5</i>
Section 2: Your Phone	<i>7</i>
2A. Phone Basics	<i>8</i>
Your Phone	<i>8</i>
Viewing the Display Screen	<i>11</i>
Features of Your Phone	<i>13</i>
Turning Your Phone On and Off	<i>15</i>
Using Your Phone's Battery and Charger	<i>16</i>
Navigating Through Phone Menus	<i>18</i>

Displaying Your Phone Number	<i>19</i>
Making and Answering Calls	<i>20</i>
Entering Text	<i>29</i>
Using Maps	<i>35</i>
2B. Navigating the Main Screen	<i>36</i>
Getting to Know Sprint One Click	<i>36</i>
Personalizing the Carousel	<i>38</i>
Personalizing the Home Screen	<i>41</i>
2C. Settings	<i>43</i>
Sound Settings	<i>43</i>
Display Settings	<i>47</i>
Location Settings	<i>51</i>
Messaging Settings	<i>52</i>
Airplane Mode	<i>55</i>
TTY Use With Sprint Service	<i>56</i>
Phone Setup Options	<i>57</i>
2D. Security	<i>61</i>
Accessing the Security Menu	<i>61</i>
Using Your Phone's Lock Feature	<i>62</i>
Restricting Calls	<i>63</i>

Using Special Numbers	64
Deleting Phone Content	64
Resetting Phone Content	65
Security Features for Data Services	66
2E. Roaming	68
Understanding Roaming	68
Setting Your Phone's Roam Mode	69
Using Call Guard	70
Using Data Roam Guard	71
2F. History	72
Viewing History	72
History Thread	73
History Details	73
History Menu Options	74
Making a Call From History	74
Saving a Phone Number From History	75
Prepending a Phone Number From History ...	75
Deleting History	76

2G. Contacts	77
About Contacts	77
Creating a New Contacts Entry	77
Finding Contacts Entries	78
Contacts Entry Options	80
Editing a Contacts Entry	81
Secret Contacts Entries	84
Dialing Sprint Services	85
Wireless Backup	85
2H. Calendar and Tools	88
Using Your Phone's Calendar	88
Using Your Phone's Alarm Clock	92
Using Your Phone's Tools	92
2I. Voice Services	94
Using Automatic Speech Recognition (ASR) ..	94
Voice and Call Recording	97
Setting Up Screen Call	100

2J. microSD Card102

Using Your Phone's microSD Card and Adapter	102
File Manager	105
microSD Settings	107
microSD Folders	108
Backing Up Your Contacts Data to the microSD Card	108
Setting Up the Digital Print Order Format	109
Connecting Your Phone to Your Computer	110

2K. Camera112

Taking Photos	112
Recording Videos	118
Storing Photos and Videos	121
Sending Sprint Picture Mail	123
Managing Sprint Picture Mail	125
Printing Photos Directly From Your Phone	127

2L. Bluetooth129

Turning Bluetooth On and Off	129
Using the Bluetooth Menu	130
Using the Bluetooth Settings Menu	132

Bluetooth Profiles	132
Pairing Bluetooth Devices	134
Using the Trusted Devices Options	134
Printing Data via Bluetooth	135
Sending Data via Bluetooth	136

Section 3: Sprint Service137

3A. Sprint Service Features: The Basics ...138

Using Voicemail	138
Using SMS Text Messaging	144
Using SMS Voice Messaging	145
Using Caller ID	146
Responding to Call Waiting	147
Making a Three-Way Call	147
Using Call Forwarding	148

3B. Data Services149

Data Services Applications	149
Getting Started With Data Services	150
Accessing Messaging	154
Downloading Content	157
Exploring the Web	159

Phone as Modem	162
Data Services FAQs	164
3C. Entertainment: TV and Music	165
TV	165
Music – Sprint Music Store	169
Streaming Music	172
Section 4: Safety and Warranty Information	173
4A. Important Safety Information	174
General Precautions	174
Maintaining Safe Use of and Access to Your Phone	175
Using Your Phone With a Hearing Aid Device ..	176
Caring for the Battery	178
Radio Frequency (RF) Energy	179
Owner's Record	181
User Guide Proprietary Notice	181
4B. Manufacturer's Warranty	182
Manufacturer's Warranty	183
Index	186

Introduction

This **UserGuide** introduces you to Sprint® service and all the features of your new phone. It's divided into four sections:

- ◆ **Section 1:** Getting Started
- ◆ **Section 2:** Your Phone
- ◆ **Section 3:** Sprint Service
- ◆ **Section 4:** Safety and Warranty Information

Throughout this guide, you'll find tips that highlight special shortcuts and timely reminders to help you make the most of your new phone and service. The Table of Contents and Index will also help you quickly locate specific information.

You'll get the most out of your phone if you read each section. However, if you'd like to get right to a specific feature, simply locate that section in the Table of Contents and go directly to that page. Follow the instructions in that section, and you'll be ready to use your phone in no time.

User Guide Note

*Because of updates in phone software, this printed guide may not be the most current version for your phone. Visit www.sprint.com and log on to **My Sprint Wireless** to access the most recent version of the user guide.*

WARNING

*Please refer to the **Important Safety Information** section on page 174 to learn about information that will help you safely use your phone. Failure to read and follow the Important Safety Information in this phone guide may result in serious bodily injury, death, or property damage.*

Your Phone's Menu

The following table outlines your phone's list menu structure. For more information about using your phone's menus, see "Navigating Through Phone Menus" on page 18.

1: Web
2: Maps
1: Navigation
2: Family Locator
3: Live Local Search
3: Entertainment
1: Music
2: TV
3: Games
4: History

5: Missed Alerts

6: My Stuff

1: Games

1: Get New

2: My Content Manager

2: Ringers

1: Get New

2: My Content Manager

3: Screen Savers

1: Get New

2: My Content Manager

4: Applications

1: Get New

2: My Content Manager

5: IM & Email

1: Get New

2: My Content Manager

6: Call Tones

7: Photos
1: Camera
Press the right softkey for the following options: 1. Picture Mode 2. Zoom 3. Self-Timer 4. Fun Tools 5. Image Controls 6. Camera Settings 7. Review Media 8. Camcorder Mode 9. Key Guidance 0. User Settings
2: Camcorder
Press the right softkey for the following options: 1. Video Mode 2. Zoom 3. Self-Timer 4. Color Tone 5. Image Controls 6. Video Settings 7. Review Media 8. Camera Mode 9. Key Guidance 0. User Settings
3: Picture Mail
4: My Albums
1: In Phone 2: In microSD 3: Online Albums
5: PictBridge
6: Order Prints

7: Settings & Info
1: Auto Save to 2: Location 3: Status Bar 4: Slideshow Intvl 5: Account Info 6: Help
8: Messages
1: Voicemail
1: Call Voicemail 2: Call: Speaker On 3: Details 4: Reset Indicator
2: Send Message
1: Text Message 2: Picture Mail 3: VoiceSMS 4: Email
3: Text
4: Picture Mail
5: Email
6: IM
7: VoiceSMS
8: Chat & Dating

9: Settings	
1: Notification	
1: Msgs and Icon	2: Icon Only
2: Msg Reminder	
1: Text Message	2: Picture Mail
3: Voicemail	3: VoiceSMS
5: Email	
3: Callback Number	
1: None	2: My Phone#
3: Other	
4: Auto-Delete	
5: Signature	
6: Preset Msgs	
7: Drafts Alert	
8: VoiceSMS Options	
1: Speakerphone	2: From Name
3: Connect. Alert	

9: Contacts	
0: Tools	
1: Alarm Clock	
2: Assigned Media	
3: Bluetooth	
1: Handsfree Pairing	2: Send Contact
3: Print Picture	4: Add to Trusted
5: Trusted List	6: Send Biz Card
7: More...	
4: Calculator	
5: Calendar	
6: Countdown	
7: File Manager	
1: Phone	2: microSD
3: microSD Options	
8: Mass Storage	
9: Stopwatch	
0: Update Firmware	

*: Voice Memo	
1: Record 3: Screen Call	2: List
#: World Clock	
*: Settings	
1: Display	
1: Main Screen	
1: Screensaver 3: Backlight 5: Sleep Mode	2: Animation 4: Input Font
2: OuterScreen	
1: Screensaver 3: Backlight 5: Foreground 7: Next Schedule	2: Animation 4: Background 6: Sleep Mode
3: Contrast	
4: Font Size	
1: Main Screen	2: Outer Screen
5: Keypad Light	

6: Language	
1: English	2: Español
7: Pwr Save Mode	
8: Return to Idle	
1: Automatically	2: End Key
2: Sounds	
1: Volume	
1: Ringer 3: Headset 5: Applications 7: Advanced...	2: Earpiece 4: Speakerphone 6: StartUp/PwrOff
2: RingerType	
1: Incoming Calls 3: Alarm 5: Power Off	2: Messages 4: Power On 6: Schedule
3: Alerts	
1: Beep Each Minute 3: Connect 5: Messages	2: Out of Service 4: Signal Fade/Call Drop

4: Keytones
1: Tone Length 2: Tone Volume 3: Tone Type
5: Voice Guide
6: Vibrate Type
1: Incoming Calls 2: Messages 3: Alarm 4: Schedule
3: Illumination
1: On/Off
2: Incoming Calls
3: Messages
4: Calendar/Alarm
5: Active Call
6: Playing Music
7: Numeric Keypad
8: Demo
4: Bluetooth
1: On/Off
2: Visibility

3: Device Name
4: Device Info
5: Trusted List
6: Voice Priority
7: Exchange Folder
5: Messages
1: Notification
1: Msgs and Icon 2: Icon Only
2: Msg Reminder
1: Text Message 2: Picture Mail 3: Voicemail 4: VoiceSMS 5: Email
3: Callback Number
1: None 2: My Phone# 3: Other
4: Auto-Delete
5: Signature
6: Preset Msgs
7: Drafts Alert

8: VoiceSMS Options	
1: Speakerphone	2: From Name
3: Connect. Alert	
6: Text Entry	
1: Auto-Capital	2: Auto-Space
3: Input Language	4: My Words
5: T9 Settings	6: Default Input
7: Add Word	8: Auto-Complete
9: Help	
7: Phone Info	
1: Phone#/UserID	2: Icon Glossary
3: Version	4: Advanced
5: My Account	
8: More...	
1: Accessibility	
1: TTY	2: Input Font
3: Font Size	4: Vibrate Type
2: Airplane Mode	
3: Browser	
1: Bookmarks	2: Delete Web Cache
3: Delete Web Cookies	4: Edit Home Page

4: Call Setup	
1: Call Answer	2: Auto-Answer
3: Abbrev. Dial	4: Contacts Match
5: Contacts	
1: Speed Numbers	2: Show Secret/Hide Secret
3: My Name Card	4: Services
5: Wireless Backup	
6: Data	
1: Enable/Disable Data	2: Net Guard
3: Update Profile	
7: Headset Mode	
1: Turbo Button	2: Earpiece
3: Ringer Sound	
8: Location	
9: Power On to Alert	
0: Restrict and Lock	
1: Voice	2: Data
3: Camera/Pictures	4: Lock My Phone
*: Roaming	
1: Set Mode	2: Call Guard
3: Data Roaming	

#: Security	
1: Lock My Phone 3: Special Numbers 5: Delete/Reset	2: Change Code 4: Edit Contacts List
: Key Guard	
: Wireless Backup	
(Before subscribing) 1: Subscribe (After subscribing) 1: Alert 3: Troubleshoot 5: Unsubscribe	2: Learn More 2: View Status 4: Learn More
#: Get Stuff	
In Use Menu	
<i>Press Options (right softkey) to display the following options:</i>	
1. Three-Way Call 3. Contacts 5: Phone Info	2. Save/Contact Details 4. Call Memo Rec. 6: Main Menu

Section 1
Getting Started



Section 1A

Setting Up Service

- ◆ *Setting Up Your Phone (page 2)*
- ◆ *Activating Your Phone (page 3)*
- ◆ *Setting Up Your Voicemail (page 4)*
- ◆ *Sprint Account Passwords (page 4)*
- ◆ *Getting Help (page 5)*

Setting up service on your new phone is quick and easy. This section walks you through the necessary steps to set up and turn on your phone, set up your voicemail, establish passwords, and contact Sprint for assistance with your Sprint service.

Setting Up Your Phone

1. Install the battery.
 - Press the release button and remove the battery cover from the back of the phone.
 - Insert the battery into the opening, making sure the connectors align. Gently press down to secure the battery.
 - Replace the battery cover and slide it upward until you hear a click.
2. Press **END** to turn the phone on.
 - If your phone is activated, it will turn on, search for Sprint service, and enter standby mode.
 - If your phone is not yet activated, see “Activating Your Phone” on page 3 for more information.
3. Make your first call.
 - Use your keypad to enter a phone number.
 - Press **TALK**.

Note *Your phone's battery should have enough charge for your phone to turn on and find a signal, set up your voicemail, and make a call. You should fully charge your battery as soon as possible. See "Charging the Battery" on page 17 for details.*

Activating Your Phone

There are three basic scenarios for activating your new phone:

- A. You purchased your phone at a Sprint Store.** It is probably activated and ready to use.
- B. You received your phone in the mail, and it is a new Sprint account or a new phone number.** Your phone is designed to activate automatically when you first turn it on. To confirm your activation, make a phone call.
- C. You received your phone in the mail and you are switching numbers from a previous Sprint phone to the new phone.** You need to contact Sprint to activate the number on your new phone. There are two options for activation in this instance:

- From your computer's Web browser, go to www.sprint.com/activate and complete the onscreen instructions to activate your phone.
- Contact Sprint Customer Service at 1-888-211-4727 for assistance with activation.

When you have finished, make a phone call to confirm your activation.

Tip *Do not press END while the phone is being activated. Pressing END cancels the activation process.*

Note *If you are having difficulty with activation, contact Sprint Customer Service by dialing 1-888-211-4727 from any other phone.*

Setting Up Your Voicemail

All unanswered calls to your phone are automatically transferred to your voicemail, even if your phone is in use or turned off. Therefore, Sprint recommends that you set up your voicemail and personal greeting as soon as your phone is activated.

1. From standby mode, press and hold **[1☒]**.
2. Follow the system prompts to:
 - Create your passcode.
 - Record your name announcement.
 - Record your greeting.
 - Choose whether to activate One-Touch Message Access (a feature that lets you access messages simply by pressing and holding **[1☒]**, bypassing the need for you to enter your passcode).

Note

Voicemail Passcode

If you are concerned about unauthorized access to your voicemail account, Sprint recommends that you enable your voicemail passcode (do not activate One-Touch Message Access).

For more information about using your voicemail, see “Using Voicemail” on page 138.

Sprint Account Passwords

As a Sprint customer, you enjoy unlimited access to your personal account information, your voicemail account, and your data services account. To ensure that no one else has access to your information, you will need to create passwords to protect your privacy.

Account User Name and Password

If you are the account owner, you will create an account user name and password when you sign on to www.sprint.com. (Click ***Need to register for access?*** to get started.) If you are not the account owner (if someone else receives the bill for your Sprint service), you can get a sub-account password at www.sprint.com.

Voicemail Password

You will create your voicemail password (or passcode) when you set up your voicemail. See “Setting Up Your Voicemail” on page 4 for more information on your voicemail password.

Data Services Password

With your Sprint phone, you may elect to set up an optional data services password to control data (Web) access and authorize Premium Service purchases.

For more information, or to change your passwords, sign on to www.sprint.com.

Getting Help

Managing Your Account

Online: www.sprint.com

- Access your account information.
- Check your minutes used (depending on your Sprint service plan).
- View and pay your bill.
- Enroll in Sprint online billing and automatic payment.
- Purchase accessories.
- Shop for the latest Sprint phones.
- View available Sprint service plans and options.
- Learn more about data services and other great products like Sprint Picture Mail, games, ringtones, screen savers, and more.

From Your Sprint Phone

- Press **[★ SHFT] [4 GHI] [TALK]** to check minute usage and account balance.
- Press **[★ SHFT] [3 DEF] [TALK]** to make a payment.
- Press **[★ SHFT] [2 ABC] [TALK]** to access a summary of your Sprint service plan or get answers to other questions.

From Any Other Phone

- Sprint Customer Service: **1-888-211-4727**.
- Business Customer Service: **1-800-927-2199**.

Sprint 411

Sprint 411 gives you access to a variety of services and information through your phone, including residential, business, and government listings; movie listings or showtimes; driving directions, restaurant reservations, and major local event information. You can get up to three pieces of information per call, and the operator can automatically connect your call at no additional charge.

There is a per-call charge to use Sprint 411, and you will be billed for airtime.

To call Sprint 411:

▶ Press **[4 GHI] [1] [1] [TALK]**.

Sprint Operator Services

Sprint Operator Services provides assistance when placing collect calls or when placing calls billed to a local telephone calling card or third party.

To access Sprint Operator Services:

▶ Press **[0+NEXT] [TALK]**.

For more information or to see the latest in products and services, visit us online at www.sprint.com.

Section 2
Your Phone




Section 2A

Phone Basics

- ◆ *Your Phone (page 8)*
- ◆ *Viewing the Display Screen (page 11)*
- ◆ *Features of Your Phone (page 13)*
- ◆ *Turning Your Phone On and Off (page 15)*
- ◆ *Using Your Phone's Battery and Charger (page 16)*
- ◆ *Navigating Through Phone Menus (page 18)*
- ◆ *Displaying Your Phone Number (page 19)*
- ◆ *Making and Answering Calls (page 20)*
- ◆ *Entering Text (page 29)*
- ◆ *Using Maps (page 35)*

Your phone is packed with features that simplify your life and expand your ability to stay connected to the people and information that are important to you. This section will guide you through the basic functions and calling features of your phone.

Your Phone

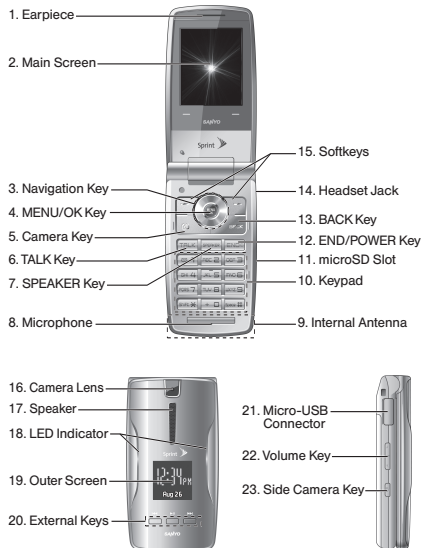

Key Functions

1. **Earpiece** lets you hear the caller and automated prompts.
2. **Main Screen** displays all the information needed to operate your phone, such as the call status, the Contacts list, the date and time, and the signal and battery strength.
3. **Navigation Key** scrolls through the phone's menu options.
4. **MENU/OK Key** lets you access the phone's menus and selects the highlighted choice when navigating through a menu.
5. **Camera Key** lets you access the Photos menu and take pictures and videos.
6. **TALK Key** allows you to place or receive calls, answer Call Waiting, use Three-Way Calling, or activate Voice Dial.
7. **SPEAKER Key** lets you place or receive calls in speakerphone mode or turn the speakerphone on and off during a call.
8. **Microphone** allows other callers to hear you clearly when you are speaking to them.
9. **Internal Antenna** facilitates reception and transmission. To maximize performance, do not obstruct the internal antenna while using the phone. (See page 20.)
10. **Keypad** lets you enter numbers, letters, and characters and navigate within menus. You can use the numeric keypad for speed dialing. (See "Using Speed Dialing" on page 29.)
11. **microSD Slot** lets you use the included microSD card to expand the memory of your phone. (See "Using the microSD Card" on page 102.)

Note

Your phone comes with the microSD card preinstalled.

12. **END/POWER Key** lets you turn the phone on or off, end a call, or return to standby mode. While in the main menu, it returns the phone to standby mode and cancels your input.

13. **BACK Key** deletes characters from the display in text entry mode. When in a menu, pressing the Back key returns you to the previous menu. This key also allows you to return to the previous screen in a data session.
14. **Headset Jack** allows you to plug in an optional headset for convenient, hands-free conversations. **CAUTION!** Inserting an accessory into the incorrect jack may damage the phone.
15. **Softkeys** let you select softkey actions or menu items corresponding to the bottom left and right lines on the Main Screen.
16. **Camera Lens**, as part of the built-in camera, lets you take pictures and videos.
17. **Speaker** lets you hear the different ringers and sounds. You can mute the ringer when receiving incoming calls by pressing **BACK** or any of the side keys. The speaker also lets you hear the caller's voice in speakerphone mode.
18. **LED Indicator** shows your phone's connection and charging status at a glance.
19. **Outer Screen** lets you monitor the phone's status and see who's calling without opening the phone.
20. **External Keys** allow you to access the Music Store and music stored on your microSD card, as well as navigate through your music while playing a song. (See page 167.)
21. **Micro-USB Connector** allows you to connect a compatible charging cable (included) or USB data cable. **CAUTION!** Inserting an accessory into the incorrect jack may damage the phone.
22. **Volume Key** allows you to adjust the ringer volume in standby mode (with the phone open) or adjust the voice volume during a call. The volume key can also be used to scroll up or down to navigate through the different menu options.
23. **Side Camera Key** lets you activate the camera and video mode and take pictures and videos.

Viewing the Display Screen

The status bar at the top of your phone's display screen provides information about your phone's status and options. This list identifies the symbols you'll see on your phone's status bar:

Tip To view a list of your phone's icons and descriptions, from the main menu select **Settings > Phone Info > Icon Glossary**.

Note For information about using your phone's main screen carousel, see **Section 2B: Navigating the Main Screen** on page 36.



indicates your current signal strength. The more lines you have, the stronger your signal.



indicates you are "roaming" off the Sprint National Network.



indicates your phone cannot find a signal.



indicates the call is on hold.



indicates that a call is in progress.



indicates your data connection is active (data is being transferred).



indicates your data connection is dormant (no data is being sent or received).



indicates your phone is not currently able to access data service features.



indicates mobile broadband data (EVDO) status. (The icon is animated while service is active.)



indicates mobile broadband service is available.



indicates mobile broadband service is dormant.



indicates you have missed voice calls.



indicates you have scheduled events or call alarms.



indicates you have alarm clock or countdown notifications.



indicates you have new SMS Voice messages.



indicates you have new SMS Text messages.



indicates you have new picture messages.



indicates you have new voicemail messages.

	indicates you have new email messages.		indicates the phone is connected to or communicating with a Bluetooth device via Advanced Audio Distribution Profile (A2DP).
	indicates you have more than two different kinds of messages.		indicates the phone is connected to or communicating with a Bluetooth device via both Hands-free Profile (HFP) and Advanced Audio Distribution Profile (A2DP).
	indicates you have urgent messages.		indicates access to a secure site.
	indicates you have two or more different types of missed calls, scheduled events, call alarms, or alarm clock or countdown notifications.		indicates the level of your battery charge. The more black you see, the more power you have left. (The icon is animated while the battery is charging.)
	indicates you have a new wireless backup alert.		indicates your battery is charging in “Power Off” state.
	indicates the Bluetooth feature is enabled (black icon).		indicates volume level 1 to 8 and vibrate feature are set.
	indicates the phone is discoverable by another Bluetooth device.		indicates 1-beep feature is set.
	indicates the phone is connected to a Bluetooth device (dimmed icon).		indicates 1-beep and vibrate feature are set.
	indicates the phone is communicating with a Bluetooth device.		indicates all ringer settings are off.
	indicates the phone is connected to or communicating with a Bluetooth device via Hands-free Profile (HFP).		indicates all ringer settings are off and the vibrate feature is set.



indicates all the sound settings except applications volume are off and the vibrate feature is set.



indicates all the sound settings are off.



indicates the Location feature of your phone is enabled.



indicates the Location feature of your phone is disabled.



indicates you have a new voice message when Screen Call is activated.



indicates the Screen Call Auto setting is on.



indicates your phone is in TTY mode.



indicates the alarm clock or countdown setting is on.



indicates the speakerphone mode is set to on.



indicates the car kit device is set to on.



indicates the wired headset device is set to on.



indicates a microSD card is inserted in your phone. (When the microSD card is being accessed, the icon dims.)

Features of Your Phone

The KATANA® Eclipse X by SANYO is lightweight, easy to use, and reliable, and it offers many features and service options. This list previews some of those features and provides page numbers where you can find out more:

- The easy-to-use **Sprint One Click** main screen brings all your favorite features to your fingertips (page 36).
- Digital dual-band capability allows you to make and receive calls while on the Sprint National Network and to roam on other 1900 and 800 MHz digital networks where Sprint has implemented roaming agreements (page 68).
- Data services provides access to the wireless Internet in digital mode (page 149).
- Sprint Mail (page 154), SMS Text Messaging (page 144), and SMS Voice Messaging (page 145) provide quick and convenient messaging capabilities.
- Games, ringers, screen savers, and other applications can be downloaded to make your phone as unique as you are (page 157). Additional charges may apply.

- Your Contacts list allows you to store up to 500 entries, with up to seven phone numbers per entry (page 77).
- The built-in Calendar offers several personal information management features to help you manage your busy lifestyle (page 88).
- The Location feature works in connection with available location-based services (page 51).
- T9 Text Input lets you quickly type messages with one keypress per letter (see page 30).
- Speed dial lets you dial phone numbers with one or two keypresses (see page 29).
- The built-in camera allows you to take full-color digital pictures and videos, view your pictures and videos using the phone's display, and instantly send them to family and friends using Sprint Picture Mail service (page 112).
- The File Manager allows you to manage multiple files in the phone and microSD card (page 105).
- PictBridge support lets you connect and print to any PictBridge compliant printer (page 127).
- Sprint TV and Sprint Music allow you to enjoy streaming video and audio with your phone (page 165).
- The included microSD memory card allows you to expand the phone's available memory (page 102).
- The built-in Bluetooth technology allows you to connect wirelessly to a number of Bluetooth devices to share information more easily than ever before (page 129).
- The Maps feature allows you to launch Sprint navigation services (page 35).

Turning Your Phone On and Off

Turning Your Phone On

- ▶ Press **END**.

Once your phone is on and finds a signal, it automatically enters standby mode – the phone's idle state. At this point, you are ready to begin making and receiving calls.

If your phone is unable to find a signal after five seconds of searching, a Power Save feature is automatically activated. When a signal is found, your phone automatically returns to standby mode.

In Power Save mode, your phone searches for a signal periodically without your intervention. You can also initiate a search for Sprint service by pressing any key (when your phone is turned on).

Tip

The Power Save feature conserves your battery power when you are in an area where there is no signal.

Turning Your Phone Off

- ▶ Press and hold **END** for two seconds until you see the powering down animation on the display screen.

Your screen remains blank while your phone is off (unless the battery is charging).

Using Your Phone's Battery and Charger

WARNING

Use only Sprint-approved or manufacturer-approved batteries and chargers with your phone. The failure to use a Sprint-approved or manufacturer-approved battery and charger may increase the risk that your phone will overheat, catch fire, or explode, resulting in serious bodily injury, death, or property damage.

Sprint-approved or manufacturer-approved batteries and accessories can be found at Sprint Stores or through the manufacturer; or call 1-866-343-1114 to order. They're also available at www.sprint.com.

Battery Capacity

Your phone is equipped with a Lithium Ion (Li-Ion) battery. It allows you to recharge your battery before it is fully drained. The battery provides up to 4.6 hours of continuous digital talk time.

When there are approximately five minutes of talk time left, the phone sounds an audible alert and then turns off.

Note


Long backlight settings, searching for service, vibrate mode, browser use, and other variables may reduce the battery's talk and standby times.

Tip

Watch your phone's battery level indicator and charge the battery before it runs out of power.

Installing the Battery

1. Insert the battery into the opening on the back of the phone, making sure the connectors align (1). Gently press down to secure the battery (2).
2. Replace the battery cover and slide it upward until you hear a click (3).

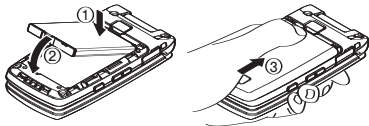


Removing the Battery

1. Make sure the power is off so that you don't lose any stored numbers or messages.
2. Press the battery release latch (1) and slide the battery cover downward and remove it (2).
3. Lift up the battery and remove it from the phone (3).

WARNING

Do not handle a damaged or leaking Li-Ion battery as you can be burned.

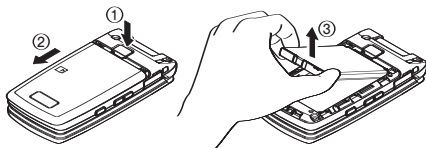

Charging the Battery

Charge your battery as soon as possible so you can begin using your phone.

Keeping track of your battery's charge is important. If your battery level becomes too low, your phone automatically turns off, and you will lose any information you were just working on. For a quick check of your battery level, glance at the battery charge indicator located in the upper-right corner of your phone's display screen. If the battery charge is getting too low, the battery icon (🔋) blinks and the phone sounds a warning tone.

Always use a Sprint-approved or manufacturer-approved desktop charger, travel charger, or vehicle power adapter to charge your battery.

Using the Phone Charger

1. Plug the phone charger into a wall outlet.
2. Open the micro-USB connector cover located on the upper left side of your phone.
3. Plug the other end of the phone charger into the micro-USB connector.
 - A **red indicator light** means the battery is charging.
 - A **green indicator light** means the battery charging is completed.

With the Sprint-approved Li-Ion battery, you can recharge the battery before it becomes completely run down.

Navigating Through Phone Menus

Note

*Your phone's Sprint One Click main screen gives you instant access to your favorite features. See **Section 2B: Navigating the Main Screen** on page 36 for complete details.*

The navigation key on your phone lets you scroll through menus quickly and easily. The scroll bar at the right of the menu keeps track of your position in the menu at all times.

To navigate through a menu, press the navigation key up or down. If you are in a first-level menu, such as **Settings**, you may also navigate to the next or previous first-level menu by pressing the navigation key right or left.

For a diagram of your phone's menu, please see "Your Phone's Menu" on page ii.

Selecting Menu Items

As you navigate through the menu, menu options are highlighted. Select any option by highlighting it and pressing . If the option is numbered, you can select it by pressing the corresponding number on the phone's keypad.

For example, to view your text messages:

1. From the main screen, select  and press  to access the main menu.
 2. Select **Messages** by highlighting it and pressing .
 3. Select **Text** by highlighting it and pressing .
 4. Select **Inbox** by highlighting it and pressing .
- (If you have any text messages, they are displayed.)

For the purposes of this guide, the above steps condense into:

- ▶ Select  and press  > **Messages** > **Text** > **Inbox**.

Backing Up Within a Menu

To go to the previous menu:

- ▶ Press .

To return to standby mode:

- ▶ Press .


Displaying Your Phone Number

- ▶ Select  and press  > **Settings** > **Phone Info** > **Phone#/UserID**. (Your phone number and other information about your phone and account will be displayed.)

Making and Answering Calls

Holding Your Phone

To maximize performance, do not obstruct the internal antenna area.

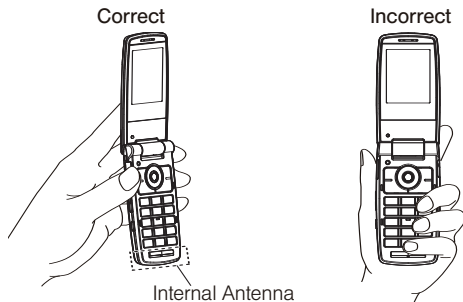

Making Calls

Placing a call from your wireless phone is as easy as making a call from any landline phone. Enter the number, press **TALK**, and you're on your way to clear calls.

1. Make sure your phone is on.
2. Enter a phone number from standby mode. (If you make a mistake while dialing, press **BACK** to erase the numbers.)
3. Press **TALK**. (To make a call when you are roaming and Call Guard is enabled, see "Using Call Guard" on page 70.)
4. Press **END** or close the phone when you are finished.

Tip

To redial your last outgoing call, press **TALK** twice.

When making calls off the Sprint National Network, always dial using 11 digits (1 + area code + phone number).

You can also place calls from your phone by speed dialing numbers from your Contacts (page 29) and by using your History listings (page 74).

Dialing Options

When you enter numbers in standby mode, you will see a variety of dialing options by pressing **Options** (right softkey).

To initiate an option, highlight it and press .

- **Abbrev. Dial:** Place call using the abbreviated dialing feature. (See “Using Abbreviated Dialing” on page 27.)
- **Save:** Save the phone number in your Contacts. (See “Saving a Phone Number” on page 26.)
- **P Hard Pause:** Insert a hard pause. (See “Dialing and Saving Phone Numbers With Pauses” on page 26.)
- **T 2-Sec. Pause:** Insert a two-second pause. (See “Dialing and Saving Phone Numbers With Pauses” on page 26.)

Answering Calls

1. Make sure your phone is on. (If your phone is off, incoming calls go to voicemail.)
2. Press  to answer an incoming call.
(Depending on your settings, you may also answer incoming calls by opening the phone or by pressing any number key. See “Call Answer Mode” on page 57 for more information.)

To answer an incoming call with the phone closed:

1. Make sure your phone is on. (If your phone is off, incoming calls go to voicemail.)
2. When your phone rings or vibrates, press and hold the volume key on the left side of the phone. (The call will be answered in speakerphone mode.)
– or –
Open the phone to use the earpiece.

Your phone notifies you of incoming calls in the following ways:

- The phone rings or vibrates.
- The indicator light flashes.
- The backlight illuminates.
- The screen displays an incoming call message.

If the incoming call is from a number stored in your Contacts, the entry's name is displayed. The caller's phone number may also be displayed, if available.

When receiving a call, the following options are also displayed by pressing **Options** (right softkey).

- **Call Guard** to answer the call when you are in roaming mode. (See "Using Call Guard" on page 70.)
- **Answer** or **Answer:Speaker** to answer the call.
- **Answer on Hold** to put the call on hold.
- **Screen Call** to answer the call by using a prerecorded announcement. (See "Setting Up Screen Call" on page 100.)
- **Quiet Ringer** to mute the ringer (if available).
- **Stop Vibration** to turn vibration off when your ringer setting is in vibrate mode.
- **Ignore with Text** to not answer the call and send a text message to the caller.

Answering a Roam Call With Call Guard Enabled

Call Guard is an option that helps you manage your roaming charges when making or receiving calls while outside the Sprint National Network. Please see "Roaming" on page 68 for more information about roaming.

- ▶ To answer the call, press **TALK**, and then press **1** to proceed. (See "Using Call Guard" on page 70 for additional information.)

Note

When your phone is off, calls go directly to voicemail.

Ending a Call

- ▶ Close the phone or press **END**.

Missed Call Notification

When an incoming call is not answered, the Missed Call log is displayed on your screen.

To display the Missed Call entry from the notification screen:

- ▶ Select the entry and press . (To dial the phone number, press .)

To display a Missed Call entry from standby mode:

1. Select  and press  > **Missed Alerts**.
2. Select the entry you wish to view and press .

Calling Emergency Numbers

You can place calls to 911 (dial    ), even if your phone is locked or your account is restricted.

Note

When you place an emergency call, your phone automatically enters Emergency mode.

During an emergency call, press **Options** (right softkey) to display your options. Select an option and press .

- **Speaker On** to activate speakerphone mode. (If you are in speakerphone mode, the option is displayed as **Speaker Off** to deactivate.)
- **Unlock MyPhone** to unlock your phone (appears only if the phone is locked).

Tip

*Press **MyPhone** (left softkey) to display your phone number during an emergency call.*

To exit Emergency mode:

1. Press **END** to end a 911 call.
2. Press **Options** (right softkey) to display the options menu.
3. Select **Exit Emergency** and press **MENU OK**.

Note

When you are in Emergency mode, you can exit from the options menu.

To select Emergency mode options:

1. Press **END** to end a 911 call.
2. Press **Options** (right softkey).
 - **Call 911** to call 911.
 - **Call 911: Speaker** to call 911 in speakerphone mode.
 - **Exit Emergency** to exit Emergency mode.
3. Select an option and press **MENU OK**.

Enhanced 911 (E911) Information

This phone features an embedded Global Positioning System (GPS) chip necessary for utilizing E911 emergency location services where available.

When you place an emergency 911 call, the GPS feature of your phone seeks information to calculate your approximate location. Depending on several variables, including availability and access to satellite signals, it may take up to 30 seconds or more to determine and report your approximate location.

IMPORTANT

Always report your location to the 911 operator when placing an emergency call. Some designated emergency call takers, known as Public Safety Answering Points (PSAPs) may not be equipped to receive GPS location information from your phone.

In-Call Options

Pressing **Options** (right softkey) during a call displays a list of available in-call features. To select an option, press the corresponding keypad number or select the option and press **MENU OK**. The following options may be available through the Options menu:

- **Three-Way Call** to open a call with two other parties.
- **Save** to save the current call's phone number in your Contacts.
- **Contact Details** to display information about a caller who is already in your Contacts.
- **Contacts** to display your Contacts list.
- **Call Memo Rec.** to record the other party.
- **Phone Info** to access the Phone Info menu.
- **Transfer Audio** to switch the call to an external device.
- **Main Menu** to display the phone's main menu.

Note You can return to the in-call screen by pressing the **TALK** during a phone call.

WARNING

Because of higher volume levels, do not place the phone near your ear during speakerphone use.

Press the left softkey during a call to mute the microphone. Press it again to unmute the microphone.

Note

*You can turn the speakerphone on or off by pressing the **SPEAKER** key during a phone call.*

End-of-Call Options

After you have finished your call, the phone will display the Recent History. From the Recent History, you can view the date and time of the call, the phone number (if available), the entry name (if the number is already in your Contacts), and the duration of the call.

- ▶ Press **Options** (right softkey) to display the Recent History options. (See "History Menu Options" on page 74 for details.)
- ▶ Press **Send Msg** (left softkey) to send a text or an SMS Voice message.

Saving a Phone Number

Your phone can store up to 500 Contacts entries. Contacts can store up to a total of 700 phone numbers, and each Contacts entry's name can contain up to 64 characters. Your phone automatically sorts the Contacts entries alphabetically. (For more information, see "Contacts" on page 77.)

To save a number from standby mode:

1. Enter a phone number and press *Options* (right softkey) > *Save*.
2. Select *New Entry* or *Existing Entry* and press .
3. If *New Entry* was selected, select a number type, and then use the keypad to enter the new entry name and press 
– or –
If *Existing Entry* was selected, select an existing entry to which you want to save the number, and then select a number type and press .
4. Press *Done* (left softkey) to save the entry.

Finding a Phone Number

You can search Contacts entries for phone numbers that contain a specific string of numbers.

1. Enter the last three or more digits of the number in standby mode. (The more numbers you enter, the more specific the search becomes.)
2. All Contacts entries matching the entered numbers will be displayed. Select an entry and press  to dial the number.

Dialing and Saving Phone Numbers With Pauses

You can dial or save phone numbers with pauses for use with automated systems, such as voicemail or credit card billing numbers.

There are two types of pauses available on your phone:

- **Hard Pause** sends the next set of numbers when you press  or *Send Tones* (left softkey).
- **2-Sec. Pause** automatically sends the next set of numbers after two seconds.

Note You can have multiple pauses in a phone number and combine two-second and hard pauses.

To dial or save phone numbers with pauses:

1. Enter all or part of a number.
2. Press **Options** (right softkey) > **Hard Pause** or **2-Sec. Pause**.
3. Enter additional numbers.
4. Press **TALK** to dial the number.
– or –
Press **Options** (right softkey) > **Save** to save the number in your Contacts.

Note When dialing a number with a hard pause, press **TALK** or **Send Tones** (left softkey) to send the next set of numbers.

Using Abbreviated Dialing

Abbreviated Dialing is similar to speed dialing. You can use either of the following abbreviated dialing features.

- **Contacts Match** – Retrieve any number saved in your Contacts by entering only the last three to six digits of the number. Press **TALK** to dial the retrieved number. (See “To activate the Contacts Match feature” on page 58.)
- **Prepend** – Prepend the first five or six digits (for example, the area code and prefix) to any four or five digits you enter. Press **TALK** to dial the resulting number. (See page 59 to activate the Prepend feature.)

To place a call using Contacts Match Abbreviated Dialing:

1. Enter the last three to six digits of a Contacts entry's phone number.
2. Press **TALK** to call the displayed number. (If there is more than one matched number in your Contacts, the Abbrev. Dial list is displayed. Select the name you want to call from the list, and then press **TALK** to place a call.)

To place a call using Prepend Abbreviated Dialing:

1. Enter the last four or five digits of the number.
2. Press .

Dialing From the Contacts List

1. Select  and press  > **Contacts**.
2. Select the entry you want to call and press  to dial the entry's default phone number.

– or –

To dial another number from the entry, select the name and press , and then select a number and press .

Plus (+) Code Dialing

When placing international calls, use Plus Code Dialing to automatically enter the international access code for your location (for example, 011 for international calls made from the United States). This feature is subject to network availability.

1. Press and hold  until a “+” is displayed on your phone screen.
2. Dial the country code and phone number you're calling, and press . (The access code for international dialing will automatically be dialed, followed by the country code and phone number.)

Using Speed Dialing

You can store up to 98 numbers in your phone's speed dial memory to make contacting friends and family as easy as pressing a button or two. With this feature, you can dial speed dial entries using one keypress for locations 2–9 or two keypresses for locations 10–99.

To use One-Touch Dialing for speed dial locations 2–9:

- ▶ Press and hold the appropriate key for approximately two seconds. The display confirms that the number has been dialed when it shows “Connecting...”.

To use Two-Touch Dialing for speed dial locations 10–99:

1. Press the first digit.
2. Press and hold the second digit for approximately two seconds. The display confirms that the number has been dialed when it shows “Connecting...”.

Note

Speed dialing may not be available when you are roaming; when you are roaming off the Sprint National Network, you must always dial using eleven digits (1 + area code + number).

Entering Text

Selecting Text Input Options

Your phone provides convenient ways to enter words, letters, punctuation, and numbers whenever you are prompted to enter text (for example, when adding a Contacts entry or when using Sprint Mail and SMS Text Messaging).

1. From a screen where you can enter text, press **Text Mode** (right softkey) to change the text input mode.
2. Select one of the following options:
 - **T9 Word** to enter text using a predictive text system that reduces the number of keypresses required while entering a word. Press the navigation key right or left to toggle between T9 Word and Alphabet mode. (See page 31.)
 - **Alphabet** to enter characters by using the Alphabet mode. Press the navigation key right or left to toggle between T9 Word and Alphabet mode. (See page 32.)

- **SYMBOL** to enter symbols. Press the navigation key right or left to toggle between Emoticons, SYMBOL, and SMILEYS modes. (See page 33.)
- **SMILEYS** to enter smile icons. Press the navigation key right or left to toggle between Emoticons, SYMBOL, and SMILEYS modes. (See page 33.)
- **Emoticons** to enter “emoticons.” Press the navigation key right or left to toggle between Emoticons, SYMBOL, and SMILEYS modes. (See page 33.)
- **Web Shortcuts** to enter Web shortcuts (for example, www., http://, or .com). Press the navigation key right or left to toggle between Web Shortcuts and Preset Msgs modes.
- **Preset Msgs** to enter preprogrammed messages. Press the navigation key right or left to toggle between Web Shortcuts and Preset Msgs modes. (See page 33.)
- **Recent Msgs** to enter messages used recently.
- **Paste List** to paste copied or cut text.
- **From Schedule** to extract schedule items you have added to your Calendar. (See page 88.)
- **From To Do** to extract task items you added in your Calendar as To Do.
- **NUMBER** to enter numbers. (See page 33.)
- **Signature** to enter your signature. (See page 53.)
- **Select Lang.** to select the language (English or Spanish).
- **Delete All** to delete all text.
- **Select Text** to select stored text for copying or cutting.
- **Add Word** to store words that you frequently use. (See page 31.)
- **Text Options** to display the Text Entry settings menu. (See page 34.)

Tip

When entering text, press the **★ (Shift)** key to change letter capitalization (ABC > abc > Abc).

Entering Text Using T9 Text Input

T9 Text Input lets you enter text by pressing keys just once per letter. (To select the **T9Word** mode when entering text, see “Selecting Text Input Options” on page 29.)

T9 Text Input uses an intuitive word database to analyze the letters you enter and create a suitable word. (The word may change as you type.)

1. Select the **T9Word** text input mode. (See “Selecting Text Input Options” on page 29.)
2. Press the corresponding keys once per letter to enter a word. (For example, to enter the word “Bill,” press    .) (If you make a mistake, press  to erase a single character. Press and hold  to erase an entire word.)
3. Use your navigation key to scroll through the list (when applicable), and then select a word.
4. To accept a word and insert a space, press .

Adding a Word to the T9 Database

If a word you want to enter is not displayed as an option when you are using T9 Text Input, add it to the database.

1. Select the **Add Word** text input option. (See “Selecting Text Input Options” on page 29.)
2. Enter the word using Alphabet mode and press **Save** (left softkey). (See “Entering Text Using Alphabet Mode” on page 32.) The word will appear as an option the next time you scroll through options during T9 Text Input.

To edit or delete the words you have added:

1. Select  and press  > **Settings** > **Text Entry** > **My Words**.
2. Highlight a word and press **Options** (right softkey).
3. Select an option and press .
 - **Edit** to edit a word in My Words. When finished, press **Save** (left softkey) to save your changes.
 - **Delete** to delete a word in My Words. Press **Yes** (left softkey) to confirm the deletion.

Customizing T9 Settings

1. Select  and press  > **Settings > Text Entry > T9 Settings**.
2. Select an option and press .
 - **Word Prediction** to automatically display the word that may follow the current text input.
 - **Word Complete** to show the completed words that match the keys you have entered without entering the whole word.
 - **Word Scan** to allow T9 text input to recognize words by searching Contacts and messages.
 - **Word ChoiceList** to display the word choice list.
 - **Show aft enter** to select when (after 1–3 digits) to display the word list. The word list will be displayed based on the number of digits you selected.
 - **Show after wait** to select how many seconds the phone should wait to display the word list.

For more information about T9 Text Input, visit the Nuance Web site at www.nuance.com/t9/textinput/.

Entering Text Using Alphabet Mode

1. Select the **Alphabet** mode. (See “Selecting Text Input Options” on page 29.)
2. Press the corresponding keys repeatedly until the correct letter appears. (For example, to enter the word “Bill,” press  twice,  three times,  three times, and  three times again.) (If you make a mistake, press  to erase a single character. Press and hold  to erase an entire word.)

By default, the first letter of an entry is capitalized and the following letters are lowercased. After a character is entered, the cursor automatically advances to the next space after two seconds or when you enter a character on a different key.

Characters scroll in the following order:

Key	English Sequence	
	Upper Case	Lower Case
1	., @ 1 ? ! * # /	
2	A B C 2	a b c 2
3	D E F 3	d e f 3
4	G H I 4	g h i 4
5	J K L 5	j k l 5
6	M N O 6	m n o 6
7	P Q R S 7	p q r s 7
8	T U V 8	t u v 8
9	W X Y Z 9	w x y z 9
0	0	
#	Space	
✕	One-character-shifted Caps Lock Unshifted	

Tip

The initial letters of words following spaces can be either upper - or lowercase depending on the capitalization setting. Press the * (Shift) key to change letter capitalization (ABC > Abc > abc).

Entering Numbers, Symbols, Smileys, Emoticons, and Preset Messages

To enter numbers:

- ▶ Select the **NUMBER** mode and press the appropriate key. (See “Selecting Text Input Options” on page 29.)

To enter symbols:

- ▶ Select the **SYMBOL** mode. (See “Selecting Text Input Options” on page 29.) To enter a symbol, press the appropriate key indicated on the display.

To enter “smileys”:

- ▶ Select the **SMILEYS** mode and press the appropriate key. (See “Selecting Text Input Options” on page 29.)

To enter “emoticons”:

- ▶ Select the **Emoticons** mode and press the appropriate key. (See “Selecting Text Input Options” on page 29.)

To enter preset messages:

1. Select the **Preset Msgs** mode. (See “Selecting Text Input Options” on page 29.)
2. Select a message and press .

Note *Preset messages make composing text messages easier by allowing you to enter quick messages, such as “Meet me at,” “Let’s get lunch,” or a customized message of your own. (For more information on preset messages, please see “Managing Preset Messages” on page 53.)*

Setting Text Entry Options

1. Select  and press  > **Settings** > **Text Entry**.
2. Select an option and press .
 - **Auto-Capital** to turn auto-capitalization on or off.
 - **Auto-Space** to turn auto-spacing on or off after T9 words you enter.
 - **Input Language** to select the language (English or Spanish).
 - **My Words** to add or edit a word in the T9 database (see page 31).
 - **T9 Settings** to customize the T9 settings (see page 32).
 - **Default Input** to select T9 word, Alphabet, or Retain Mode for the initial entry mode.
 - **Add Word** to store words that you use frequently (see page 31).
 - **Auto-Complete** to automatically display words that may follow the current text input.
 - **Help** to see the T9 instructions page.

Using Maps

Activating Maps

You can access Maps from your phone's main menu, anywhere on the Sprint network.

1. Select  and press  > **Maps**.
2. Select an option and press .
 - **Navigation** to provide audible and visual driving directions with full-color moving maps. Follow the instructions to register for Sprint Navigation.
 - **FamilyLocator** to locate your children or other family members from your phone or from a computer. Follow the instructions to sign in or sign up for service.
 - **LiveLocalSearch** to search for businesses in your area using Live Search. You may be prompted to allow a data connection and to allow your location to be used.

Tip

For instant access to your phone's GPS Navigation feature, use the Sprint Navigation tile on the main screen carousel. See **Section 2B: Navigating the Main Screen** on page 36 for details.

Navigating the Main Screen

- ◆ *Getting to Know Sprint One Click (page 36)*
- ◆ *Personalizing the Carousel (page 38)*
- ◆ *Personalizing the Home Screen (page 41)*

The easy-to-use Sprint One Click main screen gives you instant access to all your favorite features. This section explains what Sprint One Click does, how to navigate within the main screen, and how to personalize your main screen so you get the most out of your phone.

Getting to Know Sprint One Click

Sprint One Click brings all your favorite features to your fingertips. Instead of navigating through the levels of a traditional phone menu, this design puts the things you need the most – features like text messaging, Internet access, and GPS navigation – right up front. Not only can you access what you need right away, you get to choose what and where it all goes.

Using your Sprint One Click is easy once you've learned a few basics.

The Sprint One Click Main Screen



The illustration above shows the basic layout of your phone's main screen, also known as the standby screen. The callouts highlight what you'll need to know to get started with Sprint One Click.

- **Carousel** – The carousel is the bottom row of **tiles**, or icons, on your main screen. Pressing the **navigation key** right or left moves the carousel. The tile in the center is the menu that's displayed. In the illustration, the **Home** tile (🏠) is in the center, so the Home screen is displayed.

- **Tiles** – The tiles are the individual icons on the carousel. Each tile displays a specific menu, such as Messaging, Internet, and Call Log. The carousel can hold up to 15 tiles, which you can add, remove, and rearrange to suit your needs. The **Home** tile (🏠) provides access to the phone's full menu, and it is the only one that cannot be moved or removed.
- **Bubbles** – Bubbles are at-a-glance information items that may be displayed when the **Home** screen is displayed, such as in the illustration. Your Home screen can display up to eight bubbles.
- **Function Keys** – The keys you'll use to navigate through the main screen are:
 - **Navigation key**: Press right or left to move the carousel to select tiles. Selected tiles occupy the center position. Press the navigation key up or down to highlight bubbles (Home screen only) or menu items.
 - **Menu/OK key** (MENU OK): Press to select highlighted menu items. From the Home screen, press to display the phone's full menu.

- **Softkeys:** Press the left or right softkey to perform the action or access the menu indicated by the text directly above it on the display. In the illustration, pressing the left softkey displays *Options*, and pressing the right softkey displays *Contacts*.
- **End/Powerkey** (END - not pictured): Press from any menu or tile to return to the Home (🏠) screen.

Take the Tutorial

Your phone has a built-in menu of tutorials to teach you all you need to know about Sprint One Click.

1. Select 🏠 and press *Options* (left softkey) > *Tutorial*.
– or –
Select 📱 (*Personalize My Phone*) > *Tutorial*.
2. Highlight a topic and press  to display the tutorial.
 - Topics include: *Getting Started*, *Changing the Carousel*, *Adding a Tile*, *Removing a Tile*, *Changing the Home Screen*, *Adding a Bubble*, and *Removing a Bubble*.

Tip

To see a full menu of tutorials when viewing another tutorial, press **Index** (left softkey).

Personalizing the Carousel

Now that you know what the carousel is, it's time to make it work for you by adding, removing, or rearranging tiles to match how you want to use your phone.

Adding a Tile to the Carousel

1. Select 🏠 and press *Options* (left softkey) > *Personalize Carousel*.
2. Press *Add Tile* (left softkey), select a tile category (*All*, *Featured*, *Communication*, *Entertainment*, or *Favorites*), and then highlight a tile (see table on page 39).
3. To add the tile, press **ADD** (left softkey) or press . (To view a preview, press **PREVIEW** [right softkey].)

<i>Sprint One Click Tiles</i>	
	<i>Home</i> – View Home screen and bubbles. Press OK to access the phone's full menu.
	<i>Messaging</i> – Access Voicemail, Send Message, Text Message, Picture Mail, and Email.
	<i>My Account</i> – Access links to Account Details Web page, Hear Minutes, and Hear Balance.
	<i>Personalize My Phone</i> – Access Change Screen Saver, Change Ringer, Personalize Home Screen, Personalize Carousel, and Tutorial.
	<i>Internet</i> – Access data services, including the Sprint Home page, Favorites, Recent Pages, the EnterWeb Address menu, and Google search.
	<i>Shortcuts</i> – Add and access up to five shortcuts from My Stuff, My Album, Web Bookmarks, and Menu Items.
	<i>Call Log</i> – Access Recent History.

<i>Sprint One Click Tiles (continued)</i>	
	<i>Text Message</i> – Instantly access the Text Message menu, including Send Text, Inbox, and a list of recent messages.
	<i>Email</i> – Access all your email accounts in one place.
	<i>Sprint Navigation</i> – Access Sprint Navigation, including Drive To, Directory, Maps & Traffic, and Tools/Extras.
	<i>Music</i> – Access the Music menu, including My Music, Sprint Music Store, and Search.
	<i>Yahoo!</i> – Yahoo! Mail, Messenger, oneSearch and more. Yahoo! at your fingertips!
	<i>Google</i> – Get easy access to all your favorite Google services.

Removing a Tile From the Carousel

1. Select  and press **Options** (left softkey) > **Personalize Carousel**.
2. Press the navigation key right or left to select a tile, and then highlight **Remove Tile** and press .

Shortcut

From the main screen, select a tile and press **Options** (left softkey) > **Remove Tile**. Remember that you cannot remove, move, or replace the Home tile.

Rearranging Tiles on the Carousel

1. Select  and press **Options** (left softkey) > **Personalize Carousel**.
2. Press the navigation key right or left to select a tile, and then highlight **Move Tile** and press .
3. Press the navigation key right or left to select a location, and then press **INSERT** (left softkey) or press  to place the tile.

Shortcut

From the main screen, select a tile, press **Options** (left softkey) > **Move Tile**, and then complete step 3.

Replacing Tiles on the Carousel

If your carousel is full or if you just want to swap out one tile for another, you can replace an existing tile with another.

1. Select  and press **Options** (left softkey) > **Personalize Carousel**.
2. Press the navigation key right or left to select a tile, and then highlight **Replace Tile** and press .
3. Select a tile category and then highlight a tile.
4. To replace the previous tile, press **REPLACE** (left softkey) or press  to place the tile.

Shortcut

From the main screen, select a tile, press **Options** (left softkey) > **Replace Tile**, and then complete steps 3 and 4.

Editing Tiles

Certain tiles, such as Shortcuts, contain editable content. You can use the Personalize Carousel menu to edit these tiles.

1. Select  and press **Options** (left softkey) > **Personalize Carousel**.
2. Press the navigation key right or left to select a tile, and then highlight **Edit Tile** and press .
3. Use your navigation key and function keys to edit the tile.

Shortcut

From the main screen, select a tile, press **Options** (left softkey) > **Edit Tile**, and then complete step 3.

Resetting the Carousel

To reset the carousel to the original default settings:

1. Select  and press **Options** (left softkey) > **Reset Carousel**.
2. Highlight **Yes** and press .

Personalizing the Home Screen

Use your Home screen (the screen that is displayed when the **Home**  icon is selected) to provide at-a-glance information and updates through customizable bubbles. You can add up to eight bubbles to your Home screen.

To see more information from a bubble, press the navigation key up or down to highlight the bubble and then press .

Adding a Bubble to the Home Screen

1. Select  and press **Options** (left softkey) > **Personalize Home Screen**.
2. Press **ADD** (left softkey) and then highlight a bubble (see table on page 42).
3. To add the bubble, press **ADD** (left softkey) or press . (To view a preview, press **PREVIEW** [right softkey].)
4. If prompted, follow the instructions to personalize your bubble (for example, by selecting an astrological sign for the Horoscope bubble).

5. When you are finished, press .

<i>Sprint One Click – Home Screen Bubbles</i>	
	<i>Weather</i> – Check out the current forecast in your city.
	<i>News</i> – Instantly access breaking news and top stories.
	<i>Horoscope</i> – View your daily horoscope.
	<i>Finance</i> – Track your favorite stocks.
	<i>Sports News</i> – Get breaking sports news.

Removing a Bubble From the Home Screen

1. Select  and press *Options* (left softkey) > *Personalize Home Screen*.
2. Press the navigation key up or down to highlight a bubble.
3. Press the navigation key left or right to select the *Remove Bubble* option and then press .

Section 2C

Settings

- ◆ *Sound Settings (page 43)*
- ◆ *Display Settings (page 47)*
- ◆ *Location Settings (page 51)*
- ◆ *Messaging Settings (page 52)*
- ◆ *Airplane Mode (page 55)*
- ◆ *TTY Use With Sprint Service (page 56)*
- ◆ *Phone Setup Options (page 57)*

You can customize your phone to sound, look, and operate just the way you want it to. This section describes how to change your phone's settings to best suit your needs. Take a few moments to review these options and to adjust or add settings that are right for you.

Sound Settings

Ringer Types

Ringer types help you identify incoming calls and messages. You can assign ringer types to individual Contacts entries, types of calls, and types of messages.

Selecting Ringer Types for Incoming Calls

Your phone provides a variety of ringer options that allow you to customize your ring and volume settings. These options allow you to identify incoming calls by the ring.

1. Select  and press  > **Settings** > **Sounds** > **Ringer Type** > **Incoming Calls**.
2. Select **Default Ringer**, **Contact Entries**, or **Unknown #s**.
 - If you select **Contact Entries**, select **All Contacts** or **One Contact**.
3. Select a category, and then use your navigation key to scroll through the available ringers. A sample ringer will sound as you highlight each option.
4. Press  to assign a ringer.

Getting New Ringers

A wide variety of new ringers is available from the Sprint Digital Lounge, and you can access them right from your phone. (Additional charges may apply, but some are free.)

1. Select  and press  > **Settings** > **Sounds** > **RingerType**.
2. Select a category and subcategory as required until you display a list of ringer type categories.
3. Select **Get New**. (The Digital Lounge will launch and display the Ringers menu.)
4. Use your navigation key and keypad to search through available ringers. When you find one you want, highlight it and press .
5. To purchase the ringer, highlight **Buy** and press . (The ringer will download automatically.)
6. When the download is finished, select an option to continue:
 - **Listen** to listen to the ringer.
 - **Set As** to assign the ringer to a call or message type or to a specific contact.
 - **Shop** to browse for other items to download.

Selecting Ringer Types for Messages

1. Select  and press  > **Settings** > **Sounds** > **RingerType** > **Messages**.
2. Select **Text Message**, **Picture Mail**, **Voicemail**, **VoiceSMS**, or **Email**.
3. For Voicemail, skip to step 4. Otherwise, select **Default**, **Contact Entries**, or **Unknown #s**.
 - If you select **Contact Entries**, select **All Contacts** or **One Contact**.
4. Select a category, and then use your navigation key to scroll through the available ringers. A sample ringer will sound as you highlight each option.
5. Press  to assign a ringer.

Selecting a Ringer Type for Alarms, Power On/Off Tone, or Scheduled Events

1. Select  and press  > **Settings** > **Sounds** > **Ringer Type**.
2. Select **Alarm**, **Power On**, **Power Off**, or **Schedule**.
3. Select a category, and then use your navigation key to scroll through the available ringers. A sample ringer will sound as you highlight each option.
4. Press  to assign a ringer.

Selecting Vibrate Types

With this feature, you can select vibrate types for incoming calls, messages, alarms, and scheduled events.

1. Select  and press  > **Settings** > **Sounds** > **Vibrate Type**.
2. Select **Incoming Calls**, **Messages**, **Alarm**, or **Schedule**.
 - **Incoming Calls**: select **Default Vibrate** or **Unknown #s**.
 - **Messages**: select **Text Message**, **Picture Mail**, **Voicemail**, **VoiceSMS**, or **Email**.
3. Select a vibrate type and press .

Selecting a Key Tone

Your phone offers a number of options for selecting the audible tones accompanying a keypress.

1. Select  and press  > **Settings** > **Sounds** > **Keytones**.
2. Select an option and press .
 - **Tone Length** to select a key tone length. (Longer tone lengths may be better for tone recognition when dialing voicemail or other automated systems.)
 - **Tone Volume** to select a keypress volume level.
 - **Tone Type** to select the sound of a keypress.

Setting Up Voice Guide

Voice Guide activates both voice prompt and keypress echo functions. With this feature on, you can hear voice prompts when using Automatic Speech Recognition (ASR), Voice Memo, Screen Call, etc. and hear a voice say the numbers that you press on the keypad. (The default setting is **Off**.)

1. Select  and press  > **Settings** > **Sounds** > **Voice Guide**.
2. Select **On** or **Off**.

Note

When the ringer volume is set to **Silence All** or **Vibrate All**, voice prompts cannot be heard.

The keypress echo function is available when you are in standby mode.

Adjusting the Phone's Volume Settings

Adjust your phone's volume settings to suit your needs and your environment.

1. Select  and press  **OK** > **Settings** > **Sounds** > **Volume**.
2. Select **Ringer**, **Earpiece**, **Headset**, **Speakerphone**, **Applications**, **StartUp/PwrOff** or **Advanced...**
3. Using the navigation key, choose a volume level and press **Done** (left softkey).

Tip

You can adjust the ringer volume in standby mode (or the earpiece volume during a call) by using the volume key on the left side of your phone.

When setting ringer volume, you can check **Always Vibrate** and your phone will vibrate regardless of the volume setting.

Adjusting the Alert Volume

You can set the alert volume separately from the ringer volume setting.

1. Select  and press  **OK** > **Settings** > **Sounds** > **Volume** > **Advanced...**
2. Select **Alarms**, **Text Message**, **Picture Mail**, **Voicemail**, **VoiceSMS**, or **Email**.
3. Using the navigation key, select **Separate Vol.**
4. Press the navigation key left or right to choose a volume level, and press **Done** (left softkey).

Tip

You can make the ringer vibrate at any volume level by checking **Always Vibrate**.

Alert Notification

Set your phone to alert you with an audible tone when you change service areas, once a minute during a voice call, or when a call has been connected.

1. Select  and press  **OK** > **Settings** > **Sounds** > **Alerts**.

2. Select *Beep Each Minute*, *Out of Service*, *Connect, Signal Fade/Call Drop*, or *Messages* and press .
 - If you select *Messages*, select *Text Message*, *Picture Mail*, *Voicemail*, *VoiceSMS* or *Email > Repeat* or *Ringer Length*.
3. Select *On*, *Off*, or an available option and press .

Silence All

The Silence All option allows you to mute all sounds without turning your phone off.

To activate Silence All:

- ▶ With the phone open, press and hold the volume key down in standby mode. (The screen will display "Silence All.")

To deactivate Silence All:

- ▶ Press the volume key up repeatedly to select a volume level.

Display Settings

Changing the Backlight Time Length

Select how long the display screen and keypad remain backlit after any keypress is made.

1. Select  and press  > *Settings* > *Display* > *Main Screen* or *Outer Screen*.
2. Select *Backlight*.
3. Select *Dim Only*, *Always On*, or a preset length of time.

To change the Keypad Light setting:

1. Select  and press  > *Settings* > *Display* > *Keypad Light*.
2. Select *Always Off* or a preset length of time.

Note

Long backlight settings reduce the battery's talk and standby times.

Changing the Screen Saver

Your phone offers you the option of displaying a screen saver while in standby mode.

1. Select  and press  > **Settings** > **Display** > **Main Screen** or **Outer Screen** > **Screensaver**.
2. Select an option and press .
3. Select a screen saver and press .

Changing the Display Screen Animation

Your new phone offers options for what you see on the display screen during various phone functions.

1. Select  and press  > **Settings** > **Display** > **Main Screen** or **Outer Screen** > **Animation**.
2. Select an option and press .
3. Select an animation display and press .

Changing the Background

Customize your phone display's appearance by selecting a color scheme to reflect your personality.

1. Select  and press  > **Settings** > **Display** > **Outer Screen** > **Background**.
2. Select a background and press .

Changing the Illumination

Customize your phone display's appearance by selecting an illumination scheme to reflect your personality.

1. Select  and press  > **Settings** > **Illumination**.
2. Select an option (**On/Off**, **Incoming Calls**, **Messages**, **Calendar/Alarm**, **Active Call**, **Playing Music**, **Numeric Keypad**, or **Demo**) and press 
 - **Incoming Calls** to select **Default Lighting**, **Contact Entries**, or **Unknown #s**.
 - If you select **Contact Entries**, select **All Contacts** or **One Contact**, and then select an option.
 - **Messages** to select **Text Message**, **Picture Mail**, **Voicemail**, **VoiceSMS**, or **Email**.
 - If you select **Text Message**, select **Default Text Msg**, **Contact Entries**, or **Unknown #s**.
 - **Calendar/Alarm**, **Active Call**, or **Playing Music** to select an available option.
 - **Demo** to select **Endless Play**, **1 time**, **3 times**, or **5 times**.
3. Select an illumination pattern and press . (If you selected **On/Off** or **Numeric Keypad** in step 2, you can select only **On** or **Off**.)

Changing the Contrast

Adjust your screen's contrast (brightness) to suit your surroundings.

1. Select  and press  > **Settings** > **Display** > **Contrast**.
2. Select an option and press .

Changing the Phone's Menu Style

Choose how your phone's menu is displayed on the screen.

- ▶ Select  and press  > **Grid View** or **List View** (left softkey) to change the menu style.

Changing the Clock Display

Choose whether you want your phone's clock to be displayed in analog mode, digital mode, or with time and date.

1. Select  and press  > **Settings** > **Display** > **Outer Screen**.
2. Select **Foreground** > **Clock/Calendar**.
3. Select a display option and press .
4. Press **OK** (left softkey) to apply the setting.

Changing the Text Font Size

This setting allows you to adjust the Main Screen font size to view a message and browse on the Web as well as the Outer Screen font size to view a name and phone number.

1. Select  and press  > **Settings** > **Display** > **Font Size**.
2. Select an option and press .
 - **Main Screen** to select **Messages** or **Browser**.
 - **Outer Screen** to select **Name/Phone#s**.
3. Select a font size and press .

Tip

From the font preview display, select a font size by pressing the navigation key right or left.

Changing the Input Font Size

Adjust the font size when entering text (for example, when adding a Contacts entry).

1. Select  and press  > **Settings** > **Display** > **Main Screen** > **Input Font**.
2. Select **Phone#s**, **Messages**, or **Others**.
3. Select an input font size and press .

Setting Return to Standby Mode

This feature allows you to select the way to return to standby mode.

1. Select  and press  > **Settings** > **Display** > **Return to Idle**.
2. A message appears. Press **OK** (left softkey) to continue.
3. Select **Automatically** or **End Key**.
 - **Automatically** to return to standby mode automatically when no key is pressed for 30 seconds.
 - **End Key** to return to standby mode by pressing .

Note The End Key setting affects the battery's talk and standby times.

PowerSave Mode

This feature helps conserve your battery power by setting:

- Main Screen and Outer Screen backlight to **Dim Only**.
- Key backlight to **Always Off**.

- Main Screen sleep mode to **after 30 sec**.
- Outer Screen sleep mode to **after 5 sec**.

1. Select  and press  > **Settings** > **Display** > **Pwr Save Mode**.
2. A message appears. Press **OK** (left softkey) to continue.
3. Select **On**. (Select **Off** to deactivate this feature.)

Sleep Mode

This feature helps conserve your battery power by restricting the display.

1. Select  and press  > **Settings** > **Display**.
2. Select **Main Screen** or **Outer Screen**.
3. Select **Sleep Mode**.
4. Select a time interval before the phone goes into sleep mode and press . (Select **Off** to deactivate this feature.)

Setting the Next Schedule

You can display the next scheduled event on the Outer Screen.

1. Select  and press  **OK** > **Settings** > **Display** > **Outer Screen** > **Next Schedule**.
2. Select **On**. (Select **Off** to deactivate this feature.)

Changing the Text Greeting

A text greeting is displayed on your phone's screen in standby mode. Choose the phone's default greeting ("Sprint"), or enter your own custom greeting.

1. Select  and press  **OK** > **Settings** > **Display** > **Outer Screen** > **Foreground** > **Greeting**.
2. Select **Default** or **Custom**.
 - If you select **Custom**, enter a custom greeting and press **OK** (left softkey) > **Done** (left softkey). (See "Entering Text" on page 29.) (Use the  **BACK** key to erase the existing greeting.)

Location Settings

Your phone is equipped with a Location feature for use in connection with location-based services.

The Location feature allows the network to detect your position. Turning Location off will hide your location from everyone except 911.

Note

Turning Location on will allow the network to detect your position using GPS technology, making some Sprint applications and services easier to use. Turning Location off will disable the GPS location function for all purposes except 911, but will not hide your general location based on the cell site serving your call. No application or service may use your location without your request or permission. GPS-enhanced 911 is not available in all areas.

To enable your phone's Location feature:

1. Select  and press  > **Settings** > **More...** > **Location**. (The Location disclaimer will be displayed.)
2. Read the disclaimer and press .
3. Select **On** or **Off** and press .

When the Location feature is on, your phone's standby screen will display the  icon. When Location is turned off, the  icon will be displayed.

Messaging Settings

Staying connected to your friends and family has never been easier. With your phone's advanced messaging capabilities, you can send and receive many different kinds of text messages without placing a voice call. (For more information, see "Accessing Messaging" on page 154.)

Messaging settings make text messaging easier by letting you decide how you would like to be notified of new messages, create a signature with each sent message, and create your own preset messages.

Setting Message Notification

When you receive a message, your phone notifies you by displaying an icon on your display screen. You can also choose to be notified with a message notification on your display screen.

1. Select  and press  > **Settings** > **Messages** > **Notification**.
2. Select **Msgs and Icon** or **Icon Only**.

Tip

To access the Messaging Settings menu, you can also select **Home** and press **Menu** > **Messages** > **Settings**.

Setting Message Reminders

When new messages arrive, you can choose to have your phone notify you by playing an audible alert.

1. Select  and press  > **Settings** > **Sounds** > **Alerts** > **Messages**.
2. Select **Text Message**, **Picture Mail**, **Voicemail**, **Voice SMS**, or **Email**.
3. Select **Repeat** or **Ringer Length**.
4. Select a setting and press .

SMS Text Messages

Setting a Callback Number

With this feature, you can specify the callback number your recipients see when you send text messages.

1. Select and press > **Settings** > **Messages** > **Callback Number**.
 2. Select **None**, **MyPhone#**, or **Other** and press .
- (If you select **Other**, enter a callback number and press .)

Deleting Old Messages

With this feature, if the SMS Voice inbox becomes full, messages are automatically deleted starting with the oldest. (This feature is set to **On** by default.)

1. Select and press > **Settings** > **Messages** > **Auto-Delete**.
2. Select **On** or **Off** and press .

Adding a Customized Signature

Add a customized signature to each message you send.

1. Select and press > **Settings** > **Messages** > **Signature**.
2. Press , and then select **On**. (If you do not wish to attach a signature to your outgoing messages, select **Off**.)
3. Enter a signature and press **OK** (left softkey). (See “Entering Text” on page 29.)

Managing Preset Messages

Your phone is loaded with 20 preset messages to help make sending text messages easier. Customize or delete these messages, such as “Where are you?,” “Let’s get lunch,” and “Meet me at” to suit your needs, or add your own messages to the list.

To edit or delete a preset message:

1. Select and press > **Settings** > **Messages** > **Preset Msgs**. (The list of preset messages will be displayed.)

2. To edit or delete a message, select it and press **Options** (right softkey).
3. Select **Edit**, edit the message (see “Entering Text” on page 29), and press .
– or –
Select **Delete** > **Yes** (left softkey) to delete the message. (You can also reset all messages by selecting **Reset All Msgs** > **Yes** [left softkey].)

To change the language of the preset message:

1. Select  and press  > **Settings** > **Messages** > **Preset Msgs**.
2. Press **Options** (right softkey) > **Select Lang**.
3. Select **English** or **Spanish**.

Setting Drafts Alert

With this feature, when you try to send an SMS Text message, you are reminded if there are unsent messages in the Drafts folder.

1. Select  and press  > **Settings** > **Messages** > **Drafts Alert**.
2. Select **On** or **Off**.

SMS Voice Messages

Setting the Speakerphone

You can set the speakerphone on or off for SMS Voice messaging. (The speakerphone is set to **On** by default.)

1. Select  and press  > **Settings** > **Messages** > **VoiceSMS Options** > **Speakerphone**.
2. Select **On** or **Off**.

Setting the Sender's Name

With this feature, you can identify yourself to people who receive your SMS Voice messages.

1. Select  and press  > **Settings** > **Messages** > **VoiceSMS Options** > **From Name**.
2. Enter your name and press **OK** (left softkey).

Setting an Alert Notification

SMS Voice Messaging uses your phone's data services. Your phone can alert that you are connecting to data services each time you send an SMS Voice message.

1. Select  and press  > **Settings** > **Messages** > **VoiceSMS Options** > **Connect. Alert**.
2. Press **Check** (right softkey) to alert you each time you send an SMS Voice message.
3. Press **Done** (left softkey) to save the setting.

Airplane Mode

Airplane Mode allows you to use many of your phone's features, such as Games and Voice Memos, when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When you set your phone to Airplane Mode, it cannot send or receive any calls or access online information.

1. Select  and press  > **Settings** > **More...** > **Airplane Mode**.
2. Read the disclaimer and press .
3. Select **On** or **Off** and press .

While in Airplane Mode, your phone's standby screen will display "Phone Off."

TTY Use With Sprint Service

ATTY (teletypewriter, also known as a TDD or Text Telephone) is a telecommunications device that allows people who are deaf, hard of hearing, or who have speech or language disabilities, to communicate by telephone.

Your phone is compatible with select TTY devices. Please check with the manufacturer of your TTY device to ensure that it supports digital wireless transmission. Your phone and TTY device will connect via a special cable that plugs into your phone's headset jack. If this cable was not provided with your TTY device, contact your TTY device manufacturer to purchase the connector cable.

When establishing your Sprint service, please call Sprint Customer Service via the state Telecommunications Relay Service (TRS) by first dialing    . Then provide the state TRS with this number: 866-727-4889.

To turn TTYMode on or off:

1. Select  and press   > **Settings** > **More...** > **Accessibility** > **TTY**. (An informational message will be displayed.)
2. Read the disclaimer and press **OK** (left softkey).
3. Select **On** to turn TTY mode on.
– or –
Select **Off** to turn TTY mode off.

Note

In TTYMode, your phone will display the TTY access icon.

If TTY mode is enabled, the audio quality of non-TTY devices connected to the headset jack may be impaired.

WARNING

911 Emergency Calling

Sprint recommends that TTY users make emergency calls by other means, including Telecommunications Relay Services (TRS), analog cellular, and landline communications. Wireless TTY calls to 911 may be corrupted when received by public safety answering points (PSAPs), rendering some communications unintelligible. The problem encountered appears related to TTY equipment or software used by PSAPs. This matter has been brought to the attention of the FCC, and the wireless industry and the PSAP community are currently working to resolve this.

Phone Setup Options

Main Screen

Your phone's Sprint One Click main screen lets you customize your phone and provides quick access to the features and functions you use the most. See "Personalizing the Carousel" on page 38 and "Personalizing the Home Screen" on page 41 for details.

Call Answer Mode

Select how to answer incoming calls on your phone: whether you want to be required to press , to press any number key, or simply to open the phone.

1. Select  and press  > **Settings** > **More...** > **Call Setup** > **Call Answer**.
2. Select **Talk Key**, **Any Key**, or **Flip Open** and press .

Auto-Answer Mode

Set your phone to automatically pick up incoming calls when connected to an optional hands-free device. Remember, your phone will answer calls in Auto-Answer mode even if you are not present.

1. Select  and press  > **Settings** > **More...** > **Call Setup** > **Auto-Answer**.
2. Select an option and press .
 - **Hands-free** to answer calls automatically when the phone is connected to a hands-free device (sold separately).
 - **Speakerphone** to answer calls automatically in speakerphone mode.
3. Select **5 Seconds**, **15 Seconds**, or **Off**.

Setting the Key Guard

This feature enables you to lock external keys while the phone is closed.

1. Select  and press  > **Settings** > **More...** > **Key Guard**.
2. Select **On** or **Off** and press .

Note

This feature does not apply when the phone is open.

Tip

You can deactivate this feature temporarily by pressing and holding the volume key while the phone is closed.

Display Language

You can choose to display your phone's onscreen menus in English or in Spanish.

1. Select  and press  > **Settings** > **Display** > **Language**.
2. Select **English** or **Español** and press .

Setting Abbreviated Dialing

To activate the Contacts Match feature:

1. Select  and press  > **Settings** > **More...** > **Call Setup**.
2. Select **Contacts Match** > **On**.

To activate the Prepend feature:

1. Select  and press  > **Settings** > **More...** > **Call Setup** > **Abbrev. Dial**.
2. Select **Prepend** > **On**.
3. Enter the first five- or six-digit prefix in the Prepend# field and then press **OK** (left softkey).
 - To deactivate this feature, select **Off** during step 2 above.

Tip

To make an Abbreviated Dial call, see “Using Abbreviated Dialing” on page 27.

Note

This setting does not apply to 911 or Sprint 411.

Headset Options

Set up your phone for hands-free use, the type of headset (mono or stereo), and the ringer mode.

To connect the headset:

- ▶ Simply plug the headset into your phone's headset jack.

To set the headset mode:

1. Select  and press  > **Settings** > **More...** > **Headset Mode**.
2. Select **Turbo Button**.
3. Select an option and press :
 - **On**: Press the Turbo Button (operation button on your headset) to redial the last call. Press and hold to activate ASR (automatic speech recognition). (See “Section 2I: Voice Services” on page 94 for more information.)
 - **Off**: Select **Off** if you do not wish to assign a Turbo Button setting or if your headset does not have a Turbo Button.

To set the audio mode:

1. Select  and press  > **Settings** > **More...** > **Headset Mode**.
2. Select **Earpiece** > **Stereo** or **Mono**.

To set the ringer mode:

1. Select  and press  > **Settings** > **More...** > **Headset Mode**.
2. Select **RingerSound** > **Normal** or **Headset Only**.

Browser Settings

This feature enables you to customize the Browser settings through the phone's settings menu.

Editing Bookmarks

You can edit the names or URLs of your bookmarks, sort them, or delete them from your phone. (See “See Exploring the Web” on page 159.)

1. Select  and press  **OK** > **Settings** > **More...** > **Browser** > **Bookmarks**.
2. Highlight a bookmark and press **Options** (right softkey).
3. Select an option and press  **OK**.
 - **Show Page** displays the Web page of the selected bookmark.
 - **Edit** to edit the title or address of the selected bookmark.
 - **Set Home** to set the selected bookmark as your home page.
 - **Delete** to delete the selected bookmark.
 - **Delete All** to delete all bookmarks saved in the phone.
 - **Reorder** to change the order of the bookmarks.

Deleting Browser Cache Files and Cookies

With this feature, you can delete the browser cache (temporary files) and cookies (information used by Web sites you have visited) saved in the phone.

1. Select  and press  **OK** > **Settings** > **More...** > **Browser**.
2. Select **Delete Web Cache** or **Delete Web Cookies**.
3. If you are certain you would like to delete, press **OK** (left softkey) > **Yes** (left softkey).

Editing the Home Page

This feature allows you to edit the URL of the home page on your phone.

1. Select  and press  **OK** > **Settings** > **More...** > **Browser** > **Edit Home Page**.
2. Use your keypad to edit the URL and press **Save** (left softkey) to save your changes.

Section 2D

Security

- ◆ *Accessing the Security Menu (page 61)*
- ◆ *Using Your Phone's Lock Feature (page 62)*
- ◆ *Restricting Calls (page 63)*
- ◆ *Using Special Numbers (page 64)*
- ◆ *Deleting Phone Content (page 64)*
- ◆ *Resetting Phone Content (page 65)*
- ◆ *Security Features for Data Services (page 66)*

By using the security settings on your phone, you receive peace of mind without sacrificing flexibility. This section will familiarize you with your phone's security settings. With several options available, you can customize your phone to meet your personal needs.

Accessing the Security Menu

All of your phone's security settings are available through the Security menu. You must enter your lock code to view the Security menu.

1. Select  and press  > **Settings** > **More...** > **Security**.
2. Enter your lock code to display the Security menu.

Tip

If you can't recall your lock code, try using the last four digits of your wireless phone number. If this doesn't work, call Sprint Customer Service at 1-888-211-4727.

Using Your Phone's Lock Feature

Locking Your Phone

When your phone is locked, you can only receive incoming calls or make calls to 911, Sprint Customer Service, or special numbers. (See “Using Special Numbers” on page 64.)

1. Select  and press  > **Settings** > **More...** > **Security** and enter your lock code.
2. Select **Lock My Phone** > **Lock Now**. (To set your phone to lock the next time it is turned on, select **On Power-up**.)
3. Select **Full Lock** or **Excp. Incom. Calls**.
 - **Full Lock** to prevent making or receiving calls except incoming calls from the special numbers.
 - **Excp. Incom. Calls** to allow incoming calls but not outgoing calls.

Unlocking Your Phone

1. From standby mode, press **Unlock** (left softkey).
2. Enter your lock code.

Changing the Lock Code

1. Select  and press  > **Settings** > **More...** > **Security** and enter your lock code.
2. Select **Change Code**, and then enter and re-enter your new lock code.

Calling in Lock Mode

You can place calls to 911 and to your special numbers when in lock mode. (For information on special numbers, see “Using Special Numbers” on page 64.)

- ▶ To call an emergency number, special number, or Sprint Customer Service, enter the phone number and press .

Locking the Camera/Photos Menus

1. Select  and press  > **Settings** > **More...** > **Restrict and Lock**.
2. Select **Camera/Pictures**, and then enter your lock code.
3. Select an option and press .
 - **Unlocked** to unlock the current Camera/Photos lock feature.
 - **Lock Camera** to lock camera operation.
 - **Lock Photos** to lock access to files in My Albums.
 - **Lock All** to lock camera operation and access to files in My Albums.

Locking Voice Services

This setting allows you to block incoming and outgoing calls (except 911 calls) and SMS Voice messages.

1. Select  and press  > **Settings** > **More...** > **Restrict and Lock**.
2. Select **Voice**, and then enter your lock code.
3. Select **Lock** > **Locked**. (Select **Unlocked** to deactivate this feature.)

Restricting Calls

There may be occasions when you want to limit the numbers your phone can call or from which it can receive calls. You can use the Restrict Calls setting to do just that. (The Restrict Calls setting does not apply to 911 or Sprint Customer Service.)

1. Select  and press  > **Settings** > **More...** > **Restrict and Lock**.
2. Select **Voice**, and then enter your lock code.
3. Select **Restrict** > **Incoming Calls** or **Outgoing Calls**.
4. Select an option and press .
 - **Allow All** to make or receive all calls.
 - **Contacts Only** to make or receive calls to or from Contacts entries, voicemail, or special numbers only.
 - **Special #s Only** to make or receive calls to or from three special numbers only. (See “Using Special Numbers” on page 64.)

Note

Restricted incoming calls are forwarded to voicemail.

Using Special Numbers

Special numbers are important numbers that you have designated as being “always available.” You can call and receive calls from special numbers even if your phone is locked.

You can save up to three special numbers in addition to your Contacts entries (the same number may be in both directories).

To add or replace a special number:

1. Select  and press  > **Settings** > **More...** > **Security** and enter your lock code.
2. Select **Special Numbers**.
3. Select a location for your entry.
4. Enter the number and press .
5. Press **Done** (left softkey) to return to the security menu.

Note

There are no speed dial options associated with special numbers.

*You cannot make calls to or receive calls from special numbers if **Voice** is set to **Locked in Restrict and Lock**.*

Deleting Phone Content

Use the Security menu to quickly delete all the content you have created or stored in your phone.

1. Select  and press  > **Settings** > **More...** > **Security** and enter your lock code.
2. Select **Delete/Reset**.
3. Select an option and press .
 - **Delete Web Cookies** to delete all Web cookies (data saved in your phone by sites you have visited).
 - **Delete Web History** to delete all saved Web addresses of sites you have visited.
 - **Delete Web Cache** to delete all Web page information saved in your phone.
 - **Delete Contacts** to delete all of your Contacts entries.
 - **Delete My Stuff** to delete all items you have downloaded to your phone.
 - **Delete Photos** to delete all pictures saved in the phone.

- **Delete Voice Data** to delete all voice data and call memos saved in the phone.
 - **Delete Message** to delete all messages (including locked ones) in the Inbox, Sent Mail, Pending, and Drafts folders; all Recent Lists; and all user-created preset messages (text messages, SMS Voice messages, etc.).
 - **Delete Calendar Events** to delete all scheduled events (including secret ones).
4. Read the disclaimer and press **OK** (left softkey) > **Yes** (left softkey) to confirm the deletion.

Resetting Phone Content

Resetting the phone restores all the factory defaults, including the ring types and display settings. Contacts, History, Scheduler, and Messages are not affected.

1. Select  and press  > **Settings** > **More...** > **Security** and enter your lock code.
2. Select **Delete/Reset**.
3. Select an option and press .
 - **Reset Browser** to reset your Web browser's history, bookmarks, cookies, error log, auto-complete text, and URLs.
 - **Reset Shortcuts** to reset all shortcuts settings.
 - **Reset Pic. Mail** to reset your authentication ID for your Sprint Picture Mail account.
 - **Reset All Settings** to restore all the factory defaults, including ring types and display settings. Contacts, History, Calendar, and Messages are not affected.
 - **Reset Phone** to reset all settings and delete all data on your phone.

4. Read the disclaimer and press *OK* (left softkey).
5. If you are certain that you would like to reset your phone, press *Yes* (left softkey).

Security Features for Data Services

Enabling and Disabling Data Services

You can disable data services without turning off your phone; however, you will not have access to all data services, including Web and messaging. Disabling data services will avoid any charges associated with these services. While signed out, you can still place or receive phone calls, check voicemail, and use other voice services. You may enable data services again at any time.

To disable data services:

1. Select  and press  > *Settings* > *More...* > *Data* > *Disable Data*. (A message will be displayed.)
2. Press *Disable* (right softkey) to confirm that you want to sign out.

To enable data services:

1. Select  and press  > *Settings* > *More...* > *Data* > *Enable Data*. (A message is displayed.)
2. Press *OK* (left softkey) to enable data services.

Locking Data Services

You can lock access to data services without signing out.

1. Select  and press  > *Settings* > *More...* > *Restrict and Lock*.
2. Select *Data* > *Off and Lock*, and then enter your lock code.
3. Select *Locked*. (Select *Unlocked* to deactivate this feature.)

Roaming

- ◆ *Understanding Roaming (page 68)*
- ◆ *Setting Your Phone's Roam Mode (page 69)*
- ◆ *Using Call Guard (page 70)*
- ◆ *Using Data Roam Guard (page 71)*

Roaming is the ability to make or receive calls when you're off the Sprint National Network. Your new digital dual-band KATANA Eclipse X by SANYO works anywhere on the Sprint National Network and allows you to roam on 1900 and 800 MHz digital networks. This section explains how roaming works as well as special features that let you manage your roaming experience.

Understanding Roaming

Recognizing the Roaming Icon on the Display Screen

Your phone's display screen always lets you know when you're off the Sprint National Network. Anytime you are roaming, the phone displays the roaming icon ().

Tip

Remember, when you are using your phone off the Sprint National Network, always dial numbers using 11 digits (1 + area code + number).

Roaming on Other Digital Networks

When you're roaming on digital networks, your call quality and security will be similar to the quality you receive when making calls on the Sprint National Network. However, you may not be able to access certain features, such as data services, depending on the available network.

Note

If you're on a call when you leave the Sprint National Network, your call is dropped. If your call is dropped in an area where you think Sprint service is available, turn your phone off and on again to reconnect to the network.

Checking for Voicemail Messages While Roaming

When you are roaming off the Sprint National Network, you may not receive on-phone notification of new voicemail messages. Callers can still leave messages, but you will need to periodically check your voicemail for new messages if you are in a roaming service area for an extended period of time.

1. Dial 1 + area code + your phone number.
2. When you hear your voicemail greeting, press .
3. Enter your passcode at the prompt and follow the voice prompts.

When you return to the Sprint National Network, voicemail notification will resume as normal.

Setting Your Phone's Roam Mode

Your phone allows you to control your roaming capabilities. By using the Roaming menu option, you can determine which signals your phone accepts.

Choose from two different settings on your phone to control your roaming experience.

1. Select  and press  > **Settings** > **More...** > **Roaming** > **Set Mode**.
2. Select an option and press .
 - **Sprint Only** to access the Nationwide Sprint PCS Network only and prevent roaming on other networks.
 - **Automatic** to seek service on the Sprint National Network. When Sprint service is unavailable, the phone searches for an alternate system.

Using Call Guard

Your phone has two ways of alerting you when you are roaming off the Sprint National Network: the onscreen roaming icon and Call Guard. Call Guard makes it easy to manage your roaming by requiring an extra step before you can place or answer a roaming call. (This additional step is not required when you make or receive calls while on the Sprint National Network.)

To turn Call Guard on or off:

1. Select  and press  > **Settings** > **More...** > **Roaming** > **Call Guard**.
2. Select **On** or **Off** and press .

Note

Call Guard is turned on by default on your phone.

Voice dialing and speed dialing are not available when you are roaming with Call Guard enabled.

To place roaming calls with Call Guard on:

1. From standby mode, dial 1 + area code + the seven-digit number and press .
2. Press any key to delete the pop-up message, and press **Options** (right softkey) > **Roam Call**.

To answer incoming roaming calls with Call Guard on:

1. Press . (A message will be displayed notifying you that roaming charges will apply.)
2. Press any key to delete the pop-up message, and press **Options** (right softkey) > **Answer**.

Note

If the Call Guard feature is set to **On**, you need to take extra steps to make and receive roaming calls.

Using Data Roam Guard

Depending on service availability and roaming agreements, your phone may be able to access data services while roaming on certain digital systems. You can set your phone to alert you when you are roaming off the Sprint National Network and try to use data services such as messaging.

To set your Data Roam Guard notification:

1. Select  and press  > **Settings** > **More...** > **Roaming** > **Data Roaming**.
2. Select an option and press .
 - **Always Ask** turns your phone's Data Roam Guard feature on. You will see a prompt and will be required to respond anytime you access data services while roaming.
 - **Never Ask** turns your phone's Data Roam Guard feature off. You will not be notified of your roaming status when accessing data services.

To use data services when Data Roam Guard is active:

- ▶ When a pop-up notification appears informing you that data roam charges may apply, press **Roam** (left softkey) to connect.

History

- ◆ *Viewing History (page 72)*
- ◆ *History Thread (page 73)*
- ◆ *History Details (page 73)*
- ◆ *History Menu Options (page 74)*
- ◆ *Making a Call From History (page 74)*
- ◆ *Saving a Phone Number From History (page 75)*
- ◆ *Prepending a Phone Number From History (page 75)*
- ◆ *Deleting History (page 76)*

The History keeps track of incoming calls, outgoing calls, and missed calls. This section guides you through accessing and making the most of your History.

Viewing History

History is a list of the last 60 phone numbers (or Contacts entries) for calls you placed, accepted, or missed. History makes redialing a number fast and easy. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

Each entry contains the phone number (if it is available) and Contacts entry name (if the phone number is in your Contacts). Duplicate calls (same number and type of call) may only appear once on the list.

To display your History:

- ▶ From standby mode, press **TALK**.
– Or –
Select  and press **MENU OK** > *History*.

The current day's history appears under **Today**, and the previous day's history appears under **Yesterday**. Other history includes date information.

Note

You may also be able to access History from your phone's main screen carousel. See **Section 2B: Navigating the Main Screen** on page 36 for details.

Note

History records only calls that occur while the phone is turned on. If a call is received while your phone is turned off, it will not be included in the phone's Incoming or Missed call logs.

If you return a call from the voicemail menu, it will not be included in your phone's Outgoing call log.

History Icon Indication

You can determine the type of phone call that was placed, accepted, or missed from the icons shown below.

-  – Incoming Call
-  – Outgoing Call
-  – Missed Call

History Thread

The History thread screen shows all history of a selected history entry.

To display a History thread:

- ▶ From the History list display, select the entry you wish to view and press .

Tip

SMS messages are included in the History thread.

History Details

To display History details:

- ▶ From a History thread display, select an entry and press .

The History details screen shows the call type, phone number, and date and time of the call. An onscreen menu is also displayed according to the type of call. See “History Menu Options” on page 74.

To make a call from History details screen, press .

Tip

You can also view the next History entry by pressing the navigation key right or view the previous entry by pressing the navigation key left.

History Menu Options

Select a History entry and press  to display the date and time of the call, the phone number (if available), and the caller's name (if the number is already in your Contacts). Press **Options** (right softkey) to display the following options:

- **Call:Speaker On** to dial the phone number in speakerphone mode.
- **New Group** to access a Group entry menu to create a new Group entry.
- **Contact Details** to display information about the entry if it has already been saved in your Contacts.
- **Save Contact** to save a phone number. (See “Saving a Phone Number From History” on page 75.)
- **Delete** to delete the entry.
- **Delete All** to delete all entries in the History. (See “Deleting History” on page 76.)
- **Rename** to change any entry's current name to Caller ID name.
- **Prepend** to add numbers to the beginning of the selected number. (See “Prepending a Phone Number From History” on page 75.)

Making a Call From History

To make a phone call from History:

- ▶ From the History list display, use your navigation key to select an entry and press .

Note

*You cannot make calls from History to entries identified as **No ID** or **Restricted**.*

Saving a Phone Number From History

Your phone can store up to 500 Contacts entries. Contacts entries can store up to a total of 700 phone numbers, and each entry's name can contain 64 characters.

1. Select a History entry and press **Options** (right softkey) > **Save Contact**.
2. Select **New Entry** to create a new Contacts entry for the number or **Existing Entry** to save the number to an existing entry.
3. If **New Entry** was selected, select a number type, and then use the keypad to enter the new entry name and press .
– or –
If **Existing Entry** was selected, select an existing entry to which you want to save the number, and then select a number type and press .
4. Press **Done** (left softkey) to save the entry.

Prepending a Phone Number From History

If you need to make a call from History and you are outside your local area code, you can add the appropriate prefix by prepending the number.

1. Select a History entry and press **Options** (right softkey) > **Prepend**.
2. Enter the prefix and press  to call the number.

Deleting History

You can delete individual or all entries in your History using the Options menu.

1. Select  and press  > **History** to display your History.
2. Select an entry you wish to delete and press **Options** (right softkey) > **Delete**. (Select **Delete All** if you wish to delete all entries in your History.)
3. If you are certain you want to delete the History, press **Delete** (left softkey).

Section 2G

Contacts

- ◆ *About Contacts (page 77)*
- ◆ *Creating a New Contacts Entry (page 77)*
- ◆ *Finding Contacts Entries (page 78)*
- ◆ *Contacts Entry Options (page 80)*
- ◆ *Editing a Contacts Entry (page 81)*
- ◆ *Secret Contacts Entries (page 84)*
- ◆ *Dialing Sprint Services (page 85)*
- ◆ *Wireless Backup (page 85)*

Your phone's Contacts list helps you stay in touch with family, friends, and colleagues by keeping track of all their contact information. This section explains how to use your phone's Contacts list.

About Contacts

Your phone can store up to 500 Contacts entries. Contacts can store up to 700 phone numbers, 1000 email addresses, and 500 Web addresses. You can also add Contacts entries to **Groups**, allowing you to send the same text, picture, or voice message to up to 25 Contacts entries at one time.

Creating a New Contacts Entry

Creating a Contacts Entry

1. Select  and press  > **Contacts** > **Add New** > **New Contact**.
2. Enter a name for the new entry and press the navigation key down.
3. Enter the phone number for the entry and press .
4. Select a numbertype for the entry (**Mobile**, **Home**, **Work**, **Pager**, **Fax**, or **Other**) and press .
5. Press **Done** (left softkey).

After you have saved the number, the new Contacts entry is displayed.

Tip

ICE – In Case of Emergency

To make it easier for emergency personnel to identify important contacts, you can list your local emergency contacts under “ICE” in your phone’s Contacts list. For example, if your mother is your primary emergency contact, list her as “ICE–Mom” in your Contacts list. To list more than one emergency contact, use “ICE1–___,” “ICE2–___,” etc.

Creating a Group

You can create a group by assigning members to it and then giving it a name.

1. Select  and press  > **Contacts** > **Add New** > **New Group**.
2. Read the message and press **Start** (left softkey).
3. Scroll through the list and press  after each selection. (A check mark will appear in the box next to the selected entry.)
4. When you’ve marked all the entries you want to add, press **Continue** (left softkey).
5. Enter a name for the new group and press .
6. Press **Save** (left softkey) to save the group entry.

Finding Contacts Entries

There are several ways to display your Contacts entries: by name, by speed dial number, and by group. Follow the steps outlined in the sections below to display entries from the Contacts menu.

Finding Contacts by Name

1. Select  and press  > **Contacts**.
2. Scroll through all the entries.
– or –
Enter the first letter of a name or part of a name. (The more letters you enter, the more your search narrows.)
3. To display an entry, select it and press .
4. To dial the entry’s default phone number, press .
- or –
To display additional Contacts entries, press the navigation key left or right.

Finding Speed Dial Numbers

1. Select  and press  > *Settings* > *More...* > *Contacts* > *Speed Numbers*.
2. Scroll through speed dial entries. Speed dial numbers are displayed in numeric order.
3. To dial the entry's displayed phone number, press .

Finding Group Entries

1. Select  and press  > *Contacts*.
2. Scroll through the group titles using your navigation key. To display Contacts entries belonging to a group, highlight the group and press .
3. To dial the entry's displayed phone number, press .

Viewing History from Contacts

You can view the history of a selected Contacts entry from the Contacts list.

- ▶ Highlight an entry and press *Options* (right softkey) > *Contact History*.

Contacts Entry Options

To access a Contacts entry's options, highlight the entry and press Options (right softkey). Select an option and press .

Individual Contacts entry options:

- **New Group** to create a new group.
- **Edit Contact** to edit the selected Contacts entry.
- **Send Message** to send an SMS Text message, an SMS Voice message, an Email, or Picture Mail.
- **Delete Contact** to delete the selected Contacts entry.
- **Contact History** to display the selected Contacts entry's history.
- **Send Contact** to send the selected Contacts entry via Bluetooth.
- **Set as Secret** to make the selected entry secret. See "Secret Contacts Entries" on page 84.
- **Settings** to display the Settings menu.
- **Print** to print the selected Contacts entry's information.

Group options:

- **New Group** to create a new group.
- **Edit Group** to edit the selected group.
- **Delete Group** to delete the selected group.
- **Send Contact** to send the selected Contacts entry via Bluetooth.
- **Set as Secret** to make the selected Group secret. See "Secret Contacts Entries" on page 84.
- **Settings** to display the Settings menu.
- **Print** to print the selected Contacts entry's information.

Tip

You can view the next entry by pressing the navigation key right or view the previous entry by pressing the navigation key left.

Editing a Contacts Entry

Adding a Phone Number to a Contacts Entry

1. Display a Contacts entry. (See “Finding Contacts Entries” on page 78.)
2. Press **Options** (right softkey) > **Edit Contact**.
3. Scroll down to highlight <**Add Number**> and enter the new phone number and press **MENU OK**.
4. Select a number type for the number and press **MENU OK**.
5. Press **Done** (left softkey) to save the new number.

Adding Members to a Group

1. From the Contacts list, highlight the group to which you want to add members and press **MENU OK**.
2. Press **Options** (right softkey) > **Edit Group** > **Add More**.
3. Read the message and press **Start** (left softkey).
4. Highlight each member you want to add and press **MENU OK** after each selection. (A check mark will appear in the box next to the selected member.)
5. Press **Continue** (left softkey) > **Save** (left softkey).

Selecting an Illumination Pattern for a Contacts Entry

You can assign an illumination scheme to a Contacts entry so you can identify the caller by illumination pattern. (See “Changing the Illumination” on page 48.)

1. Display a Contacts entry and press **MENU OK**.
2. Select **Set Illuminations** and press **MENU OK** to display the illuminations menu.
3. Highlight an illumination patterns menu (**Incoming Calls**, **Text Message**, **Picture Mail**, **VoiceSMS**, or **Email**) and press **MENU OK**.
4. Select **Change**.
5. Select an illumination pattern and press **MENU OK**.

Assigning Speed Dial Numbers

Your phone can store up to 98 phone numbers in speed dial locations. (For details on how to make calls using speed dial numbers, see “Using Speed Dialing” on page 29.)

To assign a speed dial number to a new phone number:

1. Add a phone number to a new or to an existing Contacts entry. (See “Creating a New Contacts Entry” on page 77 or “Adding a Phone Number to a Contacts Entry” on page 81.)
2. Press **Options** (right softkey) > **Set Speed Dial**.
3. Select an available speed dial location and press . (A confirmation will be displayed.)

To assign a speed dial number to an existing phone number:

1. Display a Contacts entry. (See “Finding Contacts Entries” on page 78.)
2. Highlight the number you wish to set as a speed dial and press **Options** (right softkey) > **Set Speed Dial**.

3. Select an available speed dial location and press . (A confirmation will be displayed.)

Note

*If you attempt to assign an already in-use speed dial location to a new phone number, a message will appear asking if you wish to replace the existing speed dial assignment. Press **Replace** (left softkey) to assign the location to the new phone number and delete the previous speed dial assignment.*

Editing a Contacts Entry

1. Display a Contacts entry.
2. Press **Options** (right softkey) > **Edit Contact**.
3. Select the field you wish to edit, and then add or edit the information and press .
4. Press **Done** (left softkey) to save the new number.

Editing a Group

1. Display the Contacts list and highlight the group you want to edit.
2. Press **Options** (right softkey) > **Edit Group**.
3. Change the group name or the assigned image.
4. Press **Save** (left softkey) to save your changes.

Selecting a Ringer Type for a Contacts Entry

Assign a ringer type to a Contacts entry so you can identify the caller by the ringer type. (See “Ringer Types” on page 43.)

1. Display a Contacts entry and press .
2. Select the current ring type and press  to display the Ringer Type menu.
3. Highlight a ringer type menu (*Incoming Calls*, *Text Message*, *Picture Mail*, *VoiceSMS*, or *Email*) and press .
4. Select *Change*.
5. Select an option and press .
6. Select a ringer and press .

Tip

To download a new ringer, select *Get New* in step 5 above and follow the instructions to select, purchase, download, and assign the new ringer.

Assigning an Image to a Contacts Entry

You can assign an image to a Contacts entry. The image is displayed when the entry calls you.

1. Display a Contacts entry and press .
2. Press the navigation key to highlight the  icon and press .
3. Select *Select Image*.
4. Select an option and press .
5. Select an image and press .

Removing an Entry from a Group

1. Display the Contacts list and highlight a group from which you want to delete a member.
2. Press *Options* (right softkey) > *Edit Group*.
3. Highlight the member you want to delete and press *Options* (right softkey) > *Remove from Gr.* > *Yes* (left softkey).
4. Press *Save* (left softkey).

Secret Contacts Entries

You can hide an entry by making it secret. The entry is not displayed in your Contacts. In History, a telephone number is displayed but the Contacts entry's name is not.

To make an entry secret:

1. Highlight a Contacts entry and press **Options** (right softkey) > **Set as Secret**.
2. Select **On**.
3. From the Contacts list, press **Options** (right softkey) > **Settings** > **Hide Secret**.
4. Enter the four-digit lock code.

To make an entry public:

1. From the Contacts list, press **Options** (right softkey) > **Settings** > **Show Secret**.
2. Enter the four-digit lock code.

Note

*If you make an entry secret, calls cannot be made to that entry if **Contacts Only** is selected in **Settings** > **More...** > **Restrict and Lock** > **Voice** > **Restrict** > **Incoming Calls** or **Outgoing Calls** (see page 63).*

Tip

If you can't recall your lock code, try using the last four digits of your wireless phone number. If this doesn't work, call Sprint Customer Service at 1-888-211-4727.

Dialing Sprint Services

Your Contacts list is preprogrammed with contact numbers for various Sprint services.

To dial a service from your Contacts:

1. Select and press > **Settings** > **More...** > **Contacts** > **Services**.
2. Select **CustomerService**, **Dir Assistance** (Sprint 411), **AccountInfo**, or **Sprint Operator**.

To dial a service from standby mode using your keypad:

1. Dial the appropriate service number:

■ **CustomerService** –

■ **Sprint 411** –

■ **AccountInfo** –

■ **Sprint Operator** –

2. Press to place the call.

Wireless Backup

This feature allows you to back up all of your contacts to the Sprint Web site and restore them if your phone is lost, stolen, damaged, or replaced.

Tip

To use the wireless backup service, you are required to activate the service from your phone.

To subscribe to the wireless backup service, you will need to purchase a license to use the wireless backup service through your phone's browser. The license expires after a set period of time and must be renewed regularly. As part of the initial subscription process, a random wireless backup password is generated. The randomly generated password will be sent to your phone as an SMS text message. (Subscribe launches the subscription process. If you are already subscribed to wireless backup service, Unsubscribe will be displayed.)

Activating and Deactivating Wireless Backup Service

To activate the wireless backup service:

1. Select  and press  **OK** > **Settings** > **More...** > **Wireless Backup** > **Subscribe**. (You will be prompted to confirm your license status.)
2. Press **Yes** (left softkey) and follow the onscreen instructions to purchase the license.
3. Please wait while registering the license. (You will see a confirmation screen if it has been registered.)

Note

Once you have completed the registration, you will receive a message with your password, which you need to access the Wireless Backup Web site (www.wirelessbackup.sprint.com) in order to edit your contacts from your computer.

Tip

Each time you edit the contacts on your phone, they are backed up at www.wirelessbackup.sprint.com.

To deactivate the wireless backup service:

1. Select  and press  **OK** > **Settings** > **More...** > **Wireless Backup** > **Unsubscribe**. (A message will be displayed.)
2. Follow the onscreen instructions to unsubscribe from the wireless backup service.

Note

You can unsubscribe from the wireless backup service only through the Sprint Web site.

Viewing Your Wireless Backup Status

1. Select  and press  **OK** > **Settings** > **More...** > **Wireless Backup** > **View Status**.
2. Press **OK** (left softkey).

Setting the Wireless Backup Alert

This feature turns the pop-up alert on or off when a Wireless Backup is in progress.

1. Select  and press  **OK** > **Settings** > **More...** > **Wireless Backup** > **Alert**.
2. Select **Alert me** or **No alerts**.

Tip

To display the wireless backup service information, select **Home** and press **Menu > Settings > More... > Wireless Backup > Learn More**. When the service is available, you can also select **Troubleshoot** to display the troubleshooting guide.

Calendar and Tools

- ◆ *Using Your Phone's Calendar (page 88)*
- ◆ *Using Your Phone's Alarm Clock (page 92)*
- ◆ *Using Your Phone's Tools (page 92)*

Your phone is equipped with several personal information management features that help you manage your busy lifestyle. This section shows you how to use these features to turn your phone into a time management planner that helps you keep up with your contacts, schedules, and commitments.

Using Your Phone's Calendar

Adding a Schedule Event to the Calendar

Your Calendar helps organize your time and reminds you of important events up to 100 items.

1. Select  and press  > **Tools** > **Calendar**.
2. Select the day to which you would like to add an event and press **Options** (right softkey) > **Add Schedule**.

Tip

*To change the calendar display views, press the left softkey repeatedly to toggle **Monthly** or **Weekly** views. In the weekly view, you can easily add to or edit your own schedule.*

3. Enter a description and press .
4. Select the following items you want to set and press .
 - **Category** to select an event category (**Appointment**, **Business**, **Meeting**, **Personal**, **Vacation**, **Travel**, or **Miscellaneous**).

- **Priority** to select an event priority (*None, High, or Low*).
 - **Start** to schedule a start time for the event. Use your keypad or navigation key to set the hours, minutes, and AM or PM.
 - **End** to schedule an end time for the event. Use your keypad or navigation key to set the hours, minutes, and AM or PM.
 - **Location** to add a location for the schedule.
 - **Alarm** to select a ringer type for the alarm.
 - **Alarm Time** to edit the alarm time (number of hours or minutes before the schedule starts). The default alarm time is 10 minutes before a schedule.
 - **Repeat** to select a repeating status for the schedule (*Once, Daily, Weekly, Monthly, or Yearly*).
5. Press **Save** (left softkey) to save the event.

Adding a Call Alarm to the Calendar

You can set call alarms to notify you when you need to place a call. The call alarm will let you know when and to whom to place a scheduled call. You can set up to 15 call alarms.

1. Select  and press  > **Tools** > **Calendar**.
2. Select a day and press **Options** (right softkey) > **Add Call Alarm**.
3. Enter the phone number directly or press **Options** (right softkey) > **From Contacts** or **Voicemail**.
 - **From Contacts** to select a number from your Contacts.
 - **Voicemail** to select the number for voicemail access.
4. Select the items to edit and press .
 - **Category** to select an event category (*Appointment, Business, Meeting, Personal, Vacation, Travel, or Miscellaneous*).
 - **Time/Date** to edit the start time and date.
 - **Alarm** to select the ringer alarm.
 - **Repeat** to set the Call Alarm's repeat status (*Once, Daily, Weekly, Monthly, or Yearly*).
5. Press **Save** (left softkey).

Adding To Do List Items

Your phone can store and manage up to 40 To Do List items.

1. Select  and press  > *Tools* > *Calendar*.
2. Select a day and press *Options* (right softkey) > *Add To Do*.
3. Enter a description and press .
4. Select an option you want to edit and press .
 - *Category* to select an event category (*Appointment, Business, Meeting, Personal, Vacation, Travel, or Miscellaneous*).
 - *Priority* to select an event priority (*None, High, or Low*).
 - *Due Time/Date* to schedule a due time and date.
 - *Status* to select a status for the To Do items (*Needs Action or Completed*).
5. Press *Save* (left softkey) to save the To Do items.

Event Alert Menu

When your phone is turned on and you have an event alarm scheduled, your phone alerts you and displays the event summary. There are several ways your phone alerts you to scheduled events:

- By playing the assigned ringer type.
- By illuminating the backlight.
- By flashing the LED.

To silence the alarm and reset the schedule, press .

To view additional options, press the appropriate key:

- *Dismiss* (right softkey) clears the event alert.
- Press and hold the side camera key to cancel snooze mode.

Viewing Events

1. Select  and press  > *Tools* > *Calendar*.
2. Select the day for which you would like to view events and press . (If you have events scheduled for the selected day, they will be listed in chronological order.)

Tip

In the monthly view, days with events scheduled are indicated by a small triangle just to the left of the date.

3. To display an event's details, highlight it and press .

Going to a Specified Date

1. Select  and press  > **Tools** > **Calendar** > **Options** (right softkey) > **Go to Date**.
2. Enter a date and press .

Deleting a Day's Events

1. Select  and press  > **Tools** > **Calendar**.
2. Select the day for which you would like to delete events and press .

Tip

In the monthly view, days with events scheduled are indicated by a small triangle just to the left of the date.

3. Press **Options** (right softkey) > **Delete**.
4. Select an option and press .
 - **This** to delete a single event.

- **Select** to select and delete multiple events at one time.
 - **All on This List** to delete all events on the list.
 - **Completed** to delete completed **To Do Events**.
5. Press **Yes** (left softkey) to delete the event(s).

Deleting Old Events

To delete events scheduled before a specific time and date:

- ▶ Select  and press  > **Tools** > **Calendar** > **Options** (right softkey) > **Delete Memory** > **Delete Old** > **Yes** (left softkey).

Deleting All Events

1. Select  and press  > **Tools** > **Calendar** > **Options** (right softkey) > **Delete Memory** > **Delete All** > **Yes** (left softkey). (An alert will be displayed asking you to confirm the deletion.)
2. Press **Yes** (left softkey) to delete all events or **No** (right softkey) to cancel.

Using Your Phone's Alarm Clock

Your phone comes with a built-in alarm clock that has multiple alarm capabilities.

1. Select  and press  > *Tools* > *Alarm Clock*.
2. Select an alarm number and press .
3. Enter a description for the alarm and press .
4. Select a time for the alarm by selecting the *Time* field and pressing 
 - Using your keypad or navigation key, set the hours, minutes, and AM or PM and press .
5. Select a repeating status for the alarm by selecting the *Repeat* field and pressing 
 - Highlight *Once*, *Daily*, *Mon – Fri*, *Sat and Sun*, or a specific day, and press .
6. Turn the alarm on or off by selecting the *Alarm* field and pressing 
 - Select *On* or *Off* and press .
7. Press **Save** (left softkey) to save the alarm settings.

Tip

Press the left softkey (**On** or **Off**) to toggle the alarm on and off.

To change the alarm settings, press **Settings** (right softkey) to set the ringer length and snooze options.

Using Your Phone's Tools

In addition to helping you be more efficient and organized, your phone offers useful and entertaining tools.

Using the Calculator

Your phone comes with a built-in calculator.

1. Select  and press  > *Tools* > *Calculator*.
2. Enter numbers using your keypad.
 - Press the appropriate navigation key for an arithmetic option (+ – × ÷).
 - Press the left softkey to enter decimal points.
 - Press **CLR** (right softkey) to clear all numbers.
3. Press  for the result.

Using the World Clock

To view the time in different locations:

1. Select  and press  > **Tools** > **World Clock**.
2. Press the navigation key left or right to scroll through different time zones.

Using the Countdown Timer

This feature allows you to use your phone as a countdown timer to alert when a specified period of time has elapsed. You can set up to five timers.

1. Select  and press  > **Tools** > **Countdown**.
2. Select a countdown timer number and press .
3. Select items to edit and press .
 - **Description** to enter a description of the countdown.
 - **Time** to enter the countdown time.
 - **Alarm** to set the countdown alarm on or off.
4. Press **Save** (left softkey) to save the countdown settings.

Tip

Press the left softkey (**On** or **Off**) to toggle the countdown alarm on and off.

To change the alert settings, press **Settings** (right softkey) to set the ringer length and snooze options.

Using the Stopwatch

To use the stopwatch:

- ▶ Select  and press  > **Tools** > **Stopwatch**.
 - Press the left softkey repeatedly to **Start**, **Stop**, or **Resume** the stopwatch.
 - While the stopwatch is running, press **Lap** (right softkey) to enter a lap time. You can record up to five lap times.

To display the stopwatch options:

- ▶ From the stopwatch display, press **Options** (right softkey).
 - **Go to Lap List** to display a saved Lap List. Press **Detail** (left softkey) to display the Lap List detail.
 - **Save to Lap List** to save recorded lap times.
 - **Reset** to reset the time to zero and clear any recorded lap times.

Voice Services

- ◆ *Using Automatic Speech Recognition (ASR) (page 94)*
- ◆ *Voice and Call Recording (page 97)*
- ◆ *Setting Up Screen Call (page 100)*

Your phone's Voice Services let you place calls using your voice, store voice reminders, and record memos right on your phone. This section includes easy-to-follow instructions for using Automatic Speech Recognition (ASR) and managing voice and call memos.

Using Automatic Speech Recognition (ASR)

You can use your phone's built-in automatic speech recognition (ASR) software to dial a phone number in your Contacts or to launch phone functions. All you have to do is to talk into the phone, and ASR will recognize your voice and complete tasks by itself.

Activating ASR

- ▶ From standby mode, press and hold  or .

The screen displays "Say a command" and the phone prompts you to say the name of the command you want to use. To complete your task, simply follow the voice prompts.

Available ASR commands are:

- **Call** <Name or #> to call an entry in your Contacts list or to the phone number you say. (See page 95 for details.)
- **Go To** <Menu> to jump directly to the menu items or applications. (See page 95 for details.)
- **Check** <Item> to check your phone's status. (See page 96 for details.)

Note Use ASR in a quiet environment so it can accurately recognize your commands.

Tip When you display a Command menu, say “More options” to display additional commands.

During ASR operation, press **Help** (left softkey) to get instructions using the software.

Making a Voice Call Using ASR

With ASR, you can make a voice call by reciting a name or phone number.

1. Press and hold **TALK** or **[Mute]**.
2. If you hear “Say a command,” say “**Call**.”
3. If you hear “Say the name or number,” say a name or a phone number.
4. If you hear “Which location?,” say a number type (for example, “Mobile”).

Tip You can skip steps 3 and 4 by saying a name and location after “Call” without pausing (for example, “Call John Jones mobile”).

Note If ASR does not recognize the name or number, it will find the most likely matches and display a list of up to three names or numbers. You will hear “Did you say...” followed by the name or number. You can confirm by saying “Yes.” Say “No” to change the selection.

Opening Menus Using ASR

You can jump directly to many menu items or applications by saying “Go to” followed by a menu option.

1. Press and hold **TALK** or **[Mute]**.
2. If you hear “Say a command,” say “**Go To**.”
3. If you hear “Which shortcut?,” say an application name (for example, “Messages”).
4. The menu you have chosen will open.

Tip Say “More options” to display additional commands.

Checking Phone Status Using ASR

You can use ASR to obtain information about your phone:

- My Phone Number
- Network
- Signal Strength
- Battery
- Status (all of the previous except My Phone Number)

1. Press and hold **TALK** or .
2. If you hear “Say a command,” say “**Check**.”
3. If you hear “Which status item?,” say a command.

ASR Options

To change ASR confirmation:

1. Press and hold **TALK** or .
2. Press **Settings** (right softkey) > **Confirmation** and select an option.
 - **Automatic** to ask for confirmation only when the system is not sure what you said.
 - **Always Confirm** to always ask for confirmation.
 - **Never Confirm** to never ask for confirmation.

To adapt the system to your voice:

1. Press and hold **TALK** or .
2. Press **Settings** (right softkey) > **Adaptation** > **Adapt Voice**.
3. Press **Start** (left softkey) and repeat each word, phrase, or telephone number you hear.

To reset the adaptation:

1. Press and hold **TALK** or .
2. Press **Settings** (right softkey) > **Adaptation** > **Reset Voice** > **Yes** (left softkey).

To change the ASR mode:

1. Press and hold **TALK** or .
2. Press **Settings** (right softkey) > **Modes** and select an option.
 - **Expert Mode** to sound a beep only.
 - **Prompt Mode** to prompt for required information.
 - **Readout Mode** to prompt for required information and to read aloud the content displayed on the main screen.

To change the ASR dialing region:

1. Press and hold  or .
2. Press **Settings** (right softkey) > **Dialing region** and select an option.
 - **North America** to recognize only numbers valid in North America.
 - **Other** to recognize any number regardless of location.

To display the ASR software version:

1. Press and hold  or .
2. Press **Settings** (right softkey) > **About**.

Voice and Call Recording

Use your phone's voice recording to record brief memos to remind you of important events, phone numbers, or grocery list items and to record the other party's voice during a phone call.

To record a voice memo:

1. Select  and press  > **Tools** > **Voice Memo** > **Record**.
2. Start recording after the beep.

To stop recording:

- ▶ Press , , or .

Note

You can store up to 300 voice memos on your phone. Maximum recording time is up to eight hours.

To record a phone conversation:

1. During a call, press **Options** (right softkey) > **Call Memo Rec.**
2. Start recording after the beep.

To stop the recording of the conversation:

- ▶ Press **MENU OK** or **BACK**. (Recording will also stop when you disconnect.)

Note Only the other party's voice is recorded during this process.

Voice and Call Recording Options

1. Select **Home** and press **MENU OK** > **Tools** > **Voice Memo** > **List**.
2. Select **Voice(Phone)** or **microSD** (if available).
3. Select a voice memo and press **Options** (right softkey).
4. Select an option and press **MENU OK**.
 - **Play** to play selected voice memos or all voice memos.
 - **This** to play the selected memo.
 - **Multiple** to play selected memos.
 - **All** to play all memos.

Note Press **Speed** (left softkey) to change playing speed.

- **Speaker On** or **Speaker Off** to activate or deactivate the speakerphone mode.
- **Edit Title** to edit the title of a voice memo.
- **Properties** to display information about a voice memo.
- **Type Filter** to display only voice memos or only call memos.
- **Sort by** to sort voice memos by time recorded, name, or file size.
- **Go to Time** to set the point from which the memo starts playing.
- **Go to microSD/Phone** to switch between voice memos recorded on the microSD card and in the In Phone folder.
- **Send via Bluetooth** to send voice memos via Bluetooth.
- **Copy to microSD/Phone** to copy selected voice memos to the microSD card or to the In Phone folder.
- **Move to microSD/Phone** to move selected voice memos to the microSD card or to the In Phone folder.
- **Delete** to delete either selected memos or all memos.

Deleting Voice and Call Recordings

To delete an individual recording:

1. Select  and press  > **Tools** > **Voice Memo** > **List**.
2. Select **Voice(Phone)** or **microSD** (if available).
3. Select the memo you want to delete and press **Options** (right softkey) > **Delete** > **This** > **Yes** (left softkey).

To delete all recordings:

1. Select  and press  > **Tools** > **Voice Memo** > **List**.
2. Select **Voice(Phone)** or **microSD** (if available).
3. Press **Options** (right softkey) > **Delete** > **All** > **Yes** (left softkey).

To delete multiple selected recordings:

1. Select  and press  > **Tools** > **Voice Memo** > **List**.
2. Select **Voice(Phone)** or **microSD** (if available).
3. Press **Options** (right softkey) > **Delete** > **Multiple**.
4. Select the memos you want to delete and press **Delete** (left softkey) > **Yes** (left softkey).

Setting the Recording Mode

This feature allows you to match the sensitivity of the microphone to the type of recording you are making.

1. Select  and press  > **Tools** > **Voice Memo** > **Settings** (left softkey) > **Recording Mode**.
2. Select an option and press :
 - **Dictation** to record a single voice.
 - **Conference** to record multiple voices.

Setting Up Screen Call

You can screen incoming calls by using a recorded announcement, either a prerecorded one or one that you record. You can also record the caller's message.

Activating Screen Call

To start Screen Call when you have an incoming call:

- ▶ When the phone rings or vibrates, press **Options** (right softkey) > **Screen Call**.

Tip

While the caller's message is being recorded, press **TALK** to answer the call, or press **END** to stop recording and disconnect the call.

To screen calls automatically:

1. Select  and press  > **Tools** > **Voice Memo** > **Screen Call** > **Auto**.
2. Select **On**.
3. Set the answer delay.
4. Press **OK** (left softkey).
(The  icon is displayed on the screen.)

Selecting an Announcement for Screen Call

1. Select  and press  > **Tools** > **Voice Memo** > **Screen Call** > **Announcement**.
2. Select **Pre-Recorded** or **Custom**.

Recording Your Name for a Prerecorded Announcement

You can use a prerecorded announcement with or without your name. If you record your name, your phone adds it to the prerecorded announcement that you are not available to answer calls.

1. Select  and press  > **Tools** > **Voice Memo** > **Screen Call** > **Announcement**.
2. Highlight **Pre-Recorded** and press **Edit** (right softkey) > **Record Name**.
3. Press  to start the first recording. (Press  to stop recording. The maximum recording time is 12 seconds.)
4. After the first recording, press  again to start the second recording.
5. Press  to stop recording.

Recording a Customized Announcement

1. Select  and press  > *Tools* > *Voice Memo* > *Screen Call* > *Announcement*.
2. Highlight *Custom* and press *Edit* (right softkey) > *Record*.
3. Press  to start the first recording. (Press  to stop recording. The maximum recording time is 12 seconds.)
4. After the first recording, press  again to start the second recording.
5. Press  to stop recording.

Reviewing an Announcement

1. Select  and press  > *Tools* > *Voice Memo* > *Screen Call* > *Announcement*.
2. Select *Pre-Recorded* or *Custom*, and press *Edit* (right softkey) > *Play* or *Play:Speaker*.

Deleting an Announcement

1. Select  and press  > *Tools* > *Voice Memo* > *Screen Call* > *Announcement*.
2. Select *Pre-Recorded* or *Custom*, and press *Edit* (right softkey).
3. Select *Delete Name* or *Delete*. (A confirmation will be displayed.)
4. Press *Yes* (left softkey).

microSD Card

- ◆ *Using Your Phone's microSD Card and Adapter (page 102)*
- ◆ *File Manager (page 105)*
- ◆ *microSD Settings (page 107)*
- ◆ *microSD Folders (page 108)*
- ◆ *Backing Up Your Contacts Data to the microSD Card (page 108)*
- ◆ *Setting Up the Digital Print Order Format (page 109)*
- ◆ *Connecting Your Phone to Your Computer (page 110)*

Your phone lets you use a microSD card and an adapter to expand the available memory space. This highly secure digital card enables you to exchange images, music, and voice data between SD-compatible devices.

Using Your Phone's microSD Card and Adapter

Using the microSD Card


Your phone is equipped with a 256 MB microSD (Secure Digital) memory card and its adapter to expand the phone's available memory space. It allows you to store images, videos, music, and voice data in your phone.

Note

Your phone comes with the microSD card preinstalled.

Removing the microSD Card


1. Open the microSD slot and, using your thumbnail or a flat, blunt object, push the card in slightly and then release.
2. Gently slide the card out of the slot.
3. Close the slot cover.

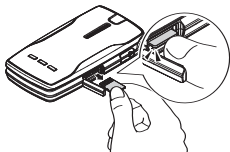

Note The microSD card and its adapter can be easily damaged by improper operation. Please be careful when inserting, removing, or handling them.

Inserting the microSD Card

1. Open the microSD slot cover and insert a microSD card into the slot with the gold terminals facing up (see illustration below).
2. Gently press the card until it snaps into place.
3. Close the slot cover.

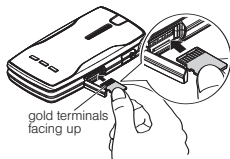

Note Be sure to use only recommended microSD cards (64MB-4GB). Using non-recommended microSD cards could cause data loss and damage your phone.

microSD Icon Indicators

The following icon will be displayed on your phone's display screen when a microSD card is properly inserted into the microSD card slot:

Status Icon	Meaning
	This icon indicates a microSD card has been inserted into your phone. It turns dim while the microSD card is being accessed.

Note **DO NOT** remove a microSD card while files are being accessed or transferred. Doing so will result in loss or damage of data.


Make sure your battery is fully charged before using the microSD card. Your data may become damaged or unusable if the battery runs out while using the microSD card.

Using the microSD Adapter

The supplied microSD adapter allows microSD cards to be used in SD-compatible devices. Before using, you will need to insert the microSD card into the microSD adapter.


To insert the microSD card into the microSD adapter:

- ▶ With the label side of the microSD card facing up, insert the card into the supplied microSD adapter, and gently slide the card until it is fully inserted.

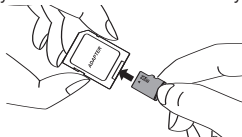

To remove the microSD card from the microSD adapter:


- ▶ Hold the front edge of the microSD card, and gently pull outward to remove it from the adapter.

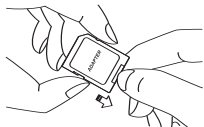

Setting Write Protection

The included microSD adapter has built-in write protection to prevent accidental overwriting or erasure of your vital data.

 - ▶ Slide the write-protect tab down to the “Lock” position to prevent overwriting data. To enable writing or reading data on the microSD card, slide the write-protect tab back up to the normal position.



File Manager

File Manager allows you to manage files such as pictures, videos, music, and applications stored in your phone or on the microSD card.

Accessing File Manager

1. Select  and press  > **Tools** > **File Manager**.
2. Select an option and press .
 - **Phone** to access the files in your phone.
(The following preset folders will be displayed: My Albums, Voice, and Bluetooth.)
 - **microSD** to access the files on your microSD card.
(The following preset folders will be displayed: **DCIM**, **VIDEO**, **MUSIC**, **VOICE**, **SD_PIM** and **BLUETOOTH**.)
 - **microSD Options** allows you to manage additional tools such as **DPOF Print**, **Format**, **Create Folders**, or **Save Contacts**.

File Manager Icons

Content Type	Icon	File Extension
Picture		jpeg, jpg, wbmp, png, bmp, gif
Video		m4v, mp4, 3gp, 3gpp, 3gp2, 3g2, wmv, asf
Audio		mp3, aac, m4a, amr, wma
		qcp, uvo
		mid, midi
		pmd
Contacts		vcf
Calendar		vcs
Unknown		unsupported file format

Opening Files in the File Manager

1. Select  and press  > **Tools** > **File Manager** > **Phone** or **microSD**.
2. Select a folder and press .
3. Use your navigation key to select an item you wish to open.

Using File Manager Options

When you are in the file manager, several user options are available by selecting **Options** (right softkey).

- **Move** to move a file from the current folder to another folder in your phone.
- **Copy** to copy a file from the current folder to another folder in your phone.
- **Delete** to delete a file or folder from File Manager.
- **Import** to import a Contacts file or a calendar file.
- **Play/Listen/View** to play a video, listen to audio, or view a picture.
- **Sort by** to sort folder contents by name, date, or size.
- **Properties** to view a selected file's properties.
- **Rename** to change the name of a selected file.

Note

You may not be able to use the file if you change the file name extension.

- **Set as** to set images as your wallpaper, screen saver, or Caller ID for Contacts entries.
- **Move to microSD** to move a file to your microSD card.
- **Move to Phone** to move a file to your phone.

- **Copy to microSD** to copy a file to your microSD card.
- **Copy to Phone** to copy a file to your phone.
- **Go to microSD** to use File Manager with the microSD card.
- **Go to Phone** to use File Manager with your phone.
- **Send via Bluetooth** send a file via Bluetooth. (See page 136.)
- **Print** to print an image by using Bluetooth. (See page 135.)
- **Use Bluetooth** to play an audio file through a Bluetooth device.
- **List/Thumbnail** to switch between list view and thumbnail view.
- **Create Folders** to create preset folders on the microSD card. (See "Accessing File Manager" on page 105.)
- **View Memory** to view the used and available memory space.

Sorting the Folder Contents

1. Select  and press  > **Tools** > **File Manager** > **Phone** or **microSD**.
2. Select a folder and press .
3. Press **Options** (right softkey) > **Sort by**.
4. Select an item (**Name**, **Size**, or **Date**) and press .
5. Select **Ascending** or **Descending**.

Viewing Memory in File Manager

1. Select  and press  > **Tools** > **File Manager** > **Phone** or **microSD**.
2. Press **Options** (right softkey) > **View Memory**.
(The used and available memory space will be displayed.)

microSD Settings

Creating Folders in the microSD Card

The following steps allow your phone to create default folders for storing files in your microSD card.

1. With the microSD inserted, select  and press  > **Tools** > **File Manager** > **microSD Options**.
2. Select **Create Folders** and press . (The phone will create the microSD's default folders: **DCIM**, **VIDEO**, **MUSIC**, **VOICE**, **SD_PIM**, and **BLUETOOTH**.)

Formatting the microSD Card

Formatting a microSD card permanently removes all files stored on the card.

1. With the microSD inserted, select  and press  > **Tools** > **File Manager** > **microSD Options**.
2. Select **Format** and press . (A warning will be displayed.)
3. If you are sure you wish to remove all the files from your microSD card, press **Yes** (left softkey).

Note

The formatting procedure deletes all the data on the microSD card, after which the files CANNOT be retrieved. To prevent the loss of important data, please check the contents before you format the card.

microSD Folders

Displaying Your microSD Folders

All the files stored in your microSD are accessible through your microSD card folders.

1. With the microSD inserted, select  and press  > **Tools** > **File Manager** > **microSD**.
2. Select a folder (**DCIM**, **VIDEO**, **MUSIC**, **VOICE**, **SD_PIM**, or **BLUETOOTH**) and press .
3. To view or play a file, select it and press  or the appropriate softkey.

Backing Up Your Contacts Data to the microSD Card

You can easily back up your phone's Contacts data to the microSD card.

1. Select  and press  > **Tools** > **File Manager** > **microSD Options**.
2. Select **Save Contacts**.
3. Press **Yes** (left softkey) to proceed. (Please wait while the system creates your data.)
4. Press **OK** (left softkey) to complete.

Note

DO NOT remove your microSD card while files are being accessed or transferred. It will result in a loss of or damage to the data.

Setting Up the Digital Print Order Format

Digital Print Order Format (DPOF) is a feature that allows you to set up your digital picture print orders in advance. You can use it to set options such as which pictures to print, the number of prints for each picture, and index print settings.

1. With the microSD inserted, select  and press  > **Tools** > **File Manager** > **microSD Options** > **DPOF Print**.
2. Select a print mode from **Standard Print** or **Index Print**.
 - **Standard Print** to print the image at its standard size.
 - **Index Print** to print an index sheet of thumbnail images.
3. Press **Options** (right softkey) and select an option from the following.
 - **Select Picture** to select the picture(s) you want to print. (You may select up to 99 pictures.)
 - **Picture Info** to display picture(s) information.

- **Unselect Picture** to unselect the picture(s) you have selected.
- **Set No. of Copies** to set the number of copies you want to print. (The maximum number of copies that you can select is 99 copies.)

4. When you have finished setting the print options, press **Save** (left softkey).
 - If you are setting the print options for standard prints, you will be prompted to choose whether to print the date. Select **Yes** or **No**. (Depending on your printer, some options may not be available.)

Note

Pictures saved on your microSD card that were not taken with your phone may not be printable.

Clearing a DPOF Print Order

You can clear a DPOF print order for standard prints and index prints at the same time.

1. With the microSD inserted, select  and press  > **Tools** > **File Manager** > **microSD Options** > **DPOF Print**.
2. Select **Clear Order**.

Reviewing an Order Summary

1. With the microSD inserted, select  and press  > **Tools** > **File Manager** > **microSD Options** > **DPOF Print**.
2. Select **Order Summary**. (The selected print options will be displayed.)
 - Press **Switch** (right softkey) to switch the display between **Standard Print** and **Index Print**.

Connecting Your Phone to Your Computer

Before using your phone's mass storage capabilities, you need to prepare your phone's data services to synchronize with your desktop or laptop computer. Once the phone is connected to the computer, you can transfer your data to or from the microSD card.

Using Mass Storage

1. With the microSD inserted, select  and press  > **Tools** > **Mass Storage**. (A warning will be displayed.)

2. Select **OK** (left softkey).
3. Connect your phone to your computer using a compatible USB cable. (Wait for the connection to be completed. When connected, the host computer will automatically detect your phone.)

To remove the connection:

- ▶ When you have finished transferring data, click the USB device icon on your computer's taskbar, and follow the onscreen instructions to safely unplug the USB cable. (The process may vary depending on your computer.)

Important Connection Information

- No driver installation is required for Windows 2000/ME/XP users. If you use Windows 98/98SE, you have to download and install the USB Mass Storage Driver from the Sprint Web site at www.sprint.com.
- To avoid loss of data, DO NOT remove the USB cable, the microSD card, or the battery while files are being accessed or transferred.
- DO NOT use your computer to change or edit folder or file names on the microSD, and do not attempt to transfer large amounts of data from the computer to the microSD card. Doing so may cause the microSD card to fail.
- DO NOT turn off or restart your computer, or put it into standby mode, while using a mass storage device. Doing so will result in loss or damage of data.
- While you are connected to the computer, your phone's screen will display "Phone Off." You cannot make or receive calls.
- If you connect a mass storage device to a peripheral device, your device may not work properly.

Section 2K

Camera

- ◆ *Taking Photos (page 112)*
- ◆ *Recording Videos (page 118)*
- ◆ *Storing Photos and Videos (page 121)*
- ◆ *Sending Sprint Picture Mail (page 123)*
- ◆ *Managing Sprint Picture Mail (page 125)*
- ◆ *Printing Photos Directly From Your Phone (page 127)*

Your phone's built-in camera gives you the ability to take full-color digital pictures, view your pictures using the phone's display, and instantly send them to family and friends. It's fun, and it's as easy to use as a traditional point-and-click camera: just take a picture, view it on your phone's display, and send it from your phone to up to 25 people.

Taking Photos

Taking pictures with your phone's built-in camera is as simple as choosing a subject, pointing the lens, and pressing a button. You can activate the phone's camera mode whether the phone is open or closed.

To take a picture with the phone open:

1. Press and hold  to activate camera mode. (Additional camera options are available through the camera mode **Options** menu. See "Camera Mode Options" on page 114 for more information.)

Tip

To activate camera mode, you can also select Menu > Photos > Camera.

2. Using the phone's main screen as a viewfinder, aim the camera lens at your subject.
3. Press **Capture** (left softkey), , , or the side camera key until the shutter sounds. (The picture will automatically be saved in your selected storage area.)
 - To return to camera mode to take another picture, press .

4. Press **Options** (right softkey) for more options:

- **Take New Picture** to return to camera mode to take another picture.
- **Send Media** to send your picture. (See page 123 for details.)
- **Print** to print the pictures. You can choose whether to pick up your prints at a retail store, use a PictBridge-enabled printer (see page 127), or use a Bluetooth-enabled printer (see page 135).
- **Post to Services** to access available services. Select **Update** to display the latest services.
- **Upload** to upload the picture to the Sprint Picture Mail Web site (www.sprint.com/picturemail).
- **Review Media** to go to the In Phone folder or microSD folder to review your saved pictures.
- **Send via Bluetooth** to send the picture via Bluetooth.
- **Set as** to assign the picture. Select an option and press .
- **Delete** to delete the picture you just took.
- **Details/Edit** to edit or display details relating to your pictures.

To take a picture with the phone closed:

1. Press and hold the side camera key to activate camera mode.
2. Point the camera lens at your subject. (You can check the picture framing through the external display screen.)
3. Press the side camera key to take the picture. (The picture will automatically be saved in your selected storage area.)

Registering Your Sprint Picture Mail Account

The first time you use any of the picture management options involving the Sprint Picture Mail Web site, you will be prompted to register your Sprint Picture Mail account and establish a password through your phone. This password will also allow you to sign in to the Sprint Picture Mail Web site at www.sprint.com/picturemail to access and manage your uploaded pictures and albums.

1. Select  and press  > **Photos** > **My Albums** > **Online Albums**. (You will be prompted to register your Sprint Picture Mail account.)

Note

If your Sprint service plan does not include Sprint Picture Mail, you will first be prompted to subscribe to the service for an additional monthly charge.

2. Enter a password for your Picture Mail account and press  . (You will be prompted to confirm your password.)
3. Please wait while the system creates your account.

Tip

Write down your Sprint Picture Mail password in a secure place.

Once you have received confirmation that your account has been successfully registered, you may upload and share pictures and access the Sprint Picture Mail Web site.

Camera Mode Options

When the phone is open and in camera mode, press **Options** (right softkey) to display additional camera options:

- **Picture Mode** to select a picture mode from **Normal**, **Beach/Snow**, **Scenery**, **MirrorImage**, or **Night/Dark**.
- **Zoom** to zoom in on a subject. (See “Using the Zoom” on page 116 for details.)
- **Self-Timer** to activate the camera’s timer. (See “Setting the Self-Timer” on page 115 for details.)
- **Fun Tools** to select an option from the following:
 - **Multiple Shots** to take multiple shots. (See “Taking Multiple Shots” on page 115.)
 - **Fun Frames** to select your favorite fun picture frame to decorate your picture.
 - **ColorTone** to select a wide variety of color tones for the picture.

Note

Fun Frames is not available when the resolution setting is 1.3M. (See “Selecting Camera Settings” on page 117 for details.)

- **Image Controls** to select an option from *Brightness*, *White Balance*, *Sharpness*, or *Contrast*.
- **Camera Settings** to select your settings. (See “Selecting Camera Settings” on page 117 for details.)
- **Review Media** to go to the In Phone folder or microSD folder to review your saved pictures.
- **Camcorder Mode** to switch to video mode. (See “Recording Videos” on page 118 for details.)
- **Key Guidance** to indicate the key functions in camera mode.
- **User Settings** to select your favorite setting. (See “Camera Mode Options” on page 114.)

Setting the Self-timer

1. From camera mode, press **Options** (right softkey) > **Self-Timer**.
2. Highlight the length of delay you want the timer to use (**10 Seconds** or **5 Seconds**) and press .
3. Press **Start** (left softkey) when you are ready to start the timer.  is displayed on the upper right portion of the main screen during the self-timer countdown.)

4. Get ready for the picture. (When the timer is down to three seconds, the self-timer icon will turn red and the phone will begin to beep.)

To cancel the self-timer after it has started:

- ▶ Press **Cancel** (right softkey).

Note

While the self-timer is active, all keys are disabled except **BACK**, **END**, and **Cancel** (right softkey).

Taking Multiple Shots

This feature allows you to take up to nine shots in a continuous sequence. When you take multiple shots, the  icon will be displayed in the viewfinder.

1. From camera mode, press **Options** (right softkey) > **Fun Tools** > **Multiple Shots**.

Note

When taking multiple shots, the resolution is temporarily set to **Low-240x320**.

2. Select an available option (**3 Shots**, **6 Shots**, **9 Shots**, or **Off**) and press .

3. Select the duration of the interval between shots (**Normal** or **Fast**) and press .
4. Press **Capture** (left softkey), , , or the side camera key to take the pictures. (The Multiple Shots folder will display up to nine thumbnail pictures per screen.)
5. Press **Options** (right softkey) to display picture options, or press  to return to Camera mode to take another picture.

Note

After taking multiple shots, the pictures are automatically saved in your selected storage area.

Using the Zoom

This feature allows you to zoom in on an object when you take a picture. Depending on your resolution settings, you can adjust the zoom from 1x to 12x.

1. From camera mode, press the navigation key right or left, or the volume key up or down to adjust the zoom. (The gauge bar is displayed.)
2. Press **Capture** (left softkey), , , or the side camera key to take the picture. (The picture will automatically be saved in your selected storage area.)

Selecting Camera Settings

- From camera mode, press **Options** (right softkey) > **Camera Settings**.
- Select an option and press **MENU OK**:
 - **Resolution** to select a picture's file size (**1.3M-960x1280**, **Medium-480x640**, or **Low-240x320**).
 - **Quality** to select the picture quality setting (**Fine**, **Normal**, or **Economy**).
 - **ShutterSound** to select a shutter sound (**Default**, **Say "Cheese," "Ready,"** or **Off**).
 - **Status Bar** to switch the status bar display **On** or **Off**.
 - **Auto Save to** to select the storage area for the pictures (**In Phone**, **In microSD**, or **Switch w/Card**). (See "Setting Storage Options" on page 121.)
 - **Save Setting** to select the way to save pictures (**Auto** or **Manual**).

Camera Icon Key

Function	Icon	Details
Storage Area	In Phone 	Appears when the storage destination is your phone.
	In microSD 	Appears when the storage destination is the microSD.
Picture Mode	Beach/Snow 	Use this setting in bright light.
	Scenery 	Use this setting for scenery at a distance.
	Mirror Image 	Use this setting to take a mirror image.
	Night/Dark 	Use this setting in low light.
White Balance	Sunny 	Use this setting for sunny weather.
	Cloudy 	Use this setting for cloudy weather.
	Tungsten 	Use this setting for incandescent lighting.
	Fluorescent 	Use this setting for fluorescent lighting.
	Manual 	To set the white balance manually.
Brightness	Manual 	To set brightness manually.
Sharpness	Manual 	To set sharpness manually.
Contrast	Manual 	To set contrast manually.
Resolution	1.3M 	For 1.3-megapixel picture resolution.
	Medium 	For medium picture resolution.
	Low 	For low picture resolution.
Self-Timer		Numeric countdown will appear when the self-timer has been activated.
Multiple Shots		Use this setting for multiple shots.

Recording Videos

In addition to taking pictures, you can also record, view, and send videos to your friends and family with your phone's built-in video camera.

1. Select  and press  **OK** > **Photos** > **Camcorder** to activate video mode. (Additional video options are available through the video mode **Options** menu. See "Video Mode Options" on page 119 for more information.)
2. Using the phone's main screen as a viewfinder, aim the camera lens at your subject.
3. Press **Record** (left softkey),  **OK**, , or the side camera key to begin recording.
4. Press , **Stop** (right softkey), or the side camera key to stop recording. (The video will automatically be saved in your designated storage area.)
5. Press **Options** (right softkey) for more options:
 - **Take New Video** to return to video mode to take another video.
 - **Play** to play the video you just took.

- **Send Media** to send your video. (See page 123 for details.)
- **Post to Services** to access available services. Select **Update** to display the latest services.
- **Upload** to upload the video you just took to the Sprint Picture Mail Web site.
- **Review Media** to go to the In Phone folder or microSD folder to review your saved videos.
- **Send via Bluetooth** to send the video via Bluetooth.
- **Set as** to assign the video. Select an option and press  **OK**.
- **Delete** to delete the video you just took.
- **Details/Edit** to edit or display details relating to your videos.

To take a video with the phone closed:

1. Press the side camera key to activate the launch menu.
2. Select **Camcorder**.
3. Point the camera lens at your subject. (You can check the video framing through the outer screen.)

Note

When taking a video with the phone closed, the subject image appears in reverse on the external display. The captured image will not be saved in reverse.

4. Press the side camera key to start recording.
5. Press the side camera key again to stop recording.

Video Mode Options

Several options are available from video mode.

Press **Options** (right softkey) to display additional options:

- **Video Mode** to select a video mode from *Normal*, *Beach/Snow*, *Scenery*, *Mirror Image*, or *Night/Dark*.
- **Zoom** to zoom in on an object. You can adjust the zoom from 1x to 12x.
- **Self-Timer** to activate the timer function. (See “Setting the Self-Timer” on page 115 for details.)
- **Color Tone** to select a wide variety of color tones for your video.
- **Image Controls** to select an option from *Brightness*, *White Balance*, or *Contrast*.

- **Video Settings** to select your settings. (See “Selecting Video Settings” on page 120 for details.)
- **Review Media** to go to the In Phone folder or microSD folder to review your saved videos.
- **Camera Mode** to switch to camera mode (if applicable).
- **Key Guidance** to indicate the key functions in video mode.
- **User Settings** to select your favorite setting. (See “Video Mode Options” on page 119.)

Selecting Video Settings

- From video mode, press **Options** (right softkey) > **Video Settings**.
- Select an option and press .
 - Resolution** to select a file size (**High-176x144** or **Medium-128x96**) for a video.
 - Quality/Length** to select video quality from **Normal-35sec.**, **Fine-25sec.**, or **120min.microSD**.
 - Silent Movie** to select **On** to record without sound. Select **Off** to deactivate this feature.
 - Cue Sound** to select a cue sound (**Default**, **"Action & Cut,"** **"Ready & Stop,"** or **Off**).
 - Fit to Screen** or **Actual Size** to switch the viewing size.
 - Skins** to select your favorite frame.
 - Auto Save to** to select the storage area for the videos. (See "Setting Storage Options" on page 121.)

Note

Recording time varies depending on the **Quality/Length** setting.

Video Icon Key

Function		Icon	Details
Storage Area	In Phone		Appears when the storage destination is your phone.
	In microSD		Appears when the storage destination is the microSD.
White Balance	Sunny		Use this setting for sunny weather.
	Cloudy		Use this setting for cloudy weather.
	Tungsten		Use this setting for incandescent lighting.
	Fluorescent		Use this setting for fluorescent lighting.
	Manual		To set the white balance manually.
Brightness	Manual		To set brightness manually.
Video Mode	Beach/Snow		Use this setting in bright light.
	Scenery		Use this setting for scenery at a distance.
	Mirror Image		Use this setting to take a mirror image.
	Night/Dark		Use this setting in low light.
Contrast	Manual		To set contrast manually.
Resolution	High		For high video resolution.
	Medium		For medium video resolution.
Silent Movie	On		Appears when the silent movie setting is on.
	Off		Appears when the silent movie setting is off.
Self-Timer			Numeric countdown will appear when the self-timer has been activated.

Storing Photos and Videos

Your phone's picture and video storage area is called **My Albums**. There are three types of folders in My Albums:

- **In Phone** (see below)
- **In microSD** (see “microSD Picture and Video Folders” on this page)
- **Online Albums** (see page 125)

Tip

For quick access to your pictures, add the “Pictures” tile to your main screen carousel. See **Section 2B: Navigating the Main Screen** on page 36 for details.

Setting Storage Options

1. Select  and press  > **Photos** > **Settings & Info** > **Auto Save to**.
2. Select **In Phone**, **In microSD**, or **Switch w/Card**. (**Switch w/Card** stores pictures to the In Phone folder if no microSD card is installed.)

In Phone Folder

Your phone's internal storage area is called the **In Phone** folder. From the In Phone folder, you can view all the pictures and videos you have stored there, send items to the Sprint Picture Mail site (www.sprint.com/picturemail), delete files, and access additional options.

To review your stored pictures and videos in the In Phone folder:

1. Select  and press  > **Photos** > **My Albums** > **In Phone**.
2. Use your navigation key to view and scroll through the pictures and videos.

microSD Picture and Video Folders

You can save pictures and videos directly to the microSD card using your phone's pictures and videos settings. A total maximum of 1000 pictures and videos can be stored and managed in each folder on the microSD.

To review your stored pictures and videos in the microSD:

1. Select  and press  > **Photos** > **My Albums** > **In microSD**.
2. Use your navigation key to scroll through and view saved pictures and videos.

In Phone Folder and microSD File Options

When you are viewing the In Phone folder or the microSD card folders, press **Options** (right softkey) to display the following options:

- **Play** to play your videos.
- **Send Media** to send your pictures and videos. (See page 123 for details.)
- **Upload** to upload pictures and videos from the In Phone folder or microSD to the Sprint Picture Mail Web site (www.sprint.com/picturemail).
- **Print** to print the pictures. You can choose whether to pick up your prints at a retail store, use a PictBridge-enabled printer (see page 127), or use a Bluetooth-enabled printer (see page 135).
- **Post to Services** to access available services. Select **Update** to display the latest services.
- **Send via Bluetooth** to send the pictures and videos via Bluetooth.
- **Set as** to assign the picture or video. Select an option and press .
- **Delete** to delete pictures and videos.

Note

Deleting data will free up memory space to enable you to take more pictures and videos. Once deleted, the data cannot be uploaded to your online Sprint Picture Mail account or saved to the microSD card or your phone.

- **Copy/Move to SD** to copy or move pictures and videos from your phone to your microSD card.
- **Copy/Move to Ph.** to copy or move pictures and videos from the microSD card to your phone.
- **Copy/Move** to copy or move pictures and videos from a microSD card folder to another microSD card folder or from an Online Albums folder to another Online Albums folder.
- **Details/Edit** to edit or display details relating to your pictures or videos.
- **Slideshow** to view your pictures in slideshow mode.
- **Media Filter** to filter only pictures, only videos, or to display all media files.
- **Album List** to display the album list.
- **Camera Mode** to activate camera mode.
- **Camcorder Mode** to activate video mode.

Assigned Media Folder

When you assign a picture or video, it will automatically be saved in the **Assigned Media** folder. The folder allows you to store copies of pictures or videos on your phone and to assign pictures and videos to various phone tasks.

To save a picture or video to the Assigned Media folder:

1. From the In Phone folder (see “In Phone Folder” on page 121) or the In microSD folder (see “microSD Picture and Video Folders” on page 121), select a picture or video you wish to save to the Assigned Media folder and press .
2. Press **Options** (right softkey) > **Set as**.
3. Select an option and press . (A copy of the picture or video will automatically be saved to the **Assigned Media** folder.)

To view pictures and videos stored in the Assigned Media folder:

1. Select  and press  > **Tools** > **Assigned Media**. (Thumbnails will be displayed, up to nine at a time.)
2. Use your navigation key to view and scroll.

Sending Sprint Picture Mail

Once you have taken a picture or a video, you can use the messaging capabilities of your phone to instantly share it with family and friends. You can send pictures and videos to up to 25 people at a time using their email addresses or their phone numbers.

Sending Photos and Videos From the In Phone Folder

1. Select  and press  > **Photos** > **My Albums** > **In Phone**.
2. Select a picture or video to send and press . (The check box in the lower right corner will be marked. You can select multiple pictures and videos.)
3. Press **Options** (right softkey) > **Send Media**. (You will see a message.)

Note

The first time you send Sprint Picture Mail, you will be prompted to register your Sprint Picture Mail account. (See “Registering Your Sprint Picture Mail Account” on page 113.)

4. Follow step 2 of “Composing SMS Text Messages” on page 144.
5. If you wish to include a text message, scroll to **Text**, and then enter your message.
6. If you wish to include a voice message, scroll to **Audio** and press **Record** (right softkey) >  to record. (Maximum recording time is 10 seconds.)
7. To set the priority, scroll to **Priority**, and then select **High**, **Normal**, or **Low**.
8. Confirm the recipients, message, voice memo, and pictures or videos. (You may also select additional options by pressing the right softkey. Follow the onscreen instructions to add available options.)
9. Press **Send** (left softkey) to send the pictures and videos.

Sending Photos and Videos From Messages

You can also send Sprint Picture Mail from your phone's Messages menu.

1. Select  and press  > **Messages** > **Picture Mail**.
2. Follow step 2 of “Composing SMS Text Messages” on page 144.
3. Select a picture or video from **In Phone**, **In microSD**, or **Online Albums** and press  > **Next** (left softkey). (You can also choose to take a new picture or a new video.)
4. To complete and send the message, follow steps 5–9 in “Sending Photos and Videos From the In Phone Folder” on this page.

Managing Sprint Picture Mail

Using the Sprint Picture Mail Web Site

Once you have uploaded pictures or videos to your online Sprint Picture Mail account at www.sprint.com/picturemail (see “In Phone Folder and microSD File Options” on page 122), you can use your computer to manage your pictures. From the Sprint Picture Mail Web site, you can share pictures and videos, edit album titles, add captions, and organize images. You can even send your pictures to be printed at participating retail locations.

You will also have access to picture management tools to improve and customize your pictures. You'll be able to lighten, darken, crop, add antique effects, add comic bubbles and cartoon effects, and use other features to transform your pictures.

To access the Sprint Picture Mail Web site:

1. From your computer's Internet connection, go to www.sprint.com/picturemail.
2. Enter your phone number and Sprint Picture Mail password to register. (See “Registering Your Sprint Picture Mail Account” on page 113.)

Managing Online Photos and Videos From Your Phone

Use your phone to manage, edit, or share pictures and videos you have uploaded to the Sprint Picture Mail Web site at www.sprint.com/picturemail. (See “In Phone Folder and microSD File Options” on page 122 for information about uploading.)

To view your online pictures and videos from your phone:

1. Select  and press  **OK** > **Photos** > **My Albums** > **Online Albums**. (Depending on your settings you may be prompted to accept a data connection.) (The **Uploads** folder and your albums are displayed.)
2. Select **Uploads** or an available album title and press  **OK** to display. (Thumbnail pictures, up to nine per screen, are displayed.)

Tip

*To expand a selected picture from thumbnail to full-screen, press **Expand** (left softkey).*

3. Select a picture or video and press **Options** (right softkey) to display your online picture or video options.

Uploading Photos and Videos

1. Select  and press  > *Photos* > *My Albums* > *In Phone*.
2. Check the picture(s) and video(s) you wish to upload and press *Options* (right softkey) > *Upload*.
3. Select *This, Selected*, or *All*.
4. Select *"Uploads" Area* or *Other Albums*.

Downloading Your Online Photos and Videos

From your online Sprint Picture Mail albums display at www.sprint.com/picturemail, you can select pictures and videos to download to your phone's In Phone folder or microSD card.

1. From the online pictures display, select the pictures and videos you wish to download and press *Options* (right softkey). (See "Managing Online Photos and Videos From Your Phone" on page 125.)
2. Select *Save to..* > *In Phone* or *In microSD* > .

Accessing Online Picture and Video Options From Your Phone

1. Select a picture or video from your Online Albums. (See "Managing Online Photos and Videos From Your Phone" on page 125.)
2. Press *Options* (right softkey) to display options.
3. Select an option and press .
 - *Play* to play the video.
 - *Send Media* to send your picture or video.
 - *Order Prints* to order prints of the pictures. You can pick up your prints at a retail store.
 - *Post to Services* to access available services. Select *Update* to display the latest services.
 - *Set as* to assign the picture or video.
 - *Save to..* to select *In Phone* or *In microSD* to download the pictures and videos to the selected storage area.
 - *Delete* to delete pictures and videos saved in the current album (or Uploads folder).
 - *Copy/Move* to copy or move pictures and videos to a selected album.

- **Details/Edit** to edit or display details relating to your pictures or videos.
- **Media Filter** to filter only pictures, only videos, or to display all media files.
- **Album List** to display the album list.

To access your online Albums options from your phone:

1. Display the album list in the online Sprint Picture Mail menu. (See “Managing Online Photos and Videos From Your Phone” on page 125.)
2. Select an album (or Uploads folder).
3. Press **Options** (right softkey) to display options.
4. Select an option and press .
 - **Edit/Delete** to select an option from the following:
 - **Delete Album** to delete the selected album.
 - **Rename Album** to rename the selected album.
 - **Album Info** to display detailed information about the album.
 - **Create New Album** to create a new album. Enter a new album name and press  > **Save** (left softkey).

Note *The Uploads folder cannot be deleted or renamed.*

Printing Photos Directly From Your Phone

Your phone is PictBridge compatible, allowing you to print directly from your phone without connecting to a computer. Simply connect your phone to a PictBridge-enabled printer and enjoy printing your photos.

Note *Make sure your battery is fully charged before using the PictBridge.*

While using the PictBridge, the battery cannot be charged.

To print pictures directly from your phone:

1. Select  and press  > **Photos** > **PictBridge**.
2. Connect your phone to the PictBridge-enabled printer using a compatible USB cable. (Wait until the connection is completed.)
3. Set the printer settings using your navigation key.
 - **Picture to Print:** You can select the picture from the In Phone folder or the microSD. (You can select up to 99 pictures; however you can only select from one folder.)

Note

You may not be able to print pictures that you cannot display on your phone.

Note

While you are connected to the printer, your phone's screen will display "Phone Off." You cannot make or receive calls during this time.

- **Layout:** You can select the print mode from *Default Printer*, *Standard Print*, *Index Print*, or *DPOF Print*. (If you have selected *DPOF Print*, press **Yes** [left softkey] to print. To set up the DPOF Print, see "Setting Up the Digital Print Order Format" on page 109.)
 - **Num. of Copies:** You can set the number of copies (1-10). (You cannot specify number of copies when Index Print is selected.)
 - **Print Size:** You can set the print size from Default Printer, 4x6, 5x7, 8x10, or Letter. (Print sizes may vary according to the type of printer you have.)
 - **Date Stamp:** You can imprint the date on your pictures. Select **Yes** or **No**. (Date stamping may not be available depending on the type of printer you have.)
4. When you have finished selecting the printer settings, select **Print**.

5. When printing is finished, press **END**.

6. Press **Yes** (left softkey). Follow the instructions on the display to unplug the USB cable from the phone.

**PictBridge
Error
Messages**

From time to time you may encounter printing problems. Any printer error messages will be displayed on your phone, informing you of the specific problems encountered. Please refer to the user's guide that came with your printer for descriptions, explanations, and possible resolutions for any error messages.

Bluetooth

- ◆ *Turning Bluetooth On and Off (page 129)*
- ◆ *Using the Bluetooth Menu (page 130)*
- ◆ *Using the Bluetooth Settings Menu (page 132)*
- ◆ *Bluetooth Profiles (page 132)*
- ◆ *Pairing Bluetooth Devices (page 134)*
- ◆ *Using the Trusted Devices Options (page 134)*
- ◆ *Printing Data via Bluetooth (page 135)*
- ◆ *Sending Data via Bluetooth (page 136)*

Your phone features built-in Bluetooth technology, allowing you to share information more easily than ever before.

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car kits, and Bluetooth-enabled handhelds, computers, printers, and wireless phones. The Bluetooth communication range is usually up to approximately 30 feet.

Turning Bluetooth On and Off

By default, your device's Bluetooth feature is turned off. Turning Bluetooth on makes your phone "discoverable" by other in-range Bluetooth devices. To make your phone visible to other devices you must also set your phone's visibility to other than Hidden. (See page 132.)

To turn Bluetooth on:

1. Select  and press  > **Settings** > **Bluetooth** > **On/Off**.
2. Select **On** and press  to enable Bluetooth.

To turn Bluetooth off:

1. Select  and press  > **Settings** > **Bluetooth** > **On/Off**.
2. Select **Off** and press  to disable Bluetooth.

Bluetooth Status Indicators

The following icons show your Bluetooth connection status at a glance:



– Bluetooth feature is active. (The icon will dim when the phone is connected with another Bluetooth device.)



– Your phone is discoverable by another Bluetooth device.



– Your phone is communicating with a Bluetooth device.



– Your phone is connected to or communicating with a Bluetooth device via Hands-free Profile (HFP).



– Your phone is connected to or communicating with a Bluetooth device via Advanced Audio Distribution Profile (A2DP).



– Your phone is connected to or communicating with a Bluetooth device via both Hands-free Profile (HFP) and Advanced Audio Distribution Profile (A2DP).

Using the Bluetooth Menu

The **Bluetooth** menu allows you to access your phone's Bluetooth functions.

To access the Bluetooth menu:

- ▶ Select  and press  > **Tools** > **Bluetooth** to select from the following options.
 - **Handsfree Pairing** to find a Bluetooth headset or hands-free device and add it to your Trusted List.
 - **Send Contact** to send a Contacts entry saved on your phone to another Bluetooth device.
 - **Print Picture** to print pictures stored in your phone using a Bluetooth-enabled printer.
 - **Add to Trusted** to add a Bluetooth device to your Trusted List. (You can specify the type of device to search for.)
 - **Trusted List** to display a list of trusted Bluetooth devices. Select <**Add New**> to find another Bluetooth device.
 - **Send BizCard** to send your business card to another Bluetooth device.

Find Me

If you are going to use a Bluetooth profile to pair with a Bluetooth device, you will need to allow the other device to initiate pairing with your phone.

1. Select  and press  > **Tools** > **Bluetooth** > **Find Me** (left softkey).
2. Follow the onscreen prompts to enter your PIN and press .

Block List

You can prevent other Bluetooth devices from connecting with your phone.

To add a device to the Block List:

1. Select  and press  > **Tools** > **Bluetooth** > **More...** > **Block List**.
2. Select <**Add New**>.
3. Select **Search** or **View Trusted**.
 - **Search** to search for devices to be added to the Block List.
 - **View Trusted** to remove a device from the Trusted List and add it to the Block List.

4. Highlight a device you want to add to the Block List and press **Block** (left softkey).

Block List Options

From the Block List, press **Options** (right softkey) to display the following options.

- **Device Info** to display the device's information.
- **Unblock** to remove the device from the Block List.
- **Edit Name** to edit the name of the device.
- **Sort by** to sort the devices.
- **Help** to display the Block List help.

Using the Bluetooth Settings Menu

The **Bluetooth Settings** menu allows you to set up many of the characteristics of your phone's Bluetooth service, including:

- Entering or changing the name your phone uses for Bluetooth communication.
- Setting your phone's visibility (or "discoverability") for other Bluetooth devices.
- Displaying your phone's Bluetooth address.

To access the **Bluetooth Settings** menu:

1. Select  and press  > **Settings** > **Bluetooth**.
2. Set your Bluetooth options.
 - Select **On/Off** to enable or disable Bluetooth.
 - Select **Visibility** > **Always Visible**, **Visible for 3 min.**, or **Hidden** to set your Bluetooth visibility.
 - Select **Device Name** to set a Bluetooth name for your phone.
 - Select **Device Info** to display your phone's Bluetooth name, address, class, and available services.

- Select **Trusted List** to display a list of trusted Bluetooth devices.
- Select **Voice Priority** to choose the default device you want to use for incoming and outgoing calls.
- Select **Exchange Folder** > **In Phone**, **In microSD**, or **Switch w/Card** to set the storage area for files received from other Bluetooth devices.

Bluetooth Profiles

All of the Bluetooth settings you configure are stored in your phone's Bluetooth user profile. You can use different profiles for specific Bluetooth functions.

- **HSP: Headset Profile** – This profile functions as a wireless ear jack. When an incoming call is received, the ringer can be heard through the headset instead of through the phone. The call can then be received by pushing a button. While using the phone, you can use the headset instead of the phone by pushing a button on the headset, the same as inserting a jack into the phone. Increase or decrease the volume by using the volume key on the side of the phone.

- **HFP: Hands-Free Profile** – This profile functions as a wireless car kit. Incoming calls ring to the hands-free headset or device. Calls can be received by pressing a button on the headset or device. For dialing, four functions are supported: recent call dial, voice dial, speed dial, and number dial. Increase or decrease the volume by using the volume key on the side of the handset.
- **DUN: Dial-Up Network Profile** – This profile functions as a wireless data cable, connecting a computer or PDA to a network through your phone.
- **OPP: Object Push Profile** – This profile uses the Generic Object Exchange profile services to send data objects between devices and can be used to exchange objects like music files, pictures, calendar (vCal) and business cards (vCard).
- **FTP: File Transfer Profile** – This profile allows you to transfer files to or from other Bluetooth-enabled devices.
- **BPP: Basic Printing Profile** – This profile enables simpler printing from your phone to a Bluetooth-enabled printer.
- **A2DP: Advanced Audio Distribution Profile** – This profile allows you to transmit high quality stereo music from your phone to other compatible accessories including Bluetooth stereo headsets.
- **AVRCP: Audio/Video Remote Control Profile** – This profile enables your phone to remotely control compatible accessories including Bluetooth stereo headsets. You can play, pause, stop, forward, reverse, fast forward, or rewind from a headset. (Playback functions may vary among Bluetooth accessories.)
- **PBAP: Phone Book Access Profile** – This profile enables exchange of Contacts information between devices. It is typically used between a car kit and a mobile phone to allow the car kit to display the name of the incoming caller.

Pairing Bluetooth Devices

Paired Devices

The Bluetooth pairing process allows you to establish trusted connections between your phone and another Bluetooth device. When devices are paired, a passkey is shared between devices, allowing for fast, secure connections while bypassing the discovery and authentication process.

To pair your phone with another Bluetooth device:

1. Select  and press  > **Tools** > **Bluetooth** > **Add to Trusted**.
2. Select a device type to search for and press . Your phone will display a list of any discovered devices of the type you specified. Select a device and press .
3. Enter the PIN and press . (When the owner of the other device enters the same PIN, the pairing is complete.)

Note

Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth-compatible devices.

Using the Trusted Devices Options

Once you have created paired devices, several options are available from the trusted devices list.

1. From the trusted devices list, select a device.
2. Press **Options** (right softkey) to display the following options:
 - **Connect** or **Disconnect** to connect to or disconnect from the Bluetooth device (if applicable).
 - **Send Item** to send an item saved on your phone to another Bluetooth device (if applicable).
 - **Browse** to browse and transfer files between Bluetooth devices using FTP.
 - **Print** to print the data using Basic Printing Profile or Object Push Profile (if applicable).
 - **Edit Name** to edit the name of the trusted device.
 - **Auto-Accept** to configure your phone's accessibility to other Bluetooth devices.
 - **Device Info** to display the trusted device's information.

- **Sort by** to sort the trusted devices.
- **Delete** to delete the selected device from the list.
- **Delete All** to delete all devices from the list.
- **Settings** to display the Bluetooth settings menu. (See page 132.)
- **Help** to display the assisting information.

Printing Data via Bluetooth

You can print out your pictures, Contacts entries, business cards, calendar events, and messages stored on the phone. (Some Bluetooth-enabled printers may not support this feature.)

1. Select  and press  > **Tools** > **Bluetooth** > **Trusted List**.
2. Select the device from the trusted devices list and then press **Options** (right softkey) > **Print**.
3. Select a category (**Picture**, **Business Card**, **Contacts**, **Calendar Event**, or **Message**) and press .
4. Follow the onscreen instructions to select the item(s) to print.

5. Select **Handset Default**, **Create Print Job**, or **Printer Default**.
 - **Handset Default** to print items by creating a print job via the Basic Printing Profile.
 - **Create Print Job** to print items by creating a print job via the Basic Printing Profile.
 - **Printer Default** to print items using the default printer settings via the Object Push Profile.
6. Make sure the printer is ready to print data, and then press **Print** (left softkey).
7. If necessary, enter the PIN and press .

Note Before using the Bluetooth feature, make sure your phone's battery is fully charged.

Sending Data via Bluetooth

You can send data saved on your phone to another Bluetooth device.

1. Select  and press  > *Tools* > *Bluetooth* > *Trusted List*.
2. Select the device from the trusted devices list and then press *Options* (right softkey) > *Send Item*.
3. Select an item (*Business Card*, *Contacts*, *Calendar Event*, *From File Manager*, or *To File Manager*) and press .
4. Follow the onscreen instructions to select the item(s) to send.
5. Make sure the other device is ready to receive data, and then press *Send* (left softkey).
6. If necessary, enter the PIN and press .

Section 3

Sprint® Service



Sprint Service Features: The Basics

- ◆ *Using Voicemail (page 138)*
- ◆ *Using SMS Text Messaging (page 144)*
- ◆ *Using SMS Voice Messaging (page 145)*
- ◆ *Using Caller ID (page 146)*
- ◆ *Responding to Call Waiting (page 147)*
- ◆ *Making a Three-Way Call (page 147)*
- ◆ *Using Call Forwarding (page 148)*

Now that you've explored your phone's fundamentals, it's time to learn about the calling features that enhance your Sprint service. This section outlines your basic Sprint service features.

Using Voicemail

Setting Up Your Voicemail

All unanswered calls to your phone are automatically transferred to your voicemail, even if your phone is in use or turned off. Therefore, you will want to set up your Sprint Voicemail and personal greeting as soon as your phone is activated.

1. Press and hold **[1☎]**.
2. Follow the system prompts to:
 - Create your passcode.
 - Record your name announcement.
 - Record your greeting.
 - Choose whether to activate One-Touch Message Access (a feature that lets you access messages simply by pressing and holding **[1☎]**, bypassing the need for you to enter your passcode).

Note**Voicemail Passcode**

If you are concerned about unauthorized access to your voicemail account, Sprint recommends that you enable your voicemail passcode (do not activate One-Touch Message Access).

Voicemail Notification

There are several ways your phone alerts you to a new message:

- By displaying a message on the screen.
- By sounding the assigned ringtype.
- By the LED blinking.
- By displaying  at the top of your screen.

New Voicemail Message Alerts

When you receive a new voice message, your phone alerts you and prompts you to call your voicemail.

To call your voicemail:

- ▶ Press and hold .

To display your Missed Log:

- ▶ Select  and press  > **Messages > Voicemail > Details.**

Note

When you are roaming off the Sprint National Network, you may not receive notification of new voicemail messages. It is recommended that you periodically check your voicemail by dialing 1 + area code + your wireless phone number. When your voicemail answers, press () and enter your passcode. You will be charged roaming rates when accessing voicemail while roaming off the Sprint National Network.*

Your phone accepts messages even when it is turned off. However, you are notified of new messages only when your phone is turned on and you are in a Sprint service area.

Retrieving Your Voicemail Messages

You can review your messages directly from your wireless phone or from any other touch-tone phone. To dial from your wireless phone, either speed dial your voicemail or use the menu keys.

Using One-Touch Message Access

- ▶ Press and hold **TALK**.
(Your phone will dial your voicemail box.)

Using the Menu Keys on Your Phone to Access Your Messages

1. Select  and press **MENU OK** > *Messages* > *Voicemail*.
2. Press **TALK** to listen to your messages.

Note

You are charged for airtime minutes when you are accessing your voicemail from your wireless phone.

Using Another Phone to Access Messages

1. Dial your wireless phone number.
2. When your voicemail answers, press the asterisk (*) key.
3. Enter your passcode.

Tip

When you call into voicemail, you first hear the header information (date, time, and sender information) for the message. To skip directly to the message, press 4 during the header.

Voicemail Key Guide

Here's a quick guide to your keypad functions while listening to voicemail messages. For further details and menu options, see "Voicemail Menu Key" on page 143.

1  Date/Time	2 ABC Send Reply	3 DEF Advance
4 GHI Replay	5 JKL Rewind	6 MNO Forward
7 PQRS Delete	8 TUV Return Call	9 WXYZ Save
* SHFT Cancel	0+NEXT Help	# SPAGE Skip

Voicemail Options

Your phone offers several options for organizing and accessing your voicemail.

Using Expert Mode

Using the Expert Mode setting for your personal voicemail box helps you navigate through the voicemail system more quickly by shortening the voice prompts you hear at each level.

1. Press and hold **[1 ▼]** to access your voicemail. (If your voicemail box contains any new messages, press **[★ SHFT]** to access the main voicemail menu.)
2. Press **[3 DEF]** to change your Personal Options, following the system prompts.
3. Press **[3 DEF]** for Expert Mode.
4. Press **[1 ▼]** to turn Expert Mode on or off.

Setting Up Group Distribution Lists

Create up to 20 separate group lists, each with up to 20 Sprint voicemail users.

1. Press and hold **[1 ▼]** to access your voicemail. (If your voicemail box contains any new messages, press **[★ SHFT]** to access the main voicemail menu.)
2. Press **[3 DEF]** to change your Personal Options, following the system prompts.
3. Press **[1 ▼]** for Settings.
4. Press **[5 JRL]** for Group Distribution Lists.
5. Follow the voice prompts to create, edit, rename, or delete group lists.

Sprint Callback

Return a call after listening to a message without disconnecting from voicemail.

- ▶ Press **[8 TUY]** after listening to a message. (Once the call is complete, you're returned to the voicemail main menu.)

Voicemail-to-Voicemail Message

Record and send a voice message to other Sprint Voicemail users.

1. From the main voicemail menu, press **[2 ABC]** to send a message.
2. Follow the voice prompts to enter the phone number.
3. Follow the voice prompts to record and send your voice message.

Voicemail-to-Voicemail Message Reply

Reply to a voice message received from any other Sprint Voicemail user.

1. After listening to a voice message, press **[2 ABC]**.
2. Follow the voice prompts to record and send your reply.

Vicemail-to-Vicemail Message Forwarding

Forward a voice message, except those marked “Private,” to other Sprint Vicemail users.

1. After listening to a message, press **[6 WHO]**.
2. Follow the voice prompts to enter the phone number.
3. Follow the voice prompts to record your introduction and forward the voice message.

Vicemail-to-Vicemail Receipt Request

Receive confirmation that your voice message has been listened to when you send, forward messages to, or reply to messages from other Sprint users.

1. After you have recorded a message, press **[2 ABC]** to listen to the recorded message.
2. Press **[5 MFL]** for More Options.
3. Press **[3 DEF]** to mark receipt requested.
4. Press **[1 M]** to send your voicemail message.

Extended Absence Greeting

When your phone is turned off or you are off the Sprint National Network for an extended period, your phone can play this greeting instead of your normal personal greeting.

1. From the main voicemail menu, press **[3 DEF]** for Personal Options.
2. Press **[2 ABC]** for Greetings.
3. Press **[3 DEF]** to record an Extended Absence Greeting.

Clearing the Message Icon

Your phone may temporarily continue to display the message icon after you have checked your voice and text messages.

1. Select  and press **[MENU OK]** > **Messages > Voicemail > Reset Indicator.**
2. Press **Yes** (left softkey).

VoiceMail Menu Key

Following the prompts on the voicemail system, you can use your keypad to navigate through the voicemail menu. The following list outlines the Sprint voicemail system menu structure.

1 Listen

1 Date and Time Information

2 Send a Reply Message

3 Advance a Few Seconds

4 Replay

5 Rewind a Few Seconds

6 Forward Message

7 Erase

8 Return This Call

9 Save

0 Options

* Skip to the Next Message

2 Send a Message

3 Personal Options

1 Settings

1 Skip Passcode

2 Autoplay

3 Play Back Date, Time, and Caller Info.

4 Change Passcode

5 Group Distribution Lists

6 Numeric Paging

* Return to Personal Options Menu

2 Greetings

1 Personal Greetings

2 Name Announcement

3 Extended Absence Greeting

* Return to Personal Options Menu

3 Expert Mode

8 Place a Call

* Exit

Using SMS Text Messaging

With SMS Text Messaging, you can send and receive instant text messages between your wireless phone and another messaging-ready phone. When you receive a new message, it will automatically display on your phone's screen.

In addition, SMS Text Messaging includes a variety of preset messages, such as "The meeting has been cancelled," that make composing messages fast and easy. Use your phone to customize your own preset messages (up to 50 characters).

Note

All your phone's messaging options, including Text Messaging, can be accessed instantly using the main screen carousel. See Section 2B: Navigating the Main Screen on page 36 for details.

Composing SMS Text Messages

1. Select  and press  **OK** > **Messages** > **Send Message** > **Text Message**.
2. Select the entry method you prefer:
 - **Go to Contacts** to select a recipient from your Contacts. (Qualifying Contacts entries must contain a wireless phone number or an email address.)

- **Multiple** (left softkey) to select multiple recipients.
- **New Addr.** (right softkey) to enter a recipient's wireless phone number or email address directly.

3. Press **Continue** (left softkey) when you have finished entering recipients. (You may include up to 25 recipients per message.)
4. Compose a message.
 - Press **Text Mode** (right softkey) to change a text input mode.
5. Highlight **Options** >  **OK** to select additional options.
6. Review your message and press **Send** (left softkey).

Tip

*You can also send an SMS Voice message when the left softkey displays the **Send Msg** option.*

Accessing SMS Text Messages

To read an SMS Text message:

- ▶ When you receive a text message, it will be displayed automatically on your phone's screen. Use your navigation key to scroll down and view the entire message.

Tip

If you have two or more notifications, the *Missed Alert list* will appear. Select a message in the list and press **View** (left softkey) to view the message.

To reply to an SMS Text message:

1. While the message is open, press **Reply** (left softkey).
– or –
Highlight the message in the Inbox, and press **Options** (right softkey) > **Reply With** > **Text Message**.
2. Follow the steps 4-6 of “Composing SMS Text Messages” on the previous page.

Using Preset Messages

Preset messages make sending text messages to your friends, family, and co-workers easier than ever.

1. Select  and press  > **Settings** > **Messages** > **Preset Msgs**.
2. Highlight a message you wish to send and press **Options** (right softkey) > **Send Text**.
3. Follow steps 2-6 in “Composing SMS Text Messages” on the previous page.

Using SMS Voice Messaging

In addition to SMS Text Messaging, your phone is enabled with SMS Voice Messaging. With SMS Voice Messaging, you can send a voice message to other SMS-enabled phones or to working email addresses without making a phone call. Just record a message and send it directly to the recipient's phone messaging inbox.

Playing an SMS Voice Message

1. Select  and press  > **Messages** > **VoiceSMS**.
2. Select a message and press  to play. (To display the message options, press **Options** [right softkey].)

Composing SMS Voice Messages

1. Select  and press  > **Messages** > **Send Message** > **VoiceSMS** and select the entry method you prefer:
 - **Go to Contacts** to select a recipient from your Contacts. (Qualifying Contacts entries must contain a wireless phone number or an email address.)

- **Multiple** (left softkey) to select multiple recipients.
 - **New Addr.** (right softkey) to enter a recipient's wireless phone number or email address directly.
2. Start recording after the beep. (You can record up to two minutes.)
 3. To finish recording press **Done** (left softkey).
 4. Press **Send** (left softkey) to send the voice message.

Tip

You can also send an SMS Voice message when the left softkey displays the **Send Msg** option.

Accessing SMS Voice Messages

- ▶ When you receive a voice message, a pop-up notification will automatically be displayed on your phone's screen. Use your softkeys to access and play the voice message.

To reply to an SMS Voice message:

1. From the SMS Voice inbox, press **Reply** (left softkey).
2. Record your reply, and then press **Send** (left softkey).

Using CallerID

Caller ID allows people to identify a caller before answering the phone by displaying the number of the incoming call. If you do not want your number displayed when you make a call, follow these steps.

1. Press ***SHIFT** **6 MIN** **7 PORS**.
2. Enter the number you want to call.
3. Press **TALK**.

To permanently block your number, call Sprint Customer Service.

Responding to Call Waiting

When you're on a call, Call Waiting alerts you to incoming calls by sounding one beep. Your phone's screen informs you that another call is coming in and displays the caller's phone number (if it is available).

To respond to an incoming call while you're on a call:

- ▶ Press **TALK**. (This puts the first caller on hold and answers the second call.)

To switch back to the first caller:

- ▶ Press **TALK** again.

Tip

For those calls where you don't want to be interrupted, you can temporarily disable Call Waiting by pressing ***70** before placing your call. Call Waiting is automatically reactivated once you end the call.

Making a Three-Way Call

With Three-Way Calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

1. Enter a number you wish to call and press **TALK**.
2. Once you have established the connection, press **TALK**. (This puts the first caller on hold.)
3. Select **Contacts**, **Recent History**, or **EnterPhone#**.
4. Select a number from your Contacts or Recent History, or enter it directly, and then press **TALK**.
5. When you're connected to the second party, press **TALK** or **Join** (right softkey) again to begin your three-way call.

If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all callers are disconnected.

Using Call Forwarding

Call Forwarding lets you forward all your incoming calls to another phone number – even when your phone is turned off. You can continue to make calls from your phone when Call Forwarding is activated.

To activate Call Forwarding:

1. Press *** SHFT 7 PQRS 2 ABC**.
2. Enter the area code and phone number to which your future calls should be forwarded.
3. Press **TALK**. (You will hear a tone to confirm the activation of Call Forwarding.)

To deactivate Call Forwarding:

1. Press *** SHFT 7 PQRS 2 ABC 0 +NEXT**.
2. Press **TALK**. (You will hear a tone to confirm the deactivation.)

Note

You are charged a higher rate for calls you have forwarded.

Data Services

- ◆ *Data Services Applications (page 149)*
- ◆ *Getting Started With Data Services (page 150)*
- ◆ *Accessing Messaging (page 154)*
- ◆ *Downloading Content (page 157)*
- ◆ *Exploring the Web (page 159)*
- ◆ *Phone as Modem (page 162)*
- ◆ *Data Services FAQs (page 164)*

Sprint offers easy and amazing data services you will really use. These features – including messaging, games, downloadable ringtones and screen savers, and portable Web access – let you have fun, stay in touch, and stay informed no matter where you go on the Sprint National Network.

Data Services Applications

Here is a brief list of the applications available through your phone. For more information, please visit us online at www.sprint.com.

Sprint Picture Mail – Instantly shoot, share, and print sharp digital pictures, and take and send short video clips with your phone.

Messaging – Send and receive email messages and instant messages and participate in online chat discussions on your wireless phone.

Games – Play exciting games with full-color graphics, sound, and vibration. Choose from hundreds of games to play anytime.

Ringtones – Personalize your phone by downloading and assigning different ringtones to numbers in your Contacts.

Screen Savers – Download unique images to use as screen savers, or make it easy to tell who's calling by assigning specific images to numbers in your Contacts.

Web – Experience full-color graphic versions of popular Web sites from your phone.

Phone as Modem – Use your phone as a high-speed Internet connection for your laptop computer.

Getting Started With Data Services

With your Sprint service, you are ready to start enjoying the advantages of our data services. This section will help you learn the basics of using your data services, including managing your user name, launching a data connection, and navigating the Web with your phone.

Your User Name

When you buy your phone and sign up for service, you're automatically assigned a user name, which is typically based on your name and a number, followed by "@sprintpcs.com." (For example, the third John Smith to sign up for data services might have jsmith003@sprintpcs.com as his user name.)

When you use data services, your user name is submitted to identify you to the Sprint National Network. The user name is also useful as an address for Sprint Mail, as a way to personalize Web services, and as an online virtual identity.

Your user name will be automatically programmed into your phone. You don't have to enter it.

Finding Your User Name

If you aren't sure what your user name is, you can easily find it on your phone.

- ▶ Select  and press  > **Settings** > **Phone Info** > **Phone#/UserID**.

Updating Your User Name


If you choose to change your user name and select a new one online, you must then update the user name on your phone.

- ▶ Select  and press  > **Settings** > **More...** > **Data** > **Update Profile**. (To cancel, press  before completing the update.)

Launching a Data Connection

- ▶ Select  and press   > **Web**. (Your data connection will start and the Sprint home page will be displayed.)

The Sprint Home Page

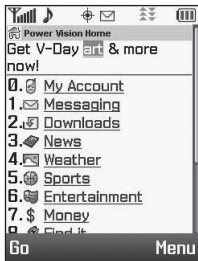

Note If Net Guard is enabled and displayed, press OK (left softkey) to continue and launch the Web.

Tip For instant access to the Internet, including the Sprint home page, Favorites, Recent Pages, and Google search, use the main screen carousel. See **Section 2B: Navigating the Main Screen** on page 36 for details.

While connecting, an animation may be displayed.

Tip To change the default launch page to the last page you viewed, press the right softkey and select **More... > Preferences > Launch Page** and select **Last Page**.

Net Guard

When you first connect to the Web, the Net Guard will be displayed to confirm that you want to connect. This feature helps you avoid accidental connections. You can disable the Net Guard in the future by selecting **Always Auto-Connect** when the Net Guard is displayed.

To change your Net Guard settings:

- ▶ Select  and press   > **Settings > More... > Data > Net Guard**.
 - Select **On** to activate the Net Guard.
 - Select **Off** to deactivate the Net Guard.

Note When enabled, the Net Guard appears only once as long as you have not turned the phone off and on.

Data Connection Status and Indicators

Your phone displays the current status of your Data connection through indicators at the top of the screen. The following symbols are used:

 Your phone is connected to the high-speed Sprint Mobile Broadband Network (EVDO). When the triangles are black, data is being transferred (for example, when you are opening a Web page); when the triangles are gray, you are connected to the network but data is not currently being transferred (for example, when you are viewing a Web page that is completely open).

 Your phone is on and is connected to the Sprint 1xRTT data network. When the arrows are white, data is being transferred (for example, when you are opening a Web page) and you cannot receive calls. When the arrows are gray, you are connected to the network but data is not currently being transferred (for example, when you are viewing a Web page that is completely open), and you can receive calls.

If no indicator is displayed, your phone does not have a current data connection. To launch a connection, see “Launching a Data Connection” on page 151.

Navigating the Web

Navigating through menus and Web sites during a data session is easy once you’ve learned a few basics. Here are some tips for getting around:

Softkeys

During a data session, the bottom line of your phone’s display contains one or more softkeys. These keys are shortcut controls for navigating around the Web, and they correspond to the softkeys directly below the phone’s display screen.

Tip

Depending on which Web sites you visit, the labels on the softkeys may change to indicate their function.

To use softkeys:

- ▶ Press a softkey. (If an additional pop-up menu is displayed when you press the softkey, select menu items using your keypad [if they’re numbered], or by highlighting the option and pressing .)

Scrolling

As with other parts of your phone's menu, you'll have to scroll up and down to see everything on some Web sites.

To scroll line by line through Web sites:

- ▶ Press the navigation key up and down.

To scroll page by page through Web sites:

- ▶ Press the volume buttons on the side of the phone.

Selecting

Once you've learned how to use softkeys and scroll, you can start navigating the Web.

To select onscreen items:

- ▶ Use the navigation key to highlight an item, and then press the left softkey (or press **MENU OK**).

Tip

You'll find that the left softkey is used primarily for selecting items. This softkey is often labeled "OK."

If the items on a page are numbered, you can use your keypad (number keys) to select an item.

Links, which are displayed as underlined text, allow you to jump to Web pages, select special functions, or even place phone calls.

To select links:

- ▶ Highlight the link and press the appropriate softkey.

Going Back

To go back one page:

- ▶ Press the **BACK** key on your phone.

Note

*The **BACK** key is also used for deleting text (like a **BACKSPACE** key) when you are entering text.*

Going Home

To return to the home page from any other page:

- ▶ Press and hold **BACK**.
– or –
Press the right softkey and select **Home**.

Accessing Messaging

You can send and receive email messages, instant messages, and text messages and participate in Web-based chat rooms right from your phone. Messaging allows you to stay connected 24 hours a day anywhere on the Sprint National Network.

Message Types

There are many types of text messaging available on your phone. These include SMS Text Messaging, Sprint Instant Messaging, Email, and Chat.

(Sprint Voicemail provides voicemail-to-mailbox messaging. For information on using your phone's voicemail feature, see "Using Voicemail" on page 138.)

Using Sprint Mail

Sprint Mail allows you to perform many of the typical email functions from your phone that you can from your personal computer. You can manage your Sprint Mail account from your phone or online at www.sprint.com.

To access Sprint Mail from your phone:

1. Select  and press  > **Web**.
2. From the Sprint home page, select **Messaging** > **Email** > **PCS Mail**.
3. If you're a first-time user, your phone will prompt you to set up your Sprint Mail account by establishing a user name and password.
4. Select the folder you wish to view, such as **Inbox** or **Compose**.

Sending Sprint Mail

1. From the **Sprint Mail** page (see above), select **Compose** (or **Reply** or **Reply All** if you're viewing a message).
2. Enter a recipient or recipients for your email:
 - Select **To** and press  to display your Sprint Mail address book. To add a recipient, select it and press .
 - or –
 - Select the addressee box (under or adjacent to **To**) and enter an email address.

3. Repeat as necessary for **CCs** and **BCCs**.
4. Enter the **Subject** and your **Message**. (Select each field and press  to enter text.)
5. Press **Send** (left softkey) to send your Sprint Mail message.

For information and instructions about reading, replying to, and managing Sprint Mail (including setting up your address book), please visit www.sprint.com.

Accessing Additional Email Providers

With Sprint, you can use popular email services such as AOL® Mail, AIM® Mail, MSN® Mail, Gmail, and Yahoo!® Mail to keep in touch, even while you're on the go.

1. From the Sprint home page, select **Messaging > Email**.
2. Select an email provider, such as **AOL Mail**, **AIM Mail**, **MSN Hotmail**, **Gmail**, or **Yahoo! Email**.
3. Use your keypad to enter the required sign-in information for the selected provider, such as user name, email address, or password, and select **Sign In**. (Your mailbox for the selected provider will be displayed.)

Note

The information required to sign in will vary depending on the email provider you are accessing.

4. Follow the onscreen instructions to read, reply to, compose, send, and manage your email account.

Tip

You can also access the Email and Instant Messaging options from the main menu. Select Home and press Menu > Messages > Email or IM and select an option.

Accessing Sprint Instant Messaging

Sprint also provides you with access to popular instant messaging (IM) clients, including AOL® Instant Messenger™, MSN® Messenger, and Yahoo!® Messenger.

1. From the Sprint home page, select **Messaging > IM**.
2. Select an IM provider, such as **AOL Instant Messenger**, **MSN Messenger**, or **Yahoo! Messenger**.
3. Use your keypad to enter the required sign-in information for the selected provider, such as user name or password, and select **Sign In**. (Your IM screen for the selected provider will be displayed.)

Note The information required to sign in will vary depending on the instant messaging provider you are accessing.

4. Follow the onscreen instructions to read, reply to, compose, send, and manage your IM account.

Accessing Wireless Chatrooms

Sprint gives you the ability to join wireless chatrooms from your phone.

1. From the Sprint home page, select **Messaging > Chat & Dating**.
2. Select a chat provider and follow the onscreen instructions to sign up and begin chatting.

Note Chat & Dating options change frequently, so check back often to see what's new.

Downloading Content

With Sprint, you have access to a dynamic variety of Premium Services content, such as downloadable Games, Ringers, Screen Savers, and other applications. (Additional charges may apply.) The basic steps required to access and download Premium Services content are outlined below.

Accessing the Download Menus

1. Select  and press  > **Get Stuff**.
2. Select the item you wish to download from the corresponding category (**Games**, **Ringers**, **Screen Savers**, etc.).

To access the download menus from the Web browser:

1. From the Sprint home page, select **Downloads**.
2. Select **Games**, **Ringers**, **Screen Savers**, **Applications**, **IM & Email**, or **Call Tones** to go to the corresponding download menu. (For more information on navigating the Web, see “Navigating the Web” on page 152.)

Selecting an Item to Download

You can search for available items to download in a number of ways:

- **Featured** displays a rotating selection of featured items.
- **Categories** allows you to narrow your search to a general category, such as Country or Pop/Rock for Ringers or For the Ladies for Screen Savers. (There may be several pages of available content in a list. Select **Next 9** to view additional items.)
- **Search** allows you to use your keypad to enter search criteria to locate an item. You may enter an entire word or title or perform a partial-word search.

Downloading an Item

Once you've selected an item you wish to download, highlight it and press , or press **OK** (left softkey). You will see a summary page for the item including its title, the vendor, the download details, the file size, and the cost. Links allow you to view the **License Details** page, which outlines the price, license type, and length of license for the download, and the **Terms of Use** page, which details the Premium Services Terms of Use and your responsibility for payment.

To download a selected item:

1. From the information page, select **Buy**. (The item will download automatically. When the **New Download** screen is displayed, the item has been successfully downloaded to your phone.)

Note

If you have not previously purchased an item, you will be prompted to create your purchasing profile.

2. Once the item has been successfully downloaded and the completed screen appears, select an option to assign the ringer or screen saver, run the application, play the game, etc.

Using My Content Manager

Whether you purchase your Premium Services content from your phone or from your online account management page at www.sprint.com, all of your purchases are stored in **My Content Manager** and may be downloaded to your phone from there.

My Content Manager is a storage area on the Sprint National Network that allows you to store all your Premium Services downloadable files. The files remain in My Content Manager until their license terms have expired – even after you have downloaded the content to your phone. This provides you with a convenient place to access information about your downloaded files without having to store the information in your phone's memory.

To access My Content Manager:

- ▶ From the Sprint home page, select **Downloads > My Content Manager**.
(A list of your purchased items will be displayed.)

To download purchased content from *My Content Manager*:

1. From the *My Content Manager* display (see the previous page), highlight the item you wish to download, and press . (The information page for the selected item will be displayed.)
2. Select **Download** and press . (The item will download automatically. When the *New Download* screen is displayed, the item has been successfully downloaded to your phone.)
3. Once the item has been successfully downloaded and the completed screen appears, select an option to assign the ringer or screen saver, run the application, play the game, etc.

Tip

You can also access *My Content Manager* through the phone's main menu. Select **Home** and press **Menu**>**My Stuff**>**[Games, Ringers, Screen Savers, Applications or IM & Email]**>**My Content Manager**. The browser will open and take you to the corresponding content.

For complete information and instructions on downloading *Games, Ringers, Screen Savers, Applications, IM & Email*, and *Call Tones*, visit the Digital Lounge at www.sprint.com.

Exploring the Web

With Web access on your phone, you can browse full-color graphic versions of your favorite Web sites, making it easier than ever to stay informed while on the go. Follow sports scores, breaking news, and weather, and shop on your phone anywhere on the Sprint National Network.

In addition to the features already covered in this section, the Sprint home page offers access to these colorful, graphically rich Web categories, including **News**, **Weather**, **Entertainment**, **Sports**, **Money**, **Travel**, **Shopping**, and **Tools**, as well as useful management options including **My Account** and **Search**. Many sites are available under more than one menu – choose the one that's most convenient for you.

Using the Browser Menu

Navigating the Web from your phone using the Sprint home page is easy once you get the hang of it. For details on how to navigate the Web, select menu items, and more, see “Navigating the Web” on page 152.

Although the Sprint home page offers a broad and convenient array of sites and services for you to browse, not all sites are represented, and certain functions, such as going directly to specific Web sites, are not available. For these and other functions, you will need to use the browser menu. The browser menu offers additional options to expand your use of the Web on your phone.

Opening the Browser Menu

The browser menu may be opened anytime you have an active data session, from any page you are viewing.

To open the browser menu:

- ▶ Press the right softkey from any page during an active data session. (The browser menu will be displayed.)

Options available under the browser menu include:

- **Home.** Returns the browser to the home page.
- **Forward.** Returns you to a previously viewed page (after having used the .
- **Mark this page.** Allows you to bookmark the current site.
- **View Bookmarks.** Allows you to access and manage your bookmarks.
- **Search.** Launches a Web search.
- **Send page.** Allows you to send a URL via SMS.
- **Go to URL....** Allows you to navigate directly to a Web site by entering its URL (Web site address).
- **History.** Keeps a list of links to your most recently visited sites. To navigate to a site, highlight it and press , and then select **Connect**.
- **Refresh this page.** Reloads the current Web page.
- **More....** Displays additional options:
 - **Show URL.** Displays the URL (Web site address) of the site you're currently viewing.
 - **Restart Browser.** Refreshes the current browser session.
 - **Error Log.** Lets you display the error log.
 - **About Browser.** Allows you to display information about your browser.
 - **Preferences.** Lets you configure and manage your browser settings.

Creating a Bookmark

Bookmarks allow you to store the address of your favorite Web sites for easy access at a later time.

1. Go to the Web page you want to mark.
2. Press the right softkey to open the browser menu.
3. Select **Mark this page** > **Save** (left softkey) > **OK** (left softkey).

Note *Bookmarking a page does not store the page contents, just its address.*

Some pages cannot be bookmarked. Whether a particular Web page may be marked is controlled by its creator.

Accessing a Bookmark

1. Press the right softkey to open the browser menu.
2. Select **View Bookmarks**.
3. Select a bookmark and press **MENU OK** (or press the number corresponding to the bookmark you wish to access).

Deleting a Bookmark

1. Press the right softkey to open the browser menu.
2. Select **View Bookmarks**.
3. Select a bookmark and press the right softkey.
4. Select **Delete**. (A confirmation will be displayed.)
5. Press **Yes** (right softkey) to remove the bookmark.

Going to a Specific Web site

To go to a particular Web site by entering a URL (Web site address):

1. Press the right softkey to open the browser menu.
2. Select **Go to URL...**
3. Select the **Input Address** and press **MENU OK**.
4. Use your keypad to enter the URL of the Web site you wish to go to and press **MENU OK**.
5. Press **MENU OK** again to go to the Web site.

Note *Not all Web sites are viewable on your phone.*

Reloading a Web Page

To reload (refresh) a Web page:

1. Press the right softkey to open the browser menu.
2. Select **Refresh this page**. (The browser will reload the current Web page.)

Restarting the Web Browser

If the Web browser seems to be malfunctioning or stops responding, you can usually fix the problem by simply restarting the browser.

1. Press the right softkey to open the browser menu.
2. Select **More...>Restart Browser**.

Phone as Modem

Your phone's data capabilities enable you to use its high-speed data connection as a modem for your laptop computer. You'll be able to send and receive email, browse the Internet, and access your company's network anywhere on the Sprint National Network.

Note

To use this service, you are required to sign up on a Sprint Phone as Modem plan. Go to www.sprint.com or visit a Sprint Store for Phone as Modem plan details and more information.

Setting Up a Data Connection With Your Computer

In order to use your phone as a modem, you'll first need to load the Sprint PCS Connection ManagerSM software on your computer. Then, use a compatible USB cable or built-in Bluetooth connection to connect your phone to your computer.

1. From your computer's traditional Internet connection, go to www.sprint.com/downloads and download the *Sprint PCS Connection Manager for Phone as Modem/USB Cables* software. (The software and drivers can be downloaded free of charge.)
2. Double-click the downloaded file and follow the onscreen instructions to install the Sprint PCS Connection Manager software and drivers to your computer.
3. Once the software has been fully installed, connect your phone to your computer using a USB cable or built-in Bluetooth connection. (Your computer will detect the connection and a status icon may appear in your system tray.)

4. Launch the Sprint PCS Connection Manager software, select a profile, and click **Connect**.
5. Once the connection is established, launch an Internet session, check your email, or do anything else you would do using a traditional data connection.
6. When you're ready to terminate the data connection, double-click the Sprint PCS Connection Manager icon in the system tray, and then click **Disconnect** to end the session.

Note

While your data connection is active, you will not be able to receive incoming calls; all incoming calls will be forwarded to your Sprint Voicemail. Placing an outgoing call during a data session terminates the data connection.

Data services work anywhere on the Sprint National Network, but broadband-like download speeds are only available in areas covered by the Sprint Mobile Broadband Network.

Data Services FAQs

How will I know when my phone is ready for data service?

Your user name (for example, *bsmith01@sprint.com*) will be displayed when you access **Menu > Settings > Phone Info > My Account**.

How do I sign in for the first time?

You are automatically signed in to access data services when you turn on your phone.

How do I know when my phone is connected to data services?

Your phone automatically connects when data service is used or an incoming message arrives. Your phone will also display the  or  indicator.

Can I make calls and use data services at the same time?

You cannot use voice and data services simultaneously. If you receive a call while data service is active, the call will be forwarded to voicemail. You can place an outgoing call anytime, but it will interrupt any in-progress data session.

When is my data connection active?

Your connection is active when data is being transferred. Outgoing calls are allowed; incoming calls go directly to voicemail. When active, the  or  indicator flashes on your phone's display screen.

When is my data connection dormant?

If no data is received for 10 seconds, the connection goes dormant. When the connection is dormant, voice calls are allowed. (The connection may become active again quickly.) If no data is received for an extended period of time, the connection will terminate.

Can I sign out of data services?

You can sign out without turning off your phone; however, you will not be able to browse the Web or use other data services. While signed out, you can still place or receive phone calls, check voicemail, and use other voice services. You may sign in again at any time. To sign out, go to **Settings > More... > Data > Disable Data** in your phone's menu.

Entertainment: TV and Music

- ◆ *TV (page 165)*
- ◆ *Music-Sprint Music Store (page 169)*
- ◆ *Streaming Music (page 172)*

SprintTV gives you the ability to listen to audio clips and to view video clips right from your phone's display. Watch live TV and catch up on episodes of your favorite shows – anywhere on the Sprint National Network.

SprintMusic lets you preview, purchase, download, and listen to over a million songs right on your phone. You can even add songs from your own library to round out your on-the-go playlist.

TV

Your Sprint TV Channel Options

The Sprint TV application offers a wide variety of accessible channels. Subscription options include comprehensive basic packages as well as a full menu of “a la carte” channels. Visit www.sprint.com for more information on channels and pricing.

Some of the available categories may include:

- Sprint Radio
- Sprint PowerView
- Primetime TV
- Music Videos
- Sprint TV Live
- Music & Radio
- Sports
- Entertainment
- Cartoons
- News & Weather
- Movies & Shorts
- Mobile Previews

Note

Available categories and content are subject to change.

Playing a Video or Audio Clip

1. Select  and press  > **Entertainment**.
2. Select **Music**, **TV**, or **Games** to display channel options.
3. Use your navigation key and press  to select a channel from the Sprint TV listings or to select an available category.

Note

*The first time you access a channel, you will be prompted to purchase access (unless the channel doesn't have a monthly fee). Select **Subscribe** to purchase access, or select **Preview** to view a preview of the selected channel.*

4. If applicable, select a clip and press  to view the program. The clip will automatically load and begin playing.


Tip

*While you are playing a clip, you can press the navigation key up and down to surf to a different channel. A small pop-up screen will be displayed that tells you which channel you are watching as well as other channels that you have access to. Use the navigation key to scroll through the channels. Once you find a channel that you want to watch or listen to, scroll to it and press **OK** (or simply wait approximately three seconds), and the channel will begin loading.*

Playing Music Applications Using the External Control Keys

The external control keys can be used to play, pause, stop, forward, or rewind a music application.

Key Operation While Playing Music Applications

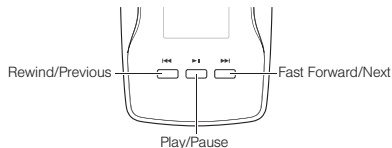

Key	Operation
▶	Plays or pauses a music application.
▶▶▶	Skips to the next music application. Fast forwards the current music application when held down.
◀◀◀	Returns to the previous music application. Rewinds the current music application when held down.

Sprint TV FAQs

1. Will I know if I'm receiving an incoming call while I'm viewing or listening to a media clip?

No. All incoming calls will roll into voicemail while you are playing a clip. If the caller leaves a voicemail, the voicemail icon will be displayed on the screen.

2. How long are the clips? Will I know the estimated time it will take to play the clip prior to accessing it?

Once you have selected a channel, you will see a listing of the available clips, with each clip's length displayed after the clip's title. In general, a clip's duration will depend on the story or content being provided, and can be fairly short or as long as a few minutes.

3. Can I access a clip wherever I am, as long as I have my phone?

As long as you are on the Sprint National Network, you will have access to the audio and video clips.

Note *Sprint TV Service does not work while roaming off of the Sprint National Network or where service is unavailable.*

4. *Are the videos that I'm viewing "live" videos?*

It depends on the content provider. Some of the channels available through Sprint TV stream live content.

5. *After purchasing access to an Available Channel for a monthly fee, do I receive any confirmation? That is, how do I know it has been purchased?*

The next time you access the channel, you bypass the **Preview/Purchase** page and go directly to the available content.

6. *If I don't subscribe to a Sprint Service Plan, will I still be able to view the multimedia clips?*

Yes. For service access charges, please consult your Sprint service plan or visit www.sprint.com.

7. *What does it mean when the video pauses and I see the word "loading" at the bottom of the screen?*

This happens when the phone is loading the data necessary to play the clip. It typically occurs when there is heavy traffic on the network.

8. *How can I cancel service if I decide I don't want it?*

To cancel your Sprint TV service, visit www.sprint.com and sign on to **MySprintWireless** with your account number and password. From this

page, you have the ability to cancel the service or any channels to which you subscribe.

9. *If I put on my stereo headset and insert it into the phone's headset jack, can I close the phone while I am playing an audio (or video) clip without interrupting the clip?*

Yes. When you insert your stereo headset into the phone's headset jack, the phone automatically goes into "headset mode," allowing you to close the phone and continue playing the clip. (Likewise, if your phone is in "headset mode," a phone call will not disconnect when you close the phone.)

10. *Can I surf to a different channel while I am playing a clip?*

Yes. While you are playing a clip, you can use the up and down navigation keys to surf to a different channel. A small pop-up screen will be displayed that tells you which channel you are watching as well as other channels that you have access to. Use the navigation keys to scroll through the different channels. Once you find a channel that you want to watch, scroll to it and press  (or simply wait approximately three seconds), and the channel will begin loading.

Music – Sprint Music Store

The Sprint Music Store enables you to purchase and download digital music files to play on your phone or computer.

Accessing the Sprint Music Store

You can access the Sprint Music Store right from your phone's main menu, anywhere on the Sprint National Network. When you enter the store for the first time, you will be prompted to set up your user identification and password.

1. Select  and press  > **Entertainment** > **Music**.
2. Follow the onscreen instructions to establish your UserID and password.

Tip Your UserID for the Sprint Music Store is your 10-digit wireless phone number. The password may be any 4-digit number.

3. After you have entered your password, highlight **Create New Account** and press .
4. Use your keypad and navigation key to explore the store.

Tip

For instant access to all your music and the Sprint Music store, use the Music tile on the main screen carousel. See **Section 2B: Navigating the Main Screen** on page 36 for details.

Purchasing and Downloading Music

Now that you're in the store, you can shop for songs to purchase and download to your phone's microSD card.

1. From the Sprint Music Store opening page, select an option to browse the store:
 - **Featured Music** offers a revolving selection of highlighted songs and artists.
 - **Categories** allows you to choose from categories such as Top 10s, New This Week, What's Hot, Songs You Know, and specific musical genres.
 - **Search** gives you the option of searching for specific songs or artists. Just use your keypad to enter your search criteria in the available field.
2. Select a song and press . (The song information screen will be displayed.)
3. Select an option and press :
 - **Preview** to play an audio clip of the selected song.

- **BuySong** to purchase the song and download it to your phone's microSD card.
 - When you select **BuySong**, the file will download to your phone's microSD card. (If there is no microSD card installed or if there is not enough free memory space on the card, you will see an alert.)
 - Once the song has been downloaded to your microSD card, you will see options allowing you to listen to the song, add it to a playlist, or continue shopping.

Playing Music From the Sprint Music Store

The Sprint Music Store not only gives you access to great music, it also gives you a place to listen to and organize your music library.

Accessing the Music Player

1. From the Sprint Music Store opening page, use your right navigation key to select the **Player** tab.
2. From the Player display, select an option:

- **All My Music** to browse through all of your downloaded music, including music purchased from the Sprint Music Store and any additional songs you have loaded onto your microSD card from your computer.
- **<playlist>** to select a customized playlist you've created to organize your music.
- **Create Playlist...** to set up a custom playlist of songs you like to hear together. Follow the onscreen instructions to create a name for the playlist, select songs by artist, genre, and title, and create an order for the playlist.

3. Once you've displayed a list of songs, you can browse through your available titles by Song, Artist, or Genre to select a specific song.
 - To play a song, select it and press .
 - To listen to a playlist, select it and press  to open the playlist, and then press  again to begin playing from the selected song. (You can also highlight the playlist and use the softkey menu to begin listening.)

Backing Up Your Downloaded Music Files

When you purchase and download a music file from the Sprint Music Store, you get two versions of the song: one to download and play on your phone (file type: AAC+), and another to download from <http://musicstore.sprint.com> and play on your computer (file type: WMA). The AAC+ files downloaded to your phone can only be played on your phone and on your account, and once they have been downloaded, they cannot be downloaded again without being repurchased.

Sprint recommends you back up your AAC+ music files to your computer so you can access the files in case your microSD card is lost or damaged, or if you install a new microSD card.

1. Connect your phone using a compatible USB cable (page 110) or Bluetooth (page 136).
2. Use your computer to navigate to the microSD card's **MUSIC** folder.
3. Select and copy the music files to a folder on your computer's hard drive.

Note

Although you can store AAC+ files on your computer, they will only be playable on your phone and on your account.

If you copy the files to a new microSD card, you will need to create a folder on the card called "Get Staff" to be able to play the music files.

Receiving an Incoming Call While Playing Music

An incoming call causes the currently played music file to be paused while the phone call is active. Once the current call is ended, you can select to resume any paused applications (music will resume playing automatically).

1. Answer an incoming call by pressing **TALK**.
2. When you are done with your call, press **END**® to end the call. The previously paused application then resumes.

Note

When placing an outgoing call, the Application Manager pauses your current music playback and allows you to proceed with your outgoing call. When the call is ended, the Application Manager restarts the music playback.

If the phone is running more than one simultaneous application (such as **Music Store**, **Application** [from My Stuff], and **Games**), the user interface can begin to slow down and result in music or sound interruptions.

- To solve this type of issue, it is best to close down all other applications (select  and press  > **My Stuff** > **Options** > **My Content Manager**) before initiating a new application.

Also, in some situations, the camera or camcorder may have limited functionality or become unavailable. For example, if you were currently playing music (via the Music Store), or playing a game in the background, and then wanted take a photo, the phone may prompt you with a “CPU Low, Kill the Application” dialog. This indicates that the current phone resources are stretched and one of the current applications should be terminated before continuing. Refer to the procedure above to exit either a specific application or all current applications, and then launch the camera or camcorder again.

Streaming Music

In addition to the Sprint Music Store, Sprint offers a variety of musical options through the Music category in the Sprint TV menu, including SIRIUS Music, Music Choice, VH1, and many others. Choose from rock, pop, hip-hop, and R&B, and access exclusive video clips, music industry news, performances, and interviews with your favorite artists.

1. Select  and press  > **Entertainment** > **TV** > **SprintTV** > **Music & Radio** > [selection].
– or –
Select  and press  > **Entertainment** > **TV** > **Sprint Radio** > [selection].
2. If prompted, select **Preview** to see and hear a preview of your selected channel (if available).
– or –
Select **Subscribe** to purchase a monthly subscription to your selected channel.

Once you have purchased access to a music or radio channel, you can select from a variety of stations to listen to your favorite music or get caught up on what's new in music.

Section 4
***Safety and Warranty
Information***



Important Safety Information

- ◆ *General Precautions (page 174)*
- ◆ *Maintaining Safe Use of and Access to Your Phone (page 175)*
- ◆ *Using Your Phone With a Hearing Aid Device (page 176)*
- ◆ *Caring for the Battery (page 178)*
- ◆ *Radio Frequency (RF) Energy (page 179)*
- ◆ *Owner's Record (page 181)*
- ◆ *User Guide Proprietary Notice (page 181)*

This phone guide contains important operational and safety information that will help you safely use your phone. Failure to read and follow the information provided in this phone guide may result in serious bodily injury, death, or property damage.

General Precautions

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- To maximize performance, do not touch the bottom portion of your phone where the internal antenna is located while using the phone.
- Speak directly into the mouthpiece.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery.
- Do not expose your phone to direct sunlight for extended periods of time (such as on the dashboard of a car).
- Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending, or sitting on it.
- Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment.

Note

For the best care of your phone, only Sprint-authorized personnel should service your phone and accessories. Failure to do so may be dangerous and void your warranty.

Maintaining Safe Use of and Access to Your Phone

Do Not Rely on Your Phone for Emergency Calls

Mobile phones operate using radio signals, which cannot guarantee connection in all conditions. Therefore you should never rely solely upon any mobile phone for essential communication (e.g., medical emergencies). Emergency calls may not be possible on all cellular networks or when certain network services or mobile phone features are in use. Check with your local service provider for details.

Using Your Phone While Driving

Talking on your phone while driving (or operating the phone without a hands-free device) is prohibited in some jurisdictions. Laws vary as to specific restrictions. Remember that safety always comes first.

Tip

Purchase an optional hands-free accessory at your local Sprint Store, or call Sprint at 1-800-974-2221. You can also dial # 222 on your phone.

Following Safety Guidelines

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating systems or entertainment systems in motor vehicles. Check with the manufacturer or their representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

Note

Always turn off the phone in healthcare facilities, and request permission before using the phone near medical equipment.

Turning Off Your Phone Before Flying

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

Turning Off Your Phone in Dangerous Areas

To avoid interfering with blasting operations, turn your phone off when in a blasting area or in other areas with signs indicating two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

Turn your phone off when you're in any area that has a potentially explosive atmosphere. Although it's rare, your phone and accessories could generate sparks. Sparks can cause an explosion or fire, resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They include:

- Fueling areas such as gas stations.
- Below deck on boats.
- Fuel or chemical transfer or storage facilities.
- Areas where the air contains chemicals or particles such as grain, dust, or metal powders.
- Any other area where you would normally be advised to turn off your vehicle's engine.

Note

Never transport or store flammable gas, flammable liquids, or explosives in the compartment of your vehicle that contains your phone or accessories.

Restricting Children's Access to Your Phone

Your phone is not a toy. Do not allow children to play with it as they could hurt themselves and others, damage the phone or make calls that increase your Sprint invoice.

Using Your Phone With a Hearing Aid Device

A number of Sprint phones have been tested for hearing aid device compatibility. When some wireless phones are used with certain hearing devices (including hearing aids and cochlear implants), users may detect a noise which can interfere with the effectiveness of the hearing device.

Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference noise they may generate. ANSI standard C63.19 was developed to provide a standardized means of measuring both wireless phone and hearing devices to determine usability rating categories for both.

Ratings have been developed for mobile phones to assist hearing device users find phones that may be compatible with their hearing device. Not all phones have been rated for compatibility with hearing devices. Phones that have been rated have a label located on the box. **Your KATANA® Eclipse X by SANYO has an M4 and a T4 rating.**

These ratings are not guarantees. Results will vary depending on the user's hearing device and individual type and degree of hearing loss. If a hearing device is particularly vulnerable to interference noise; even a phone with a higher rating may still cause unacceptable noise levels in the hearing device. Trying

out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements for hearing aid compatibility and are likely to generate less interference to hearing devices than unrated phones. (M4 is the better/higher of the two ratings.)

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. (T4 is the better/higher of the two ratings. Note that not all hearing devices have telecoils in them.)

Hearing aid devices may also be measured for immunity to interference noise from wireless phones and should have ratings similar to phones. Ask your hearing healthcare professional for the rating of your hearing aid. Add the rating of your hearing aid and your phone to determine probable usability:

- Any combined rating equal to or greater than six offers excellent use.
- Any combined rating equal to five is considered normal use.
- Any combined rating equal to four is considered usable.

Thus, if you pair an M3 hearing aid with an M3 phone, you will have a combined rating of six for "excellent use." This is synonymous for T ratings.

Sprint further suggests you experiment with multiple phones (even those not labeled M3/T3 or M4/T4) while in the store to

find the one that works best with your hearing aid device. Should you experience interference or find the quality of service unsatisfactory after purchasing your phone, promptly return it to the store within 30 days of purchase. With the Sprint 30-day Risk-Free Guarantee, you may return the phone within 30 days of purchase for a full refund. More information about hearing aid compatibility may be found at: www.fcc.gov, www.fda.gov, and www.accesswireless.org.

Getting the Best Hearing Device Experience With Your Phone

To further minimize interference:

- Set the phone's display and keypad backlight settings to ensure the minimum time interval:
 1. Select  and press  > **Settings** > **Display** > **Main Screen** or **Outer Screen** > **Backlight**.
– or –
Select  and press  > **Settings** > **Display** > **Keypad Light**.
 2. Select the minimum time interval setting and press .
- Position the phone so the internal antenna is farthest from your hearing aid.
- Move the phone around to find the point with least interference.

Caring for the Battery

Protecting Your Battery

The guidelines listed below help you get the most out of your battery's performance.

- Recently there have been some public reports of wireless phone batteries overheating, catching fire or exploding. It appears that many, if not all, of these reports involve counterfeit or inexpensive, aftermarket-brand batteries with unknown or questionable manufacturing standards. Sprint is not aware of similar problems with Sprint phones resulting from the proper use of batteries and accessories approved by Sprint or the manufacturer of your phone. Use only Sprint-approved or manufacturer-approved batteries and accessories found at Sprint Stores or through your phone's manufacturer, or call 1-866-343-1114 to order. They're also available at www.sprint.com — click **Accessories**. Buying the right batteries and accessories is the best way to ensure they're genuine and safe.
- In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° C).
- Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- Never dispose of the battery by incineration.
- Keep the metal contacts on top of the battery clean.

- Don't attempt to disassemble or short-circuit the battery.
- The battery may need recharging if it has not been used for a long period of time.
- It's best to replace the battery when it no longer provides acceptable performance. It can be recharged hundreds of times before it needs replacing.
- Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:

Less than one month:

-4° F to 140° F (-20° C to 60° C)

More than one month:

-4° F to 113° F (-20° C to 45° C)

Disposal of Lithium Ion (Li-Ion) Batteries

Do not handle a damaged or leaking Li-Ion battery as you can be burned.

For safe disposal options of your Li-Ion batteries, contact your nearest Sprint authorized service center.

Special Note: Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

Radio Frequency (RF) Energy

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watt to 0.2 watt in digital mode.

Knowing Radio Frequency Safety

The design of your phone complies with updated NCRP standards described below.

In 1991–92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

Body-Worn Operation

To maintain compliance with FCC RF exposure guidelines, if you wear a handset on your body, use the Sprint supplied or

approved carrying case, holster or other body-worn accessory. If you do not use a body-worn accessory, ensure the antenna is at least **0.945 inch (2.4 centimeters)** from your body when transmitting. Use of non-Sprint-approved accessories may violate FCC RF exposure guidelines.

For more information about RF exposure, visit the FCC Web site at www.fcc.gov.

Specific Absorption Rates (SAR) for Wireless Phones

The SAR is a value that corresponds to the relative amount of RF energy absorbed in the head of a user of a wireless handset.

The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean variations

in safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

The highest reported SAR values of the KATANA® Eclipse X by SANYO® are:

Cellular CDMA mode (Part 22):

Head: 0.600 W/kg; Body-worn: 0.231 W/kg

PCS mode (Part 24):

Head: 0.912 W/kg; Body-worn: 0.283 W/kg

FCC Radio Frequency Emission

This phone meets the FCC Radio Frequency Emission Guidelines.

FCC ID number: JOYSCP-6750.

More information on the phone's SAR can be found from the following FCC Web site: <http://www.fcc.gov/oet/ea/>.

FCC Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient the direction of the internal antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Owner's Record

The model number, regulatory number, and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This will be helpful if you need to contact us about your phone in the future.

Model: KATANA® Eclipse X by SANYO®

Serial No.:

User Guide Proprietary Notice

CDMA Technology is licensed by QUALCOMM Incorporated under one or more of the following patents:

4,901,307 5,109,390 5,267,262 5,416,797
 5,506,865 5,544,196 5,657,420 5,101,501
 5,267,261 5,414,796 5,504,773 5,535,239
 5,600,754 5,778,338 5,228,054 5,337,338
 5,710,784 5,056,109 5,568,483 5,659,569
 5,490,165 5,511,073

T9 Text Input is licensed by Nuance Communications, Inc. and is covered by U.S. Pat. 5,818,437, U.S. Pat. 5,953,541, U.S. Pat. 6,011,554 and other patents pending.

User Guide template version 7B (December 2007)

Section 4B

Manufacturer's Warranty

◆ Manufacturer's Warranty (page 183)

Your phone has been designed to provide you with reliable, worry-free service. If for any reason you have a problem with your equipment, please refer to the manufacturer's warranty in this section.

For information regarding the terms and conditions of service for your phone, please visit www.sprint.com or call Sprint Customer Service at 1-888-211-4727.

Note

In addition to the warranty provided by your phone's manufacturer, which is detailed on the following pages, Sprint offers a number of optional plans to cover your equipment for non-warranty claims. Sprint Total Equipment Protection provides the combined coverage of the Sprint Equipment Replacement Program and the Sprint Equipment Service and Repair Program, both of which are available separately. Each of these programs may be signed up for within 30 days of activating your phone. For more details, please visit your nearest Sprint Store or call Sprint at 1-800-584-3666.

Manufacturer's Warranty

Manufacturer's Warranty

KYOCERA SANYO Telecom, Inc. ("KSTI") offers you, the original purchaser who has purchased the enclosed subscriber unit ("Product") only from an authorized dealer in the United States, a limited warranty that the Product, including accessories in the Product's package, will be free from defects in material or workmanship as follows:

A. ONE (1) YEAR LIMITED WARRANTY: For a period of one (1) year from the date of original purchase, KSTI will, at its option, either repair or replace a defective Product (with new or rebuilt parts/replacements).

B. LIMITED WARRANTY ON REPAIRED/REPLACED PRODUCTS: For a period equal to the remainder of the limited warranty period on the original Product or, on warranty repairs which have been effected on Products for 90 days after the date of its repair or replacement, whichever is longer, KSTI will repair or replace (with new or rebuilt parts/replacements) defective parts or Products used in the repair or replacement of the original Product under the Limited Warranty on it.

Proof that the Product is within the warranty period in the form of a bill of sale or warranty repair document that includes the date of purchase, Product serial number and the authorized dealer's name and address, must be presented to obtain warranty

service. This limited warranty is not transferable to any third party, including but not limited to any subsequent purchaser or owner of the Product. Transfer or resale of a Product will automatically terminate warranty coverage with respect to it.

This limited warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks. Also this limited warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by KSTI for charging the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, or (iii) the battery has been used in equipment other than the SANYO brand mobile phone for which it is specified.

This limited warranty does not cover and is void with respect to the following: (i) Products which have been improperly installed, repaired, maintained or modified (including the antenna); (ii) Products which have been subjected to misuse (including Products used in conjunction with hardware electrically or mechanically incompatible or Products used with software, accessories, goods or ancillary or peripheral equipment not supplied or expressly authorized by KSTI for use), abuse, accident, physical damage, abnormal use or operation, improper handling or storage, neglect, exposure to fire, water or excessive moisture or dampness or extreme changes in climate or temperature, (iii) Products operated outside published maximum ratings; (iv) cosmetic damage; (v) Products on which warranty stickers or Product serial numbers have been removed, altered, or rendered illegible; (vi) customer instruction; (vii) cost of installation, set up, removal or reinstallation; (viii) signal

reception problems (unless caused by defect in material or workmanship); (ix) damage the result of fire, flood, acts of God or other acts which are not the fault of KSTI and which the Product is not specified to tolerate, including damage caused by mishandling and blown fuses; (x) consumables (such as memory cards, fuses, etc.); or (xi) any Products which have been opened, repaired, modified or altered by anyone other than KSTI or a KSTI authorized service center.

This warranty is valid only in the United States.

REPAIR OR REPLACEMENT, AS HERE IN ABOVE PROVIDED, IS YOUR SOLE AND EXCLUSIVE REMEDY FOR BREACH OF THE LIMITED WARRANTY. KSTI SHALL HAVE NO LIABILITY FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING, BUT NOT LIMITED TO LOSS OF PROFITS, LOST SALES, LOSS OF DATA, LOSS OF USE OF THE PRODUCT, OR ANTICIPATED PROFITS ARISING OUT OF USE OR INABILITY TO USE ANY PRODUCT (FOR EXAMPLE, WASTED AIRTIME CHARGES DUE TO THE MALFUNCTION OF A PRODUCT). THIS WARRANTY DOES NOT COVER PRODUCTS SOLD "AS IS" OR "WITH ALL FAULTS". KSTI MAKES NO OTHER EXPRESS WARRANTY WITH RESPECT TO THE PRODUCTS. THE DURATION OF IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE IS LIMITED TO THE DURATION OF THIS EXPRESS WARRANTY.

Some States do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

This limited warranty gives you specific legal rights, and you may have other rights which vary from State to State.

To obtain warranty service, contact

KYOCERA SANYO Telecom, Inc

Attention : Customer Services for Wireless Products

Phone : 866-SANYOWC (866-726-9692)

Web : <http://www.sanyowireless.com>

This product contains NetFront Browser of ACCESS CO., LTD. ACCESS and NetFront are trademarks or registered trademarks of ACCESS CO., LTD. in Japan and other countries. This software is based in part on the work of the Independent JPEG Group.

Copyright © 2008 InnoPath Software. All rights reserved.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Kyocera Corporation is under license. Other trademarks and trade names are those of their respective owners.

© 2008 Sprint. Sprint and the logo are trademarks of Sprint. Other marks are the property of their respective owners. SANYO is a registered trademark of SANYO Electric Co., Ltd. and used under license.

KYOCERA SANYO Telecom, Inc. is a wholly-owned subsidiary of KYOCERA International Inc.

Index

A

Abbreviated Dialing 27, 58
Airplane Mode 55
Alarm Clock 92
Answering Calls 21
Auto-Answer Mode 58
Automatic Speech Recognition (ASR) 94

B

Backlight 47
Battery
 Capacity 16
 Charging 17
 Installing 17
Bluetooth 129 – 136
Bookmarks 161
Browser Menu 159

C

Calculator 92
Calendar 88
Call Answer Mode 57
Call Forwarding 148
Call Guard 70
Call Waiting 147
Caller ID 146
Camera 112 – 128
Chat 156
Clock Display 49
Contacts 77
 Adding a Phone Number 81
 Creating an Entry 77
 Dialing From 28
 Editing an Entry 81
 Entry Options 80
 Finding Entries 78
 Secret Entries 84
Contrast 49
Countdown Timer 93

D

Data Roam Guard 71
Data Services 149
 Applications 149
 Chat 156
 Downloading Content 157
 FAQs 164
 Home Page 151
 Launching 151
 My Content Manager 158
 Modem 162
 Navigating the Web 152
 Net Guard 151
 Password 5
 Security Features 66
 UserName 150
Deleting Phone Content 64
Dialing Options 21
Display Language 58
Display Screen 11
Display Settings 47

E

- Email 154, 155
- Entering Text 29
 - Alphabet Mode 32
 - Emoticons 33
 - Numbers 33
 - Preset Messages 33
 - Selecting Input Options 29
 - Symbols 33
 - T9 Text Input 31

H

- Headset Options 59
- History 72
 - Deleting 76
 - Making a Call From 74
 - Menu Options 74
 - Prepending a Phone Number 75
 - Saving a Phone Number From 75
 - Thread 73

I

- Icon indication 73, 117, 120
- Illumination 48
- Instant Messaging 156

K

- Key Functions 9
- Keytones 45

L

- Location 51
- Lock Code
 - Changing 62
- Locking Your Phone 62

M

- Main Screen 36, 57
- Making Calls 20
- Maps 35
- Menu ii
- Menu Style 49

Messaging Settings

- Deleting Old Messages 53
- Notification 52
- Setting Reminders 52
- Signature 53
- microSD Card 102
 - Adapter 102
 - Creating Folders 107
 - Formatting 107
- Music 169
 - Backing Up Music 171
 - Playing Music 170
 - Sprint Music Store 169
 - Streaming Music 172
- My Content Manager 158

N

- Net Guard 151

- P**
- Phone (illus.) 8
 - Phone as Modem 162
 - Phone Number
 - Displaying 19
 - Finding 26
 - Saving 26
 - With Pauses 26
 - Phone Settings 43
 - Airplane Mode 55
 - Auto-Answer Mode 58
 - Call Answer Mode 57
 - Display Settings 47 – 51
 - Location Settings 51
 - Messaging Settings 52 – 55
 - Sound Settings 43 – 47
 - TTY Use 56 – 57
 - Pictures 112
 - Assigning Pictures 123
 - PictBridge 127
 - Sending Pictures 123
 - Taking Pictures 112
 - Plus(+) Code Dialing 28
 - Preset Messages 33, 53, 145
- R**
- Resetting 65
 - Restricting Calls 63
 - Ringer Types 43
 - Ringers
 - Assigning 44
 - Downloading 44
 - Roaming 68
 - Setting Roam Mode 69
- S**
- Saving a Phone Number 26
 - Security 61
 - Silence All 47
 - Sleep Mode 50
 - SMS Text Messaging 144 – 145
 - SMS Voice Messaging
 - 145 – 146
 - Special Numbers 64
 - Speed Dialing 29
 - Assigning Numbers 82
 - Sprint Music Store 169
 - Sprint Picture Mail
 - Downloading Photos and videos 126
 - Sending 123 – 124
 - Uploading Photos and Videos 126
 - Web Site 125

Sprint Service

- Account Passwords* 4
- Dialing Sprint Services* 85
- Operator Services* 6
- Setting Up* 2
- Sprint 411* 6
- Sprint TV* 165
- Stopwatch* 93
- Streaming Music* 172

T

- T9 Text Input* 31
- Taking Photos* 112 – 117
- Text Messaging* 144
- Three-Way Call* 147
- TTY Use* 56 – 57
- Turning Your Phone On and Off*
15
- TV* 165

U

- Unlocking Your Phone* 62

V

Videos

- Options* 119
- Recording* 118
- Settings* 120
- Voice Memos* 97 – 99
- Voice Services* 94 – 101
- Voicemail*
 - Menu Key* 143
 - Options* 140
 - Retrieving* 139
 - Setting Up* 4
 - While Roaming* 69
- Volume* 46

W

- Warranty* 183
- Web see also Data Services*
159 – 162
- Wireless Backup* 85
- World Clock* 93

NOTES

[illegible]