

Breeze FB201 Phone User Guide



Table of Contents

Getting Started	3
Insert the SIM Card and Battery	3
Insert the Media Card	3
Keys and Parts	4
Basics.....	5
Display Indicators	5
Writing Text	5
Phone.....	6
Make or Answer a Call.....	6
In-Call Menu	6
Speakerphone	7
Profiles.....	7
Changing Profiles.....	7
Customizing Profiles.....	7
Voicemail	7
Voicemail Setup	7
Voicemail Shortcuts	7
Accessing Voicemail from an Outside Line	8
Messaging	8
Sending a Text Message	8
File Manager	8
Viewing Images.....	8
Changing Wallpapers.....	9
Playing Audio Files	9
Sending Files via Bluetooth	9
Entertainment.....	9
FM Radio.....	9
Audio Player	10
Sound Recorder	10
Video Player	11
Organizer	11
Calendar	11
Alarm	12
Settings	12
Phone Settings	12
Network Settings.....	13
Security Settings.....	13
Bluetooth.....	13
Restore Factory Settings	13
Access Codes	13
PIN1 or PIN2	13
Security Code	14
Certification information (SAR)	14
Help and Support	15

Getting Started

Insert the SIM Card and Battery

1. Switch the phone off, and remove the back cover.
2. If the battery is in the phone, lift it out.
3. Put the SIM in, contact area face down and the 45-degree corner facing upwards towards the Roam sticker.
4. Line up the battery contacts, and put the battery in.
5. Press the back cover down until it locks into place.
6. To switch on, press and hold the power button.



Insert the Media Card

1. Switch the phone off, and remove the back cover.
2. If the battery is in the phone, lift it out.
3. Slide the memory card holder down towards the bottom of the phone. It will pop up.
4. Put the media card in, contact area face down.
5. Slide the holder up until it locks into place.
6. Line up the battery contacts, and put the battery in.
7. Press the back cover down until it locks into place.
8. To switch on, press and hold the power button



Keys and Parts

Explore the keys and parts of your phone.



- 1 Charger & Micro-USB connector
- 2 Headset connector (3.5 mm)
- 3 Screen
- 4 Answer call key
- 5 End/Power key
- 6 Keyboard
- 7 Number keys
- 8 Direction pad
- 9 Soft keys
- 10 Flashlight
- 11 Loudspeaker

TIP: By default, the phone will automatically lock the keypad after a set period of time. To unlock, press the left soft key and then Q.

Basics

Display Indicators

The display indicators on your phone tell you the battery life, signal strength, and much more.



You have unread messages.



The keys are locked.



An alarm is set.



Bluetooth is on.



There is a missed call.



The General profile is selected.



The Silent profile is selected.



The Outdoor profile is selected.

Writing Text

With the keyboard you can write your messages in no time.

Change the default language

To set the default language, go to **Settings > Phone settings > Language**. Choose a language and press **OK**.

Change the default input method

To set the default input method, go to **Settings > Phone settings > Pref. input method**. Choose the input method and press **OK**.

Switch to number mode

To temporarily enter a number while composing a message, press the ALT button and then a number key. To switch to number mode, while composing a message, press **Options > Input method > Numeric** and then press **OK**.

Switch between character cases

Press the shift key.

Type in the number or character printed at the top of a key

Press the ALT key and then the key with the character you want to enter.

Type in a special character or symbol

Press the SYM key, and select the symbol.

Phone

Make or Answer a Call

1. On the home screen, type in the phone number.
2. Press the Call key.
3. If asked which SIM to use, select a SIM and press OK.

Warning: When airplane mode is activated, you cannot make or receive any calls, including emergency calls, or use other features that require network coverage.

If you have both your Roam SIM and Canadian SIM inserted in the device, remember which SIM is inserted in SIM slot 1 and 2 in order to avoid roaming charges by accidentally making and receiving calls on your Canadian SIM.

In-Call Menu

During a call, select the **Options** menu for these in-call features:

Preserve: keep the current call, can be carried out in second groups.

Main menu: return to the main menu.

Recording: start recording the current call.

Mute: temporarily mute the microphone so that the other party can't hear you. Restore the microphone by selecting unmute.

Volume: during a call, you can adjust the speaker volume

Speakerphone

During a call, press the left soft key for H-free (hands-free) to conduct the call through the loudspeaker. Press the left soft key again for H-held (handheld) to conduct the call through the handset speaker.

Profiles

Changing Profiles

To change profiles, select **Menu > Profiles**. Select a profile and press **OK**.

Customizing Profiles

To customize a profile, select **Menu > Profiles**. Select a profile and press **Options > Customize**. Adjust your desired settings. Then press **Options > Save** and press **Select**.

Voicemail

Your Roam Mobility service includes free voicemail, which can store up to 15 messages for a maximum of 14 days.

Voicemail Setup

To set up voicemail, simply call your own US phone number and wait for the welcome message. When you hear the welcome message, press the star (*) key and follow the prompts. Your default password is the last four digits of your Roam Mobility phone number.

Voicemail Shortcuts

- # - Skip/Next Message
- 1 - Replay Message
- 5 - Data/Time Info
- 7 - Delete Message
- 9 - Save Message

Helpful Hints

- Hold down 1 to speed dial your voicemail. The first time you do this, you will be asked to set up your voicemail phone number.
- While listening to your messages, you can press the # key at any time to skip to the next message.
- To return to the main menu at anytime, press * * .
- To back-up to the previous menu or cancel a command, press * .

Accessing Voicemail from an Outside Line

1. Dial 1-805-637-7243.
2. Press * to access your voicemail.
3. Enter your 10-digit Roam phone number.
4. You will be asked to enter your password (default password is the last 4 digits of your Roam phone number).
5. Once logged in you can access all available voicemail options.

Messaging

Sending a Text Message

With text messages, you can quickly contact your friends and family.

1. Select **Menu > Messaging**.
2. Select **Compose** message.
3. Write your message.
4. To add a contact as a recipient, select **Send to**. Choose whether to add a recipient from your Phonebook or from the SIM card. To type in a recipients' phone number, select **Enter number**.
5. Once the recipient number or contact is selected, press **Send**. If asked, select which SIM to use.

File Manager

The File Manager lets you browse directories and files stored on the memory card.
NOTE: You must insert a memory card in order to use the File Manager.

Viewing Images

1. Select **Menu > File Manager**.
2. Select any image file stored on the memory card.
3. Click **Options > View details**.
4. Press left or right on the direction pad to scroll through images.

Changing Wallpapers

When viewing any image, select **Options > Use as > Wallpaper**. Press **OK**.

Playing Audio Files

1. Select **Menu > File Manager**.
2. Select any audio file stored on the memory card.
3. Click **Options > Play**.

Sending Files via Bluetooth

1. Select **Menu > File Manager**.
2. Select any file stored on the memory card.
3. Click **Options > Send > Via Bluetooth**.
4. If you are already connected to another device, choose the device name from the list and press **OK**.
5. If you are not connected to a device, click **Search new device** and follow the on-screen instructions.

TIP: It's best to pair your Breeze phone with another device before attempting to send files between the two.

Entertainment

FM Radio

To start the FM radio, select **Menu > Multimedia > FM radio**.

Turn the radio on/off

Press the centre button on the directional pad.

Change the volume

Press up/down on the directional pad.

Manual tuning

Press left/right on the directional pad to manually tune the station.

Channel list

Press **Options > Channel list** to bring up a list of preset channels. To listen to a preset channel, select it then press **Options > Play**.

Manual input

To manually input a station, press **Options > Manual input**. Type in the station frequency using the number keys, then press **Options > Save**.

Auto Search

To automatically search for local radio stations, press **Options > Auto search**. When prompted say **Yes**.

TIP: To increase and decrease the playback volume, press Z and B on the keyboard.

Audio Player

To start the Audio Player, select **Menu > Multimedia > Audio Player**.

Play/pause a song

Press the centre button on the directional pad.

Change the volume

Press up/down on the directional pad.

View playlist

Press the **List** soft key

Add songs to playlist

Press **List > Options > Add**. Browse to the directory containing the song(s) you want to add. Highlight the song and press **OK**.

Repeat songs on playlist

Press **List > Options > Settings**. Toggle Repeat setting to **One** or **All**.

Shuffle songs on playlist

Press **List > Options > Settings**. Toggle Shuffle setting to **On**.

TIP: To increase and decrease the playback volume, press Z and B on the keyboard.

Sound Recorder

To start the Sound Recorder, select **Menu > Multimedia > Sound recorder**.

Start a new recording

Press **Options > New record**. The phone will start recording. Press **Stop** to automatically save the recording.

Listen to a recording

Press **Options > List**. Choose the recording and press **Options > Play**.

Delete a recording

Press **Options > List**. Choose the recording and press **Options > Delete**.

Send a recording

Press **Options > List**. Choose the recording and press **Options > Send**. Select **Via Bluetooth** and then connect to the device you want to share with.

Video Player

To start the Video Player, select **Menu > Multimedia > Video Player**.

Play/pause a video

Select the video you want to play, then press the centre button on the directional pad. Press the centre button again to play/pause playback.

Change the volume

To increase and decrease the playback volume, press **Z** and **B** on the keyboard.

Delete a video

Choose the video and press **Options > Delete**.

Send a video

Choose the video and press **Options > Send**. Select **Via Bluetooth** and then connect to the device you want to share with.

Organizer

Your Breeze phone comes with Calendar, Alarm and Calculator apps to help keep you organized.

Calendar

To see the calendar, press **Menu > Organizer > Calendar**. By default, the Calendar displays monthly view.

Switch to weekly view

Press **Options > Go to weekly view**. Or from Monthly view, press **B** to toggle between monthly view and weekly view.

Jump to date

Press **Options > Jump to date**. Enter the date you want to view and press **OK**.

Go to today's date

Press **Options > Go to today**. Press **Select**.

Alarm

To see the Alarm, press **Menu > Organizer > Alarm**.

Setting the alarm

1. Highlight one of the alarm time slots you want to set and press **Edit**.
2. Change the Status to **On**.
3. Change the time to the desired alarm wakeup time.
4. (Optional) Set the desired alarm tone and type.
5. Press **Save**.

Settings

Phone Settings

To change phone settings, press **Menu > Settings > Phone settings**.

Time and date

Here you can set your home city, adjust the time and date, toggle between 12/24 hour time, and adjust the date format

Language

Switch the default language of the phone between English, French and Spanish.

Flashlight

Toggle the flashlight on and off. You can also do this by holding down the flashlight key for 3 seconds.

Preferred input method

Change the default input method of the phone.

Display

Here you can choose a new wallpaper graphic, set the screen auto lock timer, and whether to show the date and time on the home screen.

Airplane Mode

Toggle airplane mode on and off. Keep in mind that when the phone is in airplane mode, you won't be able to send or receive any calls or text messages.

Miscellaneous settings

Adjust the LCD backlight brightness.

Network Settings

Press **Menu > Settings > Network Settings**. Select a SIM card and press **OK**. Toggle between automatic and manual network selection mode.

Security Settings

Press **Menu > Settings > Security Settings**.

SIM Security

Select a SIM and press **OK**. Toggle the **PIN lock** on/off, or change either **PIN** or **PIN2** values.

Phone Security

Toggle the Phone lock on/off, or change the phone password. The default password is 0000.

Bluetooth

Press **Menu > Settings > Bluetooth**.

Toggle Bluetooth On/Off

Select Power and press On/Off

Visibility

Toggle on/off to set whether your device is visible to others.

My device

A list of devices that your phone is paired with. To add a new device, select **Search new device** and follow the on-screen instructions.

My name

This is the name of your device as it is visible to others. To change, press **OK** and enter a new name. To save, press **Options > Done**.

Restore Factory Settings

Restoring will reset all of your phone's settings back to the factory default. You will lose all saved data on your device.

Access Codes

PIN1 or PIN2

By default, your Roam Mobility SIM Card PIN1 and PIN2 values are:

- PIN: 1234

- PIN2: 5678

PUK1 or PUK2

For your PUK1 or PUK2, contact Roam Mobility customer care at care@roammobility.com or call 1-888-ROAM4US (762-6487).

Security Code

The default security code for the Breeze phone is 0000.

Certification information (SAR)

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit stated in the ICNIRP guidelines is 2.0 watts/kilogram (W/kg) averaged over 10 grams of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The actual SAR level of an operating device can be below the maximum value because the device is designed to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station.

The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 0.99 W/kg .

Use of device accessories may result in different SAR values. SAR values may vary depending on national reporting and testing requirements and the network band.

Your mobile device is also designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA) and Industry Canada. These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported under this standard during product certification for use at the ear is 1.18 W/kg and when properly worn on the body is 1.34 W/kg .

Help and Support

For additional help and support, contact Roam Mobility customer care:

- By email: care@roammobility.com
- By phone: 1-888-ROAM4US (762-6487) or dial 611 with your Roam SIM

Copyright © 2014 Roam Mobility Inc. All Rights Reserved. Roam and Roam Mobility are trademarks of Roam Mobility Inc.

For terms of use, visit <http://www.roammobility.com/breezewarranty>.