



Telstra T-Touch Tab™

User Guide

The Telstra logo and Next G logo are registered trade marks of Telstra Corporation Limited. ABN 33 051 775 556

Contents

1 Getting started	1	1.6 Charging the battery	5
1.1 About your Tablet	1	1.7 Working with the keys.....	6
1.2 Packing list.....	1	1.8 Using the touchscreen.....	7
1.3 Getting to know your tablet	2	1.9 Home screen	8
1.4 Installation.....	3	1.9.1 Getting to know the Home screen.....	8
1.4.1 To remove the back cover	3	1.9.2 Extensions to the Home screen	9
1.4.2 To install or remove the SIM card	3	1.9.3 Customizing the Home screen.....	10
1.4.3 To install or remove the battery	4	1.10 Locking and unlocking the screen	11
1.4.4 To install the back cover	4	1.10.1 To lock the screen	11
1.5 Turning the tablet on or off	5	1.10.2 To set screen timeout period	11
1.5.1 To turn the tablet on.....	5	1.10.3 To unlock the screen	12
1.5.2 PIN protection	5	1.10.4 To set unlock pattern	12
1.5.3 To turn the tablet off.....	5	1.11 Text input	12

1.11.1 Using onscreen keyboard to enter text.....	12	2.1.5 Adding a Wi-Fi Network.....	17
1.11.2 Cutting or copying text	13	2.1.6 Forgetting a Wi-Fi network	18
1.12 Opening and switching applications	14	2.2 Bluetooth.....	18
1.13 Opening the Settings list	14	2.2.1 Opening Bluetooth settings	18
1.14 Restoring default settings	14	2.2.2 Turning Bluetooth on or off	18
1.15 Setting date and time.....	14	2.2.3 Renaming the Bluetooth of your tablet	18
1.16 Installing or removing the microSD card.....	15	2.2.4 Connecting to Bluetooth devices	19
1.17 Connecting to or disconnecting from a computer via USB	15	2.2.5 Disconnecting from or unpairing a Bluetooth device	19
2 Wireless networks	16	2.2.6 Configuring the Bluetooth features	19
2.1 Wi-Fi.....	16	2.3 Mobile networks	20
2.1.1 Opening Wi-Fi settings.....	16	2.3.1 Opening Mobile network settings	20
2.1.2 Turning Wi-Fi on or off	17	2.3.2 Turn Data roaming on or off.....	20
2.1.3 Connecting to a Wi-Fi network.....	17	2.3.3 Setting GSM/UMTS options	20
2.1.4 Turning open network notification on or off	17	2.4 Turning airplane mode on or off	21

3 Browser	22		
3.1 Browsing webpages	22		
3.1.1 To open Browser	22		
3.1.2 To navigate within a webpage	22		
3.1.3 To navigate among webpages	22		
3.2 Working with the bookmarks	23		
3.2.1 To add a webpage to the bookmarks list ...	23		
3.2.2 To open the bookmarks list.....	24		
3.2.3 To open a bookmark	24		
3.2.4 To edit a bookmark	24		
3.2.5 To share a bookmark.....	24		
3.2.6 To delete a bookmark	24		
3.3 Downloading files	24		
3.3.1 To download and install only trusted applications	24		
		3.3.2 To download a file	24
		4 Email	25
		4.1 Opening Email.....	25
		4.2 Adding and deleting email accounts	25
		4.2.1 To add an email account	25
		4.2.2 To delete an email account	25
		4.3 Sending and responding to email messages.....	25
		4.3.1 To compose and send email messages	25
		4.3.2 To receive email messages.....	26
		4.3.3 To read an email message	26
		4.3.4 To reply to or forward an email message ...	26
		4.3.5 To delete an email message	26
		5 Calls	27
		5.1 Making calls by dialing.....	27
		5.2 Answering, rejecting or ending calls	27

5.3 Working with the Call log	27	7 Contacts	30
5.3.1 To open the Call log	27	7.1 Opening Contacts	30
5.3.2 To make calls from the Call log	27	7.2 Creating a contact.....	30
5.3.3 To add numbers to the Contacts	28	7.3 Searching for contacts	31
5.3.4 To clear the Call log	28	7.4 Editing contacts.....	31
5.4 Calling listed contacts.....	28	7.4.1 To edit contact details	31
5.5 Calling favorite contacts	28	7.4.2 To set default phone number	31
6 Messaging.....	29	7.4.3 To delete a contact	32
6.1 Opening Messaging	29	7.4.4 To set contact group to display	32
6.2 Exchanging messages	29	7.5 Editing favorite contacts	32
6.2.1 To create and send a text message	29	7.5.1 To add a contact to favorites.....	32
6.2.2 To create and send a multimedia message.....	29	7.5.2 To remove a contact from favorites.....	32
6.2.3 To view and respond to a message.....	30	8 Multimedia applications.....	33
6.2.4 To view details about a message	30	8.1 Sound Recorder.....	33
6.2.5 To forward or delete a message.....	30	8.2 Camera and Camcorder.....	33

8.3 Music	33	9.6 Calculator	36
8.4 Videos.....	33	9.7 Documents	36
8.5 Gallery	34	9.8 File Manager	36
8.5.1 Opening Gallery	34	9.8.1 Creating a Folder	36
8.5.2 Viewing a Picture.....	34	9.8.2 Deleting files and folders.....	36
8.5.3 Sharing a Picture.....	34	9.8.3 Searching a File	37
8.5.4 Rotating a Picture.....	34	10 Security settings.....	37
8.5.5 Cropping a picture	34	10.1 Enabling the SIM card PIN	37
8.5.6 Playing a Video	35	10.2 Changing the SIM card PIN.....	37
9 Handy applications	35	11 Warnings and Precautions	38
9.1 Calendar	35		
9.2 Weather	35		
9.3 RSS Reader.....	35		
9.4 Memo.....	36		
9.5 Alarm Clock.....	36		

1 Getting started

 
1.1 About your Tablet

Thanks for choosing Telstra T-Touch Tab as assistant and partner of your daily life.

Telstra T-Touch Tab is an information terminal that provides convenient and quality services such as picture, audio, video, network, and information base on the Android open source operating system and supports classification and dragging of elements on the home screen. With an embedded 3G module, it also supports basic 3G communication services and functions as a big phone. With a full touchscreen, an ultra-thin design, and a silver metal rim, it presents a stylish and technically appealing appearance and portable design that fully conforms to operational conventions of users.

1.2 Packing list

The product package contains the following items.

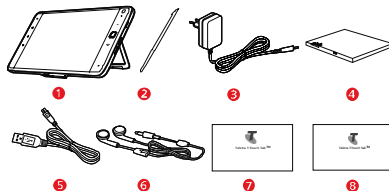


- 1 Telstra T-Touch Tab
- 2 Stylus
- 3 Power adapter
- 4 Battery
- 5 USB cable
- 6 Headset
- 7 Quick start
- 8 Warranty card




If the items in the product package are not consistent with those in the packing list, contact the vendor. And The figures and operation descriptions in this guide are provided only for reference, see the actual product for details.

 1.3 Getting to know your tablet

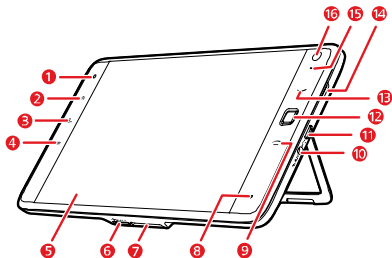

- 1 Ambient light sensor
- 2 **Home** key
- 3 **Menu** key
- 4 **Back** key
- 5 LCD screen
- 6 microSD card slot
- 7 Dock interface
- 8 Microphone
- 9 **End** key
- 10 Power interface

 - 11 Micro USB interface
- 12 **OFN** (Optical Finger Navigation) key
- 13 **Call** key
- 14 Speaker
- 15 LED indicator
- 16 Front camera lens

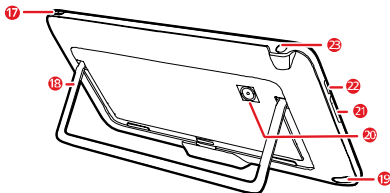


- 17 **Power** key
- 18 Bracket
- 19 Stylus jack
- 20 Rear camera lens
- 21 **Volume Up/Down** key
- 22 Speaker
- 23 Headset jack

1.4 Installation

1.4.1 To remove the back cover

 To remove the back cover, refer to the following figure and steps.

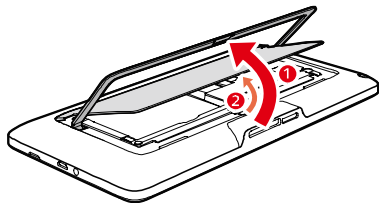


1. Unfold the bracket.
2. Open and remove the back cover.

 To prevent injury, properly place the back cover after you remove the back cover because it may have sharp edges and angles.


1.4.2 To install or remove the SIM card

 Before installing or removing the SIM card, power off the tablet.

 Insert your SIM card into the SIM card slot as shown in the following figure until the SIM card is completely in position.

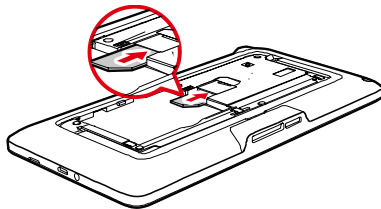


 To remove the SIM card, do as the following figure.

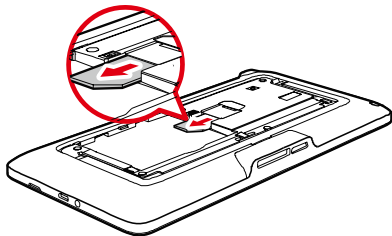


1.4.3 To install or remove the battery

 To install the battery, refer to the following figure.

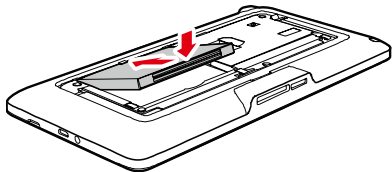


 To remove the battery, do as the following figure.

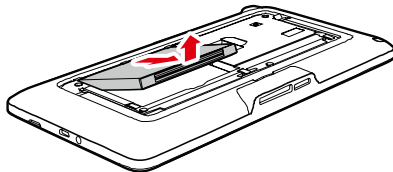

1.4.4 To install the back cover

 To install the back cover, refer to the following figure and steps.

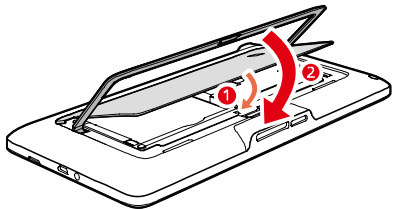


1. Install the back cover.
2. Fold the bracket.

1.5 Turning the tablet on or off

1.5.1 To turn the tablet on

Before you turn the tablet on, ensure that the SIM card has been correctly installed and that the battery is correctly installed or the tablet has been properly connected to the power supply.

 To turn the tablet on, press and hold the **Power** key for about two seconds.

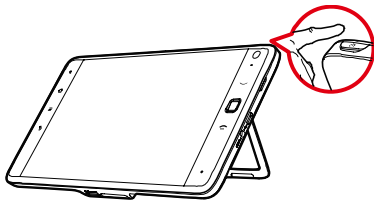

1.5.2 PIN protection

If your SIM card is preset with a PIN, the tablet prompts you to enter the PIN.



The PIN may have been provided by your service provider with your SIM card. If you lost it, consult your service provider.

 
1.5.3 To turn the tablet off

1. Press and hold **Power** key to open the **Tablet options** menu.
2. Touch **Power off**.
3. Touch **OK** to assure you want to turn your tablet off in the dialog that opens.

1.6 Charging the battery

Before charging the battery, ensure that the battery is properly installed on your tablet.

To charge the battery, you can connect the tablet to the power supply through the power adapter, as shown in the following figure.

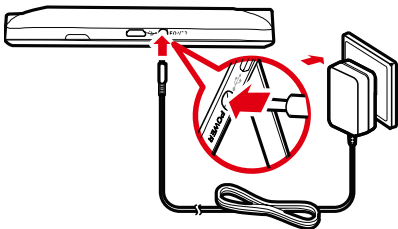

1.7 Working with the keys

You can enjoy a variety of functions and shortcuts by using the physical keys in addition to the soft buttons.

- **Power**

- Press to turn on the tablet when it is off.
- Press to turn off and lock the screen when the tablet is on. And press again to turn on the screen.
- Press and hold to open a menu with options for Silent mode, Airplane mode, and for powering off the tablet.

- **Home**

- Press to open the Home screen. If you are viewing the extensions to the Home screen, it returns to the first panel of the Home screen.
- Press and hold to open the most recently used applications screen.

- **Menu**

- Press to open an option menu with items that affect the current screen or application.
- Press and hold to open the keyboard to perform quick search on some screens.
- While you are on the locked screen and the unlock pattern is not set, press to unlock the screen.

- **Back**

- Press to return to the previous screen.
- Press to exit from the running application.
- If the onscreen keyboard is open, press to close the keyboard.

- **Call**

- Press to go to the **Call log** screen.
- Press to make a call.

- **End** While on a call, press to hang up.

- **Volume Up/Down**

- When a call is in progress, press to increase or decrease the call volume.
- When the tablet is ringing, press Volume Down to silence the ringer.
- On the Home screen when no call is in progress, press to increase or decrease the ringtone volume, or set the tablet to be silent instead of ringing.
- In other applications, press to control the volume of music, spoken directions, and other audio.
- Press and hold to quickly increase the ringtone volume to maximum or minimum.

- **OFN** (Optical Finger Navigation)

- Roll the **OFN** key to navigate selectable items on the screen. The selected item is highlighted.
- Pressing the **OFN** key is equivalent to touching the selected item with your finger.
- Pressing and holding the **OFN** key is equivalent to touching and holding the selected item with your finger.



Some actions, such as opening an event in a crowded calendar, selecting a link or form field on a web page, or selecting text to edit, are easier to using the OFN key rather than your finger.

1.8 Using the touchscreen

By using your finger, you can manipulate target items such as applications and controls, and enjoy the touchscreen at your fingertips. The tablet supports the following actions.

Action	Description
Touch	Simply touch items on the screen, such as applications and controls. For example, you can type letters and symbols using the onscreen keyboard.
Touch and hold	Touch and hold an item on the screen until an action occurs. For example, you can usually touch and hold the screen to open the context menu of the active item.
Drag	Touch and hold an item, and then move your finger on the screen until you reach the target position. For example, you can drag a shortcut to the trash can to delete it.
Flick	Flick your finger vertically or horizontally across the screen. For example, you can flick up and down to manipulate a scroll bar and flick left and right to switch between pictures.

1.9 Home screen

The Home screen is the starting point to access all the applications. When you sign in, press the **Home** key, the Home screen opens. You can customize the Home screen with different wallpapers and display the items you want.

1.9.1 Getting to know the Home screen



Item	Description
1	Category tabs of the Home screen. You can touch them or flick your finger right or left across the main display area to switch between them.
2	Home screen indicator. The two small dots at the lower left and right of the Home screen corresponding to a category tab indicate the screen that you are viewing.
3	Main display area. Main display area displays application shortcuts, widgets and other items that can be opened by touching them.
4	Status bar. The status bar is at the top of the Home screen, it shows the system status and event notification prompts.
5	System status indicators. It shows the system status such as time, signal type and strength, Wi-Fi connection status and signal strength, battery status, and other information. You can touch some of them for more details.

Item	Description
6	Event button. It winks when there are event notifications such as the current call, missed calls, new messages, and when actions such as playing and uploading are performed. You can touch the event button to open the event manager to view and manage the notifications and tasks.
7	Widgets. Widgets such as RSS reader widget, clock widget, and search widget are applications that you can use directly on the Home screen.”
8	Application button. Touch to open the Applications screen and view the applications installed on your tablet, and you can touch an application shortcut to run it.

 
The Applications screen shows as the following pictures.



The pictures are provided only for reference. Your Home screen and Applications screen might look a little different. For details, see the actual product.

1.9.2 Extensions to the Home screen

Flick your finger across the Home screen to go to the extensions to the Home screen. The right extensions to the Home screen provide more space for shortcuts, widgets, and other items. The two small dots above the category tab of the screen indicate the screen that you are viewing.

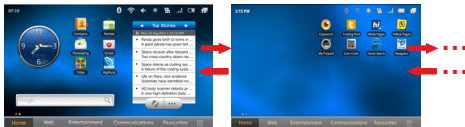

1.9.3 Customizing the Home screen

You can add items such as shortcuts, widgets, Emotion widgets and folders to the Home screen if there is enough room. You can also change the wallpaper of the Home screen.

To add an item

1. Flick the Home screen to where you want to add the item.
2. Open the **Add to Home screen** menu, by performing either of the following steps:
 - Touch and hold the blank area on the Home screen until the **Add to Home screen** menu is displayed.
 - When you are on the Home screen, press the **Menu** key, and touch **Add** in the menu that opens.
3. In the open **Add to Home screen** menu, touch the item type to add. You can add the following types of items to the Home screen:

- **Shortcuts** Add a shortcut of an application, a webpage bookmark, a favorite contact, a music playlist, and other items.
- **Widgets** Add any of a variety of miniature widgets such as an analog clock, a calendar, a memo, a music player, a picture frame and many other items.
- **Emotion Widgets** Add any of a variety of Emotion widgets such as Emotion Bookmarks, Emotion Calendar and Emotion Events.
- **Folders** Add a folder where you can organize your Home screen items.
- **Wallpapers** Set the wallpaper of the Home screen.

For example, you can touch **Folders** > **New folder** to add a folder to the Home screen, and drag items on the screen to your folder.

☰ If there are not enough room on the Home screen, the add action will be neglected with prompt such as **This group has no room**. You must move or delete other items to make room, or switch to another spacious pane of the Home screen.

To move an item

1. Touch and hold an item's icon on the Home screen until the icon magnifies.
2. Without lifting your finger, drag the icon to the target position on the screen.



Pause at the bottom of the screen to drag the item onto the corresponding Home screen pane.

3. Release the item by lifting your finger.

To remove an item

1. Touch and hold an item icon on the Home screen until the item icon magnifies and the trash can pops up from the right side of the screen.
2. Without lifting your finger, drag the item icon to the trash can.
3. When both the item and the trash are focused, release the item by lifting your finger.

To change the wallpaper

You can change the wallpaper by adding a wallpaper, or do as follows.

1. When you are on the Home screen, press the **Menu** key and touch **Wallpaper** at the bottom menu.
2. Do as one of the following steps.
 - Touch **Live wallpapers** to select a picture and set it as the wallpaper.
 - Touch **Pictures** to select a picture and set it as the wallpaper.
 - Touch **Wallpaper gallery** to select a picture and set it as the wallpaper.

To rename a folder

1. Open a folder. Then touch and hold the title bar of the folder window until the **Rename folder** dialog appears.
2. Enter a new name, and then touch **OK**.

1.10 Locking and unlocking the screen

1.10.1 To lock the screen

When the tablet is on, press the **Power** key to turn off and lock the screen.

When the tablet remains idle for a time period that you have set, the screen will automatically lock.



To save your battery or prevent accidental taps when not in use, or when you want to wipe smudges off your touchscreen, turn off and lock the screen.

1.10.2 To set screen timeout period

To set how long your screen waits before it goes to turn off automatically, you can press the **Home** key to go to the Home screen and press the **Menu** key, and then touch **Settings > Sound & display > Screen timeout**.

1.10.3 To unlock the screen

When the screen is off, you can press the **Power** key to turn on it, and then unlock the screen through the following steps.

1. If you have not set up a screen unlock pattern, press the **Menu** key to unlock the screen, or follow the instructions displayed on the screen and flick upwards to unlock the screen.
2. If you have set up a screen unlock pattern, the tablet prompts you to draw the pattern on the screen to unlock it.

1.10.4 To set unlock pattern

To set the unlock pattern, you can press the **Home** key to go to the Home screen and press the **Menu** key, and then touch **Settings** > **Location & security** > **Set unlock pattern**, and then follow the instructions on the screen .

1.11 Text input

You can enter and edit text in text fields and use menu commands to cut, copy, and paste text, within or across applications.

1.11.1 Using onscreen keyboard to enter text

Touch a text field where you want to enter text to open the onscreen keyboard, and the following steps and tips help you to make it easier to enter the required information.

1. Touch and hold the text field to switch the input method if necessary.
2. Touch the keys on the keyboard to start typing.
 - When you are typing, the characters you have entered appear in a line above the keyboard, and some with suggestions for the word you are typing to the right. Press space or a punctuation mark to enter the suggestion by default, or touch another suggestion to enter it. You can touch and hold the leftmost word to save it to the dictionary.
 - Touch the up arrowhead key once to capitalize the next letter you type. Or touch and hold the up arrowhead key for all caps.
 - When you touch a key, a larger version displays briefly over the keyboard. Keys with alternate characters display an ellipsis (...) below the character.
 - Touch and hold a vowel or the C, N, S, or Y key to open a small window where you can touch an accented vowel or other alternate letter.
 - Touch and hold the Period key (.) to open a small window with a set of common symbol keys.
 - Touch the DEL key to erase a character to the left of the cursor. Touch and hold the DEL key to erase all characters to the left of the cursor.

- Touch the Symbols key (?123) to switch to the numbers and symbols keyboard, and touch the alphabet key (ABC) to switch back.
 - On the numbers and symbols keyboard, touch the ALT key to view additional symbols, and touch it again to switch back.
 - Touch and hold almost any of the number and symbol keys to open a window of additional symbols.
3. When you want to edit the text you have entered, touch to move the cursor to the location where you want to add or delete text. The cursor is a vertical bar that indicates where text you type or paste is inserted.
 4. When you finished typing, touch the button to the right of the text field or the same button on the keyboard or press the Back key to close the keyboard.

1.11.2 Cutting or copying text

To quickly cut or copy all the text in a text field, do as follows.

1. Touch the text field that contains the text to cut or copy to open it.
2. Touch and hold the text field to display the **Edit text** menu.
3. Touch **Cut all** or **Copy all**.

To cut or copy selected text in a text field, do as follows.

1. Touch the text field that contains the text to cut or copy.

2. Touch to move the cursor to the beginning or end of the text to be selected.
3. Touch and hold the text field to display the **Edit text** menu.
4. Touch **Select text** and touch to move the cursor to the end or beginning of the text to be selected. Or touch **Select all** to select all the text in the text field. The selected text is highlighted.
5. Touch and hold the text field again to display the **Edit text** menu.
6. Touch **Cut** or **Copy**.

After you cut or copy text, the text is stored in a temporary area so that you can paste it into other text field. Before you can paste, you must have cut or copied text at least for once. Once you cut or copy text, you can paste multiple times. To paste the most recently text you have cut or copied in another text field, do as follows.

1. Touch the text field where you want to paste the text.
2. Touch to move the cursor to the location where you want to paste the text.
3. Touch and hold the text field to display the **Edit text** menu.
4. Touch **Paste**.

1.12 Opening and switching applications

To open an application, you can touch its shortcut on the Home screen, or on the Applications screen which can be opened by touching the Application button on the Home screen.

To switch to a recently used application, you can press and hold the **Home** key, and touch the application icon in the small window that opens with shortcuts to applications that you have used recently. Or you can touch the Event button to open the **Event Manager** and touch to open a recently used application in the **Tasks** list.

1.13 Opening the Settings list

You can open the settings list to view or change the settings of wireless and networks, call, sound and display, location and security, applications, language and keyboard, date and time, and more other items. To open the settings list, do as one of the following steps.

- When you are on the Home screen, press the **Menu** key, and touch **Settings** in the menu that opens.
- When you are on the home screen, touch the Application button and touch **Settings** to open the scroll list.
- If you recently opened the settings list, you can touch the Event button on the status bar to display **Event Manager**, and touch **Settings** in the **Tasks** scroll list that opens.

1.14 Restoring default settings



This operation may erase all of the customized data on your tablet.

1. Open the **Settings** list.
2. Touch **Privacy**, and then touch **Factory data reset** which is under the **Personal data** label.

1.15 Setting date and time

By default, the tablet automatically uses the network provided date, time zone, and time.



When the time provided by the network is automatically used, you cannot set the date, time, and time zone by yourself.

 
To manually set date and time, do as the following steps.

1. Open the **Settings** list.
2. Touch **Date & time**.
3. Touch **Automatic** to make it unchecked.

4. Touch **Set date**. Then touch the plus button or the minus button to adjust the date, month, and year, or touch the text field of date, month, and year to enter them. Touch **Set** when finished.
5. Touch **Select time zone**, then select the time zone in the list. Scroll down the list to view more time zones.
6. Touch **Set time**. Then touch the plus button or minus button to adjust the hour and minute, or touch the text field of hour and minute to enter them. Touch **Set** when finished.

1.16 Installing or removing the microSD card

Insert your microSD card into the microSD card slot as shown in the following figure until the microSD card clicks into position.

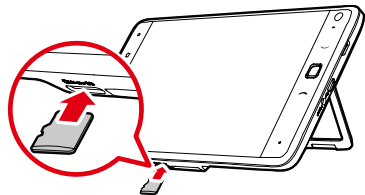

To remove the microSD card, slightly push the card further into the slot, and wait for it to eject out for about 2 mm, and then remove it.

1.17 Connecting to or disconnecting from a computer via USB

Before connecting your tablet to a computer via USB, ensure that the USB debugging on your tablet is enabled, and the USB driver for tablet has been correctly installed on the computer. You must download and install the USB driver on the computer for the first time that you connecting your tablet to the computer via USB.

 


Touch **Settings > Applications > Development > USB debugging** and make **USB debugging** checked to enable the USB debugging.



You can download the USB driver at the **Service Center** of the web site <http://www.huaweidevice.com/worldwide>, opening **Software of Download** category and searching for the S7 USB driver by entering the keyword S7.

To connect your tablet to a computer via USB, do as follows.

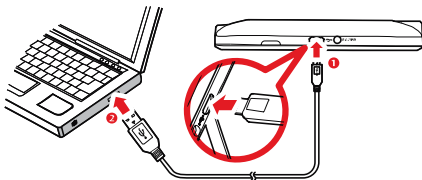

1. Use the USB cable that came with your tablet to connect the tablet to a USB port on your computer. The tablet displays a notification indicating that the USB is connected.
2. Touch the Event button to open the **Event Manager** and touch **USB connected** in the **Notifications** list.
3. Touch **Mount** in the dialog that opens to confirm that you want to transfer music, pictures, and other files between your tablet storage or microSD card storage and the computer.

To disconnect your tablet from the computer, better to carefully follow the instructions of your computer to disconnect USB devices correctly, to avoid losing information. And do as follows.

1. Touch the Event button to open the **Event Manager**.
2. Touch **Turn off USB storage** in the **Notifications** list.
3. Touch **Turn Off** in the dialog opens.

2 Wireless networks

Your tablet can connect to a variety of wireless networks and devices, including Wi-Fi data networks, and Bluetooth devices such as headsets and mobile networks for voice and data transmission.



Using a wireless device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.

2.1 Wi-Fi

Wi-Fi is a wireless networking technology that can provide wireless Internet access over distances of up to 300 feet (100 meters). The capability of your Wi-Fi connections depends on the Wi-Fi router and the surroundings it works. To use Wi-Fi on your tablet, you need to access a wireless access point or "hotspot". You can simply connect to some open access points, and you have to configure your tablet to connect to the access points that are hidden or with security protections such as authentication and encryption.

2.1.1 Opening Wi-Fi settings

You can turn Wi-Fi on or off, turn the open network notification on or off, connect to a Wi-Fi network and add Wi-Fi networks in Wi-Fi settings list. To open Wi-Fi settings list, do as follows.

1. Open the **Settings** list.
2. Touch **Wireless & networks**, and then touch **Wi-Fi settings**.



When you are viewing the **Wi-Fi settings** list, you can press the **Menu** key and touch **Advanced** in the menu that opens to see your IP settings or other Wi-Fi details.

2.1.2 Turning Wi-Fi on or off

To turn Wi-Fi on or off, you can open **Wi-Fi settings** and touch **Wi-Fi** to make it checked or unchecked.



To extend your battery life, turn Wi-Fi off when you are not using it.

2.1.3 Connecting to a Wi-Fi network

When you turn Wi-Fi on, the available Wi-Fi networks found within range are listed with the names and security scheme information, and secured networks are indicated with a lock icon. You can view the **Wi-Fi networks** list by opening **Wi-Fi settings**.

To connect to a Wi-Fi network, touch a network you want to connect to it in the **Wi-Fi networks** list on the **Wi-Fi settings** screen. If the network is open, you are prompted to confirm that you want to connect to that network by touching **Connect**. If the network is secured, you are prompted to enter a password or other credentials. (Contact your service provider for details.)



When you are in range and Wi-Fi is on, you will automatically reconnect to available networks that you have connected to previously.



When you are connected to a network, you can touch its name in the **Wi-Fi networks** list for details about the speed, security, address, and related settings.

2.1.4 Turning open network notification on or off

When Wi-Fi is on, you can touch **Network notification** to make it checked or unchecked to turn open network notification on or off in the **Wi-Fi settings** list, and you receive or stop receiving notifications in the status bar when open networks in range are detected.

2.1.5 Adding a Wi-Fi Network

When a Wi-Fi network with any security credentials does not broadcast its name (SSID), or it is not in range, you can add and connect to it when Wi-Fi is on. You need to contact the service provider for details about the security scheme that is deployed on it and to obtain the password or other required security credentials. The name (SSID) and credentials are saved and you are automatically connected to this network if it is in range and Wi-Fi is on.

When Wi-Fi is on, do as the following steps to add a Wi-Fi Network.

1. In the **Wi-Fi settings** list, flick down and touch **Add Wi-Fi network**.
2. Enter the name (SSID) of the network in the **Network SSID** text field. If the network is secured, touch the **Security** button and then touch to select the security scheme in the menu that opens.
3. Enter any required security credentials.
4. Touch **Save**.

2.1.6 Forgetting a Wi-Fi network

To forget a Wi-Fi network that you do not want to connect to automatically or you no longer use when Wi-Fi is on, do as follows.

1. Touch and hold a Wi-Fi network you have connected to previously in the **Wi-Fi networks** list on the **Wi-Fi settings** screen.
2. Touch **Forget network** in the menu that opens.

2.2 Bluetooth

Bluetooth is a short-range wireless communication technology for exchanging information between Bluetooth devices such as headphones and mobile phones over a distance of about 10 meters. The capability of your Bluetooth connection depends on your surroundings and may be interfered by obstacles such as a wall or other electronic devices.

2.2.1 Opening Bluetooth settings

You can turn Bluetooth on or off, rename the Bluetooth name of your tablet, connect to a Bluetooth device and scan to view Bluetooth devices in the Bluetooth settings list.

To open Bluetooth settings list, do as follows.

1. Open the **Settings** list.
2. Touch **Wireless & networks**, and touch **Bluetooth settings**.



When you are viewing the **Bluetooth settings** list, you can press the **Menu** key and touch **Scan for devices** in the menu that opens to re-scan the Bluetooth devices.

2.2.2 Turning Bluetooth on or off

To turn Bluetooth on or off, you can open the **Bluetooth settings** and touch **Bluetooth** to make it checked or unchecked.



To extend your battery life, turn Bluetooth off when you are not using it.

2.2.3 Renaming the Bluetooth of your tablet

The Bluetooth name of your tablet is visible to other Bluetooth devices when you connect to them. When Bluetooth is on, do as the following steps to rename the Bluetooth of your tablet.

1. Touch **Device name** in the **Bluetooth settings** list.

2. Enter a name and touch **OK** in the dialog that opens.

2.2.4 Connecting to Bluetooth devices

The first time you connect to a Bluetooth device, you must pair the Bluetooth of your tablet with the Bluetooth device to make sure they connect securely to each other. And you can simply connect to a paired device when Bluetooth is on.

To pair with a Bluetooth device

1. When Bluetooth is on, all the available Bluetooth devices in range are list in the **Bluetooth devices** list on the **Bluetooth settings** screen.
2. Touch **Discoverable** to make the Bluetooth of your tablet discoverable.
3. If the device you want to pair with is not in the list, follow the instruction documentation that came with the device to make it discoverable and touch **Scan for devices** to display it.
4. Touch the device entry in the **Bluetooth devices** list to pair them. The devices pair with each other.
5. If you are prompted to enter a passkey (like 0000), refer to the documentation that came with the device to learn its passkey. If the pairing is successful, your tablet connects to the device.

To connect to a paired Bluetooth device

When you switch off Bluetooth devices or the paired Bluetooth device come back into range, you can connect to it again. To automatically reconnect your tablet with the paired device, simply turn on the device. To manually reconnect your tablet with a paired device, touch the device name in the **Bluetooth devices** list.

2.2.5 Disconnecting from or unpairing a Bluetooth device

To automatically disconnect your tablet from a paired device, simply turn off the device.

To manually disconnect your tablet from a paired device or unpair this device to erase all the pairing information about it, do as the following steps.

1. Touch and hold the device in the **Bluetooth devices** list on the **Bluetooth settings** screen.
2. Touch **Disconnect** or **Disconnect & unpair** in the menu that opens.
3. Touch **OK** to confirm that you want to disconnect or unpair.

2.2.6 Configuring the Bluetooth features

Some Bluetooth devices have multiple profiles. Profiles can include the ability to transmit conversations, or to play music in stereo. You

can select which profiles you want to use with your tablet to configure the Bluetooth features.

1. Touch and hold the device in the **Bluetooth devices** list on the **Bluetooth settings** screen.
2. Touch **Options** in the menu that opens.
3. A screen opens with a list of profiles of the device.
4. Touch a profile to make it checked or checked to use it or not.
5. When you are finished, press the **Back** key.

2.3 Mobile networks

Your tablet with a SIM card is configured to use the mobile networks of your wireless service provider for voice calls and for transmitting data.



If your tablet does not connect to a network when you insert a SIM card and turn it on, contact your service provider to obtain the details of its access point.

2.3.1 Opening Mobile network settings

1. Open the **Settings** list.
2. Touch **Wireless & networks**, and then touch **Mobile networks**.

2.3.2 Turn Data roaming on or off

When **Data roaming** is on, your tablet transmit data over mobile networks of other carriers when you leave the service area of mobile networks of your carriers. To turn **Data roaming** on or off, do as the following steps.

1. Open the **Mobile networks** settings screen.
2. Turn **Data roaming** on or off by touch **Data roaming** to make it checked or unchecked.



With **Data roaming** off, you can still transmit data with a Wi-Fi connection.

2.3.3 Setting GSM/UMTS options

To create or edit an Access Point

If you and your wireless service provider determine that you need to change the settings of your current access point name (APN) or to create a new one, you must obtain the APN and detailed settings from your provider.

1. Open the **Mobile networks** settings screen, and touch **GSM/UMTS Options > Access Point Names**.
2. Touch an existing APN to edit it. Or press the **Menu** key and touch **New APN**. Enter the APN settings offered by your service provider by touching each setting that you need to edit.

3. When you are finished, press the **Menu** key and touch **Save**. If you created a new APN, touch it in the APNs screen to start using it.

To turn Use only 2G networks on or off

To extend your battery life or to postpone data transmission activities such as sending, uploading, or downloading large files like pictures or video until connected to a faster mobile or other wireless network, you can turn **Use only 2G networks** on.

To turn **Use only 2G networks** on or off, you can open the **Mobile networks** settings screen, and touch **GSM/UMTS Options > Use only 2G networks** to make it checked or unchecked to turn it on or off.

2.4 Turning airplane mode on or off

In airplane mode, all wireless radios such as the mobile networks service, Bluetooth, and Wi-Fi are checked to be turned off. Using a mobile device or accessory with wireless radios while on board an aircraft may cause interference and may be illegal in many countries. Always obey the laws that are applicable and turn the airplane mode on.

To turn Airplane mode on or off, you can press and hold the **Power** key and touch **Airplane mode** in the menu that opens. You can also do as follows.

1. Open the **Settings** list.
2. Touch **Wireless & networks**, and touch **Airplane mode** to make it checked or unchecked.

3 Browser

Use **Browser** to view webpages and to search for information on the web.

3.1 Browsing webpages

3.1.1 To open Browser

Touch **Browser** on the Home screen or on the Applications screen to open the **Browser** and start surfing the web.

To enter a webpage address

When you are on a **Browser** screen, touch the address bar to enter the address (URL) of a new webpage. When you are entering the address, the web search makes suggestions of webpages and queries. You can touch a suggestion or continue to enter the address and touch **Go** to open a webpage.

To refresh a webpage

When you are on a **Browser** screen, press the **Menu** key and touch **Refresh** to reload the webpage and view the updated content.

To stop loading a webpage

If a webpage is taking a long time to open, or if you change your mind, you can press the **Menu** key and touch **Stop** to stop it from loading.

3.1.2 To navigate within a webpage

The following tips help you to navigate within a webpage.

- Flick your finger on the screen to scroll up and down.
- Flick your finger slightly on the screen to reveal the zoom control. Touch the plus or minus side of the zoom control to zoom in or out.
- To find text on a webpage. Press the **Menu** key and then touch **More > Find on page**. Enter the text you are looking for. As you type, the first word with matching characters is highlighted on the screen, and subsequent matches are boxed. Touch the left arrowhead or right arrowhead to jump to and highlight the previous or next matching word.

3.1.3 To navigate among webpages

You can open links on a webpage, navigate back and forth, and review your browsing history, just as in any web browser. You can also take advantage of some shortcuts for working with links and other kinds of information. The following tips help you to navigate among webpages.

- Touch a link to open it. Links that you touch are highlighted until the webpage they refer to opens in the window.

- To go back and forward among the pages you have opened, press the **Back** key or press the **Menu** key and touch **More > Forward**.
- As you browse the web, **Browser** keeps track of the pages you visit, to help you find your way back later. You can touch the bookmark button to the right of the address bar and touch the **History** tab, or press and hold the **Back** key when viewing a webpage to open the **History** tab. The pages you have visited are grouped chronologically. Touch a time period to view the pages you have visited. Touch a page in the history tab to reopen it.
- To view your most frequently visited pages, touch the bookmark button to the right of the address bar and touch the **Most visited** tab. The pages you have visited most frequently are listed in order. Touch a page to open it.
- Browser recognizes links, as well as some phone numbers, addresses, and similar information that you may want to act on directly. To follow shortcuts for links, phone numbers, and addresses, touch and hold a link to open a menu with shortcuts for opening, adding to the bookmark, saving, and sending the link via email. Touch a phone number to open the **Phone** application with the number entered.
- You can open up to eight **Browser** windows at a time and switch among them. To open a new **Browser** window, press the **Menu** key and touch **New window**. Or press the **Menu** key and touch

Windows. In the screen that opens, touch **New window**. New windows open with your home page.

- To switch **Browser** windows, press the **Menu** key and touch **Windows**. Your open windows are displayed. Touch a window to open it.
- To close a **Browser** window. Press the **Menu** key and touch **Windows**. All open windows are displayed in a scrolling list of thumbnails. Touch the close box on the window to close it.

3.2 Working with the bookmarks

You can add webpages to the bookmarks list so that you can quickly return to them.

3.2.1 To add a webpage to the bookmarks list

1. Open a webpage to add to the bookmarks list.
2. Touch the bookmark button to the right of the address bar. Or press the **Menu** key and touch **Bookmarks**.
3. Touch **Add** at the top of the **Bookmarks** screen.
4. Edit the name and the address if necessary and touch **OK**. The bookmark is added to the top of your bookmarks list.

3.2.2 To open the bookmarks list

Touch the bookmark button to the right of the address bar of the browser screen. Or press the **Menu** key and touch **Bookmarks**.

3.2.3 To open a bookmark

In the bookmarks list, touch a bookmark to open it. The bookmark opens in the current window. If you prefer to open it in a new window, touch and hold the bookmark and touch **Open in new window** in the menu that opens.

3.2.4 To edit a bookmark

1. In the bookmarks list, touch and hold the bookmark to edit.
2. Touch **Edit bookmark** in the menu that opens.
3. Edit the name or address in the dialog that opens and touch **OK**.

3.2.5 To share a bookmark

1. In the bookmarks list, touch and hold the bookmark to share.
2. Touch **Share link** in the menu.
3. Touch the application you want to use to send the bookmark. The application opens with the bookmark address.

3.2.6 To delete a bookmark

1. In the bookmarks list, touch and hold a bookmark to delete it.

2. Touch **Delete bookmark** in the menu, and touch **OK**.

3.3 Downloading files

You can download files, webpages, and even applications from webpages. The files that you download are stored on your tablet or microSD card.

3.3.1 To download and install only trusted applications

You can download and install applications from the web or receive with an email message. Applications downloaded from the web can be from unknown sources. To protect your tablet and personal data, and download applications only from trusted sources, open the settings list and touch **Applications > Unknown sources > OK** to make it checked.

3.3.2 To download a file

You can touch and hold an image and touch **Save image** in the menu that opens to download the image file. Or touch and hold a link to a file or to another webpage, and touch **Save link** in the menu that opens to download the linked file.

4 Email

4.1 Opening Email

Touch **Email** on the Home screen or on the Applications screen to open **Email**.

4.2 Adding and deleting email accounts

4.2.1 To add an email account

The first time you open **Email**, you are prompted to set up an email account. Or if you have created an email account, you can press the **Menu** key, and then touch **Add account** to create another email account. Do as the following steps to add your email account in the **Set up email** screen.

1. Enter your email address and password.
2. Touch **Next** or **Manual setup** to select your email service type and enter other email account details. You can contact your email service provider for the values required for your account.
3. Enter a name for the account, and the name you want displayed in outgoing mail, and touch **Done**. Email starts downloading your email messages and you can send and receive email messages with this new account.

4.2.2 To delete an email account

1. Open the **Email** screen, press the **Menu** key and touch **Accounts**.
2. Touch and hold the account to delete.
3. Touch **Remove account** in the menu that opens.
4. Touch **OK** in the dialog to confirm your delete action.

4.3 Sending and responding to email messages

4.3.1 To compose and send email messages

1. Open **Email**, touch the email account you want to use.
2. Press the **Menu** key and then touch **Compose** in the menu that opens.
3. Enter the name or email address of the desired recipient or recipients in the **To** field. As you enter, matching addresses are offered from your **Contacts**. You can touch a suggested address or enter a new one. Separate multiple addresses with commas.
4. Enter a subject for the email message.
5. Enter the text of the email message.

6. Press the **Menu** key and touch **Attach** to send a photo with the message.
7. Touch **Send**. You can touch **Save as draft** or press the Back key before sending the message to save it as a draft. Or touch **Discard** to abandon the message.



If you are not ready to send the message, touch **Save as draft** to save it in a drafts folder. Your message is also saved as a draft if you press the **Back** key before sending it.

4.3.2 To receive email messages

To receive email messages, press the **Menu** key and touch **Refresh** after you log into the email box. You can also touch **Account settings** > **Email check frequency** to set the frequency for automatically checking new email messages.

4.3.3 To read an email message

To read an email message, you can open the **Email** screen, touch to select an account inbox, then touch the message to read.

4.3.4 To reply to or forward an email message

While reading an email message, you can touch **Reply** or **Reply all** to reply to the message. A Compose Message window opens with the addresses, subject, and a copy of the message you are responding

to filled in. You can also press the **Menu** key and touch **Reply**, **Reply all**, or **Forward** to reply to or forward the message.

4.3.5 To delete an email message

You can delete an email message from its folder by touching **Delete** or by pressing the **Menu** key and touching **Delete** when you are reading it. For most kinds of accounts, deleted messages are moved to a trash folder, so you can retrieve them if you deleted them in error.

5 Calls

5.1 Making calls by dialing

1. To display the phone panel, you can touch **Phone** on the home screen or on the Applications screen. Or if you have the **Call log**, **Contacts** or **Favorites** tab open, you can touch to switch to the **Phone** tab.
2. Touch the digital keys to enter the phone number. To dial an international number, touch and hold the 0 key to enter the plus (+) symbol. Then enter the international prefix for the country and the national full phone number followed closely. Touch the  key on the screen to erase subsequent digits of the number one by one. Touch and hold it to erase the entire number.
3. Press the **Call** key.

5.2 Answering, rejecting or ending calls

When you receive phone calls, the **Incoming call** screen opens with the number of the caller, or more details if you have entered in contacts. All received calls are recorded in the **Call log**. If you miss a call, you receive a notification.

- To silence the ringer before answering calls, press the **Volume Down** key.

- Press the **Call** key to answer calls.
- Press the **End** key to reject incoming calls or to end answered ongoing calls.

5.3 Working with the Call log

The Call log tab lists entries of all dialed calls, answered calls, and missed calls. Touch an entry to open a screen that gives you options on what you can do with the contact. Or touch and hold an entry to open the context menu.

5.3.1 To open the Call log

To open the **Call log**, you can touch **Call log** on the Applications screen, or press the **Call** key when you are on the Home screen. You can also touch the **Call log** when you have the **Phone**, **Contacts** or **Favorites** tab open.



Calls are listed with the most recent at the top. Flick up and down to view all entries in the log.

5.3.2 To make calls from the Call log

1. Touch the entry of your target contact in the **Call log**.
2. Press the **Call** key to dial the number of the contact.

5.3.3 To add numbers to the Contacts

1. Touch and hold the target entry in the **Call log** to display the context menu.
2. Touch **Add to Contacts**.

5.3.4 To clear the Call log

While viewing the **Call log**, press the **Menu** key, and touch **Clear call log**. You can also touch and hold an entry in the log to display the context menu, then touch **Remove from call log** to remove just that entry from the Call log.

5.4 Calling listed contacts

1. You can open the **Contacts** on the Home screen or on the Applications screen by touching **Contacts**. You can also touch to switch to the **Contacts** tab if you have the **Phone**, **Call log** or **Favorites** tab open.
2. Touch the contact to call. You can flick up and down to find a contact that listed in **Contacts**.
3. Press the **Call** key to dial the number of the contact.



Touch a contact to open the contact details screen. Touch and hold a contact to open the context menu.

5.5 Calling favorite contacts

The favorite contacts list is followed by a list of the numbers that you call most often. You can add and remove favorites by touching the star next to the contact names, while you are viewing information about the contacts. To call a favorite contact, do as follows.

1. Open **Phone**, **Call log**, or **Contacts**, then touch the **Favorites** tab to display the favorite contacts list.
2. Touch a favorite contact to call.
3. Touch a number of the contact to call.
4. Press the **Call** key to dial the number of the contact.

6 Messaging

Use **Messaging** to exchange text messages (SMS) and multimedia messages (MMS) with your friends

6.1 Opening Messaging

Touch **Messaging** on the Applications screen to open the **Messaging** screen. The **Messaging** window opens, where you can create a new message or open an ongoing message thread.

6.2 Exchanging messages

You can send text messages (SMS) and Multimedia messages (MMS) to other mobile devices with this feature and service. **Messaging** automatically converts a message into a multimedia message if you send it to an email address instead of a phone number, add a subject, or attach a media file.

6.2.1 To create and send a text message

1. On the **Messaging** screen, touch **New message**.
2. Enter the name of a contact with a mobile number in the **To** field. As you enter, matching contacts appear. You can touch a suggested contact or continue your entering.

3. Touch the composition text field to enter your message text. If you press the **Back** key while composing a message, it is saved as a draft in your **Messaging** window. Touch the message to resume composing it.
4. Touch **Send**.

6.2.2 To create and send a multimedia message

1. On the **Messaging** screen, touch **New message**.
2. Enter a mobile phone number, or email address, or the name of a contact with a mobile number or email address in the **To** field. As you type, matching contacts appear. You can touch a suggested contact or continue your entering.
3. Touch the composition text field to enter your message text.
4. Press the **Menu** key and touch **Add subject** to add a message subject.
5. Press the **Menu** key and touch **Attach** to open a menu where you can touch the kind of media file and add an attachment to the message. Use the buttons in the Compose Message screen to preview or remove the media attachment.
6. Touch **Send**.

6.2.3 To view and respond to a message

If you are working in the **Messaging** window, messages that you receive are displayed in it. Otherwise, you receive a new message notification and a new message icon appears in the notification list.

When you touch the new message notification, the **Messaging** window opens, where you can reply to the message. If **Auto-retrieve** is unchecked, you must touch **Download** to view the multimedia message (MMS).

If the message contains a media file, touch **Play** to view, watch, or listen to it. Touch and hold the media file to open a menu with an option for saving the message on your tablet.

6.2.4 To view details about a message

Touch and hold a message in a message thread. Touch **View message details** in the menu that opens.

6.2.5 To forward or delete a message

1. Touch and hold the message thread to forward or to delete.
2. Touch **Delete message** or **Forward** in the menu that opens.

7 Contacts

Contacts enables you to save and manage information such as phone numbers, email addresses and chat addresses of your contacts, and provides quick and easy access to communicate with the people you want.

7.1 Opening Contacts

You can open your contacts by touching **Contacts** on the Home screen or on the Applications screen. Or if you have **Phone**, **Call log** or **Favorites** tab open, touch the **Contacts** tab. You can touch the **Favorites** tab to open your favorite contacts. In the contact tab pages, you can touch a contact to open the contact details screen, or touch and hold a contact to open the context menu.

7.2 Creating a contact

1. Open the **Contacts** screen.
2. Press the **Menu** key and touch **New contact**.
3. Enter the information of the contact, refer to the following tips.
 - Enter the contact name, and touch the picture frame to select a picture to display next to the name in the contacts list and in other applications.

- Touch a category of contact information, such as phone numbers and email addresses, to enter that kind of information about your contact. Flick up and down to view all categories.
 - Touch the plus button to the right of a category to add more than one entry for that category. Touch the minus button to the right of an entry to remove the entry.
 - Touch the label button to the left of the items of contact information such as **Phone numbers** and **Email addresses** to open a menu with preset labels for a phone number. You can touch to select a preset label or touch **Custom** in the menu to create your own label.
4. When your entering is finished, flick the page to the bottom and touch **Done**. You can also press the Menu key and touch **Done** in the menu that opens to save the contact details to your tablet.

7.3 Searching for contacts

1. Open the **Contacts** screen.
2. Press the **Menu** key and touch **Search**.
3. Enter the name of the contact you are searching for. As you type, contacts with matching names appear below the search box.
4. Touch a matching contact in the list to open its Details screen. Touch the searching glass to open a screen with a list of matching contacts.

7.4 Editing contacts

7.4.1 To edit contact details

To change or add details for your contacts, do as follows.

1. Open **Contacts** or **Favorites**.
2. Touch and hold the contact whose details you want to edit, and touch **Edit contact** in the menu that opens. You can also press the **Menu** key and touch **Edit contact** while viewing details of the contact.
3. Edit the contact information, using the same controls as when you create a contact.

7.4.2 To set default phone number

A default phone number appears below the name of the contact in the **Contacts** list, and this number can be used when you initiate a call or send a text message from the list by touching and holding a contact. To set one of the phone numbers of a contact as the default phone number, do as follows.

1. Open **Contacts** or **Favorites**.
2. Touch the contact entry in the list to view the details.
3. Touch and hold the phone number to use as the default phone number.

4. Touch **Make default number** in the menu that opens. The default phone number is marked with a checkmark.

7.4.3 To delete a contact

1. Open **Contacts** or **Favorites**.
2. Touch and hold the contact to delete, and touch **Delete contact** in the menu that opens to delete the contact from your tablet. You can also press the **Menu** key and touch **Delete contact** while viewing details of the contact.
3. Touch **OK** to confirm that you want to delete the contact.

7.4.4 To set contact group to display

To set the contact group to display, do as follows:

1. Open **Contacts**.
2. Press the **Menu** key and touch **Display options**.
3. Touch **Only contacts with phones** to make it checked or unchecked to display only contacts with phones or display all the contacts.
4. Touch **Done** to confirm that you want to display the contact group.

7.5 Editing favorite contacts

7.5.1 To add a contact to favorites

1. Open **Contacts**.
2. Touch and hold a contact to open the contexts menu, and touch **Add to favorites**. You can also touch the gray star to the right of the contact name while viewing details of the contact. The star turns to golden and the contact is added to your favorites.

7.5.2 To remove a contact from favorites

On the **Favorites** tab, touch and hold the contact, and touch **Remove from favorites** in the menu that opens to remove the contact from the tab. You can also touch the golden star to the right of the contact name while viewing details of the contact. The star turns to gray and the contact is removed from your favorites.

8 Multimedia applications

8.1 Sound Recorder

Touch **Sound Recorder** on the Applications screen to open the **Record your message** screen, and the following tips are helpful for you to ease working with it.

- Touch the round button to start to record your message.
- Touch the triangle button to play back the recording.
- Touch the square button to stop recording or playing.
- View the recording or playing duration and the volume of the captured audio signals on the **Record your message** screen.

8.2 Camera and Camcorder

Touch **Camera** or **Camcorder** on the Home screen or on the Applications screen to open the camera or camcorder to take pictures or shoot videos.

-  Be sure to clean the protective lens cover with a microfiber cloth before taking pictures and shooting videos. A lens cover with smudges from fingers can cause blurry pictures with a “halo” effect.

When you are on the **Camera** or **Camcorder** screen for taking pictures or shooting videos, you can press the **Menu** key and touch **Settings** to view or change the camera settings or camcorder settings.

8.3 Music

Touch **Music** on the Home screen or on the Applications screen to open the music player and display the music library that organized by **Artist**, **Album**, **Songs**, or **Playlist**. You can select what you want to play.



When a song is playing, you can add it to a playlist by pressing the **Menu** key and touching **Add to playlist**.



You can return to the main Library screen from most other screens in the **Music** application by pressing the **Menu** key and touching **Library**.

8.4 Videos

On the Applications screen, touch **Videos** to open the **Videos** screen and display the video files. On the **Videos** screen, touch a file to play the video.

8.5 Gallery

Gallery can automatically search for the pictures and videos stored on your tablet and microSD card. In addition, **Gallery** sorts these pictures and videos in folders. you can use **Gallery** to view and edit pictures, set a picture as the wallpaper or a contact image, and watch the videos stored on your tablet and microSD card.

8.5.1 Opening Gallery

Touch **Gallery** on the Applications screen to open it.

Gallery categorizes your pictures and videos by location and stores these files in folders. You can touch one of the folders to view pictures or videos.



If you have a great many pictures or videos on your tablet or microSD card, it may take a few minutes to discover and organize them when you open the **Gallery**.

8.5.2 Viewing a Picture

1. Touch a folder to view the pictures contained in the folder.
2. Touch a picture to view it in full-screen mode. When viewing a picture in full screen, flick left or right across the screen to view the previous or next picture.
3. Touch the screen to display the zoom control appears, and then you can zoom in or zoom out the picture.

8.5.3 Sharing a Picture

When you are viewing a picture, press the **Menu** key, and then touch **Share** and touch the application you want to use to share a picture with your friends.

8.5.4 Rotating a Picture

1. Press the **Menu** key, and then touch **Rotate**.
2. Touch **Rotate left** or **Rotate right**.

8.5.5 Cropping a picture

1. Touch a picture to view the controls and press the **Menu** key.
2. Touch **Crop picture**, the cropping rectangle appears on top of the picture.
3. Use the cropping tool to select the portion of the picture to crop.
 - Drag from the inside of the cropping tool to move it.
 - Drag an edge of the cropping tool to resize it to any proportion.
 - Drag a corner of the cropping tool to resize it with fixed proportions.
4. Touch **Save** to save a copy of the picture that you cropped. The original uncropped version remains on your tablet or microSD card.

8.5.6 Playing a Video

Touch the video you want to watch in **Gallery** to start playing the video. Touch the screen to show the play control panel. And then you can rewind the video, pause or resume playing the video, fast forward the video or jump to any part of the video.

9 Handy applications

9.1 Calendar

You can use the **Calendar** to create and manage events such as meetings and appointments. Touch **Calendar** on the Applications screen to open it. The events about the current day and the day after current day are shown on the event widget on the Home screen.

9.2 Weather

The **Weather** application offers weather forecast of a location that your specified. The weather information is summarized in the Weather widget on the Home screen and you can touch it to view more details. And you can touch the temperature scale icon to switch between the Celsius or Fahrenheit temperature scale as you want.

9.3 RSS Reader

The RSS Reader lists top news stories about common topics. The RSS Reader widget on your Home screen lists a category of top headlines, you can touch it to open a list of the top stories in the news and scroll to touch the category of news you are interested in.

9.4 Memo

Touch **Memo** on the Home screen or on the Applications screen to make text notes or drawing notes.

9.5 Alarm Clock

You can touch **Alarm Clock** on the Home screen or on the Applications screen to open a screen where you can set the alarm time and other attributes.

You can set an alarm by modifying an existing alarm or by adding a new one. Touch an existing alarm to set its time and other attributes. Or press the **Menu** key and touch **Add alarm** to add a new one.

Touch to make the check box to the right of an alarm checked or unchecked to turn the alarm on or off.

Touch and hold an alarm to delete it.

9.6 Calculator

Touch **Calculator** on the Home screen or on the Applications screen to open the calculator to solve math problems. You can drag to switch between basic and advanced panels, or press the **Menu** key and touch **Advanced panel**.

9.7 Documents

Touch **Documents To Go** on the Applications screen to view documents with the format such as Word, Excel, Power Point and PDF.

9.8 File Manager

9.8.1 Creating a Folder

1. Touch **File Manager** on the Applications screen.
2. Press the **Menu** key on the **File Manager** screen, and then touch **New folder**.
3. Enter the new folder name in the text box.
4. Touch **OK** to confirm that you want to create the folder.

9.8.2 Deleting files and folders

You can delete a file or a folder by touching and holding it and touch **Delete** in the menu that opens. You can also delete files and folders referring to the following steps.

1. Press the **Menu** key on the **File Manager** screen.
2. Touch **Delete**, and touch files or folders you want to delete to make them checked.
3. Press the **Menu** key, and touch **Done**.

4. Touch **OK** on the dialog that opens to confirm your want to delete the files or folders.

9.8.3 Searching a File

1. Press the **Menu** key on the **File Manager** screen, and then touch **Search**.
2. Enter the name or keyword of the name of the target file or folder in the search text box.
3. Touch **Search**. Your tablet starts to search for the file or folder in all folders and subfolders.
4. The search result is shown in a list. Touch to open your target file or folder.

10 Security settings

10.1 Enabling the SIM card PIN

1. Open the **Settings** list.
2. Touch **Location & security > Set up SIM/USIM card lock**.
3. Touch **Lock SIM/USIM card**, and enter the default SIM card PIN using the onscreen keyboard.
4. Touch **OK**.



Emergency calls can be placed at any time, without entering a PIN.

10.2 Changing the SIM card PIN

1. Open the **Settings** list.
2. Touch **Location & security > Set up SIM/USIM card lock**.
3. Touch **Change SIM/USIM PIN**, and enter the old SIM card PIN using the onscreen keyboard.
4. Enter the new SIM card PIN, and then touch **OK**.

11 Warnings and Precautions

To use the device properly and safely, read these warnings and precautions carefully and strictly observe them during operation. Unless otherwise specified, the term "device" refers to the device and its accessories.

Basic Requirements

- During storage, transportation, and operation of the device, keep it dry and prevent it from colliding with other objects.
- Do not dismantle the device. In case of any fault, contact an authorized service center for assistance or repair.
- Without authorization, no organization or individual can change the mechanical, safety, or performance design of the device.
- When using the device, observe all applicable laws and regulations and respect the legal rights of other people.

Environmental Requirements for Using the Device

- Before connecting and disconnecting cables, stop using the device, and then disconnect it from the power supply. Ensure that your hands are dry during operation.
- Keep the device far from sources of heat and fire, such as a heater or a candle.

- Keep the device far from electronic appliances that generate strong magnetic or electric fields, such as a microwave oven or a refrigerator.
- Place the device on a stable surface.
- Place the device in a cool and well-ventilated indoor area. Do not expose the device to direct sunlight.
- Keep the ambient temperature between 0°C and 35°C while the device is being charged. Keep the ambient temperature between 0°C to 40°C for using the device powered by a battery.
- Do not block the openings on the device with any object. Reserve a minimum space of 10 cm around the device for heat dissipation.
- Do not place any object (such as a candle or a water container) on the device. If any foreign object or liquid enters the device, stop using the device immediately, power it off, remove all the cables connected to it, and then contact an authorized service center.
- During thunderstorms, power off the device, and then remove all the cables connected to it to prevent it from getting damaged due to lightning strikes.

Precautions for Using Wireless Devices

- When using the device, ensure that the antenna of the device is at least 20 cm away from all persons.

- Do not use the device where using wireless devices is prohibited or may cause interference or danger.
- The radio waves generated by the device may interfere with the operation of electronic medical devices. If you are using any electrical medical device, contact its manufacturer for the restrictions on the use of the device.
- Do not take the device into operating rooms, intensive care units (ICUs), or coronary care units (CCUs).

Areas with Inflammables and Explosives

- Do not use the device where inflammables or explosives are stored, for example, in a gas station, oil depot, or chemical plant. Otherwise, explosions or fires may occur. In addition, follow the instructions indicated in text or symbols.
- Do not store or transport the device in the same box as inflammable liquids, gases, or explosives.

Accessory Requirements

- Use only the accessories supplied or authorized by the device manufacturer. Otherwise, the performance of the device may get affected, the warranty for the device or the laws and regulations related to telecommunications terminals may become null and void, or an injury may occur.
- Do not use the power adapter if its cable is damaged. Otherwise, electric shocks or fires may occur.

- Ensure that the power adapter meets the specifications indicated on the device nameplate.
- Ensure that the power adapter meets the requirements of Clause 2.5 in IEC60950-1/EN60950-1 and it is tested and approved according to national or local standards.
- For pluggable device, the socket-outlet shall be installed near the device and shall be easily accessible.

Battery and Charger

- Unplug the charger from the electrical plug and the device when not in use.
- The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time and the talk time are shorter than the normal time, replace the battery.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage may cause a fire or a malfunction of the charger.
- Do not connect two poles of the battery with conductors, such as metal materials, keys, or jewelries. Otherwise, the battery may be short-circuited and may cause injuries and burns on your body.
- Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.

- If battery electrolyte leaks out, ensure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
- If there is a case of battery deformation, color change, or abnormal heating while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.
- If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to an electric shock, a short circuit of the charger, or a fire.
- Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.
- Danger of explosion if battery is incorrectly replaced. Recycle or dispose of used batteries according to the local regulations or reference instruction supplied with your device.

Prevention of Hearing Damage

Using a headset at high volume can damage your hearing. To reduce the risk of damage to hearing, lower the headset volume to a safe and comfortable level.

Safety of Children

Keep the device and its accessories out of the reach of children. Otherwise, they may damage the device and its accessories by mistake, or they may swallow the small components of the device, causing suffocation or other dangerous situations.

Maintenance

- If the device is not used for a long time, power it off, and then remove all the cables connected to it.
- If any exception occurs, for example, if the device emits any smoke or unusual sound or smell, stop using the device immediately, power it off, remove all the cables connected to it, and then contact an authorized service center.
- If the device screen is broken by colliding with hard objects, do not touch or try to remove the broken part. In this case, stop using the device immediately, and then contact an authorized service center in time.
- Do not trample, pull, or overbend any cable. Otherwise, the cable may get damaged, causing malfunction of the device.
- Before cleaning the device, stop using it, power it off, and then remove all the cables connected to it.
- Use a clean, soft, and dry cloth to clean the device shell. Do not use any cleaning agent or spray to clean the device shell.

Emergency Call

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

Disposal and Recycling Information



This symbol on the device (and any included batteries) indicates that the device (and any included batteries) should not be disposed of as normal household garbage.

Do not dispose of your device or batteries as unsorted municipal waste. The device (and any batteries) should be handed over to a certified collection point for recycling or proper disposal at the end of its life.

For more detailed information about the recycling of the device or batteries, contact your local city office, the household waste disposal service, or the retail store where you purchased this device.

The disposal of this device is subject to the Waste from Electrical and Electronic Equipment (WEEE) Directive of the European Union. The purpose for separating WEEE and batteries from other waste is to minimize any environmental impact and health hazard due to the presence of hazardous substances.

Reduction of Hazardous Substances

This device is compliant with the EU Registration, Evaluation, Authorisation and Restriction of Chemicals (REACH) Regulation

(Regulation No 1907/2006/EC of the European Parliament and of the Council) and the EU Restriction of Hazardous Substances (RoHS) Directive (Directive 2002/95/EC of the European Parliament and of the Council). For more information about the REACH compliance of the device, visit the Web site www.huaweidevice.com/certification. You are recommended to visit the Web site regularly for up-to-date information.

EU Regulatory Conformance

This device should be installed and operated with a minimum distance of 20 cm between the antenna and all persons.

Български: С настоящето Huawei Technologies Co., Ltd. декларира, че този уред съответства на основните изисквания и другите разпоредби на Директива 1999/5/EC.

Česky: Huawei Technologies Co., Ltd., tímto prohlašuje, že toto zařízení je ve shodě se základními požadavky a dalšími souvisejícími opatřeními směrnice 1999/5/EC.

Dansk: Huawei Technologies Co., Ltd. erklærer hermed at denne enhed er i overensstemmelse med de obligatoriske krav og andre relevante bestemmelser i direktiv 1999/5/EF.

Nederlands: Hierbij verklaart Huawei Technologies Co., Ltd. dat dit apparaat in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EC.

English: Hereby, Huawei Technologies Co., Ltd. declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Eesti: Käesolevaga kinnitab Huawei Technologies Co., Ltd., et see seade vastab Direktiivi 1999/5/EÜ põhinõudmistele ja teistele asjakohastele määrustele.

Suomi: Huawei Technologies Co., Ltd. vakuuttaa täten, että tämä laite on yhdenmukainen direktiivin 1999/5/EY olennaisten vaatimusten ja direktiivin muiden asiaankuuluvien lausumien kanssa.

Français (Européen) : Le fabricant déclare que ce produit est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.

Deutsch: Huawei Technologies Co., Ltd. erklärt hiermit, dass dieses Produkt die erforderlichen Bestimmungen und andere relevante Verordnungen der Richtlinie 1999/5/EG einhält.

Ελληνικά: Δια της παρούσης η Huawei Technologies Co., Ltd. δηλώνει ότι αυτή η συσκευή συμμορφώνεται με τις βασικές απαιτήσεις και άλλες σχετικές διατάξεις της οδηγίας 1999/5/E.K.

Magyar: Jelen nyilatkozaton keresztül a Huawei Technologies Co., Ltd. kijelenti, hogy a készülék megfelel az EC/5/1999 Irányelv összes lényeges követelményének és vonatkozó előírásának.

Gaeilge: Fograíonn Huawei Technologies Co., Ltd leis seo go bhfuil an fheiste seo i gcomhlíonadh leis na fíor-riachtanais agus na forálacha eile maidir le Treoir 1999/5/AE.

Italiano: Col presente documento, Huawei Technologies Co., Ltd. dichiara che questo dispositivo è conforme ai requisiti essenziali e alle altre disposizioni applicabili della Direttiva 1999/5/CE.

Latviski: Ar šo Huawei Technologies Co., Ltd. paziņo, ka šī ierīce atbilst Direktīvas 1999/5/EC pamatprasībām un piemērojamajiem nosacījumiem.

Lietuviškai: Šiuo Huawei Technologies Co., Ltd. praneša, kad šis įtaisas atitinka Direktyvos 1999/5/EC pagrindinius reikalavimus ir taikomas sąlygas.

Malti: Hawnhekk, Huawei Technologies Co., Ltd. tiddikjara li dan it-tagħmir hu konformi mal-htigijiet essenzjali u provvedimenti rilevanti oħrajn ta' Direttiva 1999/5/KE.

Polski: Wymieniona w tym dokumencie firma Huawei Technologies Co., Ltd. deklaruje, że niniejsze urządzenie spełnia zasadnicze wymagania w zakresie zgodności oraz inne odnośne postanowienia Dyrektywy 1999/5/EC.

Português (Europeu) : Deste modo, a Huawei Technologies Co., Ltd. declara que este dispositivo está em conformidade com os requisitos essenciais e outras provisões relevantes da Directiva 1999/5/CE.

Română: Prin prezenta Huawei Technologies Co., Ltd. declară că acest dispozitiv este conform cu cerințele esențiale și alte prevederi relevante ale directivei 1999/5/CE.

Slovenčina: Huawei Technologies Co., Ltd. týmto vyhlasuje, že zariadenie je v súlade so základnými požiadavkami a inými relevantnými predpismi Smernice 1999/5/ES.

Slovenščina: Huawei Technologies Co., Ltd. izjavlja, da je ta naprava v skladu z bistvenimi zahtevami in drugimi ustreznimi določbami Direktive 1999/5/ES.

Español (Europeo) : Con el presente documento, Huawei Technologies Co., Ltd. declara que este dispositivo cumple con los requisitos esenciales y con las demás disposiciones correspondientes de la Directiva 1999/5/CE.

Svenska: Huawei Technologies Co., Ltd. förklarar härmed att denna produkt överensstämmer med de grundläggande kraven och andra relevanta föreskrifter i direktiv 1999/5/EG.

For the declaration of conformity, visit the Web site www.huaweidevice.com/certification.

CE 0168 

Notice: Observe the national local regulations in the location where the device is to be used. This device may be restricted for use in some or all member states of the European Union (EU).

Notice: This device may be operated in all member states of the EU.

France: Outdoor use limited to 10 mW e.i.r.p. within the band 2454-2483.5 MHz.

Italy: For private use, a general authorisation is required if WAS/RLAN's are used outside own premises. For public use, a general authorisation is required.

Luxembourg: General authorisation required for network and service supply.

Norway: This subsection does not apply for the geographical area within a radius of 20 km from the centre of Ny-Ålesund.

Copyright © Huawei Technologies Co., Ltd.2010. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd..

The product described in this manual may include copyrighted software of Huawei Technologies Co., Ltd. and possible licensors. Customers shall not in any manner reproduce, distribute, modify,

decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the said software, unless such restrictions are prohibited by applicable laws or such actions are approved by respective copyright holders under licenses.

Trademarks and Permissions



HUAWEI, **HUAWEI**, and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd..

Other trademarks, product, service and company names mentioned are the property of their respective owners.

Notice

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of local network, and may not be activated or may be limited by local network operators or network service providers. Thus the descriptions herein may not exactly match the product or its accessories you purchase.

Huawei Technologies Co., Ltd. reserves the right to change or modify any information or specifications contained in this manual without prior notice or obligation.

NO WARRANTY

THE CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO

WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO CASE SHALL HUAWEI TECHNOLOGIES CO., LTD. BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

Import and Export Regulations

Customers shall comply with all applicable export or import laws and regulations and will obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.

Issue: 03 (2010–11–03)

Part Number: 903008



for Android™ Android is a trademark of Google Inc. Use of this trademark is subject to Google Permissions.