

ZTE

ZTE *Render*TM
Quick Guide

LEGAL INFORMATION

Copyright © 2012 ZTE CORPORATION.

All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice. Every effort has been made in the preparation of this manual to ensure accuracy of the contents, but all statements, information, and recommendations in this manual do not constitute a warranty of any kind, expressed or implied.

The *Bluetooth*® trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such trademarks by ZTE Corporation is under license. Other trademarks and trade names are the property of their respective owners.

Version No. : R1.0

 
Edition Time : 201205

 
Getting Started

Please read the **Product Safety and Warranty Information** in the box before proceeding.

For additional information about your phone go to **windowsphone.com**

Overview

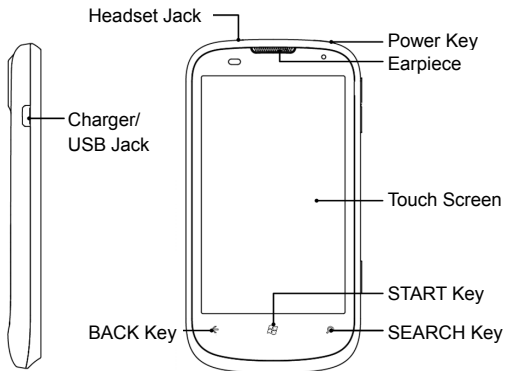

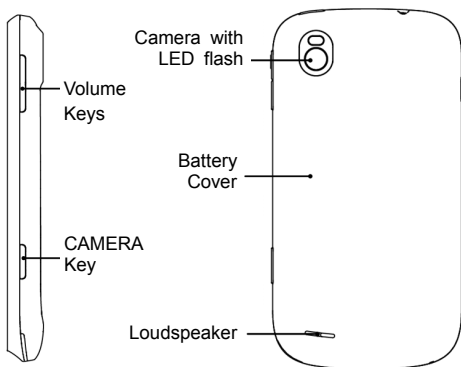

Keys Explained


Key	Function
POWER Key	- Press and hold to turn on or off the phone. - Press to switch your phone to Sleep mode. - Press to wake up your phone.
CAMERA Key	- Press fully to start the camera. - When the camera is started, press halfway to adjust the focus; press fully to take a photo.

Key	Function
BACK Key	• Touch to go one screen back. • Touch and hold to see and switch running apps.
START Key	• Touch to go back to Start. • Touch and hold to use voice recognition.
SEARCH Key	• Touch to use Bing search.
Volume Keys	• Press or hold to turn the volume up or down.

Installing the Battery


Switch off your phone before installing or replacing the battery.

 1. Remove the back cover.

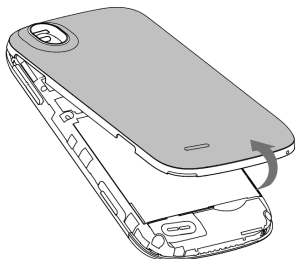

2. Insert the battery by aligning the gold contacts on the battery with the gold contacts in the battery compartment. Gently push down

 on the battery until it clicks into place.

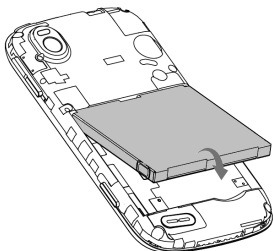


3. Press the cover gently back into place until you hear a click.

Charging the battery

When you first get your new phone you'll need to charge the battery.

 1. Connect the adapter to the charger jack.
Ensure that the adapter is inserted with the correct orientation. Do not force the connector into the charger jack.

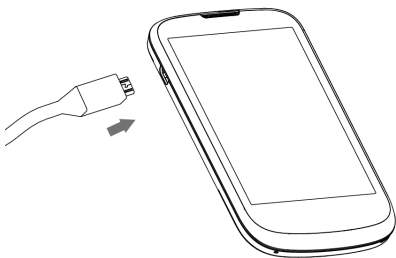

2. Connect the charger to a standard AC wall outlet.
3. Disconnect the charger when the battery is fully charged.

Switching Your Phone On/Off

Make sure the battery is charged.

- Press and hold the **POWER Key** to switch on your phone.
- To switch it off, press and hold the **POWER Key**. Then slide down the picture on the screen.

Switching to Sleep Mode

 
To save battery power, Sleep Mode suspends your device to a low-power-consumption state while the display is off. Your device also goes into Sleep Mode by itself when the display is automatically turned off after a certain period of time, which you

can set in **Settings > lock + wallpaper > Screen times out after.**

Press **POWER Key** to switch to Sleep Mode.

Waking up Your Phone

1. Press **POWER Key**. The phone displays the lock screen.
2. Press the bottom of the screen and slide your finger up.

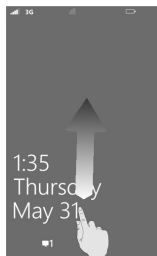

NOTE: If you have set a phone password, you'll need to enter the password to unlock your screen.

Changing the Lock Screen Wallpaper

1. From Start, touch  > **Settings > lock + wallpaper.**
2. Touch **change wallpaper** to select an image from your local or online albums.
3. Touch the image you like.

4. If the image is larger than the allowed wallpaper size, crop the image by moving the part you need into the cropping box. You can also pinch or spread to zoom out or zoom in.

5. Touch .

TIP: To give the lock screen wallpaper a more dynamic look, you can use the artist photo as the lock screen wallpaper when playing the artist's music. Touch the **On/Off** switch below **Show artist when playing music** in **lock+wallpaper** settings.

Adjusting the Volume

Press the **Volume Up** or **Volume Down** key to adjust the volume to your desired level. At the same time, numbers will appear on top of the screen to show the current volume level.



Touch  icon on the right to turn off ringtone and make the phone only vibrate or silent.

Touch  or  icon to turn ringtone back on.

Sound Settings

By touching  > **Settings** > **ringtones+sounds**, you can adjust the sound settings, such as ringtones and alerts.

- **Ringer:** Touch the On/Off switch to enable or

disable ringtone sounds. When the ringer is disabled, the phone will be silent or only vibrate.

- **Vibrate:** Touch the On/Off switch to enable or disable vibration.
- **Ringtone, New text or IM, New voicemail, or New email:** Touch each item to set ringtones or alerts for different notifications.
- **Play a sound for:** Select the occasions for playing a sound.

Rearranging the Start Screen Tiles

1. Touch and hold the tile you want to move until other tiles recede.
2. Drag the tile to a new position in the Start screen.
3. Touch the tile or a blank space to dock the tile.

Pinning New Items to the Start Screen

Lots of stuff can be pinned to the Start screen, such as apps, contacts, and office documents.

To pin something to the Start screen, touch and hold it until a menu pops up. Then touch **pin to start**.

Removing a Tile from the Start Screen

1. Touch and hold the tile you want to remove

until other tiles recede.

2. Touch  on the upper-right corner of the tile.

Switching between Running Applications

You can have multiple applications running on your phone.

When you want to open another application without exiting the current one, touch **START Key** and touch  then touch the new application you want to open.

To switch back to the previous application, first touch and hold **BACK Key** to see all running applications. Then flick left or right to find the application you want and touch to restore it.

Making a call

There are many ways to make a call with your phone. And they're all easy to do.

Calling with the Keypad

1. From Start, touch the U.S. Cellular tile.
2. Touch  to open the keypad.
3. Enter the phone number
Touch  to delete wrong digits.
4. Touch **call**.

TIPS: To make international calls, hold 0 to enter the “+”.

Calling from your Contacts

1. From Start, touch the People tile.
2. Flick up or down to scroll the contacts list and touch the contact you want to call.
You can search for a contact by touching  at the bottom of the contact list.
3. Touch the phone number.

Calling from your Call History

1. From Start, touch the U.S. Cellular tile.
2. Touch  in front of the name or number you want to call in the history list.

Receiving a call

When you have an incoming call, the caller number appears on the screen.

If	How to answer	How to reject
Display is on	Touch answer	Touch ignore
Display is off	Press the bottom of the screen and slide your finger up. Then touch answer .	Press the bottom of the screen and slide your finger up. Then touch ignore .

Creating an Email account

1. From Start, touch  > **Settings** > **email + accounts** > **add an account**.
2. Select the type of your account.
 - Touch **Outlook** if you want to add a Microsoft Exchange Server account.
 - Touch **other account** or **advanced setup** if the account you want to add is not in the list. The advanced setup requires you to manually input the incoming and outgoing servers. Consult your email service provider if necessary.
3. Enter the email address and password. Then touch **sign in**.

For Microsoft Exchange Server accounts, you might need to ask your Exchange Server

administrator for detailed parameters.

After the account is created, a new tile for the account is created in the Start screen and a new shortcut appears in the application list.

Creating a Contact

1. Under **all** in the People Hub, touch  > **new contact**.
2. If you have signed in to multiple accounts, choose the account that the new contact belongs to.
3. Enter the contact name, phone numbers, and other information.
4. Touch  to save the contact.

Sending a Message

1. From Start, touch the Messaging tile.
2. Touch .
3. Enter the recipient's number or name. As you type the name, matching contacts will appear. Touch a suggested contact to add as a recipient.
4. Touch **type a message** and type your message.
 - You can also touch  to use voice recognition. Your phone will convert the message you speak into text.
 - If you are sending an MMS, touch  to add a picture. You can either add from your

albums, or touch  to shoot a new picture.

5. Touch  to send your message.

Composing and Sending an Email

1. Open the email account you want to use to send the email.
2. Touch .
3. Fill in one or more recipients in the **To** field.
Touch ... > **show cc & bcc** to add carbon copy and blind carbon copy recipients.
4. Enter the email topic in the **Subject** field.
5. Touch the space below the Subject field to enter the email text.
Touch  to add pictures to the email as attachments.
Touch ... > **priority** to change email priority.
6. Touch  to send the email immediately, or touch  > **save** to send the email later.

Taking Pictures with your Camera

Your phone has a high-resolution digital camera. Open it by holding down the **CAMERA Key** or by touching  > **Camera**.

NOTE: The first time you open the camera, you will be asked whether to share your phone's location. Sharing this will add location information to the photos you take, so you'll know where each photo was taken.

- Touch the + or – button on the screen to zoom in or out.
- Press **CAMERA Key** lightly to focus and then press it fully to take a shot. You can also touch the place you want to focus on in the viewfinder screen to take a shot.
- To view the photo you have taken, just touch  or flick right in landscape orientation. Continue flicking right to see more photos or videos you have taken. Or touch  or flick down in portrait orientation.

Shooting Video with your Camcorder

From the camera's viewfinder screen, touch  to open the camcorder.

NOTE: Touch  to return to the camera mode.

- Touch the + or – button on the screen to zoom in or out.
- Fully press **CAMERA Key** to start and end shooting.
- To view the video you shot, just touch  or flick right in landscape orientation, and then touch  Go on flicking right to see more

photos or videos you shot. Or touch  or flick down in portrait orientation.

Browsing the Internet

You can use your phone to get on the Internet via a Mobile Network, or WiFi connection.

Touch the Internet Explorer tile or from Start touch  > **Internet Explorer** to open the web browser.

There are different ways to open web pages:

- Touch the address bar at the bottom of the browser screen to enter the website you want to browse. Then touch .
- Touch ... > **favourites** from the browser screen and select a bookmark to open.
- Touch ... > **recent** from the browser screen and choose an item to open.

Touch the screen twice quickly to zoom in or zoom out. You can also pinch or spread the screen with two fingers to zoom out or zoom in.

Bluetooth®

Bluetooth® is a short-range wireless communication technology. Phones or other devices with Bluetooth capabilities can exchange information wirelessly within a distance of about 10 meters. The Bluetooth devices must be paired before the communication is performed.

TIP: Your phone supports Bluetooth connection

with a Bluetooth headset.

1. From Start, touch  > **Settings** > **Bluetooth** and touch the On/Off switch to turn on Bluetooth.

Your phone automatically starts to search for visible Bluetooth devices in range, and becomes discoverable itself for other devices to find and connect.

2. Touch the device you want to pair with and, if required, enter your PIN and touch **done**.

If a PIN is required, the same PIN may need to be entered on the other device. Refer to the document for the other Bluetooth device for information on pairing mode and PIN.

To unpair from a Bluetooth device from Start, touch  > **Settings** > **Bluetooth**. Then touch and hold the paired device and select **delete** to unpair from it.

Your Navigator Deluxe

With Your Navigator Deluxe, get all of the features of an advanced car navigation system on your mobile phone with voice turn-by-turn navigation enabled by GPS. Search for any destination including gas stations, ATMs, restaurants, and more. Get detailed maps of any location.

1. From Start, touch  > **Settings** > **location**.
2. Touch the **On/Off** switch for location services to turn it on.

3. Touch **BACK Key** to return to the system settings screen.
4. From the home screen select the Your Navigator Deluxe application.
5. From the Your Navigator Deluxe Home screen you can select
 - “Drive To” for turn by turn direction to an address, airport, contacts addresses and more.
 - “Places” to search for nearby businesses, the cheapest gas prices and more
 - “Maps & Traffic” to see where you currently are located on a map and what traffic is in the area.