



Clear and Simple Quick Start Guide

LG Escape 3™



Getting to know your LG Escape 3™



More information

On the web
Detailed support information, including device specifications and the full user manual, is available at: www.cricketwireless.com/support/devices.

On the phone
• Call Customer Care at **1-855-246-2461** or
• Dial **611** from your phone

Accessories
Cricket offers a full line of accessories. For more information, go to www.cricketwireless.com/shop/accessories or visit your local Cricket retailer.



Product meets FCC Radio Frequency Exposure Guidelines—FCC ID ZNFK373. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Copyright © 2016 LG Electronics MobileComm U.S.A., Inc. ALL RIGHTS RESERVED. LG, LG Life's Good, and the LG logo are registered trademarks of LG Corp. Escape 3 is a trademark of LG Electronics, Inc. All features, functionality, and other product specifications are subject to change without notice. Screen shots are simulated and subject to change.

© 2016 Cricket Wireless LLC. All rights reserved. Cricket and the Cricket logo are registered trademarks under license to Cricket Wireless LLC.

Phone setup

Inserting the battery, nano-SIM card, and microSD™ card

- Carefully remove the back cover by using a finger or thumb to pull from the bottom left-hand side of the device.
- Insert the nano-SIM into the slot as shown with the gold-colored contacts facing down.
- Insert the microSD card (optional) into the microSD slot as shown with the gold-colored contacts facing down.
- Replace the back cover (the cover is secure when it clicks into place) and charge your phone.

Touch screen

Using the touch screen

- Use your fingertip to lightly touch the screen.
- Tap, drag, or slide your finger up, down, left, and right on the touch screen to perform different functions.
- To return to the previous screen, tap the **Back key**.
- Press the **Home key** at any time to return to the main home screen.
- Tap the **Recent apps key** to view and access a list of apps you've recently used.
- Tap **Apps** to access applications on your phone.

Notifications panel

- View a quick summary of alerts on your phone, such as new messages, emails, calls, and software updates with the Notifications panel.
- Swipe down from the top of any home screen to access the Notifications panel.
 - Clear individual notifications by swiping left or right on the alert, or tap **CLEAR** to remove all notifications.

Personalize

Customizing home screens

Personalize your home screen with apps, widgets, and wallpapers. Tap and hold a blank part of the home screen to access customization options, then select **Apps**, **Widgets**, or **Wallpapers**. Browse options by swiping to scroll through, and tap or drag an item to add it to a home screen.

Organizing home screens

- To move a widget, shortcut, or folder, tap and hold it and then drag it to a new location.
- To delete, tap and hold and then drag an item to **Remove**.
- To create a folder, tap and hold an icon and drag it on top of another icon.
- To rename a folder, tap it, tap the folder name, and tap the **Folder** name field to bring up the keyboard.

Calls and voicemail

Make a call

- From the home screen, tap **Phone**.
- Select an option to place a call:
 - Dial**: Manually enter telephone numbers.
 - Call logs**: Retry or return recent calls.
 - Contacts**: Call a saved contact from your address book.
 - Favorites**: Call or add a favorite contact.
 - Groups**: Find contacts more easily by their groups.

Use call waiting

With call waiting, you can take two calls at once.

- While on a call, you will hear a tone if another call comes in.
- Tap **Answer** and swipe in any direction to receive the call. Your current call will automatically be placed on hold, and both calls will be listed on screen.
- Simply tap a call in the list to make it active.

Check voicemail

- From the home screen, tap **Phone**.
- From the Dial tab, tap **Voicemail**.

Text and picture messaging

Send a text message

- From the home screen, tap **Messaging**.
- Tap **Compose** to begin a new message.
- In the To field, enter a number or a contact name, or tap **Contacts** to select a contact from the address book.
- Tap the **Enter message** field and enter your text.
- Tap **Send**.

Send a picture message

- Follow steps 1-4 above.
- Tap **Attach**.
- Tap **Image** and select a picture, or choose another file to attach.
- Tap **Send**.

Please don't text and drive.

Cricket services

These services make using Cricket even better and easier!

- My Cricket**: Access billing, make a quick payment, view usage, and access support from the palm of your hand.
- Cricket Wi-Fi Manager**: Helps you save your high speed data by seeking out free and open Wi-Fi® hotspots whenever you're near them. Also remembers your favorite Wi-Fi hotspots and connects you automatically. Cricket does the searching so you can do the saving.
- Visual Voicemail**: Quickly view, access, and play back your voicemail messages. Easily save important numbers to your Favorites list and respond to messages by calling back or texting.
- Deezer**: Listen on-the-go with ad-free streaming music, download your favorites to your phone, and get customized playlists based on your preferences.

Apps on Google Play™

Access Google Play

- From the home screen, tap **Play Store**.
- Use your existing Google™ account to log in, or create one following the on-screen instructions.

Navigate Google Play

Find apps, games, and more in the Play Store.

- Tap a category to browse popular apps, games, movies, and music organized by popularity or category.
- Tap the search bar at the top of the screen to search the Play Store for a specific game or app.
- To install, tap the app and follow the on-screen instructions. Once installed, you will see an alert in the Notifications panel. Open the app from this notification or by locating it in **Apps**.

Camera and video

Take a picture

- From the home screen, tap **Camera**, then tap **Menu**.
- Tap **Settings** to adjust your camera settings, such as timer, grid, or resolution. Zoom in and out by pinching/spreading two fingers on the screen.
- Tap **Shutter** or press the **Volume up/down key** to take a photo.

View pictures

- From the home screen, tap **Apps**.
- Tap **Gallery**.

Take a video

- In camera mode, tap **Camcorder** to automatically start recording.
- Tap **Stop recording** to end recording. You may also pause a recording and continue later by tapping **Pause**, > **Continue Recording**, and capture photos while recording by tapping.

Send a picture

- After taking a picture or video, tap the Gallery thumbnail in the corner of the screen, tap the screen, and then tap **Share**.
- Tap to share your picture or video via messaging, email, **Bluetooth**, and more.

QuickMemo®+

Create memos with QuickMemo+

- From the home screen, tap **Apps**, then tap **QuickMemo+**.
- Tap **+** to add a new memo, or **+** to take a photo to add text or draw on the image.
- Tap **Done** to save your memo.
- To add a time or location reminder to a memo, tap a memo and then tap **Add reminder**.

Knock Code™ and Knock On™

Set Up Knock Code

Knock Code allows you to unlock your phone with a simple tap pattern code.

- From the home screen, long press the **Recent apps key**, then tap **Lock screen settings**.
- Tap **Select screen lock** and then tap **Knock Code**.
- Tap **NEXT**.
- Tap the quadrants on the screen to set your unlock pattern.
- Tap **NEXT**, enter your tap pattern again, and then tap **CONFIRM**.
- Tap **NEXT**.
- Enter a backup PIN and tap **NEXT**. Confirm it and tap **OK**.
- Select the type of notifications you'd like to have shown on the Lock screen and tap **OK**.

Wake up your screen with Knock On

- While the phone is in sleep mode, tap the screen twice with your finger.
- When the screen wakes up, you may view notifications, access apps on your lock screen, or unlock your phone.


Note: You will need to set up a payment method in the My account folder in the Play Store settings to purchase apps.

Cambio de idioma

Este menú te permite configurar el idioma en que se muestran los menús. También puedes configurar las opciones del teclado en pantalla.

Configurar el idioma

- Desde la pantalla de inicio, toca **Aplicaciones** , y luego toca **Ajustes > General**.
- Toca **Idioma y teclado**, y luego toca **Idioma**.
- Elige uno de los idiomas de la lista.

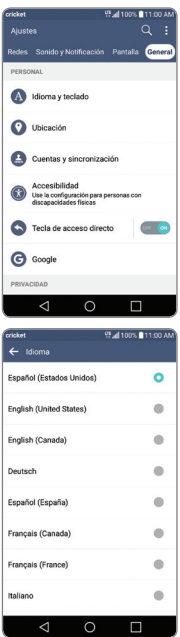

Conoce tu LG Escape 3™



El color del equipo puede variar.

Más información

Por Internet

Puedes obtener información detallada de ayuda, como las especificaciones de tu equipo y el manual completo del usuario, en www.cricketwireless.com/support/devices.

Por teléfono

- Llama al servicio al cliente al **1-855-246-2461** o
- Marca **611** desde tu teléfono

Accesorios

Cricket ofrece una línea completa de accesorios. Para obtener más información, visita www.cricketwireless.com/shop/accessories o ve a la tienda Cricket más cercana.



El producto cumple con las normas sobre límites de exposición de radio frecuencia de la Comisión Federal de Comunicaciones, FCC ID ZNFK373. Este equipo cumple con la parte 15 de las normas de la FCC. Su funcionamiento está sujeto a las siguientes dos condiciones: (1) este equipo no puede causar interferencias perjudiciales y (2) este equipo debe aceptar todas las interferencias que reciba, incluso las que puedan causar un funcionamiento no deseado. Copyright © 2016 LG Electronics MobileComm U.S.A., Inc. TODOS LOS DERECHOS RESERVADOS. LG Life's Good y el logotipo de LG son marcas comerciales registradas de LG Corp. Escape 3 es una marca comercial de LG Electronics, Inc. Todas las características, funciones y demás especificaciones del producto están sujetas a cambio sin previo aviso. Las capturas de pantalla son simuladas y están sujetas a cambio.

© 2016 Cricket Wireless LLC. Todos los derechos reservados. Cricket y el logotipo de Cricket son marcas comerciales registradas con licencia de Cricket Wireless LLC.

MBM65416801 (1.0)

Impreso en China

Configuración del teléfono

Para insertar la batería, la tarjeta nano-SIM y la tarjeta microSD™



- Retira cuidadosamente la tapa trasera utilizando un dedo o el pulgar para fíjar desde la parte inferior izquierda del equipo.
- Inserta la tarjeta nano-SIM en la ranura como se muestra, con los contactos dorados hacia abajo.
- Inserta la tarjeta microSD (opcional) en la ranura para microSD como se muestra, con los contactos dorados hacia abajo.
- Vuelve a colocar la tapa trasera (la tapa está bien colocada cuando se escucha un chasquido al colocarla en su lugar) y carga el teléfono.



Pantalla táctil

Para usar la pantalla táctil

- Usa la yema del dedo para tocar la pantalla suavemente.
- Toca, arrastra o desliza tu dedo hacia arriba, abajo, derecha e izquierda por la pantalla táctil para realizar diferentes acciones.
- Para regresar a la pantalla anterior, toca la **Tecla atrás** .
- Presiona la **Tecla de inicio**  en cualquier momento para regresar a la pantalla de inicio principal.
- Toca la **Tecla de aplicaciones recientes**  para ver una lista de las aplicaciones que has usado recientemente.
- Toca **Aplicaciones**  para acceder a las aplicaciones de tu teléfono.

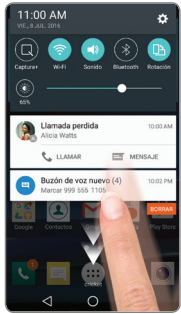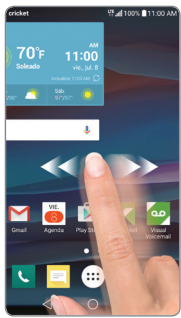

Panel de notificaciones

- Ve un resumen rápido de alertas en tu teléfono, como mensajes nuevos, correos electrónicos, llamadas y actualizaciones de software desde el panel de notificaciones.
- Deslízate hacia abajo desde la parte superior de la pantalla de inicio para acceder al panel de notificaciones.
 - Elimina notificaciones individuales deslizando hacia la izquierda o derecha sobre la alerta, o toca **BORRAR** para eliminar todas las notificaciones.

Aplicaciones en Google Play™

Para tener acceso a Google Play

- Desde la pantalla de inicio, toca **Play Store** .
- Usa tu cuenta existente de Google™ para iniciar sesión o crea una siguiendo las instrucciones de la pantalla.



Para explorar Google Play

Encuentra aplicaciones, juegos y más en Play Store.

- Toca una categoría para explorar aplicaciones, juegos, películas y música populares organizados por popularidad o por categoría.
- Toca la barra de búsqueda en la parte superior de la pantalla para buscar un juego o aplicación específica en Play Store.
- Para instalarla, toca la aplicación y sigue las instrucciones en pantalla. Una vez que se instale, verás una notificación en el panel de notificaciones. Abre la aplicación desde esta notificación o localizando la aplicación en **Aplicaciones** .



Importante: Tendrás que establecer una forma de pago en la carpeta Mi cuenta en los ajustes de Play Store para comprar aplicaciones.

Personalización

Para personalizar tus pantallas de inicio

Personaliza la pantalla de inicio con aplicaciones, miniaplicaciones y fondos de pantalla. Toca durante unos segundos una parte en blanco de la pantalla de inicio para acceder a las opciones de personalización y, a continuación, selecciona **Aplicaciones, Widgets y Fondos de pantalla**. Explora las opciones deslizando tu dedo y toca o arrastra un elemento para agregarlo a la pantalla de inicio.



Para organizar tus pantallas de inicio



- Para mover una miniaplicación, un atajo o una carpeta, toca el elemento sin soltarlo y arrástralo a una nueva ubicación.
- Para eliminarlo, tócalo y arrástralo hasta **Remove**.
- Para crear una carpeta, toca sin soltar un icono y arrástralo sobre otro icono.
- Para cambiar el nombre de una carpeta, tócala, toca el nombre y toca el campo **Nombre de la carpeta** para que aparezca el teclado.



Llamadas y correo de voz

Para hacer una llamada

- Desde la pantalla de inicio toca **Teléfono** .
- Selecciona una opción para hacer una llamada:
 - Marcar:** introduce el número de teléfono manualmente.
 - Registros:** vuelve a intentar o devuelve las llamadas recientes.
 - Contactos:** llama a un contacto guardado desde tu libreta de direcciones.
 - Favoritos:** llama o añade un contacto favorito.
 - Grupos:** encuentra contactos más fácilmente por sus grupos.

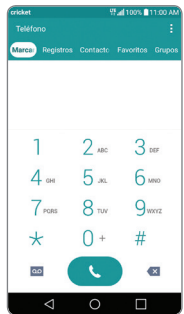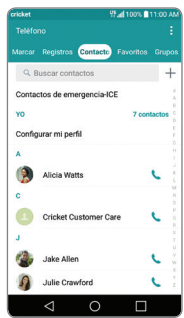

Para usar la llamada en espera

Con la llamada en espera puedes tomar dos llamadas a la vez.

- Cuando estés en una llamada, escucharás un tono en caso de que entre otra llamada.
- Toca **Responder** y desliza en cualquier dirección para recibir la llamada. Tu llamada actual se pondrá en espera de forma automática, y ambas llamadas se listarán en la pantalla.
- Simplemente toca una llamada en la lista para activarla.

Para revisar el correo de voz

- Desde la pantalla de inicio toca **Teléfono** .
- Desde la pestaña Marcar, toca **Buzón de voz** .

Mensajes de texto y con imágenes

Para enviar un mensaje de texto

- Desde la pantalla de inicio toca **Mensajes** .
- Toca **Redactar**  para empezar un mensaje nuevo.
- En el campo Para, ingresa un número o nombre de contacto, o toca **Contactos**  para seleccionar uno de la libreta de direcciones.
- Toca el campo **Ingresar mensaje** y escribe tu texto.
- Toca **Enviar**.



Para enviar un mensaje con imágenes

- Sigue los pasos anteriores del 1 al 4.
- Toca **Adjuntar** .
- Toca **Imagen** y selecciona una foto o elige otro archivo para adjuntar.
- Toca **Enviar**.

No envíes mensajes de texto mientras conduces.

Knock Code™ y Knock On™

Para configurar Knock Code

Knock Code te permite desbloquear tu teléfono con un código de patrón de toques sencillo.

- Desde la pantalla de inicio, mantén oprimida la **Tecla de aplicaciones recientes** , después toca **Ajustes de bloqueo de pantalla**.
- Toca **Seleccionar bloqueo de pantalla** y luego toca **Knock Code**.
- Toca **SIG.**.
- Toca los cuadrantes de la pantalla para establecer tu patrón de desbloqueo.
- Toca **SIG.**, ingresa de nuevo tu patrón de desbloqueo y luego toca **CONFIRMAR**.
- Toca **SIG.**.
- Ingresa un PIN de respaldo y toca **SIG.**. Confírmalo y toca **OK**.
- Selecciona el tipo de notificaciones que desees que aparezcan en la pantalla de bloqueo y luego toca **ACEPTAR**.



Para activar tu pantalla con Knock On

- Mientras tu teléfono está en modo inactivo, toca la pantalla dos veces con tu dedo.
- Cuando la pantalla se active, podrás ver notificaciones, acceder a las aplicaciones de tu pantalla de bloqueo o desbloquear tu teléfono.