MOTOMANUAL


MOTOSLVR L72

GSM 850/900/1800/1900Mhz
USER MANUAL

www.motorola.com.hk


HELLOMOTO

Introducing your new **MOTO**SLVR™ L72 GSM wireless phone. Here's a quick anatomy lesson.

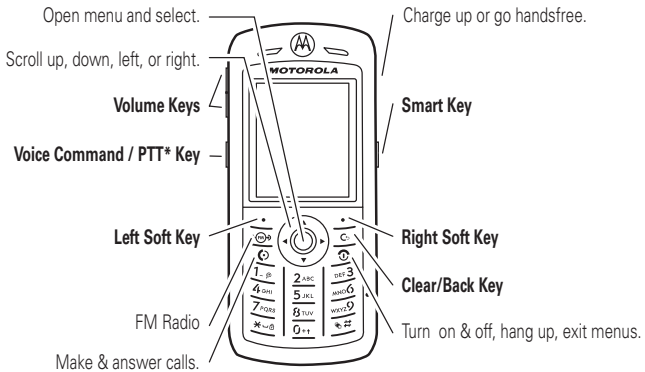


To change your **Keypad Lock** setting, see page 60.
For Push to Talk (PTT) details, see page 23.
* Indicates network or subscription-dependent features
Note: All the illustrations, simulated screen and related images used in this manual are for reference only. There may be slight difference between the handset and keys and content of display used in this manual and those of your handset. Please refer to your handset for actuality.

Home Screen

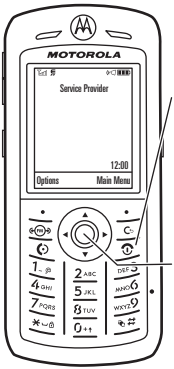

1. Press and hold the **Power Key** ⏻ for a few seconds or until the display lights up to turn on your phone.
2. Press the Center Key ·●· key to open the **Main Menu**.

Main Menu

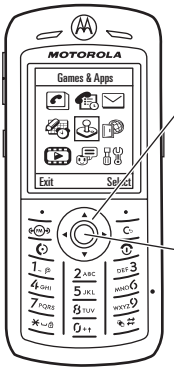

3. Press the Navigation Key **up, down, left, or right** ·○· to highlight a menu feature.
4. Press the Center Key ·●· to select it.

Note: All the illustrations, simulated screen and related images used in this manual are for reference only. There may be slight difference between the handset and keys and content of display used in this manual and those of your handset. Please refer to your handset for actuality. The display of the softkeys may be different if you subscribe SCREEN3™ service. SCREEN3™ is a subscription-dependent feature and is not available in all regions. Please contact your service provider for more details. After activating SCREEN3™, you may not be able to use ·●· to open the main menu. Please use the right soft key Main Menu to open it.

Mobile Devices Business
(852)2506-3888 (Hong Kong)
www.motorola.com.hk (Hong Kong)
MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. All other product or service names are the property of their respective owners.
© Motorola, Inc. 2007.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

While Products specifications and features may be subject to change without notice, we are making every possible effort to ensure that user manuals are updated on a regular basis to reflect product functionality revisions. However, in the unlikely event that your manual version does not fully reflect the core functionality of your product, please let us know. You may also be able to access up-to-date versions of our manuals from our Motorola web site, at http://www.motorola.com.hk.

Certain mobile phone features are dependent on the capabilities and settings of your service providerís network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature is functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

Manual Number:6887460Z60

contents

menu map 6
Safety Information . . 8
Use and Care 13
EU Conformance . . . 14
Recycling Information 15
essentials 16
about this guide . . . 16
SIM card 16
battery 17
turn it on & off 20
make a call 20
answer a call 20
store a phone number 21
call a stored phone number 22
your phone number 22
main attractions . . 23
push to talk (PTT)* 23
Bluetooth™ wireless 30
digital audio player 33
stereo FM radio . . 36
photos 38
videos 41
text messages . . . 43
memory card 45
cable connections 47
phone updates . . . 49
basics 50
display 50
text entry 53
volume 57
navigation key . . . 58
smart key 58
handsfree speaker 58
codes & passwords 58
lock & unlock phone 59
lock & unlock keypad 60
customize 61
airplane mode . . . 61
ring style 61
time & date 62
wallpaper 64
screen saver 64
display appearance 65

answer options . . . 65
calls 66
turn off a call alert . 66
delay answering . . 66
recent calls 66
redial 69
return a call 69
caller ID 69
emergency calls . . 70
voicemail 70
other features 72
advanced calling . . 72
phonebook 75
messages 81
personalizing 86
call times & costs . 88
handsfree 89
data calls 90
network 92
personal organizer . 92
security 95
fun & games 96
MyMobileSoft.com 99
SAR Data 101
WHO Information . 102
GNU General Public License. 103
index 104

Note: The functions available on this handset may vary in different regions and nations. Please contact your local customer service centres, agencies or retailers if you have any question about the handset functions. Motorola reserves all rights to revise and change this user's manual without obligation to notify any person of such revisions or changes

* Indicates network or subscription-dependent features

menu map

main menu

Messages
- New Message
- Message Inbox
- Outbox
- Drafts
- Email Msgs
- Browser Msgs
- Templates

Recent Calls
- (press the * or # to scroll through the call lists)

Phonebook

Multimedia
- Radio
- Voice Record
- Camera
- Video Camera
- Pictures
- Sounds
- Videos

Games & Apps

Web Access *
- Browser
- Bookmarks
- Stored Pages
- History
- Go To Page
- Browser Setup
- Web Sessions *

Tools
- SIM Applications *
- Calculator
- Datebook
- Alarm Clock
- Dialing Services
  - Fixed Dial *
  - Voice Dial
  - Service Dial*
- Activation List *
- World Clock

Bluetooth™ Link
- Find Me
- [Add Audio Device]
- Setup

Settings
- (see next page)

* optional features

* Indicates network or subscription-dependent features

Motorola reserves the rights for amending the features listed here without prior notice.

The above gives an example of a typical Product Approval Number.

Tip: Press C to exit the current menu, or ⏻ to exit all menus.

settings menu

Personalize
- Home Screen
- Main Menu
- Voice Dial Setup*
- Skin
- Greeting
- Wallpaper
- Screen Saver

Ring Styles
- Style
- *(style)* Detail

Connection
- Bluetooth Link
- USB Settings
- MOTOSYNC

Call Divert *
- Voice Calls
- Cancel All
- Divert Status

In-Call Setup
- In-Call Timer
- My Caller ID
- Answer Options
- Call Waiting

Initial Setup
- Time and Date
- Speed Dial
- Auto Redial
- Display Timeout
- Backlight
- Scroll
- Text Marquee
- Language
- Brightness
- DTMF
- Master Reset
- Master Clear

Phone Status
- My Tel. Numbers
- Battery Meter
- Download Location
- Storage Devices
- Software Update *
- Other Information

Headset
- Auto Answer
- Voice Dial

Car Settings
- Auto Answer
- Auto Handsfree
- Power-Off Delay
- Charger Time

* optional features

Airplane Mode
- Airplane Mode
- Prompt at Power Up

Network
- New Network
- Network Setup
- Available Networks
- My Network List *
- Service Tone *
- Network Jingle *
- Call Drop Tone

Security
- Phone Lock
- Keypad Lock
- Lock PTT Key *
- Lock Application
- Fixed Dial *
- Restrict Calls *
- Call Barring*
- SIM PIN
- New Passwords
- Certificate Mgmt *

PTT Settings *
- PTT Service

Java™ Settings
- Java App Loader
- Java System
- Delete All Apps
- App Vibration
- App Volume

Safety and General Information

This section contains important information on the safe and efficient operation of your mobile device. Read this information before using your mobile device.*

Exposure to Radio Frequency (RF) Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

Your Motorola mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

For optimal mobile device performance and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions.

External Antenna Care

If your mobile device has an external antenna, use only a Motorola-supplied or approved replacement antenna. Use of unauthorized antennas, modifications, or attachments could damage the mobile device and/or may result in your device not complying with local regulatory requirements in your country.

DO NOT hold the external antenna when the mobile device is IN USE. Holding the external antenna affects call quality and may cause the mobile device to operate at a higher power level than needed.

Product Operation

When placing or receiving a phone call, hold your mobile device just like you would a landline phone.

* The information provided in this document supersedes the general safety information in user's guides published prior to May 1, 2006.

If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case, or body harness. If you do not use a body-worn accessory supplied or approved by Motorola, keep the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body when transmitting.

When using any data feature of the mobile device, with or without an accessory cable, position the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body.

Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at: `www.motorola.com`.

RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your mobile device may cause interference with other devices.

Follow Instructions to Avoid Interference Problems

Turn off your mobile device in any location where posted notices instruct you to do so. These locations include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

Pacemakers

If you have a pacemaker, consult your physician before using this device.

Persons with pacemakers should observe the following precautions:

- ALWAYS keep the mobile device more than 20 centimeters (8 inches) from your pacemaker when the mobile device is turned ON.
- DO NOT carry the mobile device in the breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.

- Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some mobile devices may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer or physician to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult your physician or the manufacturer of your device to determine if it is adequately shielded from RF energy.

Driving Precautions

Check the laws and regulations on the use of mobile devices in the area where you drive. Always obey them.

When using your mobile device while driving, please:

- Give full attention to driving and to the road. Using a mobile device may be distracting. Discontinue a call if you can't concentrate on driving.
- Use handsfree operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Responsible driving practices can be found at the Motorola Web site: www.motorola.com/callsmart.

Operational Warnings

Obey all posted signs when using mobile devices in public areas, such as health care facilities or blasting areas.

Automobile Air Bags

Do not place a mobile device in the air bag deployment area.

Potentially Explosive Atmospheres

Areas with potentially explosive atmospheres are often but not always posted, and can include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

When you are in such an area, turn off your mobile device, and do not remove, install, or charge batteries. In such areas, sparks can occur and cause an explosion or fire.

Damaged Products

If your mobile device or battery has been submerged in water, punctured, or subjected to a severe fall, do not use it until you take it to a Motorola Authorized Service Center. Do

not attempt to dry it with an external heat source, such as a microwave oven.

Batteries and Chargers

If jewelry, keys, beaded chains, or other conductive materials touch exposed battery terminals, this could complete an electrical circuit (short circuit), become very hot, and could cause damage or injury. Be careful when handling a charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects. **Use only Motorola Original batteries and chargers.**

Caution: To avoid risk of personal injury, do not dispose of your battery in a fire.

Your battery, charger, or mobile device may contain symbols, defined as follows:

Symbol	Definition
	Important safety information follows.
	Do not dispose of your battery or mobile device in a fire.
	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Do not throw your battery or mobile device in the trash.
	Your mobile device contains an internal lithium ion battery.
	Do not let your battery, charger, or mobile device get wet.
	Listening at full volume to music or voice through a headset may damage your hearing.

Choking Hazards

Your mobile device or its accessories may include detachable parts, which may present a choking hazard to small children. Keep your mobile device and its accessories away from small children.

Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service center.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing video games. These may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your physician before playing video games or enabling a flashing-lights feature (if available) on your mobile device.

Discontinue use and consult a physician if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break every hour, and stop use if you are very tired.

Caution About High Volume Usage



Listening at full volume to music or voice through a headset may damage your hearing.

Repetitive Motion

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a physician.

Use and Care

To care for your Motorola phone, please keep it away from:



liquids of any kind

Don't expose your phone to water, rain, extreme humidity, sweat, or other moisture.



extreme heat or cold

Avoid temperatures below -10°C/14°F or above 45°C/113°F.



microwaves

Don't try to dry your phone in a microwave oven.



dust and dirt

Don't expose your phone to dust, dirt, sand, food, or other inappropriate materials.



cleaning solutions

To clean your phone, use only a dry soft cloth. Don't use alcohol or other cleaning solutions.



the ground


Don't drop your phone.

European Union Directives Conformance Statement

CE

Hereby, Motorola declares that this product is in compliance with

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

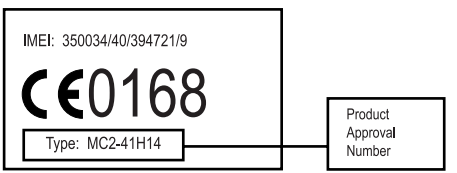

The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at `www.motorola.com/rtte`. To find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the web site.

Caring for the Environment by Recycling



This symbol on a Motorola product means the product should not be disposed of with household waste.

Disposal of your Mobile Telephone and Accessories

Please do not dispose of mobile telephones or electrical accessories, such as chargers or headsets, with your household waste. In some countries or regions, collection systems have been set up to handle waste electrical and electronic items. Please contact your regional authorities for more details. If no suitable scheme exists, you may return unwanted mobile telephones and electrical accessories to any Motorola Approved Service Centre in your region.

essentials

about this guide

This guide shows how to open a menu feature as follows:

Find it: ·●· > ✉ Messages > New Message

This means that, from the home screen:

1. Press the *center key* ·●· to open the menu.
2. Press the *navigation key* ·○· to scroll to ✉ **Messages**, and press the *center key* ·●· to select it.
3. Press the navigation key ·○· to scroll to **New Message**, and press the center key ·●· to select it.

symbols	
	This means a feature is network, SIM card, or subscription dependent and may not be available in all areas. Contact your service provider for more information.
	This means a feature requires an optional accessory.


SIM card

Caution: Don't bend or scratch your SIM card. Keep it away from static electricity, water, and dirt.

Your *Subscriber Identity Module* (SIM) card contains personal information like

your phone number and phonebook entries.


Turn off your phone and remove your battery before you install or remove a SIM card.

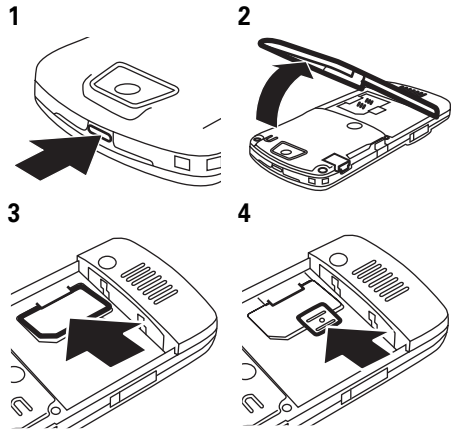


To insert and use a **memory card**, see page 45.

battery

battery installation

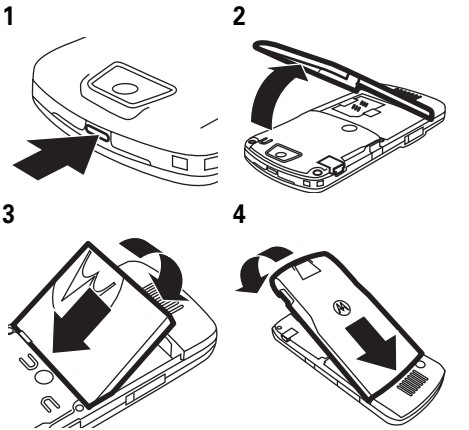

battery charging

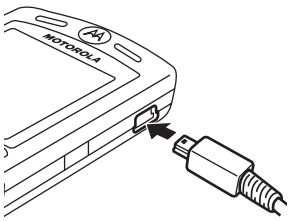

New batteries are not fully charged. Plug the battery charger into your phone and an electrical outlet. Your phone might take several seconds to start charging the battery. When finished, your display shows **Charge Complete**.

Tip: Relax, you can't overcharge your battery. It will perform best after you fully charge and discharge it a few times.

You can charge your battery by connecting a **cable** from your phone's mini-USB port to a USB port on a computer. Both your phone and the computer must be turned on, and your computer must have the correct software drivers installed. Cables and software drivers are available in Motorola Original data kits, sold separately.

If your battery is completely dead and you plug in a **cable** to charge it, your keypad and display might not light up. Your battery will still charge.

battery tips

Battery life depends on the network, signal strength, temperature, features, and accessories you use.

- Always use Motorola Original batteries and chargers. The warranty does not cover damage

caused by non-Motorola batteries and/or chargers.

- New batteries or batteries stored for a long time may take more time to charge.
- When charging your battery, keep it near room temperature.

  When storing your battery, keep it uncharged in a cool, dark, dry place.
- Never expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.



Contact your local recycling center for proper battery disposal.


Warning: Never dispose of batteries in a fire because they may explode.

Before using your phone, read the battery safety information in the "Safety and General Information" section included in this guide.

turn it on & off

Caution: Some phones ask for your SIM card PIN code when you turn them on. If you enter an incorrect PIN code three times before the correct code, your SIM card is disabled, and your display shows **SIM Blocked**. Contact your service provider.

To turn on your phone, press and hold ⏻ for a few seconds or until the keypad or display lights up. If prompted, enter your eight-digit SIM card PIN code and/or four-digit unlock code.

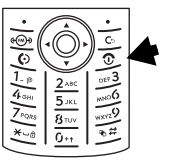

To turn off your phone, press and hold ⏻ for a few seconds.

make a call

To make a call, enter a phone number and press ⏻. **To "hang up,"** press ⏻.

answer a call

To answer a call when your phone rings and/or vibrates, press ⏻. **To "hang up,"** press ⏻.

Note: Your phone cannot receive data over an EDGE network while it is playing videos or some sound files. The EDGE status indicator appears at the top of your display when you can receive data over an EDGE network.

store a phone number

You can store a phone number in your **Phonebook**:

Find it: > **Phonebook**, then press **Options** > **Create New** > **Phone Contact** or **SIM Contact**

Note: You can store new contacts in your **phone's memory** or on your **SIM card**. Contacts on the SIM card only have a **Name** and **Number**.

1. Enter a name and other details for the phone number. To select a highlighted item, press the *center key* .
2. Press the **Done** key to store the number.

To **edit** or **delete** a **Phonebook** entry, see page 77.

To store an **email** address from the home screen, follow the steps above and enter the new contact's name and **Email** information.

Shortcut: Enter a phone number in the home screen, then press the **Store** key to create a contact. To choose whether your phone stores these contacts in your phone's memory or on your SIM card, go back to the home screen and press > **Phonebook**, then press **Options** > **Setup** > **Default Storage** > **Phone** or **SIM Card**.

call a stored phone number

Find it: ⊕ > Phonebook

1 Scroll to the phonebook entry.

Shortcut: In the phonebook, press keypad keys to enter the first letters of an entry you want.

2 Press ⊙ to call the entry.

Note: You can show contacts stored in your phone's memory or on your SIM card. To choose which contacts you see, press ⊕ > Phonebook, then press Options > View. You can select Phone & SIM Card, SIM Card, or Phone Contacts.

your phone number

From the home screen, press *the clear key* C then # to see your number.

Tip: Want to see your phone number while you're on a call? Press Options > My Tel. Number.

You can edit the name and phone number stored on your SIM card. From the home screen, press C #, select an entry, press the View key, press the Options key, and select Edit. If you don't know your phone number, contact your service provider.

main attractions

You can do much more with your phone than make and receive calls!

push to talk (PTT)*

Push to Talk (PTT) lets you talk walkie-talkie style with other PTT subscribers. You can talk to one person or a group.

PTT and the other related features indicated are network and subscription dependent features, and are not available in all areas. PTT connectivity requires PTT-compatible phones.

Note: When PTT service is activated, Voice Command Key will change to PTT Key. To lock your PTT key or turn PTT on or off, see page 28.

* Indicates network or subscription-dependent features

make a PTT call

When appears at the top of your home screen, you can make and receive PTT calls. To make a PTT call:

1. Enter a PTT subscriber's phone number in your home screen, or select a contact or group from a list:
   - **PTT Contacts** (press the PTT key to open the list)

     Note: If you change your **Open To** setting, your PTT key does not

open the contacts list (see page 28).

- **PTT Quick Group** (press the PTT key and **Options** > **Quick Group**) This lets you select more than one contact for the call.
- **PTT Groups** (press the PTT key and **Options** > **Go To Groups**)

2 Hold the PTT key and speak after you hear the tone. Release the PTT key to let others speak.

To speak during a PTT call, hold your PTT key and speak after the tone. Only one person can speak at a time.

To end the call, press ⏻. If nobody speaks for 20 seconds, the call ends (actual timing varies between PTT servers).

To send a PTT alert instead of a standard PTT call, scroll to a PTT contact in **PTT Contacts** and press the **Alert** key. The contact's phone rings or vibrates, and the contact can speak first. If the contact does not respond, the call ends. You cannot send alerts to groups.

answer a PTT call

Note: Your phone cannot receive PTT calls while it is recording videos, and may not receive PTT calls while it is playing videos or some sound files. The PTT indicator appears at the top of your display when you can receive PTT calls.

When you receive a PTT call, you hear a tone or alert followed by conversation from the caller.

- **To speak** when the caller stops speaking, hold your PTT key and speak after the tone. Only one person can speak at a time.
- **To end the call**, press ⏻.

If you change your **My Answer Mode** setting to **Manual**, your phone does not automatically answer as described (see page 28).

When you receive a PTT alert, press the PTT key and speak after the tone. You can also press the **Ignore** key to cancel the call.

Your display shows **Missed Call** if you miss a PTT alert. It does not show **Missed Call** when you miss a standard PTT call unless you set **My Answer Mode** to **Manual** (see page 28).

send a picture with push to view (PTV)

You can send a picture during a PTT call, or you can open a picture and start a PTT call to send it.

Note: You cannot send pictures in group calls or while someone is speaking. You can send pictures only to phones with push to view (PTV) capability.

To send a picture during a PTT call, press **Options**, then select **Camera** to capture a new picture or **Pictures** to send a stored picture.

To send a stored picture, press ⊕ > **Multimedia** > **Pictures**, scroll to the picture, and press the PTT key.

To take a photo and send it, press ⊕ > Multimedia > Camera, Capture the photo, and press the PTT key.

Your phone plays a tone when the picture transfer completes. To speak after the picture transfers, hold the PTT key and speak after the tone.


PTT contacts and groups

You can store PTT Contacts to make one-to-one calls, or you can store PTT Groups to make group calls.

To store a contact, press **PTT key**, then Options > Add New Contact. Enter the contact's Name and phone number (No.), then press the Done key. Your network stores the contact and your phone returns to the PTT Contacts list with the new contact shown.

To create a group of contacts that you can call at the same time, press **PTT key**, then Options > Go To Groups, then Options > Add New Group. Enter the group's Name and select the Members, then press the Done key. Your network stores the group and your phone returns to the PTT Groups list with the new group shown.

To see PTT contacts, press the PTT key. Scroll to a contact and press **Options** to **View**, **Edit**, or **Delete** it.

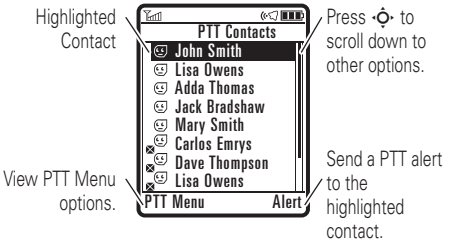

To see PTT groups, press the PTT key and **Options** > **Go To Groups**. Scroll to a group and press **Options** to **View** or **Delete** it. You cannot edit a group, but you can delete it and create a new one with the members you want.

Icons in the PTT contact and group lists indicate if someone is online, or offline. They also tell you if a contact is blocked.

To **block** a contact, scroll to the contact and press **Options** > **Edit** > **Block Mode** > **On**. To unblock the contact, scroll to it and press the **Unblock** key.

To set an **online alert** to tell you when a contact comes online, scroll to the contact and press **Options** > **Enable Online Alert**. You can turn online alert tones on or off in your **PTT Setup** menu (see page 28).

To refresh the contact or group list from your network, press **Options** > **Refresh List**.

To see only your frequently used contacts or groups, press **Options** > **Frequently Used**.

PTT settings

To **turn PTT on or off** from your home screen, press ⊕ > Settings > PTT Settings > PTT Service > On/Off.

To prevent accidental PTT calls, you can **lock your PTT key** and keypad. To lock your keypad, long press the * key. To unlock your keypad press Unlock > *.If you do not press the PTT key within a minute of unlocking it, it re-locks.

You can change your PTT menu and call preferences.

Find it: Press **PTT key**. In the PTT Menu, select PTT Setup > Personalize

options	
Open To	From the home screen, the PTT key can open the PTT menu (**PTT Menu**), or your contacts list sorted by name (**Contacts**), or most recent call (**Last Contact Call**).
Sort by	Sort your contacts and groups by **Name**, online **Status**, or call **Frequency**.
My Answer Mode	Set the mode for incoming PTT calls to **Manual** (press the PTT key to answer), **Auto-Accept** (standard mode that accepts all calls), or **Do Not Disturb** (accepts no calls).

options	
Tone Volume	Set the volume for the tone you hear when it is your turn to speak.
PTT Speaker	Turn the speakerphone **On** or **Off** for PTT calls.
Set Online Alert Tone	You can set an online alert to tell you when a contact or group comes online (scroll to the entry in your **PTT Contacts** or **PTT Groups** and press **Options** > **Enable Online Alert**). This setting tells your phone whether to play these alert tones (**On**) or not (**Off**).

options	
PTT Button Lock	Lock your PTT key to avoid making accidental PTT calls. If this is **On**, your PTT key locks when your keypad is locked, or when you do not press it within one minute of unlocking it. If this is **Off**, your PTT key is unlocked all the time.

Bluetooth™ wireless

Your phone supports Bluetooth wireless connections. You can connect your phone with a Bluetooth headset or car kit to make handsfree calls. You can also connect your phone with a phone or computer that supports Bluetooth connections to exchange files.

Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

For maximum Bluetooth security, you should always connect Bluetooth devices in a safe, private environment.

use a headset or handsfree car kit

Before you try to connect your phone with a handsfree device, make sure the device is **on** and **ready** in *pairing* or *bonding* mode (see the user's guide for the device). You can connect your phone with only one device at a time.

Find it: ·◆· > Bluetooth Link > Audio Devices > [Add Audio Device]



Your phone lists the devices it finds within range.

1 Scroll to a device in the list and press the *center key* ·◆·.

2 Press the **Yes** or **OK** key to connect to the device.

3 If necessary, enter the device passkey (such as **0000**) and press the **OK** key.

When your phone is connected, the Bluetooth indicator appears in the home screen.

Shortcut: When your phone's Bluetooth power is on, your phone can automatically connect to a handsfree device you have used before. Just turn on the device, or move it near the phone. If the device doesn't connect, turn it off and back on.

Tip: Want to know more about your headset or car kit? For specific information about a device, refer to the instructions that came with it.

copy files to another device

You can copy a media file, phonebook entry, datebook event, or Web shortcut from your phone to a computer or other device.

Note: You can't copy some copyrighted objects.

1 On your phone, scroll to the object that you want to copy to the other device.

2 Press **Options**, then select:

- **Manage** > **Copy** for media files.
- **Send Contact** for phonebook entries.
- **Send** for datebook events.

3 Select a recognized device name, or **[Look For Devices]** to search for the device where you want to copy the file.

If your phone could not copy the file to the other device, make sure the device is **on** and **ready** in *discoverable* mode (see the user's guide for the device). Also, make sure the device is not busy with another similar Bluetooth connection.

Note: Once you connect your phone to a Bluetooth device, that device can start similar Bluetooth connections with your phone. Your display shows the Bluetooth indicator ✱ at the top when there is a Bluetooth connection.

receive files from another device

If you do not see the Bluetooth indicator ✱ at the top of your phone display, turn on your phone's Bluetooth feature by pressing ⊕ > ✱ Bluetooth Link > Setup > Power > On.

1 Place your phone near the device, and send the file from the device.

If your phone and the sending device don't recognize each other, place your phone in discoverable mode so the sending device can locate it: press ⊕ > ✱ Bluetooth Link > Find Me.

2 Press the Accept key on your phone to accept the file from the other device.

Your phone notifies you when file transfer is complete. If necessary, press the Store key to save the file.

send files to a printer

You can use a Bluetooth connection to send a picture, message, phonebook entry, or datebook event from your phone to a printer.

Note: You cannot print message **Templates** or a phonebook **Mailing List**.

1. On your phone, scroll to the object that you want to print, then press **Options** > **Print**.

   Tip: If you see it, you can print it. After you capture a picture in the camera, you can press the **Store** key and select **Print and Store**.

2. If available, choose additional objects or print options.

3. Select a recognized printer name listed in the **Printers** menu, or **[Look For Devices]** to search for the printer where you want to print the object.

   Note: If you see **Service Not Supported** when you try to print, select **Options** > **Manage**> **Copy** > **Bluetooth** instead. Always use this option to print 4x6 photos.

digital audio player

Your phone can play and store MP3 and AAC song files. You can use a removable memory card with your phone to store more songs (see page 45).

Note: You cannot use the audio player with a USB cable connected to your phone.

Find it: > **Games & Apps** > **Digital Audio Player**

Press ·◌· up or down to scroll to an option, and press the *center key* ·●· to select it:

options	
Playlists	Create or play a playlist (see page 35).
Songs	Show and play individual songs. **Note:** All of your phone's songs appear in the **Songs** list. Some songs do not have any **Artist**, **Album**, or **Genre** information stored, so they don't appear in those lists.
Albums	Select an album to show or play its songs.
Artists	Select an artist to show or play their songs.
Genres	Select a type of music to show or play songs.

options	
About	Show audio player version information.

When you select a song, press the *center key* ·●· for play ▶, press ·◌· left for previous ⏮, or press ·◌· right for next ⏭. To pause the song, press the **Pause** key.

Note: To change repeat 🔁, shuffle 🔀, and other settings, press the **Options** key.

Use the volume keys on the left side of your phone to control volume.

Your phone also has a **Sounds** player that can play songs and ring tones, but it cannot store **Artists** or other song information. To use the **Sounds** player,

press > Multimedia > Sounds and select the file you want to play.

load music files

To download songs to your phone, see page 97. To copy files between your phone and a computer, see page 48.

Note: Your phone may not play audio files that have a bit rate higher than 128 kbps. If you try to download or play one of these files, your phone might show you an error or ask you to delete the file. Metadata information is **not** supported for **MP4** formatted files.

create a playlist

Find it: > Games & Apps > Digital Audio Player > Playlists > New Playlist

1 Enter a name for the play list.

2 Press the **Done** key. Your display shows a list of song titles.

3 Press the *center key* to select songs for the playlist.

4 Press the **Done** key to store the list. Your display shows the songs in the playlist.

To reorder the songs in this list: Press > **Options** > **Reorder Playlists**. Press the *center key* to select a song, then press to move it up or down in the order. When you have it in the right spot, press again.

5 Press the **Done** key to store the list.


To hear your playlist, highlight it under **Playlists** and press **Options** > **Play**.

stereo FM radio

You can use your phone to listen to FM radio stations. You can listen to the radio through the Motorola Original EMU stereo headset included with your phone, or through the phone's handsfree speaker.

Note: You must plug the stereo headset into the mini-USB port on your phone to use the FM radio. The headset acts as a radio antenna to receive radio signals. You can't listen to the radio over a Bluetooth wireless headset.

Find it: > Multimedia > Radio

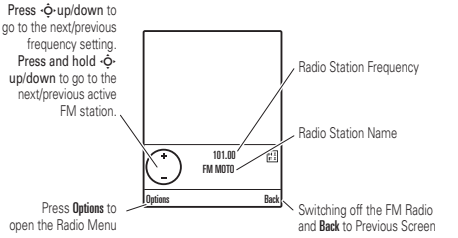

The radio shows current song information at the top of the display, if the information is broadcast by the radio station.

To **store a preset** station, press and hold a number key. This will assign the number to the current tuned station.

To **change a preset** station, press a number key representing the station you want.

Or

Press **Options** > **Station presets**, scroll to the number you want to change, then press **Options**. You can change the station, rename it, delete it, or reorder the preset list.

To **go to the next preset** station, press #. If the radio is currently playing a non-preset station, the radio goes to the first preset station.

Press **Options** > **Hide** to hide the radio and go to the *home screen*. The radio continues to play. When the radio is hidden, press **FM Radio** or ‹◆› > **Multimedia** > **Radio** to return to the radio display.

From the radio display, press **Options** to open the **Radio Menu**. The menu can include the following options.

options	
Hide	The radio is hidden but still on.
Mute/Unmute	Mute or unmute the radio.
Use Speaker/Use Headset	Switch sound to your phone speaker, or to the attached headset. **Shortcut:** Press * to switch between the speaker and headset in the radio display.
Scan	Briefly hear each station your phone can receive. Press **Stop** to stop the scan. Manual FM tuning will be at 50kHz.

options	
Scan Presets	Briefly hear each stored preset station. Press **Stop** to stop the scan.
Station Presets	See the list of preset stations.


To turn off the radio, press ⊙ or **Back** in the radio display.

photos

take & store or send photos

Your camera lens is on the back of your phone. **To get the clearest pictures, wipe the lens clean with a dry cloth before you take a picture.**

1 Press ⊙ > **Multimedia** > **Camera** to see the camera viewfinder.

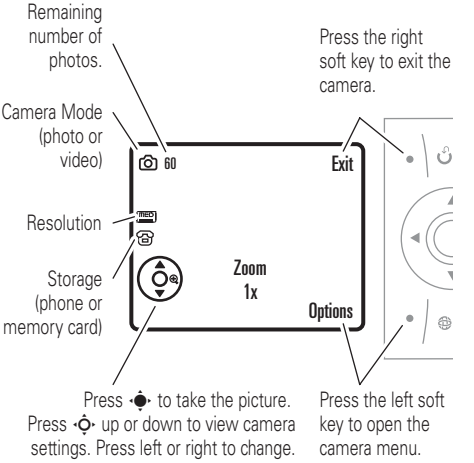

Note: Adjusting the exposure affects the brightness of both the

viewfinder display and the captured photo.

Note: To change from portrait mode to landscape mode, press 0 or select the **Options** key.

2 Press the *center key* ⊕ to take the photo in the viewfinder. You can:

- Press the **Options** key to store the photo.

  If you press **Options** > **Print**, you can print the picture over a Bluetooth™ connection (see page 33).

- Press the **Send** key to send the photo in a message.

  Your phone might tell you that this is a **Multimedia Msg**, since it has a picture in it. Some other phones or networks do not support picture messages. Press the **Yes** key to send the message.

- Press C to discard the photo and return to the active viewfinder.

Before you capture the photo, you can press **Options** to open the camera menu:

options	
Go To Pictures	See stored pictures and photos.
Go To Video Mode	Switch to the video camera.
Auto-Timed Capture	Set a timer for the camera to take a photo.
Switch to Portrait / Landscape	Change from portrait mode to landscape mode.
Camera Setup	Open the setup menu to adjust photo settings.

options	
Switch Storage Device	Choose to store pictures on your phone or a memory card.
Free Space	See how much memory remains. **Note:** Your service provider may store some content in user memory before you receive the phone.

see stored photos

Find it: ⊕ > Multimedia > Pictures > *picture name*

- To **delete** a picture, scroll to it in the list and press Options > Manage > Delete.
- To **edit** a picture, scroll to it and press Options > Edit. You can choose settings such as Brightness and Contrast, or effects such as Blur and Mirror. You cannot edit some copyrighted files.
- To **copy or move** a picture from your memory card (▯) to your phone memory (☎), scroll to it in the list and press Options > Manage > Copy or Move > Memory Card. You cannot copy or move some copyrighted files.

Tip: After you open a picture, you can press Options > View Full Screen to see the picture at the full display size (press any key to return to the regular view).

send a stored photo in a message

Find it: ⊕ > ✉ **Messages** > **New Message** > **New Message**, then press **Options** > **Insert** > **Picture**



1 Scroll to the picture you want and press **Insert**.

2 Enter the message text and press **Send To**.

3 Scroll to a recipient address and press the *center key* ⊕.

4 Press the **Send** key to send the message.




Your phone might tell you that this is a **Multimedia Msg**, since it has a picture in it. Some other phones or networks do not support picture messages. Press the **Yes** key to send the message.

videos

record video clips

Your camera lens is on the back of your phone. **To get the clearest videos, wipe the lens clean with a dry cloth before you capture a video.**

Press ·◆· > Multimedia > Video Camera to see the video viewfinder.

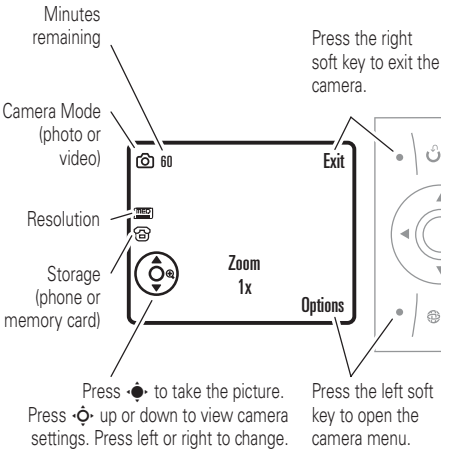

Note: The number of minutes remaining is an estimate.

Tip: If you want to send your video in a message, the video length must be set to MMS. To set length, press Options > Video Camera Setup > Video Length.

1 Press the *center key* ·◆· to start recording the video in the viewfinder.

2 Press the Stop key to stop recording the video. You can:

- Press the Options key to preview, store, or discard the video.
- Press the Send key, then select Send in Message to send the video in a message.

  Enter text and press Send To, then scroll to a recipient address and press the *center key* ·◆· to select it. Press the Options key to enter a

new number. To send the message, press the **Send** key.

Note: Some other phones or networks do not support messages with videos.

- Press C to discard the video and return to the active viewfinder.

play stored video clips

Find it: > Multimedia > Videos > *video name*

- To **delete** a file, scroll to it in the list and press **Options** > **Manage** > **Delete**.
- To **copy or move** a file from your memory card ( ) to your phone memory ( ), scroll to it in the list and press **Options** > **Manage** > **Copy** or **Move** > **Memory Card**. You cannot copy or move some copyrighted files.

Tip: While a video is playing, you can press **Options** > **Play Full Screen** to see the video at the full display size (press any key to return to the regular view).

text messages

To create a group mailing list, see page 80. For more message features, see page 81.

send a text message

A text message can contain text and pictures, sounds, or other media objects. You can add multiple pages to a message, and you can put text and media objects on each page. You can send a message to other

compatible phones or to email addresses.

Find it: ·◆· > ✉ Messages > New Message > New Message

1 Press keypad keys to enter text on the page (for details about text entry, see page 53).

To insert a **picture, sound, or other object** on the page, press Options > Insert. Select the file type and the file.

To insert **another page** in the message, enter text or objects on the current page and press Options > Insert > New Page. You can enter more text and objects on the new page.

2 When you finish the message, press the Send To key.

3 Scroll to a recipient and press the *center key* ·◆·. Repeat to add other recipients.

To enter a **new** number or email address, press the Options key and select Enter Number or Enter Email.

4 Before you send a message, you can press Options to choose Save to Drafts, Cancel Message, or open Sending Options (such as message Subject or CC addresses).

5 To **send** the message, press the Send key.

Your phone might tell you that this is a Multimedia Msg, if it has multiple pages or media objects in it. Some other phones or networks do not support multimedia messages. Press the Yes key to send the message.

receive a text message



When you receive a message, your phone plays an alert, and the display shows **New Message** with a message indicator, such as ✉. Press the **Read** key to open the message.

To see all of your text messages:

Find it: ⊕ > ✉ **Messages** > **Message Inbox**

If a multimedia message contains media objects:

- Photos, pictures, and animations show as you read the message.
- A sound file plays when its slide shows. Use the volume keys to adjust the sound volume.
- Attached files are added to the end of the message. To open an attachment, scroll to the file indicator/filename and press the **View** key (image), **Play** key (sound), or **Open** key (phonebook vCard, datebook vCalendar entry, or unknown file type).

memory card




You can use a removable memory card with your phone to store and retrieve multimedia objects (such as photos and sounds).

Your phone supports memory cards up to 2GB.

Note: If you download a copyrighted file and store it on your memory card, you can use the file only while your memory card is inserted in your phone. You cannot send, copy, or change copyrighted files.

install or remove a memory card

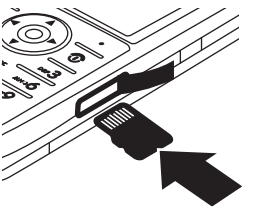

Press the card in until it clicks into place.

To remove the memory card, push it in until it clicks again. It begins to slide out, and you can slide it the rest of the way out.

Do not remove your memory card while your phone is using it or writing files on it.

see and change memory card information

To **see the files** stored on your memory card and on your phone, open a file list, such as **Pictures** (see page 40). Icons can indicate if a file is stored in your phone memory ( ) or on your memory card ( ).To copy or move a file from your phone to your memory card, highlight it in the list and press **Options** > **Manage** > **Copy** or **Move** > **Memory Card**. You cannot copy or move some copyrighted files.

To **copy files** between your memory card and a computer, you can use a cable connection (see page 48) or a Bluetooth™ connection (see page 31).

To see your **memory card name, available memory,** and other information about the card:

Find it: > **Settings** > **Phone Status** > **Storage Devices**

1 Press to scroll to the memory card that is installed.


2 Press the *center key* ⊕ to see the memory card information. Your phone stores any content that you add, like ring tones or games, in *user memory*. Your service provider may store some content in user memory before you receive the phone.

or

Press **Options** to see the **Storage Device** menu, which lets you **Format** or **Rename** the memory card.

cable connections

Your phone has a mini-USB port so you can connect it to a computer to transfer data.

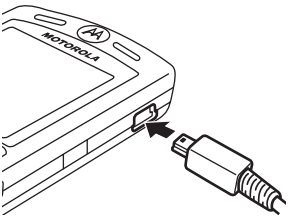

Note: Motorola Original™ USB data cables and supporting software are sold separately. Check your computer or hand-held device to determine the type of cable you need. To **transfer data** between your phone and computer, you might need to install the software included with the Motorola Original data kit. See the data

kit user's guide for more information. To make **data calls** through a connected computer, see page 90.

connect your memory card to a computer

You can use a cable connection to access your phone's memory card with a PC.

Note: When your phone is connected to a computer, you can only access the memory card through the computer.

On your phone:

Disconnect the cable from your phone, if it is connected, then press > Settings > Connection > USB Settings > Default Connection > Memory Card.

This directs the USB connection to your memory card.

Connect the cable to your phone and to an available USB port on your computer. Then follow these steps:

On your computer:

1. Open your "My Computer" window, where your phone's memory card appears as a "Removable Disk" icon.
2. Click on the "Removable Disk" icon to access the files on your phone's memory card.
3. To store the desired files onto the memory card, drag and drop them as follows:
   audio files: > mobile > audio
   screen savers: > mobile > picture
   wallpapers: > mobile > picture
   video clips: > mobile > video

4 When you finish, disconnect your phone by selecting the "Safely Remove Hardware" icon in the system tray at the bottom of your computer screen. Then disconnect the "USB Mass Storage Device."

5 Disconnect the cable from your phone and computer.

On your phone:

To return to **Data** as your USB default connection, press ⊕ > **Settings** > **Connection** > **USB Settings** > **Default Connection** > **Data Connection**.

phone updates

Sometimes we think of ways to make your phone's software faster or more efficient after you've purchased your phone. You can find out if your phone can be updated at: http://hellomoto.com/update


Note: Software updates do not affect your phonebook entries or other personal entries. If you receive a software update but choose to install it later, see page 92.

basics

See page 1 for a basic phone diagram.

display

The *home screen* appears when you turn on the phone.

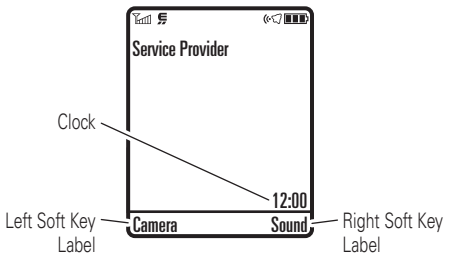

Note: Your home screen might look different from the one shown, depending on your service provider.

The display of the softkeys may be different if you subscribe to SCREEN3™. If you would like to subscribe to SCREEN3™ service, please contact your service provider.


To dial a number from the home screen, press number keys and ⦿.

Press ·✦· up, down, left, or right in the home screen to open basic menu features.

Press the *center key* ·✦· to open the menu. *Soft Key Labels* show the current soft key functions. For soft key locations, see page 1.

After activating SCREEN3™, you may not be able to use ⊕ to open the main menu. Please use the right soft key Main Menu to open it. You may not able to change the labels of the soft keys.

Status indicators can show at the top of the home screen:

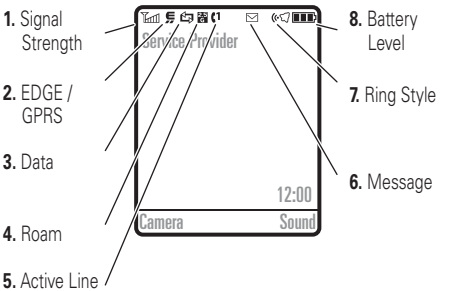

1 Signal Strength Indicator – Vertical bars show the strength of the network connection. You can't make or receive calls when 𝕋 or 𝕋⊘ appears.

Note: You will see 𝕋⊘ when AirPlane mode is on. For AirPlane mode details, see page 61.

2 EDGE/GPRS Indicator – Shows when your phone is using a high-speed *Enhanced Data for GSM Evolution* (EDGE) or *General Packet Radio Service* (GPRS) network connection. Indicators can include:

- GPRS PDP context active
- EDGE
- GPRS packet data available

3 Data Indicator – Shows connection status.



/	secure / unsecure packet data transfer
/	secure/unsecure application connection
/	secure/unsecure *Circuit Switch Data* (CSD) call
	Bluetooth™ connection is active

4 Roam Indicator – Shows ▲ when your phone is seeking or using a network outside your home network.



5 PTT / Active Line Indicator – Shows when you can make and receive PTT calls ( ) or both PTT calls and Instant Messages ( ). This also shows to indicate an active phone call, or to indicate when call forwarding is on. Indicators for dual-line-enabled SIM cards can include:



1 line 1 active	line 1 active, call forward on
2 line 2 active	line 2 active, call forward on

When a Java™ application is active, can show here.

If you set a reminder for a datebook event, can appear here.

6 Message Indicator – Shows when you receive a new message. Indicators can include:

text message voice message

voice & text message

7 Ring Style Indicator – Shows the ring style setting.

loud ring vibrate & ring


soft ring vibrate then ring

vibrate silent

8 Battery Level Indicator – Vertical bars show the battery charge level. Recharge the battery when your display shows **Low Battery**.

text entry

Some features let you enter text.

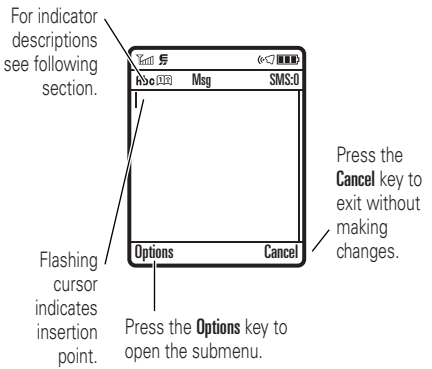

Press # in a text entry view to select an entry mode:

entry modes	
1 or **1**	Your **Primary** text entry mode can be set to any iTAP™ 1 or tap **1** mode.
2 or **2**	Your **Secondary** text entry mode can be set to any iTAP 2 or tap **2** mode, or set to **None** if you don't want a secondary entry mode.
123	**Numeric** mode enters numbers only.
@%	**Symbol** mode enters symbols only.

To set your primary and secondary text entry modes, press **Options** > **Text Setup** in a text entry view and select **Primary Text** or **Secondary Text**.

iTAP™ and tap mode tips

- Press 0 in a text entry view to change text case to all capital letters (**ABC**), no capitals (**abc**), or next letter capital (**Abc**).
- To enter numbers quickly, press and hold a number key to temporarily switch to numeric mode. Press the number keys to enter the numbers you want. Enter a space to change back to iTAP or Tap mode.
- Press 1 to enter punctuation or other characters.
- Press ·ö· to move the flashing cursor to enter or edit message text.


- Press C to delete the character to the left of the cursor. Hold C to delete the word.
- To cancel your message, press O.

iTAP™ mode

Press # in a text entry view to switch to iTAP mode. If you don't see 1 or 2, press **Options** > **Text Setup** to set iTAP mode as your primary or secondary text entry mode.

iTAP mode lets you enter words using one keypress per letter. The iTAP software combines your keypresses into common words and predicts each word as you enter it.

For example, if you press 7 7 6 4, your display shows:

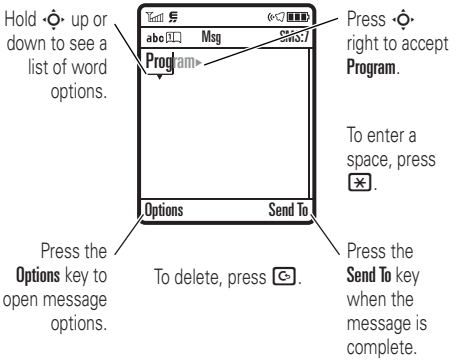

If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining letters.


Tip: Don't worry if you forget how iTAP works. In a text entry display, you can press **Options** > **Text Setup** > **Text Tutorial** to see an explanation.

tap and tap extended modes

Press # in a text entry view to switch to tap mode. If you don't see **Abc1** or **Abc2**, press **Options** > **Text Setup** to set tap mode as your primary or secondary text entry mode.

To enter text in **Tap** mode, press a keypad key repeatedly to cycle through the letters and number on the key. Repeat this step to enter each letter. The **Tap Extended** mode works the same way, but includes more special characters and symbols.

For example, if you press 7 one time, your display shows:

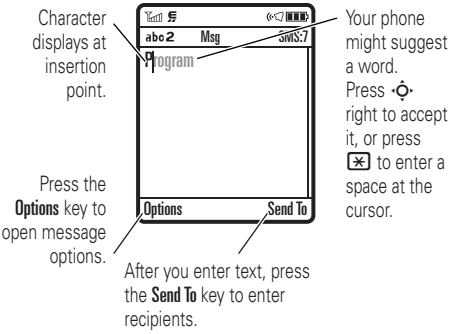

numeric mode

Press # in a text entry view until you see **123**. Press the number keys to enter the numbers you want.


Shortcut: You can press and hold a number key to temporarily switch to numeric mode from iTAP™ or Tap modes. Press the number keys to enter the numbers you want. Enter a space to change back to iTAP mode.

symbol mode

Press # in a text entry view until your display shows a list of symbols. Scroll to the symbol you want, then press the *center key* ⊕.

volume

Press the volume keys to:

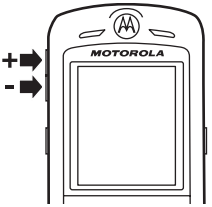

- turn off an incoming call alert
- change the earpiece volume during calls
- change the ringer volume from the home screen

  Tip: Sometimes silence really is golden. That's why you can quickly set your ringer to **Vibrate** or **Silent** by holding the down volume key while you are in the home screen. You can also switch to **Vibrate** or back by holding # in the home screen.

navigation key



Press the *navigation key* up, down, left, or right to scroll to items in the display. When you scroll to an item, press the *center key* to select it.

smart key

The smart key gives you another way to do things. For example, when you scroll to a menu item, you can press the smart key to select it (instead of pressing the *center key*). The smart key usually does the same thing as pressing the *center key*. To find the smart key, see page 1. To change what the smart key does in the home screen, see page 87.

handsfree speaker

You can use your phone's handsfree speaker to make calls without holding the phone to your ear.

To turn the handsfree speaker on during a call, press the **Speaker** key (if available), or **Options** > **Spkrphone On**. Your display shows **Spkrphone On** until you turn it off or end the call.

Note: The handsfree speaker won't work when your phone is connected to a handsfree car kit or headset.

codes & passwords

Your phone's four-digit **unlock code** is originally set to **1234**. The six-digit **security code** is originally set to **000000**. If your service provider didn't

change these codes, you should change them:

Find it: > Settings > Security > New Passwords

You can also change your **SIM PIN** password.

If you forget your unlock code: At the Enter Unlock Code prompt, try entering 1234 or the last four digits of your phone number. If that doesn't work, press and enter your six-digit security code instead.

If you forget other codes: If you forget your security code, SIM PIN code, PIN2 code, or call barring password, contact your service provider.

lock & unlock phone

You can lock your phone to keep others from using it. To lock or unlock your phone, you need the four-digit unlock code.

To **manually lock** your phone:
Press > Settings > Security > Phone Lock > Lock Now.

To **automatically lock** your phone whenever you turn it off:
Press > Settings > Security > Phone Lock > Automatic Lock > On.

Note: You can make emergency calls on a locked phone (see page 70). A locked phone still rings or vibrates for incoming calls or messages, **but you need to unlock it to answer**.

lock & unlock keypad

You can lock your keypad to prevent accidental key presses. To lock your keypad, go to the home screen and hold * for two seconds. To unlock it, press the **Unlock** key (right soft key), then the **OK** key (left soft key).

You can also set your phone to **automatically lock** the keypad when you're not using it. To set how long your phone waits before it locks your keypad, press ‹● > **Settings** > **Security** > **Keypad Lock** > **Timer** > *a time interval* or **Off**.

Note: Incoming calls unlock the keypad.

airplane mode

You can switch your phone to airplane mode to prevent it from communicating with the network. This lets you use games or other applications, or use the digital audio player to listen to music while you are on an airplane, without interfering with airplane communications.

Note: Your phone cannot make Bluetooth™ connections when **Airplane Mode** is on.

> > Settings > Airplane Mode > Airplane Mode > On

You can make the airplane mode option appear whenever you turn on your phone:

> > Settings > Airplane Mode > Prompt At Power Up > On

ring style

Each ring style profile uses a different set of sounds or vibrations for incoming calls and other events. Here are the profiles you can choose:

Loud	Vibe & Ring
Soft	Vibe then Ring
Vibrate	Silent

The ring style profile's indicator appears at the top of your home screen. To choose your profile:

Find it: ·◆· > Settings > Ring Styles > Style: *style name*

Shortcut: To change your ring style profile from the home screen, press the volume keys up or down. You can also just hold the # key to switch to Silent and back.

change alerts in a ring style

You can change the alerts for incoming calls and other events. Your changes are saved in the current ring style profile.

Find it: ·◆· > Settings > Ring Styles > *style* Detail

Note: *Style* represents the current ring style. You can't set an alert for the Silent ring style setting.

1. Scroll to Calls (or Line 1 or Line 2 for dual-line phones), then press the Change key to change it.
2. Scroll to the alert you want, then press the *center key* ·◆·.
3. Press the Back key to save the alert setting.

time & date

Your phone can automatically update your time zone, time, and date. It uses the time and date for the datebook.

To **synchronize** the time zone, time, and date with the network: Press ·◆· > Settings > Initial Setup

> **Time and Date** > **Autoupdate** > **Time & Time Zone**. If you don't want your phone to automatically update your time zone and date, choose **Time Only** instead.

To **manually** set the time zone, time, and date, turn off **Autoupdate**, then:

Press ⊕ > **Settings** > **Initial Setup** > **Time and Date** > **Time Zone**, *time* or *date*. To jump to a city in the time zone list, enter the first letter of its name by pressing keypad keys.

Tip: To choose three time zones for easier access, press ⊕ > **Tools** > **World Clock**. When you open **World Clock**, you can press the **Options** key to see the **Map View** of time zones.

To choose an **analog or digital** clock for your home screen, press ⊕ > **Settings** > **Personalize** > **Home Screen** > **Clock**.

wallpaper

Set a photo, picture, or animation as a wallpaper (background) image in your home screen.

Find it: ⊕ > Settings > **Personalize** > **Wallpaper**

options	
Picture	Press ⊕ up or down to select a picture, or select **None** for no wallpaper.
Layout	Select **Center** to center the image in the display, **Tile** to repeat the image across the display, or **Fit-to-screen** to stretch the image across the display.

screen saver

Set a photo, picture, or animation as a screen saver image. The screen saver appears when no activity is detected for a specified time.

Tip: To extend battery life, turn off the screen saver.

Find it: ⊕ > Settings > **Personalize** > **Screen Saver**

options	
Picture	Press ⊕ up or down to select a picture or animation, or select **None** for no screen saver.
Delay	Select the length of inactivity before the screen saver appears.

display appearance

To choose a phone **skin** that sets the look and feel of your phone's display: Press > Settings > Personalize > Skin.

To set your display **brightness**: Press > Settings > Initial Setup > Brightness.

To save battery life, your keypad **backlight** turns off when you're not using your phone. The backlight turns on when you press any key. To set how long your phone waits before the backlight turns off:

Press > Settings > Initial Setup > Backlight.

To save battery life, the **display** can turn off when you're not using your phone. The display turns back on when you press any key. To set how long your phone waits before the display turns off:

Press > Settings > Initial Setup > Display Timeout.

answer options

The Multi-Key option lets you answer incoming calls by pressing any key.

Find it: > Settings > In-Call Setup > Answer Options > Multi-Key

calls

To make and answer calls, see page 20.

turn off a call alert

You can press the volume keys to turn off a call alert before answering the call.

delay answering

If you want to answer a call, but need to step outside first, you can delay answering the call.

When your phone rings, press the **Delay** key. Your phone stops ringing and plays a brief message for the caller, such as "Please hold, your call will be answered in a moment." The call remains on hold until you press the **Talk** key.

To turn **Delayed Answer** on, or record your **Delayed Answer** message (up to 10 seconds), press ⊕ > **Settings** > **In-Call Setup** > **Answer Options** > **Delayed Answer**

recent calls

Your phone keeps lists of incoming and outgoing calls, even for calls that didn't connect. The most recent calls are listed first. The oldest calls are deleted as new calls are added.

Shortcut: Press ⊙ from the home screen to see a list of dialed calls.

Find it: ·◆· > Recent Calls, then press * or # to switch to Dialed Calls, Received Calls, or Missed Calls

Scroll to a call. A ✓ next to a call means the call connected.

- To call the number, press ⊙.
- To see call details (like time and date), press the *center key* ·◆·.
- To see the Last Calls Menu, press Options. This menu can include:

options	
Store	Create a phonebook entry with the number in the No. field. Store does not appear if the number is already stored.
Delete	Delete the entry.
Delete All	Delete all entries in the list.
Show ID	Show your caller ID for the next call.
Hide ID	Hide your caller ID for the next call.
Send Message	Open a new text message with the number in the To field.

options	
Send Voice Message	Record and send a voice message to the number.
Add Digits	Add digits after the number.
Attach Number	Attach a number from the phonebook or recent calls lists.
Send Tones	Send the number to the network as DTMF tones. **Note:** This option appears only **during a call**.
Talk then Fax	Talk and then send a fax in the same call (see page 90).

options	
Filter by	Select all, dialed, received, or missed calls.
Notepad	Open the number in a text editor.
Call Times	Open your call time information.
Call Cost	Open your call cost information.
Data Times	See how much time you have spent on data transfers.
Data Volumes	See how much data you have transferred.

redial

1 Press ⊙ from the home screen to see a list of recent calls.

2 Scroll to the entry you want to call, then press ⊙.

If you hear a **busy signal**, and you see **Call Failed**, you can press ⊙ or the **Retry** key to redial the number. When the call goes through, your phone rings or vibrates one time, shows **Redial Successful**, and connects the call.

return a call

Your phone keeps a record of your unanswered calls, and shows **X Missed Calls**, where **X** is the number of missed calls.

1 Press the **View** key to see the received calls list.

2 Scroll to the call you want to return, then press ⊙.

caller ID

Calling line identification (caller ID) shows the phone number for an incoming call in your display.

Your phone shows the caller's name and picture when they're stored in your phonebook, or **Unknown Call** when caller ID information isn't available.

You can set your phone to play a different ringer ID for an entry stored in your phonebook (see page 77).

To show or hide **your phone number** from the next person you call, enter the phone number and press **Options** > **Hide ID/Show ID**.

emergency calls

Your service provider programs one or more emergency phone numbers, such as 911 or 112, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.

Note: Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

1 Press the keypad keys to dial the emergency number.

2 Press ⏻ to call the emergency number.

voicemail

Your network stores the voicemail messages you receive. To listen to your messages, call your voicemail number.

Note: Your service provider may include additional information about using this feature.

When you **receive** a voicemail message, your phone shows the voicemail message indicator ✉ and **New Voicemail**. Press the **Call** key to listen to the message.

To **check** voicemail messages:

Find it: ⊕ > ✉ **Messages** > **Voicemail**

Your phone may prompt you to store your voicemail phone number. If you

don't know your voicemail number, contact your service provider.

Note: You can't store a **p** (pause), **w** (wait), or **n** (number) character in this number. If you want to store a voicemail number with these characters, create a phonebook entry for it. Then you can use the entry to call your voicemail.

To **change** your voicemail number or turn off voicemail notification, press ⊕ > ✉ **Messages**, then press the **Options** key and select **Setup** > **Voicemail Setup**.

advanced calling

features

attach a phone number



Dial an area code or prefix for a phonebook number, then press **Options** > **Attach Number**.

features

notepad

> **Recent Calls**, press the **Options** key, then > **Notepad**

- To call the number, press .
- To create a phonebook entry with the number in the **No.** field, press the **Store** key.
- To open the **Dialing Menu** to attach a number or insert a special character, press **Options**.

features

international calls



If your phone service includes international dialing, press and hold 0 to insert your local international access code (indicated by **+**). Then, press the keypad keys to dial the country code and phone number.

hold a call

Press **Options** > **Hold** to put all active calls on hold.

mute a call

Press the **Mute** key (if available) or **Options** > **Mute** to put all active calls on mute.

features

call waiting



When you're on a call, you'll hear an alert if you receive a second call.

Press ⦿ to answer the new call.

- To switch between calls, press the **Switch** key.
- To connect the two calls, press **Options** > **Link**.
- To end the call on hold, press **Options** > **End Call On Hold**.

To turn the call waiting feature on or off:

·●· > **Settings** > **In-Call Setup** > **Call Waiting** > **On** or **Off**

features

conference call



During a call:

Dial the next number, press ⊙, and press **Options** > **Link**.

transfer a call



During a call:

Options > **Transfer**, dial transfer number, press ⊙

call forwarding



Set up or cancel call forwarding:

⊕ > **Settings** > **Call Forward**

features

restrict calls



Restrict outgoing or incoming calls:

⊕ > **Settings** > **Security** > **Restrict Calls**

Tell your phone to allow **All**, **None**, or only the calls from your **Phonebook**.

call barring



Restrict outgoing or incoming calls:

⊕ > **Settings** > **Security** > **Call Barring**

change phone line



If you have a dual-line-enabled SIM card, you can change your line to make and receive calls from your other phone number.

⊕ > **Settings** > **Phone Status** > **Active Line**

features

fixed dial



When you turn on fixed dialing, you can call only numbers stored in the fixed dial list.

Turn fixed dialing on or off:

› Settings > Security > Fixed Dial

Use the fixed dial list:

› Tools > Dialing Services > Fixed Dial

DTMF tones

Activate DTMF tones:

› Settings > Initial Setup > DTMF

To send DTMF tones during a call, just press number keys or scroll to a number in the phonebook or recent calls lists and press Options > Send Tones.

phonebook

To store and call phonebook entries, see page 21.

Note: You can show contacts stored in your phone's memory or on your SIM card. To choose which entries you see, press › Phonebook, then press Options > View. You can select Phone & SIM Card, SIM Card, or Phone Contacts.

features

assign a speed dial key to a phonebook entry

You can assign the keys 1 through 9 to phonebook entries. Then, when you press and hold a key, your phone calls the entry.

Note: Your service provider might assign some keys, such as 1 for your voicemail number.

Press ·◆· > Phonebook and scroll to the phonebook entry. Then, press Options > Add to Speed Dial and pick a speed dial key.

use the speed dial key for a phonebook entry

To **use a speed dial key** that you assigned to a phonebook entry, just press and hold the key while in your home screen.

features

edit your speed dial keys

·◆· > Phonebook, then press Options > Manage Contacts > Speed Dial

choose a speed dial key list

You can set speed dial to call the entries in your phone memory phonebook or your Fixed Dial list:

·◆· > Settings > Initial Setup > Speed Dial > Phone Memory or Fixed Dial.

features

edit or delete a phonebook entry

Edit a number stored in the phonebook:

> **Phonebook**, scroll to the phonebook entry, and press **Options**. You can select **Edit Contact**, **Delete Contact**, or other options.

Shortcut: In the phonebook, press keypad keys to enter the first letters of an entry you want. You can also press * and # to see the entries in your categories or entries you used recently.

features

set ringer ID for a phonebook entry

Assign a ring alert (ringer ID) to an entry:

> **Phonebook** > *entry*, then press **Options** > **Edit Contact** > **Ringer ID** > *ringer name*

Note: The **Ringer ID** option isn't available for entries stored on the SIM card. To copy an entry from SIM to phone memory, see page 80.

To activate ringer IDs:

> **Settings** > **Ring Styles** > *style* **Detail** > **Ringer IDs** > **On**

features

set picture ID for a phonebook entry

Assign a photo or picture to show when you receive a call from an entry:

◆ > Phonebook > *entry*, then press Options > Edit Contact > Picture > *picture name*

Note: The Picture option isn't available for entries stored on the SIM card. To copy an entry from SIM to phone memory, see page 80.

features

set category for a phonebook entry

◆ > Phonebook > *entry*, then press Options > Edit Contact > Category > *category name*

Note: The Category option isn't available for entries stored on the SIM card. To copy an entry from SIM to phone memory, see page 80.

When you open your phonebook, press * or # to see your categories.

features

set category view for phonebook

S > Phonebook, then press Options > Filter by > Category > *category name*

You can show All entries, entries in a predefined category (Business, Personal, General, VIPs), or entries in a category you create.

Shortcut: When you open your phonebook, press * or # to see your categories.

create a new category

S > Phonebook, then press Options > Manage Contacts > Edit Phone Categories > [New Category]

Enter the category name, and select its members from your phonebook entries.

features

edit a category

S > Phonebook, then press Options > Manage Contacts > Edit Phone Categories

Scroll to the category name and press Options > Edit Category.

You can edit the category name, members, ringer ID, or picture. Your phone uses the ringer ID and picture whenever you receive calls from numbers in the category.

features

create group mailing list

You can put several phonebook entries in a group mailing list, then send a message to the list. To create a list:

> Phonebook, then press Options > Create New > Message List

Note: A Message List cannot include entries stored on the SIM card. To copy an entry from SIM to phone memory, see page 80.

sort phonebook list

Set the order in which entries are listed:

> Phonebook, then press Options > Setup > Sort by > First Name or Last Name

features

copy one phonebook entry

Copy an entry from the phone to the SIM card, or from the SIM card to the phone:

> Phonebook, scroll to the entry, press Options > Copy to SIM Card or Copy to Phone

copy multiple phonebook entries

Copy multiple phonebook entries between the phone and SIM card:

> Phonebook, then press Options > Select Multiple to, and select Copy Phone to SIM or Copy SIM to Phone

features
send phonebook entry to another device Send a phonebook entry to another phone, computer, or device: > Phonebook, scroll to the entry, press Options > Send Contact
print phonebook entry over Bluetooth™ connection You can use a Bluetooth wireless connection to send a phonebook entry from your phone to a printer. > Phonebook Scroll to the entry you want to print, and press Options > Print. You cannot print a Mailing List. For more about Bluetooth connections, see page 30.

messages

For basic text message features, see page 43.

features
send email > Messages > New Message > New Email
send voice message > Messages > New Message > New Voice Msg Your phone starts recording the voice message. To stop recording, press the Stop key. Your phone inserts the voice recording into a message and lets you enter email addresses or phone numbers of the recipients.

features

use a message template



› > Messages > Templates > Text Templates or Multimedia Templates

Select a template to create a new message based on the template.

features

read and manage messages



› > Messages > Message Inbox

Icons next to each message indicate if it is read ✉ or unread ✉. Icons can also indicate if the message has an attachment 📎, might be SPAM ?, or is locked 🔒, urgent !, or low priority ↓.

To Reply, Forward, Lock, or Delete a message, scroll to it and press Options.

To open a message, press ›. Then, you can press Options to use or store any phone numbers, email addresses, Web sites, or files in the message.

features

read and manage email



> ✉ Messages > Email Msgs

To **Reply**, **Forward**, **Lock**, or **Delete** a message, scroll to it and press **Options**.

To open a message, press ●. Then, you can press **Options** to use or store any phone numbers, email addresses, Web sites, or files in the message.

store message objects



Go to a multimedia message page, or scroll to an object in a message, then:

Options > **Store**

features

print message over Bluetooth™ connection



You can use a Bluetooth wireless connection to send a message from your phone to a printer.

> ✉ Messages > **Message Inbox**, **Email Msgs**, **Outbox**, or **Drafts**

Scroll to the message you want to print and press **Options** > **Print**.

You cannot print message **Templates**. For more about Bluetooth connections, see page 30.

features

store text messages on your SIM card



To store incoming text messages on your SIM card, press:

S > ✉ **Messages**, then press **Options** > **Setup** > **Message Setup** > **Text Msg Setup** > **Default Storage** > **SIM Card**

features

edit email settings



You can edit the settings for your Email connections. To use email, you need to store your email **User ID** and **Password**.

S > ✉ **Messages**, then press **Options** > **Setup** > **Email Msg Setup** > **Account Settings**

If you have more than one email account, select an account to edit.

Your phone shows a list of email settings. Here is where you store your email **User ID** and **Password**.

Note: To create a new account, select **[New Entry]** in the **Account Settings** list. Your display shows a folder for each email account under S > ✉ **Messages** > **Email Msgs**.

features
browser messages*  Read messages received by your micro-browser: ·◆· > ✉ Messages > Browser Msgs
info services*  Read subscription-based information services messages: ·◆· > ✉ Messages > Info Services

* The feature detailed here may be a network, subscription or service provider dependent feature.

personalizing

features
language Set menu language: ◆ > Settings > Initial Setup > Language
scroll Set the scroll bar to **Up/Down** or **Wrap Around** in menu lists: ◆ > Settings > Initial Setup > Scroll
text marquee Set the speed for scrolling text in your display: ◆ > Settings > Initial Setup > Text Marquee

features
activate ringer IDs Activate ringer IDs assigned to phonebook entries and categories: ◆ > Settings > Ring Styles > *style* Detail > Ringer IDs
ring volume ◆ > Settings > Ring Styles > *style* Detail > Ring Volume
keypad volume ◆ > Settings > Ring Styles > *style* Detail > Key Volume

features

reminders

Set a reminder when you have not responded to an incoming call, message, or other event:

› Settings > Ring Styles > *style* Detail > Reminders

menu view

Show the main menu as graphic icons or as a text-based list:

› Settings > Personalize > Main Menu > View

main menu

Reorder your phone's main menu:

› Settings > Personalize > Main Menu > Reorder

features

show/hide menu icons

Show or hide menu feature icons in the home screen:

› Settings > Personalize > Home Screen > Home Keys > Icons

change home keys

Change features for the soft keys, navigation key, and smart key in the home screen:

› Settings > Personalize > Home Screen > Home Keys

master reset

Reset all options **except** unlock code, security code, and lifetime timer:

› Settings > Initial Setup > Master Reset

features

master clear

Caution: Master clear **erases all information you have entered** (including phonebook and datebook entries) **and content you have downloaded** (including photos and sounds) stored in your phone's memory. After you erase the information, you can't recover it.

S > Settings > Initial Setup > Master Clear

call times & costs

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing O. This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, contact your service provider.

features

call times

Show call timers:

S > Recent Calls, press the Options key, then > Call Times

features
in-call timer Show time or cost information during a call: › Settings > In-Call Setup > In-Call Timer
call cost Show call cost trackers: › Recent Calls, press the Options key, then > Call Cost

handsfree

Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

features
speakerphone Activate the speakerphone during a call: Press the Speaker key (if available), or Options > Spkrphone On.
auto answer (car kit or headset) Automatically answer calls when connected to a car kit or headset: › Settings > Car Settings or Headset > Auto Answer

features
voice dial (headset) Enable voice dial with headset send/end key: › Settings > Headset > Voice Dial
auto handsfree (car kit) Automatically route calls to a car kit when connected: › Settings > Car Settings > Auto Handsfree

data calls

To connect your phone with a USB cable, see page 47.

features
send data Connect your phone to the device, then place the call through the device application.
receive data or fax Connect your phone to the device, then answer the call through the device application.
talk then fax Connect your phone to the device, enter fax number, press Options > Talk then Fax, then press ⌦ to make the call.

features

set up Exchange ActiveSync



You can use the Internet to synchronize your phone's phonebook and datebook entries with an email account on a Microsoft® Exchange 2003 Server.

You need to know the email account's **user name** and **password**, the Microsoft® Exchange **server name**, and the **user domain name**. Confirm that the **Mobility** option is enabled on the email account, and that **data service** is activated with your phone service provider.

To **set up** an ActiveSync partner, press > Settings > Connection > MOTOSYNC > Exchange, press the Options key, then > Setup. Enter the server details, including Server Name, Domain, and the Web Session to use. To set up a Web Session, see page 98.

features

use Exchange ActiveSync*



Once you set up an Exchange ActiveSync partner, you can schedule your phone to synchronize with the account automatically.

To **schedule** synchronization, press > Settings > Connection > MOTOSYNC > Exchange, press the Options key, then > Auto Sync Setup. Enter the time and days you want your phone to synchronize.

* The feature detailed here may be a network, subscription or service provider dependent feature.

network

features
network settings  See network information and adjust network settings: › Settings > Network
software update  Your service provider can send updated phone software over the air to your phone. When your phone receives a software update, you can choose to download it and install it later. To install a software update you downloaded: › Settings > Phone Status > Software Update > Install Now

personal organizer

features
set alarm*  › Tools > Alarm Clock
turn off alarm When an alarm happens: To turn off the alarm, press the Disable key or ⏻. To set an eight-minute delay, press the Snooze key. **Note:** The Snooze key is available only if the phone is already powered on when the alarm sounds.

***Note:** Alarm clock will not ring in music file stored in memory card if phone in power off state.

features

add new datebook event

S > Tools > Datebook, scroll to the day, press S, scroll to Create New Event, and press S

If you set a reminder for a datebook event, ⏰ can appear at the top of your screen.

see datebook event

See or edit event details:

S > Tools > Datebook, scroll to the day, and press S

Scroll to the event and press S. To edit the details, press Options > Edit.

Tip: Keeping up with life can be tough work. To see a list of your upcoming events, open the datebook and press Options > View > Organized Events.

features

event reminder

When an event reminder happens: To see reminder details, press the View key. To close the reminder, press the Exit key.

send datebook event to another device

Send a datebook event to another phone, computer, or device:

S > Tools > Datebook, scroll to the day, press S, scroll to the event, press Options > Send > with Bluetooth

features

print datebook month, week, or day over Bluetooth™ connection



You can use a Bluetooth wireless connection to send a datebook month, week, or day from your phone to a printer.

> > Tools > Datebook

Go to the month, week, or day view and press Options > Print.

For more about Bluetooth connections, see page 30.

features

create voice record

> > Multimedia > Voice Record

Press . When prompted, speak into the phone.

Note: Recording phone calls is subject to varying state and federal laws regarding privacy and recording of conversations. Always obey the laws and regulations on the use of this feature.

play voice record

Play back a voice record:

> > Multimedia > Sounds, scroll to the voice record, and press the *center key*

calculator

> > Tools > Calculator

features
currency converter
·●· > Tools > Calculator, then press Options > Exchange Rate Enter exchange rate, press the OK key, enter amount, and press Options > Convert Currency.

security

features
SIM PIN
Caution: If you enter an incorrect PIN code three times before the correct code, your SIM card is disabled and your display shows SIM Blocked. Lock or unlock the SIM card: ·●· > Settings > Security > SIM PIN
lock feature
·●· > Settings > Security > Lock Application

features

manage certificates



Enable or disable Internet access certificates stored on your phone:

› Settings > Security > Certificate Mgmt

Certificates are used to verify the identity and security of Web sites when you download files or share information.

fun & games

For basic information on the camera, see page 38.

features

listen to sound files

› Multimedia > Sounds

Scroll to a file and select it to listen.

Note: Your phone cannot receive PTT calls or data over an EDGE network while it is playing some sound files. Indicators appear at the top of your display when you can receive PTT or EDGE data.

features

delete or manage sound files

> Multimedia > Sounds

To **delete** a file, scroll to it in the list and press Options > Manage > Delete.

To **copy or move** a file from your memory card ( ) to your phone memory ( ), scroll to it in the list and press Options > Manage > Copy or Move > Memory Card. You cannot copy or move some copyrighted files.

create ring tones

Create ring tones that you can use with your phone:

> Multimedia > Sounds > [New Melody]

start micro-browser

Press > Web Access > Browser.

features

download objects from Web page

Download a picture, sound, or other object from a Web page:

Press > Web Access > Browser, go to the page that links to the file, scroll to the link, and select it. Follow the same steps to use Progressive Downloading and Video Streaming.

To activate downloaded copyrighted files, press > Tools > Activation List > *file type* > *file*. You can see file's Status, Type, Activation, and Counts Remaining.

features

store downloaded files in your phone or memory card

You can choose to store your downloaded files on your phone or your memory card, choose where to store the files you download:

› Settings > Phone Status > Download Location > Memory Card or Phone

To see how much memory is available on your phone or memory card, see page 46.

Web sessions

A *Web Session* stores settings that your phone uses to access the Internet. To select or create a Web session:

› Web Access > Web Sessions

features

clear micro-browser history

Clear the micro-browser's history, cache, or cookies:

› Web Access > Browser Setup > Clear History, Reset Cache, or Clear Cookies

download game or application

You can download a Java™ game or application the same way you download pictures or other objects:

Press › Web Access > Browser, go to the page that links to the file, scroll to the link, and select it.

features

start game or application

Start a Java™ game or application:

> > **Games & Apps**, scroll to the game or application, press the *center key*

Note: To install and run games stored on your memory card, press > > **Games & Apps** > **[Install New]**.

MyMobileSoft.com

Introduction

MyMobileSoft.com[1] provides download of both free and paid software for your Motorola handset. Depends on each model, you may download games, ring tones, screen savers, wall papers, e-books, financial and others software from MyMobileSoft.com.

1. All software and applications contained on MyMobileSoft.com are third party products and provided as is. Motorola or its subsidiaries make no representations or warranties, expressly or impliedly. By way of example but not of limitation, Motorola or its subsidiaries make no representations or warranties of merchantability or fitness for a particular purpose, or that the use of

the software and applications will not infringe any intellectual property rights. Motorola or its subsidiaries shall not be liable for any damages of any kind arising out of or relating to the use or inability to use the software and applications and services thereof. Amendment and availability of these software and applications are subject to change without any prior notice.

For more information, please visit the internet website:

www.mymobilesoft.com

Access to MyMobileSoft.com[2]

Press ⊕ > **WebAccess** > **Bookmarks**

OR

User can also enter the following URLs* to access website

Press ⊕ > **WebAccess** > **Go To Page**

- MotoMusic (http://www.MotoMusic.com.hk)
- MyMobileSoft Download Fun (http://hk.mymobilesoft.com)
- MyMobileSoft Mobile Portal (http://mobile.mymobilesoft.com)

This link guides you to the service of MyMobileSoft.com, which provides software and applications for your newly bought Motorola Mobile Phone.

*The URLs are subject to change without prior notice. Please refer to website www.mymobilesoft.com

2. You need to subscribe WAP service from your local operators, please make sure that you set up your handset correctly with appropriate parameters provided by your local operators.

www.mymobilesoft.com

Unlimited suprises waiting for you to download

Specific Absorption Rate Data

This model meets international guidelines for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The ICNIRP SAR limit for mobiles devices used by the general public is 2 W/kg and the highest SAR value for this device when tested at the ear was 1.02 W/kg.[1] As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide.[2] In this case, the highest tested SAR value is 0.68 W/kg.[1]

As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a "hands-free" device to keep the mobile phone away from the head and body.

Additional Information can be found on the websites of the World Health Organization

(http://www.who.int/emf) or Motorola, Inc. (http://www.motorola.com/rfhealth).

1. The tests are carried out in accordance with international guidelines for testing. The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements. Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.
2. Please see the *Safety and General Information* section about body worn operation.

Information from the World Health Organization

Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF exposure by limiting the length of calls or by using handsfree devices to keep mobile phones away from your head and body.

Source: WHO Fact Sheet 193

Further information: http://www.who.int./peh-emf

GNU General Public License

For instructions on how to obtain a copy of any source code being made publicly available by Motorola related to software used in this Motorola mobile device, which may be subject to GNU's General Public License, please send an email to ezxgpl@motorola.com.

index

A

accessories 16, 89
accessory connector port 1
activation list 97
active line indicator 52
active line, changing 74
ActiveSync 91
airplane mode 61
alarm clock 92
alert
  set 57, 61, 62
  turn off 57, 66
answer a call 20, 65
attach a number 68, 72
audio player 33

B

backlight 65
battery 17, 18
  extending battery life 18
battery indicator 53
battery life, extending 64, 65
Bluetooth connection
  datebook entry, printing 94
  datebook entry, sending 93
  description 30
  messages, printing 83
  phonebook entries 81
blur photo setting 40
brightness 65
browser messages 85
browser. See micro-browser

C

cables 47
calculator 94
call
  answering 20, 65
  barring 74
  end 20
  forwarding 74
  making 20
  timers 88, 89
  waiting 73

call forward indicator 52
caller ID 67, 69, 78
camera 38
car kit 89
categories 79
center key 1, 58
center select key 16
certificate management 96
clock 62
codes 58, 59
conference call 74
copy files 31
copyrighted files, activating 97
costs, tracking 89

D

data call 90
data indicator 52
date, setting 62
datebook 93
delayed answer 66
dial a phone number 20, 75
dialed calls 66
digital audio 33
display 2, 50, 65
downloaded files
  activating 97
  from Web pages 97
  in messages 83
  storage location 98
drafts folder 44
DTMF tones 68, 75

E

earpiece volume 57
EDGE indicator 51
email
  reading and managing 83
  sending 81
  settings 84
emergency number 70
end a call 20
end key 1, 20
Enter Unlock Code message 59

F

fax call 68, 90
fixed dial 75
FM radio 36
forward calls 74

G

games 98
GPRS indicator 51
group mailing list 80

H

handsfree speaker 58
headset 89
headset jack 1
hold a call 73
home screen 2, 50, 87

I

in-call indicator 52
Incoming Call message 69
information services 85
international access code 73
iTAP text entry mode 55

J

Java applications 98
Java indicator 52

K

keypad 60, 86

L

language 86
linking. See Bluetooth connection
lock
  application 95
  keypad 60
  phone 59
  SIM card 95
Low Battery message 53

M

make a call 20
master clear 88
master reset 87
memory card 45
menu 2, 16, 50, 86, 87
menu icons 50, 87
message 81, 82, 84
message indicator 45, 53
message reminders 87
micro-browser 85, 97, 98
mirror photo setting 40
Missed Calls message 69
MMS, defined 43
MOTOSYNC 91
MP3 sound files 33, 35
multimedia message 43, 82, 84
music 96, 97
mute a call 73

N

navigation key 1, 16, 58

network settings 92
notepad 72
number. See phone number
numeric entry mode 56

O

object exchange 31
1-touch dial 76
optional accessory 16
optional feature 16

P

pairing. See Bluetooth connection
passwords. See codes
personalize 86
phone number 22, 74
phonebook 68, 72, 75, 76
photo 38, 40
picture ID 69, 78
PIN code 20, 59, 95
PIN2 code 59
power key 1, 20
printing 33
PTT 23
  calls, answering 24
  calls, making 23
  contacts and groups 26
  icons 27
  indicator 52
  Quick Groups 24
  sending pictures 25
  settings 28
  turning on or off 28
PTV 25
Push to Talk. See PTT

R

radio 36
received calls 66
recent calls 66
redial 69
reminders 87
restrict calls 74
return a call 69
ring style indicator 53
ring style, setting 57, 61
ring tone 96, 97
ringer ID 69, 77, 86
ringer volume 57, 86
roam indicator 52

S

safety information 8
screen saver 64
scrolling 86
security code 58
send key 1, 20
signal strength indicator 51

silent answer 66
SIM Blocked message 20, 95
SIM card 16, 20, 59, 84, 95
skin 65
smart key 58, 87
soft keys 1, 50, 87
software update 92
speakerphone 89
speed dial 76
store your number 22
symbol entry mode 57
synchronizing 91

T

tap text entry mode 56
telephone number. See phone number
text entry 53
text marquee 86
text message 82, 84
time zone 62
time, setting 62
timers 88, 89
transfer a call 74
turn on/off 20

U

unlock
  application 95
  keypad 60
  phone 20, 59
  SIM card 95
unlock code 58, 59
USB cables 47

V

video clip 43
videos 42
voice dial 90
voice message 81
voice record 94
voicemail 70
voicemail message indicator 53, 70
volume 57, 86

W

wallpaper 64
Web pages 97
Web sessions 98

Y

your phone number 22

www.motorola.com.hk



Please use Motorola Original Accessories



6887460Z60

MOTOROLA, the Stylized M Logo and all other trademarks indicated as such herein are trademarks of Motorola, Inc.® Reg.. U.S. Pat. & Tm. Off. All other product or service names are the property of their respective owners. ©2007 Motorola, Inc. All rights reserved.

Printed in PRC.