



Phone User Guide

**Sprint Power VisionSM Phone
M1 by Sanyo[®]**

www.sprint.com

© 2006 Sprint Nextel. All rights reserved. SPRINT, the "Going Forward" logo, the NEXTEL name and logo, and other trademarks are trademarks of Sprint Nextel. Sanyo is a registered trademark of Sanyo Electric Co., Ltd.

Table of Contents

Welcome to Sprint	.i
Introduction	.ii
Your Phone's Menu	.iv
Section 1: Getting Started	.1
1A. Setting Up Service	.2
Getting Started With Sprint PCS Service	.3
Setting Up Your Voicemail	.4
Sprint PCS Account Passwords	.5
Getting Help	.6
Section 2: Using Your Phone	.9
2A. Phone Basics	.10
Front View of Your Phone	.11
Viewing the Display Screen	.15
Features of Your Phone	.18
Turning Your Phone On and Off	.20
Using Your Phone's Battery and Charger	.21
Navigating Through Phone Menus	.24
Displaying Your Phone Number	.25
Making and Answering Calls	.26
Entering Text	.41
2B. Controlling Your Phone's Settings	.46
Sound Settings	.47
Display Settings	.54
Location Settings	.61
Messaging Settings	.62
Airplane Mode	.67
TTY Use With Sprint PCS Service	.68
Wireless Backup	.70
Phone Setup Options	.72

2C. Setting Your Phone's Security	79
Accessing the Security Menu	80
Using Your Phone's Lock Feature	80
Restricting Calls	83
Using Special Numbers	84
Erasing Phone Content	85
Resetting the Browser	86
Resetting Favorites	86
Resetting Your Phone	87
Resetting Your Picture Mail Account	87
Resetting Default Settings	88
Resetting and Locking Your Phone Through SMS	89
Security Features for Sprint PCS Vision	91
2D. Controlling Your Roaming Experience	92
Understanding Roaming	93
Setting Your Phone's Roam Mode	95
Using Call Guard	96
Using Data Roam Guard	97
2E. Managing Call History	98
Viewing History	99
Call History Options	100
Making a Call From Call History	101
Saving a Phone Number From Call History	102
Prepending a Phone Number From Call History	103
Erasing Call History	103
2F. Using Contacts	104
Adding a New Contacts Entry	105
Assigning a Group Entry	106
Finding Contacts Entries	107
Contacts Entry Options	109
Adding a Phone Number to a Contacts Entry	110
Editing a Contacts Entry's Phone Number	110
Assigning Speed Dial Numbers	111

Editing a Contacts Entry	112
Assigning an Image to a Contacts Entry	112
Selecting a Ringer Type for an Entry	113
Secret Contacts Entries	114
Dialing Sprint PCS Services	115
2G. Using the Phone's Calendar and Tools	116
Using Your Phone's Calendar	117
Using Your Phone's Tools	125
Connecting Your Phone to Your PC	129
File Manager	130
Personal Information Management	133
2H. Using Your Phone's Voice Services	134
Using Voice-Activated Dialing	135
Using Automatic Speech Recognition	137
Using the Voice Recorder	144
Setting Up Screen Call	149
2I. Using the Built-in Camera	152
Taking Pictures	153
Using the Settings & Info Menu	161
Recording Videos	163
Storing Pictures and Videos	168
Sending Sprint PCS Picture Mail	171
Managing Sprint PCS Picture Mail	174
Printing Pictures Directly From Your Phone	178
2J. Using Sprint PCS Ready Link	180
Getting Started With Sprint PCS Ready Link	181
Making and Receiving a Sprint PCS Ready Link Call	183
Adding and Editing Ready Link Contacts	191
Erasing Ready Link List Entries	197
Updating Sprint PCS Ready Link Lists	199
Managing Sprint PCS Ready Link Settings	199
2K. Using the Built-In Media Player	205
Your Multimedia Channel Options	206

Accessing Your Media Player's Channel Listings	207
Playing a Video or Audio Clip	208
Multimedia FAQs	213
2L. Using Bluetooth	216
Turning Bluetooth On and Off	217
Using the Bluetooth Settings Menu	218
Bluetooth Profiles	221
Pairing Bluetooth Devices	223
Using the Trusted Devices Options	224
Printing Data via Bluetooth	225
Sending Data via Bluetooth	226
Section 3: Sprint PCS Service Features	227
3A. Sprint PCS Service Features: The Basics	228
Using Voicemail	229
Using SMS Text Messaging	237
Using SMS Voice Messaging	241
Using Caller ID	242
Responding to Call Waiting	243
Making a Three-Way Call	244
Using Call Forwarding	245
3B. Sprint PCS Voice Command	246
Getting Started With Sprint PCS Voice Command	247
Creating Your Own Address Book	248
Making a Call With Sprint PCS Voice Command	249
Accessing Information Using Sprint PCS Voice Command	250
Section 4: Safety and Warranty Information	251
4A. Important Safety Information	252
General Precautions	253
Maintaining Safe Use of and Access to Your Phone	254
Using Your Phone With a Hearing Aid Device	256
Caring for the Battery	257
Radiofrequency (RF) Energy	259
Owner's Record	262

Phone Guide Proprietary Notice	262
4B. Manufacturer's Warranty	263
Manufacturer's Warranty	264
Index	267

Welcome to Sprint

Sprint and Nextel have come together offering you more choice and flexibility to do whatever you want, whenever you want.

This powerful combination brings you access to more products, more services, and more of what you need to do more of what you want. Welcome to a future full of possibility. Welcome to the new Sprint.

Welcome and thank you for choosing Sprint.

Introduction

This **Phone User Guide** introduces you to Sprint PCS® Service and all the features of your new phone. It's divided into four sections:

- ◆ **Section 1:** Getting Started
- ◆ **Section 2:** Using Your Phone
- ◆ **Section 3:** Sprint PCS Service Features
- ◆ **Section 4:** Safety and Warranty Information

Throughout this guide, you'll find tips that highlight special shortcuts and timely reminders to help you make the most of your new phone and service. The Table of Contents and Index will also help you quickly locate specific information.

You'll get the most out of your phone if you read each section. However, if you'd like to get right to a specific feature, simply locate that section in the Table of Contents and go directly to that page. Follow the instructions in that section, and you'll be ready to use your phone in no time.

Phone Guide Note:	Because of updates in phone software, this printed guide may not be the most current version for your phone. Visit www.sprint.com and log on to MyPCS Wireless to access the most recent version of the phone user guide.
----------------------------------	--

WARNING	Please refer to the Important Safety Information section on page 252 to learn about information that will help you safely use your phone. Failure to read and follow the Important Safety Information in this phone guide may result in serious bodily injury, death, or property damage.
----------------	--

WANT TO KEEP TRACK OF YOUR MINUTES?

IT'S EASY TO CHECK RIGHT FROM YOUR PHONE!

DIAL

Shift ✕

GHI 4

TALK

You'll hear a summary of your service plan minutes and the minutes remaining in your current billing cycle, along with your phone's individual usage if you're on a shared plan. You'll also hear a summary of your account balance and your most recent payment information.

USE YOUR PHONE'S WEB BROWSER

From the Sprint PCS Vision Home Page, select My Account (Option 0). You'll see many helpful categories including Payment Due, Current Usage, and Plan Overview. Select a topic to display the latest information.

NOTE

Reported minutes and balances are estimates only. Please consult your Sprint PCS invoice for actual minutes used.

Your Phone's Menu

The following table outlines your phone's list menu structure. For more information about using your phone's menus, see "Navigating Through Phone Menus" on page 24.

1: Missed Alerts

2: Call History

1: Outgoing

2: Incoming

3: Missed

4: Recent Calls

5: Erase History

1: Outgoing

2: Incoming

3: Missed

4: Recent Calls

5: All

3: Contacts

1: Find/Add Entry

2: Group

3: Speed Dial #s

4: My Name Card

5: Wireless Backup

1: Subscribe (sign-out state)/Unsubscribe (sign-in state)

2: Alert

3: Learn More

6: Services

1: Customer Service

2: Dir Assistance

3: Account Info

4: Sprint Operator

5: Voice Command

4: Messaging

1: Send Message

1: Text

2: Picture Mail

3: VoiceSMS

2: Text	
3: Picture Mail	
4: Premium Msgs	
5: VoiceSMS	
6: IM & Email	
7: Chat & Dating	
8: Voicemail	
1: Call Voicemail	2: Call:Speaker On
3: Details	4: Clear Count
9: Settings	
1: Notification	
1: Msgs and Icon	2: Icon Only
2: Preset Msgs	
3: Text	
1: Send Callback#	2: Delivery Receipt
3: Signature	4: Drafts Alert
4: VoiceSMS	
1: Speakerphone	2: From Name
3: Connection Alert	4: Auto Delete

5: On Demand

6: Pictures

1: Camera	
2: Camcorder	
3: Picture Mail	
4: My Albums	
1: In Phone	2: Online Albums
5: Order Prints	
6: Print@Home	
7: Settings & Info	
1: Location	2: Status Bar
3: Slideshow Interval	4: Account Info
5: Help	

7: My Content
1: Games
2: Themes
3: Ringers
4: Screen Savers
5: Applications
6: IM & Email
7: Call Tones
8: Dynamic 1-11 (If Applicable)
9: Others (If Applicable)

8: Music

9: Media Player	
1: Channel Listing	2: Media Listing
3: Playlist	

0: Web

*: Tools	
1: Voice Services	
1: Voice Recorder	2: Screen Call
2: Bluetooth	
3: Calendar	
4: File Manager	
5: USB Connection	
1: PictBridge	2: Mass Storage
6: Assigned Media	
7: Update Phone	
8: More Tools	
1: Alarm Clock	2: Stop Watch
3: Countdown	4: World Clock
5: Calculator	

#: Settings	
1: Sounds	
1: Ringer Type	
1: Incoming Calls	2: Ready Link
3: Voicemail	4: Messaging
5: Calendar/Alarm	
2: Volume	
1: Ringer	2: Advanced Ringer
3: Receiver	4: Application
5: Start-up/Pw-off	6: Key Beep
3: Vibrate Pattern	
1: Incoming Calls	2: Ready Link
3: Voicemail	4: Messaging
5: Calendar/Alarm	
4: Alerts	
1: Service	2: Ready Link
3: Voicemail	4: Messaging
5: Minute Beep	6: Signal Fade
5: Others	
1: Tone Length	2: Start-up Tone
3: Power-off Tone	4: Voice Prompt
5: Key Press Echo	
2: Display	
1: Backlight	
1: Main LCD	2: Key
3: Sub LCD	
2: Power Save Mode	
3: Greeting	
1: Default	2: Custom
4: Animation	
1: Standby	2: Outgoing Calls
3: Service Search	

5: Incoming Calls	
6: Themes	
7: Screen Saver	
1: Main LCD	2: Sub LCD
8: Clock/Calendar	
1: Main LCD	2: Sub LCD
9: Others	
1: Font Size	2: Match Area Code
3: My Buddy	4: Return to Idle
5: Sleep Mode	
3: Power Vision	
1: Enable Vision (sign-out state)/Disable Vision (sign-in state)	
2: Net Guard	
3: Update Profile	
4: Ready Link	
1: Enable/Disable	
2: List Update	
3: Sounds	
1: Ringer Type	2: Ringer Volume
3: Vibrate Pattern	4: Alerts
4: Speakerphone	
5: Default View	
6: Floor Display	
7: R-Link Guard	
8: Restart	
9: Help	
5: Wireless Backup	
1: Subscribe (sign-out state)/Unsubscribe (sign-in state)	
2: Alert	3: Learn More
6: Location	

7: Bluetooth	
1: Enable/Disable	
2: Visibility	
3: Voice Priority	
4: My Device Name	
5: My Device Info	
8: Messaging	
1: Notification	
1: Msgs and Icon	2: Icon Only
2: Preset Msgs	
3: Text	
1: Send Callback#	2: Delivery Receipt
3: Signature	4: Drafts Alert
4: VoiceSMS	
1: Speakerphone	2: From Name
3: Connection Alert	4: Auto Delete
9: Security	
1: Lock Phone	
1: Unlocked	2: Lock Now
3: On Power-up	
2: Picture Mail	
1: Lock Pictures	2: Reset Picture Mail
3: Erase/Reset	
1: Erase Ph. Book	2: Erase My Content
3: Erase Pictures	4: Erase Voice Data
5: Erase Voice Tag	6: Erase Messages
7: Erase Cal. Events	8: Erase Memory
9: Reset Browser	10: Reset Favorites
11: Default Settings	12: Reset Phone

4: Others	
1: Change Lock	2: Limit Use
3: Special #s	4: Found Me
5: Lock Services	
10: Others	
1: Airplane Mode	
2: Roaming	
1: Set Mode	2: Call Guard
3: Data Roam Guard	
3: Text Entry	
1: Auto-Capital	2: My Words
3: Input Language	4: Default Input
5: Auto-Space	6: Recent Access
7: T9 Settings	8: Add Word
9: Auto-Complete	10: Help
4: Any Key Answer	
5: Auto Answer	
1: Hands-free	2: Speakerphone
6: Open/Close Flip	
1: Open	2: Close
7: Abbrev. Dial	
8: Power On to Alert	
9: Headset Mode	
1: Turbo Button	2: Earpiece
3: Ringer Sound	
10: TTY	
11: Navigation Keys	
1: Left Navigation (Media Player)	2: Right Navigation (On Demand)
3: Up Navigation (Send Text to)	4: Down Navigation (My Content)
12: Key Guard	
13: Language	
1: English	2: Español

11: Phone Info
1: Phone#/User ID
2: Icon Glossary
3: Version
4: Advanced
5: Phone Status

IN USE MENU	
Select Options (right softkey) to display the following options:	
1: Flash	2: Mute/Unmute
3: Speaker On/Speaker Off	4: Three-Way Call
5: Missed Alerts	6: Call History
7: Contacts	8: Messaging
9: Tools	10: Settings

Section 1

Getting Started



Setting Up Service

In This Section

- ◆ **Getting Started With Sprint PCS Service** (page 3)
 - ◆ **Setting Up Your Voicemail** (page 4)
 - ◆ **Sprint PCS Account Passwords** (page 5)
 - ◆ **Getting Help** (page 6)
-

Setting up service on your new phone is quick and easy. This section walks you through the necessary steps to unlock your phone, set up your voicemail, establish passwords, and contact Sprint for assistance with your Sprint PCS service.

Getting Started With Sprint PCS Service

Determining if Your Phone is Already Activated

If you purchased your phone at a Sprint Store, it is probably activated, unlocked, and ready to use. If you received your phone in the mail, it probably has been activated; all you need to do is unlock it.

If your phone is not activated, please refer to the activation card included with your phone.

Unlocking Your Phone

To unlock your phone, follow these easy steps:

1. Press  to turn the phone on.
2. Select **Unlock** (left softkey).

Note: To select a softkey, press the softkey button directly below the softkey text that is displayed at the bottom left and bottom right of your phone's display screen. Softkey actions change according to the screen you're viewing and will not be displayed if there is no corresponding action available.

3. Enter your four-digit lock code. (For security purposes, the code is not visible as you type.)

Tip: If you can't recall your lock code, try using the last four digits of either your Social Security number or wireless phone number, or try 0000 or NATL (6285). If none of these work, call Sprint Customer Service at 1-888-211-4PCS (4727).

Setting Up Your Voicemail

All unanswered calls to your phone are automatically transferred to your voicemail, even if your phone is in use or turned off. Therefore, you will want to set up your voicemail and personal greeting as soon as your phone is activated.

To set up your voicemail:

1. From standby mode, press and hold  **1**.
2. Follow the system prompts to:
 - Create your passcode.
 - Record your name announcement.
 - Record your greeting.
 - Choose whether to activate One-Touch Message Access (a feature that lets you access messages simply by pressing and holding  **1**, bypassing the need for you to enter your passcode).

Note:

Voicemail Passcode

If you are concerned about unauthorized access to your voicemail account, Sprint recommends that you enable your voicemail passcode (do not activate One-Touch Message Access).

For more information about using your voicemail, see “Using Voicemail” on page 229.

Sprint PCS Account Passwords

As a Sprint PCS customer, you enjoy unlimited access to your personal account information, your voicemail account, and your Sprint PCS Vision® or Sprint Power VisionSM account. To ensure that no one else has access to your information, you will need to create passwords to protect your privacy.

Account Password

If you are the account owner, you'll have an account password to sign on to www.sprint.com and to use when calling Sprint Customer Service. Your default account password is the last four digits of your Social Security number. If you are not the account owner (if someone else receives the bill for your Sprint PCS service), you can get a sub-account password at www.sprint.com.

Voicemail Password

You'll create your voicemail password (or passcode) when you set up your voicemail. See "Setting Up Your Voicemail" on page 4 for more information on your voicemail password.

Sprint PCS Vision or Sprint Power Vision Password

With your Sprint PCS Vision Phone or Sprint Power Vision Phone, you will be assigned a Sprint PCS Vision or Sprint Power Vision user name and password.

For more information, or to change your passwords, sign on to www.sprint.com or call Sprint Customer Service at **1-888-211-4PCS (4727)**.

Getting Help

Visit www.sprint.com

You can go online to:

- Access your account information.
- Check your minutes used (depending on your Sprint PCS service plan).
- View and pay your bill.
- Make your life easier by enrolling in Sprint PCS online billing and automatic payment.
- Purchase accessories.
- Shop for the latest Sprint phones.
- View available Sprint PCS service plans and options.
- Learn more about the Sprint Power Vision Network and other great products like Sprint PCS® Picture Mail, games, ringers, screen savers, and more.

Reaching Sprint Customer Service

You can reach Sprint Customer Service many different ways:

- Dial  on your phone.
- Sign on to your account at www.sprint.com.
- Call us toll-free at **1-888-211-4727** (Consumer customers) or **1-888-788-4727** (Business customers).
- Write to us at Sprint Customer Service, P.O. Box 8077, London, KY 40742.

Receiving Automated Billing Information

For your convenience, your phone gives you access to billing information on your Sprint PCS account. This information includes balance due, payment received, invoicing cycle, and an estimate of the number of minutes used since your last invoicing cycle.

To access automated billing information:

▶ Press **Shift** **X** **GHI 4** **TALK**.

Note: This service may not be available in all Affiliate areas.

Sprint 411

Call **GHI 4** **1** **1** **TALK** from your phone and you'll have access to a variety of services and information through Sprint 411, including residential, business, and government listings; movie listings or showtimes; driving directions, restaurant reservations, and major local event information. You can get up to three pieces of information per call, and the operator can automatically connect your call at no additional charge.

There is a per-call charge to use Sprint 411, and you will be billed for airtime.

To call Sprint 411:

▶ Press **GHI 4** **1** **1** **TALK**.

Sprint PCS Operator Services

Sprint PCS Operator Services provides assistance when placing collect calls or when placing calls billed to a local telephone calling card or third party.

To access Sprint PCS Operator Services:

▶ Press  **TALK**.

For more information or to see the latest in products and services, visit us online at www.sprint.com.

Section 2

Using Your Phone



Phone Basics

In This Section

- ◆ **Front View of Your Phone** (page 11)
 - ◆ **Viewing the Display Screen** (page 15)
 - ◆ **Features of Your Phone** (page 18)
 - ◆ **Turning Your Phone On and Off** (page 20)
 - ◆ **Using Your Phone's Battery and Charger** (page 21)
 - ◆ **Navigating Through Phone Menus** (page 24)
 - ◆ **Displaying Your Phone Number** (page 25)
 - ◆ **Making and Answering Calls** (page 26)
 - ◆ **Entering Text** (page 41)
-

Your phone is packed with features that simplify your life and expand your ability to stay connected to the people and information that are important to you. This section will guide you through the basic functions and calling features of your phone.

Front View of Your Phone



Key Functions

1. **Earpiece** lets you hear the caller and automated prompts.
2. **Main LCD (display)** displays all the information needed to operate your phone, such as the call status, the Contacts list, the date and time, and the signal and battery strength.
3. **Navigation Key** allows you to scroll through menus quickly and easily. These keys can also be reassigned to create customized shortcuts.
4. **Softkey (left)** lets you select softkey actions or menu items corresponding to the bottom left line on the Main LCD.
5. **MENU/OK Key** lets you access the phone's menus and selects the highlighted choice when navigating through a menu.
6. **Camera Key** lets you access the Pictures menu and take pictures and videos.
7. **Ready Link/Recorder Button** allows you to access the Sprint PCS Ready Link® List or Voice Recorder menu. (See "Using Sprint PCS Ready Link" on page 180 or "Using the Voice Recorder" on page 144.)
8. **TALK Key** allows you to place or receive calls, answer Call Waiting, use Three-Way Calling, or activate Voice Dial.
9. **Side Volume Key** allows you to adjust the ringer volume in standby mode (with the phone open) or adjust the voice volume during a call. The volume key can also be used to scroll up or down to navigate through the different menu options.
10. **SPEAKER Key** lets you place or receive calls in speakerphone mode.
11. **Microphone** allows other callers to hear you clearly when you are speaking to them.

12. **Accessories Jack** allows you to connect a USB cable (included).
CAUTION! Inserting an accessory into the incorrect jack may damage the phone.
13. **Keypad** lets you enter numbers, letters, and characters, and navigate within menus. Press and hold keys 2-9 for speed dialing.
14. **END/POWER Key** lets you turn the phone on or off, end a call, or return to standby mode. While in the main menu, it returns the phone to standby mode and cancels your input. When you receive an incoming call, press to enter silent mode and mute the ringer.
15. **Side Camera Key** lets you access the camera and video mode and take pictures and videos.
16. **BACK Key** deletes characters from the display in text entry mode. When in a menu, pressing the Back key returns you to the previous menu. This key also allows you to return to the previous screen in a Sprint PCS Vision session.
17. **Side Call Key** lets you place calls by using Automatic Speech Recognition.
18. **Softkey (right)** lets you select softkey actions or menu items corresponding to the bottom right line on the Main LCD.
19. **LED Indicator** shows your phone's connection status at a glance.
20. **Speaker** lets you hear the different ringers and sounds. You can mute the ringer when receiving incoming calls by pressing  **END**,  **Back** or any of the external keys. The speaker also lets you hear the caller's voice in speakerphone mode.

- 21. Headset Jack** allows you to plug in either a stereo headset (included) or an optional headset for convenient, hands-free conversations. **CAUTION!** Inserting an accessory into the incorrect jack may damage the phone.

Note:	To use the stereo headset included with your phone, please attach the supplied adapter plug.
--------------	--

- 22. Sub LCD** lets you monitor the phone's status and see who's calling without opening the phone.
- 23. Charger Jack** connects the phone to the Travel Charger (included).
- 24. External Control Key** lets you access the Sprint Music Store or navigate through the media player menu and play music without opening the phone. This key can also be used when using the Camera and Voice Recorder functions.
- 25. Internal Antenna** facilitates reception and transmission. To maximize call performance, do not obstruct the internal antenna area. (See page 26.)
- 26. Camera Lens**, as part of the built-in camera, lets you take pictures and videos.
- 27. Flash** lets you take pictures and videos in low light.

Viewing the Display Screen

Your phone's display screen provides a wealth of information about your phone's status and options. This list identifies the symbols you'll see on your phone's display screen:

Tip: To view a list of your phone's icons and descriptions, from the main menu select **Settings > Phone Info > Icon Glossary**.

-  shows your current signal strength. The more lines you have, the stronger your signal.
-  means your phone cannot find a signal.
-  indicates the call is on hold.
-  tells you a call is in progress.
-  indicates the Sprint PCS Ready Link service is enabled.
-  indicates the Sprint PCS Ready Link service is enabled and the speakerphone mode is set to on.
-  indicates the Sprint PCS Ready Link service is disabled.
-  indicates Sprint PCS Vision/Sprint PCS Ready Link access is active.
-  indicates Sprint PCS Vision/Sprint PCS Ready Link access is dormant.
-  indicates Sprint PCS Vision/Sprint PCS Ready Link access is disabled.
-  indicates Sprint Power Vision status.
-  indicates Sprint Power Vision service is available. (The icon is animated while service is active.)
-  indicates Sprint Power Vision service is dormant.

-  indicates you are “roaming” off the Nationwide Sprint PCS Network.
-  indicates you have missed voice calls.
-  indicates you have missed Ready Link calls.
-  indicates you have scheduled events or call alarms.
-  indicates you have alarm clock or countdown notifications.
-  indicates you have picture messages, voicemail messages, text messages, or SMS Voice messages.
-  indicates you have urgent messages.
-  indicates you have two or more different types of missed calls, scheduled events, call alarms, or alarm clock notifications.
-  indicates you have a new wireless backup alert.
-  indicates the Bluetooth feature is enabled (blue icon).
-  indicates the handset is discoverable by another Bluetooth device.
-  indicates the handset is connected to a Bluetooth device (green icon).
-  indicates the handset is communicating with a Bluetooth device.
-  indicates your access to a secure site.
-  shows the level of your battery charge. The more black you see, the more power you have left. (The icon is animated while the battery is charging.)
-  shows your battery is charging in “Power Off” state.
-  indicates volume level 1 to 8 and vibrate feature are set.
-  indicates 1-beep feature is set.

-  indicates 1-beep and vibrate feature are set.
-  indicates the voice call ringer setting is off.
-  indicates the voice call ringer setting is off and the vibrate feature is set.
-  indicates all the sound settings are off and the vibrate feature is set.
-  indicates all the sound settings are off.
-  indicates the Location feature of your phone is enabled.
-  indicates the Location feature of your phone is disabled.
-  indicates you have a new caller's message.
-  indicates the Screen Call Auto setting is on.
-  indicates your phone is in TTY mode.
-  indicates Headset mode is set to Sprint PCS Ready Link and a headset is connected.
-  indicates Headset mode is set to Voice Calls and a headset is connected.
-  indicates the alarm clock or countdown setting is on.
-  indicates the speakerphone mode is set to on.
-  indicates a call is in progress using the Bluetooth device.
-  indicates the wired Car Kit device is set to on.
-  indicates the wired Headset device is set to on.
-  indicates music is playing in the background.

Note: Display indicators help you manage your roaming charges by letting you know when you're off the Nationwide Sprint PCS Network. (For more information, see Section 2D: Controlling Your Roaming Experience on page 92.)

Features of Your Phone

Congratulations on the purchase of your phone. The M1 by Sanyo is lightweight, easy-to-use, and reliable, and it also offers many significant features and service options. The following list previews some of those features and provides page numbers where you can find out more:

- Digital dual-band capability allows you to make and receive calls while on the Nationwide Sprint PCS Network and to roam on other 1900 and 800 MHz digital networks where Sprint has implemented roaming agreements (page 92).
- SMS Text Messaging (page 237), and SMS Voice Messaging (page 241) provide quick and convenient messaging capabilities.
- Sprint PCS Voice Command lets you dial phone numbers by speaking someone's name or the digits of that person's phone number (page 246).
- Your Contacts list allows you to store up to 500 entries, with up to seven phone numbers per entry (page 105). A separate Sprint PCS Ready Link Contacts list provides easy access to up to 200 personal contacts and 200 company-provided contacts (page 183).
- The built-in Calendar offers several personal information management features to help you manage your busy lifestyle (page 117).
- Your phone is equipped with a Location feature for use in connection with location-based services that may be available in the future (page 61).
- Your phone's external LCD display allows you to monitor the phone's status and to see who's calling without opening the phone.

- T9 Text Input lets you quickly type messages with one keypress per letter (page 43).
- Speed dial lets you dial phone numbers with one keypress (page 40).
- The built-in camera allows you to take full-color digital pictures and videos, view your pictures and videos using the phone's display, and instantly send them to family and friends using Sprint PCS Picture Mail service (page 152).
- The external control key allows you to access the Sprint Music Store or navigate through the media player menu and play music without opening the phone (page 212).
- The Automatic Speech Recognition (ASR) allows you to place calls by speaking to your phone (page 137).
- The File Manager allows you to manage multiple file stored in the phone's memory (page 130).
- Supports PictBridge to connect and print to any PictBridge compliant printer (page 178).
- The Media Player allows you to enjoy streaming video and audio with your phone (page 205).
- The built-in Bluetooth technology allows you to connect wirelessly to a number of Bluetooth devices to share information more easily than ever before (page 216).

Note: **Sprint PowerVision**—Your phone and service provide access to the Sprint PowerVision Network and its enhanced data services, including Sprint TVSM, the Sprint Music StoreSM, fast Web access, downloadable games, ringers, and applications, and more. For complete information on the services available, see the *Experience the Sprint Power Vision Network* guide that came with your phone.

Turning Your Phone On and Off

Turning Your Phone On

To turn your phone on:

- ▶ Press .

Once your phone is on, it may display “Looking for service...,” which indicates that your phone is searching for a signal. When your phone finds a signal, it automatically enters standby mode – the phone’s idle state. At this point, you are ready to begin making and receiving calls.

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. When a signal is found, your phone automatically returns to standby mode.

In Power Save mode, your phone searches for a signal periodically without your intervention. You can also initiate a search for Sprint PCS service by pressing any key (when your phone is turned on).

Tip:

The Power Save feature helps to conserve your battery power when you are in an area where there is no signal.

Turning Your Phone Off

To turn your phone off:

- ▶ Press and hold  for two seconds until you see the powering down animation on the display screen.

Your screen remains blank while your phone is off (unless the battery is charging).

Using Your Phone's Battery and Charger

WARNING

Use only Sprint-approved or manufacturer-approved batteries and chargers with your phone. The failure to use a Sprint-approved or manufacturer-approved battery and charger may increase the risk that your phone will overheat, catch fire, or explode, resulting in serious bodily injury, death, or property damage.

Sprint-approved or manufacturer-approved batteries and accessories can be found at Sprint Stores or through your phone's manufacturer; or call 1-866-343-1114 to order. They're also available at www.sprint.com – click on the **Wireless** link under Personal, and then click **Accessories**.

Battery Capacity

Your phone is equipped with a Lithium Ion (Li-Ion) battery. It allows you to recharge your battery before it is fully drained. The battery provides up to 3.8 hours of continuous digital talk time.

When there are approximately two minutes of talk time left, the phone sounds an audible alert and then powers down.

Note:

Long backlight settings, searching for service, vibrate mode, browser use, and other variables may affect the battery's talk and standby times.


Tip:

Be sure to watch your phone's battery level indicator and charge the battery before it runs out of power.

Installing the Battery

To install the Li-Ion battery:

- ▶ To install, insert the battery into the opening on the back of the phone and gently press down until the latch snaps into place.

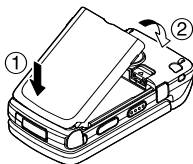


Removing the Battery

WARNING

Do not handle a damaged or leaking Li-Ion battery as you can be burned.

To remove your battery:

1. Make sure the power is off so that you don't lose any stored numbers or messages.
2. Push up on the battery release latch and lift the battery up and away from the phone.

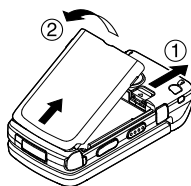

Charging the Battery

Your phone's Li-Ion battery is rechargeable and should be charged as soon as possible so you can begin using your phone.

Keeping track of your battery's charge is important. If your battery level becomes too low, your phone automatically turns off, and you will lose all the information you were just working on. For a quick check of your phone's battery level, glance at the battery charge indicator located in the upper-right corner of your phone's display screen. If the battery charge is getting too low, the battery icon () appears and the phone displays a warning message.

Always use a Sprint-approved or manufacturer-approved desktop charger, travel charger, or vehicle power adapter to charge your battery.

Using the Charger

To use the travel charger provided with your phone:

1. Plug the travel charger into a wall outlet.
2. Plug the other end of the travel charger into the charger jack at the lower left portion of your phone (with the battery installed).
 - A red indicator light on the phone lets you know the battery is charging.
 - A green indicator light lets you know when charging is completed.

With the Sprint-approved Li-Ion battery, you can recharge the battery before it becomes completely run down.

Note: You can also charge your phone's battery with the included USB cable. Simply plug one end of the USB cable into your phone and the other end into a free USB port on your desktop or laptop computer.

If your battery has been completely run down, it cannot be charged via the USB cable.

Navigating Through Phone Menus

The navigation key on your phone allows you to scroll through menus quickly and easily. The scroll bar at the right of the menu keeps track of your position in the menu at all times.

To navigate through a menu, simply press the navigation key up or down. If you are in a first-level menu, such as **Settings**, you may also navigate to the next or previous first-level menu by pressing the navigation key right or left.

For a diagram of your phone's menu, please see "Your Phone's Menu" on page iv-xi.

Selecting Menu Items

As you navigate through the menu, menu options are highlighted. Select any numbered option by simply pressing the corresponding number on the phone's keypad. You may also select any item by highlighting it and pressing **MENU OK**.

For example, if you want to view your last incoming call:

1. Select **MENU OK** to access the main menu.
2. Select **Call History** by pressing **ABC 2** or by highlighting it and pressing **MENU OK**. (It may already be highlighted.)
3. Select **Incoming** by pressing **ABC 2** or by highlighting it and pressing **MENU OK**. (If you have received any calls, they are displayed on the screen.)

Note: For the purposes of this guide, the above steps condense into "Select **MENU > Call History > Incoming**."

Backing Up Within a Menu

To go to the previous menu:

- ▶ Press .

To return to standby mode:

- ▶ Press .

Displaying Your Phone Number

Just in case you forget your phone number, your phone can remind you.

To display your phone number:

- ▶ Select  > **Settings** > **Phone Info** > **Phone#/User ID**. (Your phone number and other information about your phone and account will be displayed.)

Tip:

You can also display your phone number through the Contacts menu. Select **MENU** > **Contacts** > **My Name Card**. To send your contact information using Bluetooth, select **Options** (right softkey) > **Send via Bluetooth**.


Note:

To select menu options (such as **Settings**, above), highlight the option and press **MENU**. (If the menu options are numbered, you may also select an option simply by pressing the corresponding number key.)

Making and Answering Calls

Holding your Phone

To maximize performance, do not obstruct the upper back portion of your phone where the internal antenna is located while using the phone.

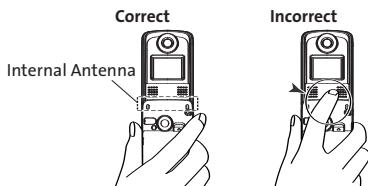

Making Calls

Placing a call from your wireless phone is as easy as making a call from any landline phone. Just enter the number, press **TALK**, and you're on your way to clear calls.

To make a call using your keypad:

1. Make sure your phone is on.
2. Enter a phone number from standby mode. (If you make a mistake while dialing, press **Back** to erase one digit at a time. Press and hold **Back** to erase the entire number.)
3. Press **TALK**. (To make a call when you are roaming and Call Guard is enabled, highlight **Roam Call** and press **MENU OK**. See "Using Call Guard" on page 96.)
4. Press **END** or close the phone when you are finished.

Tip:

To redial your most recent call (outgoing, incoming, or missed), press **TALK** twice.

When making calls off the Nationwide Sprint PCS Network, always dial using 11 digits (1 + area code + phone number).

You can also place calls from your phone by using Sprint PCS Voice Command (page 249), speed dialing numbers from your Contacts (page 40), and by using your Call History listings (page 101), Automatic Speech Recognition (page 137), and Voice-Activated Dialing (page 135).

Dialing Options

When you enter numbers in standby mode, select **Options** (right softkey) to display the following dialing options.

To initiate an option, highlight it and press .

- **Abbrev. Dial** to dial the phone number in your Contacts list that ends with the digits you entered. (See “Using Abbreviated Dialing” on page 38.)
- **Call** to dial the phone number.
- **Call:Speaker On** to dial the phone number in speakerphone mode.
- **Send Message** to send an SMS Text message (page 237), an SMS Voice message (page 241), or a Picture Mail (page 171).
- **Save Phone#** to save the phone number in your Contacts list. (See “Saving a Phone Number” on page 36.)
- **Find** to display Contacts list entries that end with the digits you entered. (See “Finding a Phone Number” on page 37.)
- **[P] Hard Pause** to insert a hard pause. (See “Dialing and Saving Phone Numbers With Pauses” on page 37.)
- **[T] 2-Sec. Pause** to insert a two-second pause. (See “Dialing and Saving Phone Numbers With Pauses” on page 37.)
- **Hyphen** to insert a hyphen. (Hyphens are generally for visual appeal only; they are not necessary when entering numbers.)

Answering Calls

To answer an incoming call with the phone open:

1. Make sure your phone is on. (If your phone is off, incoming calls go to voicemail.)
2. Press  to answer an incoming call. (Depending on your phone's settings, you may also answer incoming calls by opening the phone or by pressing any number key. See “Setting the Open/Close Flip Option” on page 74 and “Setting Any Key Answer” on page 73 for more information.)

To answer an incoming call with the phone closed:

1. Make sure your phone is on. (If your phone is off, incoming calls go to voicemail.)
2. When your phone rings or vibrates, press and hold the Side Call key () on the right side of the phone. (The call will be answered in speakerphone mode.)
– or –
Open the phone to use the earpiece.

Note: If the setting for Open Flip is set to “No Action,” opening the phone will not answer the call. (See “Setting the Open/Close Flip Option” on page 74.)

Your phone notifies you of incoming calls in the following ways:

- The phone rings or vibrates.
- The indicator light flashes.
- The backlight illuminates.
- The screen displays an incoming call message.

If the incoming call is from a number stored in your Contacts, the entry's name is displayed. The caller's phone number may also be displayed, if available.

When receiving a call, the following options are also displayed by selecting **Options** (right softkey). To select an option, highlight it and press .

- **Call Guard** to answer the call when you are in roaming mode. (See “Using Call Guard” on page 96.)
- **Answer** or **Answer:Speaker** to answer the call.
- **Select Audio** to switch the call to your desired device (if available).
- **Answer on Hold** to put the call on hold.
- **Screen Call** to answer the call by using a prerecorded announcement. (See “Setting Up Screen Call” on page 149.)
- **Quiet Ringer** to mute the ringer (if available).

Answering a Roam Call With Call Guard Enabled

Call Guard is an option that helps you manage your roaming charges when making or receiving calls while outside the Nationwide Sprint PCS Network. Please see Section 2D: Controlling Your Roaming Experience for more information about roaming.

To answer a call when you are roaming and Call Guard is enabled:

1. Press .
2. Press  to proceed while the pop-up message is displayed.

Note:	When your phone is off, incoming calls go directly to voicemail.
--------------	--

Ending a Call

To disconnect a call when you are finished:

- ▶ Close the phone or press .

Note:	If the setting for Close Flip is not set to “End,” closing the phone will not end the call. (See “Setting the Open/Close Flip Option” on page 74.)
--------------	--

Missed Call Notification

When an incoming call is not answered, the Missed Call log is displayed on your screen.

To call the **Missed Call** entry from the notification screen:

- ▶ Select **Call** (left softkey).

Tip:	If you have two or more notifications, the Missed Alerts list will appear.
-------------	--

To display a **Missed Call** entry from standby mode:

1. Select  > **Missed Alerts**.
2. Highlight the entry you wish to view and press .

Calling Emergency Numbers

You can place calls to 911 (dial    ) , even if your phone is locked or your account is restricted.

Note: When you place an emergency call, your phone automatically enters Emergency mode.

During an emergency call select **Options** (right softkey) to display your options. To select an option, highlight it and press .

- **Speaker On** to activate speakerphone mode. (If you are already in speakerphone mode, **Speaker Off** will be displayed.)
- **Unlock Phone** to unlock your phone (appears only if the phone is locked).
- **Close Menu** to close the pop-up menu (appears only if the phone is unlocked).

Tip: Select **MyPhone** (left softkey) to display your phone number during an emergency call.

To exit Emergency mode:

1. Press  to end a 911 call.
2. Select **Options** (right softkey) to display the options menu.
3. Highlight **Exit Emergency** and press .

Note: When you are in Emergency mode, you can exit only from the options menu.

To select Emergency mode options:

1. Press  to end a 911 call.
2. Select **Options** (right softkey).
 - **Call 911** to call 911.
 - **Call 911: Speaker** to call 911 in speakerphone mode.
 - **Exit Emergency** to exit Emergency mode.
3. Highlight an option and press .

Enhanced 911 (E911) Information

This phone features an embedded Global Positioning System (GPS) chip necessary for utilizing E911 emergency location services where available.

When you place an emergency 911 call, the GPS feature of your phone begins to seek information to calculate your approximate location. Depending on several variables, including availability and access to satellite signals, it may take up to 30 seconds or more to determine and report your approximate location.

IMPORTANT

Always report your location to the 911 operator when placing an emergency call. Some designated emergency call takers, known as Public Safety Answering Points (PSAPs) may not be equipped to receive GPS location information from your phone.

In-Call Options

Selecting **Options** (right softkey) during a call displays a list of features you may use during the call. To select an option, highlight the option and press . The following options are available through the Options menu:

- **Flash** to answer an incoming Call Waiting call or to connect a third party during Three-Way Calling.
- **Mute** or **Unmute** to mute or reactivate your phone's microphone.
- **Transfer Audio** to switch the call to your desired device (if applicable).
- **Speaker On** or **Speaker Off** routes the phone's audio through the speaker or through the earpiece.
 - Select **Speaker On** to route the phone's audio through the speaker. (You can adjust the speaker volume using the volume keys on the side of the phone.)
 - Select **Speaker Off** to use the phone's earpiece.

WARNING

Because of higher volume levels, do not place the phone near your ear during speakerphone use.

- **Three-Way Call** to call a third party.
- **Missed Alerts** to display missed notifications.
- **Call History** to access the Call History menu. (See “Managing Call History” on page 98.)
- **Contacts** to access the Contacts menu. (See “Using Contacts” on page 104.)
- **Messaging** to access the Messaging menu.

- **Tools** to access the Tools menu. (See “Using the Phone’s Calendar and Tools” on page 116.)
- **Settings** to access the Settings menu. (See “Controlling Your Phone’s Settings” on page 46.)

During a call, both the left softkey button and the Side Call key () function as the **Mute** button. Press either one to mute the phone’s microphone for privacy. Press it again to unmute the phone.

End-of-Call Options

To display the following options, select **Options** (right softkey) within 10 seconds after disconnecting a call. To select an option, highlight it and press .

- **Call Again** to dial the phone number.
- **Call:Speaker On** to dial the phone number in speakerphone mode.
- **Send Message** to send a Text, Picture Mail, or SMS Voice message.
- **Save Phone#** to save the phone number in your Contacts list.
 - **Go to Phone Book** appears when the number is already in your Contacts list. (See “Saving a Phone Number” on page 36.)
- **Rename** to change the current entry’s name to Caller ID name (if applicable).

Note: The End-of-Call options are not displayed for calls identified as **No Caller ID** or **Restricted**.

Tip: You can also choose to send a message by selecting **Send Msg** (left softkey).

Saving a Phone Number

Your phone can store up to 700 phone numbers in up to 500 Contacts entries. Each entry's name can contain 32 characters. Your phone automatically sorts the Contacts entries alphabetically. (For more information, see Section 2F: Using Contacts on page 104.)

To save a number from standby mode:

1. Enter a phone number and select **Options** (right softkey) > **Save Phone#**.
2. Select **New Name** to create a new Contacts entry for the number or **From Ph. Book** to save the number to an existing entry. (This step is not necessary on the very first entry in Contacts.)
3. Select a label and press .
4. Enter a name for the new entry using the keypad and press .
— or —
Search for an existing contact name and press  to save the new number.
5. Select **Save** (left softkey) to save the entry.
6. Select **Done** (left softkey) to return to standby mode.

Finding a Phone Number

You can search Contacts entries for phone numbers that contain a specific string of numbers.

To find a phone number:

1. Enter the last four or more digits of the number in standby mode. (The more numbers you enter, the more specific the search becomes.)
2. Select **Options** (right softkey) > **Find**. (The Contacts entry that ends with the digits you entered appears.)
3. To display the Contacts entry that contains the phone number you entered, highlight the entry and press . To dial the number, press .

Dialing and Saving Phone Numbers With Pauses

You can dial or save phone numbers with pauses for use with automated systems, such as voicemail or credit card billing numbers.

There are two types of pauses available on your phone:

- **P Hard Pause** sends the next set of numbers when you press .
- **T 2-Sec. Pause** automatically sends the next set of numbers after two seconds.

Note: You can have multiple pauses in a phone number and combine two-second and hard pauses.

To dial or save phone numbers with pauses:

1. Enter the phone number.
2. Select **Options** (right softkey) and select either **Hard Pause** or **2-Sec. Pause**. (Hard pauses are displayed as a “P” and two-second pauses as a “T.”)
3. Enter additional numbers.
4. Press  to dial the number.
– or –
Select **Options** (right softkey) > **Save Phone#** to save the number in your Contacts.

Note: When dialing a number with a hard pause, press **TALK** to send the next set of numbers.

Using Abbreviated Dialing

Abbreviated Dialing is similar to speed dialing. It allows you to dial a number by entering the last four or five digits of any number in your Contacts directory. This feature becomes available when you enable Abbreviated Dialing and program a five- or six- digit prefix you wish to use for abbreviated dialing. (See “Setting Abbreviated Dialing” on page 77.)

To place a call using Abbreviated Dialing:

1. Enter the last four or five digits of the prefix phone number.
2. Press .

Note: If the digits match more than one entry, the Abbrev. Dial list will be displayed; select the correct entry and press **TALK** again.

Tip: You can also place a call by selecting **Options** (right softkey) > **Abbrev. Dial** after step 1 above.

Plus (+) Code Dialing

When placing international calls, you can use Plus Code Dialing to automatically enter the international access code for your location (for example, 011 for international calls made from the United States). This feature is subject to network availability.

To make a call using Plus Code Dialing:

1. Press and hold **+ 0** until a “+” is displayed on your phone screen.
2. Dial the country code and phone number you’re calling, and press **TALK**. (The access code for international dialing will automatically be dialed, followed by the country code and phone number.)

Dialing From the Contacts List

To dial directly from a Contacts entry:

1. Select **MENU OK** > **Contacts** > **Find/Add Entry**.

Shortcut: From standby mode, select **Contacts** (right softkey) to list entries.

2. Highlight the entry you want to call and press **TALK** to dial the entry’s default phone number.

– or –

To dial another number from the entry, highlight the name and press **MENU OK**, and then highlight the number you wish to call and press **TALK**.

Using Speed Dialing

You can store up to eight numbers in your phone's speed dial memory to make contacting friends and family as easy as pressing a button. With this feature, you can dial speed dial entries using one keypress for locations 2–9. (For information on setting up speed dial numbers, see “Assigning Speed Dial Numbers” on page 111.)

To use speed dial:

- ▶ From standby mode, press and hold the appropriate key for approximately two seconds. The display confirms that the number has been dialed when it shows “Connecting...”.

Note:	Speed dialing may not be available when you are roaming; when you are roaming off the Nationwide Sprint PCS Network, you must always dial using 11 digits (1 + area code + number).
--------------	---

Entering Text

Selecting a Character Input Mode

Your phone provides convenient ways to enter words, letters, punctuation, and numbers whenever you are prompted to enter text (for example, when adding a Contacts entry or when using Sprint PCS Mail and SMS Text Messaging).

To change the character input mode:

1. When you display a screen where you can enter text, select **Mode** (right softkey) to change the character input mode.
2. Use your navigation key to select one of the following options:
 - **T9 Word** to enter characters using predictive T9 Text Input. (See page 43.)
 - **Alphabet** to enter characters by using the Alphabet mode. (See page 45.)
 - **SYMBOL** to enter symbols.
 - **SMILEYS** to enter smile icons.
 - **Emoticons** to enter “emoticons.”
 - **Web Shortcuts** to enter Web shortcuts (for example, www., <http://www.>, or [.com](http://www.)).
 - **Preset Messages** to enter preset messages. (See page 63.)
 - **Recent Messages** to enter messages used recently.

Tip:

When you see triangles on the left and right of the menu, you can press the navigation key left or right to switch between different input modes.

- **Paste List** to paste copied or cut text (if applicable).
- **NUMBER** to enter numbers.
- **Signature** to enter your signature. (See page 64.)
- **Select Language** to select the language (English or Spanish).
- **Erase All** to erase all text (if applicable).
- **Select Text** to select stored text for copying or cutting (if applicable).
- **Add Word** to store words that you use frequently. (See page 43.)
- **Text Options** to display the Text Entry settings menu. (See page 44.)

Note: The Input Mode will vary according to the entry field.

Tip: When entering text, press [**shift***] to change letter capitalization (**ABC > abc > Abc**).

Entering Characters Using T9 Text Input

T9 Text Input lets you enter text in your phone by pressing keys just once per letter. (To select the **T9 Word** mode when entering text, see “Selecting a Character Input Mode” on page 41.)

T9 Text Input analyzes the letters you enter using an intuitive word database and creates a suitable word. (The word may change as you type.)

To enter a word using T9 Text Input:

1. Select the **T9 Word** character input mode. (See “Selecting a Character Input Mode” on page 41.)
2. Press the corresponding keys once per letter to enter a word. (For example, to enter the word “Bill,” press **ABC 2** **GHI 4** **JKL 5** **JKL 5**.) (If you make a mistake, press **Back** to erase a single character. Press and hold **Back** to erase an entire word.)
3. To accept a word and insert a space, press **Space #**.

Adding a Word to the T9 Database

If a word you want to enter is not displayed as an option when you are using T9 Text Input, you can add it to the database.

To add a word to the T9 Text Input database:

1. Select the **Add Word** input mode. (See “Selecting a Character Input Mode” on page 41.)
2. Enter the word using Alphabet Mode and select **Save** (left softkey). (See “Entering Characters Using Alphabet Mode” on page 45.) The word will appear as an option the next time you scroll through options during T9 Text Input.

Customizing the T9 Settings

To customize the T9 Settings:

1. Select  > **Settings** > **Others** > **Text Entry** > **T9 Settings**.

— or —

Select the **Text Options** input mode, and then select **T9 Settings**. (See “Selecting a Character Input Mode” on page 41.)

2. Select an option and press .
- **Next Word Prediction** to automatically display the word by retrieving incoming messages that may follow the current T9 text input.
- **Word Completion** to allow T9 text input to recognize words by searching Contacts list and messages.
- **Predict. Text Mode** to allow T9 text input to recognize words you have added to the T9 database.
- **Word Choice List** to display the word choice list.
- **Show after enter** to select when (after 1–3 digits) to display the word choice list. The word choice list will be displayed based on the number of digits you selected.
- **Show after wait** to select how many seconds the phone should wait to display the word choice list.

For more information about T9 Text Input, visit the Tegic Web site at www.T9.com.

Entering Characters Using Alphabet Mode

To enter characters using Alphabet Mode (multi-tap key entry):

1. Select the **Alphabet** mode. (See “Selecting a Character Input Mode” on page 41.)
2. Press the corresponding keys repeatedly until the desired letter appears. (For example, to enter the word “Bill,” press **ABC 2** twice, **GHI 4** three times, **JKL 5** three times, and **JKL 5** three times again.) (If you make a mistake, press **Back** to erase a single character. Press and hold **Back** to erase an entire word.)

By default, the first letter of an entry is capitalized and the following letters are lowercased. After a character is entered, the cursor automatically advances to the next space after two seconds or when you enter a character on a different key.

Characters scroll in the following order:

Key	English Sequence		
	Upper Case		Lower Case
1	., @ 1 ? ! * # /		
ABC 2	A B C 2		a b c 2
DEF 3	D E F 3		d e f 3
GHI 4	G H I 4		g h i 4
JKL 5	J K L 5		j k l 5
MNO 6	M N O 6		m n o 6
PQRS 7	P Q R S 7		p q r s 7
TUV 8	T U V 8		t u v 8
WXYZ 9	W X Y Z 9		w x y z 9
+ 0	0		
Space #	Space		
Shift ✕	One-character- shifted	Caps Lock	Unshifted

Controlling Your Phone's Settings

In This Section

- ◆ **Sound Settings** (page 47)
 - ◆ **Display Settings** (page 54)
 - ◆ **Location Settings** (page 61)
 - ◆ **Messaging Settings** (page 62)
 - ◆ **Airplane Mode** (page 67)
 - ◆ **TTY Use With Sprint PCS Service** (page 68)
 - ◆ **Wireless Backup** (page 70)
 - ◆ **Phone Setup Options** (page 72)
-

Using the available menu options, you can customize your phone to sound, look, and operate just the way you want it to. This section describes how you can change your phone's settings to best suit your needs. Take a few moments to review these options and to adjust or add settings that are right for you.

Sound Settings

Ringer Types

Ringer types help you identify incoming calls and messages. You can assign ringer types to individual Contacts entries, types of calls, and types of messages.

- **Preprogrammed Ringers** include a variety of standard ringer types and familiar music.
- **Vibrating Ringer** alerts you to calls or messages without disturbing others.
- **Downloaded Ringers** can be downloaded right to your phone.

Selecting Ringer Types for Incoming Calls

Your phone provides a variety of ringer options that allow you to customize your ring and volume settings. These options allow you to identify incoming calls by the ring.

To select a ringer type for incoming calls:

1. Select  > **Settings** > **Sounds** > **Ringer Type** > **Incoming Calls**.
2. Select **With Caller ID** or **No Caller ID**.
3. Use your navigation key to scroll through the available ringers.
4. Press  to assign the desired ringer.

To select a distinctive ringer for incoming calls while roaming:

1. Select  > **Settings** > **Sounds** > **Ringer Type** > **Incoming Calls**.
2. Select **Roaming** > **Distinctive**. (Select **Normal** to deactivate this feature.)

Selecting Ringer Types for Sprint PCS Ready Link Calls

To select a ringer type for Sprint PCS Ready Link calls:

1. Select  > **Settings** > **Sounds** > **Ringer Type** > **Ready Link**.
2. Select **Ready Link Calls**, **R-Link Missed**, or **R-Link Floor Tone**.
3. Use your navigation key to scroll through the available ringers.
4. Press  to assign the desired ringer.

Selecting Ringer Types for Voicemail or Calendar/Alarm

To select a ringer type for voicemail or calendar/alarm:

1. Select  > **Settings** > **Sounds** > **Ringer Type** > **Voicemail or Calendar/Alarm**.
2. Press , and then use your navigation key to scroll through the available ringers.
3. Press  to assign the desired ringer.

Selecting Ringer Types for Messaging

To select a ringer type for messaging:

1. Select  > **Settings** > **Sounds** > **Ringer Type** > **Messaging**.
2. Select **Text**, **Picture Mail**, or **VoiceSMS**.
3. Use your navigation key to scroll through the available ringers.
4. Press  to assign the desired ringer.

Selecting a Vibrate Pattern

With this feature, you can select a vibrate pattern for incoming calls, messages, and alarms.

To select a vibrate pattern:

1. Select  > **Settings** > **Sounds** > **Vibrate Pattern**.
2. Select **Incoming Calls**, **Ready Link**, **Voicemail**, **Messaging**, or **Calendar/Alarm**. The following items require an additional step:
 - **Incoming Calls**: select **With Caller ID**, **No Caller ID**, or **Roaming**.
 - **Ready Link**: select **Ready Link Calls** or **R-Link Missed**.
 - **Messaging**: select **Text**, **Picture Mail**, or **VoiceSMS**.
3. Using the navigation key, select a setting and press .

Selecting a Tone Length

Your phone offers two options for selecting the audible tones accompanying a keypress. (Longer tone lengths may be better for tone recognition when dialing voicemail or other automated systems.)

To select a key tone:

1. Select  > **Settings** > **Sounds** > **Others** > **Tone Length**.
2. Select **Short** or **Long** and press .

Setting a Start-up/Power-off Tone

To set a start-up/power-off tone:

1. Select  > **Settings** > **Sounds** > **Others**.
2. Select **Start-up Tone** or **Power-off Tone**.
3. Scroll to select a tone and press .

Using Voice Prompt

This feature allows you to hear voice prompts at Voice Recorder, Screen Call setting, etc. (default setting is off).

To enable or disable voice prompt:

1. Select  > **Settings** > **Sounds** > **Others** > **Voice Prompt**.
2. Select **On** or **Off** and press .

Tip: When ringervolume is set to “Silence All” or “Vibrate All,” voice prompts cannot be heard.

Setting Up Key Press Echo

With this feature, you can hear a voice say the numbers when you press the keypad. This feature is available when you are in standby mode.

To turn Key Press Echo on or off:

1. Select  > **Settings** > **Sounds** > **Others** > **Key Press Echo**.
2. Select **On** or **Off** and press .

Adjusting the Phone's Volume Settings

You can adjust your phone's volume settings to suit your needs and your environment.

To adjust the ringer volume:

1. Select  > **Settings** > **Sounds** > **Volume** > **Ringer**.
2. Using the navigation key, choose a volume level and select **Done** (left softkey).
 - When selecting a volume, press  to put a check mark in the box next to **Always Vibrate**. This setting makes the ringer vibrate at any volume level.

Tip:

You can adjust the ringer volume in standby mode (or the earpiece volume during a call) by using the volume key on the left side of your phone.

Adjusting the Alert Volume Settings

This setting controls the alert volume of Ready Link, Voicemail, message, and Calendar/Alarm. You can set the alert volume separate from the ringer volume setting.

To adjust the alert volume setting:

1. Select  > **Settings** > **Sounds** > **Volume** > **Advanced Ringer**.
2. Select **Ready Link**, **Voicemail**, **Messaging**, or **Calendar/Alarm**.
3. Using the navigation key, select **Separate Vol**.
4. Press the navigation key right or left to choose a volume level, and select **Done** (left softkey).

Adjusting the Phone's Receiver Volume

To adjust the receiver volume:

1. Select  > **Settings** > **Sounds** > **Volume** > **Receiver**.
2. Select either **Earpiece** or **Speaker**.
3. Using the navigation key, choose a volume level, and select **Done** (left softkey).

Adjusting the Application, Start-up/Power-off, or Key Beep Volume

To adjust the Application, Start-up/Power-off, or Key Beep volume:

1. Select  > **Settings** > **Sounds** > **Volume**.
2. Select **Application**, **Start-up/Pw-off**, or **Key Beep**.
3. Using the navigation key, choose a volume level, and select **Done** (left softkey).

Alert Notification

Your phone can alert you with an audible tone when you change service areas, once a minute during a voice call, or when there are incoming or missed Sprint PCS Ready Link calls.

To enable or disable alert sounds:

1. Select  > **Settings** > **Sounds** > **Alerts**.
2. Select **Service**, **Ready Link**, **Voicemail**, **Messaging**, **Minute Beep**, or **Signal Fade** and press .
3. Use your navigation key to select a setting and press .

Silence All

There may be times when you need to silence your phone entirely. The phone's Silence All option allows you to mute all sounds without turning your phone off.

To activate Silence All:

- ▶ With the phone open, press and hold the volume key down in standby mode. (The screen will display "Silence All.")

Tip:

You can also select **Vibrate All** to set your phone to vibrate only (all sounds will be muted).

To deactivate Silence All:

- ▶ Press the volume key up repeatedly to select a desired volume level.

Display Settings

Changing the Text Greeting

The text greeting can be up to 15 characters and is displayed on your phone's screen in standby mode. You may choose to keep the phone's default greeting ("Sprint"), or you may enter your own custom greeting.

To display or change your greeting:

1. Select **MENU OK** > **Settings** > **Display** > **Greeting** > **Custom**.
2. Enter a custom greeting using your keypad and press **MENU OK**. (See "Entering Text" on page 41.) (To erase the existing greeting one character at a time, press **Back**. To erase the entire greeting, press and hold **Back**.)

Changing the Backlight Time Length

The backlight setting lets you select how long the display screen and keypad remain backlit after any keypress is made.

To change the backlight setting:

1. Select **MENU OK** > **Settings** > **Display** > **Backlight**.
2. Select **Main LCD** or **Sub LCD**.
3. Select a time setting and press **MENU OK**.

To change the Keypad backlight setting:

1. Select **MENU OK** > **Settings** > **Display** > **Backlight** > **Key**.
2. Select a time setting and press **MENU OK**.

Note:	Long backlight settings affect the battery's talk and standby times.
--------------	--

Changing the Display Screen Animation

Your new phone offers options for what you see on the display screen during various phone functions.

To change the animation display:

1. Select  > **Settings** > **Display** > **Animation**.
2. Select **Standby, Outgoing Calls, or Service Search**.
3. Select **Set**, and then select an option (**Preset, My Content, Get New, My Albums, Assigned Media, or Off**) and press 
 - For standby, you can select **Time** to set the animation starting time. To set the display size, select **Video Size** (if applicable).
4. Select an animation display and press .

Changing the Display for Incoming Calls

You can set the color or downloaded image to be shown on the Incoming Calls display.

To change the incoming calls display:

1. Select  > **Settings** > **Display** > **Incoming Calls**.
2. Select an option (**Preset, My Content, Get New, My Albums, Assigned Media, or Off**) and press .
3. Select a color or image and press .

Changing the Clock/Calendar Display for Standby Mode

Select from among a variety of items to be displayed in standby mode.

To set the clock/calendar display for standby mode:

1. Select  > **Settings** > **Display** > **Clock/Calendar**.
2. Select **Main LCD** or **Sub LCD**.
3. Select an item and press .
4. Select **OK** (left softkey) to apply the clock display setting.

Changing the Screen Saver

Your new phone offers you the option of displaying a screen saver while in standby mode.

To change the screen saver:

1. Select  > **Settings** > **Display** > **Screen Saver**.
2. Select **Main LCD** or **Sub LCD**.
3. Select an option (**Preset**, **My Content**, **Get New**, **My Albums**, **Assigned Media**, or **Off**) and press .
4. Select the desired screen saver and press .

Power Save Mode

This feature helps conserve your battery power by setting the Main LCD and Sub LCD backlights to “Always Off,” and by setting the Main LCD sleep mode to “after 30 sec.” and the Sub LCD sleep mode to “after 5 sec.”

To set this feature:

1. Select  > **Settings** > **Display** > **Power Save Mode**.
2. A message appears. Select **OK** (left softkey) to continue.
3. Select **On** and press . (Select **Off** to deactivate this feature.)

Customizing the User Interface

Your phone lets you customize the user interface (UI) of the Standby Screen, Main Menu, and My Favorites with your choice of downloaded themes to reflect your personality. (By default, the theme is set to “SANYO.”)

To customize the display theme:

1. Select  > **Settings** > **Display** > **Themes**.
2. Select an available theme and press .
 - **SANYO** displays the preset standard clock display selected in the Calendar/Clock menu. (See “Changing the Clock/Calendar Display for Standby Mode” on page 56.)

Note: If you change back to **SANYO** after you have applied a theme, the phone will return to the previous clock display. Also, if you select a theme other than **SANYO**, the navigation key shortcuts are disabled.

Changing the Phone's Menu Style

Your phone allows you to choose how the menu is displayed on the screen.

To select the display's menu style:

- ▶ Press  to access the main menu, and then select **Options** (right softkey) > **Change View**.

Changing the Display for Area Name

This feature enables you to show the area of the phone number you are calling or are called from when the number is not registered in your Contacts list. For example, a call to or from 213-555-5555 will display "California."

To set your area name display:

1. Select  > **Settings** > **Display** > **Others** > **Match Area Code**.
2. Select **On** or **Off** and press .

Note: This feature is available only when the phone number has 10 digits, or 11 digits beginning with 1, and matches an area code.

Changing the Display for My Buddy

This feature enables you to see a humorous animation on the Main LCD by opening the phone.

To activate or deactivate My Buddy:

1. Select  > **Settings** > **Display** > **Others** > **My Buddy**.
2. Select **On** or **Off** and press .

Changing the Text Font Size

This setting allows you to adjust the display appearance when entering text (for example, when writing a message or when adding a Contacts entry) or when viewing a message.

To change the text font size:

1. Select  > **Settings** > **Display** > **Others** > **Font Size**.
2. Select **View** or **Input**.
 - **View** to select **Messaging** or **Browser**.
 - **Input** to select **Phone#s**, **Messaging**, or **Others**.
3. Select a font size and press .

Tip:

From the font preview display, select a font size by pressing the navigation key right or left.

Setting Return to Standby Mode

This feature allows you to select the way to return to standby mode.

To set this feature:

1. Select  > **Settings** > **Display** > **Others** > **Return to Idle**.
2. A message appears. Select **OK** (left softkey) to continue.
3. Select **Automatically** or **End Key** and press .
 - **Automatically** to return to standby mode automatically when no key is pressed for 30 seconds.
 - **End Key** to return to standby mode by pressing .

Note:	End Key setting affects the battery's talk and standby times.
--------------	--

Sleep Mode

This feature helps conserve your battery power by restricting the display.

To set this feature:

1. Select  > **Settings** > **Display** > **Others** > **Sleep Mode**.
2. Select **Main LCD** or **Sub LCD**.
3. Select an option and press . (Select **Off** to deactivate this feature.)

Location Settings

Your phone is equipped with a Location feature for use in connection with location-based services that may be available in the future.

The Location feature allows the network to detect your position. Turning Location off will hide your location from everyone except 911.

Note: Turning Location on will allow the network to detect your position using GPS technology, making some Sprint PCS applications and services easier to use. Turning Location off will disable the GPS location function for all purposes except 911, but will not hide your general location based on the cell site serving your call. No application or service may use your location without your request or permission. GPS-enhanced 911 is not available in all areas.

To enable your phone's Location feature:

1. Select  > **Settings** > **Location**. (The Location disclaimer will be displayed.)
2. Read the disclaimer and select **OK** (left softkey).
3. Select **On** or **Off** and press .

When the Location feature is on, your phone's standby screen will display the  icon. When Location is turned off, the  icon will be displayed.

Messaging Settings

Staying connected to your friends and family has never been easier. With your phone's advanced messaging capabilities, you can send and receive many different kinds of text messages without placing a voice call.

Your phone's messaging settings make text messaging even faster and easier by letting you decide how you would like to be notified of new messages, create a signature with each sent message, and create your own preset messages, to name just a few.

Setting Message Notification

When you receive a message, your phone notifies you by displaying an icon on your display screen. You can also choose to be notified with a message notification on your display screen.

To set message notification:

1. Select  > **Settings** > **Messaging** > **Notification**.
2. Select **Msgs and Icon** or **Icon Only** and press .

Tip:	To access Messaging settings menu, you can also select MENU > Messaging > Settings .
-------------	---

Managing Preset Messages

Your phone is loaded with twenty preset messages, in English and in Spanish, to help make sending text messages faster and easier. These messages, such as “Where are you?,” “Let’s get lunch,” and “Meet me at,” can be customized or deleted to suit your needs.

To edit a preset message:

1. Select **MENU OK** > **Settings** > **Messaging** > **Preset Msgs.** (The list of preset messages is displayed.)
2. Select the message you want to edit and press **MENU OK**.
3. Use your keypad to edit the message and select **OK** (left softkey) to save your changes.
 - To reset all messages, select **Options** (right softkey) > **Reset All Msgs** > **Yes** during step 2 above.

To change the language of the preset messages:

1. Select **MENU OK** > **Settings** > **Messaging** > **Preset Msgs.**
2. Select **Options** (right softkey) > **Select Language.**
3. Select **English** or **Spanish** and press **MENU OK**.

Note: For information on editing text, see “Entering Text” on page 41.

Setting Auto Delete

With this feature, messages are automatically erased starting with the oldest if your Voice SMS Inbox becomes full.

To set Auto Delete:

1. Select **MENU OK** > **Settings** > **Messaging** > **VoiceSMS** > **Auto Delete.**
2. Select **On** or **Off** and press **MENU OK**.

Setting a Callback Number

With this feature, you can notify your recipients of your callback number with a text message.

To set the callback number:

1. Select  > **Settings** > **Messaging** > **Text** > **Send Callback#**.
2. Press , and then select an option from the following and press .
 - **None** to send no callback number.
 - **My Phone#** to send your phone number.
 - **Other** to send a specific callback number. To set a number, enter a phone number and press .

Adding a Customized Signature

Each message you send can have a customized signature to reflect your personality.

To add a customized signature to each sent message:

1. Select  > **Settings** > **Messaging** > **Text** > **Signature**.
2. Press , and then select **On**.
3. Select **Text**, enter your signature, and select **OK** (left softkey). (See “Entering Text” on page 41.)
4. Select **Save** (left softkey) to save your signature.

Setting the Delivery Receipt

You can set to receive a delivery receipt message confirming that your message was successfully delivered to your recipient.

To set the delivery receipt:

1. Select  > **Settings** > **Messaging** > **Text** > **Delivery Receipt**.
2. Select **On** or **Off** and press .

Note: The Delivery Receipt feature may not currently be implemented.

Setting Drafts Alert

Drafts Alert gives you a reminder when you have unsent messages waiting in the drafts folder.

To set Drafts Alert:

1. Select  > **Settings** > **Messaging** > **Text** > **Drafts Alert**.
2. Select **On** or **Off** and press .

Setting the Speakerphone for SMS Voice Messaging

You can set the speakerphone on or off for SMS Voice messaging. By default, the speakerphone is set to on.

To set the speakerphone on or off:

1. Select  > **Settings** > **Messaging** > **VoiceSMS** > **Speakerphone**.
2. Select **On** or **Off** and press .

Setting the Sender's Name for SMS Voice Messaging

With this feature, you can identify yourself to people who receive your SMS Voice messages.

To set the sender's name:

1. Select  > **Settings** > **Messaging** > **VoiceSMS** > **From Name**.
2. Enter your name and select **OK** (left softkey).

Setting an Alert Notification for SMS Voice Messaging

SMS Voice Messaging uses your phone's data services. You can set your phone to play an alert to let you know you are connecting to data services each time you access an SMS Voice message.

To set an alert for SMS Voice messaging:

1. Select  > **Settings** > **Messaging** > **VoiceSMS** > **Connection Alert**.
2. Select **Mark** (right softkey) to warn you each time you access SMS Voice Messaging.
3. Select **Done** (left softkey) to save the setting.

Airplane Mode

Airplane Mode allows you to use many of your phone's features, such as Games, Music, Voice Recorder, etc., when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When your phone is in Airplane Mode, it cannot send or receive any calls or access online information.

To set your phone to Airplane Mode:

1. Select  > **Settings** > **Others** > **Airplane Mode**.
2. Read the disclaimer and select **OK** (left softkey).
3. Select **On** or **Off** and press .

While in Airplane Mode, your phone's standby screen will display "Phone Off."



TTY Use With Sprint PCS Service

A TTY (also known as a TDD or Text Telephone) is a telecommunications device that allows people who are deaf, hard of hearing, or who have speech or language disabilities, to communicate by telephone.

Your phone is compatible with select TTY devices. Please check with the manufacturer of your TTY device to ensure that it supports digital wireless transmission. Your phone and TTY device will connect via a special cable that plugs into your phone's headset jack. If this cable was not provided with your TTY device, contact your TTY device manufacturer to purchase the connector cable.

When establishing your Sprint PCS service, please call Sprint Customer Service via the state Telecommunications Relay Service (TRS) by first dialing  **7**  **1**  **1**  **TALK**. Then provide the state TRS with this number: 866-727-4889.

To turn TTY Mode on or off:

1. Select  > **Settings** > **Others** > **TTY**. (An informational message will be displayed.)
2. Read the disclaimer and select **OK** (left softkey).
3. Select **Enable** and press  to turn TTY mode on.
– or –
Select **Disable** and press  to turn TTY mode off.

Note: In TTY Mode, your phone will display the TTY access icon.

If TTY mode is enabled, the audio quality of non-TTY devices connected to the headset jack may be impaired.

WARNING **911 Emergency Calling**

Sprint recommends that TTY users make emergency calls by other means, including Telecommunications Relay Services (TRS), analog cellular, and landline communications. Wireless TTY calls to 911 may be corrupted when received by public safety answering points (PSAPs), rendering some communications unintelligible. The problem encountered appears related to TTY equipment or software used by PSAPs. This matter has been brought to the attention of the FCC, and the wireless industry and the PSAP community are currently working to resolve this.

Wireless Backup

This feature allows you to back up all of your contacts to the Sprint Web site and restore them if your phone is lost, stolen, damaged, or replaced.

Note: To use the Wireless Backup service, you are required to activate the service from your phone.

To subscribe to the wireless backup service, you will need to purchase a license to use the wireless backup service via the Sprint vending machine, accessed through the WAP browser on your phone. The license expires after a set period of time and must be renewed regularly. As part of the initial subscription process, a random wireless backup password is generated. The randomly-generated password will be sent to the handset as an SMS text message. (**Subscribe** launches the subscription process. If you are already subscribed to wireless backup, **Unsubscribe** will be displayed.)

Activating and Deactivating Wireless Backup Service

To activate Wireless Backup service:

1. Select  > **Contacts** > **Wireless Backup**.
2. Select **Subscribe**. (You will be prompted to confirm your license status.)
3. Select **Yes** (left softkey) and follow the onscreen instructions to purchase the license.
4. Please wait while registering the license. (You will see a confirmation screen if it has been successfully registered.)

Note: Wireless Backup can also be activated by selecting **MENU** > **Settings** > **Wireless Backup** and following steps 2–4 above.

Note: Once you have completed the registration, you will receive an SMS text message with your password. You will need this password to access the Sprint PCS Wireless Backup Web site (www.wirelessbackup.sprint.com) and edit your contacts from your personal computer.

Tip: Each time you edit your phone's contacts, they are backed up at www.wirelessbackup.sprint.com.

To deactivate Wireless Backup service:

1. Select  > **Contacts** > **Wireless Backup**.
2. Select **Unsubscribe**. (A message will be displayed.)
3. Follow the onscreen instructions to unsubscribe from the Wireless Backup service.

Note: You can unsubscribe from the Wireless Backup service only through the Sprint Web site.

Setting Wireless Backup Alert

This feature turns the pop-up alert on or off when a Wireless Backup is in progress.

To set Wireless Backup alert:

1. Select  > **Contacts** > **Wireless Backup** > **Alert**.
2. Select **On** or **Off** and press .

Tip: To display the Wireless Backup service information, select **MENU** > **Contacts** > **Wireless Backup** > **Learn More**.

Phone Setup Options

My Favorites

Your phone offers you the option of assigning a shortcut key to a favorite or often-used function. Selecting **Favorites** (left softkey) in standby mode will launch your personally designated shortcut.

To assign your shortcut key:

1. Select **Favorites** (left softkey) to display the My Favorites list.
2. Highlight **<Add Favorite>** and press .
3. Select one of the following options.
 - **Contact** to display stored Contacts entries.
 - **My Content** to display downloaded items stored in your phone.
 - **My Album** to display thumbnail images stored in your In Phone folder.
 - **Web Bookmark** to display your bookmarked sites.
 - **Menu Item** to assign an often-used menu item.
4. Using the navigation key or your keypad, select functions to be assigned to the My Favorites list.
5. Select **Assign** (left softkey) to save.

From My Favorites list, select **Options** (right softkey) to display the following items. To select an item, highlight it and press .

- **Replace** to replace an existing shortcut key.
- **Remove** to remove an existing shortcut key.
- **Remove All** to remove all the existing shortcut key.
- **Help** to display the My Favorite list information.

Auto-Answer Mode

You may set your phone to automatically pick up incoming calls in speakerphone mode or when connected to an optional hands-free device.

To set Auto-Answer mode:

1. Select  > **Settings** > **Others** > **Auto Answer**.
2. To select an option, highlight it and press .
 - **Hands-free** to answer calls automatically when the phone is connected to a hands-free device (sold separately). Remember, your phone will answer calls in Auto-Answer mode even if you are not present.
 - **Speakerphone** to answer calls automatically in speakerphone mode.
3. Select **5 Seconds**, **15 Seconds**, or **Off** and press .

Display Language

You can choose to display your phone's onscreen menus in English or in Spanish.

To assign a language for the phone's display:

1. Select  > **Settings** > **Others** > **Language**.
2. Select **English** or **Español** and press .

Setting Any Key Answer

This feature allows you to answer incoming calls by pressing any key (except  **END**, **Back**, softkeys, and external keys).

To turn Any Key Answer on or off:

1. Select  > **Settings** > **Others** > **Any Key Answer**.
2. Select **On** or **Off** and press .

Setting the Open/Close Flip Option

This feature enables you to answer an incoming call by opening the phone or to end a call by closing the phone.

To activate the Open Flip feature:

1. Select  > **Settings** > **Others** > **Open/Close Flip**.
2. Select **Open** and press .
3. Select **Answer Call** and press .
 - To deactivate this feature, select **No Action**.

To activate the Close Flip feature:

1. Select  > **Settings** > **Others** > **Open/Close Flip**.
2. Select **Close**. (You will see a message on the display.)
3. Select **OK** (left softkey) to continue.
4. Select an option from the following and press .
 - **End** to end the call.
 - **Continue(Mute)** to continue the call. Your voice is muted; however you can hear the caller's voice from the speaker.
 - **Continue(Unmute)** to continue the call. You can hear the caller's voice and speak to the phone to answer.

Note:	The Close Flip feature does not apply during Ready Link calls or when you are using the speakerphone, a headset, or a car kit.
--------------	--

Setting Power On to Alert

Power On to Alert helps prevent unintentional or accidental power-on of your phone's alarm settings while your phone is turned off (default setting is off). This feature applies only to Event Alerts, Call Alarm, and Alarm Clock.

To turn Power On to Alert on or off:

1. Select  > **Settings** > **Others** > **Power On to Alert**.
2. Select **On** or **Off** and press .
 - **On** activates alarm in Airplane Mode even if the phone is turned off.
 - **Off** deactivates all alarm settings while the phone is turned off.

Setting the Key Guard

This feature enables you to lock external keys while the phone is closed.

To turn the Key Guard on or off:

1. Select  > **Settings** > **Others** > **Key Guard**.
2. Select **On** or **Off** and press .

Note: This feature does not apply when the phone is open.

Tip: You can deactivate this feature temporarily by pressing and holding either the Side Call key () or  on the external control key while the phone is closed.

Setting Navigation Key Shortcuts

You can use the navigation key as a shortcut to access specific menu items directly from standby mode. With this feature, you can reassign the default shortcut keys to the menu items you choose.

To set the navigation key shortcuts:

1. Select **MENU OK** > **Settings** > **Others** > **Navigation Keys**.
2. Select the shortcut key you wish to reassign and press **MENU OK**.
3. Using the navigation key or your keypad, select a function.
4. Select **Assign** (left softkey) to save.

Note: These shortcuts are available only when the display theme is set to **SANYO** (see “Customizing the User Interface” on page 57).

Setting Text Entry Options

To set your text entry options:

1. Select **MENU OK** > **Settings** > **Others** > **Text Entry**.
2. Select an option and press **MENU OK**.
 - **Auto-Capital** to turn auto-capitalization on or off.
 - **My Words** to add or edit a word in the T9 database (see page 43).
 - **Input Language** to select the language (English or Spanish).
 - **Default Input** to select T9 word, Alphabet, or Retain Mode for the initial entry mode.
 - **Auto-Space** to turn auto-spacing on or off after T9 words you enter.
 - **Recent Access** to display the three most recently used input mode menu items from the top of the list when this setting is set to on.

- **T9 Settings** to customize the T9 settings (see page 44).
- **Add Word** to store words that you use frequently (see page 43).
- **Auto-Complete** to turn auto-completion on or off.
- **Help** to see the T9 instruction page.

Setting Abbreviated Dialing

Abbreviated Dialing allows you to dial a number using the last four or five digits of the phone number. You can use either of the following options for this feature:

- **Ph. Book Match** allows you to retrieve any number saved in your Contacts list by entering the last three to six digits of the number.
- **Prepend #** allows you to predefine the first five- or six-digit prefix you wish to use for abbreviated dialing, so that you can dial a number by entering only the last four or five digits of the number.

To set Abbreviated Dialing:

1. Select  > **Settings** > **Others** > **Abbrev. Dial**.
2. Select **Ph. Book Match**, and then select **Enable** or **Disable**.
3. Select **Prepend**, and then select **Enable**.
4. Select **Prepend#**, enter the first five- or six- digit prefix, and then select **OK** (left softkey).
 - To deactivate this feature, select **Disable** during step 3 above.

Tip: To make an Abbreviated Dial call, see “Using Abbreviated Dialing” on page 38.

Note: This setting does not apply to 911 or Sprint 411.

Setting Headset Mode

This feature allows you hands-free phone use. Set the headset mode to Voice Call or Ready Link call and press the Turbo Button (the operation button) on the headset to activate useful functions.

To connect the headset:

- ▶ Simply plug the headset into your phone's headset jack.

To set the headset mode:

1. Select  > **Settings** > **Others** > **Headset Mode**.
2. Select **Turbo Button**.
3. Select **Voice Calls**, **Ready Link**, or **Off** and press .

To set the sound mode:

1. Select  > **Settings** > **Others** > **Headset Mode**.
2. Select **Earpiece**.
3. Select **Stereo** or **Mono** and press .

To set the ringer sound:

1. Select  > **Settings** > **Others** > **Headset Mode**.
2. Select **Ringer Sound**.
3. Select **Normal** or **Headset Only** and press .

Note:	Be sure to use only the stereo headset that comes with your phone. Using other headsets could damage your phone.
--------------	--

Setting Your Phone's Security

In This Section

- ◆ **Accessing the Security Menu** (page 80)
 - ◆ **Using Your Phone's Lock Feature** (page 80)
 - ◆ **Restricting Calls** (page 83)
 - ◆ **Using Special Numbers** (page 84)
 - ◆ **Erasing Phone Content** (page 85)
 - ◆ **Resetting the Browser** (page 86)
 - ◆ **Resetting Favorites** (page 86)
 - ◆ **Resetting Your Phone** (page 87)
 - ◆ **Resetting Your Picture Mail Account** (page 87)
 - ◆ **Resetting Default Settings** (page 88)
 - ◆ **Resetting and Locking Your Phone Through SMS** (page 89)
 - ◆ **Security Features for Sprint PCS Vision** (page 91)
-

By using the security settings on your phone, you receive peace of mind without sacrificing flexibility. This section will familiarize you with your phone's security settings. With several options available, you can customize your phone to meet your personal needs.

Accessing the Security Menu

All of your phone's security settings are available through the Security menu. You must enter your lock code to view the Security menu.

To access the Security menu:

1. Select  > **Settings** > **Security**.
2. Enter your lock code to display the Security menu.

Tip:	If you can't recall your lock code, try using the last four digits of either your Social Security number or phone number or try 0000 or NATL (6285). If none of these work, call Sprint Customer Service at 1-888-211-4PCS (4727).
-------------	--

Using Your Phone's Lock Feature

Locking Your Phone

When your phone is locked, you can only receive incoming calls or make calls to 911, Sprint Customer Service, or special numbers. (See "Using Special Numbers" on page 84.)

To lock your phone:

1. From the Security menu, select **Lock Phone** > **Lock Now**. (To set your phone to lock the next time it is turned on, select **On Power-up**.)
2. Select **Full Lock** or **Excep. Incoming Calls** and press .

Unlocking Your Phone

To unlock your phone:

1. From standby mode, select **Unlock** (left softkey).
2. Enter your lock code.

Changing the Lock Code

To change your lock code:

1. Select  > **Settings** > **Security**, and then enter your lock code. (The Security menu is displayed.)
2. Select **Others** > **Change Lock**, and then enter and re-enter your new lock code.

Calling in Lock Mode

You can place calls to 911, to Sprint Customer Service, and to your special numbers when in lock mode. (For information on special numbers, see “Using Special Numbers” on page 84.)

To place an outgoing call in lock mode:

- ▶ To call an emergency number, special number, or Sprint Customer Service, enter the phone number and press .

Locking the Pictures Menu

With this feature, you must enter your lock code when you access the pictures menu.

To lock the pictures menu:

1. Select  > **Settings** > **Security**, and then enter your lock code. (The Security menu is displayed.)
2. Select **Picture Mail** > **Lock Pictures** > **Lock Now**. (Select **Unlocked** to deactivate this feature.)

Lock Services

With this feature, you can choose to restrict access to Sprint PCS Vision services, incoming and outgoing voice calls, and Sprint PCS Ready Link calls or settings.

To activate lock services:

1. From the Security Menu, select **Others** > **Lock Services**.
2. Select **Voice Calls**, **PowerVision**, or **Ready Link**.
3. Select **Locked**. (Select **Unlocked** to deactivate this feature.)

Restricting Calls

There may be occasions when you want to limit the numbers your phone can call or from which it can receive calls. You can use the Restrict Calls setting to do just that. (The Restrict Calls setting does not apply to 911 or Sprint Customer Service.)

To restrict calls:

1. Select  > **Settings** > **Security**, and then enter your lock code. (The Security menu is displayed.)
2. Select **Others** > **Limit Use**.
3. Select **Outgoing Calls** or **Incoming Calls**.
4. Select an option and press .
 - **Allow All** lets you make or receive all calls.
 - **Phone Book Only** lets you make or receive calls to or from Contacts entries, voicemail, or special numbers only.
 - **Special #s Only** lets you make or receive calls to or from three special numbers only. (See “Using Special Numbers” on page 84.)

Note: Restricted incoming calls are forwarded to voicemail.

Using Special Numbers

Special numbers are important numbers that you have designated as being “always available.” You can call and receive calls from special numbers even if your phone is locked.

You can save up to three special numbers in addition to your Contacts entries. (The same number may be in both directories.)

To add or replace a special number:

1. Select  > **Settings** > **Security**, and then enter your lock code. (The Security menu is displayed.)
2. Select **Others** > **Special #s**.
3. Select a field for your entry.
4. Enter the number and press .

Note:	There are no speed dial options associated with special numbers.
--------------	--

Note:	Special numbers cannot be called if Lock Services (see page 82) is set to Locked.
--------------	---

Erasing Phone Content

You can quickly and easily erase all the content that you have created in your phone.

To erase phone content:

1. Select  > **Settings** > **Security**, and then enter your lock code. (The Security menu is displayed.)
2. Select **Erase/Reset**, and then select an option from the following and press .
 - **Erase Ph. Book** to erase all of your Contacts entries.
 - **Erase My Content** to erase all items you have downloaded to your phone.
 - **Erase Pictures** to erase all pictures and videos saved in the phone.
 - **Erase Voice Data** to erase all voice data and call memos saved in the phone.
 - **Erase Voice Tag** to erase all voice tags you have recorded.
 - **Erase Messages** to erase all messages (including locked ones) in the Inbox, Sent Mail, Pending, and Drafts folders; all Recent Lists; and all user-created preset messages (text messages, SMS Voice messages, etc.).
 - **Erase Cal. Events** to erase all scheduled events (including secret ones).
 - **Erase Memory** to erase all data and folders you have made in File Manager.
3. If you are certain you would like to erase, select **OK** (left softkey), and then select **Yes**.

Resetting the Browser

This option resets your Web browser's history, bookmarks, cookies, auto-complete text, and URLs.

To reset the browser:

1. Select  > **Settings** > **Security**, and then enter your lock code. (The Security menu is displayed.)
2. Select **Erase/Reset** > **Reset Browser**.
3. If you are certain you would like to reset, select **OK** (left softkey), and then select **Yes**.

Resetting Favorites

This option resets all of your favorites settings.

To reset favorites:

1. Select  > **Settings** > **Security**, and then enter your lock code. (The Security menu is displayed.)
2. Select **Erase/Reset** > **Reset Favorites**.
3. If you are certain you would like to reset your favorites settings, select **OK** (left softkey), and then select **Yes**.

Resetting Your Phone

Resetting the phone resets all settings and erases all data on your phone (except data saved in the File Manager).

To reset your phone:

1. Select  > **Settings** > **Security**, and then enter your lock code. (The Security menu is displayed.)
2. Select **Erase/Reset** > **Reset Phone**. (A disclaimer is displayed.)
3. Read the disclaimer and select **OK** (left softkey).
4. If you are certain that you would like to erase all the data and reset your settings, select **Yes**.

Resetting Your Picture Mail Account

This option resets your authentication ID for your Sprint PCS Picture Mail account.

To reset your Picture Mail account:

1. Select  > **Settings** > **Security**, and then enter your lock code. (The Security menu is displayed.)
2. Select **Picture Mail** > **Reset Picture Mail**. (A warning is displayed.)
3. Read the disclaimer and select **OK** (left softkey).
4. If you are certain that you would like to reset your Picture Mail account, select **Yes**.

Resetting Default Settings

Resetting the default settings restores all the factory defaults, including the ringer types and display settings. The Contacts, Call History, Calendar, and Messaging are not affected.

To reset default settings:

1. Select  > **Settings** > **Security**, and then enter your lock code. (The Security menu is displayed.)
2. Select **Erase/Reset** > **Default Settings**. (A warning is displayed.)
3. Read the disclaimer and select **OK** (left softkey).
4. If you are certain that you would like to restore all the factory settings, select **Yes**.

Resetting and Locking Your Phone Through SMS

When your phone is lost or stolen, you can erase your important personal information (such as Contacts entries, call history, and messages) and lock your phone by sending a specially-formatted SMS message to your phone.

From your computer, sign on to www.sprint.com and send a message to your phone (input your 10-digit wireless phone number) in the following format:

\\RESET**<Passcode>** RESET
<Passcode> - your defined passcode.

The default passcode is your phone's 11-digit ESN (Electronic Serial Number), which can be found on the phone's packaging or on the phone itself. The locked phone will display the following message: "If found, please call Sprint Customer Service 1-888-211-4727."

Note: To send a message from mailer software, input your 10-digit wireless phone number followed by "@messaging.sprintpcs.com."

To enable locking your phone through SMS:

1. Select  > **Settings** > **Security**, and then enter your lock code. (The Security menu is displayed.)
2. Select **Others** > **Found Me** > **Reset/Lock** > **Enable**.
To unlock a phone that has been locked through SMS, please take the phone to your nearest Sprint Store.

Changing the Passcode

To change the passcode for the specially-formatted SMS message:

1. Select  > **Settings** > **Security**, and then enter your lock code. (The Security menu is displayed.)
2. Select **Others** > **Found Me** > **Change Passcode**.
3. Enter a new passcode (11 digits).
4. Re-enter the new passcode.

Security Features for Sprint PCS Vision

Enabling and Disabling Sprint PCS Vision Services

You can disable Sprint PCS Vision services, including Sprint Power Vision, without turning off your phone; however, you will not have access to all Sprint PCS Vision services, including Web and messaging. Disabling Sprint PCS Vision will avoid any charges associated with Sprint PCS Vision services. While signed out, you can still place or receive phone calls, check voicemail, and use other voice services. You may enable Sprint PCS Vision services again at any time.

To disable Sprint PCS Vision services:

1. Select  > **Settings** > **Power Vision** > **Disable Vision**.
(A message will be displayed.)
2. Select **Disable** (right softkey) to confirm that you want to sign out.

To enable Sprint PCS Vision services:

1. Select  > **Settings** > **Power Vision** > **Enable Vision**.
(A message will be displayed.)
2. Select **OK** (left softkey) to enable Vision service.

Controlling Your Roaming Experience

In This Section

- ◆ Understanding Roaming (page 93)
 - ◆ Setting Your Phone's Roam Mode (page 95)
 - ◆ Using Call Guard (page 96)
 - ◆ Using Data Roam Guard (page 97)
-

Roaming is the ability to make or receive calls when you're off the Nationwide Sprint PCS Network. Your new M1 by Sanyo works anywhere on the Nationwide Sprint PCS Network and allows you to roam on 1900 and 800 MHz digital networks.

This section explains how roaming works as well as special features that let you manage your roaming experience.

Understanding Roaming

Recognizing the Roaming Icon on the Display Screen

Your phone's display screen always lets you know when you're off the Nationwide Sprint PCS Network. Any time you are roaming, the phone displays the roaming icon ().

Tip: Remember, when you are using your phone off the Nationwide Sprint PCS Network, always dial numbers using 11 digits (1 + area code + number).

Note: Unless your Sprint PCS service plan includes roaming, you will pay a higher per-minute rate for roaming calls.

Roaming on Other Digital Networks

When you're roaming on digital networks, your call quality and security will be similar to the quality you receive when making calls on the Nationwide Sprint PCS Network. However, you may not be able to access certain features, depending on the available network.

Note: If you're on a call when you leave the Nationwide Sprint PCS Network and enter an area where roaming is available, your call is dropped. If your call is dropped in an area where you think Sprint PCS service is available, turn your phone off and on again to reconnect to the Nationwide Sprint PCS Network.

Checking for Voicemail Messages While Roaming

When you are roaming off the Nationwide Sprint PCS Network, you may not receive on-phone notification of new voicemail messages. Callers can still leave messages, but you will need to periodically check your voicemail for new messages if you are in a roaming service area for an extended period of time.

To check your voicemail while roaming:

1. Dial 1 + area code + your phone number.
2. When you hear your voicemail greeting, press .
3. Enter your passcode at the prompt and follow the voice prompts.

When you return to the Nationwide Sprint PCS Network, voicemail notification will resume as normal.

Setting Your Phone's Roam Mode

Your phone allows you to control your roaming capabilities. By using the **Roaming** menu option, you can determine which signals your phone accepts.

Set Mode

Choose from three different settings on your phone to control your roaming experience.

To set your phone's roam mode:

1. Select  > **Settings** > **Others** > **Roaming** > **Set Mode**.
2. To select an option, highlight it and press .
 - **Sprint Only** allows you to access the Nationwide Sprint PCS Network only and prevents roaming on other networks.
 - **Automatic** seeks Sprint PCS service. When Sprint PCS service is unavailable, the phone searches for an alternate system.
 - **Roaming Only** forces the phone to seek a roaming system. The previous setting (Sprint Only or Automatic) is restored the next time the phone is turned on.

Using Call Guard

Your phone has two ways of alerting you when you are roaming off the Nationwide Sprint PCS Network: the onscreen roaming icon and Call Guard. Call Guard makes it easy to manage your roaming charges by requiring an extra step before you can place or answer a roaming call. (This additional step is not required when you make or receive calls while on the Nationwide Sprint PCS Network.)

To turn Call Guard on or off:

1. Select  > **Settings** > **Others** > **Roaming** > **Call Guard**.
2. Highlight **On** or **Off** and press .

To place roaming calls with Call Guard on:

1. From standby mode, dial 1 + area code + the seven-digit number and press .
2. Press  **1** to proceed while the pop-up message is displayed.
– or –
Press any key to erase the pop-up message, and then select **Options** (right softkey) > **Roam Call**.

To answer incoming roaming calls with Call Guard on:

1. Press . (A message will be displayed notifying you that roaming charges will apply.)
2. Press  **1** to proceed while the pop-up message is displayed.
– or –
Press any key to erase the pop-up message, and then select **Options** (right softkey) > **Answer**.

Note:	If the Call Guard feature is set to On , you need to take extra steps to make and receive roaming calls.
--------------	---

Using Data Roam Guard

Depending on service availability and roaming agreements, your phone may be able to access data services while roaming on certain digital systems. You can set your phone to alert you when you are roaming off the Nationwide Sprint PCS Network and try to use data services such as messaging.

To set your Data Roam Guard notification:

1. Select  > **Settings** > **Others** > **Roaming** > **Data Roam Guard**.
2. Select an option and press .
 - **Always Ask** sets your phone's Data Roam Guard feature on. You will see a prompt and will be required to respond anytime you access data services while roaming.
 - **Never Ask** turns your phone's Data Roam Guard feature off. You will not be notified of your roaming status when accessing data services.

To use data services when Data Roam Guard is active:

- ▶ When a pop-up notification appears informing you that data roam charges may apply, select **Roam** (left softkey) to connect.

Note: Call Guard and Data Roam Guard are turned off by default on your phone.

Managing Call History

In This Section

- ◆ **Viewing History** (page 99)
 - ◆ **Call History Options** (page 100)
 - ◆ **Making a Call From Call History** (page 101)
 - ◆ **Saving a Phone Number From Call History** (page 102)
 - ◆ **Prepending a Phone Number From Call History** (page 103)
 - ◆ **Erasing Call History** (page 103)
-

The Call History keeps track of incoming calls, outgoing calls, and missed calls. This section guides you through accessing and making the most of your Call History.

Viewing History

You'll find the Call History feature very helpful. It is a list of the last 20 phone numbers (or Contacts entries) for calls you placed, accepted, or missed. Call History makes redialing a number fast and easy. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

Each entry contains the phone number (if it is available) and Contacts entry name (if the phone number is in your Contacts). Duplicate calls (same number and type of call) may only appear once on the list.

To view a Call History entry:

1. Select  > **Call History**, and then select **Outgoing**, **Incoming**, **Missed**, or **Recent Calls**.
2. Highlight the entry you wish to view and press .

Note: Call History records only calls that occur while the phone is turned on. If a call is received while your phone is turned off, it will not be included in the phone's Incoming or Missed call logs.

Call History Options

For additional information about and options for a particular call, highlight a Call History entry and press . This feature displays the date and time of the call, the phone number (if available), and the caller's name (if the number is already in your Contacts). By selecting **Options** (right softkey), you can choose from the following options:

- **Call** to dial the phone number.
- **Call:Speaker On** to dial the phone number in speakerphone mode.
- **Send Message** to send a Text, Picture Mail, or SMS Voice message.
- **Save Phone#** to save the phone number (if applicable).
 - **Go to Phone Book** appears when the number is already in your Contacts list. (See “Saving a Phone Number From Call History” on page 102.)
- **Rename** to change the current entry's name to Caller ID name (if applicable).
- **Prepend** to add numbers to the beginning of the phone number. (See “Prepending a Phone Number From Call History” on page 103.)
- **Copy to Personal** to copy the phone number to the Ready Link Personal List (only appears when Sprint PCS Ready Link mode is set to Enable and the number does not match any stored entry in your Personal List).
- **Erase** to erase the entry.

Tip:	You can also view the next Call History entry by pressing the navigation key right or view the previous entry by pressing the navigation key left.
-------------	--

Making a Call From Call History

To place a call from Call History:

1. Select  > **Call History**, and then select **Outgoing**, **Incoming**, **Missed**, or **Recent Calls**.
2. Use your navigation key to select a Call History entry and press .

Note: You cannot make calls from Call History to entries identified as **No Caller ID** or **Restricted**.

Saving a Phone Number From Call History

Your phone can store up to 500 Contacts entries. Contacts entries can store up to a total of 700 phone numbers, and each entry's name can contain 32 characters.

To save a phone number from Call History:

1. Use your navigation key to select a Call History entry and select **Options** (right softkey) > **Save Phone#**.
2. Select **New Name** to create a new Contacts entry for the number or **From Ph. Book** to save the number to an existing entry.
3. Select a label and press .
4. Enter a name for the new entry using the keypad and press .
— or —
Search for an existing contact name and press  to save the new number.
5. Select **Save** (left softkey) to save the entry.

After you have saved the number, the new Contacts entry is displayed. (See “Contacts Entry Options” on page 109.)

Note:	You cannot save phone numbers already in your Contacts or from calls identified as No Caller ID or Restricted .
--------------	---

Prepending a Phone Number From Call History

If you need to make a call from Call History and you happen to be outside your local area code, you can add the appropriate prefix by prepending the number.

To prepend a phone number from Call History:

1. Select a Call History entry and select **Options** (right softkey).
2. Select **Prepend**.
3. Enter the prefix and press  to call the number.

Erasing Call History

To erase individual Call History entries, see “Call History Options” on page 100.

To erase Call History:

1. Select  > **Call History** > **Erase History**.
2. Select **Outgoing**, **Incoming**, **Missed**, **Recent Calls**, or **All**.
3. Select **Voice Calls** or **Ready Link**.
4. If you are certain you want to erase the call history, select **Yes**.
— or —
Select **No** to return to the previous menu.

Using Contacts

In This Section

- ◆ Adding a New Contacts Entry (page 105)
 - ◆ Assigning a Group Entry (page 106)
 - ◆ Finding Contacts Entries (page 107)
 - ◆ Contacts Entry Options (page 109)
 - ◆ Adding a Phone Number to a Contacts Entry (page 110)
 - ◆ Editing a Contacts Entry's Phone Number (page 110)
 - ◆ Assigning Speed Dial Numbers (page 111)
 - ◆ Editing a Contacts Entry (page 112)
 - ◆ Assigning an Image to a Contacts Entry (page 112)
 - ◆ Selecting a Ringer Type for an Entry (page 113)
 - ◆ Secret Contacts Entries (page 114)
 - ◆ Dialing Sprint PCS Services (page 115)
-

Now that you know the basics that make it easier to stay in touch with people and information, you're ready to explore your phone's more advanced features. This section explains how to use your phone's Contacts list and helps you make the most of your time when you are trying to connect with the important people in your life.

Adding a New Contacts Entry

Your phone can store up to 500 Contacts entries. Contacts entries can store up to a total of 700 phone numbers, and each entry's name can contain 32 characters.

To add a new entry:

1. Select **MENU OK** > **Contacts** > **Find/Add Entry** > **Add Contact**.
2. Enter a name for the entry and press the navigation key down. (See “Entering Text” on page 41.)

Shortcut:	Enter the phone number in standby mode and press MENU . Proceed with steps 2-6 in “Saving a Phone Number” on page 36.
------------------	--

3. Enter the phone number for the entry and press **MENU OK**.
4. Select a label for the entry (**Mobile**, **Home**, **Work**, **Pager**, **Fax**, or **Other**) and press **MENU OK**.
5. Select **Save** (left softkey).

After you have saved the number, the new Contacts entry is displayed. (See “Contacts Entry Options” on page 109.)

Tip:	ICE—In Case of Emergency To make it easier for emergency personnel to identify important contacts, you can list your local emergency contacts under “ICE” in your phone’s Contacts list. For example, if your mother is your primary emergency contact, list her as “ICE—Mom” in your Contacts list. To list more than one emergency contact, use “ICE1—____,” “ICE2—____,” etc.
-------------	--

Assigning a Group Entry

Your phone can create up to 20 separate group lists.

By assigning a contact to a group, you can search easily using a user-defined group name.

To assign a Contact to a group:

1. Select  > **Contacts > Group**.
2. Select an available group entry location and select **Options** (right softkey) > **Add Members**.
3. Select the desired contact and press .
4. Select **Add** (left softkey) when you have finished selecting members.

To edit a group entry:

1. Select  > **Contacts > Group**.
2. Select the group entry you want to edit and select **Options** (right softkey) > **Edit**.
3. Select the field you want to edit (**Name, Ringer, or Picture ID**) and press .
4. Edit the entry and press .
5. Select **Save** (left softkey) to save your changes.

To erase a group member:

1. Select  > **Contacts > Group**.
2. Select the group titles and press  to display the group members.
3. Select the member you want to erase and select **Options** (right softkey) > **Erase > This or All**.
4. Select **Yes** and press .

Finding Contacts Entries

There are several ways to display your Contacts entries: by name, by speed dial number, by group, and by voice dial tags. Follow the steps outlined in the sections below to display entries from the Contacts menu.

Finding Names

To find Contacts entries by name:

1. Select  > **Contacts** > **Find/Add Entry**.
2. Scroll through all the entries using your navigation key.
– or –
Enter the first letter of a name or part of a name. (The more letters you enter, the more your search narrows.)
3. To display an entry, highlight it and press .
4. To dial the entry's default phone number, press .
- or –
To display additional Contacts entries, press the navigation key left or right.

Shortcut:	From standby mode, select Contacts (right softkey) to display the Contacts list.
------------------	---

Finding Speed Dial Numbers

To find phone numbers you have stored in speed dial locations:

- ▶ Select  > **Contacts** > **Speed Dial #s**.
See “Using Speed Dialing” on page 40 for how to use speed dialing.

Finding Group Entries

To find entries designated as part of a group:

1. Select  > **Contacts** > **Group**.
2. Scroll through the group titles using your navigation key.
To display entries belonging to a group, highlight the group and press .
3. To dial the entry's default phone number, press .

Contacts Entry Options

To access a Contacts entry's options, highlight an entry and press . Then select a phone number and select **Options** (right softkey). To select an option, highlight it and press .

- **Edit** to edit the selected entry.
- **Call** to dial the selected number.
- **Call:Speaker On** to dial the phone number in speakerphone mode.
- **Send Message** to send a Text, Picture Mail, or SMS Voice message.
- **Call Alarm** to set a call alarm for the entry. (See page 123 for Call Alarm.)
- **Set Speed Dial** to assign speed dial numbers to your favorite entries. (See "Assigning Speed Dial Numbers" on page 111.)
- **Set Voice Tag** to set a voice dial for the entry. (See page 135 for Voice Dial.)
- **Prepend** to alter a phone number by adding numbers to the beginning of the entry. (See "Prepending a Phone Number From Call History" on page 103.)
- **Copy to Personal** to copy the phone number to your Ready Link Personal List (only appears when Sprint PCS Ready Link mode is set to Enable and the number does not match any stored entry in your Personal List).
- **Send Contact** to send a Contacts entry in the Contacts list via Bluetooth.
- **Print** to print the Contacts data.

Tip:

You can view the next entry by pressing the navigation key right or view the previous entry by pressing the navigation key left.

Adding a Phone Number to a Contacts Entry

To add a phone number to an entry:

1. Display a Contacts entry. (See “Finding Contacts Entries” on page 107.)
2. Scroll to the entry you wish to add a phone number to and press .
3. Select a phone number, and then select **Options** (right softkey) > **Edit**; or if you are selecting an item other than the phone number, select **Edit** (right softkey).
4. Select the box next to the  icon and press .
5. Enter the number and press .
6. Select a label for the number and press .
7. Select **Save** (left softkey) to save the new number.

Editing a Contacts Entry's Phone Number

To edit an entry's phone number:

1. Display a Contacts entry. (See page 107.)
2. Select the entry you wish to edit and press .
3. Select the number you wish to edit and select **Options** (right softkey) > **Edit**.
4. Press  again to edit the number.
5. Press  to clear one digit at a time, or press and hold  to erase the entire number.
6. Re-enter or edit the number and press .
7. Select a label for the number and press .
8. Select **Save** (left softkey) to save the number.

Assigning Speed Dial Numbers

With this feature you can dial Contacts directory entries with one keypress for locations 2–9. (For details on how to make calls using speed dial numbers, see “Using Speed Dialing” on page 40.)

To assign a speed dial number:

1. Select  > **Contacts** > **Speed Dial #s**.
 2. Select an available speed dial location and press .
 3. Select an entry from the list and press .
 4. Select the phone number you want to set as a speed dial number and press .
- or —
1. Display a Contacts entry.
 2. Scroll to an entry in the Contacts list and press .
 3. Select the phone number you want to set as a speed dial number, and then select **Options** (right softkey) > **Set Speed Dial**.
 4. Select an available speed dial location and press .

Note: If you attempt to assign an already in-use speed dial location to a new phone number, a dialog will be displayed asking if you wish to replace the existing speed dial assignment. Select **Yes** to assign the location to the new phone number and delete the previous speed dial assignment.

Editing a Contacts Entry

To make changes to an entry:

1. Display a Contacts entry.
2. Select the entry you wish to edit and press .
3. Select a phone number, and then select **Options** (right softkey) > **Edit**; or if you are selecting an item other than the phone number, select **Edit** (right softkey).
4. Select the field you want to edit and press .
5. Add or edit the desired information and press .
6. Select **Save** (left softkey) to save your changes.

Assigning an Image to a Contacts Entry

You can assign an image to a Contacts entry. The image is displayed when the entry calls you.

To assign an image for an entry:

1. Display a Contacts entry.
2. Select the entry for which you want to assign the image and press .
3. Select a phone number, and then select **Options** (right softkey) > **Edit**; or if you are selecting an item other than the phone number, select **Edit** (right softkey).
4. Press the navigation key up to highlight the  icon and press .
5. Select an image and press  to assign the image to the entry.
6. Select **Save** (left softkey) to save the image type.

Selecting a Ringer Type for an Entry

You can assign a ringer type to a Contacts entry so you can identify the caller by the ringer type. (See “Ringer Types” on page 47.)

To select a ringer type for an entry:

1. Display a Contacts entry.
2. Select the entry for which you want to set the incoming ringer and press .
3. Select a phone number, and then select **Options** (right softkey) > **Edit**; or if you are selecting an item other than the phone number, select **Edit** (right softkey).
4. Scroll down to the box next to the  icon and press  to display the Ringer Type menu.
5. Use your navigation key to scroll through available ringers. (When you highlight a ringer type, a sample ringer will sound.)
6. Highlight your desired ringer and press .
7. Select **Save** (left softkey) to save the new ringer type.

Secret Contacts Entries

You can hide an entry's phone number(s) and require your lock code to edit the entry by making it secret. The entry name is still displayed, but the entry's information is replaced with "<Secret>".

To make an entry secret:

1. Display a Contacts entry.
2. Select the Contacts entry you want to tag as secret.
3. Select **Options** (right softkey) > **Set Secret**.
4. Enter the four-digit lock code.
5. Select **On** and press .

To make an entry public:

1. Display a Contacts entry.
2. Select the Contacts entry you want to tag as public.
3. Select **Options** (right softkey) > **Set Secret**.
4. Enter the four-digit lock code.
5. Select **Off** and press .

Tip:

If you can't recall your lock code, try using the last four digits of either your Social Security number or wireless phone number, or try 0000 or NATL (6285). If none of these work, call Sprint Customer Service at 1-888-211-4PCS (4727).

Dialing Sprint PCS Services

Your Contacts list is preprogrammed with contact numbers for various Sprint PCS services.

To dial a service from your Contacts:

1. Select  > **Contacts** > **Services**.
2. Select **Customer Service**, **Dir Assistance** (Sprint 411), **Account Info**, **Sprint Operator**, or **Voice Command**.
3. Press  to place the call.

To dial a service from standby mode using your keypad:

1. Dial the appropriate service number:
 - **Customer Service** —   **2**
 - **Sprint 411** —  **4**  **1**  **1**
 - **Account Info** —    **4**
 - **Sprint Operator** —  **0**
 - **Voice Command** —  
2. Press  to place the call.

Using the Phone's Calendar and Tools

In This Section

- ◆ **Using Your Phone's Calendar** (page 117)
 - ◆ **Using Your Phone's Tools** (page 125)
 - ◆ **Connecting Your Phone to Your PC** (page 129)
 - ◆ **File Manager** (page 130)
 - ◆ **Personal Information Management** (page 133)
-

Your phone is equipped with several personal information management features that help you manage your busy lifestyle. This section shows you how to use these features to turn your phone into a time management planner that helps you keep up with your contacts, schedules, and commitments.

Using Your Phone's Calendar

Displaying your Calendar

To display your calendar:

- ▶ Select  > **Tools** > **Calendar**.

Tip: To change the calendar display views, select **Monthly/Weekly** (left softkey). In the weekly view, you can easily add to or edit your own schedule.

Changing the Calendar Settings

This setting allows you to change the default settings for your phone's calendar. You can customize the calendar display according to your needs.

To change the calendar settings:

1. From the calendar display, select **Options** (right softkey) > **Settings**.
2. Select one of the following options and press .
 - **Holiday** to add a holiday to the calendar or edit the calendar (**Set Date**, **Set Weekly**, **Reset Date**, **Reset Weekly**, or **Reset All**).
 - **Display** to change the display settings of the calendar (**Calendar View**, **Monthly View**, or **Time starts at**).
 - **Alarm** to change the alarm settings of the calendar (**Ringer Length**, **Snooze Interval**, or **Snooze Times**).
3. Use your navigation key to change the settings and press  to save and exit.

Adding an Event to the Calendar

Your Calendar helps organize your time and reminds you of important events. You can schedule up to 200 events.

To add an event:

1. Select  **Tools** > **Calendar**.
2. Using your navigation key, highlight the day to which you would like to add an event and select **Options** (right softkey) > **Add Schedule**.
3. Enter the description using your keypad and press .
4. Select the following items you want to edit and press .
 - **Description** to enter a description for the event.
 - **Category** to select an event category (**Appointment**, **Business**, **Meeting**, **Personal**, **Vacation**, **Travel**, or **Miscellaneous**).
 - **Priority** to select an event priority (**None**, **High**, or **Low**).
 - **Start** to schedule a start time for the event.
 - **End** to schedule an end time for the event.
 - **Location** to edit a location for the event.
 - **Alarm** to select a ringer type for the alarm.
 - **Alarm Time** to edit the alarm time (number of hours or minutes before the event starts). The default alarm time is 10 minutes before an event.
 - **Repeat** to select a repeating status for the event (**Once**, **Daily**, **Weekly**, **Monthly**, or **Yearly**).
5. Select **Save** (left softkey) to save the event.

Tip:	In the monthly view, days with events scheduled are indicated with a triangle "►." In the weekly view, times for which you have scheduled events will be highlighted.
-------------	---

Event Alerts

There are several ways your phone alerts you to scheduled events:

- By playing the assigned ringer type.
- By illuminating the backlight.
- By flashing the LED.

Event Alert Menu

When your phone is turned on and you have an event alarm scheduled, your phone alerts you and displays the event summary.

To silence the alarm:

- ▶ Press any key to stop the alarm. (The alarm will stop and then sound again after the selected snooze interval.)
 - Press and hold the side camera key to cancel snoozing.
 - Select **Dismiss** (right softkey) to dismiss the event.

Viewing Day's Events

To view your scheduled events:

1. Select  > **Tools** > **Calendar**.
2. From the monthly view, highlight the day for which you would like to view events and press . (If you have events scheduled for the selected day, they will be listed in chronological order.)

Tip: If you are in the weekly view, select the highlighted cell in the spreadsheet and press **MENU** to display the event's details.

3. To display the details of an event listed in the schedule, highlight the event and press .

Event List Options

While you are displaying the day's events list, select **Options** (right softkey) to access the following options:

- **Add Schedule** to add an event to the calendar.
- **Add Call Alarm** to add a call alarm to the calendar.
- **Add To Do** to add To Do items to the To Do List.
- **Schedule List** to display the Schedule List on the calendar.
- **Call Alarm List** to display the Call Alarm List on the calendar.
- **To Do List** to display the To Do List on the calendar.
- **Edit** to edit the event.
- **Set Cal. Secret** to make an event secret.
- **Send Event** to send the event via Bluetooth.
- **Erase** to erase the event.
- **Go To Date** to jump to another date on the calendar.
- **View Memory** to view the memory status saved in the phone.
- **Erase Memory** to erase memory saved in the phone.
- **Print** to print the calendar events.

Going to a Specified Date

To use the Calendar menu to get to a specified date:

1. Select  > **Tools** > **Calendar** > **Options** (right softkey) > **Go to Date**.
2. Enter the date you wish to go to using the navigation key and/or the keypad and press .

Erasing a Day's Events

To erase a day's scheduled events:

1. Select  > **Tools** > **Calendar**.
2. From the monthly view, highlight the day for which you would like to erase events and press .
3. Select one of the events and select **Options** (right softkey) > **Erase**.
4. Highlight your desired option and press .
 - **This** to erase a single event.
 - **Select** to erase selected events at one time.
 - **All on This List** to erase all events on the list.
5. Select **Yes** to erase or **No** to cancel.

Note: The Erase function will not delete events that you have designated as "secret." (See "Event List Options" on page 120.)

Purging Events

To delete events scheduled before a specific time and date:

- ▶ Select  > **Tools** > **Calendar** > **Options** (right softkey) > **Erase Memory** > **Erase Old** > **Yes**.

Purging All Events

To delete all scheduled events:

1. Select  > **Tools** > **Calendar** > **Options** (right softkey) > **Erase Memory** > **Erase All** > **Yes**. (An alert will be displayed asking you to confirm the deletion.)
2. Select **Yes** (left softkey) to erase all events; select **No** (right softkey) to cancel.

Note:	All events are erased including Call Alarms (see page 123) and To Do List items (see page 124).
--------------	---

Adding a Call Alarm to the Calendar

You can set call alarms to notify you when you need to place a call. The call alarm will let you know when and to whom to place a scheduled call. You can set up to 15 call alarms.

To add a call alarm to the calendar:

1. Select  > **Tools > Calendar**.
2. Select the day to which you want to add a call alarm and select **Options** (right softkey).
3. Press the navigation key left or right to select **Add Call Alarm** and press .
4. Enter the phone number directly or select **Options** (right softkey) for options.
 - **From Ph. Book** to select the desired number from your Contacts list.
 - **Vicemail** to select the number for voicemail access.
5. Select the following items you want to edit and press .
 - **Category** to select a category for the call alarm (**Appointment, Business, Meeting, Personal, Vacation, Travel, or Miscellaneous**).
 - **Time/Date** to edit the start time and date.
 - **Alarm** to select the ringer alarm.
 - **Repeat** to set the Call Alarm's repeat status (**Once, Daily, Weekly, Monthly, or Yearly**).
6. Select **Save** (left softkey).

Tip:

You can also add a call alarm from the Contacts menu. (See "Contacts Entry Options" on page 109.)

Adding To Do List Items

Your phone can store and manage up to 40 To Do List items.

To add an item to your To Do List:

1. From the Calendar display, select **Options** (right softkey).
2. Press the navigation key left or right to select **Add To Do**, and then press .
3. Enter the description using your keypad and press .
4. Select from the following options those you want to edit and press .
- **Category** to select an event category.
 - **Priority** to select an event priority (**None**, **High**, or **Low**).
 - **Due Time/Date** to schedule a due time and date.
 - **Status** to select a status for the To Do items (**Needs Action** or **Completed**).
5. Select **Save** (left softkey) to save the To Do items.

Adding a To Do List Item to the Schedule

To add a To Do List item to the schedule:

1. From the Calendar display, select **Options** (right softkey).
2. Highlight **Schedule List** and press the navigation key left or right to select different list options.
3. Select **To Do List** from the options and press .
4. Select the item you want to add to the schedule, and select **Options** (right softkey) > **Add To Schedule**.
5. Enter a description and other information using your keypad and press . (See “Adding an Event to the Calendar” on page 118 for entering.)
6. Select **Save** (left softkey).

Using Your Phone's Tools

In addition to helping you be more efficient and organized, your phone offers useful and entertaining tools.

Using the Alarm Clock

Your phone comes with a built-in alarm clock with multiple alarm capabilities.

To use the alarm clock:

1. Select **MENU** > **Tools** > **More Tools** > **Alarm Clock**.
2. Select a number and press **MENU**.
3. Select the items you want to edit and press **MENU**.
 - **Description** to enter a description of the alarm.
 - **Time** to enter the alarm time.
 - **Repeat** to select the alarm frequency.
 - **Alarm** to set the alarm on or off.
4. Select **Save** (left softkey) to save the alarm settings.

Tip: Select **On/Off** (left softkey) to toggle the alarm on and off.

To change the alert settings, select **Settings** (right softkey) to set the ringer length and snooze options.

Note: Depending on the Power On to Alert setting, the alarm setting will be active even if the phone is turned off. (See "Setting Power On to Alert" on page 75.)

In a no-service area, it's necessary to set the actual time and date to use the Alarm Clock function after removing and installing your battery.

Using the Stopwatch

To start the stopwatch:

- ▶ Select  > **Tools** > **More Tools** > **Stop Watch**.
 - Select **Start** (left softkey) to start the stopwatch.
 - Select **Stop** (left softkey) to stop the stopwatch.
 - Select **Resume** (left softkey) to restart the stopwatch.

To record a lap time while the stopwatch is running:

- Select **Lap** (right softkey) to record time of the first lap.
- Select **Lap** (right softkey) again to record the next lap. (You can record up to five laps.)

To display the stopwatch options:

1. During stopwatch operation, select **Options** (right softkey).
2. To select an option, highlight it and press .
 - **Go to Lap List** to display a saved Lap List. Select **Detail** (left softkey) to display the Lap List detail.
 - **Save to Lap List** to save the recorded lap times.
 - **Reset** to reset the time to zero and clear any recorded lap times.

Using the Countdown Timer

This feature allows you to use the countdown timer with alarm capabilities. You can set up to five timers.

To use the countdown timer:

1. Select **MENU OK** > **Tools** > **More Tools** > **Countdown**.
2. Select a number and press **MENU OK**.
3. Select the items you want to edit and press **MENU OK**.
 - **Description** to enter a description of the countdown.
 - **Time** to enter the countdown time.
 - **Alarm** to set the countdown alarm on or off.
4. Select **Save** (left softkey) to save the countdown settings.

Tip: Select **On/Off** (left softkey) to toggle the countdown alarm on and off.

To change the alert settings, select **Settings** (right softkey) to set the ringer length and snooze options.

Note: This feature is not available while your phone is turned off.

World Clock

This feature is available only in digital service areas.

To view the time in different locations:

1. Select **MENU OK** > **Tools** > **More Tools** > **World Clock**.
2. Press the navigation key left or right to scroll through different time zones.

Tip: Select **Summer** (left softkey) or **Standard** (right softkey) to select daylight saving or standard time (if applicable).

Using the Calculator

Your phone comes with a built-in calculator.

To use the calculator:

1. Select  > **Tools** > **More Tools** > **Calculator**.
2. Enter numbers using your keypad.
3. Press the appropriate navigation key for an arithmetic option (**Up** for addition, **Down** for subtraction, **Left** for multiplication, **Right** for division). Press the left softkey to insert a decimal point.
4. Enter numbers and press  for the result.
 - To clear the numbers, select **CLR** (right softkey).

Updating Your Phone

The update phone software option allows you to download and update the software in your phone over the air. Only the internal software is updated; no Contacts entries or other information saved in your phone will be deleted.

To update your phone through the Tools menu:

1. Select  > **Tools** > **Update Phone**.
2. If a new software version is available, select **Yes** (left softkey) to continue.
3. Read the onscreen information and select **Next** (left softkey) to continue.
4. Select **Update Phone** to update your phone.

Note:	If your phone's signal strength is low, Update Phone may not be completed. Please update your phone when you're in an area with better signal strength.
--------------	---

Connecting Your Phone to Your PC

Before using your phone's mass storage capabilities, you need to prepare your phone's data services to synchronize with your desktop or laptop computer. Once the phone is connected to the PC, you can transfer your data to or from the phone quickly and easily.

To connect your phone to your PC:

1. Select  **> Tools > USB Connection > Mass Storage.**
2. Connect your phone to your PC using the provided USB cable. (Wait for the connection to be completed. When connected, the host computer will automatically detect your phone.)

To remove the connection:

- ▶ When you have finished transferring data, click the USB device icon on your computer's taskbar, and follow the onscreen instructions to safely unplug the USB cable. (The process may vary depending on the PC.)

Note:

Make sure your battery is fully charged before using the Mass Storage function.

We recommend using Windows 2000/ME/XP. Synchronization is guaranteed only for computers using one of these operating systems.

To avoid loss of data, DO NOT remove the USB cable or the battery while files are being accessed or transferred.

DO NOT turn off or restart your computer, or put it into standby mode, while using a mass storage device. Doing so will result in loss or damage of data.

While you are connected to the computer, your phone's screen will display "Phone Off." You cannot make or receive calls.

File Manager

File Manager allows you to manage your files such as pictures, videos, music and applications stored in the phone's memory. With this feature, you can search, move, erase, import, rename and open files more easily.

Accessing File Manager

To access file manager:

- ▶ Select  > **Tools** > **File Manager**. (The preset folders will be displayed: DCIM, MEDIA, MUSIC, and VOICE.)

File Manager Icon Indication

Content Type	Icons	File Extension
Picture		m3g
		jpeg, jpg, wbmp, png, bmp, gif
Video		m4v, mp4, 3gp, 3gpp, 3gp2, 3g2
Audio		mp3, aac, m4a, amr
		qcp
		mid, midi
		pmd
Contact		vcf
Calendar		vcs
Unknown		unsupported file format

Note: If you want to delete all files in File Manager, be sure to delete your files using only the phone's Security menu. (See "Erasing Phone Content" on page 85.) If you delete all files using a PC, the File Manager will not work properly.

Opening Files in the File Manager

To open files in the file manager:

1. Select  > **Tools** > **File Manager**.
2. Select your desired folder and press .
3. Use your navigation key to select an item you wish to open.

Using File Manager Options

When you are navigating files and folders in the file manager, several user options are available by selecting **Options** (right softkey). To select an option, highlight it and press .

- **Move** to move the file from the current folder to another folder.
- **Erase** to delete the file or folder from File Manager.
- **Import** to import the phonebook file or the calendar file.
- **View** to view the image file.
- **Listen** to listen to the audio file.
- **Play** to play the audio/video file.
- **Sort by** to sort folder contents by name, date, or size.
- **Properties** to view the properties of the file.
- **Rename** to change the name of the selected file.

Note: You may not be able to use the file if you change the filename extension.

- **Set as** to set images as your wallpaper, screen saver, or Caller ID for the contacts.

Sorting the Folder Contents

To sort the folder contents:

1. Select  > **Tools** > **File Manager**.
2. Select the folder that includes the content you want to sort and press .
3. Select **Options** (right softkey) > **Sort by**.
4. Select an item (**Name**, **Size**, or **Date**) and press .
5. Select **Ascending** or **Descending** and press .

Viewing Memory in File Manager

To view the used and available memory in File Manager:

1. Select  > **Tools** > **File Manager**.
2. Select **Options** (right softkey) > **View Memory**. (The used and available memory space will be displayed.)

Personal Information Management

Displaying Your User Address

To display the phone's current user address:

- ▶ Select  > Settings > Phone Info > Phone#/User ID.

Finding Icon Definitions

To view an explanation of icons that appear on the display:

1. Select  > Settings > Phone Info > Icon Glossary.
2. Select the item for which you want to see the explanation and press . (The icon's explanation appears.)

Displaying the Version Information

To display the version number of the software, hardware, PRL (Preferred Roaming List), PRI (Product Release Instructions), etc., installed on your phone:

- ▶ Select  > Settings > Phone Info > Version.

Displaying Advanced Information

To display advanced information such as frequency and other technical information:

- ▶ Select  > Settings > Phone Info > Advanced.

Displaying Your Phone Status

To display the phone's current phone status:

- ▶ Select  > Settings > Phone Info > Phone Status.

Using Your Phone's Voice Services

In This Section

- ◆ **Using Voice-Activated Dialing** (page 135)
 - ◆ **Using Automatic Speech Recognition** (page 137)
 - ◆ **Using the Voice Recorder** (page 144)
 - ◆ **Setting Up Screen Call** (page 149)
-

Your phone's Voice Services let you place calls using your voice, store voice reminders, and record memos right on your phone. This section includes easy-to-follow instructions for using voice-activated dialing and managing voice memos.

Using Voice-Activated Dialing

In addition to Sprint PCS Voice Command (see page 246), you can use a voice dial tag to automatically dial a phone number in your Contacts. (A voice dial tag is a command you record and use to place calls without using the keypad.) Your phone can store up to 30 voice dial tags.

Note: Please set the Voice Prompt feature (see page 50) to **On** before using the Voice-Activated Dialing so that you can hear the voice instruction from the phone. The default setting is off.

Making a Call Using Voice-Activated Dialing

To use a voice dial tag to call a phone number:

1. Press and hold  or .
2. Follow the voice prompts and recite the entry's voice dial tag into your phone's microphone.

Tip: Record voice dial tags in a quiet environment.

Programming Voice Dial Tags

To program a voice dial tag:

1. Display a Contacts entry.
2. Select a contact and press .
3. Select a phone number, and then select **Options** (right softkey) > **Set Voice Tag** > **Add**.
4. After you are prompted to say the name you wish to program, wait for the beep and then say the name into your phone's microphone.

5. Respond to the prompt by repeating the name after the beep. (The display shows “Voice Tag Recorded.”)
 - If you set a voice tag, the  icon is shown next to the phone number on the Contacts list.

Reviewing Voice Dial Tags

To review voice dial tags:

1. Display a Contacts entry.
2. Select a voice dial entry you want to review and press .
3. Highlight the desired voice dial entry and select **Options** (right softkey) > **Set Voice Tag**.
4. To select an option, highlight it and press .
 - **Play** to play the selected voice dial tag.
 - **Play:Speaker** to play the tag in speakerphone mode.
 - **Change** to change the recorded voice dial tag.
 - **Erase** to erase the voice dial tag. Select **Yes** to erase; select **No** to cancel.

Erasing All Voice Dial Tags

To erase all voice dial tags:

1. Select  > **Settings** > **Security**, and then enter your lock code. (The Security menu is displayed.)
2. Select **Erase/Reset** > **Erase Voice Tag**.
3. Select **OK** (left softkey), and then select **Yes** to erase all recorded voice dial tags; select **No** to cancel.

Using Automatic Speech Recognition

Your Sprint PCS Phone is equipped with an Automatic Speech Recognition (ASR) feature. This feature allows you to make calls or use the phone's functions by simply using your voice. All you have to do is to talk into the phone, and the phone will recognize your voice and complete tasks by itself.

Activating Automatic Speech Recognition

To activate Automatic Speech Recognition:

- ▶ From standby mode, press .

The phone displays the Command menu and prompts you to say the name of the command you want to use. To complete your task, simply follow the voice prompts.

The following is a list of available ASR commands:

- **Call** to call an entry in your Contacts list. (See page 138 for details.)
- **Dial Number** to dial a phone number by speaking the number. (See page 139 for details.)
- **Find** to find an entry stored in your Contacts list. (See page 139 for details.)
- **International** to make an international call. (See page 140 for details.)
- **Phone Status** to tell you the current phone status.
- **Voice Tag** to call an entry in your Contacts list by speaking voice tag. (See page 140 for details.)
- **My Phone#** to display your phone number.
- **Digit Training** to train the phone to your voice to achieve better recognition. (See page 141 for details.)
- **Prompt On** or **Prompt Off** to activate or deactivate voice prompt.

- **Goto** <item or application> to jump directly to the menu items or applications. (See page 142 for details.)

Tip:	When you display a Command menu, say “ More ” or “ Previous ” to display additional commands or go back to the previous command display.
-------------	--

Note :	Use the Automatic Speech Recognition feature in a quiet environment so it can accurately identify your voice.
---------------	---

Tip :	During ASR operation, select Help (right softkey) to get instructions for Automatic Speech Recognition.
--------------	--

Making a Voice Call by Using ASR

With ASR, you can make a voice call by speaking a name, phone number, or using a voice tag.

To make a voice call by speaking a name:

1. Press  to activate the Command menu.
2. Say “**Call**” to your phone.
3. Say the full name of a contact in your Contacts list (for example, “John Jones”).
4. Say the phone type you’d like to call (for example, “Mobile”).

Shortcut:	To execute several commands at a time, you can also say several commands continuously (for example, “Call, John Jones, Mobile”).
------------------	--

5. The phone will automatically place a call if it recognizes your voice.
6. When you are finished, press .

Tip:	During ASR operation, you can also select your desired items by using the navigation key or pressing available softkeys on the display.
-------------	---

To make a call by speaking a phone number:

1. Press  to activate the Command menu.
2. Say “**Dial Number**” to your phone.
3. Say the phone number you wish to dial one digit at a time.

Shortcut: You can also say “Dial Number” followed by the number you want to call.

4. The phone automatically places the call if it recognizes your voice.
5. When you are finished, press .

Note: If the phone does not recognize the name/number, the phone will find the most likely match name/number and display a list of up to three names/numbers. You will hear the voice prompt “Did you say...” followed by the matched name/number. You can confirm the name/number by saying “Yes,” or say “No” to change the selection.

Finding Contacts List Entries

This feature allows you to find an entry in your Contacts list by saying the name.

To find a contact in the Contacts list:

1. Press  to activate the Command menu.
2. Say “**Find**” to your phone.
3. Say the full name of a contact in your Contacts list (for example, “John Jones”).
4. The phone will display the contact details for the recognized name.
5. To make a call, select the desired number from the list by using your navigation key and press .

Making a Call Using a Voice Tag

With a voice tag you record, your phone will automatically dial a phone number. (To create a voice tag, see “Programming Voice Dial Tags” on page 135.)

To make a call by using a voice tag:

1. Press  to activate the Command menu.
2. Say “**Voice Tag**” into your phone.
3. Say your recorded voice tag. (The phone automatically places the call if it recognizes your voice.)
4. When you are finished, press .

Making International Calls by Using ASR

Your phone’s ASR Dialing feature allows you to make international calls by speaking the digits of the country code.

To make international calls by using ASR:

1. Press  to activate the Command menu.
2. Say “**International.**”
3. Say the country code one digit at a time.
4. Say the phone number you wish to dial one digit at a time. (The phone automatically places the call if it recognizes your voice.)
5. When you are finished, press .

Using Digit Training

This feature allows you to train the phone to recognize your voice when speaking a phone number. You can get better recognition accuracy by programming your intonation pattern into your phone.

To program Digit Training:

1. Press  to activate the Command menu.
2. Say “**Digit Training**.”
3. Say “**Start**” or select **Start** (left softkey) to start programming.
4. Follow the voice prompts and recite the digits into your phone’s microphone. (A voice prompt will indicate the current rate of adaptation.)
5. Respond to the voice prompt repeatedly until adaptation is complete. (When you have finished training, you will hear a confirmation that the adaptation has been successfully completed.)

Note:	Try digit training in a quiet environment for the best results. When you train, make sure you speak clearly and distinctly in your natural voice.
--------------	---

To activate Digit Training:

1. Press  to activate the Command menu.
2. Say “**Digit Training**.”
3. Say “**On**” or select **On** (right softkey) to activate the existing data. (A voice prompt will announce the activation of digit training.)

To deactivate Digit Training:

1. Press  to activate the Command menu.
2. Say “**Digit Training**.”
3. Say “**Off**” or select **Off** (right softkey) to deactivate the existing data. (A voice prompt will announce the deactivation of digit training. The adaptation returns to its default setting.)

Opening the Menu by Using ASR

This feature allows you to jump directly to the menu items or applications by saying “**Goto**” followed by an item in the menu.

To access the menu by using ASR:

1. Press  to activate the Command menu.
2. Say “**Goto**” and the menu you want to open (for example, “Go to Messaging”).
3. The menu you have chosen will open.

Making a Sprint PCS Ready Link Call by Using ASR

You can place a Sprint PCS Ready Link call by using automatic speech recognition from your Sprint PCS Ready Link List. To make a Sprint PCS Ready Link Call, your phone's Sprint PCS Ready Link mode must be set to **Enable**. (See "Setting Sprint PCS Ready Link Mode" on page 181 for details.)

To make a Sprint PCS Ready Link Call by using ASR:

1. Press and hold the Ready Link/Recorder button on the side of your phone (●●●). (The Command menu of your Sprint PCS Ready Link List will display.)
2. Choose from one of the following options:
 - **Call** to place a Sprint PCS Ready Link call from the Personal List.
 - **Group** to place a Sprint PCS Ready Link call from the Personal Groups.
 - **Company Call** to place a Sprint PCS Ready Link call from the Company List (if applicable).
 - **Company Group** to place a Sprint PCS Ready Link call from the Company Group List (if applicable).
 - **Dial Number** to place a Sprint PCS Ready Link call by speaking a number.
3. Say "Call," "Group," "Company Call," "Company Group," or "Dial Number."
4. Say the contact's name in your Sprint PCS Ready Link List or the digits of the phone number. (Wait for the prompt.)
5. To place the call, press and hold ●●●. (See "Making and Receiving a Sprint PCS Ready Link Call" on page 183 for details.)

Tip: If you say "Call" or "Dial Number" during step 4 above, you can say additional commands continuously (for example, "Call, John Jones" or "Dial Number, 999-999-9999").

Using the Voice Recorder

With this feature, you can easily record meetings, lectures, or even brief memos to remind you of important events, phone numbers, or grocery list items.

Tip: If you haven't signed up for the Sprint PCS Ready Link service and Sprint PCS Ready Link mode is set to Disable or the Sprint PCS Ready Link service is locked, you can use the Ready Link/Recorder Button as a Voice Recorder button in standby mode. You can use it to record memos or display voice recorder options.

Recording Voice Memos

To record a voice memo:

1. Select  > **Tools > Voice Services > Voice Recorder > Record or Record:Speaker.**
2. Start recording after the beep.

To end the recording of your voice memo:

▶ Press ,  or .

Note: Your phone can store up to 1000 voice memos (maximum recording time for each memo is 12 hours).

The total recording time depends on the available memory space on your phone.

Shortcut: From standby mode, press and hold the Ready Link/Recorder button on the side of the phone to record a voice memo.

To record a voice memo with the phone closed:

1. When the phone is closed, press the side camera key to activate the launch menu.
2. Press the external control key up or down to select **Voice Recorder**, and press .
3. Select **Record:Speaker** and press .
4. Start recording after the beep.

To end the recording of your voice memo:

- ▶ Press and hold .

Reviewing Voice Memos

To play the voice memos you have recorded:

1. Select  > **Tools** > **Voice Services** > **Voice Recorder** > **Play** or **Play:Speaker** > **Voice Data**.
2. Select a voice memo from the list or select **All** if you want to play all voice memos continuously.
3. Select **Play** (left softkey) to play the voice memos.
 - Select **Speed** (left softkey) to change the playing speed.
 - Select **Pause** (right softkey) to pause. To restart, select **Play** (right softkey).

To review the voice memos with the phone closed:

1. Press the side camera key to activate the launch menu.
2. Using the side volume key or external control key, select **Voice Recorder**.
3. Select **Play:Speaker** > **Voice Data**.
4. Select the voice memo you want to play and press  to play.

Setting the Recording Guard

With this feature, you can record voice memos without interruption by incoming calls.

To set the recording guard:

1. Select  > **Tools** > **Voice Services** > **Voice Recorder**.
2. Highlight **Record** or **Record:Speaker**, and then select **RecGuard** (right softkey).
3. Select **On** or **Off** and press .

While Recording Guard is on, your phone's standby screen will display "Phone Off." You cannot make or receive calls.

Voice Memo Options

There are several user options available for managing voice memos.

To display the voice memo options:

1. Select  > **Tools** > **Voice Services** > **Voice Recorder** > **Play** or **Play:Speaker** > **Voice Data**.
2. Select the desired voice memo and select **Options** (right softkey).
3. To select an option, highlight it and press .
 - **Speaker On** or **Speaker Off** to activate or deactivate speakerphone mode.
 - **Play Selected** or **Play All** to play a selected voice memo or all voice memos.
 - **Display/Edit** to edit or display details relating to your voice memos.
 - **Go to Time** to set the starting point of the recording.
 - **Send via Bluetooth** to send voice memo via Bluetooth.
 - **Erase** or **Erase All** to erase an individual memo or all voice memos.

Erasing Voice Memos

To erase an individual voice memo:

1. Select **MENU OK** > **Tools** > **Voice Services** > **Voice Recorder** > **Play** or **Play:Speaker** > **Voice Data**.
2. Select the memo you want to erase and select **Options** (right softkey) > **Erase** > **Yes**.

To erase all voice memos:

1. Select **MENU OK** > **Tools** > **Voice Services** > **Voice Recorder** > **Erase All** > **Voice Data**.
2. Select **Yes** to erase all voice memos saved in the phone.

Tip: If you select **All** during step 1 above, you can erase all voice recordings (voice memos and call memos) saved in the phone.

Recording Call Memos

You can use your phone's Voice Services to record the other party's voice during a phone call.

To record a call memo:

1. During a call, select **Options** (right softkey) > **Tools** > **Voice Services** > **Call Memo** > **Record**.
2. Start recording after the beep.
3. To finish recording, press **MENU OK** or **Back**.
 - Recording also stops when the call is disconnected.

Note: Only the other party's voice is recorded during this process.

Tip: To record a call memo with the phone closed, press and hold the Ready Link/Recorder button while you're on a call.

Reviewing Call Memos

To play the call memos you have recorded:

1. Select  > **Tools** > **Voice Services** > **Voice Recorder** > **Play** or **Play:Speaker** > **Call Memo**.
2. Select a call memo from the list or select **All** if you want to play all call memos continuously.
3. Press  to play the call memos.
 - Select **Slow** (left softkey) or **Fast** (right softkey) to change the playing speed.

To review the call memos with the phone closed:

1. Press the side camera key to activate the launch menu.
2. Using the side volume key or external control key, select **Voice Recorder**.
3. Select **Play:Speaker** > **Call Memo**.
4. Select the call memo you want to play and press  to play.

Erasing Call Memos

To erase an individual call memo:

1. Select  > **Tools** > **Voice Services** > **Voice Recorder** > **Play** or **Play:Speaker** > **Call Memo**.
2. Select the memo you want to erase and select **Options** (right softkey) > **Erase** > **Yes**.

To erase all call memos:

1. Select  > **Tools** > **Voice Services** > **Voice Recorder** > **Erase All** > **Call Memo**.
2. Select **Yes** to erase all call memos saved in the phone.

Setting Up Screen Call

This feature enables you to screen incoming calls by using a recorded announcement, either one that is prerecorded or one that you have recorded. You can also record the caller's message into the Voice Data list.

Activating Screen Call

To start Screen Call when you have incoming calls:

- ▶ When the phone rings or vibrates, select **Options** (right softkey) > **Screen Call**.

To set Auto Screen Call:

1. Select  > **Tools** > **Voice Services** > **Screen Call** > **Auto**.
2. Select **On** and press .
3. Set the answering time by using numeric keys or by pressing the navigation key up or down.
4. Select **OK** (left softkey). (The  icon is displayed on the standby display.)

Tip: While the caller's message is being recorded, press **TALK** to answer the call, or press **END** to stop recording and disconnect the call.

Selecting an Announcement for Screen Call

To select a Screen Call announcement:

1. Select  > **Tools** > **Voice Services** > **Screen Call** > **Announcement**.
2. Select **Pre-Recorded** or **Custom** and press .

Recording Your Name for a Prerecorded Announcement

You can use a prerecorded announcement with or without your name. If you record your name, your phone adds your name to the prerecorded message to announce that you are not available to answer calls.

To record your name:

1. Select  > **Tools** > **Voice Services** > **Screen Call** > **Announcement**.
2. Select **Pre-Recorded** and select **Edit** (right softkey) > **Record Name**.
3. Press  to start the first recording. (Press  to stop recording. The maximum recording time is 12 seconds.)
4. After the first recording, press  again to start the second recording.
5. Press  to stop recording.

Recording a Customized Announcement

To record an announcement:

1. Select  > **Tools** > **Voice Services** > **Screen Call** > **Announcement**.
2. Select **Custom** and select **Edit** (right softkey) > **Record**.
3. Press  to start the first recording. (Press  to stop recording. The maximum recording time is 12 seconds.)
4. After the first recording, press  again to start the second recording.
5. Press  to stop recording.

Reviewing an Announcement

To review an announcement:

1. Select  > **Tools** > **Voice Services** > **Screen Call** > **Announcement**.
2. Select **Pre-Recorded** or **Custom**, and select **Edit** (right softkey) > **Play** or **Play:Speaker**.

Erasing an Announcement

To erase an announcement:

1. Select  > **Tools** > **Voice Services** > **Screen Call** > **Announcement**.
2. Select **Pre-Recorded** or **Custom**, and select **Edit** (right softkey).
3. Select **Erase** or **Erase Name**. (A confirmation will be displayed.)
4. Select **Yes** and press .

Using the Built-in Camera

In This Section

- ◆ Taking Pictures (page 153)
 - ◆ Using the Settings & Info Menu (page 161)
 - ◆ Recording Videos (page 163)
 - ◆ Storing Pictures and Videos (page 168)
 - ◆ Sending Sprint PCS Picture Mail (page 171)
 - ◆ Managing Sprint PCS Picture Mail (page 174)
 - ◆ Printing Pictures Directly From Your Phone (page 178)
-

Your phone's built-in camera gives you the ability to take full-color digital pictures, view your pictures using the phone's display, and instantly send them to family and friends. It's fun and as easy to use as a traditional point-and-click camera: just take a picture, view it on your phone's display, and send it from your phone to up to 25 people.

This section explains the features and options of your phone's built-in camera.

Taking Pictures

Taking pictures with your phone's built-in camera is as simple as choosing a subject, pointing the lens, and pressing a button. You can activate the phone's camera mode whether the phone is open or closed.

To take a picture with the phone open:

1. Select  > **Pictures** > **Camera** to activate camera mode. (Additional camera options are available through the camera mode **Options** menu. See “Camera Mode Options” on page 156 for more information.)

Shortcut:	To activate camera mode, you can also press and hold the camera key.
------------------	--

2. Using the phone's Main LCD as a viewfinder, aim the camera lens at your subject.

Tip:	You may lock the focus manually by selecting Focus Lock (left softkey).
-------------	--

3. Press , , or the side camera key until the shutter sounds.
4. To save the picture, select **Save** (left softkey). (The picture will be saved in the In Phone folder.)
 - To discard the picture and return to camera mode, press , , or **Cancel** (right softkey).
5. Select **Next** (right softkey) for more options:
 - **Take New Picture** to return to camera mode to take another picture.
 - **Send to Contacts** to send your picture. (See page 171 for details.)

- **Print** to print an image by mail, at a retail store, by using PictBridge, or by using Bluetooth.
- **Post to Services** to access available services. Select **Update** to display the latest services.
- **Upload** to upload the picture you just took to the Sprint PCS Picture Mail Web site (www.sprint.com/picturemail). Depending on your settings, you may be prompted to accept a data connection.
- **Review Media** to go to the In Phone folder to review your saved pictures and videos.
- **Send via Bluetooth** to send a picture via Bluetooth.
- **Set as** to assign the picture. Select an option and press .
- **Delete** to delete the picture you just took.
- **Details/Edit** to edit or display details relating to your pictures.

To take a picture with the phone closed:

1. Press the side camera key to activate the launch menu.
2. Select **Camera**.
3. Point the camera lens at your subject. (You can check the picture framing through the external display screen.)
4. Press the side camera key or  on the external control key to take the picture.

Creating Your Sprint PCS Picture Mail Password

The first time you use any of the picture management options involving the Sprint PCS Picture Mail Web site, you will need to establish a Sprint PCS Picture Mail password through your phone. This password will also allow you to sign in to the Sprint PCS Picture Mail Web site at www.sprint.com/picturemail to access and manage your uploaded pictures and albums.

To create your Sprint PCS Picture Mail password:

1. Select  > **Pictures > My Albums > Online Albums.**
(You will be prompted to create a Sprint PCS Picture Mail password.)

Note:	If your Sprint PCS service plan does not include Sprint PCS Picture Mail, you will first be prompted to subscribe to the service for an additional monthly charge.
--------------	--

2. Enter your password and press . (You will be prompted to confirm your password.)
3. Please wait while the system creates your account.

Tip:	Write down your Sprint PCS Picture Mail password in a secure place.
-------------	---

Once you have received confirmation that your account has been successfully registered, you may upload and share pictures and access the Sprint PCS Picture Mail Web site.

Camera Mode Options

When the phone is open and in camera mode, select **Options** (right softkey) to display additional camera options:

- **Picture Mode** to select a picture mode from **Normal**, **Beach/Snow**, **Scenery**, **Mirror Image**, **Night/Dark**, or **Self Portrait**.
- **Flash** to activate the flash. (See “Setting the Flash” on page 157 for details.)
- **Auto Focus** to use the autofocus functions. (See “Setting Auto Focus” on page 159 for details.)
- **Zoom** to zoom in on a subject. (See “Using the Zoom” on page 159 for details.)
- **Self-Timer** to activate the camera’s timer. (See “Setting the Self-Timer” on page 157 for details.)
- **Fun Tools** to select an option from the following:
 - **Multiple Shots** to take multiple shots. (See “Taking Multiple Shots” on page 158.)
 - **Fun Frames** to select your favorite fun picture frame to decorate your picture.
 - **Color Tone** to select a wide variety of color tones for the picture.
- **Image Controls** to select an option from **Brightness**, **White Balance**, **Sharpness**, or **Contrast**.
- **Camera Settings** to select your settings. (See “Selecting Camera Settings” on page 160 for details.)
- **Review Media** to go to the In Phone folder to review your saved pictures and videos.
- **Camcorder Mode** to switch to video mode. (See “Recording Videos” on page 163 for details.)
- **Key Guidance** to indicate the key functions in camera mode.
- **My Favorite Settings** to select your favorite setting.

Setting the Flash

To activate the flash:

1. From camera mode, select **Options** (right softkey) > **Flash**.
2. Select one of the following options and press :
 - **Off** to deactivate the flash.
 - **On This Shot** to activate the flash for one shot.
 - **On Always** to activate the flash for all pictures.
 - **Auto** to activate the flash automatically.

Note: While the phone is open and in camera mode, press  to switch between flash modes.

Setting the Self-Timer

To activate the self-timer:

1. From camera mode, select **Options** (right softkey) > **Self-Timer**.
2. Highlight the length of delay you want the timer to use (**10 Seconds** or **5 Seconds**) and press .
3. Select **Start** (left softkey) when you are ready to start the timer. ( appears on the upper right portion of the Main LCD during the self-timer countdown.)
4. Get ready for the picture. (When the timer is down to three seconds, the self-timer icon will turn red and the phone will begin to beep.)

To cancel the self-timer after it has started:

- Select **Cancel** (right softkey).

Note: While the self-timer is active, all keys are disabled except **Back**, **END**, and the right softkey button (**Cancel**).

Taking Multiple Shots

This feature allows you to take up to nine continuous shots in sequence. When you take multiple shots, the  icon will be displayed in the viewfinder.

To take multiple shots:

1. From camera mode, select **Options** (right softkey)> **Fun Tools > Multiple Shots**.

Note:	When taking multiple shots, the resolution is temporarily set to Low (240x320).
--------------	---

2. Select an option from the following and press .
- **Off** to deactivate multiple shots.
- **3 Shots** to take a series of 3 shots.
- **6 Shots** to take a series of 6 shots.
- **9 Shots** to take a series of 9 shots.
3. Select the duration of the interval between shots (**Normal** or **Fast**) and press .
4. Select  to take the pictures.
5. Select **Save** (left softkey) to save the pictures. (The Multiple Shots folder will be displayed, up to nine thumbnail pictures per screen.)
6. Select **Next** (right softkey) to display picture options, or press  to return to Camera mode to take another picture.

Setting Autofocus

With this feature, you can adjust the focus automatically depending on the distance of the subject from the camera lens. By default, the autofocus is set to on.

To set autofocus:

1. From camera mode, select **Options** (right softkey) > **Auto Focus**.
2. Select **On** or **Off** and press .
 - While in camera mode, you can select **Focus Lock** (left softkey) to lock the focus. To take the picture, select **Capture** (left softkey), or press  , or the side camera key.

Using the Zoom

This feature allows you to zoom in on an object when you take a picture. You can adjust the zoom from 1x to 16x.

To use the zoom:

1. From camera mode, press the navigation key right or left, or the Side Volume key up or down to adjust the zoom. (The gauge bar is displayed.)
2. Press  to take the picture.

Tip:

If you are taking a picture with the phone closed, you can zoom in and out by pressing the external control key left or right.

Selecting Camera Settings

To select your camera settings:

1. From camera mode, select **Options** (right softkey) > **Camera Settings**.
2. Select one of the following options and press :
 - **Resolution** to select a picture's file size (**2M-1200x1600**, **1.3M-960x1280**, **Medium-480x640**, or **Low-240x320**).
 - **Quality** to select the picture quality setting (**Fine**, **Normal**, or **Economy**).
 - **Shutter Sound** to select a shutter sound (**Default**, Say "Cheese," "Ready," or **Off**).
 - **Status Bar** to switch the status bar display on or off.

Using the Settings & Info Menu

The Settings & Info menu allows you to set up many of the settings of your phone's picture's function.

To access the settings and info menu:

1. Select  > **Pictures** > **Settings & Info**.
2. Select one of the following options and press .
 - **Location** to select whether to include the location information.
 - **Status Bar** to select whether to display the information bar for the pictures and videos.
 - **Slideshow Interval** to set the slideshow interval time.
 - **Account Info** to view your account information.
 - **Help** to view the Pictures instruction page.

Camera Icon Indication

Function		Icons	Details
Auto Focus			To use the autofocus function.
Flash	On This Shot		To use the flash for only one shot.
	On Always		To use a flash every time you take a picture.
	Auto		To use the auto flash function.
Picture Mode	Beach/Snow		Use this setting in bright light.
	Scenery		Use this setting for scenery from a distance.
	Mirror Image		Use this setting to take a mirror image.
	Night/Dark		Use this setting in low light.
White Balance	Sunny		Use this setting for sunny weather.
	Cloudy		Use this setting for cloudy weather.
	Tungsten		Use this setting for standard household lighting.
	Fluorescent		Use this setting for fluorescent lighting.
	Manual		To set the white balance manually.
Brightness	Manual		To set brightness manually.
Sharpness	Manual		To set sharpness manually.
Contrast	Manual		To set contrast manually.
Resolution	2M		For 2 megapixel picture resolution.
	1.3M		For 1.3 megapixel picture resolution.
	Medium		For medium picture resolution.
	Low		For low picture resolution.
Self-Timer			Numeric countdown will appear when the self-timer has been activated.
Multiple Shots			Use this setting for multiple shots.

Recording Videos

In addition to taking pictures, you can also record, view, and send videos to your friends and family with your phone's built-in video camera.

To record a video:

1. Select  **Picture** > **Camcorder** to activate video mode. (Additional video options are available through the video mode **Options** menu. See "Video Mode Options" on page 165 for more information.)
2. Using the phone's main LCD as a viewfinder, aim the camera lens at your subject.

Tip:	You may lock the focus manually by selecting Focus Lock (left softkey).
-------------	--

3. Press , , or the side camera key to begin recording.
4. Press , **Stop** (right softkey), or the side camera key to stop recording. (The recorded video is automatically saved in the In Phone folder.)
5. Select **Next** (right softkey) for more options:
 - **Take New Video** to return to video mode to take another video.
 - **Play** to play the video you just took.
 - **Send to Contacts** to send your video. (See page 171 for details.)
 - **Post to Services** to access available services. Select **Update** to display the latest services.
 - **Upload** to upload the video you just took to the Sprint PCS Picture Mail Web site.

- **Review Media** to go to the In Phone folder to review your saved pictures and videos.
- **Send via Bluetooth** to send the video via Bluetooth.
- **Set as** to assign the video. Select an option and press .
- **Delete** to delete the video you just took.
- **Details/Edit** to edit or display details relating to your videos.

To take a video with the phone closed:

1. Press the side camera key to activate the launch menu.
2. Using the side volume key or external control key, select **Camcorder**.
3. Point the camera lens at your subject. (You can check the video framing through the Sub LCD.)
4. Press the side camera key or  on the external control key to start recording.
5. Press the side camera key or  on the external control key to stop recording.

Video Mode Options

Several options are available from video mode.

Select **Options** (right softkey) to display additional options:

- **Video Mode** to select a video mode from **Normal**, **Beach/Snow**, **Scenery**, **Mirror Image**, **Night/Dark**, or **Self Portrait**.
- **Video Light** to select a Video Light setting. Select **On** to turn on the video light.
- **Auto Focus** to use the autofocus function.
- **Zoom** to zoom in on an object. You can adjust the zoom from 1x to 9x.
- **Self-Timer** to activate the timer function. (See “Setting the Self-Timer” on page 157 for details.)
- **Color Tone** to select a wide variety of color tones for your video.
- **Image Controls** to select an option from **Brightness**, **White Balance**, or **Contrast**.
- **Camcorder Settings** to select your settings. (See “Selecting Camcorder Settings” on page 166 for details.)
- **Review Media** to go to the In Phone folder to review your saved pictures and videos.
- **Camera Mode** to switch to camera mode (if applicable).
- **Key Guidance** to indicate the key functions in video mode.
- **My Favorite Settings** to select your favorite setting.

Selecting Camcorder Settings

To select your camcorder settings:

1. From video mode, select **Options** (right softkey) > **Camcorder Settings**.
2. Select an option from the following.
 - **Resolution** to select a file size (**High**—320x240 or **Good**—176x144) for a video.
 - **Quality/Length** to select video quality from **Economy**—30sec., **Normal**—15sec., **Rich**—10sec., or **Rich**—120min.
 - **Silent Movie** to select **On** to record without sounds. Select **Off** to deactivate this feature.
 - **Cue Sound** to select a cue sound (**Default**, “**Action & Cut**,” “**Ready & Stop**,” or **Off**).
 - **Skins** to select your favorite frame.

Note:	Recording time varies depending on the Quality/Length setting.
--------------	--

Video Icon Indication

Function		Icons	Details
Auto Focus			To use the autofocus function.
Video Light			Appears when the video light setting is on.
White Balance	Same as Camera Icon Indication. (See page 162 for details.)		
Brightness	Manual		To set brightness manually.
Video Mode	Same as Camera Icon Indication. (See page 162 for details.)		
Contrast	Manual		To set contrast manually.
Resolution	Good		For good video resolution.
	High		For high video resolution.
Silent Movie	On		Appears when the silent movie setting is on.
	Off		Appears when the silent movie setting is off.
Self-Timer			Numeric countdown will appear when the self-timer has been activated.

Storing Pictures and Videos

Your phone's picture and video storage area is called **My Albums**. There are two types of storage areas for your pictures and videos that can be used separately according to your needs:

- **In Phone** (see below)
- **Online Albums** (see page 175)

In Phone Folder

The storage area of your phone is called the **In Phone** folder and it can store up to 1000 images. From the In Phone folder, you can view pictures and videos saved in your phone, send them to the Sprint PCS Picture Mail Web site (www.sprint.com/picturemail), delete images, and access additional options.

To review your pictures and videos saved in the In Phone folder:

1. Select  > **Pictures** > **My Albums** > **In Phone**. (Thumbnails will be displayed, up to nine at a time.)
2. Use your navigation key to view and scroll through the pictures and videos.

In Phone Folder Options

When you are viewing the In Phone folder, select **Options** (right softkey) to display the following options:

- **Play** to play your videos.
- **Send to Contacts** to send your pictures and videos. (See page 171 for details.)
- **Upload** to upload pictures and videos from the In Phone folder to the Sprint PCS Picture Mail Web site (www.sprint.com/picturemail).

- **Print** to print an image by mail, at a retail store, by using PictBridge, or by using Bluetooth.
- **Post to Services** to access available services. Select **Update** to display the latest services.
- **Send via Bluetooth** to send your pictures and videos via Bluetooth.
- **Set as** to assign the picture or video. Select an option and press .
- **Delete** to delete pictures and videos.

Note:	Deleting data will free up memory space to enable you to take more pictures and videos. Once deleted, the data cannot be uploaded your online Sprint PCS Picture Mail account or your phone.
--------------	--

- **Details/Edit** to edit or display details relating to your pictures or videos.
- **Slideshow** to view your pictures in slideshow mode.
- **Media Filter** to filter only pictures, only videos, or to display all media files.
- **Album List** to display the album list.
- **Camera Mode** to activate camera mode.
- **Camcorder Mode** to activate video mode.

Tip:	While displaying the In Phone folder, you can select Info (right softkey) to display album information.
-------------	--

Assigned Media Folder

When you assign a picture or video, it will automatically be saved in the **Assigned Media** folder. The folder allows you to store copies of pictures on your phone and to assign pictures and videos to various phone tasks.

To save a picture or video to the Assigned Media folder:

1. From the In Phone folder (see “In Phone Folder” on page 168), select a picture or video you wish to save to the Assigned Media folder and press .
2. Select **Options** (right softkey) > **Set as**.
3. Select an option and follow the onscreen instructions to assign. (A copy of the picture will automatically be saved to the Assigned Media folder.)

To view pictures and videos stored in the Assigned Media folder:

1. Select  > **Tools** > **Assigned Media**. (Thumbnails will be displayed, up to nine at a time.)
2. Use your navigation key to view and scroll.

Sending Sprint PCS Picture Mail

Once you've taken a picture or video, you can use the messaging capabilities of your phone to instantly share your picture or video with family and friends. You can send pictures or videos to up to 25 people at a time using their email addresses or their wireless phone numbers.

Sending Pictures and Videos From the In Phone Folder

To send pictures from the In Phone folder:

1. Select  > **Pictures** > **My Albums** > **In Phone**.
2. Highlight a picture or video you wish to send and press . (The check box on the lower right corner will be marked. You can select multiple pictures and videos.)
3. Select **Options** (right softkey) > **Send to Contacts**.

Note: The first time you send Sprint PCS Picture Mail, you will be prompted to establish a Sprint PCS Picture Mail Web site account and password. (See "Creating Your Sprint PCS Picture Mail Password" on page 155.)

4. Select one of the following options and press :
 - **Contacts** to select recipients from your Contacts list. Highlight a recipient and press  to select.
 - **Phone#** to enter a phone number directly.
 - **Email** to enter an email address directly.

Tip: You can also select **Others** (right softkey) to select recipients from your desired list.

5. Select **Next** (left softkey) when you have finished adding recipients. (You may include up to 25 recipients per message.)
6. If you wish to include a subject, scroll to **Subject** and enter your subject using the keypad.
7. If you wish to include a text message, scroll to **Text**, and then enter your message using your keypad (or select **Mode** [right softkey] to change the input mode). (See “Entering Text” on page 41.)
8. If you wish to include a voice message with the picture and video, scroll to **Audio** and select **Record** (right softkey) to record. (Maximum recording time is 10 seconds.)
9. To set the priority, scroll to **Priority**, and then select **High**, **Normal**, or **Low**.
10. Confirm the recipients, message, voice message, and picture or video. (You may also select additional options by selecting the right softkey. Follow the onscreen instructions to add available options.)
11. Press the appropriate softkey to send the pictures and videos.

Sending Pictures and Videos From Messaging

You can also send Sprint PCS Picture Mail from your phone's Messaging menu.

To send pictures and videos from the Messaging menu:

1. Select **MENU** > **Messaging** > **Send Message** > **Picture Mail**.
2. Select **Contacts**, **Phone#**, or **Email** to select or enter recipients.
3. Select **Next** (left softkey).
4. Select **In Phone** or **Online Albums**.
5. Use the navigation key to select the picture or video you wish to send and press **MENU**. (You can select multiple pictures and videos.)
6. Select **Next** (left softkey). To complete and send the pictures or videos, follow steps 6-11 in "Sending Pictures and Videos From the In Phone Folder" on page 171.

Tip:

To take and send a new picture or a video from Messaging, select **Take New Picture** or **Take New Video** during step 4 above. Then take the new picture or video, select **Next** (right softkey), and follow steps 6-11 in "Sending Pictures and Videos From the In Phone Folder" on page 171.

Managing Sprint PCS Picture Mail

Using the Sprint PCS Picture Mail Web Site

Once you have uploaded pictures and videos from your phone to your online Sprint PCS Picture Mail account at www.sprint.com/picturemail (see “Uploading Pictures and Videos” on page 175), you can use your personal computer to manage your pictures. From the Sprint PCS Picture Mail Web site (www.sprint.com/picturemail) you can share pictures and videos, edit album titles, add captions, and organize images. You can even send your pictures to be printed at participating retail locations.

You will also have access to picture management tools to improve and customize your pictures. You’ll be able to lighten, darken, crop, add antique effects, add comic bubbles and cartoon effects, and use other features to transform your pictures.

To access the Sprint PCS Picture Mail Web site:

1. From your computer’s Internet connection, go to www.sprint.com/picturemail.
2. Enter your phone number and Sprint PCS Picture Mail password to register. (See “Creating Your Sprint PCS Picture Mail Password” on page 155.)

Managing Online Pictures and Videos From Your Phone

You can use your phone to manage, edit, or share pictures and videos you have uploaded to the Sprint PCS Picture Mail Web site at www.sprint.com/picturemail. (See “Uploading Pictures and Videos” below for information about uploading.)

To view your online pictures and videos from your phone:

1. Select  > **Pictures** > **My Albums** > **Online Albums**.
2. Highlight an album title and press  to display thumbnail images.

Tip:

To switch a selected picture from thumbnail view to expand view mode, select **Expand** (left softkey).

3. Use your navigation key to select a picture or video.
4. Select **Options** (right softkey) to display your online picture or video options.

Uploading Pictures and Videos

To upload pictures and videos:

1. Select  > **Pictures** > **My Albums** > **In Phone**.
2. Select the picture(s) and video(s) you wish to upload, and then select **Options** (right softkey) > **Upload**.
3. Select **This**, **Selected**, or **All**.
4. Select **“Uploads”Area** or **Other Albums**.

Downloading Your Online Pictures and Videos

From your online Sprint PCS Picture Mail albums display at www.sprint.com/picturemail, you can select pictures and videos to download to your phone's In Phone folder.

To download pictures and videos from the Sprint PCS Picture Mail Web site:

1. From the online pictures display, select the pictures and videos you wish to download and select **Options** (right softkey). (See "Managing Online Pictures and Videos From Your Phone" on page 175.)
2. Select **Save to..** and press .

Accessing Online Picture and Video Options From Your Phone

To access your online Picture and Video options from your phone:

1. Select a picture or video from your Online Albums. (See "Managing Online Pictures and Videos From Your Phone" on page 175.)
2. Select **Options** (right softkey) to display options.
3. To select an option, highlight it and press .
 - **Play** to play the video.
 - **Send to Contacts** to send your picture or video.
 - **Order Prints** to order prints of the pictures. You can choose whether to pick up your prints at a retail store or have them mailed to you.
 - **Post to Services** to access available services. Select **Update** to display the latest services.
 - **Set as** to assign the picture or video.
 - **Save to..** to save the pictures and videos to the In Phone folder.

- **Delete** to erase pictures and videos saved in the current album (or Uploads folder).
- **Copy/Move** to copy or move pictures and videos to a selected album.
- **Details/Edit** to edit or display details relating to your pictures or videos.
- **Media Filter** to filter only pictures or only videos, or to display all media files.
- **Album List** to display the album list.

Note: The online Picture and Video options may vary depending on the item you select.

To access your Online Albums options from your phone:

1. Display the album list in the Online Sprint PCS Picture Mail menu. (See “Managing Online Pictures and Videos From Your Phone” on page 175.)
2. Use your navigation key to select an album (or Uploads folder).
3. Select **Options** (right softkey) to display options.
4. To select an option, highlight it and press .
 - **Edit/Delete** to select an option from the following:
 - **Delete Album** to delete the selected album.
 - **Rename Album** to rename the selected album.
 - **Album Info** to display detailed information about the album.
 - **Create New Album** to create a new album. Enter a new album name and select **Save** (left softkey).

Note: The Uploads folder cannot be erased or renamed.

Printing Pictures Directly From Your Phone

Your phone is PictBridge compatible, allowing you to print directly from your phone without connecting to a computer. Simply connect your phone to a PictBridge-enabled printer and enjoy printing your photos.

To print pictures directly from your phone:

1. Select  > **Tools** > **USB Connection** > **PictBridge**.
— or —
Select  > **Pictures** > **Print@Home** > **PictBridge**.
2. Connect your phone to the PictBridge-enabled printer by using the included USB cable. (Wait until the connection is completed.)
3. Set the printer settings using your navigation key.
 - **Picture to Print:** You can select the picture from the In Phone folder. (You can select up to 99 pictures.)
 - **Layout:** You can select the print mode from Default Printer, Standard Print, or Index.
 - **Number of Copies:** You can set the number of copies (1-10). (You cannot specify number of copies when Index is selected.)
 - **Print Size:** You can set the print size from Default Printer, 4" x 6", 5" x 7", 8" x 10", or Letter. (Print sizes may vary according to the type of printer you have.)
 - **Date Stamp:** You can imprint the date on your pictures. Select **Yes** or **No**. (Date stamping may not be available depending on the type of printer you have.)

4. When you have finished selecting the printer settings, select **Print** (left softkey).
5. When printing is finished, press .
6. Select **Yes**. Follow the instructions on the display to unplug the USB cable from the phone.

Note: While you are connected to the printer, your phone's screen will display "Phone Off." You cannot make or receive calls during this time.

Make sure your battery is fully charged before using the PictBridge.

Pictures not taken on this phone may not be printable.

**PictBridge
Error
Messages:**

From time to time you may encounter printing problems. Any printer error messages will be displayed on your phone, informing you of the specific problems encountered. Please refer to the user's guide that came with your printer for descriptions, explanations, and possible resolutions for any error messages.

Using Sprint PCS Ready Link

In This Section

- ◆ **Getting Started With Sprint PCS Ready Link** (page 181)
 - ◆ **Making and Receiving a Sprint PCS Ready Link Call** (page 183)
 - ◆ **Adding and Editing Ready Link Contacts** (page 191)
 - ◆ **Erasing Ready Link List Entries** (page 197)
 - ◆ **Updating Sprint PCS Ready Link Lists** (page 199)
 - ◆ **Managing Sprint PCS Ready Link Settings** (page 199)
-

Your Sprint PCS Ready Link-enabled phone gives you the ability to quickly connect with other Sprint PCS Ready Link users for “walkie-talkie-style” communication from anywhere, to anywhere on the Nationwide Sprint PCS Network.

This section explains the features and options of your phone’s Sprint PCS Ready Link capabilities and service.

Getting Started With Sprint PCS Ready Link

Sprint PCS Ready Link allows you to enjoy quick, two-way, “walkie-talkie-style” communication with your friends, family, and coworkers. You can make one-to-one or one-to-many calls (up to five others on the same call) to any other Sprint PCS Ready Link user, anywhere on the Nationwide Sprint PCS Network. You can make and receive Sprint PCS Ready Link calls when your phone displays the Ready Link icon ().

Setting Sprint PCS Ready Link Mode

To enable or disable Sprint PCS Ready Link mode:

- ▶ Select  > **Settings** > **Ready Link** > **Enable/Disable** > **Enable**. (The default is Disable.)
 - **Enable:** Lets you make or receive Sprint PCS Ready Link calls anytime your phone is not in use.
 - **Disable:** Disables your phone’s Sprint PCS Ready Link service. You will not be able to make or receive Sprint PCS Ready Link calls or access your Ready Link contacts.

Tip:

If you haven’t signed up for the Sprint PCS Ready Link service, and Sprint PCS Ready Link mode is set to Disable or the Sprint PCS Ready Link service is locked, you can use the Ready Link/Recorder Button as a Voice Recorder button in standby mode.

Preparing Your Phone for Sprint PCS Ready Link Service

Every time you turn on your phone, your phone will identify itself and make itself available to the Ready Link network.

When the Ready Link icon () is displayed, your phone is ready to make and receive Sprint PCS Ready Link calls.

Ready Link Call Alerts

There are several ways your phone alerts you during Sprint PCS Ready Link calls.

When you make or receive a Sprint PCS Ready Link call:

- The phone sounds (depending on the Ringer Type and Ringer Volume setting).
- The backlight illuminates.
- The screen displays a Sprint PCS Ready Link call message.
- The other party's Sprint PCS Ready Link number and name (if available) are displayed.
- The screen displays who has the floor.

The status of a Sprint PCS Ready Link call is displayed as follows:

- The Green LED On indicates you have the floor and may speak.
- The Red LED On indicates another contact has the floor.
- The LED Off indicates the floor is open. (You can take the floor and speak by pressing and holding )

Making and Receiving a Sprint PCS Ready Link Call

Displaying the Sprint PCS Ready Link List

- ▶ From standby mode, press the Ready Link/Recorder button on the side of your phone () to access the Sprint PCS Ready Link List.

Tip:

The first time you access the list, the Sprint PCS Ready Link Help message will be displayed. Select **Yes** (left softkey) and **Next** (left softkey) to read a brief introduction to Sprint PCS Ready Link.

Selecting a Contacts List

When your phone displays a Sprint PCS Ready Link List, the left softkey is labeled **Go to**. To switch to another contacts list, select **Go to** (left softkey), highlight your desired list, and press .

- **Company List/Company Grps.** contain company-provided contacts (up to 200 entries). Your company list can be created and modified only by an authorized administrator on the Sprint PCS Ready Link server. When the lists are empty, Company List/Company Grps. will not be displayed.
- **Personal List/Personal Grps.** contain your personal Ready Link contact names and numbers, separately or in groups. You can create and edit your Personal List. Your phone can store a total of 200 entries. (You may include up to five contacts per group.)
- **Outgoing** shows the last 20 different Sprint PCS Ready Link calls that you placed.

- **Incoming** shows the last 20 different Sprint PCS Ready Link calls that you accepted.
- **Missed** shows the last 20 Sprint PCS Ready Link calls that you missed.

Making a Sprint PCS Ready Link Call (One-to-One Call)

You can place a one-to-one Sprint PCS Ready Link call by entering a Sprint PCS Ready Link number or by selecting a contact from the Sprint PCS Ready Link List.

To place a Sprint PCS Ready Link call by selecting a contact:

1. Press **...**.
2. Select **Go to** (left softkey), and then select the list from which you want to place a call (**Company List**, **Personal List**, **Outgoing**, **Incoming**, or **Missed**).

Tip:	You can also select Enter R-Link# from the Go to option to enter a Sprint PCS Ready Link number directly. (See page 187 for details.)
-------------	---

3. Scroll to the contact you want to call, and press and hold **...** to place the call and get the floor. (You will see “R-Link calling...” and “Connecting...” followed by “You have floor.” You can now begin speaking.)

— or —

Scroll to the contact you want to call and press and release **...** to place the call. (The call will connect as described above, but “Floor is open” will be displayed on the screen. Either you or your contact may press and hold **...** to take the floor and speak.)

Note: During a Sprint PCS Ready Link call, the “floor” is the right to speak. When you see “Floor is open,” the first person to press the Ready Link/Recorder button can speak (while holding the button). Only the person who has the floor can speak. The phone beeps if you press the Ready Link button when another contact has the floor.

4. Continue holding  as you speak. (When you have finished speaking, release  to allow the other party to speak. When the other party takes the floor, you will see the speaker’s name, phone number, and the text “has floor.”)
5. When you are finished, press .

Note: When neither party has the floor during a Sprint PCS Ready Link call, “Floor is open” is displayed. If no one takes the floor for 20 seconds, the Sprint PCS Ready Link call ends automatically.

Tip: If you press **TALK** or **SPEAKER** during step 3 on the previous page, you can make a standard voice call.

Making a Sprint PCS Ready Link Call (Group Call)

You can make a Sprint PCS Ready Link call to all members in a Group entry that you have in your Sprint PCS Ready Link List. You can communicate with up to five members at a time.

To place a Sprint PCS Ready Link Group call:

1. Press .
2. Select **Go to** (left softkey), and then select the list from which you want to make a Group call (Company Grps. or Personal Grps.).
3. Scroll to the group you want to call, and press and hold  to place the call and take the floor. (You will see “R-Link calling...” and “Connecting...” followed by “You have floor.” Continue with the Sprint PCS Ready Link call as described on the previous page.)
 - To make a Sprint PCS Ready Link call to a group member, select a group, highlight a group member, and press and hold .
 - If one of the group members takes the floor, you will see the member’s name and Sprint PCS Ready Link number on the display.
4. When the call is finished, press .

Tip:

The phone beeps if you press the Ready Link button when another party has the floor.

You can also make a Group Call after checking the group member. Select **MENU** to display group members, highlight **<Call Group>** and press and hold the Ready Link button during step 3 above.

To redial your last Sprint PCS Ready Link call, highlight Redial and press the Ready Link button from the Sprint PCS Ready Link List.

Making a Sprint PCS Ready Link Call by Entering a Number

To place a Sprint PCS Ready Link call by entering a number:

1. From standby mode, enter the Sprint PCS Ready Link number you want to dial.
 2. Press  to place the Sprint PCS Ready Link call. Continue holding  to take the floor and speak.
 - The contact's name is displayed if there is a matched number in your Sprint PCS Ready Link List.
 3. Continue with the Sprint PCS Ready Link call, pressing and holding  to speak and releasing it to allow others to reply.
 4. When the call is finished, press .
- or —
1. Press .
 2. Select **Go to** (left softkey) > **Enter R-Link#**.
 3. Enter the Ready Link number you want to dial.
 4. Follow steps 2–4 above.

Note:	Sprint PCS Ready Link numbers must contain 10 digits (area code + phone number) or 11 digits (1 + area code + phone number). Your Sprint PCS Ready Link number is the same as your wireless phone number.
--------------	---

Missed Call Notification for Sprint PCS Ready Link Calls

When an incoming Sprint PCS Ready Link call is not answered, the Missed Call Notification is displayed.

To call the last Missed Sprint PCS Ready Link call:

- ▶ Simply press and hold  while the Missed Call Notification is displayed. (Continue with the Sprint PCS Ready Link call as described previously.)

Tip:

If you have two or more missed calls, the call log list will be displayed. Different icons will be displayed for different types of notifications.

To erase the Missed Call log:

- ▶ Select **Dismiss** (right softkey).

To display the Missed Ready Link Call log:

- ▶ Select **View** (left softkey) while the Missed Call Notification is displayed. To call the entry, highlight the entry you want to call, and press and hold . (Continue with the Sprint PCS Ready Link call as described previously.)

Receiving a Sprint PCS Ready Link Call

To receive a Sprint PCS Ready Link call:

1. Make sure your phone's Sprint PCS Ready Link mode is enabled. (See "Setting Sprint PCS Ready Link Mode" on page 181.)
2. When you receive a Sprint PCS Ready Link call from a contact, "R-Link Call," the contact's name, and the Sprint PCS Ready Link number are displayed. (You do not need to take any action to answer the call.)
 - When you receive a group call, "Group Call," the group member's name, and the Sprint PCS Ready Link number are displayed.
3. If the person placing the call has kept the floor (held the Ready Link/Recorder button), you will see the contact's name and Sprint PCS Ready Link number along with "has floor," and you will hear the caller speaking.
4. When the caller finishes speaking and releases , you will see "Floor is open" on the display screen. Press and hold  to take the floor and reply to the caller. (You will see "You have floor" and hear a tone confirming that you may speak.)
5. When the conversation is finished, press .

Tip:

You can also receive a Sprint PCS Ready Link call with the phone closed. Press and hold the Ready Link button to take the floor when the floor is open.

Note:

You can change the volume and the speaker setting while a Sprint PCS Ready Link call is activated. **Volume:** Adjust the voice volume by using the Side Volume key or by pressing the navigation key up or down (except when you are pressing and holding the Ready Link button). **Speaker:** Switch the speaker on or off by pressing the Speaker button.

Sprint PCS Ready Link Options

When you use Sprint PCS Ready Link, several user options are available by selecting **Options** (right softkey). To select an option, highlight it and press .

- **Edit** to edit a Sprint PCS Ready Link number or name. (See “Editing a Contact in Your Personal List” on page 195.)
- **Send Message** to send a Text, Picture Mail, or SMS Voice message.
- **Copy to Personal** to copy a contact to the Personal List.
- **Copy Group** to copy a Company Group to the Personal Group List.
- **Copy to Ph. Book** to copy a contact to the Contacts list.
- **Erase** to erase a contact. **Erase Group** is displayed when you highlight a group.
- **Add Contact** to add a new contact. **Add Group** is displayed when you highlight a group list.
- **Erase R-Link List** to erase entries saved in the Sprint PCS Ready Link List (except Company List/Company Grps) and in Ready Link Call History.
- **Help** to see the Sprint PCS Ready Link instruction page.

Adding and Editing Ready Link Contacts

Copying an Entry to Your Personal List or Personal Group List

You can copy an entry to your Personal Lists from several different sources. If the selected entry is already stored in the Personal Lists, the “copy” option is not displayed.

To copy an entry from the Sprint PCS Ready Link List:

1. Press .
2. Select **Go to** (left softkey), and then select the list from which you want to copy an entry (**Company List**, **Company Grps.**, **Personal List**, **Personal Grps.**, **Outgoing**, **Incoming**, or **Missed**).
3. Select the entry you want to copy (or scroll to highlight the **Redial** entry at the top of your screen), and select **Options** (right softkey). To select an option, highlight it and press .
 - **Copy to Personal** to copy the contact to the Personal List. (This option will not be available if the selected entry is already stored in the List.)
 - **Copy Group** to copy the group to the Personal Group List.
 - **Copy to Ph. Book** to copy the contact to the Contacts list.
4. Select **Yes** (left softkey) to copy and save the entry to your Personal List or Personal Group List.

Note:	Your Company Lists can be set up and edited only by an administrator on the Sprint PCS Ready Link server. You cannot add or edit contacts/groups to your Company Lists.
--------------	---

Saving a Sprint PCS Ready Link Number

When you have finished a Sprint PCS Ready Link call, you will see the Sprint PCS Ready Link number and the text “R-Link call ended” on the display. You can save a Sprint PCS Ready Link number to your Personal Lists from this end display.

To save the number:

1. From the end display, select **Options** (right softkey) > **Save**.
 - If the entry has no name, you are prompted to enter a name.
2. Select **Yes** (left softkey) to save the entry.

Note:	If the number is already stored in the Personal List or Personal Groups, the “Save” option is not displayed.
--------------	--

Finding an Entry in the Sprint PCS Ready Link List

You can find your desired entry by entering a few letters.

To find a Sprint PCS Ready Link entry:

1. Press **⋮**.
2. Select **Goto** (left softkey), and then select your desired list (**Company List**, **Company Grps.**, **Personal List**, or **Personal Grps.**).
3. Enter the first letter or the first few letters of the name.
 - The display shows the list beginning with the letter(s) you entered.
4. Scroll through the list and press **MENU OK** to select your desired entry.

Adding a New Contact to Your Personal List

You can store a total of 200 entries in the Personal Lists.

To add a new Sprint PCS Ready Link contact:

1. Press .
2. Select **Go to > Personal List > Add Contact**.
— or —
Select a contact, select **Options** (right softkey), and then select **Add Contact**.
3. Enter a name for the new contact and press . (This is the name you will see when calling or receiving a call from the contact.)
4. Select **R-Link Number**, enter the contact's 10-digit Sprint PCS Ready Link number (the contact's wireless phone number), and press .
5. Select **Save** (left softkey) to save the new contact to your Personal List.

Tip:

Tip: You are not allowed to use the following symbols during step 3: @ : ; / *) (.

Adding a New Group to Your Personal Group List

You can add new groups to the Personal Group List. Each group can include up to five members. You can enter a group member directly or select the member from the Company List or Personal List.

To add a new Sprint PCS Ready Link group entry:

1. Press **⋮**.
2. Select **Go to > Personal Grps. > Add Group**.
— or —
From the Personal Group List, select an entry, and then select **Options** (right softkey) > **Add Group**.
3. Enter a Group Name, press **MENU OK**, and select **Next** (left softkey).
4. To add contacts to the group, select **Add** (right softkey).
5. Highlight one of the following options and press **MENU OK**:
 - **New** to add a new contact. See the previous page for details.
 - **from Company** to add a contact from your Company List (if applicable).
 - **from Personal** to add a contact from your Personal List.
6. Scroll to the contacts you want to add and press **MENU OK** or select **Pick** (right softkey) to include the entries.
7. Select **Done** (left softkey) when you have finished selecting contacts, and then select **Update** (left softkey) to update your Personal Group List with the new group entry.

Tip:

You can also add members directly. From step 4 above, highlight <**Add Members**> and press **MENU**. Enter the new member's name and R-Link number and select **Save** (left softkey) to save the entry.

Editing a Contact in Your Personal List

To edit a Personal List contact:

1. Press .
2. Select **Go to > Personal List**.
3. Scroll to the entry you want to edit and select **Options** (right softkey).
4. Select **Edit**, and then select the field you want to edit (**Name** or **R-Link Number**).
5. Edit the entry, select **OK** (left softkey), and then select **Save** (left softkey) to save your changes.

Editing a Group in Your Personal Group List

To edit a group name:

1. Press .
2. Select **Go to > Personal Grps.**
3. Scroll to the group entry you want to edit and select **Options** (right softkey) > **Edit**.
4. Edit the group name and select **OK** (left softkey).

Tip:

If you don't need to edit the group name, select **Next** (left softkey) during step 4 above and skip step 5.

5. Select **Save** (left softkey) to save your changes.
6. To edit a group member, scroll to the contact you want to edit and select **Options** (right softkey).
7. Select **Edit**, and then select the field you want to edit (**Name** or **R-Link Number**).
8. Edit the entry, select **OK** (left softkey), and select **Save** (left softkey) to save your changes.
9. Select **Update** (left softkey) to update your Personal Group List.

Erasing Ready Link List Entries

Erasing an Entry in Your Personal Lists

To erase a contact or a group:

1. From the Sprint PCS Ready Link List, select **Goto**, and then select **Personal List** or **Personal Grps**.
2. Scroll to the entry you want to erase, and select **Options** (right softkey) > **Erase**.
 - **Erase Group** is displayed when you select **Personal Grps**.
3. Select **Yes**.

To erase a group member:

1. From the Sprint PCS Ready Link List, select **Goto** > **Personal Grps**.
2. Scroll to your desired group, and press  to display the group members.
3. Select the contact you want to erase, and select **Options** (right softkey).
4. Select **Erase** > **Yes** > **Update** (left softkey) to erase the member and update your Personal Group List.

Erasing a Sprint PCS Ready Link List

You can erase all entries saved in the Sprint PCS Ready Link List (except Company List/Company Grps.).

To erase a Sprint PCS Ready Link List:

1. From the Sprint PCS Ready Link List, select **Options** (right softkey) > **Erase R-Link List**.
2. Select an option and press .
 - **Outgoing** to erase all outgoing Sprint PCS Ready Link calls.
 - **Incoming** to erase all incoming Sprint PCS Ready Link calls.
 - **Missed** to erase all missed Sprint PCS Ready Link calls.
 - **All Calls** to erase all Sprint PCS Ready Link call history (except the redial number).
 - **All Personal Ent.** to erase all entries in Personal List and Personal Grps. You are prompted to enter your four-digit lock code.
3. Select **Yes** and press .

Tip:

Redial numbers will not be erased.

Updating Sprint PCS Ready Link Lists

Updating the Company List and Personal List

To update your Company List and Personal List manually through the Sprint PCS Ready Link server:

- ▶ Select  > **Settings** > **Ready Link** > **List Update**.

Managing Sprint PCS Ready Link Settings

Assigning Speed Dialing for Sprint PCS Ready Link Entries

To assign speed dialing for Sprint PCS Ready Link entries:

1. Select  > **Contacts** > **SpeedDial #s**.
2. Select an unassigned number and press .
3. Select **Go to** (left softkey), and then select the list from which you want to set a speed dial (**Company List**, **Company Grps.**, **Personal List**, or **Personal Grps.**).
4. Select the contact and press .

— or —

Select the group, and then select an option.

- **Assign** to assign the selected group as a speed dial.
- **Details** to display the group details. You can select the group member from the group list.

To use speed dial for a Sprint PCS Ready Link entry:

- ▶ From standby mode, press the appropriate key, and press .

Restarting the Ready Link Service

To restart the Sprint PCS Ready Link service:

- ▶ Select **MENU OK** > **Settings** > **Ready Link** > **Restart**.

Setting Ready Link Guard

This feature enables you to display a warning message when you cannot receive Sprint PCS Ready Link calls.

To set the Ready Link Guard:

1. Select **MENU OK** > **Settings** > **Ready Link** > **R-Link Guard**.
(A message will be displayed.)
2. Select **OK** (left softkey) to continue.
3. Select **On** and press **MENU OK**. (Select **Off** to deactivate this feature.)

Setting Ringer Types for Sprint PCS Ready Link Calls

Your phone provides a variety of ringer types that allow you to customize your ringer and volume settings.

To select a ringer type for Sprint PCS Ready Link calls:

1. Select **MENU OK** > **Settings** > **Ready Link** > **Sounds** > **Ringer Type**.
2. Select **Ready Link Calls**, **R-Link Missed**, or **R-Link Floor Tone**.
3. Select your desired ringer type and press **MENU OK**.
 - To hear the selected ringer, select **Play** (right softkey).

Setting Ringer Volume for Sprint PCS Ready Link Calls

To select a ringer volume for Sprint PCS Ready Link calls:

1. Select  > **Settings** > **Ready Link** > **Sounds** > **Ringer Volume**.
2. Select **Separate Vol.** and press the navigation key left or right to select a volume level.
3. Select **Done** (left softkey) to save.

Setting Vibrate Pattern for Sprint PCS Ready Link Calls

You can select your favorite vibrate pattern for Sprint PCS Ready Link calls.

To select a vibrate pattern for Sprint PCS Ready Link calls:

1. Select  > **Settings** > **Ready Link** > **Sounds** > **Vibrate Pattern**.
2. Select **Ready Link Calls** or **R-Link Missed**.
3. Select your desired vibrate pattern and press .

Setting an Alert Notification for Sprint PCS Ready Link Calls

Your phone can alert you with an audible tone when you receive a Sprint PCS Ready Link call.

To set alerts for Sprint PCS Ready Link calls:

1. Select  > **Settings** > **Ready Link** > **Sounds** > **Alerts**.
2. Select **Ready Link Calls**, **R-Link Missed**, or **Headset Alert**.
3. Select your desired option and press .

To adjust the floor tone volume:

1. Select  > **Settings** > **Ready Link** > **Sounds** > **Alerts**.
2. Select **Floor Tone Vol.** > **Earpiece** or **Speaker**.
3. Press the navigation key left or right to select a volume level and select **Done** (left softkey).

Tip:

You can also set alerts using the Alerts settings menu. (See “Alert Notification” on page 52.)

Setting the Speakerphone for Sprint PCS Ready Link Calls

You can set your phone to use speakerphone mode for Sprint PCS Sprint Ready Link calls. By default, the speakerphone is set to on.

To set the speakerphone mode:

- ▶ Select **MENU OK** > **Settings** > **Ready Link** > **Speakerphone** > **On** or **Off**.

Note:	If the phone's ringer volume is set to Vibrate All, Ringer off, or Silence All, the speakerphone turns off. Press SPEAKER key to turn the speakerphone mode on.
--------------	--

Setting the Default View of the Sprint PCS Ready Link List

You can select the default Sprint PCS Ready Link List when Sprint PCS Ready Link is launched.

To select the default view of the Sprint PCS Ready Link List:

1. Select **MENU OK** > **Settings** > **Ready Link** > **Default View**. (The default setting is **Personal List**.)
2. Select your desired list and press **MENU OK**.

Setting the Floor Display of the Sprint PCS Ready Link Calls

With this feature, you can select the floor display during Sprint PCS Ready Link calls.

To select the floor display:

1. Select  > **Settings** > **Ready Link** > **Floor Display**.
2. Select **Text Only** or **Image 1–3** and press .
 - To see a display preview of the image, select **Preview** (right softkey).

Using the Built-In Media Player

In This Section

- ◆ **Your Multimedia Channel Options** (page 206)
 - ◆ **Accessing Your Media Player's Channel Listings** (page 207)
 - ◆ **Playing a Video or Audio Clip** (page 208)
 - ◆ **Multimedia FAQs** (page 213)
-

Your phone's built-in media player gives you the ability to listen to audio clips and to view video clips right from your phone's display. It's a great way to stay up-to-date on news, weather, and sports information while also enjoying the latest blockbuster movie trailers or music videos – anywhere, anytime on the Nationwide Sprint PCS Network. Just access your media player from your phone's main menu, scroll to your choice of channel, and select one of the video or audio clips to play. It's like having a TV in the palm of your hand.

This section explains the features and options of your phone's built-in media player.

Your Multimedia Channel Options

Sprint TVSM offers a variety of accessible audio or video channels, depending on your Sprint PCS service plan and multimedia subscriptions. Your subscription options include a comprehensive basic service as well as a full menu of additional channel options.

- **Preview Channel:** This free channel lets you sample clips from all the available channels before you make a decision to subscribe. It's like viewing the movie preview before deciding whether you want to spend the money to go see the full motion picture.
- **Sprint TV:** This comprehensive basic service gives you access to a variety of content from familiar brands. Think of it as "basic cable" for your phone. It allows you unlimited access to this content as long as you continue to pay the monthly subscription fee.
- **Available Individual Channel Options:** You also have the option of subscribing to individual channels from an extensive menu offering. These channels are available for a monthly subscription fee and allow you unlimited access as long as you continue to pay your monthly subscription fee.

You can always visit www.sprint.com for a comprehensive up-to-date Channel Guide that provides an explanation of the available channels and information on subscription rates.

Accessing Your Media Player's Channel Listings

It's easy to access and view the channel listings on your M1 by Sanyo from the phone's main menu.

To access your media player and channel listings:

- ▶ Select  > **Media Player** > **Channel Listing**. Your channel listings will be displayed, divided into the following sections:
 - **My Channels:** These include the complimentary Previews channel that Sprint provides, as well as any available individual channels for which you have purchased access. If you have purchased Sprint TV, either through a Vision Plan subscription or by purchasing it separately, it will be displayed here.
 - **Available Channels:** These are channels that have not yet been purchased but are available to access for a monthly subscription fee. Use your navigation key to scroll through and select a channel, and follow the onscreen instructions to purchase access to it. Upon purchasing access to one of these channels, the channel will be listed, along with its corresponding channel number, in the **My Channels** section of your media player's channel listings. You will see it displayed in this section the next time you access your phone's media player.

Note: The first time you access one of your Available Channels, you will be prompted to accept the corresponding monthly fee (unless it's a channel that doesn't have an associated monthly fee). Accepting the charge gives you access to the channel for as long as you continue to pay the monthly fee. If you accept the charge, the next time you access your phone's media player, this channel will be displayed in the My Channels section of your Channel Listings.

Playing a Video or Audio Clip

To select and play a media clip in the Channel Listing:

1. Select  > **Media Player** > **Channel Listing**.
2. Use your keypad to enter a channel number (or use your navigation key to scroll to a channel and press ).
 - **My Channels:** If you have selected a channel that you've already signed up for (or if it's a channel with no monthly fee), you will see a list of available clips.
 - **Available Channels:** If you have selected a channel that you have not yet signed up for, you will be prompted to accept the corresponding monthly charge. Follow the onscreen prompts to subscribe to the selected channel. (A list of available clips will be displayed.)
3. Scroll to the clip that you would like to play and select **Select** (left softkey) or . If applicable, the left and right softkeys will offer additional options. (The clip will automatically load and begin playing.)

To select and play a media clip in the Media Listing:

1. Select  > **Media Player** > **Media Listing**.
 - If you have selected Media Listing, a list of available video or audio files will be displayed. You can transfer video or audio files from your PC to your phone's media folder using the mass storage function. (See "Connecting Your Phone to Your PC" on page 129.)
2. Use your navigation key to scroll to the clip that you would like to play and select **Select** (left softkey) or . (The clip will automatically load and begin playing.)

Media Folder Options

To access a media folder's options, display the media folder and select **Options** (right softkey). To select an option, highlight it and press .

- **Media Listing** to display the media file list under the media folder.
- **Channel Listing** to display the channel list.
- **Info** to display the media clip information.
- **Play Mode** to switch the play mode in the media folder.
- **Media Filter** to sort audio and video clips in the media folder.
- **Player Settings** to customize the player settings from **Equalizer**, **Display Size**, or **Skins**.
- **Minimize** to play music in the background during standby mode or while using the application.

Tip:

You can stop background music by pressing  in standby mode.

- **Playlist** to display a customized playlist you've created.
- **Add to Playlist** to add a media clip to the playlist.
- **Send via Bluetooth** to send media clips via Bluetooth.
- **Use Bluetooth** to play media clips through a Bluetooth headset.
- **Help** to see the Multimedia instruction page.
- **Exit** to terminate the Media Player.

Note:

The phone's Media Player support the following file extensions: "mp3," "aac," "mp4," "3gp," "3gpp," "3gp2," "3g2," "qcp," "amr," "m4a," "m4v."

Playlists

You can create playlists to organize media files stored in your phone.

To create a playlist:

1. Select  > **Media Player** > **Playlist**.
2. Highlight **<New Playlist>** and press .
3. Enter a name for the new playlist and press .
4. Select from the files that are available in the media folder and select **Done** (left softkey). (The newly named playlist will be displayed on the playlist.)

To add files to a playlist:

1. Select  > **Media Player** > **Playlist**. (The available playlists on your phone will be displayed).
2. Select the playlist that you want to add files to and press .
3. While in the playlist, select **Options** (right softkey) > **Add Media**.
4. Select from the files that are available in the media folder.
— or —
1. Select  > **Media Player** > **Media Listing**. (The available media file list on your phone will be displayed).
2. Select the files you want to add and select **Options** (right softkey) > **Add to Playlist**.
3. Select an option to add file(s) and press .
4. Select the playlist you want and press .

To remove files from a playlist:

1. Select **MENU OK** > **Media Player** > **Playlist**.
2. Select the playlist that you want to remove files from and press **MENU OK**.
3. While displaying files contained within a playlist, select **Options** (right softkey) > **Remove**.
4. Select an option to remove file(s) and press **MENU OK**.
5. Select **Yes** and press **MENU OK**.

To delete a playlist:

1. Select **MENU OK** > **Media Player** > **Playlist**.
2. Select **Options** (right softkey) > **Delete**.
3. Select an option to delete one or more playlists and press **MENU OK**.
4. Select **Yes** and press **MENU OK**.

Options available under the playlist menu may include:

- **Media Listing** to display the media file list under the media folder.
- **Channel Listing** to display the channel list.
- **Info** to display the media clip information.
- **Play Mode** to switch the play mode in the playlist.
- **Rename** to rename the playlist.
- **Delete** to delete the playlist.
- **Player Settings** to customize the player settings.
- **Help** to see the Multimedia instruction page.
- **Exit** to terminate the Media Player.

Note:

When you delete a playlist, or a file from a playlist, only the reference to the data is deleted; the actual playlist or file is not deleted from the phone's memory.


Playing Media Clips Using the External Control Key

The external control key can be used to play, pause, stop, forward, or rewind a media clip while the phone is closed. It can also be used to navigate through a media player option.

To launch a Music or Media player:

- ▶ Press  to activate a launch menu, and press the control key up or down to select **Music** or **Media Player**.

Key Operation While Playing Media Clips

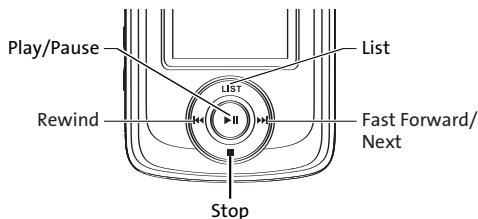

Keys	Operation
	Plays or pauses a media clip.
	Stops the media clip. Returns the phone to standby mode when held down.
	Skips to the next clip. Fast forwards within the current clip when held down.
	Returns to the beginning of the current clip. Rewinds within the current clip when held down.
List	Displays a list of media clips.

Multimedia FAQs

1. **Will I know if I'm receiving an incoming call while I'm viewing or listening to an audio clip?**

No. All incoming calls will roll into voicemail while you are playing a clip. If the caller leaves a voicemail, the voicemail icon will be displayed on the screen.

2. **How long are the clips? Will I know the estimated time it will take to play the clip prior to accessing it?**

Once you have selected a channel, you will see a listing of the available clips, with each clip's length displayed after the clip's title. In general, a clip's duration will depend on the story or content being provided, and can be fairly short or as long as a few minutes.

3. **Can I access a multimedia clip wherever I am, as long as I have my phone?**

As long as you are on the Nationwide Sprint PCS Network, you will have access to the audio and video clips.

Note:	Sprint TV Service does not work while roaming off of the Nationwide Sprint PCS Network or where service is unavailable.
--------------	---

4. **Are the videos that I'm viewing "live" videos?**

It depends on the content provider. Some of the channels available through Sprint TV stream live content. Others provide media on demand with video and audio clips that are refreshed throughout the day, but that are not "live."

- 5. After purchasing access to an Available Channel for a monthly fee, do I receive any confirmation? That is, how do I know it has been purchased?**

The next time you access your media player's channel listings, the purchased channel title and corresponding number will be displayed in the My Channels section.

- 6. Why are some channels already preloaded into the My Channels section?**

Some channels, such as Previews, are offered free of charge as a customer courtesy. These channels are automatically displayed in the My Channels section of your channel listings.

- 7. If I don't subscribe to a Sprint PCS Vision Plan or Sprint Power Vision Plan, will I still be able to view the multimedia clips?**

Yes. For service access charges, please consult your Sprint PCS service plan or visit www.sprint.com.

- 8. How can I easily access a channel without having to scroll through all the channels in my channel listings?**

Each channel will have a number to the left of it. You can simply press this number to quickly access the clips located within that channel.

Tip:

When entering the specific channel number, channels 01–09 do not require you to enter a “0.” For example, to access channel “07,” just press the “7” key.

- 9. What does it mean when the video pauses and I see the word “loading” at the bottom of the screen?**

This happens when the media player is loading the data necessary to play the clip. It typically occurs when there is heavy traffic on the network.

10. How can I cancel service if I decide I don't want it?

To cancel your Multimedia Service, visit www.sprint.com and sign on to **My PCS** with your account number and password. From this page, you have the ability to cancel the service or any Available Channels to which you subscribe.

11. If I put on my stereo headphones and insert them into the phone's headset jack, can I close the phone while I am playing an audio (or video) clip without interrupting the clip?

Yes. When you insert your stereo headset into the phone's headset jack, the phone automatically goes into "headset mode," allowing you to close the phone and continue playing the clip. (Likewise, if your phone is in "headset mode," a phone call will not disconnect when you close the phone.)

12. Can I surf to a different channel while I am playing a clip?

Yes. While you are playing a clip, you can use the up and down navigation buttons to surf to a different channel. A small pop-up screen will be displayed that tells you which channel you are watching as well as other channels that you have access to. Use the navigation buttons to scroll through the different channels. Once you find a channel that you want to watch, scroll to it and press  (or simply wait approximately three seconds), and the channel will begin loading.

Using Bluetooth

In This Section

- ◆ **Turning Bluetooth On and Off** (page 217)
 - ◆ **Using the Bluetooth Settings Menu** (page 218)
 - ◆ **Bluetooth Profiles** (page 221)
 - ◆ **Pairing Bluetooth Devices** (page 223)
 - ◆ **Using the Trusted Devices Options** (page 224)
 - ◆ **Printing Data via Bluetooth** (page 225)
 - ◆ **Sending Data via Bluetooth** (page 226)
-

Your phone features built-in Bluetooth technology, allowing you to share information more easily than ever before.

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car kits, and Bluetooth-enabled handhelds, PCs, printers, and wireless phones. The Bluetooth communication range is usually up to approximately 10 meters (30 feet).

This section details how to set up and make the most of your phone's Bluetooth capabilities.

Turning Bluetooth On and Off

By default, your phone's Bluetooth feature is turned off. Turning Bluetooth on makes your phone "available" to other in-range Bluetooth devices. To make your phone visible to other devices you must also set your phone's visibility to other than Hidden. (See page 219.)

To turn Bluetooth on:

1. Select  > **Settings** > **Bluetooth** > **Enable/Disable**.
2. Select **Enable** to enable Bluetooth.

To turn Bluetooth off:

1. Select  > **Settings** > **Bluetooth** > **Enable/Disable**.
2. Select **Disable** to disable Bluetooth.

Note:	Enabling the Bluetooth settings affects the battery's talk and standby times.
--------------	---

Bluetooth Status Indicators

The following icons show your Bluetooth connection status at a glance:

-  — Bluetooth feature is active. It turns to green when connected to a Bluetooth device.
-  — Your phone is discoverable by another Bluetooth device.
-  — Your phone is communicating with a Bluetooth device.

Using the Bluetooth Settings Menu

The **Bluetooth Settings** menu allows you to set up many of the characteristics of your phone's Bluetooth service, including:

- Entering or changing the name your phone uses for Bluetooth communication
- Setting your phone's visibility (or "discoverability") to other Bluetooth devices
- Displaying your phone's Bluetooth address

To access the **Bluetooth Settings** menu:

1. Select  > **Settings** > **Bluetooth**.
2. Use the navigation key to select **Enable/Disable**, **Visibility**, **Voice Priority**, **My Device Name**, or **My Device Info**, and press .

Bluetooth Settings: My Device Name

The **My Device Name** section of the Bluetooth Settings menu allows you to select a Bluetooth name for your phone. Your phone's Bluetooth name will be seen by other in-range Bluetooth devices, depending on your Visibility settings.

To set a Bluetooth name for your phone:

1. Select  > **Settings** > **Bluetooth** > **My Device Name**.
2. Press and hold  to clear the current name.
3. Use your keypad to enter a new name and press  to save and exit.

Bluetooth Settings: Visibility

The **Visibility** section of the Bluetooth Settings menu allows you to manage your availability to other Bluetooth devices.

To configure your phone's visibility (discoverability) to other Bluetooth devices:

1. Select  > **Settings** > **Bluetooth** > **Visibility**.
2. Select your desired Visibility setting and press :
 - **Always Visible** to allow other Bluetooth devices to detect and identify your phone.
 - **Visible for 3 min.** to allow other Bluetooth devices to detect your phone for 3 minutes, after which it returns to hidden mode.
 - **Hidden** to prevent other Bluetooth devices from detecting and identifying your phone.

Note:

It is recommended that your phone is in standby mode when receiving data from other devices via Bluetooth.

Bluetooth Settings: Voice Priority

The **Voice Priority** section of the Bluetooth Settings menu allows you to choose the default device you want to use for incoming and outgoing calls.

To set the voice priority:

1. Select  > **Settings** > **Bluetooth** > **Voice Priority**.
2. Select **Phone** or **Hands-free**.
 - **Phone** allows you to switch the audio between your phone and hands-free devices.
 - **Hands-free** allows only hands-free devices to be used.

Bluetooth Settings: My Device Information

To display your phone's device information:

- ▶ Select  > **Settings** > **Bluetooth** > **My Device Info**.

Setting Auto-Accept

You can configure your phone's accessibility to other Bluetooth devices.

To configure your phone's accessibility to other Bluetooth devices:

1. Select  > **Tools** > **Bluetooth**.
2. Select the device from the trusted devices list and select **Options** (right softkey) > **Auto-Accept**.
3. Select a setting and press :
 - **On** allows other Bluetooth devices to initiate a connection without any confirmation.
 - **Off** displays a confirmation screen, from which you can accept or deny the connection.

Note:	When the Auto-Accept feature is enabled and you receive files from other devices, any existing file of the same name will be overwritten without any warning notice.
--------------	--

Bluetooth Profiles

All the Bluetooth settings you configure are stored in your phone's Bluetooth user profile. Different profiles can be used for specific Bluetooth functions.

- **Headset Profile**—This profile functions as a wireless ear jack. When an incoming call is received, the ringer can be heard through the headset instead of through the phone. The call can then be received by pushing a button. While using your phone, you can use the headset instead of the phone by pushing a button on the headset, the same as inserting a jack into the phone. Increase or decrease the volume by using the volume key on the side of the phone.
- **Hands-Free Profile**—This profile functions as a wireless car-kit. Incoming calls ring to the hands-free headset or device. Calls can be received by pressing a button on the headset or device. For dialing, four functions are supported: recent call dial, voice dial, speed dial, and number dial. Increase or decrease the volume by using the volume key on the side of the phone.
- **DUN: Dial-Up Network Profile**—This profile functions as a wireless data cable, connecting a PC or PDA to a network through your phone.
- **OPP: Object Push Profile**—This profile uses the Generic Object Exchange profile services to send data objects between devices and can be used to exchange objects like music files, pictures, calendar (vCal), and business cards (vCard).

- **FTP: File Transfer Profile**—This profile allows you to transfer files to or from other Bluetooth-enabled devices.
- **BPP: Basic Printing Profile**—This profile enables simpler printing from your phone to a Bluetooth-enabled printer.
- **A2DP: Advanced Audio Distribution Profile**—This profile allows you to transmit high quality stereo music from your phone to other compatible accessories including Bluetooth stereo headsets.

Note:	The A2DP profile supports the following file extensions: “aac,” “m4a,” “mp3,” “mp4,” “3gp,” “3gpp,” “3g2,” “3gp2,” “mid.” Streaming media and movie media are not supported.
--------------	--

- **AVRCP: Audio/Video Remote Control Profile**—This profile enables your phone to remotely control compatible accessories including Bluetooth stereo headsets. You can play, pause, stop, forward, reverse, fast forward, or rewind from a headset. (Playback functions may vary among Bluetooth accessories.)

Pairing Bluetooth Devices

Paired Devices

The Bluetooth pairing process allows you to establish trusted connections between your phone and another Bluetooth device. When devices are paired, a passcode (sometimes called a PIN) is shared between devices, allowing for fast, secure connections while bypassing the discovery and authentication process.

To pair your phone with another Bluetooth device:

1. Select  > **Tools > Bluetooth > Add New > Search.**
(Your phone will display a list of discovered in-range Bluetooth devices.)
2. Select the device you wish to pair with and press .
3. Select **Add to Trusted.**
4. Enter the PIN and press . (When the owner of the other device enters the same PIN, the pairing is complete.)

Waiting for Request

If you are going to be using a Dial-Up Network (DUN) profile to pair with a PC or PDA, you will need to allow the other device to initiate pairing with your phone.

To allow your phone to be paired with another Bluetooth device:

1. Select  > **Tools > Bluetooth > Add New > Wait for Request.**
2. Follow the onscreen prompts to enter your PIN and press .

Using the Trusted Devices Options

Once you have created paired devices, several options are available from the trusted devices list.

To use the trusted devices options:

1. From the trusted devices list, select a device.
2. Select **Options** (right softkey) to display the following options:
 - **Connect** or **Disconnect** to connect to or disconnect from the Bluetooth device (if applicable).
 - **Send Item** to send an item saved on your phone to another Bluetooth device.
 - **Browse** to browse and transfer files between Bluetooth devices using FTP.
 - **Print** to print the data using Basic Printing Profile or Object Push Profile (if applicable).
 - **Edit Name** to edit the name of the trusted device.
 - **Auto-Accept** to configure your phone's accessibility to other Bluetooth devices. (See page 220.)
 - **Device Info** to display the trusted device's information.
 - **Sort by** to sort the trusted devices.
 - **Delete** to delete the selected device from the list.
 - **Delete All** to delete all devices from the list.
 - **Settings** to display the Bluetooth settings menu. (See page 218.)

Printing Data via Bluetooth

You can print out your pictures, Contacts entries, business card, calendar event, and messages stored on the phone. (Some Bluetooth-enabled printers may not support this feature.)

To print data via Bluetooth:

1. Select  > **Tools** > **Bluetooth**.
2. Select the device from the trusted devices list and then select **Options** (right softkey) > **Print**.
3. Select a category (**Picture**, **Business Card**, **Contacts**, **Calendar Event**, or **Message**) and press .
4. Select **Create Print Job** or **Printer Default** and press .
(This step only appears when you select a picture.)
 - **Create Print Job** to print pictures by creating a print job via the Basic Printing Profile.
 - **Printer Default** to print pictures using the default printer settings via the Object Push Profile.
5. Follow the onscreen instructions to select the item(s) to print.
6. Make sure the printer is ready to print data, and then select **Print** (left softkey).
7. If necessary, enter the PIN and press .

Note: Before you start using the Bluetooth feature, make sure your phone's battery is fully charged.

Sending Data via Bluetooth

You can send data saved on your phone to another Bluetooth device.

To send data via Bluetooth:

1. Select  > **Tools** > **Bluetooth**.
2. Select the device from the trusted devices list and then select **Options** (right softkey) > **Send Item**.
3. Select an item (**Business Card**, **Contacts**, **Calendar Event**, or **From File Manager**) and press .
4. Follow the onscreen instructions to select the item(s) to send.
5. Make sure the other device is ready to receive data, and then select **Send** (left softkey).
6. If necessary, enter the PIN and press .

Note:	Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth-compatible devices.
--------------	--

Section 3

Sprint PCS Service Features



Sprint PCS Service Features: The Basics

In This Section

- ◆ **Using Voicemail** (page 229)
 - ◆ **Using SMS Text Messaging** (page 237)
 - ◆ **Using SMS Voice Messaging** (page 241)
 - ◆ **Using Caller ID** (page 242)
 - ◆ **Responding to Call Waiting** (page 243)
 - ◆ **Making a Three-Way Call** (page 244)
 - ◆ **Using Call Forwarding** (page 245)
-

Now that you've mastered your phone's fundamentals, it's time to explore the calling features that enhance your Sprint PCS service. This section outlines your basic Sprint PCS service features.

Using Voicemail

Setting Up Your Voicemail

All unanswered calls to your phone are automatically transferred to your voicemail, even if your phone is in use or turned off. Therefore, you will want to set up your Sprint PCS Voicemail and personal greeting as soon as your phone is activated.

To set up your voicemail:

1. Press and hold  **1**.
2. Follow the system prompts to:
 - Create your passcode.
 - Record your name announcement.
 - Record your greeting.
 - Choose whether to activate One-Touch Message Access (a feature that lets you access messages simply by pressing and holding  **1**, bypassing the need for you to enter your passcode).

Note: **Voicemail Passcode**

If you are concerned about unauthorized access to your voicemail account, Sprint recommends that you enable your voicemail passcode (do not activate One-Touch Message Access).

Voicemail Notification

There are several ways your phone alerts you to a new message:

- By displaying a message on the screen.
- By sounding the assigned ringer type.
- By the LED blinking red.
- By displaying  at the top of your screen.

New Voicemail Message Alerts

When you receive a new voice message, your phone alerts you and prompts you to call your voicemail.

To call your voicemail:

- ▶ Press .

To display your Missed Log:

- ▶ Press  > Missed Alerts.

Note: When you are roaming off the Nationwide Sprint PCS Network, you may not receive notification of new voicemail messages. It is recommended that you periodically check your voicemail by dialing 1 + area code + your wireless phone number. When your voicemail answers, press (*) and enter your passcode. You will be charged roaming rates when accessing voicemail while roaming off the Nationwide Sprint PCS Network.

Your phone accepts messages even when it is turned off. However, you are notified of new messages only when your phone is turned on and you are in a Sprint PCS service area.

Retrieving Your Voicemail Messages

You can review your messages directly from your wireless phone or from any other touch-tone phone. To dial from your wireless phone, you can either speed dial your voicemail or use the menu keys.

Using One-Touch Message Access

- ▶ Press and hold  **1**. (Your phone will dial your voicemail box.)

Using the Menu Keys on Your Phone to Access Your Messages

1. Select  > **Messaging** > **Voicemail**.
2. Select **Call Voicemail** to listen to your messages.

Note: You are charged for airtime minutes when you are accessing your voicemail from your wireless phone.

Using a Phone Other Than Your Wireless Phone to Access Messages

1. Dial your wireless phone number.
2. When your voicemail answers, press .
3. Enter your passcode.

Tip: When you call into voicemail, you first hear the header information (date, time, and sender information) for the message. To skip directly to the message, press **4** during the header.

Vicemail Button Guide

Here's a quick guide to your keypad functions while listening to voicemail messages. For further details and menu options, see "Voicemail Menu Key" on page 235.

 1	ABC 2	DEF 3
Date/Time	Send Reply	Advance
GHI 4	JKL 5	MNO 6
Replay	Rewind	Forward
PQRS 7	TUV 8	WXYZ 9
Erase	Call Back	Save
Shift ✕	+ 0	Space #
Cancel	Help	Skip

Vicemail Options

Your phone offers several options for organizing and accessing your voicemail.

Using Expert Mode

Using the Expert Mode setting for your personal voicemail box helps you navigate through the voicemail system more quickly by shortening the voice prompts you hear at each level.

To turn Expert Mode on or off:

1. Press and hold  **1** to access your voicemail.
2. Press **DEF 3** to change your Personal Options, following the system prompts.
3. Press **DEF 3** for Expert Mode.
4. Press  **1** to turn Expert Mode on or off.

Setting Up Group Distribution Lists

Create up to 20 separate group lists, each with up to 20 customers.

1. Press and hold **[1]** to access your voicemail.
2. Press **[3]** to change your Personal Options, following the system prompts.
3. Press **[1]** for Settings.
4. Press **[5]** for Group Distribution Lists.
5. Follow the voice prompts to create, edit, rename, or delete group lists.

Sprint PCS Callback

Return a call after listening to a message without disconnecting from voicemail.

- ▶ Press **[8]** after listening to a message. (Once the call is complete, you're returned to the voicemail main menu.)

Voicemail-to-Voicemail Message

Record and send a voice message to other Sprint PCS Voicemail users.

1. From the main voicemail menu, press **[2]** to send a message.
2. Follow the voice prompts to enter the phone number.
3. Follow the voice prompts to record and send your voice message.

Voicemail-to-Voicemail Message Reply

Reply to a voice message received from any other Sprint PCS Voicemail user.

1. After listening to a voice message, press **ABC 2**.
2. Follow the voice prompts to record and send your reply.

Voicemail-to-Voicemail Message Forwarding

Forward a voice message, except those marked “Private,” to other Sprint PCS Voicemail users.

1. After listening to a message, press **MNO 6**.
2. Follow the voice prompts to enter the phone number.
3. Follow the voice prompts to record your introduction and forward the voice message.

Voicemail-to-Voicemail Receipt Request

Receive confirmation that your voice message has been listened to when you send, forward, or reply to other Sprint PCS users.

1. After you have recorded a message, press **ABC 2** to listen to the recorded message.
2. Press **JKL 5** for More Options.
3. Press **DEF 3** to mark receipt requested.
4. Press **1** to send your voicemail message.

Extended Absence Greeting

When your phone is turned off or you are off the Nationwide Sprint PCS Network for an extended period, this greeting can be played instead of your normal personal greeting.

1. From the main voicemail menu, press **DEF 3** for Personal Options.
2. Press **ABC 2** for Greetings.
3. Press **DEF 3** to record an Extended Absence Greeting.

Clearing the Message Icon

Your phone may temporarily continue to display the message icon after you have checked your voice and text messages.

To clear the icon from the display screen:

1. Select **MENU OK** > **Messaging** > **Voicemail** > **Clear Count**.
2. Select **Yes** and press **MENU OK**.

Voicemail Menu Key

Following the prompts on the voicemail system, you can use your keypad to navigate through the voicemail menu. The following list outlines your phone's voicemail menu structure.

- 1** Listen
 - 1** Envelope Information
 - 2** Reply
 - 3** Advance 8 Seconds
 - 4** Replay
 - 5** Rewind
 - 6** Forward Message
 - 7** Erase
 - 8** Callback

- WXYZ 9** Save
 - + 0** Options
- ABC 2** Send a Message
- DEF 3** Personal Options
 - ☒ 1** Settings
 - ☒ 1** Skip Passcode
 - ABC 2** Autoplay
 - DEF 3** Message Date & Time On/Off
 - GHI 4** Change Passcode
 - JKL 5** Group Distribution List
 - MNO 6** Numeric Paging to a Phone
 - Shift ✕** Return to Personal Options Menu
 - ABC 2** Greetings
 - ☒ 1** Personal Greetings
 - ABC 2** Name Announcement
 - DEF 3** Extended Absence Greeting
 - Shift ✕** Return to Personal Options Menu
 - DEF 3** Expert Mode (On/Off)
- TUV 8** Place a Call
- Shift ✕** Disconnect

Using SMS Text Messaging

With SMS Text Messaging, you can use other people's phone numbers to send instant text messages from your phone to their messaging-ready phones – and they can send messages to you. When you receive a new message, it will automatically display on your phone's screen.

In addition, SMS Text Messaging includes a variety of preset messages, such as “Can't talk right now. Send me a message.” that make composing messages fast and easy. You can also customize your own preset messages (up to 50 characters) from your phone.

Composing SMS Text Messages

To compose an SMS Text message:

1. Select  > **Messaging** > **Send Message** > **Text** and select the entry method you prefer:
 - **Contacts** to select a recipient from your internal Contacts. (Qualifying Contacts entries must contain a phone number or an email address.)
 - **Phone#** to use the keypad to enter the phone number of the person to whom you wish to send a message.
 - **Email** to enter the recipient's email address.

Tip: You can also select **Others** (right softkey) to select recipients from your desired list.

2. Press  to save the recipient. (You may include up to 50 recipients per message.)
3. Select **Next** (left softkey) when you have finished selecting and entering recipients.

4. Compose a message or use the preset messages or smileys (icons).
 - To type a message, use your keypad to enter your message. Select **Mode** (right softkey) to select a character input mode. (See “Entering Text” on page 41.)
5. Scroll down to select the message priority (**Ordinary** or **Urgent**), set the callback number, set the signature, or set the delivery receipt.
6. Review your message and select **Send** (left softkey). (You may also select additional messaging options by selecting **Options** [right softkey] to change the recipients or save to draft.)

Tip:

You can also send an SMS Text message when the left softkey displays the **Send Msg** option.

Accessing SMS Text Messages

To read an SMS Text message:

- ▶ When you receive a text message, it will be displayed automatically on your phone's screen. Use your navigation key to scroll down and view the entire message.

To reply to an SMS Text message:

1. While the message is open, select **Reply** (left softkey).
2. Select **Text**, and then compose your reply or use the preset messages or icons.
 - To type a message, use your keypad to enter your message. Use **Mode** (right softkey) to select a character input mode. (See "Entering Text" on page 41.)
3. Review your reply and select **Send** (left softkey). (You may also select additional messaging options by selecting **Options** [right softkey] to change the recipients or save to draft.)

Using Preset Messages

Preset messages make sending text messages to your friends, family, and coworkers easier than ever.

To send preset messages into the text box:

1. Select  > **Settings** > **Messaging** > **Preset Msgs.**
2. Highlight a message you wish to send and select **Options** (right softkey) > **Send Text.**

To edit preset messages:

1. Select  > **Settings** > **Messaging** > **Preset Msgs.**
2. Highlight a message you wish to edit and press .
3. Enter your new message or changes and press .
(See “Entering Text” on page 41.)

To reset preset messages:

1. Select  > **Settings** > **Messaging** > **Preset Msgs.**
2. Select **Options** (right softkey) > **Reset All Msgs** > **Yes.**

Using SMS Voice Messaging

In addition to sending and receiving SMS Text messages, your phone is enabled with SMS Voice Messaging. With SMS Voice Messaging, you can quickly and easily send a voice message to other SMS-enabled phones or to working email addresses without making a phone call. Just record a message and send it directly to the recipient's phone messaging inbox.

Playing an SMS Voice Message

To play an SMS Voice message from the main menu:

1. Select **MENU** > **Messaging** > **VoiceSMS**.
2. Select the message you want to play and press **MENU**.
(The message will begin playing.)
3. Select **Reply** (left softkey) to reply the message.
(To display the message options, select **Options** [right softkey].)

Composing SMS Voice Messages

To compose an SMS Voice message:

1. Select **MENU** > **Messaging** > **Send Message** > **VoiceSMS**.
2. Select **Contacts**, **Phone#**, or **Email** to select a recipient or enter a recipient's phone number or email address directly.
3. Select **Next** (left softkey) when you have finished selecting and entering recipients.
4. Start recording after the beep. (You can record for up to two minutes.)
5. To finish recording, select **Done** (left softkey).
6. Select **Send** (left softkey) to send the voice message.

Accessing SMS Voice Messages

To play an SMS Voice message:

- ▶ When you receive a voice message, a pop-up notification will automatically be displayed on your phone's screen. Use your softkeys to view and play the voice message.

To reply to an SMS Voice message:

1. From the SMS Voice inbox, select **Reply** (left softkey).
2. Select **VoiceSMS**.
3. Record your reply, and then select **Send** (left softkey).

Tip:

If an SMS Voice message has several recipients, you can choose **Reply All** to send your response to all the recipients of the message, or **Reply to Sender** to reply only to the person who sent you the message.

Using Caller ID

Caller ID allows people to identify a caller before answering the phone by displaying the number of the incoming call. If you do not want your number displayed when you make a call, just follow these easy steps.

To block your phone number from being displayed for a specific outgoing call:

1. Press **Shift** **✕** **MNO** **6** **PORS** **7**.
2. Enter the number you want to call.
3. Press **TALK**.

To permanently block your number, call Sprint Customer Service.

Responding to Call Waiting

When you're on a call, Call Waiting alerts you to incoming calls by sounding beeps. Your phone's screen informs you that another call is coming in and displays the caller's phone number (if it is available).

To respond to an incoming call while you're on a call:

- ▶ Press . (This puts the first caller on hold and answers the second call.)

To switch back to the first caller:

- ▶ Press  again.

Tip:

For those calls where you don't want to be interrupted, you can temporarily disable Call Waiting by pressing ***70** before placing your call. Call Waiting is automatically reactivated once you end the call.

Making a Three-Way Call

With Three-Way Calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

To make a Three-Way Call:

1. Enter a number you wish to call and press .
2. Once you have established the connection, press . (This puts the first caller on hold and dials the second number.)
3. Dial the second number you wish to call and press .
4. When you're connected to the second party, press  again to begin your three-way call.

If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all other callers are disconnected.

Note:	Call Waiting and Three-Way Calling are not available while roaming off the Nationwide Sprint PCS Network.
--------------	---

Using Call Forwarding

Call Forwarding lets you forward all your incoming calls to another phone number – even when your phone is turned off. You can continue to make calls from your phone when Call Forwarding is activated.

To activate Call Forwarding:

1. Press **Shift** **X** **PQRS** **7** **ABC** **2**.
2. Enter the area code and phone number to which your future calls should be forwarded.
3. Press **TALK**. (You will hear a tone to confirm the activation of Call Forwarding.)

To deactivate Call Forwarding:

1. Press **Shift** **X** **PQRS** **7** **ABC** **2** **+** **0**.
2. Press **TALK**. (You will see a message and hear a tone to confirm the deactivation.)

Note: You are charged a higher rate for calls you have forwarded.

Sprint PCS Voice Command

In This Section

- ◆ **Getting Started With Sprint PCS Voice Command** (page 247)
 - ◆ **Creating Your Own Address Book** (page 248)
 - ◆ **Making a Call With Sprint PCS Voice Command** (page 249)
 - ◆ **Accessing Information Using Sprint PCS Voice Command** (page 250)
-

With Sprint PCS, reaching your friends, family, and co-workers has never been easier—especially when you're on the go. You can even listen to Web-based information, such as news, weather, and sports. Your voice does it all with Sprint PCS Voice Command.

This section outlines the Sprint PCS Voice Command service.

Getting Started With Sprint PCS Voice Command

With Sprint PCS Voice Command:

- You can store all your contacts' phone numbers, so you can simply say the name of the person you want to call.
- There's no need to punch in a lot of numbers, memorize voicemail passwords, or try to dial while you're driving.
- You can call anyone in your address book – even if you don't remember their phone number.
- You don't need to worry about losing your contacts or address book. This advanced service is network-based, so if you switch or happen to lose your phone, you won't lose your contacts or address book.

It's Easy to Get Started

There are two easy ways to sign up for Sprint PCS Voice Command:

- ▶ Sign up when you purchase and activate your phone.
- ▶ Just dial  from your phone to contact Sprint Customer Service and sign up.

There is a monthly charge for Sprint PCS Voice Command.

Creating Your Own Address Book

You can program up to 500 names into your personal address book, with each name having up to five phone numbers. That's 2500 phone numbers, and with the advanced technology of Sprint PCS Voice Command, you can have instant access to all of them.

There are four ways to update your address book:

- **On the Web.** Go to www.talk.sprintpcs.com and sign on with your phone number and password to access a fully functional Web-based address book to create and update your contacts.
- **Use an Existing Address Book.** Automatically merge address books from desktop software applications with Sprint SyncSM Services for no additional charge. Simply click the "Click to synchronize" button within your Sprint PCS Voice Command personal address book at www.talk.sprintpcs.com.
- **Use Voice Recordings.** Simply dial   and say, "Add name." You will then be asked to say the name and number you want to add to your personal address book. Your address book can store up to 20 voice recorded names at once.
- **Call Sprint 411.** If you don't have a computer or Internet access handy, you can have Sprint 411 look up phone numbers for you and automatically add them to your address book. Just dial   and say "Call operator" and we'll add two names and all the numbers associated with those names to your address book for our standard directory assistance charge.

Making a Call With Sprint PCS Voice Command

To make a call with Sprint PCS Voice Command:

1. Press  and you'll hear the "Ready" prompt.
2. After the "Ready" prompt, simply say, in a natural voice, "Call" and the name of the person or the number you'd like to call. (For example, you can say, "Call Jane Smith at work," "Call John Baker on the mobile phone," "Call 555-1234," or "Call Bob Miller.")
3. Your request will be repeated and you will be asked to verify. Say "Yes" to call the number or person. (The number will automatically be dialed.) Say "No" if you wish to cancel.

Tip:

Keep in mind that Sprint PCS Voice Command recognizes not only your voice, but any voice, so that others can experience the same convenience if they use your phone.

For more helpful hints on Sprint PCS Voice Command, including a list of recognized commands and an interactive tutorial, visit www.talk.sprintpcs.com.

Accessing Information Using Sprint PCS Voice Command

To access information using Sprint PCS Voice Command:

1. Press .
2. Say “Call the Web” and choose from a listing of information categories like news, weather, and sports.
– or –
Simply say “Call news room,” “Call the weather,” “Call Sports Central,” etc.

Note:	Sprint PCS Voice Command is not available while roaming off the Nationwide Sprint PCS Network.
--------------	--

Section 4

Safety and Warranty Information

Important Safety Information

In This Section

- ◆ **General Precautions** (page 253)
 - ◆ **Maintaining Safe Use of and Access to Your Phone** (page 254)
 - ◆ **Using Your Phone With a Hearing Aid Device** (page 256)
 - ◆ **Caring for the Battery** (page 257)
 - ◆ **Radiofrequency (RF) Energy** (page 259)
 - ◆ **Owner's Record** (page 262)
 - ◆ **Phone Guide Proprietary Notice** (page 262)
-

This phone guide contains important operational and safety information that will help you safely use your phone. Failure to read and follow the information provided in this phone guide may result in serious bodily injury, death, or property damage.

General Precautions

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- To maximize performance, do not touch the upper back portion of your phone where the internal antenna is located while using the phone.
- Speak directly into the mouthpiece.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery.
- Do not expose your phone to direct sunlight for extended periods of time (such as on the dashboard of a car).
- Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending, or sitting on it.
- Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment.

Note:

For the best care of your phone, only Sprint-authorized personnel should service your phone and accessories. Failure to do so may be dangerous and void your warranty.

Maintaining Safe Use of and Access to Your Phone

Do Not Rely on Your Phone for Emergency Calls

Mobile phones operate using radio signals, which cannot guarantee connection in all conditions. Therefore you should never rely solely upon any mobile phone for essential communication (e.g., medical emergencies). Emergency calls may not be possible on all cellular networks or when certain network services or mobile phone features are in use. Check with your local service provider for details.

Using Your Phone While Driving

Talking on your phone while driving (or operating the phone without a hands-free device) is prohibited in some jurisdictions. Laws vary as to specific restrictions. Remember that safety always comes first.

Tip:

Purchase an optional hands-free accessory at your local Sprint Store, or call the Sprint PCS Accessory HotlineSM at 1-800-974-2221 or by dialing **#222** on your phone.

Following Safety Guidelines

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radiofrequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating systems or entertainment systems in motor vehicles. Check with the manufacturer or their representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

Note:

Always turn off the phone in healthcare facilities, and request permission before using the phone near medical equipment.

Turning Off Your Phone Before Flying

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

Turning Off Your Phone in Dangerous Areas

To avoid interfering with blasting operations, turn your phone off when in a blasting area or in other areas with signs indicating two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

Turn your phone off when you're in any area that has a potentially explosive atmosphere. Although it's rare, your phone and accessories could generate sparks. Sparks can cause an explosion or fire, resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They include:

- Fueling areas such as gas stations.
- Below deck on boats.
- Fuel or chemical transfer or storage facilities.
- Areas where the air contains chemicals or particles such as grain, dust, or metal powders.
- Any other area where you would normally be advised to turn off your vehicle's engine.

Note:	Never transport or store flammable gas, flammable liquids, or explosives in the compartment of your vehicle that contains your phone or accessories.
--------------	--

Restricting Children's Access to Your Phone

Your phone is not a toy. Do not allow children to play with it as they could hurt themselves and others, damage the phone or make calls that increase your Sprint PCS invoice.

Using Your Phone With a Hearing Aid Device

Your phone has been tested for hearing aid device compatibility. When some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated will have the rating on the box. **Your M1 has an M4 rating.**

Note:

Phones rated M3 or M4 meet FCC requirements and may generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

The M3/M4 ratings do not guarantee successful interoperation between your phone and hearing aid device. Results will vary depending on the level of immunity of your hearing device and degree of your hearing loss.

The more immune your hearing aid device is, the less likely you are to experience interference noise from your wireless phone. Hearing aid devices should have ratings similar to phones. Ask your hearing healthcare professional for the rating of your aids. Most new hearing aids have at least an M2 immunity level. Add the “M” ratings of your hearing aid and your phone to determine probable usability:

- Any combined rating equal to or greater than six offers best use.
- Any combined rating equal to five is considered normal use.
- Any combined rating equal to four is considered usable.

Thus, if you pair an M3 hearing aid with an M3 phone, you will have a combined rating of six for “best use.”

Sprint Nextel further suggests you experiment with multiple phones (even those not labeled M3 or M4) while in the store to find the one that works best with your hearing aid device. Should you experience interference or find the quality of service unsatisfactory after purchasing your phone, promptly return it to the store within 30 days of purchase. With the Sprint 30-day Risk-Free Guarantee, you may return the phone within 30 days of purchase for a full refund.

Getting the Best Hearing Device Experience With Your Phone

To further minimize interference:

- There is usually less interference on the microphone setting than the telecoil setting.
- Set the phone's Display and Keypad backlight settings to ensure the minimum time interval:
 1. Select **MENU** > **Settings** > **Display** > **Backlight**.
 2. Select **Main LCD, Key,** or **Sub LCD** and press **MENU**.
 3. Select the minimum time interval setting and press **MENU**.
- Position the phone so the internal antenna is farthest from your hearing aid.
- Move the phone around to find the point with least interference.

Caring for the Battery

Protecting Your Battery

The guidelines listed below help you get the most out of your battery's performance.

- Recently there have been some public reports of wireless phone batteries overheating, catching fire or exploding. It appears that many, if not all, of these reports involve counterfeit or inexpensive, aftermarket-brand batteries with unknown or questionable manufacturing standards. Sprint is not aware of similar problems with Sprint PCS phones resulting from the proper use of batteries and accessories approved by Sprint or the manufacturer of your phone. Use only Sprint-approved or manufacturer-approved batteries and accessories found at Sprint Stores or through your phone's manufacturer, or call 1-866-343-1114 to order. They're also available at www.sprint.com — click the **Wireless** option under "Personal," and then click **Accessories**. Buying the right batteries and accessories is the best way to ensure they're genuine and safe.

- In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° C).
- Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- Never dispose of the battery by incineration.
- Keep the metal contacts on top of the battery clean.
- Don't attempt to disassemble or short-circuit the battery.
- The battery may need recharging if it has not been used for a long period of time.
- It's best to replace the battery when it no longer provides acceptable performance. It can be recharged hundreds of times before it needs replacing.
- Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:

Less than one month:

-4° F to 140° F (-20° C to 60° C)

More than one month:

-4° F to 113° F (-20° C to 45° C)

Disposal of Lithium Ion (Li-Ion) Batteries

For safe disposal options of your Li-Ion batteries, contact your nearest Sprint authorized service center.

Special Note: Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

Radiofrequency (RF) Energy

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radiofrequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watt to 0.2 watt in digital mode.

Knowing Radiofrequency Safety

The design of your phone complies with updated NCRP standards described below.

In 1991–92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

Body-Worn Operation

To maintain compliance with FCC RF exposure guidelines, if you wear a handset on your body, use the Sprint supplied or approved carrying case, holster or other body-worn accessory. If you do not use a body-worn accessory, ensure the antenna is at least 1.9 centimeters from your body when transmitting. Use of non-Sprint-approved accessories may violate FCC RF exposure guidelines.

For more information about RF exposure, visit the FCC Web site at www.fcc.gov.

Specific Absorption Rates (SAR) for Wireless Phones

The SAR is a value that corresponds to the relative amount of RF energy absorbed in the head of a user of a wireless handset.

The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean variations in safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

The highest reported SAR values of the M1 are:

Cellular CDMA mode (Part 22):

Head: 0.711 W/kg; Body-worn: 0.472 W/kg

PCS mode (Part 24):

Head: 1.22 W/kg; Body-worn: 0.583 W/kg

FCC Radiofrequency Emission

This phone meets the FCC Radiofrequency Emission Guidelines.

FCC ID number: AEZSCP-M1.

More information on the phone's SAR can be found from the following FCC Web site: <http://www.fcc.gov/oet/fccid>.

FCC Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient the direction of the internal antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Owner's Record

The model number, regulatory number, and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This will be helpful if you need to contact us about your phone in the future.

Model: Sprint Power VisionSM Phone M1 by Sanyo®

Serial No.:

Phone Guide Proprietary Notice

CDMA Technology is licensed by QUALCOMM Incorporated under one or more of the following patents:

4,901,307 5,109,390 5,267,262 5,416,797

5,506,865 5,544,196 5,657,420 5,101,501

5,267,261 5,414,796 5,504,773 5,535,239

5,600,754 5,778,338 5,228,054 5,337,338

5,710,784 5,056,109 5,568,483 5,659,569

5,490,165 5,511,073

T9 Text Input is licensed by Tegic Communications and is covered by U.S. Pat. 5,818,437, U.S. Pat. 5,953,541, U.S. Pat. 6,011,554 and other patents pending.

Phone Guide template version 6A-NV_3 (May 2006)

Manufacturer's Warranty

In This Section

- ◆ **Manufacturer's Warranty** (page 264)

Your phone has been designed to provide you with reliable, worry-free service. If for any reason you have a problem with your equipment, please refer to the manufacturer's warranty in this section.

For information regarding the terms and conditions of service for your phone, please visit www.sprint.com or call Sprint Customer Service at 1-888-211-4PCS.

Note: In addition to the warranty provided by your phone's manufacturer, which is detailed on the following pages, Sprint offers a number of optional plans to cover your equipment for non-warranty claims. **Sprint Total Equipment Protection** provides the combined coverage of the **Sprint Equipment Replacement Program** and the **Sprint Equipment Service and Repair Program**, both of which are available separately. Each of these programs may be signed up for within 30 days of activating your phone. For more details, please visit your nearest Sprint Store or call Sprint at **1-800-584-3666**.

Manufacturer's Warranty

Manufacturer's Limited Warranty

SANYO FISHER COMPANY ("SANYO") offers you, the original purchaser who has purchased the enclosed subscriber unit ("Product") only from an authorized dealer in the United States, a limited warranty that the Product, including accessories in the Product's package, will be free from defects in material or workmanship as follows:

A. ONE (1) YEAR LIMITED WARRANTY: For a period of one (1) year from the date of original purchase, SANYO will, at its option, either repair or replace a defective Product (with new or rebuilt parts/replacements).

B. LIMITED WARRANTY ON REPAIRED/REPLACED PRODUCTS: For a period equal to the remainder of the limited warranty period on the original Product or, on warranty repairs which have been effected on Products for 90 days after the date of its repair or replacement, whichever is longer, SANYO will repair or replace (with new or rebuilt parts/replacements) defective parts or Products used in the repair or replacement of the original Product under the Limited Warranty on it.

Proof that the Product is within the warranty period in the form of a bill of sale or warranty repair document that includes the date of purchase, Product serial number and the authorized dealer's name and address, must be presented to obtain warranty service. This limited warranty is not transferable to any third party, including but not limited to any subsequent purchaser or owner of the Product. Transfer or resale of a Product will automatically terminate warranty coverage with respect to it.

This limited warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks. Also this limited warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by SANYO for charging the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, or (iii) the battery has been used in equipment other than the SANYO phone for which it is specified.

This limited warranty does not cover and is void with respect to the following: (i) Products which have been improperly installed, repaired, maintained or modified (including the antenna); (ii) Products which have been subjected to misuse (including Products used in conjunction with hardware electrically or mechanically incompatible or Products used with software, accessories, goods or ancillary or peripheral equipment not supplied or expressly authorized by SANYO for use), abuse, accident, physical damage, abnormal use or operation, improper handling or storage, neglect, exposure to fire, water or excessive moisture or dampness or extreme changes in climate or temperature, (iii) Products operated outside published maximum ratings; (iv) cosmetic damage; (v) Products on which warranty stickers or Product serial numbers have been removed, altered, or rendered illegible; (vi) customer instruction; (vii) cost of installation, set up, removal or reinstallation; (viii) signal reception problems (unless caused by defect in material or workmanship); (ix) damage the result of fire, flood, acts of God or other acts which are not the fault of SANYO and which the Product is not specified to tolerate, including damage caused by mishandling and blown fuses; (x) consumables (such as memory cards, fuses, etc.); or (xi) any Products which have been opened, repaired, modified or altered by anyone other than SANYO or a SANYO authorized service center.

This warranty is valid only in the United States.

REPAIR OR REPLACEMENT, AS HEREINABOVE PROVIDED, IS YOUR SOLE AND EXCLUSIVE REMEDY FOR BREACH OF THE LIMITED WARRANTY. SANYO SHALL HAVE NO LIABILITY FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING, BUT NOT LIMITED TO LOSS OF PROFITS, LOST SALES, LOSS OF DATA, LOSS OF USE OF THE PRODUCT, OR ANTICIPATED PROFITS ARISING OUT OF USE OR INABILITY TO USE ANY PRODUCT (FOR EXAMPLE, WASTED AIRTIME CHARGES DUE TO THE MALFUNCTION OF A PRODUCT). THIS WARRANTY DOES NOT COVER PRODUCTS SOLD "AS IS" OR "WITH ALL FAULTS". SANYO MAKES NO OTHER EXPRESS WARRANTY WITH RESPECT TO THE PRODUCTS. THE DURATION OF IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE IS LIMITED TO THE DURATION OF THIS EXPRESS WARRANTY.

Some States do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

This limited warranty gives you specific legal rights, and you may have other rights which vary from State to State.

To obtain warranty service, contact

SANYO Fisher Company

Attention : Customer Services for Wireless Products

Phone : 866-SANYOWC (866-726-9692)

Web : <http://www.sanyowireless.com>

Copyright © 2006 ACCESS Systems America Inc. ACCESS, NetFront are registered trademarks or trademarks owned by ACCESS Co., Ltd. in Japan and selected countries worldwide. NetFront is a registered trademark of NetFront Communications, Inc. in the United States and is used under a license. Portions of this software are based in part on the work of the Independent JPEG Group.

Copyright © 2006 InnoPath Software. All rights reserved.

© 2006 Sprint Nextel. All rights reserved. SPRINT, the "Going Forward" logo, and other trademarks are trademarks of Sprint Nextel. Sanyo is a registered trademark of Sanyo Electric Co., Ltd.

Index

A

- Abbreviated Dialing 38, 77
- Airplane Mode 67
- Alarm Clock 125
- Alert Notification 52, 66, 202
- Animation 55
- Answering Calls 28
- Any key Answer 73
- Area Name Display 58
- Auto-Answer Mode 73
- Automatic Speech Recognition (ASR) 137-143

B

- Backlight 54
- Battery 21-23
 - Capacity 21
 - Charging 23
 - Installing 22
- Bluetooth 216-226

C

- Calculator 128
- Calendar 117-124
- Call Alarm 123
- Call Forwarding 245
- Call Guard 96
- Call History 98-103
 - Erasing 103
 - Making a Call From 101
 - Prepending a Phone Number 103

- Saving a Phone Number From 102

- Call Waiting 243
- Caller ID 242
- Camera 152-179
- Clock Display 56
- Contacts 104-115
 - Adding Phone Number 110
 - Adding an Entry 105
 - Dialing From 39
 - Editing an Entry 110
 - Entry Options 109
 - Finding Entries 107
- Countdown Timer 127

D

- Data Roam Guard 97
- Dialing Options 27
- Display Language 73
- Display Screen 15
- Display Settings 54

E

- Entering Text 41-45
 - Alphabet Mode 45
 - Emoticons 41
 - Numbers 42
 - Preset Messages 63
 - Select Language 42
 - Symbols 41
 - T9 Word 43

F

File Manager 130

K

Key Functions 12

Key Press Echo 50

L

Location 61

Lock Code 81

 Changing 81

Locking Your Phone 80

M

Making Calls 26

Media Player 205-215

 Channel Listing 207

 Channel Options 206

 FAQs 213

 Playing Video and Audio

 Clips 208

 Playlists 210-211

Menu iv-xi

Menu Style 58

Messaging

 Preset Messages 63

 Setting Alerts 52

 Signature 64

My Content

 Erasing 85

My Favorites 72

P

Phone (Illus.) 11

Phone Number

 Displaying 25

 Finding 37

 Saving 36

 With Pauses 37

Phone Settings 46-78

 Airplane Mode 67

 Auto-Answer Mode 73

 Display Settings 54-60

 Location Settings 61

 Messaging Settings 62-66

 Shortcut 72, 76

 Sound Settings 47-53

 TTY Use 68-69

PictBridge 178

Plus (+) Code Dialing 39

Preset Messages 63, 240

R

Ready Link - See Sprint PCS

 Ready Link

Resetting Your Phone 87, 89

Restricting Calls 83

Ringer Types 47

Roaming 92-97

 Setting Roam Mode 95

S

Safety Information 252-262

Saving a Phone Number 36

Screen Call 149

Security 79-91

 Security Menu 80

Silence All 53

Sleep Mode 60

SMS Text Messaging

 237-239

SMS Voice Messaging

 241-242

Special Numbers 84

Speed Dialing 40

 Assigning Numbers

 111, 199

Sprint Customer Service 6

Sprint PCS Picture Mail

 Downloading Pictures

 176

 Password 155

 Sending 171-173

 Uploading Pictures and
 Videos 175

 Web Site 174

Sprint PCS Ready Link

 180-204

 Erasing Entries 197

 Making a Call 184-187

 Ready Link Contacts 183

 Ready Link Mode 181

 Receiving a Call 189

 Settings 199

 Updating Ready Link Lists
 199

Sprint PCS Service

 Account Passwords 5

 Dialing Sprint PCS Services
 115

 Operator Services 8

 Setting Up 2-8

 Sprint 411 7

Sprint PCS Voice Command

 246-250

 Address Book 248

 Making a Call 249

Stop Watch 126

Storing Pictures and Videos

 168

T

T9 Text Input 43

Taking Pictures 153-162

Text Greeting 54

Three-Way Calling 244

To Do List 124

TTY Use 68

Turning Your Phone On and
Off 20

U

Unlocking Your Phone 81

Updating Your Phone 128

V

Videos

- Options 165

- Recording 163

- Sending 171

- Storing 168

- Settings 166

Voice Recorder 144-148

- Call Memo 147-148

- Voice Memos 144-147

Voice Services 134-151

Voice-Activated Dialing 135-136

Voicemail

- Menu Key 235

- Options 232

- Retrieving 231

- Setting Up 4, 229

- While Roaming 94

Volume 51

W

Warranty 263

Welcome i

Wireless Backup 70-71

World Clock 127

[illegible]



WATCH LIVE TV.

LISTEN TO MUSIC.

WORK ON THE WAY.

PLAY MULTIPLAYER GAMES.

EXPERIENCE THE
SPRINT POWER VISIONSM NETWORK

Table of Contents

Getting Started	5
Your User Name	5
Launching a Data Connection	6
Net Guard	7
Data Connection Status and Indicators	8
Navigating the Web	9
Sprint PCS® Picture Mail	11
Taking Pictures	12
Creating Your Sprint PCS Picture Mail Password	13
Recording Videos	14
Sharing Sprint PCS Picture Mail	15
Messaging	17
Message Types	17
Accessing Sprint PCS Mail	18
Accessing Additional Email Providers	19
Accessing Sprint Instant Messaging	20
Accessing Wireless Chatrooms	20
Sprint TVSM	22
Music	24
The Sprint Music Store SM	25
Purchasing and Downloading Music	26
Playing Music From the Sprint Music Store	27
Backing Up Your Downloaded Music Files	28
SIRIUS MUSIC	29
Streaming Music	30
Downloading Content	31
Accessing the Download Menus	32

Selecting an Item to Download	32
Downloading an Item	33
Using My Content Manager	34
Games	36
Purchasing and Downloading Games	37
Playing Games	37
Ringers	38
Purchasing and Downloading Ringers	39
Assigning Downloaded Ringers	39
Screen Savers	40
Purchasing and Downloading Screen Savers	41
Assigning Downloaded Screen Savers	41
Web	42
Using the Browser Menu	43
On Demand	47
Initializing Your On Demand Service	48
Accessing On Demand Information	48
Updating On Demand Information	49
Phone as Modem	51
Setting Up a Data Connection With Your PC	52
Themes	54
Downloading Themes	55
Applying Themes	55
Index	57

Welcome to the next generation in wireless service.

This guide introduces you to all the advantages of the Sprint Power VisionSM Network.



The Sprint Power Vision Network gives you more choice and flexibility, so you can make the most of your wireless service. Enjoy the network that gives you the power to watch live Mobile Digital TV (MDTV), instantly download songs to your phone, play multiplayer games, and more, with always on broadband-like speeds, right in the palm of your hand. Watch, listen, play, and do at the speed of life.

The Sprint Power Vision Network not only offers new and exciting services such as Sprint TVSM, the Sprint Music StoreSM, downloadable Themes, On Demand personalized data services, and Phone as Modem capability, it also enhances your existing data services with increased, broadband-like speed and clearer, high-quality visuals and sound. Whatever you want to do, now the answer is yes you can.

Here are some of the exciting features available with your Sprint Power Vision service.

Sprint PCS® Picture Mail

Shoot and send high-quality pictures and video clips faster than ever with your Sprint Power Vision phone.

Messaging

Send and receive IM or email in a flash. Converse without talking by joining a Web-based chat room. Exchange information on a chosen topic or read conversations that others have posted. Even launch a one-on-one chat for a more in-depth conversation.

Sprint TVSM

Watch live Mobile Digital TV (MDTV) on the go with full-motion video and vivid sound. Use your phone to watch news, sports, weather, movie trailers, and entertainment channels. So now you can watch TV whenever you want because it's always with you on your wireless phone.

Music

SPRINT MUSIC STORESM

Wirelessly download full stereo-quality, digital tracks directly to your phone. Choose from hundreds of thousands of songs from virtually every genre. Select songs directly from your wireless phone and listen to them wherever you go.

SIRIUS MUSIC

Listen to the best in music with SIRIUS Music – enjoy content from SIRIUS Hits 1 or choose from their many individual premium channels. It's easy to use and it's built right into your wireless phone so it's always with you, wherever you go.

STREAMING MUSIC

Stream music to your phone with Music Choice.® Choose from rock, pop, hip-hop, R&B, and more. Plus, get exclusive video clips, performances, and interviews from your favorite artists.

Games

Download and play entertaining, interactive games that you'll want to play all the time. With hundreds of games to choose from, you'll find the games just right for you.

Ringers

Personalize your phone by downloading and assigning different ringers to numbers in your phone's Contacts list.

Screen Savers

Add unique images to your phone screen or assign specific images to numbers in your phone's Contacts list.

Web Browsing

Browse Web sites or download applications at high speeds, making it easier than ever to stay informed on the go.

On Demand

Set and then receive customized, up-to-date information on sports, weather, news, money, and more, on demand – the way you want it. It's easy and convenient to set preferences for the information you choose to receive.

Phone as Modem

Your Sprint Power Vision phone can be a high-speed Internet connection for your laptop computer anywhere on the Sprint Power Vision Network. Simply connect your Power Vision phone using a USB cable or the built-in connection on Bluetooth-enabled phones.

Themes

Express your personal style and interests with downloadable themes that transform your phone's appearance and features.

Note:	For the latest information about the Sprint Power Vision Network and features, please visit us online at www.sprint.com .
--------------	---

Getting Started

With your Sprint PCS service, you are ready to start enjoying the advantages of the Sprint Power Vision Network. This section will help you learn the basics of using your data services, including managing your user name, launching a Vision connection, and navigating the Web with your phone.

Your User Name

When you buy your phone and sign up for service, you're automatically assigned a user name, which is typically based on your name and a number, followed by "@sprint.com." (For example, the third John Smith to sign up for the Sprint Power Vision Network might have jsmith003@sprint.com as his user name.)

When you use data services, your user name is submitted to identify you to the Nationwide Sprint PCS Network. The user name is also useful as an address for Sprint PCS Mail, as a way to personalize Web services, and as an online virtual identity.

Your user name will be automatically programmed into your phone. You don't have to enter it.

Finding Your User Name

If you aren't sure what your user name is, you can easily find it online or on your phone.

To find your user name:

- **At www.sprint.com.** Sign on to your account using your phone number and password. To display your user name, click on the **My Personal Information** menu, and then click on **PCS Vision User Name**.


- **On your phone.** You can find your user name under the **Phone Info** option in your phone's **Settings** menu (MENU OK > Settings > Phone Info > Phone#/User ID).

Launching a Data Connection

To launch a data connection:

- ▶ Select MENU OK > **Web**. (Your data connection will start and the Sprint Power Vision home page will be displayed.)

The Sprint Power Vision Home Page

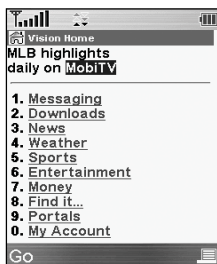

Note: If Net Guard is enabled and displayed (see page 7), select **OK** (left softkey) to continue and launch the Web.

While connecting, the following message will be displayed on the screen: **Connecting... Please wait.**

If you had a previous connection, the last page you visited will be displayed when you launch your browser. When this occurs, you may not see the “Connecting...” message when you launch the session. Though the browser is open, you are

not currently in an active data session — that is, no data is being sent or received. As soon as you navigate to another page, the active session will start and you will see the “Connecting...” message.

Net Guard

When you first connect to the Web, the Net Guard will be displayed to confirm that you want to connect. This feature helps you avoid accidental connections. You can disable the Net Guard in the future by selecting **Always Auto-Connect** when the Net Guard is displayed.

To change your Net Guard settings:

- ▶ Select  > **Settings** > **Power Vision** > **Net Guard**.
 - Select **On** to activate the Net Guard.
 - Select **Off** to deactivate the Net Guard.

Note:	When enabled, the Net Guard is displayed only once per session. The Net Guard will not be displayed if the phone is merely reconnecting because of a time-out.
--------------	--

Data Connection Status and Indicators

Your phone's display lets you know the current status of your data connection through indicators which are displayed at the top of the screen. The following symbols are used:



A Sprint PCS Vision connection is active (data is being transferred); the transmit/receive symbol will blink to indicate data transmission. Incoming voice calls go directly to voicemail; outgoing voice calls can be made, but the Sprint PCS Vision connection will terminate.



A Sprint PCS Vision connection is dormant. (No data is being sent or received.) Though not currently active, when dormant the phone can restart an active connection quickly; voice calls can be made and received.



Your phone is not currently able to access Sprint PCS Vision service features.



A Sprint Power Vision connection is active (data is being transferred); the transmit/receive symbol will animate to indicate data transmission. Incoming voice calls go directly to voicemail; outgoing voice calls can be made, but the Sprint Power Vision connection will terminate.



A Sprint Power Vision connection is available, but no data is currently being transferred.



Your Sprint Power Vision service is dormant. (No data is being sent or received.)

If no indicator is displayed, your phone does not have a current data connection. To launch a connection, see “Launching a Data Connection” on page 6.

Navigating the Web

Navigating through menus and Web sites during a data session is easy once you've learned a few basics. Here are some tips for getting around:

Softkeys

During a data session, the bottom line of your phone's display contains one or more softkeys. These keys are shortcut controls for navigating around the Web, and they correspond to the softkey buttons directly below the phone's display screen.

Tip:

Depending on which Web sites you visit, the labels on the softkeys may change to indicate their function.

To use softkeys:

- ▶ Press the desired softkey button. (If an additional pop-up menu is displayed when you press the softkey button, select the menu items using your keypad [if they're numbered], or by highlighting the option and pressing )

Scrolling

As with other parts of your phone's menu, you'll have to scroll up and down to see everything on some Web sites.

To scroll line by line through Web sites:

- ▶ Press the navigation key up and down.

To scroll page by page through Web sites:

- ▶ Press the volume buttons on the side of the phone.

Selecting

Once you've learned how to use softkeys and scroll, you can start navigating the Web.

To select onscreen items:

- ▶ Use the navigation key to highlight the desired item, and then press the desired softkey button (or press ).

Tip:

You'll find that the left softkey is used primarily for selecting items. This softkey is often labeled "Go."

If the items on a page are numbered, you can use your keypad (number keys) to select an item.

Links, which are displayed as underlined text, allow you to jump to Web pages, select special functions, or even place phone calls.

To select links:

- ▶ Highlight the link and press the appropriate softkey.

Going Back

To go back one page:

- ▶ Press the  key on your phone.

Note:

The  key is also used for deleting text (like a BACKSPACE key) when you are entering text.

Going Home

To return to the home page from any other Web page:

- ▶ Press and hold .
– or –
Select **Menu** (right softkey) > **Home**.

Sprint PCS Picture Mail

With Sprint PCS Picture Mail, you can instantly shoot, share, and print sharp, high-resolution digital pictures and take and send short video clips with your phone.

Use your phone to take full-color digital pictures or video clips with sound. Then either store the pictures and videos or send them from your phone to email addresses or other compatible phones. It's that easy.

Archive your pictures and videos at www.sprint.com/picturemail and take advantage of the Web site's advanced features, which let you crop pictures, organize your own albums, share your pictures and videos, order prints, and more.

Note: Your phone's camera and camcorder settings and menu options may differ from those outlined in this guide. Please refer to your phone's user guide for details.



Taking Pictures

Taking pictures with your phone is as simple as choosing a subject, pointing the lens, and pressing a button. For details on how to use all the camera features of your phone, please see your phone's user guide.

To take a picture:

1. From the phone's main menu, select **Pictures > Camera** to activate Camera mode.
2. Using the phone's main LCD as a viewfinder, aim the camera lens at your subject.
3. Press the Camera button to take the picture.
4. Press **Save** to save the picture. (You will see "Saving" and the picture will be displayed.)
5. Press **Next** to display picture options, or press the Camera button to return to Camera mode to take another picture.

Note:	For more details about taking and saving pictures, please refer to your phone's user guide.
--------------	---

Creating Your Sprint PCS Picture Mail Password

The first time you attempt to upload or share pictures or use the Picture Mail Web site, you will need to establish a Picture Mail password through your phone. This password will also allow you to sign on to the Picture Mail Web site at www.sprint.com/picturemail, where you can access and manage your uploaded pictures.

To create your Picture Mail password:

1. When prompted, enter your four-digit password using numbers or letters and press .

Tip:

Write down your Picture Mail password in a secure place.

2. Please wait while the system creates your account.

Once you have received confirmation that your account has been successfully registered, you may upload and share pictures and access the Picture Mail Web site.

Recording Videos

Recording videos with your phone is as simple as taking a picture. For details on how to use all the video features of your phone, please see your phone's user guide.

To record a video:

1. From the phone's main menu, select **Pictures > Camcorder** to activate Video mode.
2. Using the phone's main LCD as a viewfinder, aim the camera lens at your subject.
3. Press the Camera button to begin recording the video.
4. Press the Camera button again (or press **Stop**) to stop recording. (The video will automatically be saved in the In Phone folder.)
5. Select an option to continue.
 - Press **Play** (left softkey) to play the video.
 - Press **Next** (right softkey) for additional video options (including **Take New Video**, **Play**, **Send to Contacts**, **Post to Services**, **Upload**, **Review Media**, **Send via Bluetooth**, **Set as**, **Delete**, and **Details/Edit**).
 - Press the Camera button to return to Video mode and take another video.

Sharing Sprint PCS Picture Mail

Once you've taken a picture or a video, you can instantly share it with family and friends. You can send pictures and videos to their email addresses or to their messaging-ready phones.

To share Sprint PCS Picture Mail from your phone:

1. From the main menu, select **Pictures > My Albums > In Phone**.
2. Select the pictures or videos you want to send, and then select **Options > Send to Contacts**. (A message may be displayed.)

Note: The first time you send a picture or video, you will be prompted to establish a Sprint PCS Picture Mail Web site account and password. (See "Creating Your Sprint PCS Picture Mail Password" on page 13.)

3. Select a recipient from your Contacts list or enter a wireless phone number or email address.
4. Select **Next** when you have finished selecting or entering recipients.
5. Select the desired options to include a text message or a voice recording, or to set the message priority.
6. Confirm your recipients, message, voice recording, and picture or video.
7. Press the appropriate softkey to send your picture mail.

Note: See your phone's user guide for additional details.

You can also send pictures and videos from your phone's Messaging menu.

To share Sprint PCS Picture Mail from Messaging:

1. From the main menu, select **Messaging > Send Message > Picture Mail**.
2. Select an option to enter or select recipients for your picture mail.
3. Select **Next** when you have finished selecting or entering recipients.
4. Select a location from which to select pictures or videos to send (**In Phone** or **Online Albums**).
5. Select the pictures or videos you want to send, and then select **Next**.
6. Complete steps 5–7 under “To share Sprint PCS Picture Mail from your phone:” on page 15.

Tip:

To take and send a new picture or video, select **Take New Picture** or **Take New Video** during step 4 above.


To learn more about Sprint PCS Picture Mail, visit www.sprint.com or go to the Sprint PCS Picture Mail Web site at www.sprint.com/picturemail.

Messaging

You can send and receive emails and text messages and participate in Web-based chatrooms right from your phone. Messaging allows you to stay connected to friends, family, and coworkers 24 hours a day anywhere on the Nationwide Sprint PCS Network.

Message Types

There are many types of text messaging available on your phone. These include SMS Text Messaging, Sprint Instant Messaging, Email, and Chat.

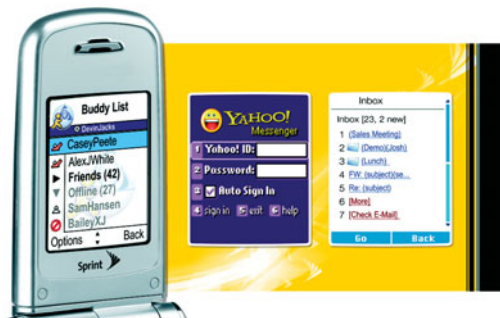

Accessing Sprint PCS Mail

Sprint PCS Mail allows you to perform many of the typical email functions from your phone that you can from your personal computer. You can manage your Sprint PCS Mail account from your phone or from your personal computer at www.sprint.com.

To access Sprint PCS Mail from your phone:

1. Select  > **Messaging** > **IM & Email** > **PCS Mail**.
(The browser will start and go to the PCS Mail page. If you're a first-time user, you will be prompted to set up your Sprint PCS Mail account by establishing a user name and password.)
2. Select the folder you wish to view, such as **Inbox** or **Compose**.

For information and instructions about reading, replying to, and composing Sprint PCS Mail, please visit www.sprint.com.

Accessing Additional Email Providers

With Sprint Power Vision, you can use popular email services such as AOL® Mail, Yahoo!® Mail, MSN® Hotmail, and EarthLink® to keep in touch, even while you're on the go.

To access email providers from your phone:

1. Select  > **Messaging > IM & Email**.
2. Select an email provider, such as **AOL**, **MSN**, **Yahoo!**, or **Earthlink**. (The browser will start and go to the appropriate messaging page.)
3. Use your keypad to enter the required sign-in information for the selected provider, such as user name, email address, or password, and select **Sign In**. (Your mailbox for the selected provider will be displayed.)

Note:	The information required to sign in will vary depending on the email provider you are accessing.
--------------	--

4. Follow the onscreen instructions to read, reply to, compose, send, and manage messages in your email account.

Accessing Sprint Instant Messaging

Sprint Power Vision also provides you with access to popular instant messaging (IM) clients, including AOL® Instant Messenger™, MSN® Messenger, and Yahoo!® Messenger.

To access instant messaging clients from your phone:

1. Select  > **Web**. (The browser will start and display the home page.)
2. From the home page, select **Messaging > Instant Messaging**.
3. Select an IM provider, such as **AOL Instant Messenger**, **MSN Messenger**, or **Yahoo! Messenger**.
4. Use your keypad to enter the required sign-in information for the selected provider, such as user name or password, and select **Sign In**. (Your IM screen for the selected provider will be displayed.)

Note:	The information required to sign in will vary depending on the instant messaging provider you are using.
--------------	--

5. Follow the onscreen instructions to read, reply to, compose, send, and manage messages in your IM account.

Accessing Wireless Chatrooms

Sprint Power Vision gives you the ability to join wireless chatrooms from your phone.

To access Wireless Chat from your phone:

1. Select  > **Messaging > Chat & Dating**. (The browser will start and display the Chat & Dating menu.)
2. Select **Jumbuck Chat & Flirting**.
3. Highlight a category (**Fast Flirting** or **Power Chat**) and press **Go**.

4. Select **Enter**. You will see a disclaimer for Wireless Chat. Select **I Agree** to enter the Chat menu.
5. Use your keypad to enter a nickname and select **Enter**.
6. Highlight a chat room from the menu (for example, Singles, Over 20s, or Flirts) and press **Go**. Once in the chat room, you may scroll through the postings to read messages from other chat room participants. To update the displayed messages, select **Manual refresh**.

To post a message:

1. Select **Add Text**.
2. Enter your message. Use your right softkey to select a text entry mode.
3. Select **Send**.

To set up a private chat room:

1. Select **1->1**.
2. Select a participant with whom you'd like to launch a private chat room. A message will be sent to the person's chat screen (or to yours if someone is requesting a private chat with you):
[Nickname] requested a 1->1. Do u accept? Yes No
 If the invited party accepts, a private chat room will open.

To exit a chat room:

- ▶ Select **Leave Room**.

Accessing Wireless Chat Help

To read a brief overview of how to use Wireless Chat and a list of common softkey abbreviations, just select **Help** from the Wireless Chat main menu.

Sprint TV

With Sprint Power Vision, you can watch live TV on the go right on your wireless phone. Accessing your Sprint TV channels is as easy as using the remote control in your living room. Wherever you go on our wireless high-speed multimedia network, you can get more out of your Sprint TV service.




To access your phone's Sprint TV channels:

1. Select  > **Media Player** > **Channel Listing** > **Sprint TV**.
2. Select the channel you wish to watch, either from **My Channels** (a list of preview channels or channels to which you've already purchased access) or from **Available Channels** (a list of channels available for purchase).
3. If applicable, select a clip and press  to view the program.

Music

The Sprint Power Vision Network lets you use your phone as a portable personal jukebox. From the Sprint Music Store to a variety of streaming music options, you're bound to find the music you want, when you want it.

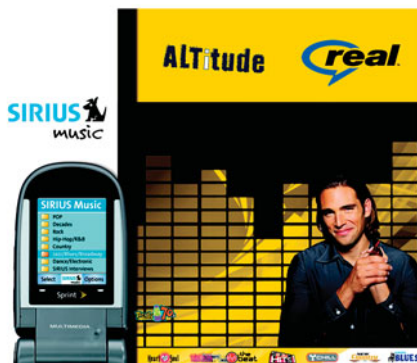

The Sprint Music Store

The Sprint Music Store enables you to purchase and download digital music files to play on your phone or PC.

Accessing the Sprint Music Store

You can access the Sprint Music Store right from your phone's main menu, anywhere on the Nationwide Sprint PCS Network. When you enter the store for the first time, you will be prompted to set up your user identification and password.

To access the Sprint Music Store:

1. Select  **> Music.**
2. Follow the onscreen instructions to establish your User ID and password.

Tip:

Your User ID for the Sprint Music Store is your 10-digit wireless phone number. The password may be any 4-digit number. The recommended password is the last four digits of your Social Security number.

3. Use your keypad and navigation key to explore the store.

Purchasing and Downloading Music

Now that you're in the store, you can shop for songs to purchase and download to your phone.

To find and download music files from the Sprint Music Store:

1. From the Sprint Music Store opening page, select an option to browse the store:
 - **Featured Music** offers a revolving selection of highlighted songs and artists.
 - **Categories** allows you to choose from categories such as What's Hot and New Releases, and to browse genres.
 - **Search** gives you the option of searching for specific songs or artists. Just use your keypad to enter your search criteria in the available field.
2. Highlight the song you want and press . (The song information screen will be displayed.)
3. Select an option and press :
 - **Preview** to play an audio clip of the selected song.
 - **Buy Song** to purchase the song and download it to your phone.
 - ◆ When you select **Buy Song**, the file will automatically download to your phone. (If there is not enough free memory space on your phone, you will see an alert.)
 - ◆ Once the song has been downloaded to your phone, you will see options allowing you to listen to the song, add it to a playlist, or continue shopping. You can also visit <http://musicstore.sprint.com> to download your purchases to your PC.

Playing Music From the Sprint Music Store

The Sprint Music Store not only gives you access to great music, it also gives you a place to listen to and organize your music library.

Accessing the Music Player

1. From the Sprint Music Store opening page, use your right navigation key to select the **Player** tab.
2. From the Player display, select an option:
 - **All My Music** to browse through all of your downloaded music.
 - **<playlist>** to select a customized playlist you've created to organize your music.
 - **Create Playlist...** to set up a custom playlist of songs you like to hear together. Follow the onscreen instructions to create a name for the playlist, select songs by artist, genre, and title, and create an order for the playlist.
3. Once you've displayed a list of songs, you can browse through your available titles by Song, Artist, or Genre to select a specific song.
 - To play a song, select it and press .
 - To listen to a playlist, select it and press  to open the playlist, then press  again to begin playing from the selected song. (You can also highlight the playlist and use the softkey menu to begin listening.)

Backing Up Your Downloaded Music Files

When you purchase and download a music file from the Sprint Music Store, you get two versions of the song: one to download and play on your phone (file type: AAC+), and another to download from <http://musicstore.sprint.com> and play on your PC (file type: WMA). The AAC+ files downloaded to your phone can only be played on your phone and on your account, and once they have been downloaded, they cannot be downloaded again without being repurchased.

Sprint recommends you back up your AAC+ music files to your PC so you can access the files in case your phone is lost or damaged.

To back up your downloaded music files:

1. Connect your phone using a USB cable or the built-in connection on Bluetooth-enabled phones.
2. Use your PC to navigate to the phone's Music folder.
3. Select and copy the music files to a folder on your PC's hard drive.

Note:	Although you can store AAC+ files on your PC, they will only be playable on your phone and on your account.
--------------	---

SIRIUS MUSIC

SIRIUS MUSIC channels offer a variety of great, commercial-free music that you can access directly from your phone.

To access SIRIUS MUSIC on your phone:

1. Select  > **Media Player > Channel Listing > Music & Radio > SIRIUS MUSIC.**
2. Select **Preview** to see and hear a preview of the SIRIUS MUSIC service.
– or –
Select **Buy** to purchase a monthly subscription to SIRIUS MUSIC.

Once you have purchased access to the SIRIUS MUSIC service, you can listen to your favorite music from stations such as:

- **SIRIUS Hits 1:** Today's Top 40 Hits.
- **The Pulse:** Pop and Rock from the '90s to now.
- **'60s Vibrations:** The musical revolution of the '60s and early '70s.
- **Totally '70s:** The most popular music from the '70s.
- **Big '80s:** The hit music of the '80s.
- **Vinyl:** Classic rock of the '60s and '70s.
- **Hair Nation:** Glam rock from the '80s.
- **First Wave:** The '80s Alt-rock revolution.
- **Soul Town:** Classic soul hits.
- **Heart & Soul:** The R&B hits from the '80s, '90s, and today.
- **New Country:** Today's hottest country hits.

- **Prime Country:** Country music superstars of yesterday and today.
- **Jazz Café:** Smooth jazz instrumentals and vocals.
- **SIRIUS Blues:** Authentic blues music, from past to present.
- **Broadway's Best:** Songs from Broadway's most popular shows.
- **The Beat:** Today's biggest dance hits and remixes.
- **Area33:** Trance and progressive house dance music.
- **SIRIUS INTERVIEWS:** Interviews and performances of favorite artists.

Streaming Music

In addition to the Sprint Music Store and the SIRIUS Music channels, Sprint Power Vision offers a variety of musical options through the Music & Radio menu. Choose from rock, pop, hip-hop, and R&B, and access exclusive video clips, music industry news, performances, and interviews with your favorite artists.

To access additional Music & Radio options on your phone:

1. Select  > **Media Player** > **Channel Listing** > **Music & Radio** > [selection].
2. Select **Preview** to see and hear a preview of your selected channel (if available).
— or —
Select **Buy** to purchase a monthly subscription to your selected channel.

Once you have purchased access to a music or radio channel, you can select from a variety of stations to listen to your favorite music or get caught up on what's new in music.

Downloading Content

With the Sprint Power Vision Network, you have access to a dynamic variety of Premium Service content, such as downloadable Games, Ringers, Screen Savers, and other applications. (Additional charges may apply.) The basic steps required to access and download Premium Service content are outlined on the following pages.



Accessing the Download Menus

To access the download menus:

1. Select  > **My Content**.
2. Select the type of file you wish to download (**Games, Themes, Ringers, Screen Savers, Applications, or IM & Email**), and then select **Get New**. (The browser will start and take you to the corresponding download menu.)

To access the download menus from the **Web browser**:

1. From the home page, select **Downloads**.
2. Select **Games, Ringers, Screen Savers, or Applications** to go to the corresponding download menu.

Selecting an Item to Download

You can search for available items to download in a number of ways:

- **Featured** displays a rotating selection of featured items.
- **Categories** allows you to narrow your search to a general category, such as Country or Pop/Rock for Ringers or For the Ladies for Screen Savers. (There may be several pages of available content in a list. Select **Next 9** to view additional items.)
- **Search** allows you to use your keypad to enter search criteria to locate an item. You may enter an entire word or title or perform a partial-word search.

Downloading an Item

Once you've selected an item you wish to download, highlight it and press **Go** (left softkey). You will see a summary page for the item including its title, the vendor, the download details, the file size, and the cost. Links allow you to view the **License Details** page, which outlines the price, license type, and length of license for the download; and the **Terms of Use** page, which details the Premium Services Terms of Use and your responsibility for payment.

To download a selected item:

1. From the information page, select **Buy**. (The item will download automatically. When the **New Download** screen is displayed, the item has been successfully downloaded to your phone.)

Note:	If you have not previously purchased an item, you will be prompted to create your purchasing profile.
--------------	---

2. Select an option to continue:
 - Select the appropriate option to assign the downloaded item (or to start, in the case of a game or an application). Your data session will end, and you will be redirected to the appropriate phone menu screen.
 - Select **Set as** to assign a ringer or screen saver to a phone function.
 - Select **Settings** to configure downloaded games or applications.
 - Select **Shop** to browse for other items to download.
 - Press  to quit the browser and return to standby mode.

Using My Content Manager

Whether you purchase your Premium Services content from your phone or from your online account management page at www.sprint.com, all of your purchases are stored in **My Content Manager** and may be downloaded to your phone from there.

My Content Manager is a storage area on the Nationwide Sprint PCS Network that is assigned specifically to your account. It allows you to store all your Premium Service downloadable files. The files remain in My Content Manager until their license terms have expired – even after you have downloaded the content to your phone. This provides you with a convenient place to access information about your downloaded files without having to store the information in your phone's memory.

To access My Content Manager:

- ▶ From the home page, select **Downloads > My Content Manager**. (A list of your purchased items will be displayed.)

To download purchased content from My Content Manager:

1. From the **My Content Manager** display (see above), highlight the item you wish to download, and press . (The information page for the selected item will be displayed.)
2. Highlight **Download**, and press . (The item will download automatically. When the **New Download** screen is displayed, the item has been successfully downloaded to your phone.)

3. Select an option to continue:

- Select the appropriate option to assign the downloaded item (or to start, in the case of a game or an application). Your data session will end, and you will be redirected to the appropriate phone menu screen.
- Select **Set as** to assign a ringer or screen saver to a phone function.
- Select **Settings** to configure downloaded games or applications.
- Select **Shop** to browse for other items to download.
- Press  to quit the browser and return to standby mode.

Tip:

You can also access My Content Manager through the phone's main menu. Select  > **My Content** > **[Games, Themes, Ringers, Screen Savers, Applications, or IM & Email]** > **My Content Manager**. The browser will open and take you to the corresponding content.

Games

Sprint has partnered with the most cutting-edge electronic gaming providers to bring you a realistic and exciting gaming experience. Advanced Sprint Power Vision phones with full-color screens, vibration, multi-chord sound, and sophisticated graphics make games from SEGA®, JAMDAT®, NAMCO®, THQ®, and Mobliss® more vivid than ever.



Purchasing and Downloading Games

Tip: For complete instructions on downloading, see “Downloading Content” on page 31.

To purchase and download games for your phone:

1. From the home page, select **Downloads > Games**.
2. Use your navigation key to select a game you wish to download, or use the Categories or Search options to locate a game. (Once you have selected an item, the game detail page is displayed.)
3. From the game detail page, select **Buy**. (The game will download automatically. When the **New Download** screen appears, the game has been successfully downloaded to your phone.)

Playing Games

To play a downloaded game on your phone:

1. From your phone's main menu, select **My Content > Games**.
2. Select the game you wish to play. (If applicable, a prompt will display the days remaining on the game license and ask if you want to continue. Select **Yes**.)
3. Follow the onscreen instructions to play the game. (Instructions and game options can usually be accessed using your phone's softkey buttons.)
4. When you are finished, select **Exit** (or **Quit**) or press . (A prompt will be displayed: “Resume the Application?”)
5. Select **Yes** to continue playing or **No** to exit.

Ringers

With the Sprint Power Vision Network, you can personalize your wireless experience by downloading unique ringers and assigning them to numbers in your Contacts list. Select from thousands of available ringers – including your favorite tunes and celebrity voice ringers – and download them to your phone.



Purchasing and Downloading Ringers

Tip: For complete instructions on downloading, see “Downloading Content” on page 31.

To purchase and download ringers for your phone:

1. From the home page, select **Downloads > Ringers**.
2. Use your navigation key to highlight and select a ringer you wish to download, or use the Categories or Search options to locate a ringer. (Once you have selected a ringer, the ringer detail page is displayed.)
3. From the ringer detail page, select **Buy**. (The ringer will automatically be downloaded to your phone.)
4. Select an option to continue:
 - Select **Listen** to play the ringer.
 - Select **Set as** to quit your data session and assign the ringer to a phone task.
 - Select **Shop** to browse for other ringers to purchase and download.
 - Press  to quit the browser and return to standby mode.

Assigning Downloaded Ringers

To assign downloaded ringers to specific events, such as incoming Caller ID calls or voicemail notifications, or to associate downloaded ringers to specific callers in your phone's Contacts list, refer to your phone's user guide.

Screen Savers

With the Sprint Power Vision Network, you can personalize your wireless experience by downloading and assigning unique images for screen savers or to entries in your phone's Contacts list.



Purchasing and Downloading Screen Savers

Tip: For complete instructions on downloading, see “Downloading Content” on page 31.

To purchase and download screen savers for your phone:

1. From the home page, select **Downloads > Screen Savers**.
2. Use your navigation key to highlight and select a screen saver you wish to download, or use the Categories or Search options to locate a screen saver. (Once you have selected a screen saver, the screen saver detail page is displayed.)
3. From the screen saver detail page, select **Buy**. (The screen saver will automatically be downloaded to your phone.)
4. Select an option to continue:
 - Select **View** to see your screen saver.
 - Select **Set as** to quit your data session and assign the screen saver to a phone task.
 - Select **Shop** to browse for other screen savers to purchase and download.
 - Press  to quit the browser and return to standby mode.

Assigning Downloaded Screen Savers

To assign downloaded screen savers to be displayed for specific events, or to assign downloaded screen savers to identify specific callers in your phone's Contacts list, refer to your phone's user guide.

Web

With Web access on your phone, you can browse full-color graphic versions of your favorite Web sites, making it easier than ever to stay informed while on the go. Follow sports scores, breaking news, and weather, and shop on your phone anywhere on the Nationwide Sprint PCS Network.

In addition to the features already covered in this guide, the home page offers access to colorful, graphically rich Web categories, including **News, Weather, Entertainment, Sports, Money, Find It,** and **Portals**, as well as useful management options including **My Account** and **Search**. Many sites are available under more than one menu – choose the one that's most convenient for you.



Using the Browser Menu

Navigating the Web from your phone using the home page is easy once you get the hang of it. For details on how to navigate the Web, select menu items, and more, see “Navigating the Web” on page 9.

Although the home page offers a broad and convenient array of sites and services for you to browse, not all sites are represented, and certain functions, such as going directly to specific Web sites, are not available. For these and other functions, you will need to use the browser menu. The browser menu offers additional functionality to expand your use of the Web on your phone.

Opening the Browser Menu

The browser menu may be opened anytime you have an active data session, from any page you are viewing.

To open the browser menu:

- ▶ Press the right softkey. (The browser menu will be displayed in a drop-down list.)

Options available under the browser menu include:

- **Home.** Returns the browser to the home page.
- **Forward.** Returns you to a previously viewed page (after having used the **BACK** key).
- **Mark this page.** Allows you to create new bookmarks.
- **View Bookmarks.** Allows you to access bookmarked sites and manage your bookmarks.
- **Search.** Launches a Web search.
- **Send Page.** Allows you to send a URL you're viewing through SMS Text Messaging.

- **Go to URL....** Allows you to navigate directly to a Web site by entering its URL (Web site address).
- **History.** Keeps a list of links to your most recently visited sites. To navigate to a site, highlight it and press , and then select **Connect**.
- **Refresh this page.** Reloads the current Web page.
- **More....** Displays additional options:
 - **Show URL.** Displays the URL (Web site address) of the page you're currently viewing.
 - **Restart Browser.** Refreshes the current browser session.
 - **Script Log.** Allows you to display the script log.
 - **About Browser.** Allows you to display your browser's information.
 - **Preferences.** Allows you to configure and manage your browser settings.

Creating a Bookmark

Bookmarks allow you to store the address of your favorite Web sites for easy access at a later time.

To create a bookmark:

1. Go to the Web page you want to mark.
2. Press the right softkey to open the browser menu.
3. Select **Mark this Page** and press  twice to save the bookmark.

Note: Bookmarking a page does not store the page contents, just its address.

Some pages cannot be bookmarked. Whether a particular Web page may be marked is controlled by its creator.

Accessing a Bookmark

To access a bookmark:

1. Press the right softkey to open the browser menu.
2. Select **View Bookmarks**.
3. Scroll to highlight the bookmark you'd like to access, and press **OK** to go to the Web site (or press the number corresponding to the bookmark you wish to access).

Deleting a Bookmark

To delete a bookmark:

1. Press the right softkey to open the browser menu.
2. Select **View Bookmarks**.
3. Scroll to highlight the bookmark you'd like to delete and press the right softkey.
4. Select **Delete**. (A confirmation will be displayed.)
5. Select **Yes** (right softkey) to remove the bookmark.

Going to a Specific Web Site

To go to a particular Web site by entering a URL (Web site address):

1. Press the right softkey to open the browser menu.
2. Select **Go to URL....**
3. Select the **URL** field and press **OK**.
4. Use your keypad to enter the URL of the Web site you wish to go to and press **OK**.

Note: Not all Web sites are viewable on your phone.

Reloading a Web Page

To reload (refresh) a Web page:

1. Press the right softkey to open the browser menu.
2. Select **Refresh this page**. (The browser will reload the current Web page.)

Restarting the Web Browser

If the Web browser seems to be malfunctioning or stops responding, you can usually fix the problem by simply restarting the browser.

To restart the Web browser:

1. Press the right softkey to open the browser menu.
2. Select **More... > Restart Browser**.

On Demand

With Sprint Power Vision's exclusive On Demand feature, you can personalize your phone's data services to suit your needs. The On Demand feature makes it easier than ever to receive the most popular Web information and categories instantly. On Demand uses the ZIP code you provide to customize the content you receive, so you can get the information you want, when you want it.

On Demand acts like a PC browser's customized home page, displaying a variety of top categories such as News, Sports, Weather, Money, Movies, and more. This information is updated throughout the day, so you'll always be up-to-date.



Initializing Your On Demand Service

To initialize your phone's On Demand service:

1. Select  > **On Demand**.
2. Enter your preferred ZIP code and press **OK**.
(The On Demand service will customize itself to your selected location and the On Demand menu screen will be displayed.)

Accessing On Demand Information

Finding the information you're looking for with On Demand is as easy as navigating a Web browser on your PC. (The following example will illustrate how to access News information.)

To access News information using On Demand:

1. Select  > **On Demand**. (The On Demand menu screen will be displayed.)
2. From the On Demand menu screen, highlight a category (in this case, **News**) and press . (You will be presented with a list of headline news.)
3. You can view more news by selecting **Options > More News**. (You will be presented with a list of available news categories.)
4. Use your navigation key to scroll through the news categories or stories. If applicable, the left and right softkeys will offer additional options.

Select other categories, such as Weather, Sports, and Movies, from the On Demand main screen and enjoy the feature-rich contents of On Demand.

Every category offers you the capability to customize news and information based on your preference.

Updating On Demand Information


The On Demand news and information is automatically delivered to your phone four times a day. You can also select how your phone receives updates.

To manually retrieve On Demand updates:

- ▶ From an On Demand category page (such as News), select **Options** > **Update**. (Your phone will retrieve updates for the selected category.)


To enable or disable automatic On Demand updates:

- ▶ From the On Demand main screen, select **Options** > **Configure**, and then select your desired setting.

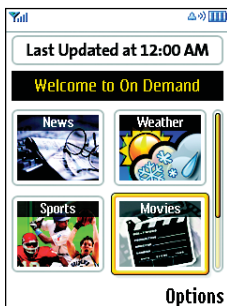

Previewing On Demand in Themes

You can preview the On Demand news and weather information right on your phone's standby screen using a theme. Download and apply any theme, and then select the On Demand icon in your theme's standby screen. An On Demand window will pop up and display a snapshot of the On Demand news and weather information. See "Themes" on page 54 for more information on using and applying themes on your phone.

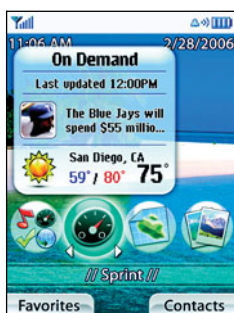

Phone as Modem

Your phone's data capabilities enable you to use its high-speed data connection as a modem for your laptop computer. You'll be able to send and receive email, browse the Internet, and access your company's network anywhere on the Sprint Power Vision Network.



Note: To use this service, you are required to sign up on a Sprint Power Vision with Phone as Modem plan. Go to www.sprint.com or visit a Sprint Store for phone as modem plan details and more information.

Setting Up a Data Connection With Your PC

In order to use your phone as a modem, you'll first need to load the Sprint PCS Connection ManagerSM software on your PC. Connect your phone to your PC using a USB cable or built-in connection on Bluetooth-enabled phones.

To set up your phone-to-PC data connection:

1. From your computer's traditional Internet connection, go to www.sprint.com and download the Sprint PCS Connection ManagerSM software. (The software and drivers can be downloaded free of charge.)
2. Double-click the downloaded file and follow the onscreen instructions to install the Sprint PCS Connection Manager software and drivers to your PC.
3. Once the software has been fully installed, connect your phone to your PC using a USB cable or built-in connection on Bluetooth-enabled phones. (Your PC will detect the connection and a status icon may appear in your system tray.)
4. Launch the Sprint PCS Connection Manager software, select a profile, and click **Connect**.

5. Once the connection is established, launch an Internet session, check your email, or do anything else you would do using a traditional data connection.
6. When you're ready to terminate the data connection, double-click the Sprint PCS Connection Manager icon in the system tray, and then click **Disconnect** to end the session.

Note:	While your data connection is active, you will not be able to receive incoming calls; all incoming calls will be forwarded to your Sprint PCS Voicemail. Placing an outgoing call during a data session terminates the data connection.
--------------	---

	Sprint PCS Vision services are available on the Nationwide Sprint PCS Network. Sprint Power Vision services work anywhere on the Nationwide Sprint PCS Network, but broadband-like download speeds are only available in areas with high-speed data coverage.
--	---

Themes

Express your style and interests by customizing the appearance and features of your phone's Standby Screen, Main Menu, and My Favorites screens with your choice of downloadable Themes. Select your favorite and enjoy rich background images, ringers, and instant access to information like sports updates from NFL themes, entertainment news from hip-hop themes, or weather updates from nature themes.



Downloading Themes

You can select and download available themes right from your phone.

To download an available theme to your phone:

1. Select  > **My Content** > **Themes** > **Get New**.
(Your phone's browser will start and take you to the Themes download menu.)
2. Select a theme and press  or **Go** to display its information page.
3. Select **Buy** to purchase the theme. (The theme will download automatically. When the "New Download" screen appears, the theme has been successfully downloaded to your phone.)

Tip:

For more information about downloading content to your phone, please see "Downloading Content" on page 31.

Applying Themes

Once you've downloaded a theme, you can apply it to your phone from the Settings menu.

To apply a downloaded theme:

1. Select  > **Settings** > **Display** > **Themes**.
2. Select an available theme and press .

Your new theme will populate your phone's standby screen, main menu, and will add a new, customizable My Favorites screen, giving you easy access to your favorite menus and phone applications.

Index

B

- Bookmarks
 - Accessing 45
 - Creating 44
 - Deleting 45
- Browser Menu 43

C

- Chat 20

D

- Data Connection
 - Launching 6
 - Status and Indicators 8
- Downloading Content 31–35

E

- Email 19

G

- Games 36–37
- Getting Started 5

I

- Instant Messaging 20

M

- Messaging 17–21
 - Chat 20
 - Email 19
 - Instant Messaging 20
 - Sprint PCS Mail 18

- Music 24–30

- Sirius Music 29
 - Streaming Music 30
- My Content Manager 34

N

- Net Guard 7

O

- On Demand 47–50

P

- Phone as Modem 51–53
- Picture Mail 11–16

R

- Ringers 38–39

S

- Screen Savers 40–41
- Sirius Music 29
- Sprint Music Store 25–28
 - Accessing 25
 - Backing Up Music 28
 - Downloading Music 26
 - Playing Music 27
 - Purchasing Music 26
- Sprint PCS Mail 18
- Sprint PCS Picture Mail 11–16
 - Password 13
 - Recording Videos 14
 - Sharing 15
 - Taking Pictures 12

Sprint Power Vision
Home Page 6
Navigating the Web 9
Sprint TV 22–23

T

Themes 54–55

U

User Name 5

W

Web 42–46

Navigating 9

Welcome 1



1AH6P1P0534-A
Printed in China